

Motor Starter Components

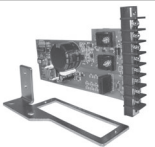
Table 1. Motor Starter Components

Item	Description	Current Cutler-Hammer Style Number
------	-------------	------------------------------------

Vacuum Bottle Assembly

	SL Vacuum Bottle Assembly (set of 3)	2147A58G02
---	--------------------------------------	------------

Contact Control Circuit Board

	SL Contactor Control Circuit Board	2147A58G03
---	------------------------------------	------------

Contact Auxiliary Contacts

	SL Contactor Auxiliary Contacts 2 NO/ 2 NC	2147A58G04
---	---	------------

Contact Phase Barriers

	SL Contactor Phase Barriers (set of 4)	2147A58G12
--	---	------------

Contact Fuse Tray & Barrier Support

	SL Contactor Fuse Tray & Barrier Support	2147A58G17
---	--	------------

CPT & PT (Control Power Transformer & Potential Transformer) Primary Fuses

	0.81-inch dia. 5kV Max, 1 Amp (set of 3) 0.81-inch dia. 5kV Max, 3 Amp (set of 3) 0.81-inch dia. 5kV Max, 5 Amp (set of 3)	2147A11G61 2147A11G49 2147A11G55
---	--	--

Contact Operating Coils

	SL Contactor Operating Coils	2147A58G11
---	------------------------------	------------

Latch Coil with Rectifier

	SL Latch Coil with Rectifier 24 VDC SL Latch Coil with Rectifier 48 VDC SL Latch Coil with Rectifier 125 VAC-DC SL Latch Coil with Rectifier 250 VAC-DC	2147A58G25 2147A58G26 2147A58G27 2147A58G28
---	--	--

Contact Mechanical Latch Assembly

	SL Contactor Mechanical Latch Assembly	2147A58G24
---	--	------------

Motor Starter Components

Table 1. Motor Starter Components

Item	Description	Current Cutler-Hammer Style Number
------	-------------	------------------------------------

Contact Insulator & Bottle Clamp

	SL Contactor Insulator & Bottle Clamp (set of 3)	2147A58G15
--	---	------------

Fuse Clips

	SL PT Primary Fuse Clips & Mounting SL CPT Primary Fuse Clips & Mounting (set of 2)	2147A58G18 2147A58G16
	SL Contactor Main Fuse Clips (set of 3)	2147A58G20

Contact Line or Load Fingers

	SL, Roll-Out Contactor Line Finger & Support (set of 3)	2147A58G50
	SL, Roll-Out Contactor Load Finger & Support (set of 3)	2147A58G51

Contact Return Spring Assembly

	SL Contactor Return Spring Assembly	2147A58G22
--	-------------------------------------	------------

Isolation Switches

	Isolation Switch Handle, Housing, and Clevis	2147A41G08
	Isolation Switch Tray with Fuse Clamps	2147A41G22
	Isolation Switch Microswitch Assembly	2147A01G01

AMPGARD™ 2.3kV - 7.2kV 800A SJ Vacuum Starters Common Replacement Parts

Motor Starter Components

Table 1. Motor Starter Components

Item	Description	Current Cutler-Hammer Style Number
------	-------------	--

Contacting Coil

	800A Contacting Coils 120 VAC (set of 2)	2147A88G11
	800A Contacting Coils 240 VAC (set of 2)	2147A88G12

Magnet Assembly

	800A Contacting Magnet Assembly with Coil 120 VAC	2147A88G02
	800A Contacting Magnet Assembly with Coil 240 VAC	2147A88G03
	800A Contacting Magnet Assembly without Coil	2147A88G04

Interlocks

	L-63 Interlock (coil circuit)	578D461G03
	L-64 Auxiliary Interlocks 1 NO 1 NC	843D943G21
	L-64 Auxiliary Interlocks 2 NO	843D943G22
	L-64 Auxiliary Interlocks 2 NC	843D943G23

Barrier Assemblies

	800A Contacting Barrier Assembly	2147A89G07
	800A Contacting Fuse Support & Barrier Assembly	2147A89G06

Fuse Puller

	800A Contacting Fuse Puller	2147A93G07
---	-----------------------------	------------

CPT & PT (Control Power Transformer & Potential Transformer) Primary Fuses

	0.81-inch dia. 5kV Max, 1 Amp (set of 3)	2147A11G61
	0.81-inch dia. 5kV Max, 3 Amp (set of 3)	2147A11G49
	0.81-inch dia. 5kV Max, 5 Amp (set of 3)	2147A11G55
	1.00-inch dia. 5kV Max, 1 Amp (set of 3)	2147A11G63
	1.00-inch dia. 5kV Max, 3 Amp (set of 3)	2147A11G46
	1.00-inch dia. 5kV Max, 5 Amp (set of 3)	2147A11G53

Eaton Corporation
Cutler-Hammer business unit
1000 Cherrington Parkway
Moon Township, PA 15108-4312
USA
tel: 1-800-525-2000
www.cutler-hammer.eaton.com

Motor Starter Components

Table 1. Motor Starter Components

Item	Description	Current Cutler-Hammer Style Number
------	-------------	--

Load or Line Fingers

	800A Contacting Line Fingers with Copper Support	2147A89G01
	800A Contacting Line or Load Fingers without Copper Support	2147A89G02
	800A Contacting Fuse Load Fingers (between contactor & fuse) (set of 3)	2147A71G15

Vacuum Bottle with Shunt, Support, & Fingers

	800A Contacting Vacuum Bottle with Shunt, Support & Fingers (set of 3)	2147A87G03
---	--	------------

Miscellaneous Parts Kit

	800A Contacting Miscellaneous Parts Kit	2147A88G15
--	---	------------

Contacting Tune-up Kit

	800A Contacting Tune-up Kit	2147A99G04
---	-----------------------------	------------

Isolation Switches

	800A Isolation Switch Handle, Housing, & Clevis	2147A71G08
	800A Isolation Switch Tray Assembly with Line Fingers	2147A81G22
	Isolation Switch Microswitch Assembly	2147A01G01

Note: For additional information, call 1-800-523-3775.