

SIPROTEC

Line Differential Protection with Distance Protection 7SD52/53

V 4.60

Manual

Preface

Introduction

Functions

Mounting and Commissioning

Technical Data

Appendix

Literature

Glossary

Index

1

2

3

4

A

Disclaimer of liability

We have checked the text of this manual against the hardware and software described. However, deviations from the description cannot be completely ruled out, so that no liability can be accepted for any errors or omissions contained in the information given.

The information given in this document is reviewed regularly and any necessary corrections will be included in subsequent editions. We appreciate any suggestions for improvement.

We reserve the right to make technical improvements without notice.

Copyright

Copyright © Siemens AG 2007. All rights reserved.

Dissemination or reproduction of this document, or evaluation and communication of its contents, is not authorized except where expressly permitted. Violations are liable for damages. All rights reserved, particularly for the purposes of patent application or trademark registration.

Registered Trademarks

SIPROTEC, SINAUT, SICAM and DIGSI are registered trademarks of Siemens AG. Other designations in this manual might be trademarks whose use by third parties for their own purposes would infringe the rights of the owner.

Document version: 4.41.00

Preface

Purpose of this Manual

This manual describes the functions, operation, installation, and commissioning of the 7SD5 devices. In particular, one will find:

- Information regarding the configuration of the device and descriptions of device functions and settings → Chapter 2;
- Instruction for mounting and commissioning → Chapter 3,
- List of technical data → Chapter 4;
- As well as a compilation of the most significant data for experienced users → Appendix A.

General information about design, configuration, and operation of SIPROTEC 4 devices are laid down in the SIPROTEC 4 System Description /1/.


Target Audience

Protection engineers, commissioning engineers, personnel concerned with adjustment, checking, and service of selective protective equipment, automatic and control facilities, and personnel of electrical facilities and power plants.

Applicability of this Manual

This manual is valid for: SIPROTEC 4 Line Differential Protection with Distance Protection 7SD5; firmware version V 4.60.

Indication of Conformity

	<p>This product complies with the directive of the Council of the European Communities on the approximation of the laws of the Member States relating to electromagnetic compatibility (EMC Council Directive 89/336/EEC) and concerning electrical equipment for use within specified voltage limits (Low-voltage directive 73/23 EEC).</p> <p>This conformity is proved by tests conducted by Siemens AG in accordance with Article 10 of the Council Directives in agreement with the generic standards EN61000-6-2 and EN 61000-6-4 for the EMC directive, and with the standard EN 60255-6 for the low-voltage directive.</p> <p>This device is designed and produced for industrial use.</p> <p>The product conforms with the international standard of the series IEC 60255 and the German standard VDE 0435.</p>
---	--

Further Standards

IEEE Std C37.90-*

This product is UL-certified according to the Technical Data:



IND. CONT. EQ.
69CA



IND. CONT. EQ.

Additional Support Should further information on the SIPROTEC 4 System be desired or should particular problems arise which are not covered sufficiently for the purchaser's purpose, the matter should be referred to the local Siemens representative.

Training Courses Individual course offerings may be found in our Training Catalogue, or questions may be directed to our training centre in Nuremberg.

Instructions and Warnings

The warnings and notes contained in this manual serve for your own safety and for an appropriate lifetime of the device. Please observe them!

The following indicators and standard definitions are used:

DANGER!

indicates that death, severe personal injury or substantial property damage can result if proper precautions are not taken.

Warning

indicates that death, severe personal injury or substantial property damage can result if proper precautions are not taken.

Caution

indicates that minor personal injury or property damage can result if proper precautions are not taken. This particularly applies to damage on or in the device itself and consequential damage thereof.

Note:

indicates information about the device or respective part of the instruction manual which is essential to highlight.



WARNING!

Hazardous voltages are present in this electrical equipment during operation.

Death, severe personal injury or substantial property damage can result if the device is not handled properly.

Only qualified personnel shall work on and in the vicinity of this equipment. The personnel must be thoroughly familiar with all warnings and maintenance procedures of this manual as well as the safety regulations.

Successful and safe operation of the device is dependent on proper transportation, storage, mounting and assembly and the observance of the warnings and instructions of the unit manual.

In particular, the general installation and safety regulations for work in power current plants (e.g. ANSI, IEC, EN, DIN, or other national and international regulations) must be observed.

Definition**QUALIFIED PERSONNEL**

Prerequisites to proper and safe operation of this product are proper transport, proper storage, setup, installation, operation, and maintenance of the product, as well as careful operation and servicing of the device within the scope of the warnings and instructions of this manual. Qualifications are:

- Training and Instruction to energize, de-energize, clear, ground and tag circuits and equipment in accordance with established safety practices.
- Training and instruction (or other qualification) for switching, earthing, and designating devices and systems.
- Training in rendering first aid.

Typographic and Graphical Conventions

To designate terms which refer in the text to information of the device or for the device, the following fonts are used:

Parameter names

Designators of configuration or function parameters which may appear word-for-word in the display of the device or on the screen of a personal computer (with DIGSI), are marked in bold letters of a monospace font. The same goes for the titles of menus.

1234A

Parameter addresses have the same character style as parameter names. Parameter addresses in overview tables contain the suffix **A**, if the parameter is only available using the option **Display additional settings**.

Parameter Conditions

Possible settings of text parameters, which may appear word-for-word in the display of the device or on the screen of a personal computer (with operation software DIGSI), are additionally written in italics. The same goes for the options of the menus.


„Annunciations“

Designators for information, which may be output by the relay or required from other devices or from the switch gear, are marked in a monospace type style in quotation marks.

Deviations may be permitted in drawings and tables when the type of designator can be obviously derived from the illustration.

The following symbols are used in drawings:


	Device-internal logical input signal
	Device-internal (logical) output signal
	Internal input signal of an analog quantity
	External binary input signal with number (binary input, input indication)
	External binary output signal with number (device indication)

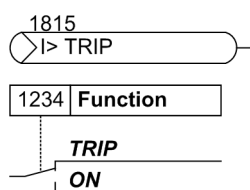


External binary output signal with number (device indication) used as input signal

Example of a parameter switch designated **FUNCTION** with the address 1234 and the possible settings ON and OFF

 
Besides these, graphical symbols are used according to IEC 60617-12 and IEC 60617-13 or symbols derived from these standards. Some of the most frequently used are listed below:




Input signal of an analog quantity

 


AND gate

 


OR gate

 

 Exclusive OR (antivalence): output is active, if only **one** of the inputs is active



 
Coincidence gate (equivalence): output is active if **both** inputs are active or inactive at the same time




Dynamic inputs (edge-triggered) above with positive, below with negative edge




Formation of one analog output signal from a number of analog input signals

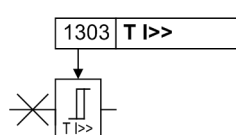


Limit stage with setting address and parameter designator (name)

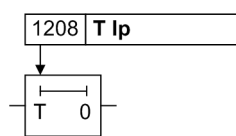

 
Timer (pickup delay T, example adjustable) with setting address and parameter designator (name)



 Timer (dropout delay T, example non-adjustable)



 Dynamic triggered pulse timer T (monoflop)



Static memory (RS-flipflop) with setting input (S), resetting input (R), output (Q) and inverted output (Q-bar)



Contents

1	Introduction	19
1.1	Overall Operation	20
1.2	Application Scope	23
1.3	Characteristics	27
2	Functions	35
2.1	General	37
2.1.1	Functional Scope	37
2.1.1.1	Configuration of the Scope of Functions	37
2.1.1.2	Control of the Main Protection Functions	38
2.1.1.3	Setting Notes	38
2.1.1.4	Settings	42
2.1.2	General Power System Data (Power System Data 1)	44
2.1.2.1	Setting Notes	45
2.1.2.2	Settings	53
2.1.3	Change Group	54
2.1.3.1	Purpose of the Setting Groups	54
2.1.3.2	Setting Notes	54
2.1.3.3	Settings	55
2.1.3.4	Information List	55
2.1.4	General Protection Data (Power System Data 2)	55
2.1.4.1	Setting Notes	55
2.1.4.2	Settings	68
2.1.4.3	Information List	72
2.2	Protection Data Interfaces and Protection Data Topology	74
2.2.1	Functional Description	74
2.2.1.1	Protection Data Topology / Protection Data Communication	74
2.2.2	Operating Modes of the Differential Protection	78
2.2.2.1	Mode: Log Out Device	78
2.2.2.2	Differential Protection Test Mode	80
2.2.2.3	Differential Protection Commissioning Mode	82
2.2.3	Protection Data Interfaces	84
2.2.3.1	Setting Notes	84
2.2.3.2	Settings	86
2.2.3.3	Information List	87
2.2.4	Differential Protection Topology	88
2.2.4.1	Setting Notes	88
2.2.4.2	Settings	90
2.2.4.3	Information List	90

2.3	Differential Protection	92
2.3.1	Functional Description	92
2.3.2	Setting Notes	102
2.3.3	Settings	106
2.3.4	Information List	107
2.4	Breaker Intertrip and Remote Tripping	109
2.4.1	Functional Description	109
2.4.2	Setting Notes	111
2.4.3	Settings	112
2.4.4	Information List	112
2.5	Distance Protection	114
2.5.1	Distance Protection, General Settings	114
2.5.1.1	Earth fault detection	114
2.5.1.2	Pickup (optional)	117
2.5.1.3	Calculation of the impedances	122
2.5.1.4	Setting Notes	130
2.5.1.5	Settings	137
2.5.1.6	Information List	139
2.5.2	Distance Protection with Quadrilateral Characteristic (optional)	142
2.5.2.1	Method of Operation	142
2.5.2.2	Setting Notes	148
2.5.2.3	Settings	157
2.5.3	Distance Protection with MHO Characteristic (optional)	159
2.5.3.1	Functional Description	159
2.5.3.2	Setting Notes	166
2.5.3.3	Settings	170
2.5.4	Tripping Logic of the Distance Protection	171
2.5.4.1	Method of Operation	171
2.5.4.2	Setting Notes	176
2.6	Power Swing Detection (optional)	177
2.6.1	Method of Operation	177
2.6.2	Setting Notes	184
2.6.3	Settings	184
2.6.4	Information List	185

2.7	Teleprotection for Distance Protection (optional)	186
2.7.1	General	186
2.7.2	Method of Operation	187
2.7.3	PUTT (Pickup)	188
2.7.4	Permissive Underreach Transfer Trip with Zone Acceleration Z1B (PUTT)	189
2.7.5	Direct Underreach Transfer Trip	192
2.7.6	Permissive Overreach Transfer Trip (POTT)	193
2.7.7	Directional comparison pickup	195
2.7.8	Directional unblocking scheme	197
2.7.9	Directional blocking scheme	201
2.7.10	Pilot Wire Comparison	204
2.7.11	Reverse Interlocking	206
2.7.12	Transient Blocking	208
2.7.13	Measures for Weak or Zero Infeed	209
2.7.14	Setting Notes	210
2.7.15	Settings	212
2.7.16	Information List	213
2.8	Earth Fault Protection in Earthed Systems (optional)	215
2.8.1	Functional Description	215
2.8.2	Setting Notes	231
2.8.3	Settings	240
2.8.4	Information List	244
2.9	Teleprotection for Earth Fault Protection (optional)	245
2.9.1	General	245
2.9.2	Directional Comparison Pickup	246
2.9.3	Directional Unblocking Scheme	248
2.9.4	Directional Blocking Scheme	252
2.9.5	Transient Blocking	255
2.9.6	Measures for Weak or Zero Infeed	256
2.9.7	Setting Notes	257
2.9.8	Settings	259
2.9.9	Information List	260
2.10	Restricted Earth Fault Protection (optional)	262
2.10.1	Application Examples	262
2.10.2	Functional Description	263
2.10.3	Setting Notes	268
2.10.4	Settings	269
2.10.5	Information List	270

2.11	Measures for Weak and Zero Infeed	271
2.11.1	Echo Function	271
2.11.1.1	Functional Description	271
2.11.2	Classical Tripping	272
2.11.2.1	Method of Operation	272
2.11.2.2	Setting Notes	275
2.11.3	Tripping According to French Specification	276
2.11.3.1	Functional Description	276
2.11.3.2	Setting Notes	278
2.11.4	Tables on Classical Tripping and Tripping according to French Specification	280
2.11.4.1	Settings	280
2.11.4.2	Information List	281
2.12	Direct Local Trip.	283
2.12.1	Functional Description	283
2.12.2	Setting Notes	284
2.12.3	Settings	284
2.12.4	Information List	284
2.13	Direct Remote Trip and Transmission of Binary Information	285
2.13.1	Functional Description	285
2.13.2	Information List	286
2.14	Instantaneous High-Current Switch-onto-Fault Protection (SOTF)	288
2.14.1	Functional Description	288
2.14.2	Setting Notes	289
2.14.3	Settings	290
2.14.4	Information List	291
2.15	Backup Time Overcurrent Protection.	292
2.15.1	General	292
2.15.2	Functional Description	292
2.15.3	Setting Notes	298
2.15.4	Settings	305
2.15.5	Information List	306
2.16	Automatic Reclosure Function (optional).	308
2.16.1	Functional Description	308
2.16.2	Setting Notes	325
2.16.3	Settings	334
2.16.4	Information List	336
2.17	Synchronism and Voltage Check (optional).	339
2.17.1	Method of Operation	339
2.17.2	Setting Notes	345
2.17.3	Settings	350
2.17.4	Information List	351

2.18	Undervoltage and Overvoltage Protection (optional)	353
2.18.1	Overvoltage protection	353
2.18.2	Undervoltage protection	359
2.18.3	Setting Notes	363
2.18.4	Settings	368
2.18.5	Information List	370
2.19	Frequency Protection (optional)	373
2.19.1	Method of Operation	373
2.19.2	Setting Notes	375
2.19.3	Settings	377
2.19.4	Information List	378
2.20	Fault Locator	379
2.20.1	Functional Description	379
2.20.2	Setting Notes	383
2.20.3	Settings	386
2.20.4	Information List	387
2.21	Circuit Breaker Failure Protection	388
2.21.1	Functional Description	388
2.21.2	Setting Notes	399
2.21.3	Settings	403
2.21.4	Information List	404
2.22	Thermal Overload Protection	405
2.22.1	Method of Operation	405
2.22.2	Setting Notes	406
2.22.3	Settings	408
2.22.4	Information List	408
2.23	Monitoring Functions	409
2.23.1	Measurement Supervision	409
2.23.1.1	Hardware Monitoring	409
2.23.1.2	Software Monitoring	411
2.23.1.3	Measurement Circuit Monitoring	411
2.23.1.4	Monitoring the Phase Angle of the Positive Sequence Power	418
2.23.1.5	Fault Reactions	421
2.23.1.6	Setting Notes	423
2.23.1.7	Settings	425
2.23.1.8	Information List	426
2.23.2	Trip Circuit Supervision	427
2.23.2.1	Functional Description	427
2.23.2.2	Setting Notes	431
2.23.2.3	Settings	431
2.23.2.4	Information List	431

2.24	Function Control and Circuit Breaker Test	432
2.24.1	Function Control	432
2.24.1.1	Line energisation recognition	432
2.24.1.2	Detection of the Circuit Breaker Position	436
2.24.1.3	Open Pole Detector	439
2.24.1.4	Pickup Logic of the Entire Device	441
2.24.1.5	Tripping Logic of the Entire Device	442
2.24.2	Circuit Breaker Test	447
2.24.2.1	Functional Description	448
2.24.2.2	Information List	448
2.24.3	Device	449
2.24.3.1	Trip-Dependent Indications	449
2.24.3.2	Spontaneous Indications on the Display	449
2.24.3.3	Switching Statistics	450
2.24.3.4	Setting Notes	450
2.24.3.5	Settings	450
2.24.3.6	Information List	451
2.24.4	EN100-Modul 1	452
2.24.4.1	Functional Description	452
2.24.4.2	Setting Notes	452
2.24.4.3	Information List	452

2.25	Additional Functions	453
2.25.1	Commissioning Aid	453
2.25.1.1	Functional Description	453
2.25.1.2	Setting Notes	455
2.25.2	Processing of Messages	455
2.25.2.1	Functional Description	455
2.25.3	Statistics	459
2.25.3.1	Function Description	459
2.25.3.2	Information List	460
2.25.4	Measurement During Operation	461
2.25.4.1	Functional Description	461
2.25.4.2	Information List	464
2.25.5	Differential Protection Values	465
2.25.5.1	Measured Values of the Differential Protection	465
2.25.5.2	Information List	466
2.25.6	Remote Measured Values	466
2.25.6.1	Functional Description	466
2.25.7	Measured Values Constellation	467
2.25.7.1	Functional Description	467
2.25.8	Oscillographic Fault Records	467
2.25.8.1	Functional Description	467
2.25.8.2	Setting Notes	468
2.25.8.3	Settings	469
2.25.8.4	Information List	469
2.25.9	Demand Measurement Setup	469
2.25.9.1	Long-Term Average Values	469
2.25.9.2	Setting Notes	469
2.25.9.3	Settings	470
2.25.9.4	Information List	470
2.25.10	Min/Max Measurement Setup	470
2.25.10.1	Reset	471
2.25.10.2	Setting Notes	471
2.25.10.3	Settings	471
2.25.10.4	Information List	471
2.25.11	Set Points (Measured Values)	474
2.25.11.1	Limit value monitoring	474
2.25.11.2	Setting Notes	474
2.25.11.3	Information List	475
2.25.12	Energy	475
2.25.12.1	Energy Metering	475
2.25.12.2	Setting Notes	476
2.25.12.3	Information List	476

2.26	Command Processing	477
2.26.1	Control Authorization	477
2.26.1.1	Type of Commands	477
2.26.1.2	Sequence in the Command Path	478
2.26.1.3	Interlocking	479
2.26.1.4	Information List	482
2.26.2	Control Device	482
2.26.2.1	Information List	482
2.26.3	Process Data	483
2.26.3.1	Method of Operation	483
2.26.3.2	Information List	484
2.26.4	Protocol	484
2.26.4.1	Information List	484
3	Mounting and Commissioning	485
3.1	Mounting and Connections	486
3.1.1	Configuration Information	486
3.1.2	Hardware Modifications	491
3.1.2.1	General	491
3.1.2.2	Disassembly	493
3.1.2.3	Switching Elements on Printed Circuit Boards	496
3.1.2.4	Interface Modules	507
3.1.2.5	Reassembly	511
3.1.3	Mounting	511
3.1.3.1	Panel Flush Mounting	511
3.1.3.2	Rack Mounting and Cubicle Mounting	512
3.1.3.3	Panel Mounting	514
3.2	Checking Connections	515
3.2.1	Checking the data connection of the serial interfaces	515
3.2.2	Checking the Protection Data Communication	517
3.2.3	Checking the System Connections	518

3.3	Commissioning	521
3.3.1	Test Mode / Transmission Block	522
3.3.2	Checking Time Synchronisation Interface	522
3.3.3	Testing the System Interface	523
3.3.4	Checking the switching states of the binary Inputs/Outputs	525
3.3.5	Checking the Protection Data Topology	527
3.3.6	Checking for Breaker Failure Protection	535
3.3.7	Checking the Instrument Transformer Connections of One Line End	537
3.3.8	Checking the Instrument Transformer Connections of Two Line Ends	538
3.3.9	Checking the Instrument Transformer Connections for More than Two Ends	549
3.3.10	Measuring the Operating Time of the Circuit Breaker	549
3.3.11	Checking the Teleprotection System with Distance Protection	550
3.3.12	Testing of the Teleprotection System with Earth-fault Protection	553
3.3.13	Check of the Signal Transmission for Breaker Failure Protection and/or End Fault Protection	555
3.3.14	Check of the Signal Transmission for Internal and External Remote Tripping	555
3.3.15	Testing User-defined Functions	556
3.3.16	Trip and Close Test with the Circuit Breaker	556
3.3.17	Switching Test of the Configured Operating Equipment	556
3.3.18	Triggering Oscillographic Recording for Test	557
3.4	Final Preparation of the Device	559
4	Technical Data	561
4.1	General	563
4.1.1	Analog Inputs	563
4.1.2	Auxiliary Voltage	564
4.1.3	Binary Inputs and Outputs	565
4.1.4	Communications Interfaces	567
4.1.5	Electrical Tests	571
4.1.6	Mechanical Tests	573
4.1.7	Climatic Stress Tests	574
4.1.8	Deployment Conditions	574
4.1.9	Certifications	575
4.1.10	Mechanical Design	575
4.2	Protection Data Interfaces and differential protection topology	576
4.3	Differential Protection	578
4.4	Restricted Earth Fault Protection	580
4.5	Breaker Intertrip and Remote Tripping- Direct Local Trip	581
4.6	Distance Protection (optional)	582
4.7	Power Swing Detection (with impedance pickup) (optional)	585
4.8	Teleprotection for Distance Protection (optional)	586

4.9	Earth Fault Protection in Earthed Systems (optional)	587
4.10	Teleprotection for Earth Fault Protection (optional)	596
4.11	Weak Infeed Tripping (classical/optional)	597
4.12	Weak Infeed Tripping (French Specification/optional)	598
4.13	Direct Remote Trip and Transmission of Binary Information	599
4.14	Instantaneous High-Current Switch-onto-Fault Protection (SOTF)	600
4.15	Backup Time Overcurrent Protection.	601
4.16	Automatic Reclosure Function (optional).	604
4.17	Synchronism and Voltage Check (optional).	605
4.18	Undervoltage and Overvoltage Protection (optional).	607
4.19	Frequency Protection (optional).	610
4.20	Fault Locator	611
4.21	Circuit Breaker Failure Protection	612
4.22	Thermal Overload Protection.	613
4.23	Monitoring Functions	615
4.24	User-defined Functions (CFC)	617
4.25	Additional Functions	621
4.26	Dimensions	624
4.26.1	Panel Flush Mounting and Cubicle Mounting (Housing Size $1\frac{1}{2}$).	624
4.26.2	Panel Flush Mounting and Cubicle Mounting (Housing Size $1\frac{1}{4}$).	625
4.26.3	Panel Surface Mounting (Housing Size $1\frac{1}{2}$).	626
4.26.4	Panel Surface Mounting (Housing Size $1\frac{1}{4}$).	626
A	Appendix	627
A.1	Ordering Information and Accessories	628
A.1.1	Ordering Information	628
A.1.1.1	Ordering Code (MLFB)	628
A.1.2	Accessories	632
A.2	Terminal Assignments	636
A.2.1	Panel Flush Mounting or Cubicle Mounting	636
A.2.2	Panel Surface Mounting	641
A.3	Connection Examples	648
A.3.1	Current Transformer Connection Examples	648
A.3.2	Voltage Transformer Connection Examples	653

A.4	Default Settings	656
A.4.1	LEDs	656
A.4.2	Binary Input	656
A.4.3	Binary Output	658
A.4.4	Function Keys	658
A.4.5	Default Display	659
A.4.6	Pre-defined CFC Charts	661
A.5	Protocol-dependent Functions.	662
A.6	Functional Scope.	663
A.7	Settings	666
A.8	Information List	686
A.9	Group Alarms	725
A.10	Measured Values.	726
 Literature		733
 Glossary		735
 Index		745

Introduction

1

The Line Differential Protection with Distance Protection SIPROTEC 4 7SD5 is introduced in this chapter. You are provided with an overview of the field of application, characteristics, and functional scope of the device 7SD5.

1.1	Overall Operation	20
1.2	Application Scope	23
1.3	Characteristics	27

1.1 Overall Operation

The SIPROTEC 4 7SD5 line protection is equipped with a powerful microprocessor system. This provides fully numerical processing of all functions in the device, from the acquisition of the measured values up to the output of commands to the circuit breakers, as well as the exchange of measured data with the other ends of the protected area. Figure 1-1 shows the basic structure of the device.

Analog inputs

The measuring inputs (MI) transform the currents and voltages from the instrument transformers and match them to the internal signal levels for processing in the device. The device has 4 current and 4 voltage inputs. Three current inputs are provided for the input of the phase currents, a further input (I_4) can be used to measure the earth current (current transformer starpoint or separate earth current transformer), the earth current of a parallel line (for parallel line compensation) or the starpoint current of a source transformer (for earth fault direction determination, restricted earth fault protection).

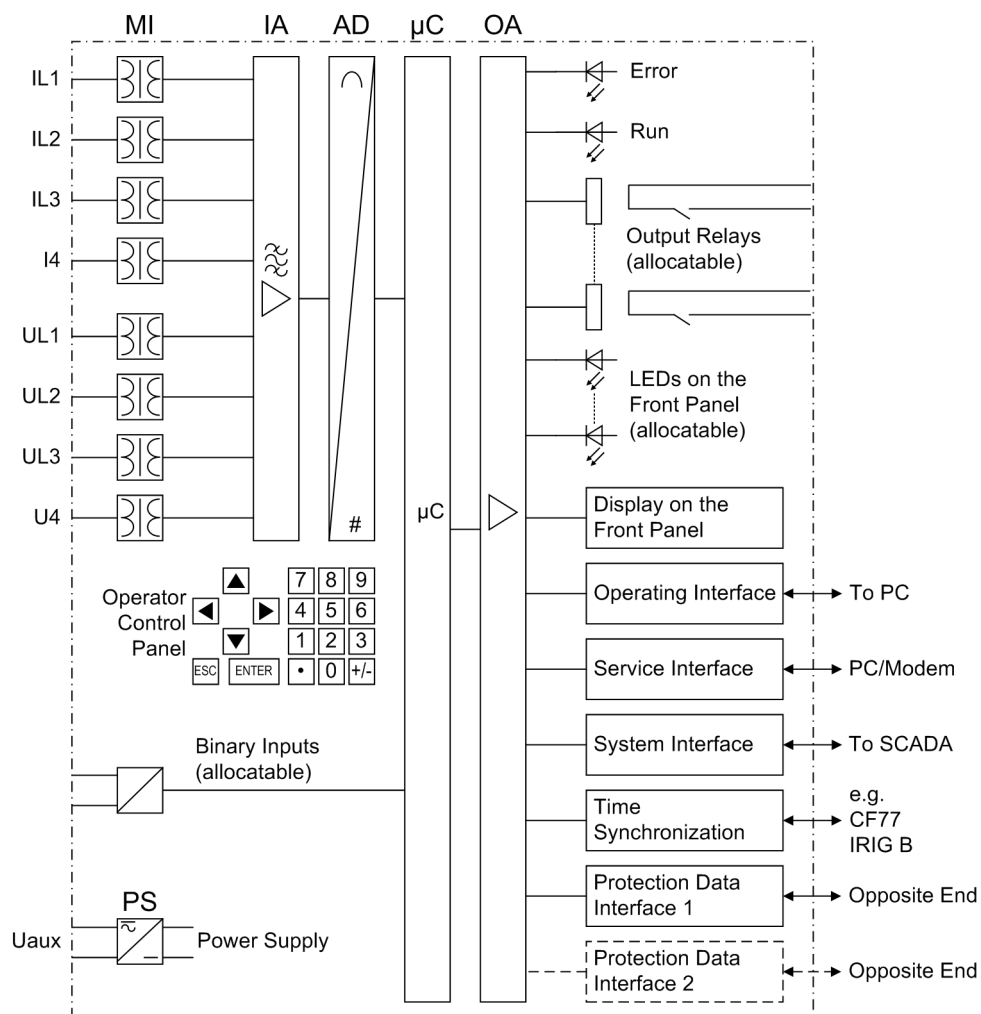


Figure 1-1 Hardware structure of the line differential protection 7SD5

One voltage input is provided for each phase-earth voltage. The connection of voltage transformers is not required for the differential protection, but for using the distance protection and other ancillary functions. A further voltage input (U_4) can optionally be used to measure the displacement voltage, a busbar voltage (for synchronism and voltage check) or any other voltage U_x (for overvoltage protection). The analog values are transferred to the IA input amplifier group.

The input amplification IA stage provides high-resistance terminations for the analog input quantities. It contains filters that are optimized with regard to bandwidth and processing speed.

The AD analog digital converter group contains analog/digital converters and memory chips for data transfer to the microcomputer system.

Microcomputer system

Apart from processing the measured values, the microcomputer system μC also executes the actual protection and control functions. They especially consist of:

- Filtering and conditioning of the measured signals
- Continuous supervision of measured signals
- Monitoring of the pickup conditions of the individual protection functions
- Formation of the local differential protection values (phasor analysis and charge current computation) and creation of the transmission protocol
- Decoding of the received transmission protocol, synchronisation of the differential protection values and summing up of the differential currents and charge currents
- monitoring of the communication with the other devices of the line protection system
- Interrogation of threshold values and time sequences
- Processing of signals for the logic functions
- Decisions for trip and close commands
- Storage of messages, fault annunciations as well as fault records for system fault analysis
- Operating system and related function management such as, e.g., data recording, real-time clock, communication, interfaces, etc.

The information is provided via output amplifier OA.

Binary Inputs and Outputs

The microcomputer system obtains external information through binary inputs such as remote resetting or blocking commands for protection functions. The computer system obtains the information from the system (e.g. remote resetting) or the external equipment (e.g. blocking commands). Outputs include, in particular, trip commands to circuit breakers and signals for remote annunciation of important events and conditions.

Front Elements

LEDs and an LC display provide information on the function of the device and indicate events, states and measured values.

Integrated control and numeric keys in conjunction with the LCD facilitate local interaction with the local device. All information of the device can be accessed using the integrated control and numeric keys. This information includes protective and control settings, operating and fault indications, and measured values; setting parameters can be changed (see also Chapter 2 and SIPROTEC 4 System Description).

Devices with control functions also allow station control on the front panel.

Serial Interfaces

A personal computer running the DIGSI software can be connected to the serial operator interface (PC port) on the front panel. This permits convenient operation of all functions of the device.

The serial service interface can also be used for communication with a PC using DIGSI. This is especially suited for dedicated connection of the devices to the PC or for operation via a modem.

All device data can be transferred to a central master or main control system through the serial system (SCADA) interface. This interface may be provided with various protocols and physical transmission modes to suit the particular application.

A further port is provided for the time synchronisation of the internal clock via external synchronisation sources.

The operator or service interface allows the communication with the devices at all ends of the protected object during commissioning, checking and also during operation using a standard browser via a communication network. A comprehensive „WEB-Monitor“ supports this function which has been optimised specially for the line protection system.

Protection data interfaces

The protection data interfaces are a particular case. Depending on the model there are one or two protection data interfaces. Via these interfaces the measured value data of each end of the protected object is transmitted to the other ends; during this procedure measured values from the other ends may also be added. Further information such as closing the local circuit breaker, pickup of the inrush restraint as well as other external trip commands coupled via binary inputs or binary information can be transmitted to other ends via the protection data interfaces.

Power Supply

These described functional units are supplied by a current supply PS with the necessary power in the different voltage levels. Brief supply voltage dips which may occur on short circuits in the auxiliary voltage supply of the devices are usually bridged by a capacitor (see also Technical Data, Chapter 4.1).

1.2 Application Scope

The SIPROTEC 4 7SD5 line protection is a protection relay that combines differential and distance protection. A multi-end fault locator allows to precisely locate faults in two-end lines, even in case of unfavourable operating or fault conditions.

The combined line protection is a selective short-circuit protection for overhead lines and cables with single- and multi-ended infeeds in radial, ring or any type of meshed systems of any transmission level. Measuring data are compared separately for each phase. The network neutral can be earthed, compensated or isolated.

The device incorporates the functions which are normally required for the protection of an overhead line feeder and is therefore capable of universal application. It may also be applied as time graded back-up protection to all types of comparison protection schemes used on lines, transformers, generators, motors and busbars of all voltage levels.

The inrush current restraint also allows the application of the 7SD5 even if a power transformer is situated within the protected zone (ordering option) whose starpoint(s) might also be isolated, earthed or provided with a Petersen coil.

A major advantage of the differential protection principle is the instantaneous tripping in the event of a short-circuit at any point within the entire protected zone. The current transformers limit the protected zone at the ends towards the remaining system. This rigid limit is the reason why the differential protection scheme shows such an ideal selectivity.

The line protection system requires a 7SD5 device as well as a set of current transformers at either end of the protected zone.

Voltage transformers are required if protective functions requiring a voltage measurement (e.g. distance protection, fault locator) are used in addition to the differential protection. They are also needed for the acquisition and display of measured values (voltages, power, power factor).

The devices located at the ends of the protected zone exchange measuring information via protection data interfaces using dedicated communication links (usually fibre optic cables) or a communication network, provided that they operate with differential protection. The distance protection can exchange measuring information via teleprotection functions with conventional connections (contacts), or transmit it through fast command channels on the protection data interfaces (can be configured with DIGSI). Two type 7SD5 devices can be used for a protected object with two ends: Cables, overhead line or both, even with transformer in the protected zone (order variant). With type 7SD5 protected objects having 3 (three-terminal lines) or more ends can be protected in addition to two-end lines, also with or without unit-connected transformer(s) (order variant). Up to 6 ends can be covered, which means that smaller busbar arrangements can also be protected. For each end a 7SD5*3 is used. If you set up a communication chain between more than two devices, 7SD5*2 can also be used at the ends of the chain. For more information please refer to Section 2.2.1.

The protection data communication can be set up as a ring. This enables redundant operation in the event that one communication line fails; the devices will automatically find the remaining healthy communication lines. But even with two ends, the communication can be doubled to create redundancies.

Since fault-free data transmission is the prerequisite for the proper operation of the differential protection, it is continuously monitored internally.

In the event of a communication failure, if there is no backup channel available, the devices can automatically be switched to the second main protection function, i.e. dis-

tance protection, or to emergency operation using an integrated time overcurrent protection, until communication is restored again.

The communication can be used for transmitting further information. Apart from measured values, the transmission of binary commands or other information is also possible.

Alternatively the distance protection can be used as backup protection, as the time overcurrent protection can be used as backup time overcurrent protection, i.e. both operate independently and in parallel to the differential protection at each end.

Protective functions

Generally speaking, two basic functions are available in the 7SD5 line protection relay, namely differential and distance protection. One of the protection functions can be configured at a time as the main protection function (Main1). As an alternative, differential protection can be selected as the main protection function, and distance protection as backup protection (Main2).

Recognition of short-circuits in the protection zone only with the measured currents is the basic function of the differential protection. Also high resistive faults with small currents can be recognized. Even complex multiphase faults are precisely detected, as the measured values are evaluated phase segregated. The protection system is restraint against inrush currents of power transformers in the protection zone. When switching onto a fault at any point of a line, an undelayed trip signal can be emitted.

The basic function of the distance protection is the recognition of the fault distance by distance measurement. In particular for complex multiphase faults, the distance protection has a non-switched 6-impedance-loops design (fullscheme). Different pickup schemes enable a good adaptation to system conditions and user philosophy. The system starpoint can be isolated, compensated or earthed (with or without earth current limiting). The use on long, high-loaded lines is possible with or without serial compensation. The distance protection may be supplemented by teleprotection using various signal transmission schemes (for fast tripping on 100 % of the line length). In addition, an earth fault protection (for high resistance earth faults, order variant) is available, which may be directional, non-directional and which may also be incorporated in signal transmission. On lines with weak or no infeed at one line end, it is possible to achieve fast tripping at both line ends by means of the signal transmission schemes. After energizing a line onto a fault which may be located along the entire line length, an undelayed trip signal can be output.

The integrated time overcurrent protection can be configured as a permanent backup protection at all line ends, or as a protection for emergency operation. Emergency operation is a state in which the differential protection cannot operate, for example because of a communication failure, and in which no parallel distance protection is available (e.g. because of a measuring voltage failure). The time overcurrent protection has three definite time overcurrent stages and one inverse time stage; a number of characteristics according to various standards is available for the inverse time stage.

Depending on the order variant, the short-circuit protective functions may also trip single-pole. They may operate in co-operation with an integrated automatic reclosure function (optionally) with which single-pole, three-pole or single- and three-pole automatic reclosure as well as multi-shot automatic reclosure are possible on overhead lines. Before reclosure after three-pole tripping, the validity of the reclosure can be checked by voltage and/or synchronism check by the device (can be ordered optionally). It is possible to connect an external automatic reclosure function and/or synchronism check as well as double protection with one or two automatic reclosure functions.

In addition to the mentioned short-circuit protection functions, other protective functions are possible. A thermal overload protection has been integrated which protects

in particular cables and power transformers from illegal heating due to overload. Other possible functions are multi-stage overvoltage, undervoltage and frequency protection, circuit breaker failure protection and protection against the effects of power swings (simultaneously active as power swing blocking for the distance protection) and earth fault differential protection (ordering option). For rapid location of the damage to the line after a short-circuit, a multi-end fault locator is integrated which also may compensate the influence of parallel lines, and of the fault resistance when power is flowing in the line.

Control Functions

The device is equipped with control functions which operate, close and open, switchgear via the integrated operator panel, the system interface, binary inputs, and using a personal computer with DIGSI software. Using auxiliary contacts of the switch and binary inputs of the device, switching states feedbacks are issued. The current status (or position) of the primary equipment can be read out at the device, and used for interlocking or plausibility monitoring. The number of the devices to be switched is limited by the binary inputs and outputs available in the device or the binary inputs and outputs allocated for the switch position feedbacks. Depending on the resource one (single point indication) or two binary inputs (double point indication) can be used. The capability of switching primary equipment can be restricted by appropriate settings for the switching authority (remote or local), and by the operating mode (interlocked/non-interlocked, with or without password request). Interlocking conditions for switching (e.g. switchgear interlocking) can be established using the integrated user-defined logic.

Indications and measured values; fault recording

The operational indications provide information about conditions in the power system and the device. Measurement quantities and values that are calculated can be displayed locally and communicated via the serial interfaces.

Indications can be assigned to a number of LEDs on the front panel (allocatable), can be externally processed via output contacts (allocatable), linked with user-definable logic functions and/or issued via serial interfaces (see Communication below).

During a fault (power system fault) important events and changes in conditions are saved in fault logs (Event Log or Trip Log). Instantaneous fault values are also saved in the device and may be analyzed subsequently.

As a special feature the values are synchronized between the line terminals via the communication link.

Communication

Serial interfaces are available for the communication with operating, control and memory systems.

A 9-pin DSUB socket on the front panel is used for local communication with a personal computer. By means of the SIPROTEC 4 operating software DIGSI all operational and evaluation tasks can be executed via this operator interface, such as specifying and modifying configuration parameters and settings, configuring user-specific logic functions, retrieving operational messages, fault records and measured values, inquiring device conditions and measured values, issuing control commands.

To establish an extensive communication with other digital operating, control and memory components the device may be provided with further interfaces depending on the order variant.

The service interface can be operated via the RS232 or RS485 interface and also allows communication via modem. For this reason, remote operation is possible via personal computer and the DIGSI operating software, e.g. to operate several devices via a central PC.

The system interface is used for central communication between the device and a control centre. It can be operated through the RS232, RS485 or FO port. For data transmission there are several standardized protocols available. An EN100 module allows to integrate the devices into the 100 MBit Ethernet communication networks of the process control and automation systems using IEC 61850 protocols. In parallel to the link with the process control and automation system, this interface can also handle DIGSI communication and inter-relay communication using GOOSE.

Another interface is provided for the time synchronization of the internal clock via external synchronization sources (IRIG-B or DCF77).

Other interfaces provide for communication between the devices at the ends of the protected object. These protection data interfaces have been mentioned above in the protection functions.

The operator or service interface allows to operate the device remotely or locally using a standard browser. This is possible during commissioning, checking and also during operation with the devices at all ends of the protected object via a communication network. A „WEB-Monitor“ is provided, which has been optimised specially for the differential protection system, but which has also been upgraded to the distance protection requirements.

1.3 Characteristics

General Features

- Powerful 32-bit microprocessor system
- Complete digital processing of measured values and control, from the sampling of the analog input values, the processing and organization of the communication between devices up to the closing and tripping commands to the circuit breakers
- complete galvanic and reliable separation between the internal processing circuits from the measurement, control, and power supply circuits by analogue input transducers, binary inputs and outputs and the DC/DC or AC voltage converters
- Suited for lines with up to 6 ends, even with transformers in the protected zone (order option)
- simple device operation using the integrated operator panel or a connected personal computer with operator guidance
- storage of fault messages as well as instantaneous values for fault recording

Differential protection

- Differential protection for up to 6 ends with digital protection data transmission
- Protection for all types of short-circuits in systems with any starpoint conditioning
- Reliable differentiation between load and fault conditions also in high-resistant, current-weak faults by adaptive measuring procedures
- High sensitivity in case of weakly loaded system, extreme stability against load jumps and power swings
- Phase segregated measurement ensures that the pickup sensitivity is independent of the fault type
- Suited for transformers in the protected zone (order variant)
- Detection of high-resistant, weak-current faults due to high sensitivity of the protective functions
- Insensitive against inrush and charging currents – also for transformers in the protected zone – and against higher-frequency switching transients
- Charging current compensation; therefore increased pickup sensitivity
- High stability also for different current transformer saturation
- Adaptive stabilisation that is automatically derived from the measured quantities and the configured current transformer data
- Fast, phase segregated tripping also on weak or zero infeed ends (breaker intertrip)
- low frequency dependency
- Digital protection data transmission; communication between devices via dedicated communication links (in general optical fibre) or a communication system
- Communication possible via a single copper wire pair (typically 15 km, max. 30 km, depending on used cable type)
- Synchronization via GPS possible. resulting in automatic correction of transmission time differences thus increasing once more the sensitivity
- Permanent monitoring of the protection data transmission concerning disturbance, failure or transfer time deviations in the transmission network with automatic transfer time correction

- Automatic changeover of the communication paths possible in case of transmission failure or transmission disturbance
- Phase segregated tripping possible (for operation with single-pole or single-and three-pole auto-reclosure) (order variant)

**Distance Protection
(optional)**

- Can be used either to operate in parallel to differential protection, or as the main protection function
- Protection for all types of faults in systems with earthed, compensated or isolated starpoint
- Selectable polygonal tripping characteristic or MHO characteristic
- Possibility to choose between Z pickup, $I>$ -, U/I - or $U/I/\varphi$ pickup, enabling the adaption to different system conditions and the user philosophy
- Reliable differentiation between load and fault conditions also on long, high-loaded lines
- High sensitivity in the case of a weakly loaded system, extreme stability against load jumps and power swings
- Optimum adaption to the line parameters by means of the tripping characteristic with diverse configuration parameters and „load trapezoid “ (elimination of the possible load impedances)
- Six measuring systems for each distance zone
- Six distance zones, selectable as forward, reverse or non-directional reaching, one may be used as an overreach zone
- Nine time stages for the distance zones
- Direction determination (with polygon) or polarization (with MHO characteristic) is done with unfaulted loop voltages and voltage memory, thereby achieving unlimited directional sensitivity, and not affected by capacitive voltage transformer transients
- Suitable for lines with serial compensation
- Insensitive to current transformer saturation
- Compensation against the influence of a parallel line
- Shortest command time significantly less than one cycle
- Phase segregated tripping (in conjunction with single-pole or single- and three-pole auto-reclosure)
- Non delayed tripping following switch on to fault is possible
- Two sets of earth impedance compensation

**Power Swing
Supplement
(optional)**

- power swing detection with dZ/dt measurement with three measuring systems
- power swing detection up to 7 Hz swing frequency
- in service also during single-pole dead times
- settable power swing programs
- prevention of undesired tripping by the distance protection during power swings
- tripping for out-of-step conditions can also be configured

Teleprotection Supplement (optional)

- Different procedures settable
- Transfer trip (direct, via pickup or a separately settable overreach zone)
- Comparison schemes (permissible overreach transfer trip = POTT or blocking schemes with separate overreach zone or directional pickup)
- Pilot wire comparison/reverse interlocking (with direct current for local connections or extremely short lines)
- suitable for lines with two or three ends
- Phase segregated transmission possible in lines with two ends
- Signal exchange between the devices via binary outputs and binary inputs, either directly via the device contacts or via the protection data interface(s)

Earth Fault Protection (optional)

- Time overcurrent protection with maximally three definite time stages (DT) and one inverse time stage (IDMT) for high resistance earth faults in earthed systems
- For inverse-time overcurrent protection a selection from various characteristics based on several standards is possible
- The inverse time stage can also be set as fourth definite time stage
- High sensitivity (depending on the version from 3 mA)
- Phase current restraint against error currents during current transformer saturation
- Second harmonic inrush restraint
- Optionally earth fault protection with zero sequence power inverse time tripping
- Each stage can be set to be non-directional or directional in forward or reverse direction
- Single-pole tripping enabled by integrated phase selector
- Direction determination with automatic selection of the larger of zero sequence voltage or negative sequence voltage (U_0 , I_Y or U_2), with zero sequence system quantities (I_0 , U_0), with zero sequence current and transformer starpoint current (I_0 , I_Y), with negative sequence system quantities (I_2 , U_2) or with zero sequence power ($3I_0 \cdot 3U_0$)
- One or more stages may function in conjunction with a teleprotection scheme; also suited for lines with three ends
- Instantaneous tripping by any stage when switching onto a fault

Restricted earth fault protection

- Earth fault protection for earthed transformer windings
- Short tripping time
- High sensitivity for earth faults
- High stability against external earth faults using the magnitude and phase relationship of through-flowing earth current

Tripping at Line Ends with no or Weak Infeed (optional)

- Possible in conjunction with teleprotection schemes
- Allows fast tripping at both line ends, even if there is no or only weak infeed available at one line end
- Phase segregated tripping and single-pole automatic reclosure is possible (version with single-phase tripping)

External Direct and Remote Tripping	<ul style="list-style-type: none">• Tripping at the local line end from an external device via a binary input• Tripping of the remote line end by internal protection functions or an external device via a binary input (with teleprotection)
Transmission of information	<ul style="list-style-type: none">• Transmission of the measured values from all ends of the protected object with the magnitude and phase• Transmission of up to 4 fast commands to all remote ends (order option)• Transmission of up to 24 additional binary signals to all remote ends (order option)
Time Overcurrent Protection	<ul style="list-style-type: none">• Selectable as emergency function during a failure of the main protection function(s) due to a failure of the data communication and/or the measuring voltages, or as backup function• Maximally three definite time stages (DT) and one inverse time stage (IDMT), each for phase currents and for earth currents• For inverse-time overcurrent protection a selection from various characteristics based on several standards is possible• Blocking capability, e.g. for reverse interlocking with any element• Instantaneous tripping by any stage when switching onto a fault• Stub fault protection: fast tripping of faults between the current transformer and line isolator (when the isolator switching status feed back is available); particularly suited to substations with 1¹/₂ circuit breaker arrangements
High Current Switch-onto-Fault Protection	<ul style="list-style-type: none">• Fast tripping for all faults on 100 % line length• Selectable for manual closure or following each closure of the circuit breaker• With integrated line energization detection.
Automatic Reclosure (optional)	<ul style="list-style-type: none">• For reclosure after single-pole, three-pole or single-pole and three-pole tripping• Single or multiple reclosure (up to 8 reclosure attempts)• With separate action times for every reclosure attempt, optionally without action times• With separate dead times after single-pole and three-pole tripping, separate for the first four reclosure attempts• With the option of an adaptive dead time: in this case only one device controls the automatic reclosure cycles whilst at the other end(s) the automatic reclosure solely depends on the one controlling device. The criteria used are voltage measurement and/or the transmitted CLOSE command (Remote-CLOSE)• Controlled optionally by protection start with separate dead times after single-, two- and three-pole starting
Synchronism and Voltage Check (optional)	<ul style="list-style-type: none">• Verification of the synchronous conditions before reclosing after three-pole tripping• Fast measuring of voltage difference U_{diff}, of the phase angle difference φ_{diff} and frequency difference f_{diff}• Alternatively, check of the de-energized state before reclosing

	<ul style="list-style-type: none"> • Closing at asynchronous system conditions with prediction of the synchronization time • Settable minimum and maximum voltage • Verification of the synchronous conditions or de-energized state also possible before the manual closing of the circuit breaker, with separate limit values • Also measurement via transformer • Measuring voltages optionally phase-phase or phase-earth
Voltage Protection (optional)	<ul style="list-style-type: none"> • Two overvoltage stages for the phase-earth voltages • Two overvoltage stages for the phase-phase voltages • Two overvoltage stages for the positive sequence voltage, optionally with compounding • Two overvoltage stages for the negative sequence voltage • Two overvoltage stages for the zero sequence voltage or any other single-phase voltage • Settable dropout to pickup ratios for the overvoltage protection functions • Two undervoltage stages for the phase-earth voltages • Two undervoltage stages for the phase-phase voltages • Two undervoltage stages for the positive sequence voltage • Settable current criterion for undervoltage protection functions
Frequency Protection (optional)	<ul style="list-style-type: none"> • Monitoring for underfrequency ($f <$) and/or overfrequency ($f >$) with 4 frequency limits and delay times that are independently adjustable • Particularly insensitive to harmonics and abrupt phase angle changes • Large frequency range (approx. 25 Hz to 70 Hz)
Fault Location	<ul style="list-style-type: none"> • Optionally single-ended (conventional) or double-ended fault location via communication interfaces; • Initiated by trip command or reset of the fault detection • Fault location output in Ohm, kilometers or miles and % of line length • Output of the fault location also possible in BCD code • Parallel line compensation can be selected • Taking into consideration the load current in case of single-phase earth faults fed from both sides • Possibility to take into account line asymmetry and different line sections
Circuit Breaker Failure Protection	<ul style="list-style-type: none"> • Definite time stages for monitoring current flow through every pole of the circuit breaker • Separate pickup thresholds for phase and earth currents • Independent timers for single-pole and three-pole tripping; • Start by trip command of every internal protection function

- Start by external trip functions possible
- Single-stage or two-stage
- Short dropout and overshoot times
- End fault protection and pole discrepancy monitoring possible

Thermal Overload Protection

- Provides thermal replica of the current heat losses of the protected object
- R.m.s. measurement of all three phase currents
- Adjustable thermal and current-dependent warning stages

User-defined Logic Functions (CFC)

- Freely programmable combination of internal and external signals for the implementation of user-defined logic functions
- All usual logic functions
- Time delays and limit value inquiries

Commissioning, Operation, Maintenance

- Display of magnitude and phase angle of local and remote measured values
- Indication of the calculated differential and restraint currents
- Display of the measured values of the communication link, such as transmission delay and availability
- Function logout of a device from the line protection system during maintenance work at an end of a power line, test mode and commissioning mode supported

Command Processing

- Switchgear can be switched on and off manually via local control keys, the programmable function keys on the front panel, via the system interface (e.g. by SICAM or LSA), or via the operator interface (using a personal computer and the operating software DIGSI)
- Feedback on switching states via the circuit breaker auxiliary contacts (for commands with feedback)
- Plausibility monitoring of the circuit breaker position and monitoring of interlocking conditions for switching operations

Monitoring Functions

- Increase of the availability of the device by monitoring of the internal measurement circuits, auxiliary power supply, hardware, and software
- Current transformer and voltage transformer secondary circuits are monitored using summation and symmetry check techniques
- Monitoring of communication with statistics showing the availability of transmission telegrams
- Check of the consistency of protection settings at all line ends: blocking of the differential protection system in case of inconsistent settings which could lead to a malfunction
- Trip circuit supervision possible
- Check of local and remote measured values and comparison of both
- Broken wire supervision for the secondary CT circuits with fast phase segregated blocking of the line protection system in order to avoid malfunction
- Supervision of measuring voltage failure using "Fuse Failure Monitor"

Ancillary Functions

- Battery buffered real-time clock, which may be synchronized via a synchronization signal (e.g. DCF77, IRIG B, GPS via satellite receiver), binary input or system interface
- Automatic time synchronization between the devices at the ends of the protected object via the protection data transmission
- Continuous calculation and display of operational measured values on the front of the device. Display of measured values of the remote end or of all ends
- Indication memory for the last 8 network faults (faults in the power system), with real time stamps (1 ms resolution)
- Fault recording and transmission of the data for fault recording for a maximum time range of approximately 15s, synchronised between the devices of a line protection system
- Statistics: counter with the trip commands issued by the device, as well as recording of the fault current data and accumulation of the interrupted fault currents
- Communication with central control and memory components possible via serial interfaces (depending on order variant), optionally via RS232, RS485, modem or fibre-optic cable
- Commissioning aids such as connection and direction checks and circuit breaker test functions
- Comprehensive support when checking and commissioning from PC or laptop by means of „WEB-Monitor“: The communication topology of the line protection and communication system, phasor diagrams of all currents and (if applicable) voltages at all ends of the line protection system, as well as the differential protection and distance protection characteristics, are graphically displayed



This chapter describes the individual functions of the SIPROTEC 4 device 7SD5. It shows the setting possibilities for each function in maximum configuration. Guidelines for establishing setting values and, where required, formulae are given.

Additionally, on the basis of the following information, it may be defined which functions are to be used.

2.1	General	37
2.2	Protection Data Interfaces and Protection Data Topology	74
2.3	Differential Protection	92
2.4	Breaker Intertrip and Remote Tripping	109
2.5	Distance Protection	114
2.6	Power Swing Detection (optional)	177
2.7	Teleprotection for Distance Protection (optional)	186
2.8	Earth Fault Protection in Earthed Systems (optional)	215
2.9	Teleprotection for Earth Fault Protection (optional)	245
2.10	Restricted Earth Fault Protection (optional)	262
2.11	Measures for Weak and Zero Infeed	271
2.12	Direct Local Trip	283
2.13	Direct Remote Trip and Transmission of Binary Information	285
2.14	Instantaneous High-Current Switch-onto-Fault Protection (SOTF)	288
2.15	Backup Time Overcurrent Protection	292
2.16	Automatic Reclosure Function (optional)	308
2.17	Synchronism and Voltage Check (optional)	339
2.18	Undervoltage and Overvoltage Protection (optional)	353
2.19	Frequency Protection (optional)	373
2.20	Fault Locator	379
2.21	Circuit Breaker Failure Protection	388
2.22	Thermal Overload Protection	405
2.23	Monitoring Functions	409
2.24	Function Control and Circuit Breaker Test	432

2.25	Additional Functions	453
2.26	Command Processing	477

2.1 General

A few seconds after the device is switched on, the default display appears on the LCD. Depending on the device version either measured values (four-line display) or a single-phase switching diagram of the feeder status (graphic display) is displayed in the 7SD5.

Configuration settings can be entered by using a PC and the DIGSI operating software and transferred via the operator interface on the front panel of the device or via the service interface. The procedure is described in detail in the SIPROTEC 4 System Description. Entry of password no. 7 (parameter set) is required to modify configuration settings. Without the password, the settings may be read, but may not be modified and transmitted to the device.

The function parameters, i.e. function options, threshold values, etc., can be changed via the front panel of the device, or via the operator or service interface from a personal computer using DIGSI. The level 5 password (individual parameters) is required.

This general section describes which device settings reflect the interaction between your substation, its measuring points (current and voltage transformers), the analog device connections and the various protective functions of the device.

First (Subsection 2.1.1) you have to specify which protective functions you want to use since not all functions integrated in the device are necessary, useful or even possible for your relevant application.

After entering some System Data (frequency), you inform the device (Section 2.1.2) of the properties of the main protected object. This comprises e.g. nominal system data, nominal data of instrument transformers, polarity and connection type of measured values

The above information is sufficient to describe the protected object to the device's main protection function, i.e. the differential protection. For the other protection functions (e.g. backup distance protection) you select what measured values will be processed and in which way.

You will be informed how to set the circuit breaker data, and find out about setting groups and how to use them.

Last but not least, you can set general data which are not dependent on any protection functions.

2.1.1 Functional Scope

2.1.1.1 Configuration of the Scope of Functions

The 7SD5 device contains a series of protective and additional functions. The hardware and firmware is designed for this scope of functions. In addition, the command functions can be matched to the system conditions. In addition, individual functions may be enabled or disabled during configuration, or interaction between functions may be adjusted.

Example for the configuration of scope of functions:

A substation has feeders with overhead lines and transformers. Fault location is to be performed on the overhead lines only. In the devices for the transformer feeders this function is therefore set to „Disabled“.

The available protection and supplementary functions can be configured as **Enabled** or **Disabled**. For some functions, a choice may be presented between several options which are explained below.

Functions configured as **Disabled** are not processed by the 7SD5. There are no indications, and corresponding settings (functions, limit values) are not displayed during setting.



Note

The functions and default settings available depend on the order variant of the device.

2.1.1.2 Control of the Main Protection Functions

Differential and Distance Protection

If the order option specifies that the 7SD5 universal line protection includes the distance protection, the device can be operated in three modes:

1. Differential protection with distance protection
2. Differential protection only
3. Distance protection only

In mode 1, the distance protection operates in parallel with the differential protection. In this mode, both protection functions are configured (address 112

DIFF.PROTECTION; address 115 **Phase Distance**, address 116 **Earth Distance** and address 117 **Dis. PICKUP**), and can be switched **ON** or **OFF** with the addresses 1201 **STATE OF DIFF.** and 1501 **FCT Distance**. When the differential protection is switched off or blocked, the distance protection continues to operate without restrictions.

You can also operate the differential protection without distance protection (mode 2, addresses 115, 116 and 117 = **Disabled**). The device behaves in this case like a normal line differential protection relay.

In mode 3 the differential protection is not configured (address 112 **DIFF.PROTECTION** = **Disabled**), the distance protection operates as main protection (provided that it is activated).

2.1.1.3 Setting Notes

Configuring the functional scope

The scope of functions with the available options is set in the **Functional Scope** dialog box to match plant requirements.

Most settings are self-explaining. The special cases are described below.

Special features

If use of the setting group changeover function is desired, address 103 **Grp Chge OPTION** should be set to **Enabled**. In this case, up to four different groups of settings may be changed quickly and easily during device operation (see also Section 2.1.3). With the setting **Disabled** only one parameter group is available.

Address 110 **Trip mode** is only valid for devices that can trip single-pole or three-pole. Set **1 - /3pole** to enable also single-pole tripping, i.e. if you want to utilise single-pole or single-pole/three-pole automatic reclosure. This requires that an internal auto-

matic reclosure function exists or that an external reclosing device is used. Furthermore, the circuit breaker must be capable of single-pole tripping.



Note

If you have changed address 110, save your changes first via **OK** and reopen the dialog box since the other setting options depend on the selection in address 110.

Differential protection

The differential protection and the distance protection can each be configured as the main protection function.

If the differential protection is the main protection function of the device, **DIFF. PROTECTION** (address 112) is set to **Enabled**. This also implies the supplementary functions of the differential protection such as breaker intertrip.

For the communication of the protection signals to one or more device(s) each device is equipped with one or two protection data interfaces (order option). The assignment of the protection data interfaces is essential for the line protection system, i.e., the interaction of the devices at the ends of the protected object. Enable protection data interface 1 **P. INTERFACE 1** in address 145, and protection data interface 2 (if available) **P. INTERFACE 2** in address 146, if you want to use them. At least one protection data interface is required to use the differential protection function. A protected object with two ends requires at least one protection data interface in each device. If there are more ends, it must be guaranteed that all devices that belong together are interconnected directly or indirectly (via other devices). Section 2.2.1 Protection Data Topology provides more information.

The number of relays (address 147 **NUMBER OF RELAY**) must be equal to the number of measuring locations at the ends of the protected object. Please observe that only current transformer sets that limit the protected object are counted. The line in Figure 2-1, for instance, has three ends and three devices. It is limited by three current transformer sets. Two devices would normally be sufficient if current transformers 1 and 2 are connected in parallel at the secondary side and connected to a device. However, in the event of an external fault causing a high short-circuit current to pass through the current transformers 1 and 2, the restraint of the differential protection would be insufficient.



Figure 2-1 Protected object with 3 ends and 3 devices

If the device is connected to voltage transformers, this condition has to be set in address 144 **V - TRANSFORMER**. The voltage dependent functions such as distance protection can only be used if voltage transformers are connected.

If a power transformer is located in the protected zone, set this condition in address 143 **TRANSFORMER** (ordering option). The actual transformer data will be requested when the general protection data are set (see Section 2.1.4.1 under margin heading „Topological Data for Transformers“ (optional)).

If you want to configure differential protection with charging current compensation, set this condition in address 149 **charge I comp.**.

Distance protection

Depending on the ordered version, the distance protection of the 7SD5, if configured as the main protection function or in combination with differential protection, features a range of fault detection modes, from which the appropriate type for the particular system conditions can be selected. If the device is equipped with impedance pickup only (7SD5***_*****_E** and 7SD5***_*****_H**), you can select the tripping characteristic to be used by the distance protection; to do so, set address 115 for phase-phase measuring units **Phase Distance** and address 116 for phase-earth measuring units **Earth Distance** accordingly. You can choose between the polygonal tripping characteristic **Quadrilateral** and the MHO characteristic **MHO**. The characteristics and measurement methods are described in detail in Sections 2.5.2 and 2.5.3. You can choose different settings for the two addresses. If the device is to be used only for phase-earth loops or only for phase-phase loops, set the function that is not required to **Disabled**.

Other fault detection modes are available with the variants 7SD5***_*****_D** and 7SD5***_*****_G**. The properties of these modes are described in detail in Section 2.5.1.

If the fault current magnitude is a reliable criterion for distinction between a fault occurrence and load operation (incl. tolerable overload), set Address 117 **Dis. PICKUP = I> (overcurr.)** (overcurrent pickup). If the voltage surge is required as another pickup criterion, set **U/I** (voltage-dependent current pickup). For heavily loaded high-voltage lines and very-high-voltage lines the setting **U/I/φ** (voltage and phase-angle dependent current pickup) may be required. With setting **Z< (quadrilat.)** (... pickup) the distance zones which are set highest establish the pickup criteria. If you set address 117 **Dis. PICKUP** to **Disabled**, the distance protection function and all associated functions will not be available.

Please note that the power swing supplement (see also Section 2.6) only works together with the **Z< (quadrilat.)** pickup. In all other cases it is ineffective, even though you have set address 120 **Power Swing = Enabled**.

To complement the distance protection function by teleprotection schemes, you can select the desired scheme at address 121 **Teleprot. Dist.**. You can select the permissive underreach transfer trip with pickup **PUTT (Pickup)** and with overreach zone **PUTT (Z1B)**, the teleprotection scheme **POTT**, directional comparison pickup **Dir.Comp.Pickup**, unblocking with Z1B **UNBLOCKING**, blocking scheme **BLOCKING**, and the schemes with pilot wire comparison **Pilot wire comp** and **Rev. Interlock** (reverse interlocking). If you do not want to use teleprotection in conjunction with distance protection set **Disabled**.

The Direct Local Trip (address 122 **DTT Direct Trip**) is a command that is initiated from an external device for tripping the local circuit breaker.

With address 125 **Weak Infeed** you can select a supplement to the teleprotection schemes. Set **Enabled** to apply the classical scheme for echo and weak infeed trip-

ping. The setting **Logic no. 2** switches this function to the french specification. This setting is available in the device variants for the region France (only version 7SD5***-**D** or 10th digit of order number = D).

At address 126 **Back-Up 0/C** you can set the characteristic group which the time overcurrent protection uses for operation. In addition to the definite time overcurrent protection, an inverse time overcurrent protection may be configured depending on the ordered version. The latter operates either according to an IEC characteristic (**TOC IEC**) or an ANSI characteristic (**TOC ANSI**). For the characteristics please refer to the Technical Data. You can also disable the time overcurrent protection (**Disabled**).

At address 131 **Earth Fault 0/C** you can set the characteristic group which the earth fault protection uses for operation. In addition to the definite time overcurrent protection, which covers up to three phases, an inverse-time earth fault protection function may be configured depending on the ordered version. The latter operates either according to an IEC characteristic (**TOC IEC**) or an ANSI characteristic (**TOC ANSI**) or according to a logarithmic-inverse characteristic (**TOC Logarithm.**). If an inverse-time characteristic is not required, the stage usually designated „inverse time“ can be used as the fourth definite-time stage (**Definite Time**). Alternatively, you can select an earth fault protection with inverse-time characteristic **U0 inverse** or a zero sequence power protection **Sr inverse**. For the characteristics please refer to the Technical Data. You can also disable the earth fault protection (**Disabled**).

When using the earth fault protection, it can be complemented by teleprotection schemes. Select the desired scheme at address 132 **Teleprot. E/F**. You can select the direction comparison scheme **Dir.Comp.Pickup**, the unblocking scheme **UNBLOCKING** and the blocking scheme **BLOCKING**. The procedures are described in detail in Section 2.9. If you do not want to use teleprotection in conjunction with earth fault protection set **Disabled**.

If the device features an automatic reclosing function, address 133 and 134 are of importance. Automatic reclosure is only permitted for overhead lines. It must not be used in any other case. If the protected object consists of a combination of overhead lines and other equipment (e.g. overhead line in unit with a transformer or overhead line/cable), reclosure is only permissible if it can be ensured that it can only take place in the event of a fault on the overhead line. If no automatic reclosing function is desired for the feeder at which 7SD5 operates, or if an external device is used for reclosure, set address 133 **Auto Reclose** to **Disabled**.

Otherwise set the number of desired reclosing attempts there. You can select **1 AR-cycle** to **8 AR-cycles**. You can also set **ADT** (adaptive dead times); in this case the behaviour of the automatic reclosure function is determined by the cycles of the remote end. The number of cycles must however be configured at least in one of the line ends which must have a reliable infeed. The other end — or other ends, if there are more than two line ends — may operate with adaptive dead time. Section 2.16 provides detailed information on this topic.

The **AR control mode** at address 134 allows a total of four options. On the one hand, it can be determined whether the auto reclose cycles are carried out according to the fault type detected by the **pickup** of the starting protective function(s) (only for three-pole tripping) or according to the type of **trip command**. On the other hand, the automatic reclosure function can be operated **with** or **without** action time.

The setting **Trip with T-action / Trip without T-action ...** (default setting = With trip command ...) is to be preferred if single-pole or single-pole/three-pole auto reclose cycles are provided for and possible. In this case, different dead times (for every AR cycle) are possible after single-pole tripping and after three-pole tripping. The protective function that issues the trip command determines the type of trip: Single-pole or three-pole. The dead time is controlled dependent on this.

The setting **Pickup with T-action / Pickup without T-action ...** (Pickup with T-action ...) is only possible and visible if only three-pole tripping is desired. This is the case when either the ordering number of the device model indicates that it is only suited for three-pole tripping, or when only three-pole tripping is configured (address 110 **Trip mode = 3pole only**, see above). In this case you can set different dead times for the auto reclose cycles following 1-, 2- and 3-phase faults. Decisive here is the **pickup** situation of the protection functions at the instant the trip command disappears. This mode also enables to make the dead times dependent on the type of fault in the case of three-pole reclosure cycles. The tripping is always three-pole.

The setting **Trip with T-action** provides an action time for each reclose cycle. The action time is started by a general pickup of all protective functions. If no trip command is present before the action time expires, the corresponding reclose cycle is not carried out. Section 2.16 provides detailed information on this topic. This setting is recommended for time-graded protection. If the protection function which is to operate with automatic reclosure does not have a general pickup signal for starting the action times, select **... Trip without T-action**.

Address 137 **U/O VOLTAGE** allows to activate the voltage protection function with a variety of undervoltage and overvoltage protection stages. In particular, the overvoltage protection with the positive sequence system of the measuring voltages provides the option to calculate the voltage at the other, remote line end via integrated compounding. This is particularly useful for long transmission lines where no-load or low-load conditions prevail and an overvoltage at the other line end (Ferranti effect) is to cause tripping of the local circuit breaker. In this case set address 137 **U/O VOLTAGE** to **Enabl. w. comp.** (available with compounding). Do not use compounding in lines with series capacitors!

For the fault location you can determine in address 138 **Fault Locator, Enabled** and **Disabled** that the fault distance is output in BCD code (4-bit units, 4-bit tens and 1-bit hundreds and 1-bit „data valid“) via binary outputs (**with BCD-output**). A corresponding number of output relays (No. 1143 to 1152) must be made available and allocated for this purpose. For double-ended fault location, address 3807 **two ended** must be set to **ON**. Please note that address 160 **L-sections FL** is used to state the number of sections of which your line length consists (e.g. cable-overhead line).

For the trip circuit supervision set at address 140 **Trip Cir. Sup.** the number of trip circuits to be monitored: **1 trip circuit, 2 trip circuits** or **3 trip circuits**, unless you omit it (**Disabled**).

2.1.1.4 Settings

Addr.	Parameter	Setting Options	Default Setting	Comments
103	Grp Chge OPTION	Disabled Enabled	Disabled	Setting Group Change Option
110	Trip mode	3pole only 1-/3pole	3pole only	Trip mode
112	DIFF.PROTECTION	Enabled Disabled	Enabled	Differential protection
115	Phase Distance	Quadrilateral MHO Disabled	Quadrilateral	Phase Distance

Addr.	Parameter	Setting Options	Default Setting	Comments
116	Earth Distance	Quadrilateral MHO Disabled	Quadrilateral	Earth Distance
117	Dis. PICKUP	Z< (quadrilat.) I> (overcurr.) U/I U/I/φ Disabled	Z< (quadrilat.)	Distance protection pickup program
120	Power Swing	Disabled Enabled	Disabled	Power Swing detection
121	Teleprot. Dist.	PUTT (Z1B) PUTT (Pickup) POTT Dir.Comp.Pickup UNBLOCKING BLOCKING Rev. Interlock Pilot wire comp Disabled	Disabled	Teleprotection for Distance prot.
122	DTT Direct Trip	Disabled Enabled	Disabled	DTT Direct Transfer Trip
124	HS/SOTF-O/C	Disabled Enabled	Disabled	Instantaneous HighSpeed/SOTF Overcurrent
125	Weak Infeed	Disabled Enabled Logic no. 2	Disabled	Weak Infeed (Trip and/or Echo)
126	Back-Up O/C	Disabled TOC IEC TOC ANSI	TOC IEC	Backup overcurrent
131	Earth Fault O/C	Disabled TOC IEC TOC ANSI TOC Logarithm. Definite Time U0 inverse Sr inverse	Disabled	Earth fault overcurrent
132	Teleprot. E/F	Dir.Comp.Pickup UNBLOCKING BLOCKING Disabled	Disabled	Teleprotection for Earth fault overcurr.
133	Auto Reclose	1 AR-cycle 2 AR-cycles 3 AR-cycles 4 AR-cycles 5 AR-cycles 6 AR-cycles 7 AR-cycles 8 AR-cycles ADT Disabled	Disabled	Auto-Reclose Function
134	AR control mode	Pickup w/ Tact Pickup w/o Tact Trip w/ Tact Trip w/o Tact	Trip w/o Tact	Auto-Reclose control mode
135	Synchro-Check	Disabled Enabled	Disabled	Synchronism and Voltage Check

Addr.	Parameter	Setting Options	Default Setting	Comments
136	FREQUENCY Prot.	Disabled Enabled	Disabled	Over / Underfrequency Protection
137	U/O VOLTAGE	Disabled Enabled Enabl. w. comp.	Disabled	Under / Overvoltage Protection
138	Fault Locator	Disabled Enabled with BCD-output	Disabled	Fault Locator
139	BREAKER FAILURE	Disabled Enabled enabled w/ 3I0>	Disabled	Breaker Failure Protection
140	Trip Cir. Sup.	Disabled 1 trip circuit 2 trip circuits 3 trip circuits	Disabled	Trip Circuit Supervision
141	REF PROT.	Disabled Enabled	Disabled	Restricted earth fault protection
142	Therm.Overload	Disabled Enabled	Disabled	Thermal Overload Protection
143	TRANSFORMER	NO YES	NO	Transformer inside protection zone
144	V-TRANSFORMER	Not connected connected	connected	Voltage transformers
145	P. INTERFACE 1	Enabled Disabled	Enabled	Protection Interface 1 (Port D)
146	P. INTERFACE 2	Disabled Enabled	Disabled	Protection Interface 2 (Port E)
147	NUMBER OF RELAY	2 relays 3 relays 4 relays 5 relays 6 relays	2 relays	Number of relays
148	GPS-SYNC.	Enabled Disabled	Disabled	GPS synchronization
149	charge I comp.	Enabled Disabled	Disabled	charging current compensation
160	L-sections FL	1 Section 2 Sections 3 Sections	1 Section	Line sections for fault locator

2.1.2 General Power System Data (Power System Data 1)

The device requires some plant and power system data in order to be able to adapt its functions accordingly, dependent on the actual application. The data required include for instance rated data of the substation and the measuring transformers, polarity and connection of the measured quantities, if necessary features of the circuit breakers, and others. Furthermore, there is a number of settings associated with several functions rather than a specific protection, control or monitoring function. The Power System Data 1 can only be changed from a PC running DIGSI and are discussed in this section.

2.1.2.1 Setting Notes

Polarity of the current transformers

In address 201 **CT Starpoint**, the polarity of the wye-connected current transformers is specified (the following figure also goes for only two current transformers). The setting determines the measuring direction of the device (forward = line direction). A change in this setting also results in a polarity reversal of the earth current inputs I_E or I_{EE} .

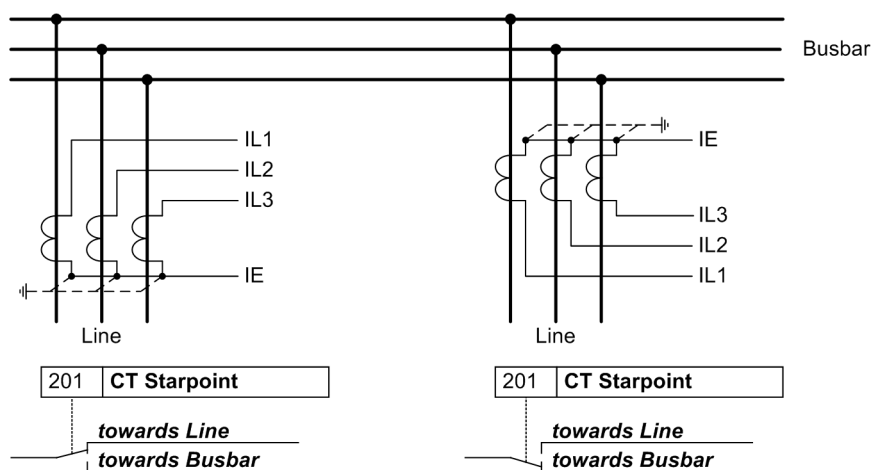


Figure 2-2 Polarity of current transformers

Nominal values of the transformers

If voltage transformers are connected, the device obtains in addresses 203 **Unom PRIMARY** and 204 **Unom SECONDARY** information on the primary and secondary nominal voltage (phase-to-phase voltage), and in addresses 205 **CT PRIMARY** and 206 **CT SECONDARY** information on the primary and secondary nominal currents of the current transformers (phases).

Address 206 **CT SECONDARY** must correspond to the nominal current of the device, otherwise the processor system cannot be started.

Correct entry of the primary data is a prerequisite for the correct computation of operational measured values with primary magnitude. If the settings of the device are performed with primary values using DIGSI, these primary data are an indispensable requirement for the correct function of the device.

In principle, the differential protection is designed such that it can operate without measured voltages if it is configured as the main protection function without distance protection function. However, voltages can be connected. These voltages allow to display and log voltages, to calculate various components of power and to locate faults. If necessary, they can also serve for determining the life line condition in case of automatic reclosure. During configuration of the device functions (Section 2.1.1), it has been determined whether the device is to work with or without measured voltages.

Connection of the voltages

The device features four voltage measuring inputs, three of which are connected to the set of voltage transformers. Various possibilities exist for the fourth voltage input U_4 :

- Connection of the U_4 input to the open delta winding U_{e-n} of the voltage transformer set:

Address 210 is then set to: **U4 transformer = Udelta transf..**

When connected to the e-n winding of a set of voltage transformers, the voltage transformation ratio of the voltage transformers is usually:

$$\frac{U_{Nprim}}{\sqrt{3}} / \frac{U_{Nsec}}{\sqrt{3}} / \frac{U_{Nsec}}{3}$$

The factor U_{ph}/U_{delta} (secondary voltage, address 211 **Uph / Udelta**) must be set to $3/\sqrt{3} = \sqrt{3} \approx 1.73$. For other transformation ratios, i.e. the formation of the displacement voltage via an interconnected transformer set, the factor must be corrected accordingly. This factor is of importance if the $3U_0$ protective element is used and for the monitoring of the measured values and the scaling of the measurement and disturbance recording signals.

- Connection of the U_4 input to perform the synchronism check:

Address 210 is then set to: **U4 transformer = U_{sy2} transf..**

If the voltage transformers for the protective functions U_{sy1} are located on the outgoing feeder side, the U_4 transformer has to be connected to a busbar voltage U_{sy2} . Synchronisation is also possible if the voltage transformers for the protective functions U_{sy1} are connected on busbar side, in which case the additional U_4 transformer must be connected to a feeder voltage.

If the transformation ratio differs, this can be adapted with the setting in address 215 **U_{sy1}/U_{sy2} ratio**. In address 212 **U_{sy2} connection**, the type of voltage connected to measuring point U_{sy2} for synchronism check is communicated to the device. The device then automatically selects the voltage at measuring point U_{sy1} . If the two measuring points used for synchronism check — i.e. feeder voltage transformer and busbar voltage transformer — are not separated by devices that cause a relative phase shift, then the parameter in address 214 φ **U_{sy2}-U_{sy1}** is not required. This parameter can only be altered in DIGSI at **Display Additional Settings**. If, however, a power transformer is connected in between, its vector group must be adapted. The phase angle from U_{sy1} to U_{sy2} is evaluated positively.

Example: (see also Figure 2-3)

Busbar 400 kV primary, 110 V secondary,

Feeder 220 kV primary, 100 V secondary,

Transformer 400 kV / 220 kV, vector group Dy(n) 5

The transformer vector group is defined from the high side to the low side. In this example, the feeder voltage is connected to the low voltage side of the transformer. If U_{sync} (busbar or high voltage side) is placed at zero degrees, then U_{line} is at $5 \times 30^\circ$ (according to the vector group) in the clockwise direction, i.e. at -150° . A positive angle is obtained by adding 360° :

Address 214: φ **U_{sy2}-U_{sy1}** = $360^\circ - 150^\circ = 210^\circ$.

The busbar transformers supply 110 V secondary for primary operation at nominal

value while the feeder transformer supplies 100 V secondary. Therefore, this difference must be balanced:

Address 215: **Usy1/Usy2 ratio** = 100 V / 110 V = **0.91**.

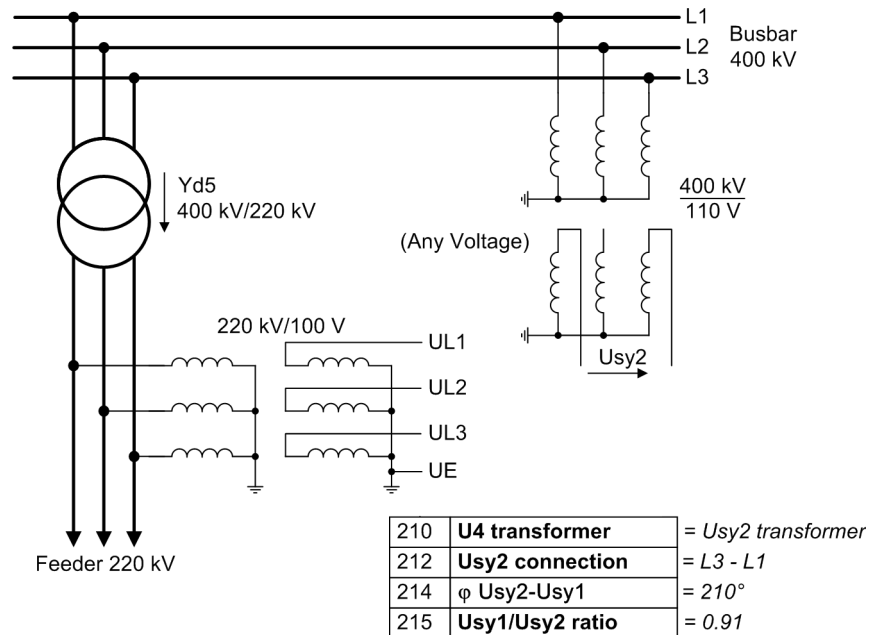


Figure 2-3 Busbar voltage measured via transformer

- Connection of the U_4 input to any other voltage signal U_x , which can be processed by the overvoltage protection function:

Address 210 is then set to: **U4 transformer** = *Ux transformer*.

- If the input U_4 is not required, set:

Address 210 **U4 transformer = *Not connected.***

Factor **Uph** / **Udelta** (address 211, see above) is also of importance in this case, as it is used for scaling the measured data and fault recording data.

Current Connection The device features four current measurement inputs, three of which are connected to the set of current transformers. Various possibilities exist for the fourth current input I_4 :

- Connection of the I_4 input to the earth current in the starpoint of the set of current transformers on the protected feeder (normal connection):
Address 220 is then set to: **I_4 transformer = In prot. line** and address 221 **I_4/I_{ph} CT = 1**.
- Connection of the I_4 input to a separate earth current transformer on the protected feeder (e.g. a summation CT or core balance CT):
Address 220 is then set to: **I_4 transformer = In prot. line** and address 221 **I_4/I_{ph} CT** is set:

$$I_4 / I_{ph \text{ CT}} = \frac{\text{Ratio of earth current transformer}}{\text{Ratio of phase current transformers}}$$

This is independent of whether the device has a normal measuring current input for I_4 or a sensitive measuring current input (if necessary with I_E transformer for earth fault protection).

Example:

Phase current transformers 500 A / 5 A

Earth current transformer 60 A / 1 A

$$I_4 / I_{ph \text{ CT}} = \frac{60 / 1}{500 / 5} = 0.600$$

- Connection of the I_4 input to the earth current of the parallel line (for parallel line compensation of the distance protection and/or fault location):
Address 220 is then set to: **I_4 transformer = In paral. line** and usually address 221 **I_4/I_{ph} CT = 1**.
If the set of current transformers on the parallel line however has a different transformation ratio to those on the protected line, this must be taken into account in address 221:
Address 220 is then set to: **I_4 transformer = In paral. line** and address 221 **I_4/I_{ph} CT = $I_{N \text{ paral. line}} / I_{N \text{ prot. line}}$**

Example:

Current transformers on protected line 1200 A

Current transformers on parallel line 1500 A

$$I_4 / I_{ph \text{ CT}} = \frac{1500}{1200} = 1.250$$

- Connection of the I_4 input to the starpoint current of a transformer; this connection is always used for the restricted earth fault protection and occasionally for the polarisation of the directional earth fault protection:

Address 220 is then set to: **I_4 transformer = I_Y starpoint**, and address 221 **I_4/I_{ph} CT** is according to transformation ratio of the starpoint transformer to the transformer set of the protected line.

- If the input I_4 is not required, set:

Address 220 **I_4 transformer = Not connected**,

Address 221 **I_4/I_{ph} CT** is then irrelevant.

In this case, the neutral current is calculated from the sum of the phase currents.

Rated frequency	The nominal frequency of the system is set in address 230 Rated Frequency . The presetting according to the ordering code (MLFB) only needs to be changed if the device is applied in a region different to the one indicated when ordering. You can set 50 Hz or 60 Hz .
System starpoint	If the distance protection has been configured as the main protection function or in combination with differential protection, the manner in which the system starpoint is earthed must be considered for the correct processing of earth faults and double earth faults. Accordingly, set for address 207 SystemStarpoint = Solid Earthed, Peterson-Coil or Isolated . For „low-resistant“ earthed systems set Solid Earthed .
Distance Unit	Address 236 Distance Unit determines the distance unit (km or Miles) for the fault location indications. If the compounding function of the voltage protection is used, the overall line capacitance is calculated from the line length and the capacitance per unit length. If compounding is not used and fault location is not available, this parameter is of no consequence. Changing the distance unit will not result in an automatic conversion of the setting values which depend on this distance unit. They have to be re-entered into their corresponding valid addresses.
Mode of the earth impedance (residual) compensation	Matching of the earth to line impedance is an essential prerequisite for the accurate measurement of the fault distance (distance protection, fault locator) during earth faults. In address 237 Format Z0/Z1 the format for entering the residual compensation is determined. It is possible to use either the ratio RE/RL , XE/XL or to enter the complex earth (residual) impedance factor K0 . The setting of the earth (residual) impedance factors is done in the power system data 2 (refer to Section 2.1.4).
Closing time of the circuit breaker	The circuit breaker closing time T-CB close at address 239 is required if the device is to close also under asynchronous system conditions, no matter whether for manual closing, for automatic reclosing after three-pole tripping, or both. The device will then calculate the time for the close command such that the voltages are phase-synchronous the instant the breaker poles make contact.
Trip command duration	In address 240 the minimum trip command duration TMin TRIP CMD is set. It applies to all protective and control functions which may issue a trip command. It also determines the duration of the trip pulse when a circuit breaker test is initiated via the device. This parameter can only be altered using DIGSI under Additional Settings . In address 241 the maximum close command duration TMax CLOSE CMD is set. It applies to all close commands issued by the device. It also determines the length of

the close command pulse when a circuit breaker test cycle is issued via the device. It must be long enough to ensure that the circuit breaker has securely closed. There is no risk in setting this time too long, as the close command will in any event be terminated following a new trip command from a protective function. This parameter can only be altered using DIGSI under **Additional Settings**.

Circuit breaker test 7SD5 allows a circuit breaker test during operation by means of a tripping and a closing command entered on the front panel or using DIGSI. The duration of the trip command is set as explained above. Address 242 **T-CBtest-dead** determines the duration from the end of the trip command until the start of the close command for this test. It should not be less than 0.1 s.

Current transformer characteristic The basic principle of the differential protection assumes that all currents flowing into a healthy protected section add up to zero. If the current transformer sets at the line ends have different transformation errors in the overcurrent range, the total of the secondary currents can reach considerable peaks when a short-circuit current flows through the line. These peaks may feign an internal fault. The measures to prevent errors in case of current transformer saturation included in 7SD5 work completely satisfying if the protection knows the response characteristic for transmission failures of the current transformers.

For this, the characteristic data of the current transformers and of their secondary circuits are set (see also Figure 2-27 in Section 2.3). The default setting is adequate in most cases; it considers the data of the worst-case protective current transformers.

The rated accuracy limit factor n of the current transformers and the rated power P_N are usually stated on the rating plate of the current transformers. The information stated refers to reference conditions (nominal current, nominal burden). For example (according to VDE 0414 / Part 1 or IEC 60044)

Current transformer 10P10; 30 VA $\rightarrow n = 10; P_N = 30$ VA

Current transformer 10P20; 20 VA $\rightarrow n = 20; P_N = 20$ VA

The operational accuracy limit factor n' is derived from these rated data and the actual secondary burden P' :

$$\frac{n'}{n} = \frac{P_N + P_i}{P' + P_i}$$

With

$n' =$ operational accuracy limit factor (effective overcurrent factor)

$n =$ rated accuracy limit factor of the current transformers (distinctive number behind P)

$P_N =$ rated burden of the current transformers [VA] at rated current

$P_i =$ internal burden of the current transformers [VA] at rated current

$P' =$ actually connected burden (devices + secondary lines) [VA] at rated current

Usually, the internal burden of the current transformers is stated in the test report. If it is unknown, it can be roughly calculated from the DC resistance R_i of the secondary winding.

$$P_i \approx R_i \cdot I_N^2$$

The ratio between operational accuracy limit factor and rated accuracy limit factor n'/n is set at address 251 **K_ALF / K_ALF_N**.

The CT error at rated current, plus a safety margin, is set at address 253 **E% ALF / ALF_N**. It is equal to the „current measuring deviation for primary nominal current intensity F1“ according to VDE 0414 / Part 1 or IEC 60044. It is

– 3 % for a 5P transformer,

– 5 % for a 10P transformer.

The CT error at rated accuracy limit factor, plus a safety margin, is set at address 254 **E% K_ALF_N**. It is derived from the number preceding the P of the transformer data.

Table 2-1 illustrates some usual protective current transformer types with their characteristic data and the recommended settings.

Table 2-1 Recommended settings for current transformer data

CT class	Standard	Error at rated current		Error at rated accuracy limit factor	Recommended settings		
		Transformation ratio	Angle		Address 251	Address 253	Address 254
5P	IEC 60044-1	1,0 %	± 60 min	≤ 5 %	≤ 1,50 ¹⁾	3,0 %	10,0 %
10P		3,0 %	—	≤ 10 %	≤ 1,50 ¹⁾	5,0 %	15,0 %
TPX	IEC 60044-1	0,5 %	± 30 min	$\varepsilon \leq 10 \%$	≤ 1,50 ¹⁾	1,0 %	15,0 %
TPY		1,0 %	± 30 min	$\varepsilon \leq 10 \%$	≤ 1,50 ¹⁾	3,0 %	15,0 %
TPZ		1,0 %	± 180 min ± 18 min	$\varepsilon \leq 10 \%$ (only I~)	≤ 1,50 ¹⁾	6,0 %	20,0 %
PX	IEC 60044-1 BS: Class X				≤ 1,50 ¹⁾	3,0 %	10,0 %
C100 to C800	ANSI				≤ 1,50 ¹⁾	5,0 %	15,0 %

¹⁾ If $n'/n \leq 1.50$, setting = calculated ratio; if $n'/n > 1.50$, setting = 1.50

With this data the device establishes an approximate CT error characteristic and calculates the restraint quantity (see also Section 2.3).

Calculation example:

Current transformer 5P10; 20 VA

Transformation 600 A / 5 A

Internal burden 2 VA

Secondary lines 4 mm² Cu

Length 20 m

Device 7SD5 , $I_N = 5 \text{ A}$

Burden at 5 A, 0.3 VA

The resistance of the secondary lines is (with the resistivity for copper $\rho_{Cu} = 0.0175 \text{ } \Omega\text{mm}^2/\text{m}$)

$$R_l = 2 \cdot 0.0175 \frac{\Omega\text{mm}^2}{\text{m}} \cdot \frac{20 \text{ m}}{4 \text{ mm}^2} = 0.175 \text{ } \Omega$$

Here, the most unfavourable case is assumed, i.e. the current (as it is the case with single-phase faults) flows back and forth via the secondary lines (factor 2). From that the power for nominal current $I_N = 5 \text{ A}$ is calculated

$$P_i = 0.175 \, \Omega \cdot (5 \text{ A})^2 = 4.375 \text{ VA}$$

The entire connected burden consists of the burden of the incoming lines and the burden of the device:

$$P' = 4.375 \text{ VA} + 0.3 \text{ VA} = 4.675 \text{ VA}$$

Thus the ratio of the accuracy limit factors is as follows

$$\frac{n'}{n} = \frac{P_N + P_i}{P' + P_i} = \frac{20 \text{ VA} + 2 \text{ VA}}{4.675 \text{ VA} + 2 \text{ VA}} = 3.30$$

According to the above table, address 251 is to be set to 1.5 if the calculated value is higher than 1.5. This results in the following setting values:

Address 251 **K_ALF / K_ALF_N = 1.50**

Address 253 **E% ALF / ALF_N = 3.0**

Address 254 **E% K_ALF_N = 10.0**

The presettings correspond to current transformers 10P with rated burden.

Of course, only those settings are reasonable where address 253 **E% ALF / ALF_N** is set lower than address 254 **E% K_ALF_N**.

Transformer with voltage control

If a power transformer with voltage control is located in the protected zone, a differential current may occur even during normal healthy operation under steady-state conditions. This differential current depends on the current intensity as well as on the position of the tap changer of the transformer. Since this differential current is current-proportional it is meaningful to consider it like a current transformer error. You may calculate the maximum differential current at the limits of the tap changer under nominal conditions (referred to the mean current) and add it to the current transformer error as discussed above (addresses 253 and 254). This correction is performed only at the relay facing the regulated winding of the power transformer.

Calculation example:

Transformer	YNd5
	35 MV
	110 kV / 25 kV
	Y-winding with tap changer $\pm 10 \%$

This results in the following:

Rated current at rated voltage $I_N = 184 \text{ A}$

Rated current at $U_N + 10 \%$ $I_{\min} = 167 \text{ A}$

Rated current at $U_N - 10 \%$ $I_{\max} = 202 \text{ A}$

$$\text{Medium Current } I_{\text{Mid}} = \frac{I_{\min} + I_{\max}}{2} = \frac{167 \text{ A} + 202 \text{ A}}{2} = 184.5 \text{ A}$$

The maximum deviation from this current is

$$\text{Error } \delta_{\text{Max}} = \frac{I_{\text{Max}} - I_{\text{Mid}}}{I_{\text{Mid}}} = \frac{202 \text{ A} - 184.5 \text{ A}}{184.5 \text{ A}} = 0.095 = 9.5 \%$$

This maximum deviation δ_{max} [in %] has to be added to the maximum transformer errors 253 **E% ALF / ALF_N** and 254 **E% K_ALF_N** as determined above.

It must be considered that this deviation is referred to the mean current value between the extrema of the tap changer position at rated apparent power, not to the current value at rated voltage and rated power. This requires a further correction of the data of the protected object as discussed in Section 2.1.4 under „Topological Data for Transformers (optional)“.

2.1.2.2 Settings

Addresses which have an appended "A" can only be changed with DIGSI, under Additional Settings.

Addr.	Parameter	Setting Options	Default Setting	Comments
201	CT Starpoint	towards Line towards Busbar	towards Line	CT Starpoint
203	Unom PRIMARY	0.4 .. 1200.0 kV	400.0 kV	Rated Primary Voltage
204	Unom SECONDARY	80 .. 125 V	100 V	Rated Secondary Voltage (Ph-Ph)
205	CT PRIMARY	10 .. 10000 A	1000 A	CT Rated Primary Current
206	CT SECONDARY	1A 5A	1A	CT Rated Secondary Current
207	SystemStarpoint	Solid Earthed Peterson-Coil Isolated	Solid Earthed	System Starpoint is
210	U4 transformer	Not connected Udelta transf. Usy2 transf. Ux transformer	Not connected	U4 voltage transformer is
211	Uph / Udelta	0.10 .. 9.99	1.73	Matching ratio Phase-VT To Open-Delta-VT
212	Usy2 connection	L1-E L2-E L3-E L1-L2 L2-L3 L3-L1	L1-E	VT connection for Usy2
214A	φ Usy2-Usy1	0 .. 360 °	0 °	Angle adjustment Usy2-Usy1
215	Usy1/Usy2 ratio	0.50 .. 2.00	1.00	Matching ratio Usy1 / Usy2
220	I4 transformer	Not connected In prot. line In paral. line IY starpoint	In prot. line	I4 current transformer is
221	I4/Iph CT	0.010 .. 5.000	1.000	Matching ratio I4/Iph for CT's
230	Rated Frequency	50 Hz 60 Hz	50 Hz	Rated Frequency

Addr.	Parameter	Setting Options	Default Setting	Comments
236	Distance Unit	km Miles	km	Distance measurement unit
237	Format Z0/Z1	RE/RL, XE/XL K0	RE/RL, XE/XL	Setting format for zero seq.comp. format
238A	EarthFltO/C 1p	stages together stages separat.	stages together	Earth Fault O/C: setting for 1pole AR
239	T-CB close	0.01 .. 0.60 sec	0.06 sec	Closing (operating) time of CB
240A	TMin TRIP CMD	0.02 .. 30.00 sec	0.10 sec	Minimum TRIP Command Duration
241A	TMax CLOSE CMD	0.01 .. 30.00 sec	1.00 sec	Maximum Close Command Duration
242	T-CBtest-dead	0.00 .. 30.00 sec	0.10 sec	Dead Time for CB test-autoreclosure
251	K_ALF/K_ALF_N	1.00 .. 10.00	1.00	k_alf/k_alf nominal
253	E% ALF/ALF_N	0.5 .. 50.0 %	5.0 %	CT Error in % at k_alf/k_alf nominal
254	E% K_ALF_N	0.5 .. 50.0 %	15.0 %	CT Error in % at k_alf nominal

2.1.3 Change Group

2.1.3.1 Purpose of the Setting Groups

Up to four independent setting groups can be created for establishing the device's function settings. During operation, the user can locally switch between setting groups using the operator panel, binary inputs (if so configured), the operator and service interface per PC, or via the system interface. For reasons of safety it is not possible to change between setting groups during a power system fault.

A setting group includes the setting values for all functions that have been selected as **Enabled** during configuration (see Section 2.1.1.3). In 7SD5 devices, four independent setting groups (A to D) are available. Whereas setting values and options may vary, the selected scope of functions is the same for all groups.

Setting groups enable the user to save the corresponding settings for each application. When they are needed, settings may be loaded quickly. All setting groups are stored in the relay. Only one setting group may be active at a given time.

2.1.3.2 Setting Notes

General

If multiple setting groups are not required. Group A is the default selection. Then, the rest of this section is not applicable.

If multiple setting groups are desired, the setting group change option must be set to **Grp Chge OPTION = Enabled** in the relay configuration of the functional scope (Section 2.1.1.3, address 103). For the setting of the function parameters, you can configure each of the required setting groups A to D, one after the other. A maximum of 4 is possible. To find out how to proceed, how to copy and to reset settings groups

to the delivery state, and how to switch between setting groups during operation, please refer to the SIPROTEC 4 System Description.

Two binary inputs enable changing between the 4 setting groups from an external source.

2.1.3.3 Settings

Addr.	Parameter	Setting Options	Default Setting	Comments
301	ACTIVE GROUP	Group A Group B Group C Group D	Group A	Active Setting Group is
302	CHANGE	Group A Group B Group C Group D Binary Input Protocol	Group A	Change to Another Setting Group

2.1.3.4 Information List

No.	Information	Type of Information	Comments
-	Group A	IntSP	Group A
-	Group B	IntSP	Group B
-	Group C	IntSP	Group C
-	Group D	IntSP	Group D
7	>Set Group Bit0	SP	>Setting Group Select Bit 0
8	>Set Group Bit1	SP	>Setting Group Select Bit 1

2.1.4 General Protection Data (Power System Data 2)

The general protection data (**P.System Data 2**) include settings associated with all functions rather than a specific protection, monitoring or control function. In contrast to the **P.System Data 1** as discussed before, these can be changed over with the setting groups and can be configured via the operator panel of the device.

To ensure uniform conversion factors of measured values for WEB-Monitor and control centres, the setting of all operational rated values of the parameter groups under **P.System Data 2** should be identical.

2.1.4.1 Setting Notes

Rated values of protected lines

The information under this margin heading refers to protected lines (cables or overhead lines) if no power transformer is located within the protected zone, i.e. to models without transformer option or if address 143 **TRANSFORMER** = **NO** has been set to, Section 2.1.1.3).

With address 1103 **FullScaleVolt.** you inform the device on the primary rated voltage (phase-to-phase) of the equipment to be protected (if voltages are applied). This setting influences the displays of the operational measured values in %.

The primary rated current (address 1104 **FullScaleCurr.**) is that of the protected object. For cables the thermal continuous current-loading capacity can be selected. For overhead lines the nominal current is usually not defined; set the rated current of the current transformers (as set in address 205 **CT PRIMARY**, Section 2.1.2.1). If the current transformers have different rated currents at the ends of the protected object, set the highest rated current value for all ends.

This setting will not only have an impact on the displays of the operational measured values in per cent, but **it must also be exactly the same for each end of the protected object** since it is the basis for the current comparison at the ends.

Topological Data for Transformers (optional)

The information under this margin heading only applies if the differential protection is configured as the main function and if a transformer is located in the protected zone of the line protection system (device variant with transformer option and address 143 **TRANSFORMER = YES** is set, Section 2.1.1.3). Otherwise this section can be skipped.

The topological data enable to relate all measured quantities to the nominal data of the power transformer.

With address 1103 **FullScaleVolt.** you inform the device on the primary rated voltage (phase-to-phase) of the transformer to be protected. This setting is also needed for computing the current reference values of the differential protection. Therefore, **it is absolutely necessary to set the correct rated voltage for each end of the protected object even if no voltages are applied to the relay.**

In general, select the rated voltage of the transformer winding facing the device. However, if the protected transformer is equipped with a voltage tap changer at one winding, then do not use the rated voltage of that winding but the voltage that corresponds to the mean value of the currents at the ends of the control range of the tap changer. In this way the fault currents caused by voltage regulation are minimised.

Calculation example:

Transformer	YNd5
	35 MVA
	110 kV / 25 kV
	Y-winding with tap changer $\pm 10\%$

For the regulated winding (110 kV) this results in:

Maximum voltage	$U_{\max} = 121 \text{ kV}$
-----------------	-----------------------------

Minimum voltage	$U_{\min} = 99 \text{ kV}$
-----------------	----------------------------

Voltage to be set (address 1103)

$$U_{N\text{-Oper Prim}} = \frac{2}{\frac{1}{U_{\max}} + \frac{1}{U_{\min}}} = \frac{2}{\frac{1}{121 \text{ kV}} + \frac{1}{99 \text{ kV}}} = 108.9 \text{ kV}$$

The **OPERATION POWER** (address 1106) is the direct primary rated apparent power for transformers and other machines. For transformers with more than two windings, state the winding with the highest rated apparent power. The **same operation power value must be set for each end of the protected object** since it is the basis for the current comparison at the ends.

The power must always be entered as primary value, even if the device is generally configured in secondary values. The device calculates the primary rated current of the protected device from the reference power.

The **VECTOR GROUP I** (address 1162) is the vector group of the power transformer, always from the device's perspective. The device which is used for the reference end of the transformer, normally the one at the high voltage side, must keep the numerical index **0** (default setting). The relevant vector group index must be stated for the other winding(s).

Example:

Transformer **Yy6d5**

For the **Y** end is set: **VECTOR GROUP I = 0**,

for the **y** end is set: **VECTOR GROUP I = 6**,

for the **d** end is set: **VECTOR GROUP I = 5**.

If a different winding is selected as reference winding, e.g. the d winding, this has to be considered accordingly:

For the **Y** end is set: **VECTOR GROUP I = 7** (12 - 5),

for the **y** end is set: **VECTOR GROUP I = 1** (6 - 5),

for the **d** end is set: **VECTOR GROUP I = 0** (5 - 5 = 0 = reference side).

Address 1161 **VECTOR GROUP U** is normally set to the same value as address 1162 **VECTOR GROUP I**.

If the vector group of the transformer is adapted with external means, e.g. because there are matching transformers in the measuring circuit that are still used, set **VECTOR GROUP I = 0** at all ends. In this case the differential protection operates without proper matching computation. However, the measuring voltages transmitted via the transformer would not be adapted in the device and therefore not be calculated and displayed correctly. Address 1161 **VECTOR GROUP U** serves to remove this disadvantage. Set the correct vector group of the transformer according to the above-mentioned considerations.

Address 1162 **VECTOR GROUP I** is therefore relevant for the differential protection whereas address 1161 **VECTOR GROUP U** serves as a basis for the calculation of the measured voltages beyond the transformer.

Address 1163 **TRANS STP IS** is used to set whether the power transformer starpoint facing the device is earthed or not. If the starpoint is grounded, the device will eliminate the zero sequence current of the relevant side, since this zero sequence current may cause a spurious tripping in case of a ground fault outside of the protected zone.

General Line Data of the Distance Protection

The statements under this margin heading apply to cases where the distance protection has been configured as the main or as a backup protection of the differential protection function.

The settings of the line data in this case refers to the common data which is independent of the actual distance protection grading.

The line angle (address 1105 **Line Angle**) may be derived from the line parameters. The following applies:

$$\tan \varphi = \frac{X_L}{R_L} \quad \text{or} \quad \varphi = \arctan\left(\frac{X_L}{R_L}\right)$$

where R_L is being the resistance and X_L the reactance of the protected feeder. The line parameters may either apply to the entire line length, or be per unit of line length as the quotient is independent of length. Furthermore it makes no difference if the quotients are calculated with primary or secondary values.

The line angle is of major importance, e.g. for earth impedance matching according to amount and angle or for compounding in overvoltage protection.

Calculation Example:

110 kV overhead line 150 mm² with the following data:

$$R'_1 = 0.19 \, \Omega/\text{km}$$

$$X'_1 = 0.42 \, \Omega/\text{km}$$

The line angle is computed as follows

$$\tan \varphi = \frac{X_L}{R_L} = \frac{X'_1}{R'_1} = \frac{0.42 \, \Omega/\text{km}}{0.19 \, \Omega/\text{km}} = 2.21 \quad \varphi = 65.7^\circ$$

In address 1105 the setting **Line Angle = 66°** is entered.

Address 1511 **Distance Angle** specifies the angle of inclination of the R sections of the distance protection polygons. Usually you can also set the line angle here as in address 1105.

The directional values (power, power factor, work and related min., max., mean and setpoint values), calculated in the operational measured values, are usually defined with positive direction towards the protected object. This requires that the connection polarity for the entire device was configured accordingly in the Power System Data 1 (compare also „Polarity of Current Transformers“, address 201). But it is also possible to define by setting the „forward“ direction for the protection functions and the positive direction for the power etc. differently, e.g. so that the active power flow (from the line to the busbar is indicated in the positive sense. Set under address 1107 **P,Q sign** the option **reversed**. If the setting is **not reversed** (default), the positive direction for the power etc. corresponds to the „forward“ direction for the protection functions.

The reactance value X' of the protected line is entered as reference value x' in address 1111 in Ω/km if the distance unit was set as kilometer (address 236, see Section 2.1.2.1 at „Distance Unit“), or in Ω/mile if mile was selected as distance unit. The corresponding line length is entered in address 1113 **Line Length** in kilometers or in miles. If, after entry of the reactance per unit of line length in address 1111 or of the line length in address 1113, the distance unit is changed in address 236, the line data must be entered again for the revised distance unit.

The capacitance per unit length C' of the protected line is required for load current compensation, for double-ended fault location and for compounding in overvoltage protection. Without these functions it is of no consequence. It is entered as a reference value c' at address 1112 in $\mu\text{F}/\text{km}$ if kilometres was set as the distance unit (address 236, see Section 2.1.2.1 at „Distance Unit“), or in $\mu\text{F}/\text{mile}$ if mile was set as distance unit. If, after entry of the capacitance per unit of line length in address 1112 or of the line length in address 1113, the distance unit is changed in address 236, the line data must be entered again for the revised distance unit.

For calculation of the capacitance of a line system, the entire line length, i.e. the sum of all line sections, must be set in address 1114 **Tot.Line Length**. For lines with more than two ends, this information is required for charging current compensation.

When entering the parameters with a personal computer and DIGSI, the values can also be entered as primary values. If the nominal quantities of the primary transformers (U, I) are set to minimum, primary values allow only a rough setting of the value

parameters. In such cases it is preferable to set the parameters in secondary quantities.

For conversion of primary values to secondary values the following applies in general:

$$Z_{\text{sec}} = \frac{\text{Ratio of current transformers}}{\text{Ratio of voltage transformers}} \cdot Z_{\text{prim}}$$

Likewise, the following goes for the reactance setting of a line:

$$X'_{\text{sec}} = \frac{N_{\text{CT}}}{N_{\text{VT}}} \cdot X'_{\text{prim}}$$

where

N_{CT} = Current transformer ratio

N_{VT} = Transformation ratio of voltage transformer

The following applies for the capacitance per distance unit:

$$C'_{\text{sec}} = \frac{N_{\text{VT}}}{N_{\text{CT}}} \cdot C'_{\text{prim}}$$

Calculation example:

110 kV overhead line 150 mm² as above

$$R'_1 = 0.19 \, \Omega/\text{km}$$

$$X'_1 = 0.42 \, \Omega/\text{km}$$

$$C' = 0.008 \, \mu\text{F}/\text{km}$$

Current transformer 600 A / 1 A

Voltage transformer 110 kV / 0.1 kV

The secondary per distance unit reactance is therefore:

$$X'_{\text{sec}} = \frac{N_{\text{CT}}}{N_{\text{VT}}} \cdot X'_{\text{prim}} = \frac{600 \, \text{A} / 1 \, \text{A}}{110 \, \text{kV} / 0.1 \, \text{kV}} \cdot 0.42 \, \Omega/\text{km} = 0.229 \, \Omega/\text{km}$$

In address 1111 the setting $x' = 0.229 \, \Omega/\text{km}$ is entered.

The secondary per distance unit capacitance is therefore:

$$C'_{\text{sec}} = \frac{N_{\text{VT}}}{N_{\text{CT}}} \cdot C'_{\text{prim}} = \frac{110 \, \text{kV} / 0.1 \, \text{kV}}{600 \, \text{A} / 1 \, \text{A}} \cdot 0.008 \, \mu\text{F}/\text{km} = 0.015 \, \mu\text{F}/\text{km}$$

In address 1112 the setting $c' = 0.015 \, \mu\text{F}/\text{km}$ is entered.

Earth impedance ratio

Setting of the earth to line impedance ratio is an essential prerequisite for the accurate measurement of the fault distance (distance protection, fault locator) during earth faults. This compensation is either achieved by entering the resistance ratio R_E/R_L and the reactance ratio X_E/X_L or by entry of the complex earth (residual) compensation factor K_0 . Which of these two entry options applies, was determined by the setting in address 237 **Format Z0/Z1** (refer to Section 2.1.2.1). Only the addresses applicable for this setting will be displayed.

Earth Impedance (Residual) Compensation with Scalar Factors R_E/R_L and X_E/X_L

When entering the resistance ratio R_E/R_L and the reactance ratio X_E/X_L the addresses 1116 to 1119 apply. They are calculated separately, and do not correspond to the real and imaginary components of Z_E/Z_L . A computation with complex numbers is therefore not necessary! The ratios are obtained from system data using the following formulas:

Resistance ratio:	Reactance ratio:
$\frac{R_E}{R_L} = \frac{1}{3} \cdot \left(\frac{R_0}{R_1} - 1 \right)$	$\frac{X_E}{X_L} = \frac{1}{3} \cdot \left(\frac{X_0}{X_1} - 1 \right)$

Where

R_0 = Zero sequence resistance of the line

X_0 = Zero sequence reactance of the line

R_1 = Positive sequence resistance of the line

X_1 = Positive sequence reactance of the line

These values may either apply to the entire line length or be based on a per unit of line length, as the quotients are independent of length. Furthermore it makes no difference if the quotients are calculated with primary or secondary values.

Calculation Example:

110 kV overhead line 150 mm² with the data

R_1/s = 0.19 Ω/km positive sequence impedance

X_1/s = 0.42 Ω/km positive sequence impedance

R_0/s = 0.53 Ω/km zero sequence impedance

X_0/s = 1.19 Ω/km zero sequence impedance

(where s = line length)

For earth impedance ratios, the following emerge:

$$\frac{R_E}{R_L} = \frac{1}{3} \cdot \left(\frac{R_0}{R_1} - 1 \right) = \frac{1}{3} \cdot \left(\frac{0.53 \text{ Ω/km}}{0.19 \text{ Ω/km}} - 1 \right) = 0.60$$

$$\frac{X_E}{X_L} = \frac{1}{3} \cdot \left(\frac{X_0}{X_1} - 1 \right) = \frac{1}{3} \cdot \left(\frac{1.19 \text{ Ω/km}}{0.42 \text{ Ω/km}} - 1 \right) = 0.61$$

The earth impedance (residual) compensation factor setting for the first zone Z1 may be different from that of the remaining zones of the distance protection. This allows the setting of the exact values for the protected line, while at the same time the setting for the back-up zones may be a close approximation even when the following lines have substantially different earth impedance ratios (e.g. cable after an overhead line). Accordingly, the settings for the address 1116 **RE/RL (Z1)** and 1117 **XE/XL (Z1)** are determined with the data of the protected line while the addresses 1118 **RE/RL (Z1B...Z5)** and 1119 **XE/XL (Z1B...Z5)** apply to the remaining zones Z1B and Z2 up to Z5 (as seen from the relay location).

**Note**

When addresses 1116 **RE/RL (Z1)** and 1118 **RE/RL (Z1B...Z5)** are set to about 2.0 or more, please keep in mind that the zone reach in R direction should not be set higher than the previously determined (see Section 2.5.2.2/margin heading Resistance Tolerance). If this is not observed, it may happen that phase-to-earth impedance loops are measured in an incorrect distance zone, which may lead to loss of tripping coordination in the case of earth faults with fault resistances.

**Earth Impedance
(Residual) Compensation with
Magnitude and
Angle (K₀-Factor)**

When the complex earth impedance (residual) compensation factor K_0 is set, the addresses 1120 to 1123 apply. In this case it is important that the line angle is set correctly (address 1105, see margin heading „General Line Data“) as the device needs the line angle to calculate the compensation components from the K_0 . These earth impedance compensation factors are defined with their magnitude and angle which may be calculated with the line data using the following equation:

$$K_0 = \frac{Z_E}{Z_L} = \frac{1}{3} \cdot \left(\frac{Z_0}{Z_1} - 1 \right)$$

Where

Z_0 = (complex) zero sequence impedance of the line

Z_1 = (complex) positive sequence impedance of the line

These values may either apply to the entire line length or be based on a per unit of line length, as the quotients are independent of length. Furthermore it makes no difference if the quotients are calculated with primary or secondary values.

For overhead lines it is generally possible to calculate with scalar quantities as the angle of the zero sequence and positive sequence system only differ by an insignificant amount. With cables however, significant angle differences may exist as illustrated by the following example.

Calculation Example:

110 kV single-conductor oil-filled cable 3 · 185 mm² Cu with the following data

Z_1/s = 0.408 · e^{j73°} Ω/km positive sequence impedance

Z_0/s = 0.632 · e^{j18.4°} Ω/km zero sequence impedance

(where s = line length)

The calculation of the earth impedance (residual) compensation factor K_0 results in:

$$\begin{aligned} \frac{Z_0}{Z_1} &= \frac{0.632}{0.408} \cdot e^{j(18.4^\circ - 73^\circ)} = 1.55 \cdot e^{-j54.6^\circ} = 1.55 \cdot (0.579 - j0.815) \\ &= 0.898 - j1.263 \end{aligned}$$

$$K_0 = \frac{1}{3} \cdot \left(\frac{Z_0}{Z_1} - 1 \right) = \frac{1}{3} \cdot (0.898 - j1.263 - 1) = \frac{1}{3} \cdot (-0.102 - j1.263)$$

The magnitude of K_0 is therefore

$$K_0 = \frac{1}{3} \cdot \sqrt{(-0.102)^2 + (-1.263)^2} = 0.42$$

When determining the angle, the quadrant of the result must be considered. The following table indicates the quadrant and range of the angle which is determined by the signs of the calculated real and imaginary part of K_0 .

Table 2-2 Quadrants and ranges of the angle K_0

Real part	Imaginary part	$\tan \varphi(K_0)$	Quadrant/range	Calculation
+	+	+	I $0^\circ \dots +90^\circ$	$\arctan (\text{Im} / \text{Re})$
+	-	-	IV $-90^\circ \dots 0^\circ$	$-\arctan (\text{Im} / \text{Re})$
-	-	+	III $-90^\circ \dots -180^\circ$	$\arctan (\text{Im} / \text{Re}) - 180^\circ$
-	+	-	II $+90^\circ \dots +180^\circ$	$-\arctan (\text{Im} / \text{Re}) + 180^\circ$

In this example the following result is obtained:

$$\varphi(K_0) = \arctan\left(\frac{1.263}{0.102}\right) - 180^\circ = -94.6^\circ$$

The magnitude and angle of the earth impedance (residual) compensation factors setting for the first zone Z1 and the remaining zones of the distance protection may be different. This allows the setting of the exact values for the protected line, while at the same time the setting for the back-up zones may be a close approximation even when the following lines have substantially different earth impedance factors (e.g. cable after an overhead line). Accordingly, the settings for the address 1120 **K0 (Z1)** and 1121 **Angle K0 (Z1)** are determined with the data of the protected line while the addresses 1122 **K0 (> Z1)** and 1123 **Angle K0 (> Z1)** apply to the remaining zones Z1B and Z2 up to Z5 (as seen from the relay mounting location).



Note

If a combination of values is set which is not recognized by the device, it operates with preset values $K_0 = 1 \cdot e^{0^\circ}$. The information „Dis.ErrorK0 (Z1) “ (No. 3654) or „DisErrorK0 (>Z1) “ (No. 3655) appears in the event logs.

Level Arrangement

The center phase of a level arrangement is determined in address 1124 **center phase**. The compensation factor parameters **C0/C1** (address 1125) and **center phase** are reserved for the double-ended fault locator. They are used for configuration of a line with different sections (e.g. overhead line-cable). Refer to Section 2.20 for more details.

Parallel line mutual impedance (optional)

If the device is applied to a double circuit line (parallel lines) and parallel line compensation for the distance and/or fault location function is used, the mutual coupling of the two lines must be considered. A prerequisite for this is that the earth (residual) current of the parallel line has been connected to the measuring input I_4 of the device and that this was configured with the power system data (Section 2.1.2.1) by setting the appropriate parameters.

The coupling factors may be determined using the following equations:

Resistance ratio:	Reactance ratio:
$\frac{R_M}{R_L} = \frac{1}{3} \cdot \frac{R_{0M}}{R_1}$	$\frac{X_M}{X_L} = \frac{1}{3} \cdot \frac{X_{0M}}{X_1}$

where

R_{0M} = Mutual zero sequence resistance (coupling resistance) of the line

X_{0M} = Mutual zero sequence reactance (coupling reactance) of the line

R_1 = Positive sequence resistance of the line

X_1 = Positive sequence reactance of the line

These values may either apply to the entire double circuit line length or be based on a per unit of line length, as the quotient is independent of length. Furthermore it makes no difference whether the quotients are calculated with primary, or secondary values.

These setting values only apply to the protected line and are entered in the addresses **1126 RM/RL ParallLine** and **1127 XM/XL ParallLine**.

For earth faults on the protected feeder there is in theory no additional distance protection or fault locator measuring error when the parallel line compensation is used. The setting in address **1128 RATIO Par. Comp** is therefore only relevant for earth faults outside the protected feeder. It provides the current ratio I_E/I_{EP} for the earth current balance of the distance protection (in Figure 2-4 for the device at location II), above which compensation should take place. In general, a presetting of 85 % is sufficient. A more sensitive (larger) setting has no advantage. Only in the case of a severe system asymmetry, or a very small coupling factor (X_M/X_L below approximately 0.4), may a smaller setting be useful. A more detailed explanation of parallel line compensation can be found in Section 2.5.1 under distance protection.

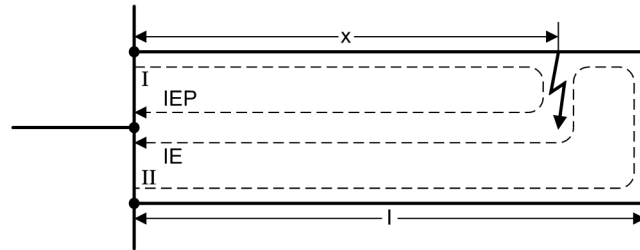


Figure 2-4 Distance with parallel line compensation at II

The current ratio may also be calculated from the desired distance of the parallel line compensation and vice versa. The following applies (refer to Figure 2-4):

$$\frac{I_E}{I_{EP}} = \frac{x/l}{2 - x/l} \quad \text{or} \quad \frac{x}{l} = \frac{2}{1 + \frac{1}{I_E/I_{EP}}}$$

Current transformer saturation

7SD5 contains a saturation detector which largely detects the measuring errors resulting from the saturation of the current transformers and initiates a switchover to distance measurement. The threshold above which it picks up can be set in address **1140 I-CTsat. Thres..** This is the current level above which saturation may be present. The setting ∞ disables the saturation detector. This parameter can only be

altered in DIGSI at **Display Additional Settings**. If current transformer saturation is expected, the following equation may be used as a thumb rule for this setting:

$$\text{Setting value I-CTsat. Thres.} = \frac{n'}{5} \cdot I_{\text{nom}}$$

$$\text{With } n' = n \cdot \frac{P_N + P_i}{P' + P_i} = \text{Actual Overcurrent Factor}$$

P_N = Nominal CT burden [VA]

P_i = Nominal CT internal burden [VA]

P' = Actual connected burden (protection device + connection cable)



Note

The parameter is only relevant for distance protection.

Circuit breaker status

Information regarding the circuit breaker position is required by various protection and supplementary functions to ensure their optimal functionality. The device has a circuit breaker status recognition which processes the status of the circuit breaker auxiliary contacts and contains also a detection based on the measured currents and voltages for opening and closing (see also Section 2.24.1).

In address 1130 the residual current **PoleOpenCurrent** is set, which will definitely not be exceeded when the circuit breaker pole is open. If parasitic currents (e.g. through induction) can be excluded when the circuit breaker is open, this setting may be very sensitive. Otherwise this setting must be increased. Usually the presetting is sufficient. This parameter can only be altered with DIGSI under **Additional Settings**.

1131 The remaining voltage **PoleOpenVoltage**, which will definitely not be exceeded when the circuit breaker pole is open, is set in address. Voltage transformers are presumed to be on the line side. The setting should not be too sensitive because of possible parasitic voltages (e.g. due to capacitive coupling). It must in any event be set below the smallest phase-earth voltage which may be expected during normal operation. Usually the presetting is sufficient. This parameter can only be altered with DIGSI under **Additional Settings**.

The seal-in time **SI Time all Cl.** (address 1132) determines the activation period for enabling protective functions following each energization of the line (e.g. fast tripping high-current stage). This time is started by the internal circuit breaker switching detection when it recognizes energization of the line or by the circuit breaker auxiliary contacts, if these are connected to the device via binary input to provide information that the circuit breaker has closed. The time should therefore be set longer than the circuit breaker operating time during closing plus the operating time of these protective functions plus the circuit breaker operating time during opening. This parameter can only be altered with DIGSI under **Additional Settings**.

In address 1134 **Line Closure**, the criteria for the internal recognition of line energization are determined. **Only with ManCl** means that only the manual close signal via binary input or the integrated control is evaluated as closure. **I OR U or ManCl** means that additionally the measured currents or voltages are used to determine closure of the circuit breaker, whereas **CB OR I or M/C** implies that either the currents or the states of the circuit breaker auxiliary contacts are used to determine

closure of the circuit breaker. If the voltage transformers are not arranged on the line side, the setting **CB OR I or M/C** must be used. In the case of **I or Man.Close** only the currents or the manual close signals are used to recognise closing of the circuit breaker.

Address 1135 **Reset Trip CMD** determines under which conditions a trip command is reset. If **CurrentOpenPole** is set, the trip command is reset as soon as the current disappears. It is important that the value set in address 1130 **PoleOpenCurrent** (see above) is undershot. If **Current AND CB** is set, the circuit breaker auxiliary contact must send a message that the circuit breaker is open. It is a prerequisite for this setting that the position of the auxiliary contacts is allocated via a binary input.

For special applications, in which the device trip command does not always lead to a complete cutoff of the current, the setting **Pickup Reset** can be chosen. In this case, the trip command is reset as soon as the pickup of the tripping protection function drops off and - just as with the other setting options - the minimum trip command duration (address 240) has elapsed. The setting **Pickup Reset** makes sense, for instance, during the test of the protection equipment, when the system-side load current cannot be cut off and the test current is injected in parallel to the load current.

While the time **SI Time all Cl.** (address 1132, see above) is activated with each recognition of line energisation, **SI Time Man.Cl** (address 1150) is the time following manual closure during which special influence on the protective functions is activated (e.g. the switch-on pickup threshold for the differential protection or the increased reach for the distance protection). This parameter can only be altered with DIGSI under **Additional Settings**.



Note

For CB Test and automatic reclosure the CB auxiliary contact status derived with the binary inputs >CB1 ... (No. 366 to 371, 410 and 411) are relevant for the circuit breaker test and for the automatic reclosure to indicate the CB switching status. The other binary inputs >CB ... (No. 351 to 353, 379 and 380) are used for detecting the status of the line (address 1134) and for reset of the trip command (address 1135). Address 1135 is also used by other protection functions, e.g. by the echo function, energization in case of overcurrent etc. For use with one circuit breaker only, both binary input functions, e.g. 366 and 351, can be allocated to the same physical input. For applications with 2 circuit breakers per feeder (1.5 circuit breaker systems or ring bus), the binary inputs >CB1... must be connected to the correct circuit breaker. The binary inputs >CB... then need the correct signals for detecting the line status. In certain cases, an additional CFC logic may be necessary.

Address 1136 **OpenPoleDetect.** defines the criteria for operating the internal open pole detector (see also Chapter 2.24.1, Section Open Pole Detector). When using the default setting **w/ measurement**, all available data are evaluated that indicate single-pole dead time. The internal trip command and pickup indications, the current and voltage measured values and the CB auxiliary contacts are used. To evaluate only the auxiliary contacts including the phase currents, set the address 1136 to **Current AND CB**. If you do not wish to detect single-pole automatic reclosure, set **OpenPoleDetect.** to **OFF**.

For manual closure of the circuit breaker via binary inputs, it can be specified in address 1151 **SYN.MAN.CL** whether the integrated manual CLOSE detection checks the synchronism between the busbar voltage and the voltage of the switched feeder. This setting does not apply for a close command via the integrated control functions. If the synchronism check is desired, the device must either feature the integrated syn-

chronism check function or an external device for synchronism check must be connected.

If the internal synchronism check is to be used, the synchronism check function must be enabled; an additional voltage U_{sy2} for synchronism check has to be connected to the device and this must be correctly parameterised in the Power System Data (Section 2.1.2.1, address 210 **U4 transformer = U_{sy2} transf.** and the associated factors).

If no synchronism check is to be performed with manual closing, set **SYN.MAN.CL = w/o Sync-check**. If a check is desired, set **with Sync-check**. To not use the MANUAL CLOSE function of the device, set **SYN.MAN.CL** to **NO**. This may be reasonable if the close command is output to the circuit breaker without involving the 7SD5, and the relay itself is not desired to issue a close command.

For commands via the integrated control (on site, DIGSI, serial interface) address 1152 **Man.Clos. Imp.** determines whether a close command via the integrated control regarding the MANUAL CLOSE handling for the protective functions (like instantaneous re-opening when switching onto a fault) is to act like a MANUAL CLOSE command via binary input. This address also informs the device to which switchgear this applies. You can select from the switching devices which are available to the integrated control. Select the circuit breaker which operates for manual closure and, if required, for automatic reclosure (usually Q0). If **none** is set here, a CLOSE command via the control will not generate a MANUAL CLOSE impulse for the protective function.

Three-pole coupling

Three-pole coupling is only relevant if single-pole auto-reclosures are carried out. If not, tripping is always three-pole. The rest of this margin heading is then irrelevant.

Address 1155 **3pole coupling** whether any multi-phase pickup leads to a three-pole trip command, or whether only multi-pole tripping decisions result in a three-pole trip command. This setting is only relevant for versions with single-pole and three-pole tripping and is only available there. It does not have an impact on the differential protection since pickup and tripping are equivalent. The time overcurrent protection function, however, can also pick up in the event of a fault occurred outside the protected object, without tripping.

More information on the functions is also contained in Section 2.24.1 Pickup Logic for the Entire Device.

With the setting **with PICKUP** every fault detection in more than one phase leads to three-pole coupling of the trip outputs, even if only a single-phase earth fault is situated within the protection zone, and further faults (e.g. caused by overcurrent), only affect the higher zones, or are located in the reverse direction (distance protection). Even if a single-phase trip command has already been issued, each further fault detection will lead to three-pole coupling of the trip outputs.

If, on the other hand, this address is set to **with TRIP** (default setting for differential protection), three-pole coupling of the trip output (three-pole tripping) only occurs when more than one pole is tripped. Therefore, if a single-phase fault occurs within the protected zone and a further fault outside of it, single-pole tripping is possible. A further fault during the single-pole tripping will only lead to a three-pole coupling, if it occurs within the protected zone.

An exception to this is power swing detection. When power swing is detected, only three-pole tripping is possible.

This parameter is valid for all protection functions of 7SD5 which are capable of single-pole tripping. The default setting is **with TRIP**.

The difference made by this parameter becomes apparent when multiple faults are cleared, i.e. faults occurring almost simultaneously at different locations in the network.

If, for example, two single-phase earth faults occur on different lines — these may also be parallel lines — (Figure 2-5), the protection relays detect the fault type on all four line ends L1-L2-E, i.e. the pickup image corresponds to a two-phase earth fault. If single pole tripping and reclosure is employed, it is therefore desirable that each line only trips and recloses single pole. This is possible with setting 1155 **3pole coupling = with TRIP**. Each of the four devices detects a single-pole internal fault and can thus trip single-pole.



Figure 2-5 Multiple fault on a double-circuit line

In some cases, however, three-pole tripping would be preferable for this fault scenario, for example in the event that the double-circuit line is located in the vicinity of a large generator unit (Figure 2-6). This is because the generator considers the two single-phase to ground faults as one double-phase ground fault, with correspondingly high dynamic load on the turbine shaft. With the setting 1155 **3pole coupling = with PICKUP**, the two lines are switched off three-pole, since each device picks up as with L1-L2-E, i.e. as with a multi-phase fault.

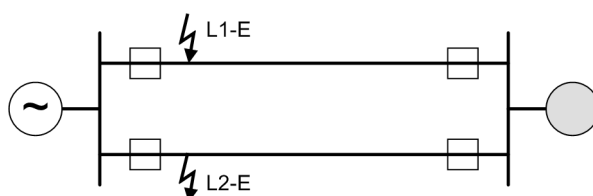


Figure 2-6 Multiple fault on a double-circuit line next to a generator

Address 1156 **Trip2phFlt** determines that the short-circuit protective functions perform only a single-pole trip in case of isolated two-phase faults (clear of ground), provided that single-pole tripping is possible and permitted. This allows a single-pole reclose cycle for this kind of fault. You can specify whether the leading phase (**1pole leading 0**), or the lagging phase (**1pole lagging 0**) is tripped. The parameter is only available in versions with single-pole and three-pole tripping. This parameter can only be altered using DIGSI at **Additional Settings**. If this possibility is to be used, you have to bear in mind that the phase selection should be the same throughout the entire network and that it must be the same at all ends of one line. More information on the functions is also contained in Section 2.24.1 Pickup Logic of the Entire Device. The presetting **3pole** is usually used.

Line Sections

The line section parameters 6001 **S1: Line angle** to 6012 **S1: angle K0**, 6021 **S2: Line angle** to 6032 **S2: angle K0** and 6041 **S3: Line angle** to 6052 **S3: angle K0** are reserved for the double-ended fault locator. They are used for

parameterization of a line with different sections (overhead line-cable). Refer to Section 2.20 for more details.

2.1.4.2 Settings

Addresses which have an appended "A" can only be changed with DIGSI, under Additional Settings.

The table indicates region-specific presettings. Column C (configuration) indicates the corresponding secondary nominal current of the current transformer.

Addr.	Parameter	C	Setting Options	Default Setting	Comments
1103	FullScaleVolt.		0.4 .. 1200.0 kV	400.0 kV	Measurement: Full Scale Voltage (100%)
1104	FullScaleCurr.		10 .. 10000 A	1000 A	Measurement: Full Scale Current (100%)
1105	Line Angle		10 .. 89 °	85 °	Line Angle
1106	OPERATION POWER		0.2 .. 5000.0 MVA	692.8 MVA	Operational power of protection zone
1107	P,Q sign		not reversed reversed	not reversed	P,Q operational measured values sign
1111	x'	1A	0.0050 .. 9.5000 Ω/km	0.1500 Ω/km	x' - Line Reactance per length unit
		5A	0.0010 .. 1.9000 Ω/km	0.0300 Ω/km	
1111	x'	1A	0.0050 .. 15.0000 Ω/mi	0.2420 Ω/mi	x' - Line Reactance per length unit
		5A	0.0010 .. 3.0000 Ω/mi	0.0484 Ω/mi	
1112	c'	1A	0.000 .. 100.000 μF/km	0.010 μF/km	c' - capacit. per unit line len. μF/km
		5A	0.000 .. 500.000 μF/km	0.050 μF/km	
1112	c'	1A	0.000 .. 160.000 μF/mi	0.016 μF/mi	c' - capacit. per unit line len. μF/mile
		5A	0.000 .. 800.000 μF/mi	0.080 μF/mi	
1113	Line Length		0.1 .. 1000.0 km	100.0 km	Line Length
1113	Line Length		0.1 .. 650.0 Miles	62.1 Miles	Line Length
1114	Tot.Line Length		0.1 .. 1000.0 km	100.0 km	Total Line Length
1114	Tot.Line Length		0.1 .. 650.0 Miles	62.1 Miles	Total Line Length
1116	RE/RL(Z1)		-0.33 .. 10.00	1.00	Zero seq. comp. factor RE/RL for Z1
1117	XE/XL(Z1)		-0.33 .. 10.00	1.00	Zero seq. comp. factor XE/XL for Z1
1118	RE/RL(Z1B...Z5)		-0.33 .. 10.00	1.00	Zero seq. comp.factor RE/RL for Z1B...Z5
1119	XE/XL(Z1B...Z5)		-0.33 .. 10.00	1.00	Zero seq. comp.factor XE/XL for Z1B...Z5
1120	K0 (Z1)		0.000 .. 4.000	1.000	Zero seq. comp. factor K0 for zone Z1
1121	Angle K0(Z1)		-180.00 .. 180.00 °	0.00 °	Zero seq. comp. angle for zone Z1

Addr.	Parameter	C	Setting Options	Default Setting	Comments
1122	K0 (> Z1)		0.000 .. 4.000	1.000	Zero seq.comp.factor K0,higher zones >Z1
1123	Angle K0(> Z1)		-180.00 .. 180.00 °	0.00 °	Zero seq. comp. angle, higher zones >Z1
1124	center phase		unknown/sym. Phase 1 Phase 2 Phase 3	unknown/sym.	center phase of feeder
1125	C0/C1		0.01 .. 10.00	0.75	Compensation factor C0/C1
1126	RM/RL ParalLine		0.00 .. 8.00	0.00	Mutual Parallel Line comp. ratio RM/RL
1127	XM/XL ParalLine		0.00 .. 8.00	0.00	Mutual Parallel Line comp. ratio XM/XL
1128	RATIO Par. Comp		50 .. 95 %	85 %	Neutral current RATIO Parallel Line Comp
1130A	PoleOpenCurrent	1A	0.05 .. 1.00 A	0.10 A	Pole Open Current Threshold
		5A	0.25 .. 5.00 A	0.50 A	
1131A	PoleOpenVoltage		2 .. 70 V	30 V	Pole Open Voltage Threshold
1132A	SI Time all Cl.		0.01 .. 30.00 sec	0.10 sec	Seal-in Time after ALL closures
1133A	T DELAY SOTF		0.05 .. 30.00 sec	0.25 sec	minimal time for line open before SOTF
1134	Line Closure		only with ManCl I OR U or ManCl CB OR I or M/C I or Man.Close	I or Man.Close	Recognition of Line Closures with
1135	Reset Trip CMD		CurrentOpenPole Current AND CB Pickup Reset	CurrentOpenPole	RESET of Trip Command
1136	OpenPoleDetect.		OFF Current AND CB w/ measurement	w/ measurement	open pole detector
1140A	I-CTsat. Thres.	1A	0.2 .. 50.0 A; ∞	20.0 A	CT Saturation Threshold
		5A	1.0 .. 250.0 A; ∞	100.0 A	
1150A	SI Time Man.Cl		0.01 .. 30.00 sec	0.30 sec	Seal-in Time after MANUAL closures
1151	SYN.MAN.CL		with Sync-check w/o Sync-check NO	NO	Manual CLOSE COMMAND generation
1152	Man.Clos. Imp.		(Setting options depend on configuration)	None	MANUAL Closure Impulse after CONTROL
1155	3pole coupling		with PICKUP with TRIP	with TRIP	3 pole coupling

Addr.	Parameter	C	Setting Options	Default Setting	Comments
1156A	Trip2phFlt		3pole 1pole leading Ø 1pole lagging Ø	3pole	Trip type with 2phase faults
1161	VECTOR GROUP U		0 .. 11	0	Vector group numeral for voltage
1162	VECTOR GROUP I		0 .. 11	0	Vector group numeral for current
1163	TRANS STP IS		Solid Earthed Not Earthed	Solid Earthed	Transformer starpoint is
1511	Distance Angle		30 .. 90 °	85 °	Angle of inclination, distance charact.
6001	S1: Line angle		30 .. 89 °	85 °	S1: Line angle
6002	S1: x'	1A	0.0050 .. 9.5000 Ω/km	0.1500 Ω/km	S1: feeder reactance per km: x'
		5A	0.0010 .. 1.9000 Ω/km	0.0300 Ω/km	
6002	S1: x'	1A	0.0050 .. 15.0000 Ω/mi	0.2420 Ω/mi	S1: feeder reactance per mile: x'
		5A	0.0010 .. 3.0000 Ω/mi	0.0484 Ω/mi	
6003	S1: c'	1A	0.000 .. 100.000 µF/km	0.010 µF/km	S1: feeder capacitance c' in µF/km
		5A	0.000 .. 500.000 µF/km	0.050 µF/km	
6003	S1: c'	1A	0.000 .. 160.000 µF/mi	0.016 µF/mi	S1: feeder capacitance c' in µF/mile
		5A	0.000 .. 800.000 µF/mi	0.080 µF/mi	
6004	S1: Line length		0.1 .. 1000.0 km	100.0 km	S1: Line length in kilometer
6004	S1: line length		0.1 .. 650.0 Miles	62.1 Miles	S1: Line length in kilometer
6008	S1: center ph.		unknown/sym. Phase 1 Phase 2 Phase 3	unknown/sym.	S1: center phase
6009	S1: XE/XL		-0.33 .. 10.00	1.00	S1: Zero seq. compensating factor XE/XL
6010	S1: RE/RL		-0.33 .. 10.00	1.00	S1: Zero seq. compensating factor RE/RL
6011	S1: K0		0.000 .. 4.000	1.000	S1: Zero seq. compensating factor K0
6012	S1: angle K0		-180.00 .. 180.00 °	0.00 °	S1: Zero seq. compensating angle of K0
6021	S2: Line angle		30 .. 89 °	85 °	S2: Line angle
6022	S2: x'	1A	0.0050 .. 9.5000 Ω/km	0.1500 Ω/km	S2: feeder reactance per km: x'
		5A	0.0010 .. 1.9000 Ω/km	0.0300 Ω/km	
6022	S2: x'	1A	0.0050 .. 15.0000 Ω/mi	0.2420 Ω/mi	S2: feeder reactance per mile: x'
		5A	0.0010 .. 3.0000 Ω/mi	0.0484 Ω/mi	
6023	S2: c'	1A	0.000 .. 100.000 µF/km	0.010 µF/km	S2: feeder capacitance c' in µF/km
		5A	0.000 .. 500.000 µF/km	0.050 µF/km	

Addr.	Parameter	C	Setting Options	Default Setting	Comments
6023	S2: c'	1A	0.000 .. 160.000 $\mu\text{F}/\text{mi}$	0.016 $\mu\text{F}/\text{mi}$	S2: feeder capacitance c' in $\mu\text{F}/\text{mile}$
		5A	0.000 .. 800.000 $\mu\text{F}/\text{mi}$	0.080 $\mu\text{F}/\text{mi}$	
6024	S2: Line length		0.1 .. 1000.0 km	100.0 km	S2: Line length in kilometer
6024	S2: line length		0.1 .. 650.0 Miles	62.1 Miles	S2: line length in miles
6028	S2: center ph.		unknown/sym. Phase 1 Phase 2 Phase 3	unknown/sym.	S2: center phase
6029	S2: XE/XL		-0.33 .. 10.00	1.00	S2: Zero seq. compensating factor XE/XL
6030	S2: RE/RL		-0.33 .. 10.00	1.00	S2: Zero seq. compensating factor RE/RL
6031	S2: K0		0.000 .. 4.000	1.000	S2: Zero seq. compensating factor K0
6032	S2: angle K0		-180.00 .. 180.00 °	0.00 °	S2: Zero seq. compensating angle of K0
6041	S3: Line angle		30 .. 89 °	85 °	S3: Line angle
6042	S3: x'	1A	0.0050 .. 9.5000 Ω/km	0.1500 Ω/km	S3: feeder reactance per km: x'
		5A	0.0010 .. 1.9000 Ω/km	0.0300 Ω/km	
6042	S3: x'	1A	0.0050 .. 15.0000 Ω/mi	0.2420 Ω/mi	S3: feeder reactance per mile: x'
		5A	0.0010 .. 3.0000 Ω/mi	0.0484 Ω/mi	
6043	S3: c'	1A	0.000 .. 100.000 $\mu\text{F}/\text{km}$	0.010 $\mu\text{F}/\text{km}$	S3: feeder capacitance c' in $\mu\text{F}/\text{km}$
		5A	0.000 .. 500.000 $\mu\text{F}/\text{km}$	0.050 $\mu\text{F}/\text{km}$	
6043	S3: c'	1A	0.000 .. 160.000 $\mu\text{F}/\text{mi}$	0.016 $\mu\text{F}/\text{mi}$	S3: feeder capacitance c' in $\mu\text{F}/\text{mile}$
		5A	0.000 .. 800.000 $\mu\text{F}/\text{mi}$	0.080 $\mu\text{F}/\text{mi}$	
6044	S3: Line length		0.1 .. 1000.0 km	100.0 km	S3: Line length in kilometer
6044	S3: line length		0.1 .. 650.0 Miles	62.1 Miles	S3: line length in miles
6048	S3: center ph.		unknown/sym. Phase 1 Phase 2 Phase 3	unknown/sym.	S3: center phase
6049	S3: XE/XL		-0.33 .. 10.00	1.00	S3: Zero seq. compensating factor XE/XL
6050	S3: RE/RL		-0.33 .. 10.00	1.00	S3: Zero seq. compensating factor RE/RL
6051	S3: K0		0.000 .. 4.000	1.000	S3: Zero seq. compensating factor K0
6052	S3: angle K0		-180.00 .. 180.00 °	0.00 °	S3: Zero seq. compensating angle of K0

2.1.4.3 Information List

No.	Information	Type of Information	Comments
301	Pow.Sys.Flt.	OUT	Power System fault
302	Fault Event	OUT	Fault Event
351	>CB Aux. L1	SP	>Circuit breaker aux. contact: Pole L1
352	>CB Aux. L2	SP	>Circuit breaker aux. contact: Pole L2
353	>CB Aux. L3	SP	>Circuit breaker aux. contact: Pole L3
356	>Manual Close	SP	>Manual close signal
357	>Blk Man. Close	SP	>Block manual close cmd. from external
361	>FAIL:Feeder VT	SP	>Failure: Feeder VT (MCB tripped)
362	>FAIL:Usy2 VT	SP	>Failure: Usy2 VT (MCB tripped)
366	>CB1 Pole L1	SP	>CB1 Pole L1 (for AR,CB-Test)
367	>CB1 Pole L2	SP	>CB1 Pole L2 (for AR,CB-Test)
368	>CB1 Pole L3	SP	>CB1 Pole L3 (for AR,CB-Test)
371	>CB1 Ready	SP	>CB1 READY (for AR,CB-Test)
378	>CB faulty	SP	>CB faulty
379	>CB 3p Closed	SP	>CB aux. contact 3pole Closed
380	>CB 3p Open	SP	>CB aux. contact 3pole Open
381	>1p Trip Perm	SP	>Single-phase trip permitted from ext.AR
382	>Only 1ph AR	SP	>External AR programmed for 1phase only
383	>Enable ARzones	SP	>Enable all AR Zones / Stages
385	>Lockout SET	SP	>Lockout SET
386	>Lockout RESET	SP	>Lockout RESET
410	>CB1 3p Closed	SP	>CB1 aux. 3p Closed (for AR, CB-Test)
411	>CB1 3p Open	SP	>CB1 aux. 3p Open (for AR, CB-Test)
501	Relay PICKUP	OUT	Relay PICKUP
502	Relay Drop Out	OUT	Relay Drop Out
503	Relay PICKUP L1	OUT	Relay PICKUP Phase L1
504	Relay PICKUP L2	OUT	Relay PICKUP Phase L2
505	Relay PICKUP L3	OUT	Relay PICKUP Phase L3
506	Relay PICKUP E	OUT	Relay PICKUP Earth
507	Relay TRIP L1	OUT	Relay TRIP command Phase L1
508	Relay TRIP L2	OUT	Relay TRIP command Phase L2
509	Relay TRIP L3	OUT	Relay TRIP command Phase L3
510	Relay CLOSE	OUT	Relay GENERAL CLOSE command
511	Relay TRIP	OUT	Relay GENERAL TRIP command
512	Relay TRIP 1pL1	OUT	Relay TRIP command - Only Phase L1
513	Relay TRIP 1pL2	OUT	Relay TRIP command - Only Phase L2
514	Relay TRIP 1pL3	OUT	Relay TRIP command - Only Phase L3
515	Relay TRIP 3ph.	OUT	Relay TRIP command Phases L123
530	LOCKOUT	IntSP	LOCKOUT is active
533	IL1 =	VI	Primary fault current IL1
534	IL2 =	VI	Primary fault current IL2
535	IL3 =	VI	Primary fault current IL3
536	Definitive TRIP	OUT	Relay Definitive TRIP
545	PU Time	VI	Time from Pickup to drop out

No.	Information	Type of Information	Comments
546	TRIP Time	VI	Time from Pickup to TRIP
560	Trip Coupled 3p	OUT	Single-phase trip was coupled 3phase
561	Man.Clos.Detect	OUT	Manual close signal detected
562	Man.Close Cmd	OUT	CB CLOSE command for manual closing
563	CB Alarm Supp	OUT	CB alarm suppressed
590	Line closure	OUT	Line closure detected
591	1pole open L1	OUT	Single pole open detected in L1
592	1pole open L2	OUT	Single pole open detected in L2
593	1pole open L3	OUT	Single pole open detected in L3

2.2 Protection Data Interfaces and Protection Data Topology

As described in the explanation of the function principle of the differential protection (see Section 2.3), the devices protecting a protected object have to exchange the data of the protected object. This applies not only to the measured quantities relevant to the actual differential protection, but also to all data which are to be available at the ends. These data include also the synchronisation and topological data as well as the intertripping, transfer trip, remote annunciation signals and measured values. The topology of the protected object, the allocation of the devices to the ends of the protected object and the allocation of the communication paths to the protection data interfaces of the devices form the topology of the protection system and its communication.

2.2.1 Functional Description

2.2.1.1 Protection Data Topology / Protection Data Communication

Protection Data Topology

For a standard layout of lines with two ends, you require one protection data interface for each device. The protection data interface is named PI 1 (see also Figure 2-7). When configuring the functional scope (Section 2.1.1), the corresponding protection data interface must have been configured as **Enabled**.

With 7SD5 it is also possible to connect both protection data interfaces to each other provided that the two devices have two protection data interfaces each and that the relevant transmission media are available. This provides for 100% redundancy as far as the transmission is concerned (Figure 2-8). The devices autonomously search for the fastest communication link. If this link is faulty, the devices automatically switch to the other link until the faster link is available again.

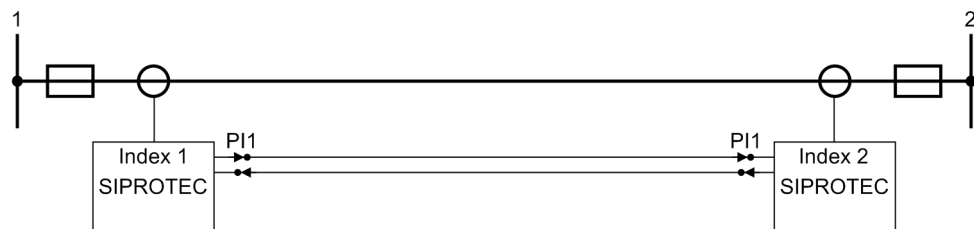


Figure 2-7 Differential protection for two ends with two 7SD5 devices, each of them having one protection data interface (transmitter/receiver)

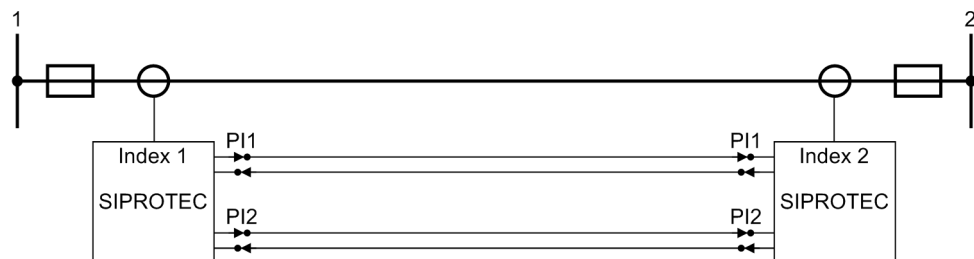


Figure 2-8 Differential protection for two ends with two 7SD5 each of them having two protection data interfaces (transmitter/receiver)

For more than two ends, a communication chain or a communication ring can be formed. A setup with a maximum of six devices is possible.

Figure 2-9 shows a Communication Chain with four devices. The ends **1** and **2** are derived from the arrangements of the current transformers shown on the left. Although this is actually only **one** line end, it should be treated in terms of differential protection as two ends because the current is measured in two places. This is to make sure that the transformation errors of both transformer sets are considered by the restraint, especially for a high fault current flowing from end **1** to end **2** (external fault).

The communication chain starts at the protection data interface PI 1 of the device with index **1**, reaches the device with index **2** at PI 1, extends from the device with index **2** at PI 2 to the device with index **4**, etc. until it reaches the device with index **3** at PI 1. The example shows that the indexing of the devices does not necessarily have to correspond to the sequence of the communication chain. Which protection data interface is connected to which protection data interface is irrelevant. One device with one protection data interface at each end of the chain is sufficient.

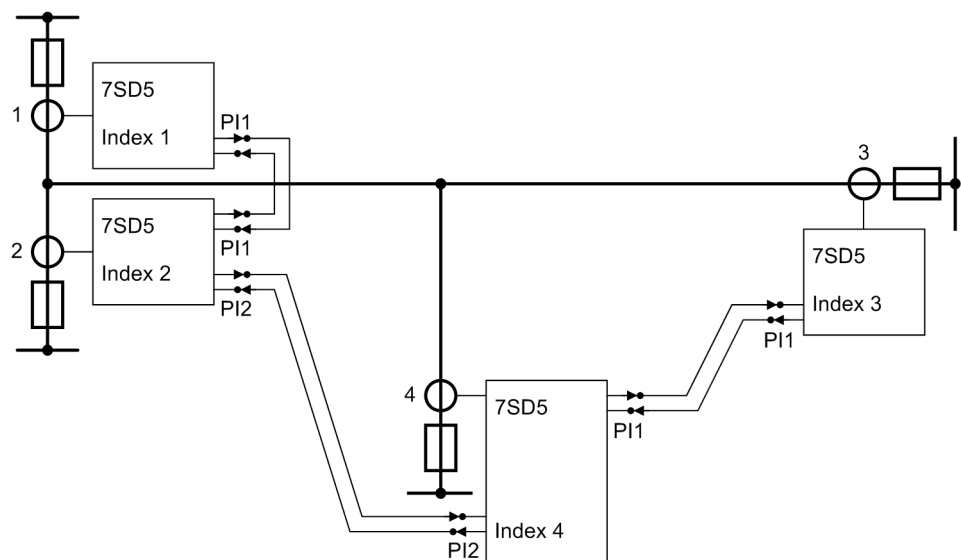


Figure 2-9 Differential protection for four ends with chain topology

Figure 2-10 shows the same line arrangement as Figure 2-9. The communication links, however, have been complemented to form a closed ring. A 7SD5 device with 2 protection data interfaces is necessary for each terminal. This communication ring has the advantage, as compared to the chain shown in Figure 2-9, that the entire communication system works even if one communications link fails. The devices detect the failure and switch automatically over to the remaining paths of communication. In this example PI 1 is always connected to PI 2 of the following device.

By the way, the two possibilities for two devices can be regarded as special cases of chains and rings. The connection as shown in Figure 2-7 forms a communication chain with only one element. Figure 2-8 shows a ring which has been compressed into one two-way connection.

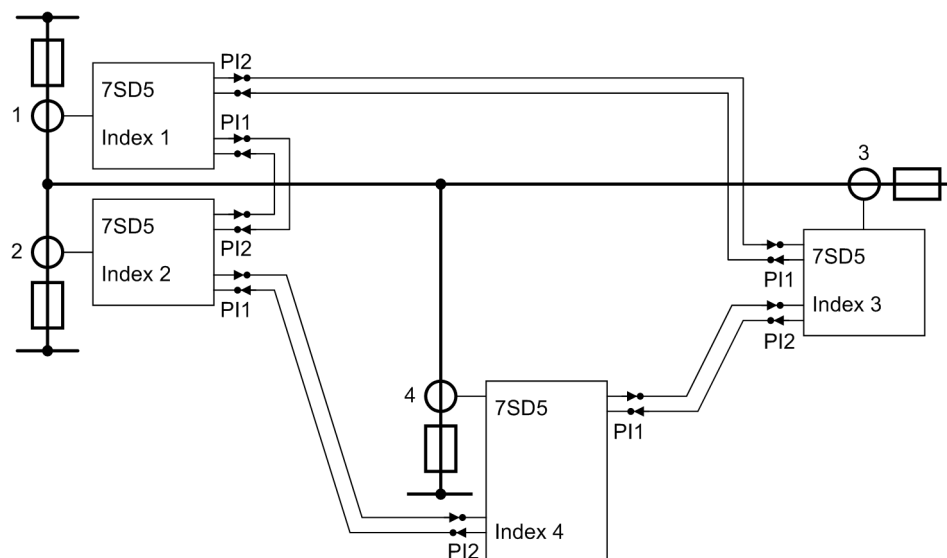


Figure 2-10 Differential protection for four ends with ring topology

Communication media

Communication can occur via different communication connections. Which kind of media is used depends on the distance and on the communication media available. For distances up to 100 km a direct connection via optical fibres having a transmission rate of 512 kbit/s is possible. Otherwise we recommend communication converters. A transmission via modems and communication networks can also be realized. Please note, however, that the tripping times of the differential protection devices depend on the transmission quality and that they are prolonged in case of a reduced transmission quality and /or an increased transmission time. Figure 2-11 shows examples of communication connections. In case of a direct connection the distance depends on the type of the optical fibre. Table 2-3 lists the options available. The modules in the device are replaceable. For ordering information see Appendix, under Accessories.

If a communication converter is used, the device and the communication converter are linked with a FO5 module via optical fibres. The converter itself is available in different versions allowing to connect it to communication networks (X.21, G703 64 kbit, G703 E1/T1) or connection via two-wire copper lines. For the Order No., please refer to the Appendix under Accessories.

Table 2-3 Communication via Direct Connection

Module in the Device	Connector Type	Fibre Type	Optical Wavelength	Perm. Path Attenuation	Distance, Typical
FO5	ST	Multimode 62.5/125 μm	820 nm	8 dB	1.5 km (0.95 miles)
FO6	ST	Multimode 62.5/125 μm	820 nm	16 dB	3.5 km (2.2 miles)
FO17	LC	Monomode 9/125 μm	1300 nm	13 dB	24 km (14.9 miles)
FO18	LC	Monomode 9/125 μm	1300 nm	29 dB	60 km (37.5 miles)
FO19	LC	Monomode 9/125 μm	1550 nm	29 dB	100 km (62.5 miles)

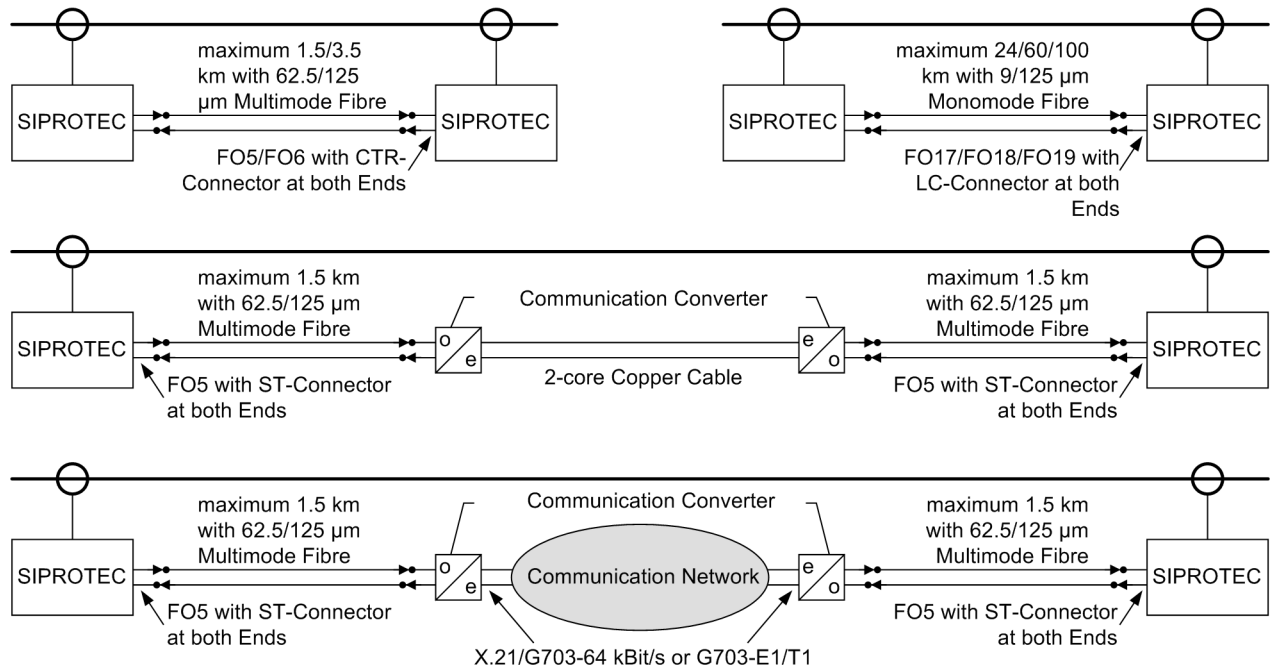


Figure 2-11 Examples for communication connections

**Note**

The redundancy of different communication connections (for ring topology) requires a consequent separation of the devices connected to the communication network. For example, different communication routes should not be conducted via the same multiplexer card, as there is no alternative which could be used if the multiplexer card should fail.

Establishing the protection data communication

When the devices of a differential protection system are linked to each other and switched on, the devices communicate by themselves. The successful connection is indicated by an indication, e.g. with „Re12 Login“, when device 1 has detected device 2. Each device of a differential protection system informs each device of the successful protection data communication.

Additionally, the protection data interface is indicated via which a healthy link is established.

These are helpful features during commissioning and are described, together with further commissioning tools, in the Section „Mounting and Commissioning“. But even during operation, the proper communication of the devices can be checked.

Monitoring the communication

The communication is permanently monitored by the devices.

Single faulty data telegrams are not a direct risk if they occur only occasionally. They are recognized and counted in the device which detects the disturbance and can be read out per unit of time as statistical information (Annunciation → Statistic).

You can define a limit for the permissible rate of faulty data telegrams. When, during operation, this limit is exceeded, an alarm is given (e.g. „PI1 Error“, No. 3258 if protection data interface 1 is affected). You may use this alarm to block the differential

protection, either via binary output and input, or via logical combination by means of the integrated user-definable logic (CFC).

If several faulty telegrams or no data telegrams at all are received, this is regarded as an **Error** as soon as a time delay for data disturbance alarm (default setting 100 ms, can be altered) is exceeded. A corresponding alarm is output („PI1 Data fault“, No. 3229 for interface 1). If the system offers no alternative way of communication (as ring topologies would do), the differential protection will stop operating. All devices are affected by the disturbance, since the formation of differential currents and restraint currents is no longer possible at any of the ends. The distance protection as the second main protection function assumes complete protection over all zones, provided that it is configured, and that time overcurrent protection is configured as well as the emergency function. As soon as data transmission has returned to normal, the devices switch automatically back to differential protection mode or differential and distance protection mode, depending on how they are configured.

If the communication is interrupted for a permanent period (which is longer than a settable time period), this can be regarded as a transmission **Failure** of the communication. A corresponding alarm is output (e.g. „PI1 Data failure“, No. 3230 for interface 1). Otherwise the same reactions apply as for the data disturbance.

Transmission time jumps that, for example, can occur in case of switchover in the communication network are recognized (e.g. „PI1 jump“, No. 3254 for interface 1) and corrected by the devices. The differential protection system continues to operate without loss of sensitivity. The transmission times are measured again and updated within less than 2 seconds. If GPS synchronization (with satellite receiver) is used, asymmetric transmission times are recognized and corrected immediately.

The maximum permissible unbalance of the operating times can be set. This has a direct influence on the sensitivity of the differential protection. The automatic self-restraint of the protection adapts the restraint quantities to this tolerance so that a spurious pickup of the differential protection by these influences is excluded. Thus, higher tolerance values reduce the sensitivity of the protection, which may be noticeable in case of very low-current faults. With GPS synchronization transmission time differences do **not** affect the sensitivity of the differential protection as long as GPS synchronization is intact. When the GPS synchronization detects that the permissible transmission time difference is exceeded during operation, the indication „PI 1 PD unsym.“ (No. 3250 for protection data interface 1) will be issued.

When a transmission time jump exceeds the maximum permissible transmission delay time, this is annunciated. If transmission time jumps occur frequently the regular operation of the differential protection is no longer ensured. Protection communication via this communication link can be blocked via a setting parameter (e.g. 4515 **PI1 BLOCK UNSYM**). If a chain topology was configured, failure of one transmission link blocks the differential protection. If a ring topology is configured, the system switches to chain topology. A corresponding alarm is output („PI1 unsym.“, No. 3256 for interface 1). This blocking of the link can only be reset via a binary input („>SYNC PI1 RESET“, No. 3252 for interface 1).

2.2.2 Operating Modes of the Differential Protection

2.2.2.1 Mode: Log Out Device

General

The „Log out device“ mode (also: Log out device functionally) is used to log the device out of the line protection system with the local circuit breaker being switched off. The

differential protection continues to be active for the other ends. As the local circuit breaker and the line disconnecter are open, revision work can be done at the local feeder without affecting operation at the other ends.

It has to be observed that not all devices of a line protection system can be logged out as desired. The reason is that the communication of the remaining devices always has to be ensured. For this reason, you can log out any device in a ring topology; in a chain topology, however, only the devices at the ends of the chain can be logged out.

It is also possible to successively log several devices out of the line protection system. It must be observed that the logout always has to start from the devices at the end of the remaining chain topology.

If all devices of a line protection system except one are logged out, the remaining device continues to operate in differential protection mode; the special feature, however, is that only the locally measured currents are included in the logic as differential currents. The behaviour is now comparable to a time overcurrent protection. The set thresholds for the differential current now only evaluate the local current.

A device can be logged out and on as described below:

- Using the integrated keypad: Menu Control/Taggings/Set: „Logout“
- Via DIGSI: Control / Taggings „Logout local device“
- Via binary inputs (No. 3452 „>Logout ON“, No. 3453 „>Logout OFF“) if this was allocated

In all devices of the line protection system, logging out/on of a device is signalled by the indications „Rel1Logout“ to „Rel16Logout“ (No. 3475 to No. 3480).

Principle of function

Below, the logic is shown in a simplified way:

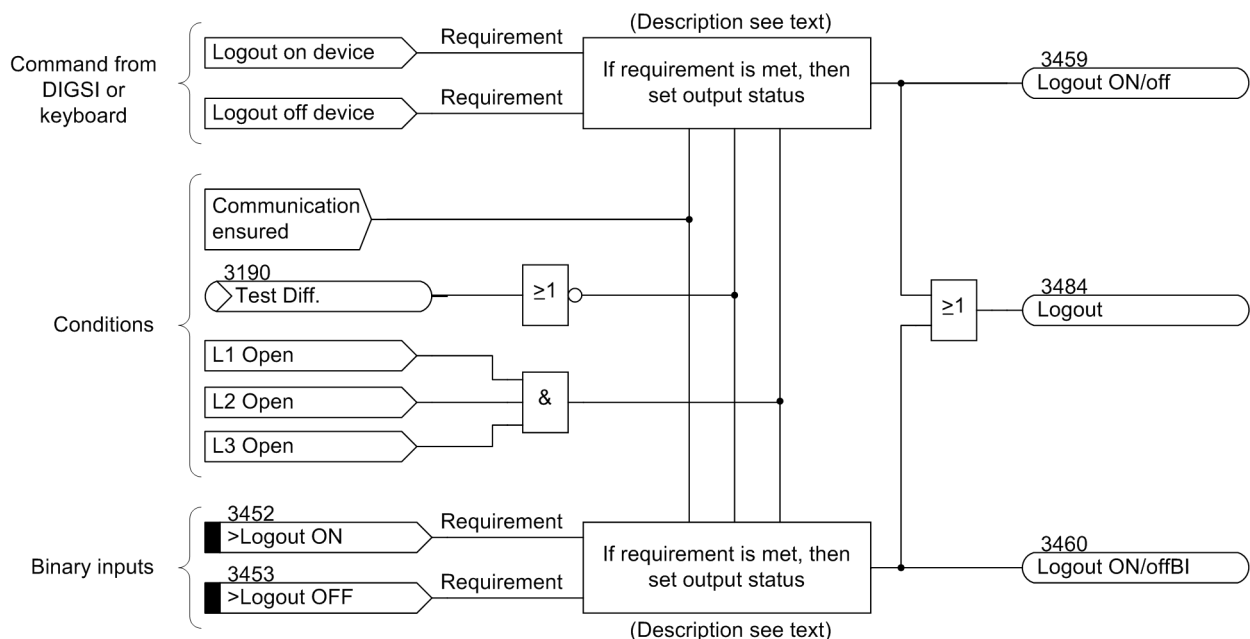


Figure 2-12 Logic diagram for switching the "Log out device" mode

If a command (from DIGSI or keypad) or a binary input requests the change of the current mode, this request is checked. If „Logout“ ON or „>Logout ON“ is requested, the following is checked:

- Is the local circuit breaker open?
- Is the communication of the remaining devices ensured?
- Is the device not operating in differential protection test mode?

If all requirements are met, the request is accepted and the indication „Logout“ ON (No. 3484) is generated. According to the request source, either the indication „Logout ON/off“ ON (No. 3459) or „Logout ON/offBI“ ON (No. 3460) is output. As soon as a requirement is not met, the device is not logged out.

If the device is to be logged on to the line protection system („Logout“ off or „>Logout OFF“), the following is checked:

- Is the local circuit breaker open?
- Is the device not operating in differential protection test mode?

If all requirements are met, the request is accepted and the indication „Logout“ OFF (No. 3484) is generated. According to the request source, either the indication „Logout ON/off“ OFF (No. 3459) or „Logout ON/offBI“ OFF (No. 3460) is output. As soon as a requirement is not met, the device is not logged on.

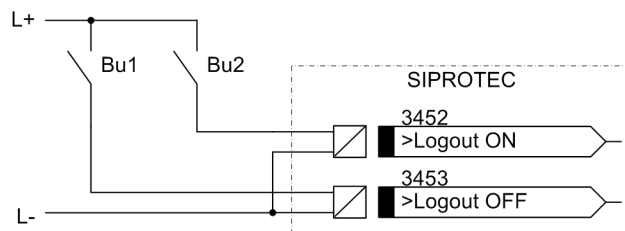


Figure 2-13 Preferred external button wiring for controlling in the "Log out device" mode

Bu1 Button „Log on device“

Bu2 Button „Log out device“

Figure 2-13 shows the preferred variant for changing the "Log out device" mode with the aid of two buttons. The used binary inputs are to be used as NO contacts.

2.2.2.2 Differential Protection Test Mode

General

If differential protection test mode (test mode in the following) is activated, the differential protection is blocked in the entire system. Depending on the parameter settings, either the distance protection assumes the entire protective function over all zones, or the time overcurrent protection becomes effective as emergency function.

In the local device all currents from the other devices are set to zero. The local device only evaluates the locally measured currents, interprets them as differential current but does not send them to the other devices. This enables to measure the thresholds of the differential protection. Moreover, the test mode prevents the generation of a transfer trip signal in the local device by tripping of the differential protection.

If the device was logged out of the line protection system before activating the test mode (see "Log out device" mode), the differential protection remains effective in the other devices. The local device can now also be tested.

The test mode can be activated/deactivated as follows:

- Using the integrated keypad: Menu Control/Taggings/Set: „Test mode“
- Via binary inputs (No. 3197 „>Test Diff. ON“, No. 3198 „>Test Diff. OFF“) if this was allocated
- In DIGSI with Control/Taggings: „Diff: Test mode“

The test mode status of another device of the line protection system is indicated on the local device by the indication „TestDiff.remote“ (No. 3192).

Principle of function

Below, the logic is shown in a simplified way:

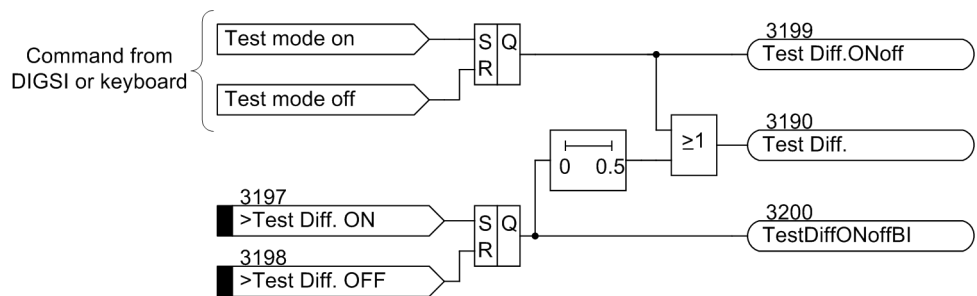


Figure 2-14 Logic diagram of the test mode

Depending on the way used for controlling the test mode, either the indication „Test Diff.ONoff“ (No. 3199) or „TestDiffONoffBI“ (No. 3200) is generated. The way used for deactivating the test mode always has to be identical to the way used for activating. The indication „Test Diff.“ (No. 3190) is generated independently of the chosen way. When deactivating the test mode via the binary inputs, a delay time of 500 ms becomes effective.

The following figures show possible variants for controlling the binary inputs. If a switch is used for the control (Figure 2-16), it has to be observed that binary input „>Test Diff. ON“ (No. 3197) is parameterised as NO contact and that binary input „>Test Diff. OFF“ (No. 3198) is parameterised as NC contact.

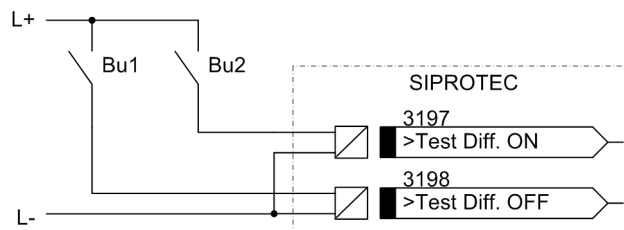


Figure 2-15 External button wiring for controlling the differential protection test mode

Bu1 Button „Deactivating differential protection test mode“

Bu2 Button „Activating differential protection test mode“

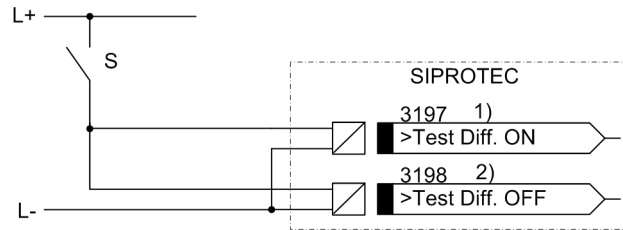


Figure 2-16 External switch wiring for controlling the differential protection test mode

S Switch „Activating/deactivating differential protection test mode“

- 1) Binary input as NO contact
- 2) Binary input as NC contact

If a test switch is to be used for changing to test mode, we recommend the following procedure:

- Block the differential protection via a binary input.
- Use the test switch to activate/deactivate the test mode.
- Reset the blocking of the differential protection via the binary input.

2.2.2.3 Differential Protection Commissioning Mode

General

In differential protection commissioning mode (commissioning mode in the following) the differential protection does not generate TRIP commands. The commissioning mode is intended to support the commissioning of the differential protection. It can be used to control the differential and restraint currents, to visualise the differential protection characteristic and thus the operating point of the differential protection using the WEB Monitoring tool. By changing parameters, the operating point can be changed without risk up to the generation of a pickup.

The commissioning mode is activated on a device of the protective device constellation and affects all devices (indication No. 3193 „Comm.Diff act.“). The commissioning mode has to be deactivated on the device on which it was activated.

The commissioning mode can be activated/deactivated as follows:

- Using the integrated keypad: Menu Control/Taggings/Set: „Commissioning mode“
- Via binary inputs (No. 3260 „>Comm. Diff ON“, No. 3261 „>Comm. Diff OFF“) if this was allocated
- In DIGSI with Control/Taggings: „Diff: Commissioning mode“

Principle of function

Below, the logic is shown in a simplified way:

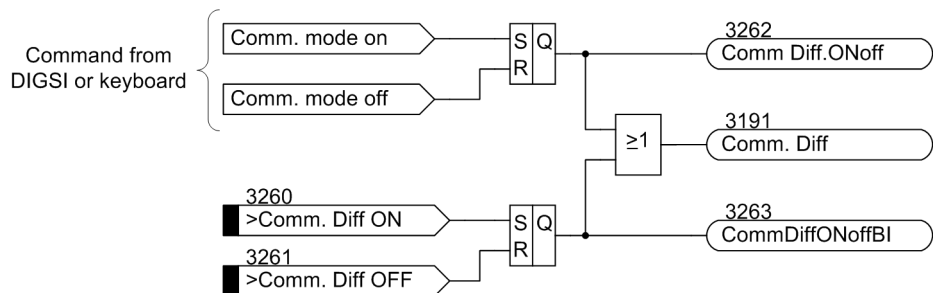


Figure 2-17 Logic diagram of the commissioning mode

There are two ways to set the commissioning mode. The first way is to use a command (commissioning mode on / commissioning mode off) which is generated either when operating the integrated keypad or when operating with DIGSI. The second way is to use the binary inputs (No. 3260 „>Comm. Diff ON“, No. 3261 „>Comm. Diff OFF“).

Depending on the way used for controlling the commissioning mode, either the indication „Comm Diff.ONoff“ (No. 3262) or „CommDiffONoffBI“ (No. 3263) is generated. The way used for deactivating the commissioning mode always has to be identical to the way used for activating. The indication „Comm. Diff“ (No. 3191) is generated independently of the chosen way.

The following figures show possible variants for controlling the binary inputs. If a switch is used for the control (Figure 2-19), it has to be observed that binary input „>Comm. Diff ON“ (No. 3260) has to be parameterised as NO contact and that binary input „>Comm. Diff OFF“ (No. 3261) has to be parameterised as NC contact.

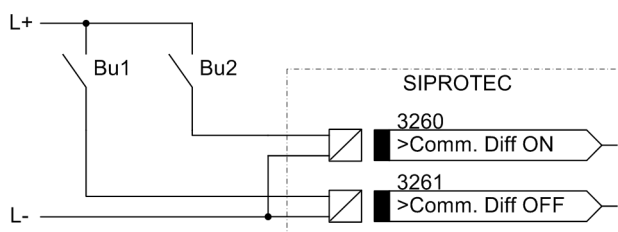


Figure 2-18 External button wiring for controlling the differential protection commissioning mode

- Bu1 Button „Deactivating differential protection commissioning mode“
- Bu2 Button „Activating differential protection commissioning mode“

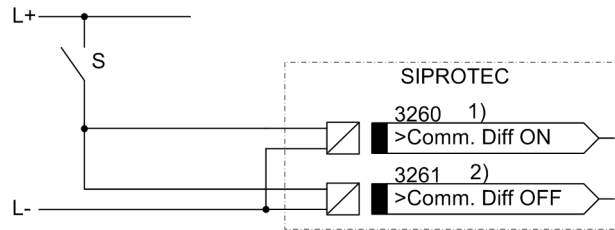


Figure 2-19 External switch wiring for controlling the differential protection commissioning mode

- S Switch „Activating/deactivating differential protection commissioning mode“
- 1) Binary input as NO contact
- 2) Binary input as NC contact

2.2.3 Protection Data Interfaces

2.2.3.1 Setting Notes

General Information about Interfaces

The protection data interfaces connect the devices with the communication media. The communication is permanently monitored by the devices. Address 4509 **T-DATA DISTURB** defines after which delay time the user is informed about a faulty or missing telegram. Address 4510 **T-DATAFAIL** is used to set the time after which a transmission failure alarm is output. Address 4512 **Td ResetRemote** determines how long time remote information remains standing after a transmission fault has been cleared.

Protection data interface 1

At address 4501 **STATE PROT I 1** protection data interface 1 can be switched **ON** or **OFF**. If it is switched **OFF**, this corresponds to a transmission failure. In case of a previously existing ring topology, the differential protection and all functions which require the transmission of data can continue their operation, but not in case of a chain topology.

In address 4502 **CONNEC. 1 OVER**, set the transmission media that you want to connect to protection data interface PI 1. The following selection is possible:

F.optic direct, i.e. communication directly by fibre-optic cable with 512 kbit/s;

Com conv 64 kB, i.e. via communication converters with 64 kbit/s (G703.1 or X.21);

Com conv 128 kB, i.e. via communication converters with 128 kbit/s (X.21, copper cable);

Com conv 512 kB, i.e. via communication converters 512 kbit/s (X.21) or communication converters for 2 Mbit/s (G703–E1/T1).

The possibilities may vary for the different device versions. The data must be identical at both ends of a communication route.

The setting depends on the features of the communication media. As a general rule, it can be stated that the higher the transmission rate the shorter the tripping time of the differential protection system.

The devices measure and monitor the transmission times. Deviations are corrected, as long as they are within the permissible range. These permissible ranges are set under addresses 4505 and 4506 and can normally be left at their default values.

The maximum permissible transmission time at address 4505 **PROT 1 T-DELAY** is preset to a value that does not exceed the usual delay of communication networks.

This parameter can only be altered in DIGSI at **Additional Settings**. If it is exceeded during operation (e.g. because of switchover to a different transmission path), the indication „PI1 TD alarm“ (No. 3239) will be issued. Increased transmission times only have an impact on the tripping time of the differential protection system.

The maximum **transmission time difference** (outgoing telegram vs. return telegram) can be altered at address 4506 **PROT 1 UNSYM.**. This parameter can only be altered in DIGSI at **Additional Settings**. With a direct fibre-optic connection, this value should be set to **0**. For transmission via communication networks a higher value is needed. The standard value is 100 µs (default setting). The permissible transmission time difference has a direct influence on the sensitivity of the differential protection.

If GPS synchronisation (ordering option) is used, this value is relevant only in case the GPS signal is missing. As soon as the GPS synchronisation is restored, the transmission time differences are compensated again. As long as GPS synchronisation is intact, transmission time differences do **not** affect the sensitivity of the differential protection.

Address 4511 **PI1 SYNCMODE** is only relevant if GPS synchronisation is used. It determines the conditions for operation when the protection data communication has been re-established (initially or after transmission failure).

- **PI1 SYNCMODE = TEL or GPS** means that the differential protection will become active as soon as the protection communication has been established (data telegrams are received). Until the GPS synchronization is put into service with the conventional method, the differential protection operates with increased self-restraint determined by the maximum transmission time difference without GPS (address 4506 **PROT 1 UNSYM.**).
- **PI1 SYNCMODE = TEL and GPS** means that the differential protection is active, after reception of proper protection data telegrams, first when GPS synchronization has taken place or if the running time is signalled via an external operation (binary input). If synchronization is established by the operator, the differential protection operates with the configured value at address 4506 **PROT 1 UNSYM.** until the transmission time differences are compensated by the GPS synchronization.
- **PI1 SYNCMODE = GPS SYNC OFF** means that no GPS synchronization takes place for this protection data interface. This is meaningful if no transmission time differences are expected (e.g. for fibre-optic direct data link).

At address 4513 you set a limit value **PROT1 max ERROR** for the permissible rate of faulty protection data telegrams. This parameter can only be altered in DIGSI at **Additional Settings**. The preset value 1 % means that one faulty telegram per 100 telegrams is permissible. The sum of telegrams in both directions is decisive.

If frequent transmission time jumps occur the regular operation of the differential protection is endangered. Under address 4515 **PI1 BLOCK UNSYM** you decide whether the protection communication is to be blocked via the connection connected to protection data interface 1 (default setting **YES**). If a ring topology is configured, the system switches to chain topology. If only a chain topology was configured, failure of one transmission link blocks the differential protection. This parameter can only be altered with DIGSI under **Additional Settings**.

Protection data interface 2

If protection data interface 2 exists and is used, the same options as for protection data interface 1 apply. The corresponding parameters are set at addresses 4601 **STATE PROT I 2 (ON or OFF)**, 4602 **CONN. 2 OVER**, 4605 **PROT 2 T-DELAY** and 4606 **PROT 2 UNSYM.**, the last two parameters can only be changed with DIGSI under **Additional Settings**. If GPS synchronisation is available, the parameter is used at address 4611 **PI2 SYNCMODE**. The maximum permissible rate of faulty protection data telegrams **PROT2 max ERROR** (address 4613) and the reaction to impermissible

transmission time difference **PI2 BLOCK UNSYM** (address 4615) (blocking the differential protection **YES** or **NO**) can be changed under **Additional Settings**.

GPS synchronisation (optional)

If GPS synchronization (order option) is used, this synchronization mode can be switched **ON** or **OFF** in address 4801 **GPS-SYNC..**

Address 4803 **TD GPS FAILD** is used to set the delay time after which an alarm is output „GPS loss“ (No 3247) after a GPS failure is detected.

Further parameters concerning GPS synchronization were set for the individual protection data interfaces (see above).

2.2.3.2 Settings

Addresses which have an appended "A" can only be changed with DIGSI, under Additional Settings.

Addr.	Parameter	Setting Options	Default Setting	Comments
4501	STATE PROT I 1	ON OFF	ON	State of protection interface 1
4502	CONNEC. 1 OVER	F.optic direct Com conv 64 kB Com conv 128 kB Com conv 512 kB	F.optic direct	Connection 1 over
4505A	PROT 1 T-DELAY	0.1 .. 30.0 ms	30.0 ms	Prot 1: Maximal permissible delay time
4506A	PROT 1 UNSYM.	0.000 .. 3.000 ms	0.100 ms	Prot 1: Diff. in send and receive time
4509	T-DATA DISTURB	0.05 .. 2.00 sec	0.10 sec	Time delay for data disturbance alarm
4510	T-DATAFAIL	0.0 .. 60.0 sec	6.0 sec	Time del for transmission failure alarm
4511	PI1 SYNCMODE	TEL and GPS TEL or GPS GPS SYNC OFF	TEL and GPS	PI1 Synchronizationmode
4512	Td ResetRemote	0.00 .. 300.00 sec; ∞	0.00 sec	Remote signal RESET DELAY for comm.fail
4513A	PROT1 max ERROR	0.5 .. 20.0 %	1.0 %	Prot 1: Maximal permissible error rate
4515A	PI1 BLOCK UNSYM	YES NO	YES	Prot.1: Block. due to unsym. delay time
4601	STATE PROT I 2	ON OFF	ON	State of protection interface 2
4602	CONNEC. 2 OVER	F.optic direct Com conv 64 kB Com conv 128 kB Com conv 512 kB	F.optic direct	Connection 2 over
4605A	PROT 2 T-DELAY	0.1 .. 30.0 ms	30.0 ms	Prot 2: Maximal permissible delay time
4606A	PROT 2 UNSYM.	0.000 .. 3.000 ms	0.100 ms	Prot 2: Diff. in send and receive time

Addr.	Parameter	Setting Options	Default Setting	Comments
4611	PI2 SYNCMODE	TEL and GPS TEL or GPS GPS SYNC OFF	TEL and GPS	PI2 Synchronizationmode
4613A	PROT2 max ERROR	0.5 .. 20.0 %	1.0 %	Prot 1: Maximal permissible error rate
4615A	PI2 BLOCK UNSYM	YES NO	YES	Prot.2: Block. due to unsym. delay time
4801	GPS-SYNC.	ON OFF	OFF	GPS synchronization
4803A	TD GPS FAILED	0.5 .. 60.0 sec	2.1 sec	Delay time for local GPS-pulse loss

2.2.3.3 Information List

No.	Information	Type of Information	Comments
3215	Wrong Firmware	OUT	Incompatible Firmware Versions
3217	PI1 Data reflece	OUT	Prot Int 1: Own Datas received
3218	PI2 Data reflece	OUT	Prot Int 2: Own Datas received
3227	>PI1 light off	SP	>Prot Int 1: Transmitter is switched off
3228	>PI2 light off	SP	>Prot Int 2: Transmitter is switched off
3229	PI1 Data fault	OUT	Prot Int 1: Reception of faulty data
3230	PI1 Datafailure	OUT	Prot Int 1: Total reception failure
3231	PI2 Data fault	OUT	Prot Int 2: Reception of faulty data
3232	PI2 Datafailure	OUT	Prot Int 2: Total reception failure
3233	DT inconsistent	OUT	Device table has inconsistent numbers
3234	DT unequal	OUT	Device tables are unequal
3235	Par. different	OUT	Differences between common parameters
3236	PI1<->PI2 error	OUT	Different PI for transmit and receive
3239	PI1 TD alarm	OUT	Prot Int 1: Transmission delay too high
3240	PI2 TD alarm	OUT	Prot Int 2: Transmission delay too high
3243	PI1 with	VI	Prot Int 1: Connected with relay ID
3244	PI2 with	VI	Prot Int 2: Connected with relay ID
3245	>GPS failure	SP	> GPS failure from external
3247	GPS loss	OUT	GPS: local pulse loss
3248	PI 1 GPS sync.	OUT	GPS: Prot Int 1 is GPS synchronized
3249	PI 2 GPS sync.	OUT	GPS: Prot Int 2 is GPS synchronized
3250	PI 1 PD unsym.	OUT	GPS:PI1 unsym.propagation delay too high
3251	PI 2 PD unsym.	OUT	GPS:PI2 unsym.propagation delay too high
3252	>SYNC PI1 RESET	SP	> PI1 Synchronization RESET
3253	>SYNC PI2 RESET	SP	> PI2 Synchronization RESET
3254	PI1 jump	OUT	Prot.1: Delay time change recognized
3255	PI2 jump	OUT	Prot.2: Delay time change recognized
3256	PI1 unsym.	IntSP	Prot.1: Delay time unsymmetry to large
3257	PI2 unsym.	IntSP	Prot.2: Delay time unsymmetry to large

No.	Information	Type of Information	Comments
3258	PI1 Error	OUT	ProtInt1:Permissible error rate exceeded
3259	PI2 Error	OUT	ProtInt2:Permissible error rate exceeded

2.2.4 Differential Protection Topology

2.2.4.1 Setting Notes

Protection data topology

First of all, define your protection data communication topology: Number the devices consecutively. This numbering is a serial device index that serves for your own overview. It starts for each distance differential protection system (i.e. for each protected object) with 1. For the differential protection system the device with index 1 is always the absolute-chronology master, i.e. the absolute time management of all devices which belong together depends on the absolute time management of this device, if synchronization is set to **Timing-Master**. As a result, the time information of all devices is comparable at all times. The device index is thus used for unique definition of the devices of a differential protection system (i.e. for one protected object).

In addition, assign an ID number to each device (device-ID). The device-ID is used by the communication system to identify each individual device. It must be between 1 and 65534 and must be unique within the communication system. The ID number identifies the devices in the communication system (according to a device address) since the exchange of information between several differential protection systems (thus also for several protected objects) can be executed via the same communication system.

Please make sure that the possible communication connections and the existing interfaces are in accordance with each other. If not all devices are equipped with **two** protection data interfaces, those with only **one** protection data interface must be located at the ends of the communication chain. A **ring topology** is only possible if **all** devices in a differential protection system are equipped with two protection data interfaces.

If you work with different physical interfaces and communications links, please make sure that every protection data interface corresponds to the projected communication link.

For a protected object with two ends (e.g. a line) the addresses 4701 **ID OF RELAY 1** and 4702 **ID OF RELAY 2** are set, e.g. for device 1 the device-ID **16** and for device 2 the device-ID **17** (Figure 2-20). The indices of the devices and the device-IDs do not have to match here, as mentioned above.

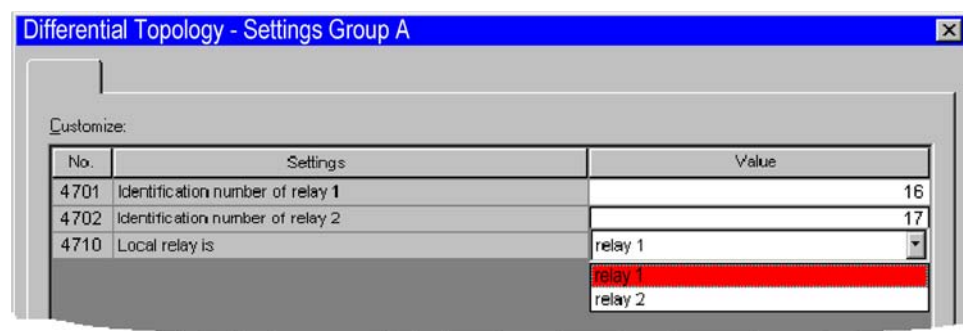


Figure 2-20 Differential protection topology for 2 ends with 2 devices — example

For a protected object with more than two ends (and corresponding number of devices), the further devices are assigned to their device IDs with the parameter addresses **4703 ID OF RELAY 3**, **4704 ID OF RELAY 4**, **4705 ID OF RELAY 5** and **4706 ID OF RELAY 6**. A maximum of 6 ends with 6 devices is possible for a protected object. Figure 2-21 shows an example with 4 relays. During the configuration of the protection functions (Section 2.1.1.3) the number of devices required for the relevant case of application was set in address 147 **NUMBER OF RELAY**. Device IDs can be entered for as many devices as were configured under that address, no further IDs are offered during setting.

In address 4710 **LOCAL RELAY** you indicate the actual local device. Enter the index for each device (according to the consecutive numbering used). Each index from 1 to the entire number of devices must be used once, but may not be used twice.

Differential Topology - Settings Group A

Customize:

No.	Settings	Value
1701	Identification number of relay 1	16
1702	Identification number of relay 2	17
1703	Identification number of relay 3	18
1704	Identification number of relay 4	19
1710	Local relay is	relay 1

Below the table, a list of relays is shown: relay 1, relay 2, relay 3, relay 4. relay 3 is highlighted.

☐ Display Additional Settings

Buttons: Export, Graph, About, OK, Apply, DIGSI → Device, Cancel, Help

Figure 2-21 Differential protection topology for 4 ends with 4 devices — example

Make sure that the parameters of the differential protection topology for the differential protection system are conclusive:

- Each device index can only be used once.
- Each device index must be assigned unambiguously to one device ID.
- Each device index must be the index of a local device once.
- The device with index 1 is the source for the absolute time management (timing master).
- The number of devices must be equal at all devices.

During startup of the protection system, the above listed conditions are checked. If one out of these conditions is still not fulfilled, no differential protection operation is possible.

The device then issues one of the following error messages

- „DT inconsistent“ (Device Table contains two or more identical device ident numbers)
- „DT unequal“ (Different settings of parameters 4701 to 4706)
- „Equal IDs“ (Protection system contains devices with identical settings of parameter 4710)

If the indication „Par. different“ ON is displayed, the differential protection is blocked as well. In this case the following parameters, which should have identical settings in the devices, have in fact different settings.

- Address 230 **Rated Frequency**
- Address 143 **TRANSFORMER** in the protected zone
- Address 1106 **OPERATION POWER** primary
- Address 112 **DIFF. PROTECTION** exists
- Address 149 **charge I comp.** exists

2.2.4.2 Settings

Addr.	Parameter	Setting Options	Default Setting	Comments
4701	ID OF RELAY 1	1 .. 65534	1	Identification number of relay 1
4702	ID OF RELAY 2	1 .. 65534	2	Identification number of relay 2
4703	ID OF RELAY 3	1 .. 65534	3	Identification number of relay 3
4704	ID OF RELAY 4	1 .. 65534	4	Identification number of relay 4
4705	ID OF RELAY 5	1 .. 65534	5	Identification number of relay 5
4706	ID OF RELAY 6	1 .. 65534	6	Identification number of relay 6
4710	LOCAL RELAY	relay 1 relay 2 relay 3 relay 4 relay 5 relay 6	relay 1	Local relay is

2.2.4.3 Information List

No.	Information	Type of Information	Comments
3452	>Logout ON	SP	> Logout state ON
3453	>Logout OFF	SP	> Logout state OFF
3457	Ringtopology	OUT	System operates in a closed Ringtopology
3458	Chaintopology	OUT	System operates in a open Chaintopology
3459	Logout ON/off	IntSP	Logout state ON/OFF
3460	Logout ON/offBI	IntSP	Logout state ON/OFF via BI
3464	Topol complete	OUT	Communication topology is complete
3475	Rel1Logout	IntSP	Relay 1 in Logout state
3476	Rel2Logout	IntSP	Relay 2 in Logout state
3477	Rel3Logout	IntSP	Relay 3 in Logout state
3478	Rel4Logout	IntSP	Relay 4 in Logout state

No.	Information	Type of Information	Comments
3479	Rel5Logout	IntSP	Relay 5 in Logout state
3480	Rel6Logout	IntSP	Relay 6 in Logout state
3484	Logout	IntSP	Local activation of Logout state
3487	Equal IDs	OUT	Equal IDs in constellation
3491	Rel1 Login	OUT	Relay 1 in Login state
3492	Rel2 Login	OUT	Relay 2 in Login state
3493	Rel3 Login	OUT	Relay 3 in Login state
3494	Rel4 Login	OUT	Relay 4 in Login state
3495	Rel5 Login	OUT	Relay 5 in Login state
3496	Rel6 Login	OUT	Relay 6 in Login state

2.3 Differential Protection

The differential protection represents the first main protection function of the device. It is based on current comparison. For this, one device must be installed at each end of the zone to be protected. The devices exchange their measured quantities via communications links and compare the received currents with their own. In case of an internal fault the allocated circuit breaker is tripped.

7SD5 is designed for protected objects with up to 6 ends. Thus, with the exception of normal lines, three and multi-branch lines can also be protected with or without unit-connected transformers as well as small busbars. The protected zone is selectively limited by the CTs at its ends.

Differential protection can be configured in parallel to distance protection (Main2), or as sole protection function (refer also to Section 2.1.1.3).

2.3.1 Functional Description

Basic principle with two ends

Differential protection is based on current comparison. It makes use of the fact that e.g. a line section L (Figure 2-22) carries always the same current i (dashed line) at its two ends in healthy operation. This current flows into one side of the considered zone and leaves it again on the other side. A difference in current is a clear indication of a fault within this line section. If the actual current transformation ratios are the same, the secondary windings of the current transformers **CT1** and **CT2** at the line ends can be connected to form a closed electric circuit with a secondary current I ; a measuring element **M** which is connected to the electrical balance point remains at zero current in healthy operation.

When a fault occurs in the zone limited by the transformers, a current $i_1 + i_2$ which is proportional to the fault currents $I_1 + I_2$ flowing in from both sides is fed to the measuring element. As a result, the simple circuit shown in Figure 2-22 ensures a reliable tripping of the protection if the fault current flowing into the protected zone during a fault is high enough for the measuring element **M** to respond.

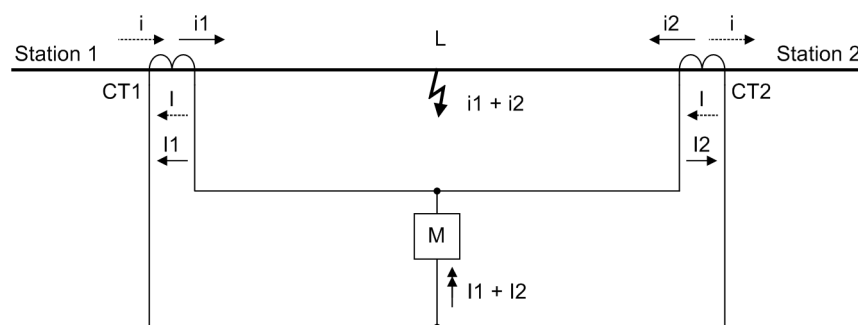


Figure 2-22 Basic principle of the differential protection for a line with two ends

Basic principle with multiple ends

For lines with three or more ends or for busbars, the principle of differential protection is extended in that the total sum of all currents flowing into the protected object is zero in healthy operation, whereas in case of a fault the total sum is equal to the fault current (see Figure 2-23 as an example for four ends).

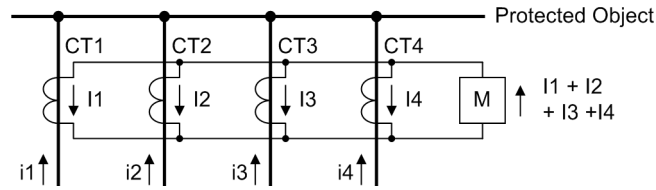


Figure 2-23 Basic principle of differential protection for four ends (single-phase illustration)

Transmission of measured values

If the entire protected object is located in one place — as is the case with generators, transformers, busbars —, the measured quantities can be processed immediately. This is different for lines where the protected zone spans a certain distance from one substation to the other. To be able to process the measured quantities of all line ends at each line end, these have to be transmitted in a suitable form. In this way, the tripping condition at each line end can be checked and the respective local circuit breaker can be operated if necessary.

7SD5 transmits the measured quantities as digital telegrams via communication channels. For this, each device is equipped with at least one protection data interface.

Figure 2-24 shows this for a line with two ends. Each device measures the local current and sends the information on its intensity and phase relation to the opposite end. The interface for this communication between protection devices is called protection data interface. As a result, the currents can be added up and processed in each device.

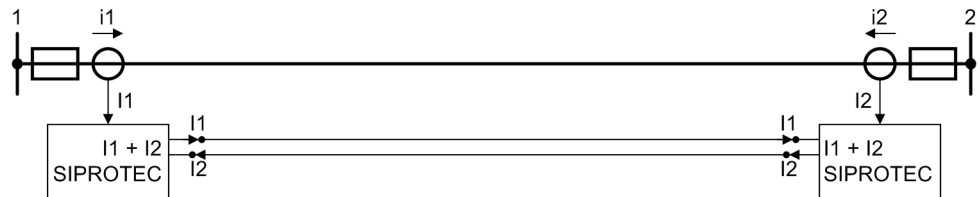


Figure 2-24 Differential protection for a line with two ends

In case of more than two ends, a communication chain is built up by which each device is informed about the total sum of the currents flowing into the protected object. Figure 2-25 shows an example for three ends. Ends **1** and **2** are derived from the arrangements of the current transformers shown on the left. Although this is actually only one line end, it should be treated in terms of differential protection as two ends because the current is measured in two places. Line end **3** is situated on the opposite side.

Each device receives its local currents from the current transformers. Device **1** measures the current i_1 and transmits its data as a complex phasor I_1 to device **2**. This device adds the share I_2 from its own measured current i_2 and sends this partial sum to device **3**. The partial sum $I_1 + I_2$ finally reaches device **3** which then adds its share I_3 . Vice versa, a corresponding chain leads from device **3** via device **2** to device **1**. In this way, the total sum of the three currents measured at the measuring points is available to all three devices.

The sequence of the devices in the communication chain need not correspond to the indexation, as shown in Figure 2-25. The allocation is carried out during the parameterization of the topology, as explained in Section 2.2.1.

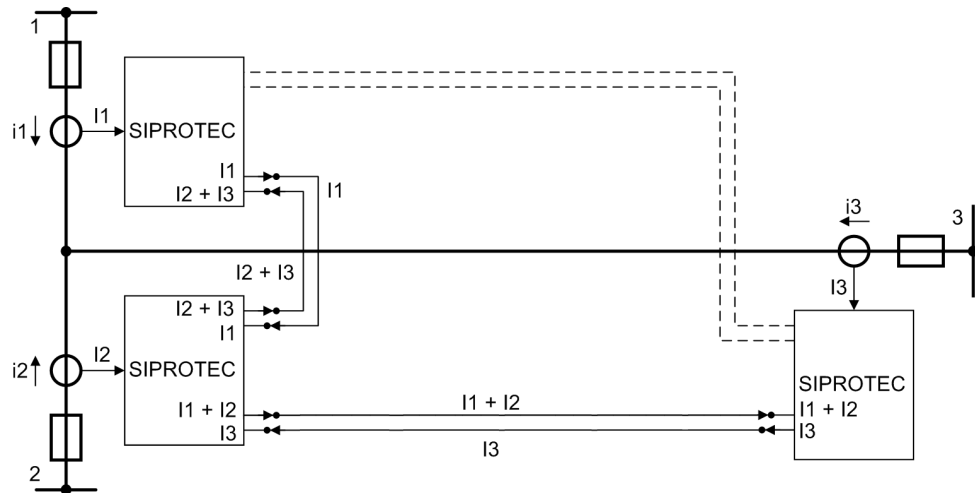


Figure 2-25 Differential protection for a line with three ends

The communication chain can also be connected to a ring, as shown in dashed lines in Figure 2-25. This provides for redundancy of transmission: even if one communication link fails, the entire differential protection system will be fully operational. The devices detect communication failures and switch automatically to another communication channel. It is also possible to switch off one line end, e.g. for a check or a revision, and put the local protection out of operation. With a communication ring, the rest of the operation can proceed without disturbances.

You will find detailed information on the topology of device communication in Section 2.2.1.

Measured value synchronisation

The devices measure the local currents in an asynchronous way. This means that each device measures, digitizes and pre-processes the associated currents of the current transformers with its own, random processor pulse. If the currents of two or more line ends are to be compared, it is necessary, however, to process all currents with the same time base.

All devices which belong together exchange their time with each telegram. The device with index 1 functions as a „timing master“ thus determining the time base. The other devices then calculate the time delay from the transmission and processing times related on the „timing master“. With this „rough synchronization“ the equality of the time bases with a precision of ± 0.5 ms is provided.

To reach a sufficiently precise synchronization all current values are marked with a „time stamp“ before they are transmitted from one device to the other as digital telegrams. This time stamp indicates at which point in time the transmitted current data were valid. Therefore, the receiving devices can carry out an optimized synchronization of the current comparisons based on the received time stamp and their own time management, i.e. they can compare the currents which were actually measured at exactly the same time (<5 μ s tolerance).

The transmission periods are permanently monitored by the devices using the time data stamps and considered at the respective receiving end.

The frequency of the measured quantities, which is decisive for the comparison of complex phasors, is also continuously measured and with the calculation, if necessary, corrected to achieve a synchronous comparison of the phasors. If the device is connected to voltage transformers and at least one voltage of a sufficient level is available, the frequency is derived from this voltage. If not, the measured currents are used

for the determination of the frequency. The measured frequencies are interchanged between the devices via the communication link. Under these conditions all devices work with the currently valid frequency.

Restraint

The precondition for the basic principle of the differential protection is that the total sum of all currents flowing into the protected object is zero in healthy operation. This precondition is only valid for the primary system and even there only if shunt currents of a kind produced by line capacitances or magnetizing currents of transformers and reactors can be neglected.

The secondary currents which are applied to the devices via the current transformers, are subject to measuring errors caused by the response characteristic of the current transformers and the input circuits of the devices. Transmission errors such as signal jitters can also cause deviations of the measured quantities. As a result of all these influences, the total sum of all currents processed in the devices in healthy operation is not exactly zero. Therefore, the differential protection is restrained against these influences.

Charging current compensation

Charging current compensation is an ancillary function for the differential protection. It allows to achieve a higher sensitivity by partially compensating the charging currents caused by the capacitances of the overhead line or cable. Charging currents flow through the capacitance of the line.

Due to the phase-to-earth and phase-to-phase capacitances, charging currents are flowing even in healthy operation and cause a difference of currents at the ends of the protected zone. Especially when cables and long lines have to be protected, the capacitive charging currents can reach considerable magnitude.

If the feeder-side transformer voltages are connected to the devices, the influence of the capacitive charging currents can be compensated to a large extent arithmetically. It is possible to activate a charging current compensation which determines the actual charging current. With two line ends, each device takes over half of the charging current compensation, with M devices each device takes the M th part. For more simplicity, Figure 2-26 shows a single-phase system.

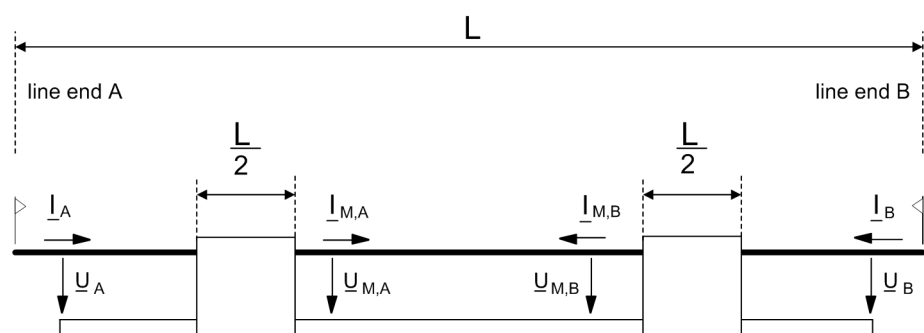


Figure 2-26 Charging current compensation for a line with two ends (single-phase system)

In healthy operation charging currents can be considered as being almost constant under steady-state conditions, since they are only determined by the voltage and the capacitances of the lines. Without charging current compensation, they must therefore be taken into account when setting the sensitivity of the differential protection (refer also to Section 2.3.2 under „Pickup Value of Differential Current“). With charging current compensation, no charging currents need to be taken into account here. With

charging current compensation, the steady-state magnetizing currents across shunt reactances are taken into account as well. The devices have a separate inrush restraint feature for transient inrush currents (see below under the margin heading „Inrush Restraint“).

Current transformer errors

To consider the influences of current transformer errors, each device calculates a self-restraining quantity I_{error} . This is calculated by estimating the possible local transformer errors from the data of the local current transformers and the intensity of the locally measured currents (see Figure 2-27). The current transformer data have been parameterized in the power system data (Section 2.1.2.1 under margin heading „Current Transformer Characteristic“ and apply to each individual device. Since each device transmits its estimated errors to the other devices, each device is capable to form the total sum of possible errors; this sum is used for restraint.

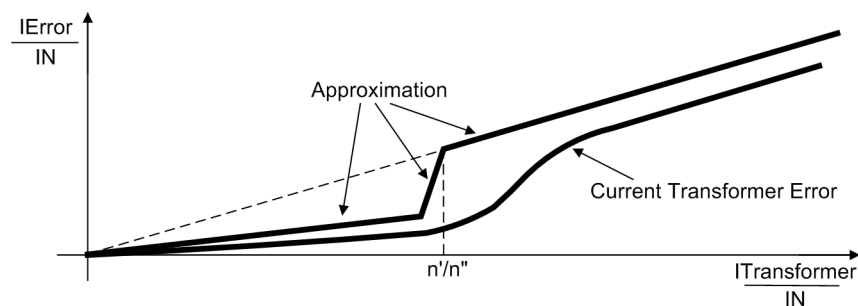


Figure 2-27 Approximation of the current transformer errors

Further influences

Further measuring errors which may arise in the actual device by hardware tolerances, calculation tolerances, deviations in time or due to the „quality“ of the measured quantities such as harmonics and deviations in frequency are also estimated by the device and automatically increase the local self-restraining quantity. Here, the permissible variations in the data transmission and processing periods are also considered.

Deviations in time are caused by residual errors during the synchronization of measured quantities, data transmission and operating time variations, and similar events. When GPS synchronization is used, these influences are eliminated and do not increase the self-restraining quantity.

If an influencing parameter cannot be determined — e.g. the frequency if no sufficient measured quantities are available — the device will assume nominal values by definition. In this example, frequency means that if the frequency cannot be determined because no sufficient measured quantities are available, the device will assume nominal frequency. But since the actual frequency can deviate from the nominal frequency within the permissible range ($\pm 20\%$ of the nominal frequency), the restraint will be increased automatically. As soon as the frequency has been determined (max. 100 ms after reappearance of a suitable measured quantity), the restraint will be decreased correspondingly. This is important during operation if no measured quantities exist in the protected area before a fault occurs, e.g. if a line with the voltage transformers on the line side is switched onto a fault. Since the frequency is not yet known at this time, an increased restraint will be active until the actual frequency is determined. This may delay the tripping, but only close to the pickup threshold, i.e. in case of very low-current faults.

The self-restraining quantities are calculated in each device from the total sum of the possible deviations and transmitted to the other devices. In the same way as the local

currents (differential currents) are calculated (see „Transmission of measured values“, above), each device calculates the total sum of the restraining quantities.

It is due to the self-restraint that the differential protection always operates with the maximum possible sensitivity since the restraining quantities automatically adapt to the maximum possible errors. In this way, also high-resistance faults, with high load currents at the same time, can be detected effectively. Using GPS synchronisation, the self-restraint when using communication networks is once more minimised since differences in the transmission times are compensated automatically. A maximum sensitivity of the differential protection consists of an optical-fiber connection.

Inrush restraint

If the protected area includes a power transformer, a high inrush current can be expected when connecting the transformer. This inrush current flows into the protected zone but does not leave it again.

The inrush current can amount to a multiple of the rated current and is characterised by a considerable 2nd harmonic content (double rated frequency) which is practically absent during a short-circuit. If the second harmonic content in the differential current exceeds a selectable threshold, tripping is blocked.

The inrush restraint has an upper limit: if a certain (adjustable) current value is exceeded, it will not be effective any more, since there must be an internal current-intensive short-circuit.

Figure 2-28 shows a simplified logic diagram. The condition for the inrush restraint is examined in each device in which this function has been activated. The blocking condition is transmitted to all devices so that it is effective at all ends of the protected object.

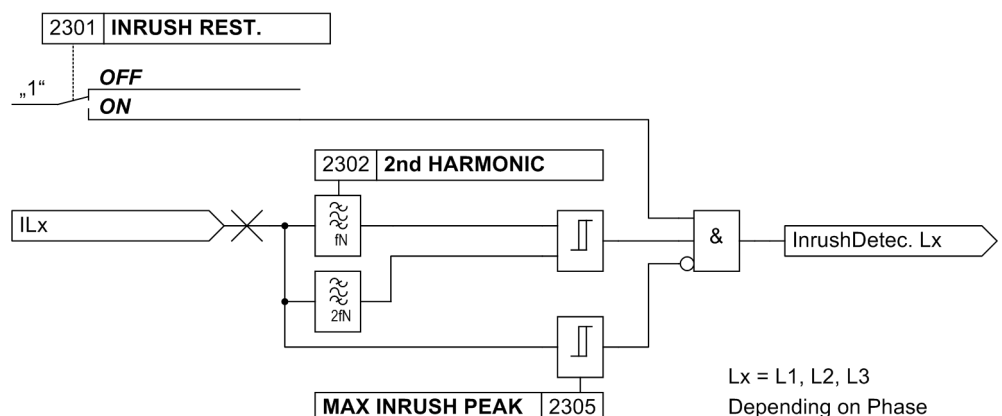


Figure 2-28 Logic diagram of the inrush restraint for one phase

Since the inrush restraint operates individually for each phase, the protection is fully operative when the transformer is switched onto a single-phase fault, whereby an inrush current may possibly flow through one of the undisturbed phases. It is, however, also possible to set the protection in such a way that when the permissible harmonic content in the current of only one single phase is exceeded, not only the phase with the inrush current but also the remaining phases of the differential stage are blocked. This cross-block function can be limited to a selectable duration. Figure 2-29 shows the logic diagram.

The cross-block function also affects all devices since it not only extends the inrush restraint to all three phases but also sends it to the other devices via the communication link.

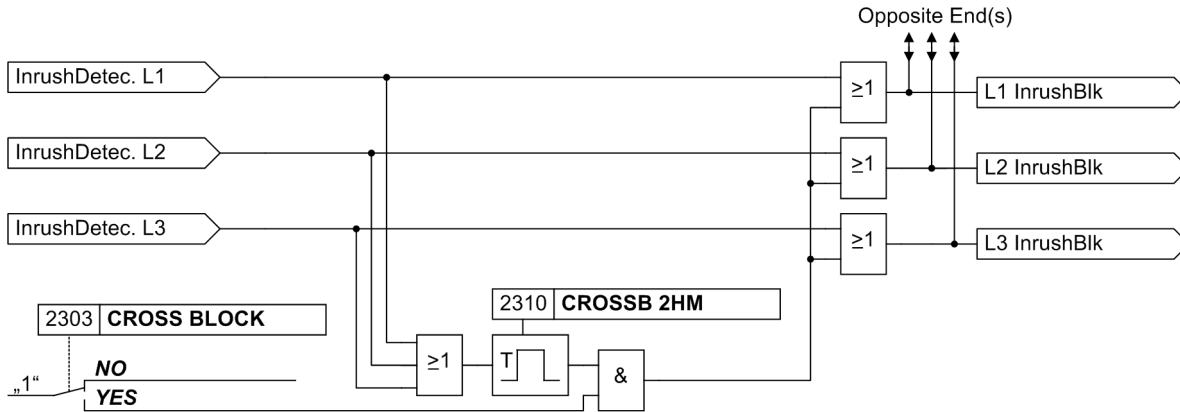


Figure 2-29 Logic diagram of the cross-block function for one end

Evaluation of the measured quantities

The evaluation of measured values is performed separately for each phase. Additionally, the residual current is evaluated.

Each device calculates a differential current from the total of the current phasors that were formed at each end of the protected zone and transmitted to the other ends. The differential current value is equal to the value of the fault current that is registered („seen“) by the differential protection system. In the ideal case it is equal to the fault current value. In a healthy system the differential current value is low and, in a first approximation, equal to the charging current. With charging current compensation it is very low.

The restraining current counteracts the differential current. It is the total of the maximum measured errors at the ends of the protected object and is calculated from the current measured quantities and power system parameters that were set. Therefore the highest possible error value of the current transformers within the nominal range and/or the short-circuit current range is multiplied with the current flowing through each end of the protected object. The total value, including the measured internal errors, is then transmitted to the other ends. This is the reason why the restraining current is always an image of the greatest possible measurement error of the differential protection system.

The pickup characteristic of the differential protection (Figure 2-30) derives from the restraining characteristic $I_{diff} = I_{rest}$ (45°-curve), that is cut below the setting value **I-DIFF**>. It complies with the formula

$$I_{rest} = \mathbf{I-DIFF} + \Sigma (\text{errors by CT's and other measuring errors})$$

If the calculated differential current exceeds the pickup limit and the greatest possible measurement error, the fault must be internal (shaded area in Figure 2-30).

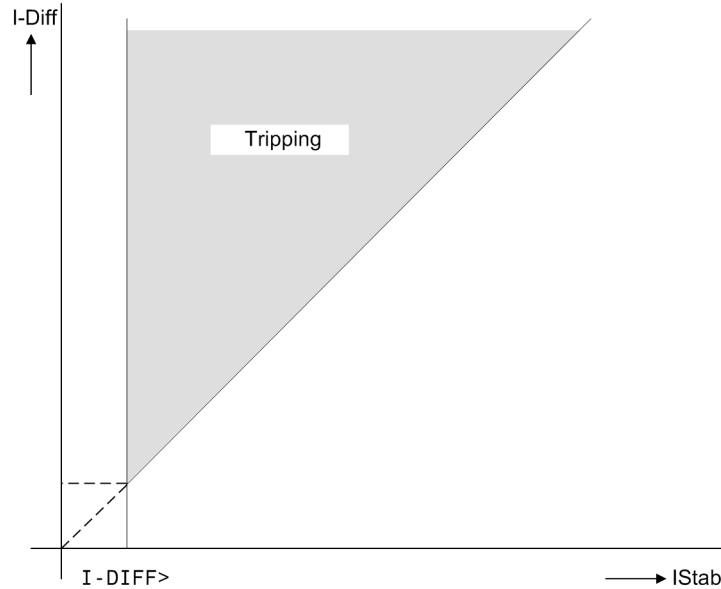


Figure 2-30 Differential protection pickup characteristic, $I_{diff} >$ stage

If not only an internal fault is to cause a TRIP command, but if a local current of a specific quantity is to exist additionally, the value of this current can be set at address 1219 **I> RELEASE DIFF**. Zero is preset for this parameter so that this additional criterion does not become effective.

High-speed charge comparison

The charge comparison protection function is a differential protection stage which is superimposed on the current comparison (the actual differential protection). If a high-current fault occurs, high-speed tripping decision is then possible.

The charge comparison protection function does not sum up the complex current phasors at the ends of the protected object, but the integral of currents calculated according to the following formula:

$$Q = \int_{t_1}^{t_2} i(t) dt$$

It includes the integration interval of t_1 to t_2 , which is selected in the 7SD5 device to period $1/4$.

The calculated charge Q is a scalar value which is faster to determine and to transmit than a complex phasor.

The charges of all ends of the protected object are added in the same way as done with the current phasors of the differential protection. Thus the total of the charges is available at all ends of the protected zone.

Right after a fault occurrence within the protected zone a charge difference emerges. For high fault currents which can lead to saturation of current transformers, a decision is taken before the saturation begins.

The charge difference of external faults is theoretically equal to zero at the beginning. The charge comparison protection function immediately detects the external fault and blocks its own function. If saturation begins in one or more current transformers which limit the protected zone, the before-mentioned function remains blocked. Thus possible differences resulting from the saturation are excluded. Generally it is assumed that

an initial saturation of current transformers only takes place after the expiration of at least one integration interval ($1/4$ cycle) that commenced with the occurrence of a fault.

When the power line is switched on, the pickup value of the charge comparison is automatically redoubled for a period of approximately 1.5 s. This is to prevent from malfunction caused by transient current in the CT secondary circuit due to remanence of the CTs (e.g. during auto-reclosure). This current would simulate a charge value which is not found in the primary quantities.

Each phase is subject to the charge comparison. Therefore an internal fault (sequential fault) in a different phase after the external fault occurred is detected immediately. The functional limitation of the charge comparison is reached in the less probable case that an internal fault (sequential fault) appears after the occurrence of an external fault with considerable current transformer saturation in the same phase. This must be detected by the current comparison stage in the differential protection.

Furthermore the charge comparison is influenced by charge currents from lines and shunt currents from transformers (steady-state and transient) that also cause a charge difference. Therefore the charge comparison is, as aforesaid, a function suited to complete the differential protection ensuring a fast tripping for high-current short-circuits. Normally, the charge comparison is set higher than the nominal current. For charge comparison, it is irrelevant whether the charging current compensation is activated or not.

Blocking/inter-blocking

The distance protection, provided that it is available and configured, automatically takes over as protection function if the differential protection is blocked by a binary input signal. The blocking at one end of a protected object affects all ends via the communications link (interblocking). If the distance protection is not available or ineffective, and if overcurrent protection has been configured as emergency function, all devices automatically switch to emergency mode.

Please keep in mind that the differential protection is phase-selectively blocked at all ends when a wire break is detected at one end of the protected object. The message „Wire break“ appears only on the device in which the wire break has been detected. All other devices show the phase-selective blocking of the differential protection by displaying dashes instead of the differential and restraint current for the failed phase. In the case of a phase-selective blocking of the differential protection due to wire break, the distance protection, even if it is available and configured, does not take over the protection function for the failed phase.

Pickup of the differential protection

Figure 2-31 illustrates the logic diagram of the differential protection. The phase-selective indications of the stage are summarised to form general phase indications. In addition, the device provides information on which stage picked up.

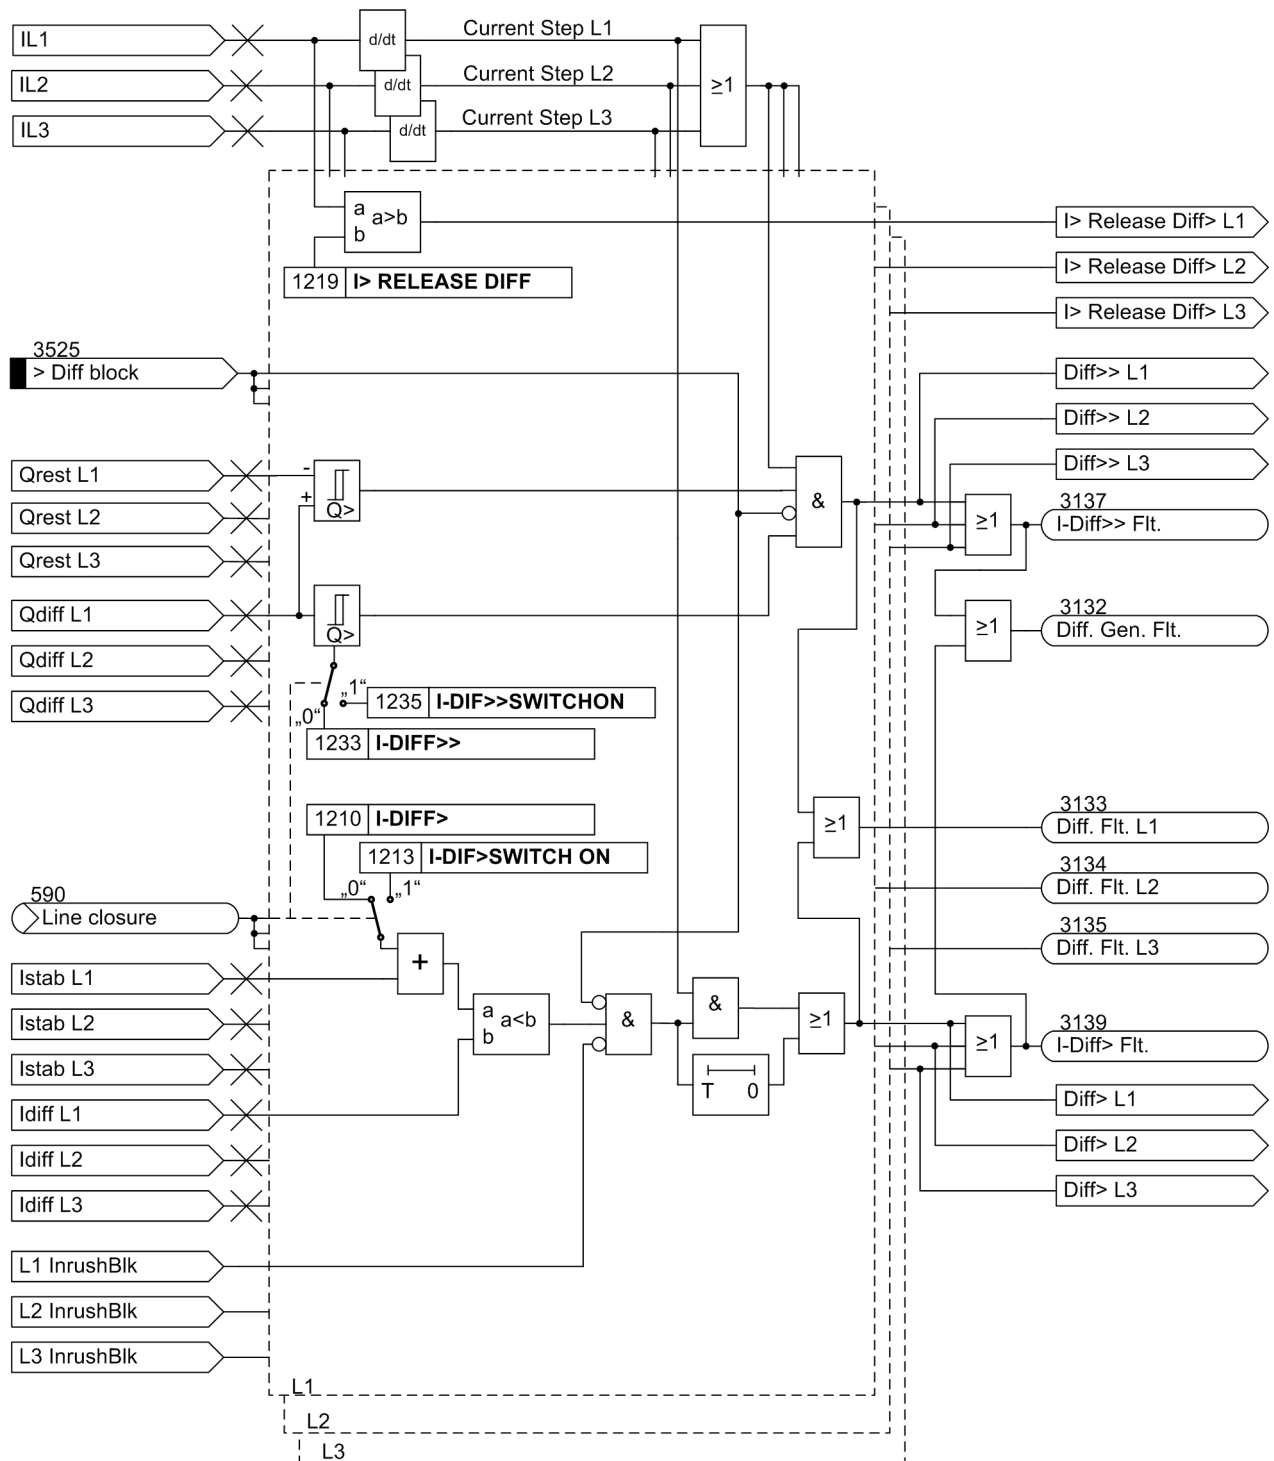


Figure 2-31 Pickup logic for the differential protection function

As soon as the differential protection function registers a fault within its tripping zone, the signal „Diff. Gen. Flt.“ (general device pickup of the differential protection) is issued. For the differential protection function itself, this pickup signal is of no concern since the tripping conditions are available at the same time. This signal, however, is necessary for the initiation of internal or external supplementary functions (e.g. fault recording, automatic reclosure).

Tripping logic of the differential protection

The tripping logic of the differential protection combines all decisions of the differential stages and forms output signals which are also influenced by the central tripping logic of the entire device (Figure 2-32).

The pickup signals that identify the concerned stages of the differential protection stages can be delayed via the time stage **T-DELAY I-DIFF>**. Independently of this condition, a single-phase pickup can be blocked for a short time in order to bridge the transient oscillations on occurrence of a single earth fault in a resonant-earthed system.

The output signals generated by the stages are combined to the output signals „Diff. Gen. TRIP“, „Diff TRIP 1p L1“, „Diff TRIP 1p L2“, „Diff TRIP 1p L3“, „Diff TRIP L123“ in the tripping logic. The single-pole information implies that tripping will take place single-pole only. The actual generation of the commands for the tripping (output) relay is executed within the tripping logic of the entire device (see Section 2.24.1).

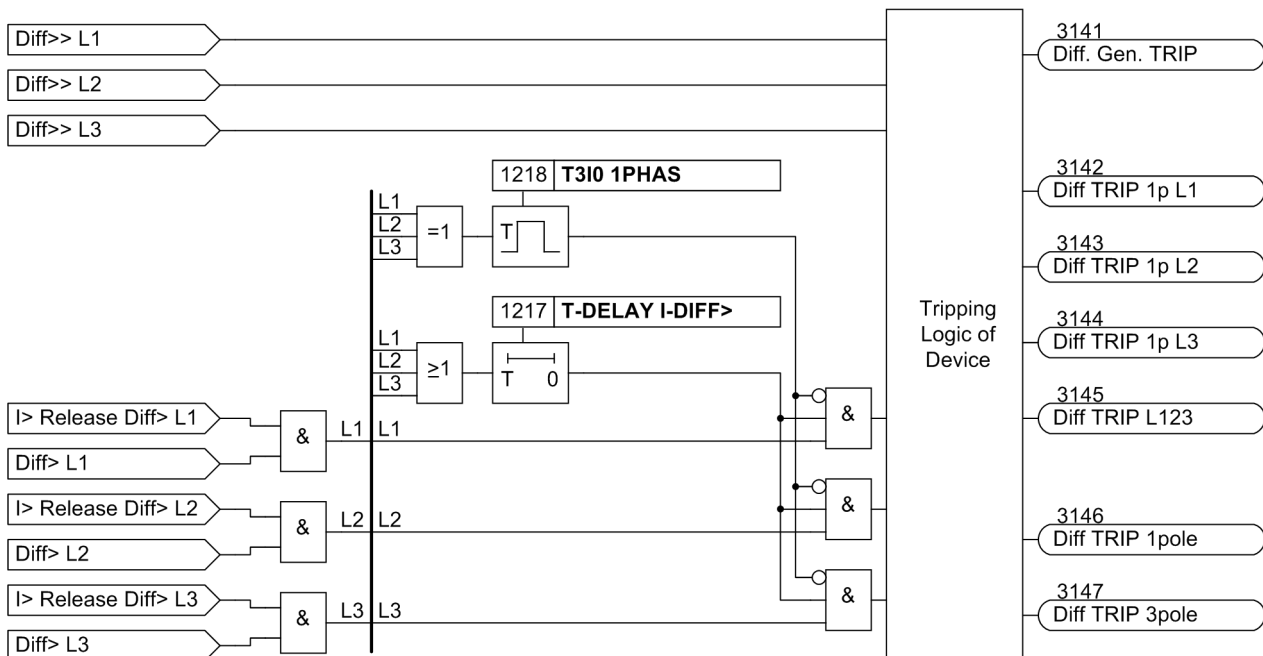


Figure 2-32 Tripping logic of the differential protection

2.3.2 Setting Notes

General

The differential protection can be 1201 **STATE OF DIFF. ON** or **OFF**. If a single device is switched off at any end of the protected object, a calculation of measured values becomes impossible. The entire differential protection of all ends is then blocked. If the distance protection is available and configured, it performs the main protection function.

Pickup value of differential current

The current sensitivity is set with address 1210 **I-DIFF>**. It is determined by the entire current flowing into a protected zone in case of a fault. This is the total fault current regardless of how it is distributed between the ends of the protected object.

If the charging current compensation in address 1221 is switched **Ic-comp. = ON**, the pickup value **I-DIFF>** can be set to $1 \cdot I_{cN}$. Thus the residual error of the charging current compensation is considered.

Without charging current compensation (address 1221 **Ic-comp. = OFF**), this pickup value must be set to a value that is higher than the total steady-state shunt current of the protected object. For cables and long overhead lines, the charging current is to be considered in particular.

The charging current is calculated from the operational capacitance:

$$I_C = 3.63 \cdot 10^{-6} \cdot U_N \cdot f_N \cdot C_B' \cdot s$$

with

I_C	Charging current to be calculated in A primary
U_{Nom}	Nominal voltage of the network in kV primary
f_N	Nominal frequency of the network in Hz
C_B'	Per unit line length service capacitance of the line in nF/km or nF/mile
s	Length of the line in km or miles

For lines with multiple ends, the total sum of all line sections is taken as the length.

Considering the variations of voltage and frequency, the set value should be at least 2 to 3 times higher than the calculated charging current. Moreover, the pickup value should not be less than 15% of the rated operational current. The rated operational current either derives from the nominal apparent power of a transformer in the protected zone (as described in 2.1.4.1 under margin heading „Topological Data for Transformers (optional)“, or from the addresses 1104 **FullScaleCurr.** according to Section 2.1.4.1 under margin heading „Nominal Values of Protected Lines“. It must be equal at all ends of the protected object.

If no voltages are measured, the compensated charging current is taken into account in address 1224 **IcSTAB / IcN**. This ratio is normally 2.5, so that the current set by it is 2 to 3 times, or **IcSTAB / IcN · I-DIFF>**, of the determined charging current.

If setting is performed from a personal computer using DIGSI, the parameters can be set either as primary or as secondary quantities. If secondary quantities are set, all currents must be converted to the secondary side of the current transformers.

Calculation Example:

110 kV single-conductor oil-filled cable

Cross section = 240 mm²

Rated frequency $f_N = 50$ Hz

Length $s = 16$ km

Service capacitance $C_B' = 310$ nF/km

Current transformer, transformer ratio 600 A/5 A

From that the steady-state charging current is calculated:

$$I_C = 3.63 \cdot 10^{-6} \cdot U_N \cdot f_N \cdot C_B' \cdot s = 3.63 \cdot 10^{-6} \cdot 110 \cdot 50 \cdot 310 \cdot 16 = 99 \text{ A}$$

For the setting with primary values at least the double value is to be set, i.e.:

Setting value **I-DIFF> = 200**

Setting value with charging current compensation **I-DIFF> = 100 A**

For the setting with secondary values this value has to be converted to secondary quantity:

$$\text{SettingValue I-DIFF} > = \frac{200 \text{ A}}{600 \text{ A}} \cdot 5 \text{ A} = 1.67 \text{ A}$$

If a power transformer with voltage regulation is installed within the protected zone consider that a differential current may be present even during normal operation, dependent on the position of the tap changer. Please also refer to the notes in chapter 2.1.2.1 Setting information, Margin heading „Power Transformer with Voltage Regulation“.

Pickup value during switch-on

When switching on long, unloaded cables, overhead lines and arc-compensated lines, pronounced higher-frequency transient reactions may take place. These peaks are considerably damped by means of a digital filter in the differential protection. A pickup value **I-DIF>SWITCH ON** (address 1213) can be set to reliably prevent single-sided pickup of the protection. This pickup value is always active when a device has recognized the connection of a dead line at its end. For the duration of the seal-in time **SI Time all C1**, which was set in the general protection data at address 1132 (Section 2.1.4.1) all devices are then switched over to this particular pickup value. A setting to three to four times the steady-state charging current ensures usually the stability of the protection during switch-on of the line. For switch-on of a transformer or shunt reactor, an inrush restraint is incorporated (see below under margin heading „Inrush Restraint“).

Final checks will be carried out during commissioning. Further information can be found in chapter Installation and Commissioning.

Delays

In special cases of application it may be useful to delay the tripping of the differential protection with an additional timer, e.g. in case of reverse interlocking. The delay time **T-DELAY I-DIFF>** (address 1217) is only started upon detection of an internal fault. This parameter can only be altered with DIGSI under **Additional Settings**.

If the differential protection is applied to an isolated or resonant-earthed network, it must be ensured that tripping is avoided during the transient oscillations of a single earth fault. With address 1218 **T3IO 1PHAS** the pickup to a single fault is therefore delayed for 0.04 s (presetting). For large resonant-earthed systems the time delay should be increased. By setting the address to ∞ the single-phase tripping is totally suppressed.

Please note that the parameter **T3IO 1PHAS** is also used by the distance protection function. The settings that you make here also affect the distance protection (see Section 2.5.1.4 under margin heading „Earth Fault Detection“).

If it is desired that a TRIP command is generated in the event of an internal fault only if simultaneously the current of the local line end has exceeded a specific quantity, then this current threshold can be set for enabling the differential protection TRIP at address 1219 **I> RELEASE DIFF**. This parameter can only be altered in DIGSI at **Additional Settings**.

Pickup value Charge comparison stage

The pickup threshold of the charge comparison stage is set in address 1233 **I-DIFF>>**. The RMS value of the current is decisive. The conversion into charge value is carried out by the device itself.

Setting near the operational nominal current is adequate in most cases. Please also remember that the setting is related to the operational nominal values that must be equal (primary) at all ends of the protected object.

Since this stage reacts very fast, a pickup of capacitive charging currents (for lines) and inductive magnetizing currents (for transformers or reactors) – also for switch-on condition – must be excluded. This is also true when the charging current compensation is on, since the compensation is not effective for charge comparison.

In resonant-earthed systems the value of the non-compensated system earth fault current should also not be undershot. This value derives from the total capacitive earth fault current without considering the Petersen coil. As the Petersen coil serves to compensate nearly the total earth fault current, its nominal current can be taken as a base.

For transformers set the value $I_{N\text{ Transf}}/U_{k\text{ Transf}}$.

The pickup thresholds are finally checked during commissioning. For further information please refer to the chapter Installation and Commissioning.

Pickup value when switching on the charge comparison

If bushing transformers are used for a transformer in the protected line section, stray fluxes through the bushing transformers may occur when reclosing after an external fault. These stray fluxes may cause a distortion of the secondary current and an overfunction of the charge comparison.

If bushing transformers are used, the setting value of parameter 1235 **I-DIF>>SWITCHON** should be 2 to 3 times the setting value of **I-DIFF>>**. The default setting of **I-DIF>>SWITCHON** corresponds to the default setting of parameter 1233 **I-DIFF>>**. In the default setting, this parameter is therefore ineffective.

Charging current compensation

The charging current compensation can only operate if this function has been set during configuring the functional scope (Section 2.1.2) in address 149 **charge I comp. = Enabled**. Also, the line data must have been configured (Section 2.1.4.1). With more than two line ends particularly the parameter in address 1114 **Tot. Line Length** has to be considered. If the unit of length in address 236 is changed for the total line length in address 1114, the line data have to be set again for the unit of length which has been changed. It is possible to enter unrealistic data (very long line with extremely high capacitance). The charging current compensation is in that case ineffective and provides restraint with a very high restraint current. This can also be seen from the measured restraint values and from the output of an „effective-OFF“ indication.

In address 1221 **Ic-comp.** you can determine whether the charging current compensation is to be switched **ON** or **OFF**. Please note that the parameter **I-DIFF>** in address 1210 must absolutely be increased to a value of 2 to 3 times I_{cN} before the compensation is switched **OFF**, because otherwise a spurious trip might be the result.



Note

If the protected line section includes a transformer or compensation reactors, the charging current compensation must not be switched on.

In the following cases, an active protection device is not able to assess the charging current (charging current compensation is ineffective):

- No voltage measurement (depends on configuration),
- Fuse Failure, or
- Detection of a ΣU measuring error.

In all these cases the protection device remains active for its assigned line section but must return to its "classic" restraint strategy, i.e. with I_{cRest} being 2 to 3 times I_{cN} .

The calculated charging current is set to zero. The charging current tolerance, however, should be set to $2.5 \cdot I_{cN} \cdot \text{line section portion}$ to avoid spurious tripping of the protection. Address 1224 **IcSTAB / IcN** allows you to determine the charging current restraint factor. Since in the latter descriptions the charging current was already considered using the recommended setting 1210 **I -DIFF>** = $1 \cdot I_{cN}$, the additional restraint value of the device is calculated as follows: $(\text{IcSTAB} / \text{IcN} - 1) \cdot \text{I -DIFF>}$ divided by the number of devices. This value is added to the normal restraint in case of a failure of the the protection device voltage to be measured.

Inrush restraint

The inrush restraint of the differential protection is only necessary when the devices are operated on a transformer or on lines which end on transformers. The transformer is located inside the differential protection zone. Inrush restraint can be turned **ON** or **OFF** at address 2301 **INRUSH REST**.

It is based on the evaluation of the second harmonic which exists in the inrush current. Ex-works a ratio of **15 %** of the **2nd HARMONIC** I_{2fN}/I_{fN} is set under address 2302, which can normally be taken over. However the component required for restraint can be parameterized. In order to be able to achieve a higher degree of restraint in case of exceptionally unfavourable inrush conditions, you may also set a smaller value.

However, if the local measured current exceeds a value set in address 2305 **MAX INRUSH PEAK**, there will be no inrush restraint. The peak value is decisive. The set value should be higher than the maximum inrush current peak value that can be expected. For transformers set the value above $\sqrt{2} \cdot I_{N\text{Transf.}} / u_{k\text{Transf.}}$. If a line ends on a transformer, a smaller value may be selected, considering the damping of the current by the line impedance.

At address 2303 **CROSS BLOCK**, the crossblock function can be activated (**YES**) or deactivated (**NO**). The time after exceeding the current threshold for which this crossblock is to be activated is set at address 2310 **CROSSB 2HM**. With the setting ∞ the crossblock function is always active until the second harmonic content in all phases has dropped below the set value.

2.3.3 Settings

Addresses which have an appended "A" can only be changed with DIGSI, under Additional Settings.

The table indicates region-specific presettings. Column C (configuration) indicates the corresponding secondary nominal current of the current transformer.

Addr.	Parameter	C	Setting Options	Default Setting	Comments
1201	STATE OF DIFF.		OFF ON	ON	State of differential protection
1210	I-DIFF>	1A	0.10 .. 20.00 A	0.30 A	I-DIFF>: Pickup value
		5A	0.50 .. 100.00 A	1.50 A	
1213	I-DIF>SWITCH ON	1A	0.10 .. 20.00 A	0.30 A	I-DIFF>: Value under switch on condition
		5A	0.50 .. 100.00 A	1.50 A	
1217A	T-DELAY I-DIFF>		0.00 .. 60.00 sec; ∞	0.00 sec	I-DIFF>: Trip time delay
1218	T3I0 1PHAS		0.00 .. 0.50 sec; ∞	0.04 sec	Delay 1ph-faults (comp/isol. star-point)

Addr.	Parameter	C	Setting Options	Default Setting	Comments
1219A	I> RELEASE DIFF	1A	0.10 .. 20.00 A; 0	0.00 A	Min. local current to release DIFF-Trip
		5A	0.50 .. 100.00 A; 0	0.00 A	
1221	Ic-comp.		OFF ON	OFF	Charging current compensation
1224	IcSTAB/IcN		2.0 .. 4.0	2.5	Ic Stabilising / Ic Nominal
1233	I-DIFF>>	1A	0.8 .. 100.0 A; ∞	1.2 A	I-DIFF>>: Pickup value
		5A	4.0 .. 500.0 A; ∞	6.0 A	
1235	I-DIF>>SWITCHON	1A	0.8 .. 100.0 A; ∞	1.2 A	I-DIFF>>: Value under switch on cond.
		5A	4.0 .. 500.0 A; ∞	6.0 A	
2301	INRUSH REST.		OFF ON	OFF	Inrush Restraint
2302	2nd HARMONIC		10 .. 45 %	15 %	2nd. harmonic in % of fundamental
2303	CROSS BLOCK		NO YES	NO	Cross Block
2305	MAX INRUSH PEAK	1A	1.1 .. 25.0 A	15.0 A	Maximum inrush-peak value
		5A	5.5 .. 125.0 A	75.0 A	
2310	CROSSB 2HM		0.00 .. 60.00 sec; ∞	0.00 sec	Time for Crossblock with 2nd harmonic

2.3.4 Information List

No.	Information	Type of Information	Comments
3101	IC comp. active	OUT	IC compensation active
3102	2nd Harmonic L1	OUT	Diff: 2nd Harmonic detected in phase L1
3103	2nd Harmonic L2	OUT	Diff: 2nd Harmonic detected in phase L2
3104	2nd Harmonic L3	OUT	Diff: 2nd Harmonic detected in phase L3
3120	Diff active	OUT	Diff: Active
3132	Diff. Gen. Flt.	OUT	Diff: Fault detection
3133	Diff. Flt. L1	OUT	Diff: Fault detection in phase L1
3134	Diff. Flt. L2	OUT	Diff: Fault detection in phase L2
3135	Diff. Flt. L3	OUT	Diff: Fault detection in phase L3
3136	Diff. Flt. E	OUT	Diff: Earth fault detection
3137	I-Diff>> Flt.	OUT	Diff: Fault detection of I-Diff>>
3139	I-Diff> Flt.	OUT	Diff: Fault detection of I-Diff>
3141	Diff. Gen. TRIP	OUT	Diff: General TRIP
3142	Diff TRIP 1p L1	OUT	Diff: TRIP - Only L1
3143	Diff TRIP 1p L2	OUT	Diff: TRIP - Only L2
3144	Diff TRIP 1p L3	OUT	Diff: TRIP - Only L3
3145	Diff TRIP L123	OUT	Diff: TRIP L123
3146	Diff TRIP 1pole	OUT	Diff: TRIP 1pole
3147	Diff TRIP 3pole	OUT	Diff: TRIP 3pole

No.	Information	Type of Information	Comments
3148	Diff block	OUT	Diff: Differential protection is blocked
3149	Diff OFF	OUT	Diff: Diff. protection is switched off
3176	Diff Flt. 1p.L1	OUT	Diff: Fault detection L1 (only)
3177	Diff Flt. L1E	OUT	Diff: Fault detection L1E
3178	Diff Flt. 1p.L2	OUT	Diff: Fault detection L2 (only)
3179	Diff Flt. L2E	OUT	Diff: Fault detection L2E
3180	Diff Flt. L12	OUT	Diff: Fault detection L12
3181	Diff Flt. L12E	OUT	Diff: Fault detection L12E
3182	Diff Flt. 1p.L3	OUT	Diff: Fault detection L3 (only)
3183	Diff Flt. L3E	OUT	Diff: Fault detection L3E
3184	Diff Flt. L31	OUT	Diff: Fault detection L31
3185	Diff Flt. L31E	OUT	Diff: Fault detection L31E
3186	Diff Flt. L23	OUT	Diff: Fault detection L23
3187	Diff Flt. L23E	OUT	Diff: Fault detection L23E
3188	Diff Flt. L123	OUT	Diff: Fault detection L123
3189	Diff Flt. L123E	OUT	Diff: Fault detection L123E
3190	Test Diff.	IntSP	Diff: Set Teststate of Diff. protection
3191	Comm. Diff	IntSP	Diff: Set Commissioning state of Diff.
3192	TestDiff.remote	OUT	Diff: Remote relay in Teststate
3193	Comm.Diff act.	OUT	Diff: Commissioning state is active
3197	>Test Diff. ON	SP	Diff: >Set Teststate of Diff. protection
3198	>Test Diff. OFF	SP	Diff: >Reset Teststate of Diff. protec.
3199	Test Diff.ONoff	IntSP	Diff: Teststate of Diff. prot. ON/OFF
3200	TestDiffONoffBI	IntSP	Diff: Teststate ON/OFF via BI
3260	>Comm. Diff ON	SP	Diff: >Commissioning state ON
3261	>Comm. Diff OFF	SP	Diff: >Commissioning state OFF
3262	Comm Diff.ONoff	IntSP	Diff: Commissioning state ON/OFF
3263	CommDiffONoffBI	IntSP	Diff: Commissioning state ON/OFF via BI
3525	> Diff block	SP	>Differential protection blocking signal
3526	Diffblk.rec PI1	OUT	Differential blocking received at PI1
3527	Diffblk.rec PI2	OUT	Differential blocking received at PI2
3528	Diffblk.sen PI1	OUT	Differential blocking sending via PI1
3529	Diffblk.sen PI2	OUT	Differential blocking sending via PI2

2.4 Breaker Intertrip and Remote Tripping

7SD5 allows to transmit a trip command created by the local differential protection to the other end or ends of the protected object (intertripping). Likewise, any desired command of another internal protective function or of an external protection, monitoring or control equipment can be transmitted for remote tripping.

The reaction when such a command is received can be set individually for each device. Thus, selection can be made for which end(s) the intertrip command should be effective.

Commands are transmitted separately for each phase, so that a simultaneous single-pole auto-reclosure is always possible, provided that devices and circuit breakers are designed for single-pole tripping.

2.4.1 Functional Description

Transmission circuit

The transmit signal can originate from two sources (Figure 2-33). If the parameter **I-TRIP SEND** is set to **YES**, each trip command of the differential protection is immediately routed to the transmission function „Trp.sen L1" to „...L3" (intertrip) and transmitted via the communication connections at the protection data interfaces.

Furthermore, it is possible to trigger the transmission function via binary inputs (remote tripping). This can be done either separately for each phase via the input functions „>Intertrip L1“, „>Intertrip L2" and „>Intertrip L3“, or for all phases together (three-pole) via the binary input function „>Intertrip 3pol“. The transmission signal can be delayed with **T-ITRIP BI** and prolonged with **T-ITRIP PROL BI**.

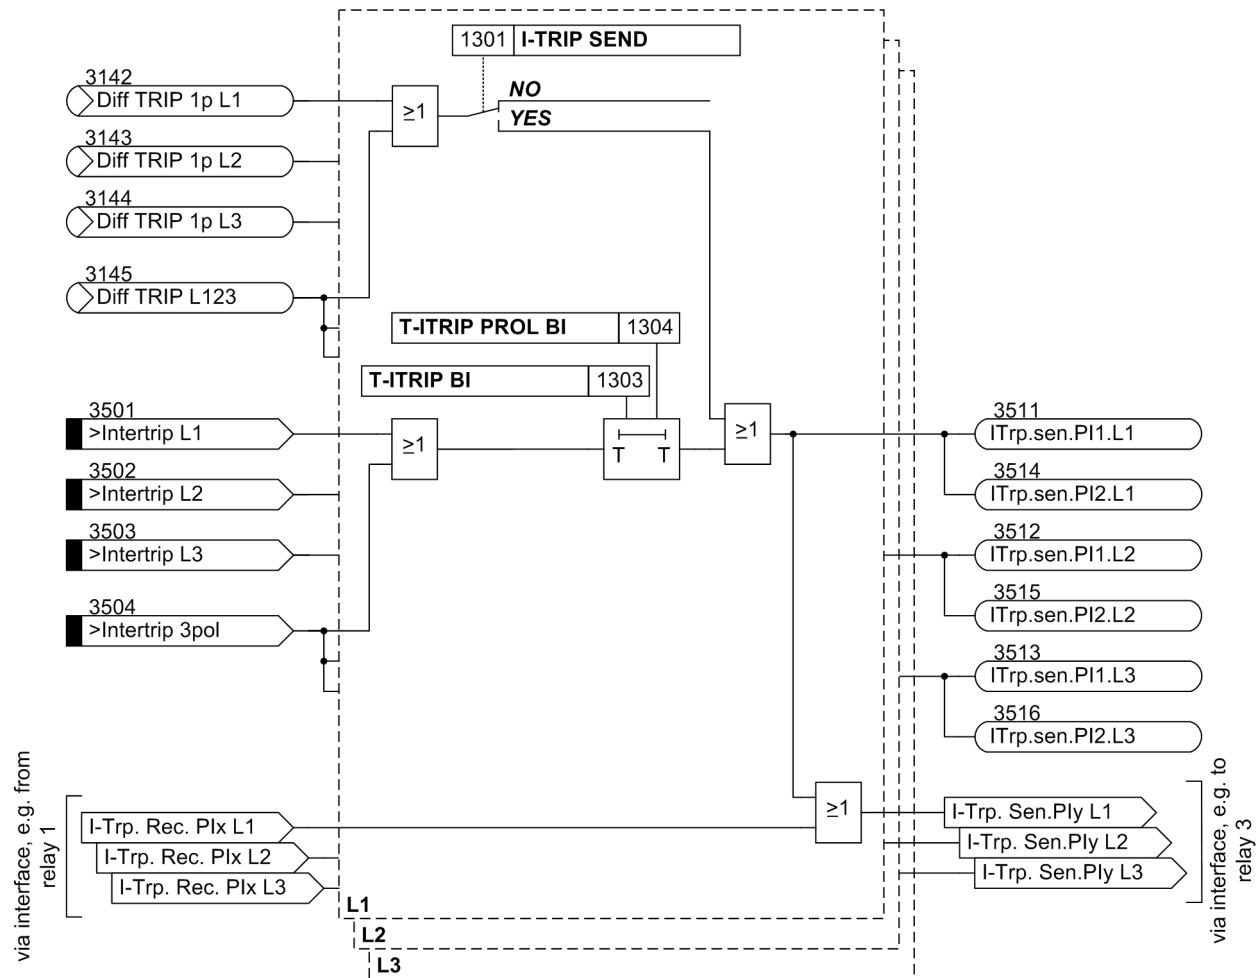


Figure 2-33 Logic diagram of the intertrip transmission circuit

In order to ensure that the transmission signal reaches all devices in objects with more than two ends, it is also looped through the protection data interface.

Receiving circuit

On the receiving end the signal can lead to a trip. Alternatively it can also cause an alarm only. In this way it is possible to determine for each end of the protected object whether the received signal is to trip at this particular end or not.

Figure 2-34 shows the logic diagram. If the received signal is to cause the trip, it will be forwarded to the tripping logic. The tripping logic of the device (see also Section 2.24.1) ensures, if necessary, that the conditions for single-pole tripping are met (e.g. single-pole tripping permissible, auto-reclosure function ready).

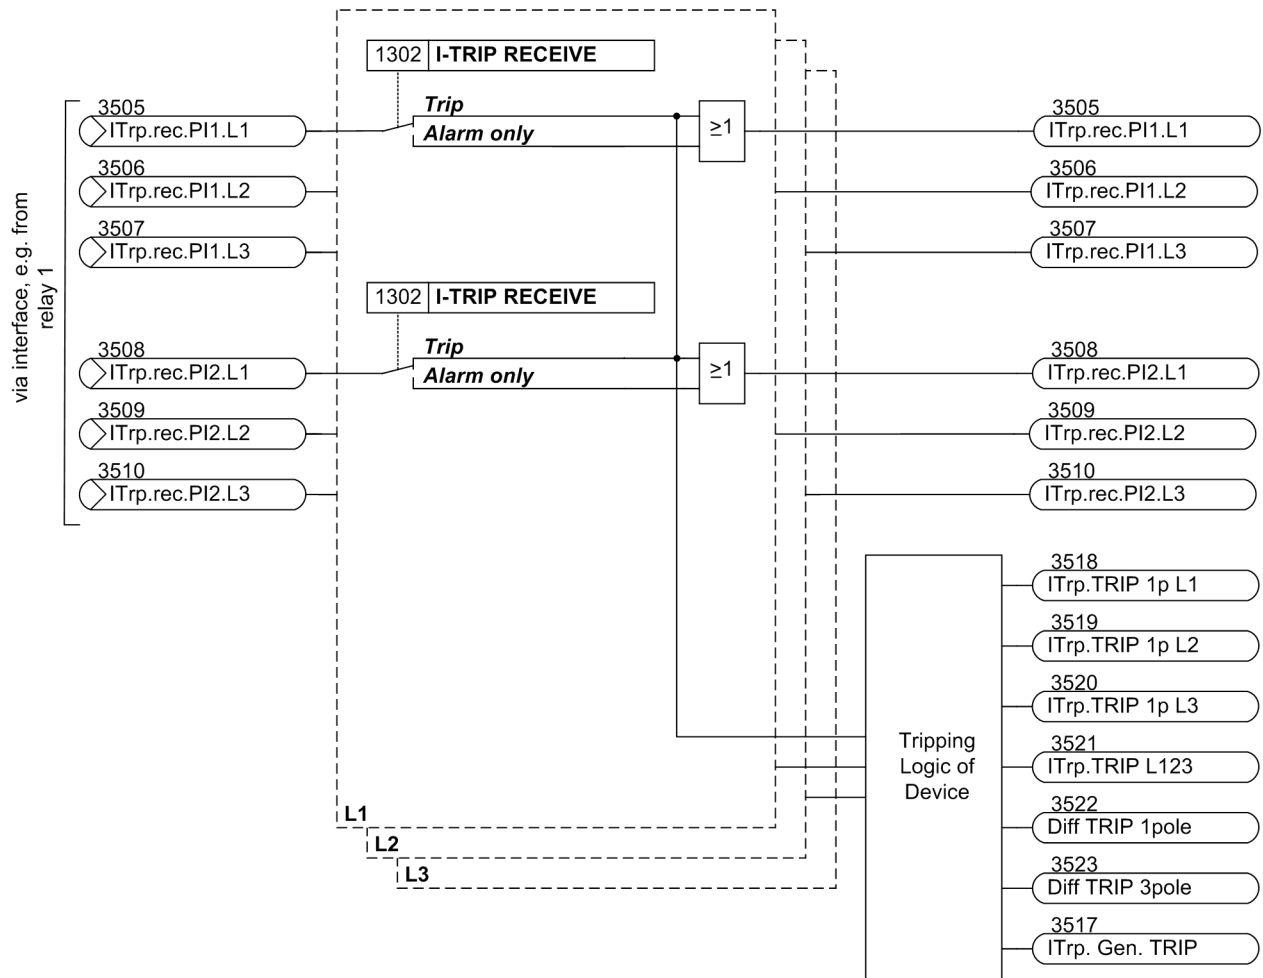


Figure 2-34 Logic diagram of the intertrip receive circuit

Ancillary functions

Since the signals for remote tripping can be set to cause only an alarm, any other desired signals can be transmitted in this way as well. After the binary input(s) have been activated, the signals which are set to cause an alarm at the receiving end are transmitted. These alarms can in turn execute any desired actions at the receiving end. It should be noted that for the transmission of remote alarms and remote commands a further 24 transmission channels and, in addition, 4 fast transmission channels are optionally available (see also Section 2.13).

2.4.2 Setting Notes**General**

The intertrip function for tripping caused by the differential protection can be activated (**YES**) or deactivated (**NO**) with address 1301 **I - TRIP SEND**. Since the differential protection devices theoretically operate with the same measured values at all ends of the protected object, a tripping in the event of an internal fault normally is also carried out at all ends, regardless of the infeed conditions at the ends. In special cases, i.e. if fault currents are to be expected near to the pickup threshold, it may occur that one or more ends do not issue a trip command due to inevitable device tolerances. For these cases **I - TRIP SEND = YES** ensures the tripping at all ends of the protected object.

Intertrip/Remote tripping

If the intertrip function is activated, it will automatically start when the differential protection trips.

If the relevant binary inputs are allocated and activated by an external source, the intertrip signal is transmitted as well. In this case, the signal to be transmitted can be delayed with address 1303 **T-ITRIP BI**. This delay stabilizes the originating signal against dynamic interferences which may possibly occur on the control cabling. Address 1304 **T-ITRIP PROL BI** is used to extend a signal after it has been effectively injected from an external source.

The reaction of a device when receiving an intertrip/remote tripping signal is set at address 1302 **I-TRIP RECEIVE**. If it is supposed to cause tripping, set the value **Trip**. If the received signal, however, is supposed to cause an alarm only, **Alarm only** must be set if this indication is to be further processed externally.

The setting times depend on the individual case of application. A delay is necessary if the external control signal originates from a disturbed source and a restraint seems appropriate. Of course, the control signal has to be longer than the delay for the signal to be effective. If the signal is processed externally at the receiving end, a prolongation time might become necessary for the transmitting end so that the reaction desired at the receiving end can be executed reliably.

2.4.3 Settings

Addr.	Parameter	Setting Options	Default Setting	Comments
1301	I-TRIP SEND	YES NO	NO	State of transmit. the intertrip command
1302	I-TRIP RECEIVE	Alarm only Trip	Trip	Reaction if intertrip command is received.
1303	T-ITRIP BI	0.00 .. 30.00 sec	0.02 sec	Delay for intertrip via binary input
1304	T-ITRIP PROL BI	0.00 .. 30.00 sec	0.00 sec	Prolongation for intertrip via bin.input

2.4.4 Information List

No.	Information	Type of Information	Comments
3501	>Intertrip L1	SP	I.Trip: >Intertrip L1 signal input
3502	>Intertrip L2	SP	I.Trip: >Intertrip L2 signal input
3503	>Intertrip L3	SP	I.Trip: >Intertrip L3 signal input
3504	>Intertrip 3pol	SP	I.Trip: >Intertrip 3 pole signal input
3505	ITrp.rec.PI1.L1	OUT	I.Trip: Received at Prot.Interface 1 L1
3506	ITrp.rec.PI1.L2	OUT	I.Trip: Received at Prot.Interface 1 L2
3507	ITrp.rec.PI1.L3	OUT	I.Trip: Received at Prot.Interface 1 L3
3508	ITrp.rec.PI2.L1	OUT	I.Trip: Received at Prot.Interface 2 L1
3509	ITrp.rec.PI2.L2	OUT	I.Trip: Received at Prot.Interface 2 L2
3510	ITrp.rec.PI2.L3	OUT	I.Trip: Received at Prot.Interface 2 L3
3511	ITrp.sen.PI1.L1	OUT	I.Trip: Sending at Prot.Interface 1 L1
3512	ITrp.sen.PI1.L2	OUT	I.Trip: Sending at Prot.Interface 1 L2

No.	Information	Type of Information	Comments
3513	ITrp.sen.PI1.L3	OUT	I.Trip: Sending at Prot.Interface 1 L3
3514	ITrp.sen.PI2.L1	OUT	I.Trip: Sending at Prot.Interface 2 L1
3515	ITrp.sen.PI2.L2	OUT	I.Trip: Sending at Prot.Interface 2 L2
3516	ITrp.sen.PI2.L3	OUT	I.Trip: Sending at Prot.Interface 2 L3
3517	ITrp. Gen. TRIP	OUT	I.Trip: General TRIP
3518	ITrp.TRIP 1p L1	OUT	I.Trip: TRIP - Only L1
3519	ITrp.TRIP 1p L2	OUT	I.Trip: TRIP - Only L2
3520	ITrp.TRIP 1p L3	OUT	I.Trip: TRIP - Only L3
3521	ITrp.TRIP L123	OUT	I.Trip: TRIP L123
3522	Diff TRIP 1pole	OUT	I.Trip: TRIP 1pole
3523	Diff TRIP 3pole	OUT	I.Trip: TRIP 3pole

2.5 Distance Protection

Distance protection is the second main function of the device. It can operate as a fully-fledged redundant second protection function (Main2) in parallel to differential protection, or be configured as the only main protection function of the device (Main only). The distance protection distinguishes itself by high measuring accuracy and the ability to adapt to the given system conditions. It is supplemented by a number of additional functions.

2.5.1 Distance Protection, General Settings

2.5.1.1 Earth fault detection

Functional Description

Recognition of an earth fault is an important element in identifying the type of fault, as the determination of the valid loops for measurement of the fault distance and the shape of the distance zone characteristics substantially depend on whether the fault at hand is an earth fault or not. The 7SD5 has a stabilized earth current measurement, a zero sequence current/negative sequence current comparison as well as a displacement voltage measurement.

Furthermore, special measures are taken to avoid a pickup for single earth faults in an isolated or resonant-earthed system.

Earth Current $3I_0$

For earth current measurement, the fundamental sum of the numerically filtered phase currents is supervised to detect if it exceeds the set value (parameter **3I0> Threshold**). Restraint is provided against spurious operation resulting from unsymmetrical operating currents and error currents in the secondary circuits of the current transformer due to different degrees of current transformer saturation during short-circuits without earth: the actual pick-up threshold automatically increases as the phase current increases (Figure 2-35). The dropout threshold is approximately 95 % of the pickup threshold.

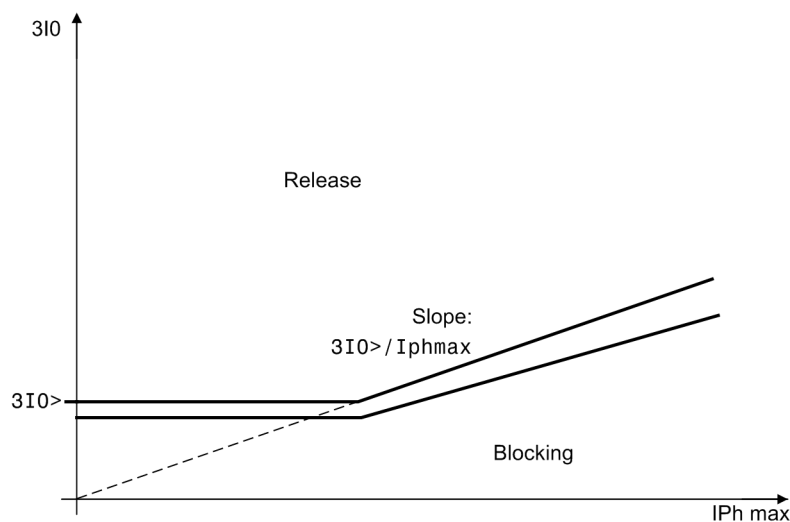


Figure 2-35 Earth current stage: pickup characteristic

Negative Sequence Current $3I_2$

On long, heavily loaded lines the earth current measurement could be overstabilised by large load currents (ref. to Figure 2-35). To ensure secure detection of earth faults in this case, a negative sequence comparison stage is additionally provided. In the event of a single-phase fault, the negative sequence current I_2 has approximately the same magnitude as the zero sequence current I_0 . When the ratio zero sequence current / negative sequence current exceeds a preset ratio, this stage picks up. For this stage, too, a parabolic characteristic provides restraint in the event of large negative sequence currents. Figure 2-36 illustrates this relationship. A release by means of the negative sequence current comparison requires a current of at least $0.2 I_N$ for $3I_0$ and $3I_2$.

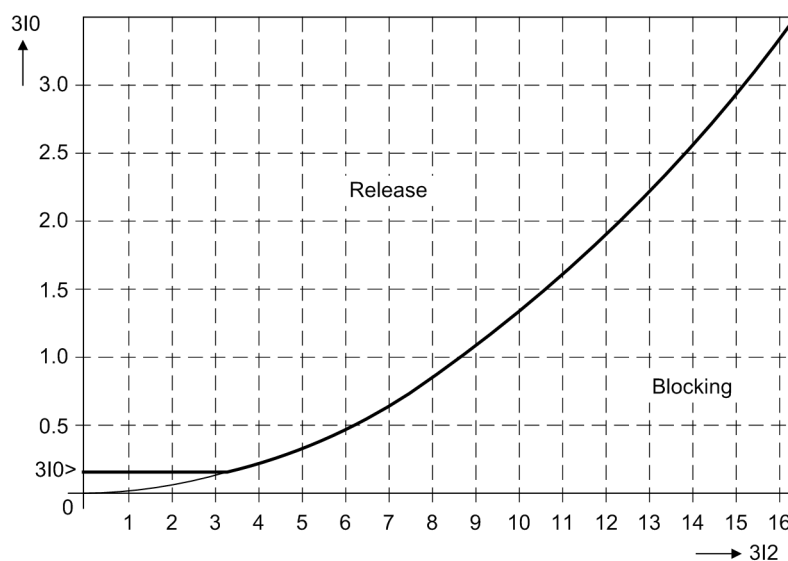


Figure 2-36 Characteristic of the I_0/I_2 stage

Displacement Voltage $3U_0$

For the neutral displacement voltage recognition the displacement voltage ($3 \cdot U_0$) is numerically filtered and the fundamental frequency is monitored to recognize whether it exceeds the set threshold. The dropout threshold is approximately 95 % of the pickup threshold. In earthed systems (**$3U_0 > \text{Threshold}$**) it can be used as an additional criterion for earth faults. For earthed systems, the U_0 -criterion may be disabled by applying the ∞ setting.

Logical Combination for Earthed Systems

The current and voltage criteria supplement each other, as the displacement voltage increases when the zero sequence to positive sequence impedance ratio is large, whereas the earth current increases when the zero sequence to positive sequence impedance ratio is smaller. Therefore, the current and voltage criteria for earthed systems are normally ORed. However, the two criteria may also be ANDed (settable, see Figure 2-37). Setting **$3U_0 > \text{Threshold}$** to infinite makes this criterion ineffective.

If the device detects a current transformer saturation in any phase current, the voltage criterion is indeed crucial to the detection of an earth fault since irregular current transformer saturation can cause a faulty secondary zero-sequence current although no primary zero-sequence current is present.

If displacement voltage detection has been made ineffective by setting **$3U_0 > \text{Threshold}$** to infinite, earth fault detection with the current criterion is possible even if the current transformers are saturated.

The earth fault detection alone does not cause a general fault detection of the distance protection, but merely controls the further fault detection modules. It is only alarmed in case of a general fault detection.

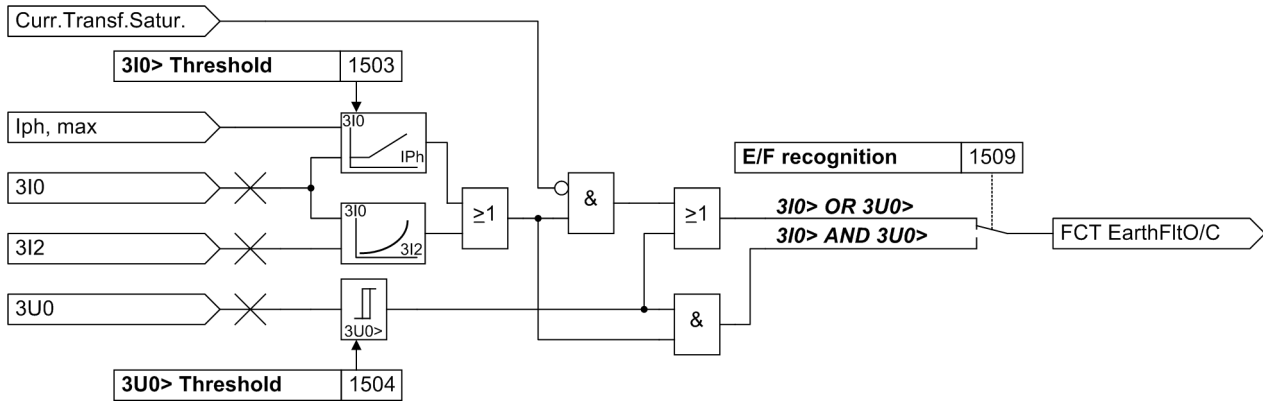


Figure 2-37 Logic of the earth fault detection

Earth fault detection during single-pole open condition

In order to prevent undesired pickup of the earth fault detection caused by load currents during single-pole open condition, a modified earth fault detection is used during single-pole open condition in earthed power systems (Figure 2-38). In this case, the magnitudes of the currents and voltages are monitored in addition to the angles between the currents.

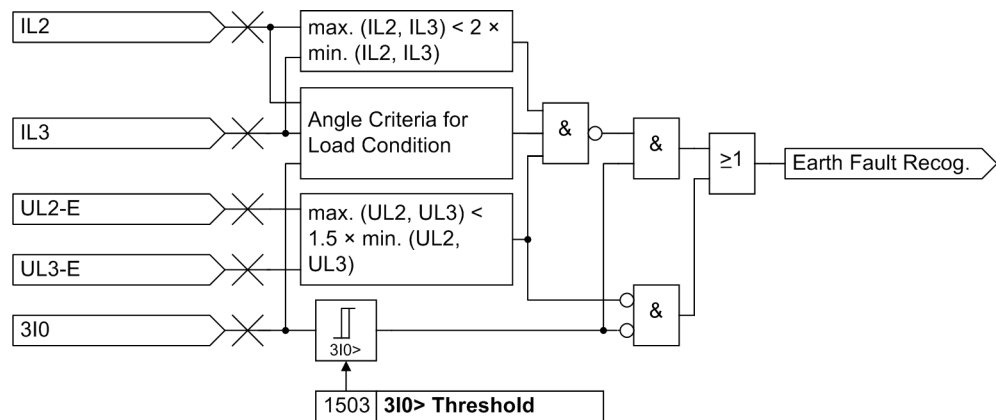


Figure 2-38 Earth fault detection during single-pole open condition (example: 1-pole dead time L1)

Logical Combination for Non-earthed Systems

In non-earthed systems (isolated system starpoint or resonant-earthed by means of a Peterson coil) the measured displacement voltage is only used for pickup on double earth faults. Earth fault detection by means of the displacement voltage is only possible for asymmetric phase-to-phase voltages. In this way, double earth faults can be detected even if no or only little earth current flows via the measuring point. However, the symmetry criterion prevents undesired pickup on single earth faults. The maximum asymmetry to be expected for a load current or a single earth fault can be set via parameter 1523 **Uph-ph unba1..** Furthermore, in these systems a simple earth fault is assumed initially in case of a single-phase fault and the fault detection is suppressed in order to avoid an erroneous pickup as a result of the earth fault initiation transients.

After a delay time **T3I0 1PHAS** which can be set, the fault detection is released again; this is necessary for the distance protection to still be able to detect a double earth fault with one base point on a dead-end feeder. If the phase-to-phase voltages are asymmetrical, this indicates a double earth fault and the pickup is released immediately.

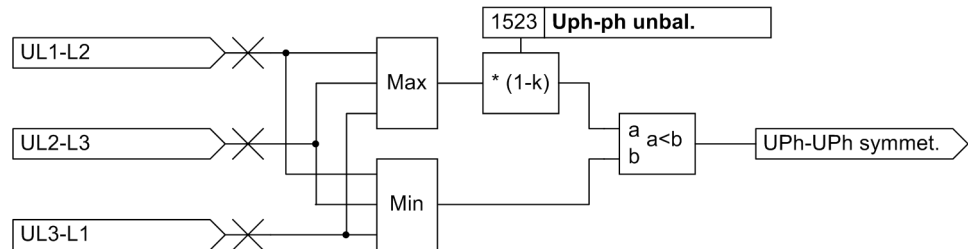


Figure 2-39 Symmetry detection for phase-to-phase voltages

k= Setting value for parameter 1523

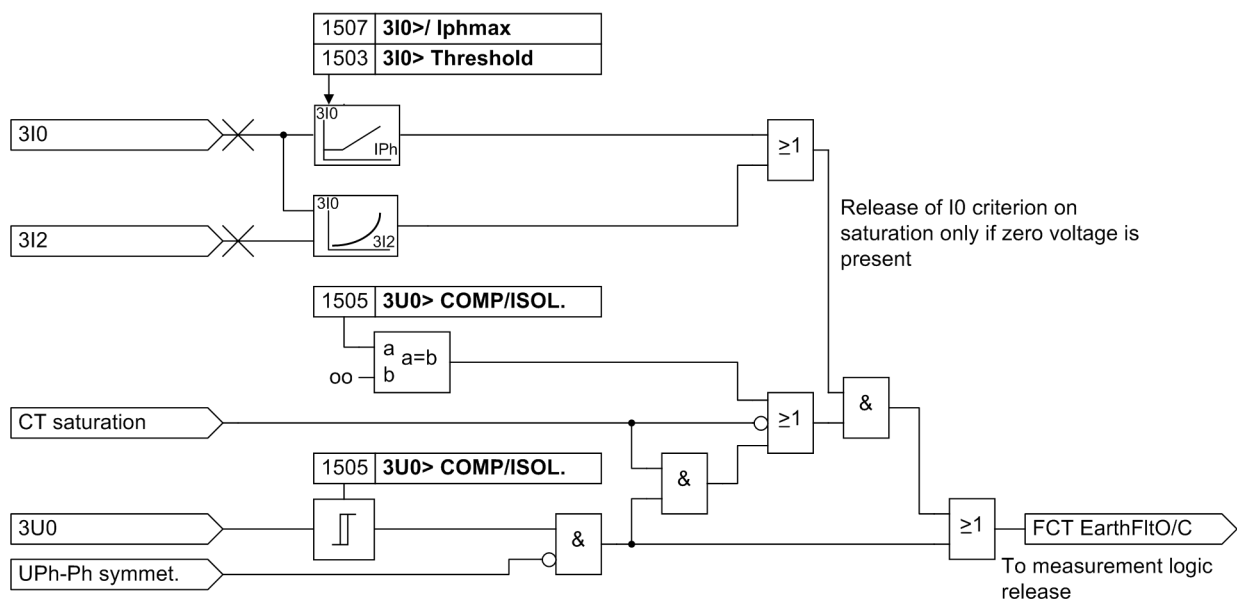


Figure 2-40 Earth fault detection in isolated or resonant-earthed systems

2.5.1.2 Pickup (optional)

Prerequisite

Depending on the ordered version, the 7SD5 distance protection, if configured as the main or backup protection function, features a range of pickup modes from which the one matching the respective network conditions best can be selected. If, according to the ordering code, the device only has impedance fault detection (7SD5***-*****-**E**** and 7SD5***-*****-**H****) or if you have set **Dis. PICKUP = Z< (quadrilat.)** (Adresse 117) as pickup mode, please go to Section 2.5.1.3 „Calculation of the Impedances“. The sections below refer to the ordering codes 7SD5***-*****-**D**** and 7SD5***-*****-**G****.

Fault detection has to detect a faulty condition in the power system and to initiate all the necessary procedures for selective clearance of the fault:

- Start of the delay times for the directional and non-directional final stages,
- Determination of the faulted loop(s),
- Enabling of impedance calculation and direction determination,
- Enabling of trip command,
- Initiation of supplementary functions
- Indication/output of the faulted conductor(s).

The pickup mode selected at address 117 **Dis. PICKUP = Z< (quadrilat.)** works implicitly, i.e the above-mentioned operations are executed automatically as soon as a fault is detected in one of the distance zones.

Overcurrent pickup

Overcurrent pickup is a phase-selective pickup procedure. After numeric filtering, the currents are monitored in each phase for transgression of a set value. A signal is output for the phase(s) where the set threshold has been exceeded.

For processing the measured values (see Section 2.5.1 „Calculation of the impedances“) the phase-selective pickup signals are converted into loop information. This depends on the earth fault detection and - in earthed power systems - on the parameter **1ph FAULTS** according to table 2-4. For single-phase pickup without earth fault detection in non-earthed power systems the phase-phase loop is always selected.

The phases that have picked up are signalled. If an earth fault has been detected, it will also be alarmed.

Pickup will drop if the signal falls below approx. 95% of the pickup value.

Table 2-4 Loops and phase indications for single-phase overcurrent pickup

Pickup Module	Earth Fault Detection	Parameter 1ph FAULTS	Valid Loop	Alarmed Phase(s)
L1 L2 L3	No No No	phase-phase	L3-L1 L1-L2 L2-L3	L1, L3 L1, L2 L2, L3
L1 L2 L3	No No No	phase-earth ¹⁾	L1-E L2-E L3-E	L1 L2 L3
L1 L2 L3	Yes Yes Yes	any	L1-E L2-E L3-E	L1, E L2, E L3, E

¹⁾ only active for earthed power systems

Voltage dependent current pickup U/I

The U/I pickup is a per phase and per loop pickup mode. Here the phase currents must exceed a threshold, while the threshold value depends on the magnitude of the loop voltage.

Pickup on earth faults is effectively suppressed in networks with non-earthed neutral points by means of the measures described above in Section „Earth Fault Detection“.

The basic characteristics of the U/I pick-up can be seen from the current–voltage characteristic shown in Figure 2-41. The first requirement for every phase pickup is that of the minimum current **I_{ph>}** is exceeded. For the evaluation of phase-phase loops, both relevant phase currents have to exceed this value. Above this current, the current pickup is voltage-dependent with the slope being determined by the settings **U(I>)**

and $U(I>>)$. For short-circuits with large currents the overcurrent pickup $I_{ph>>}$ is superimposed. The bold dots in Figure 2-41 mark the settings which determine the geometry of the current/voltage characteristic.

The phases that have picked up are signalled. The picked up loops are relevant for processing the measured values.

Loop pickup will drop out if the signal falls below 95 % of the respective current value or exceeds approx. 105 % of the respective voltage value.

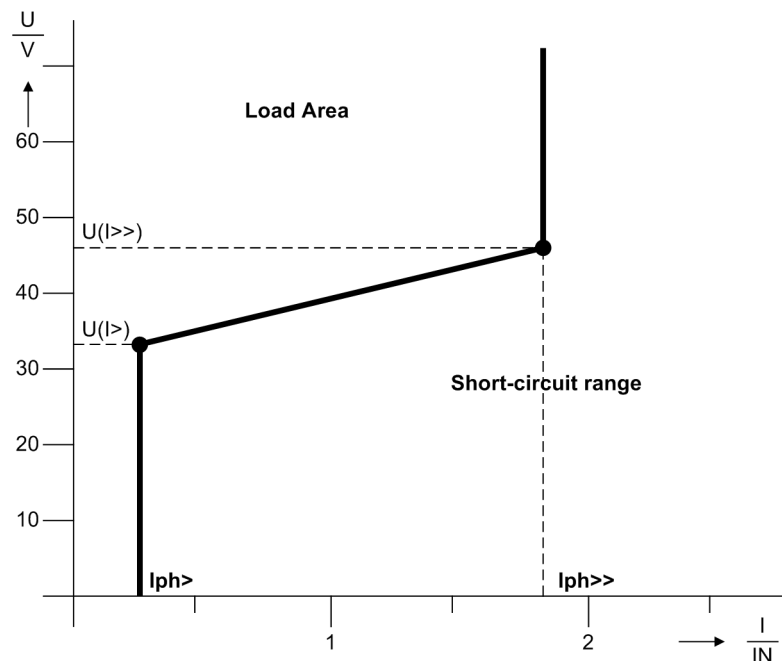


Figure 2-41 U/I characteristic

Pickup modes

The adaptation to different network conditions is determined by pickup modes.

The setting (**PROGAM U / I**) determines whether the phase-phase loops or the phase-earth loops are always valid, or whether this depends on the earth fault detection. This allows a very flexible adaptation to the network conditions. Optimum control mainly depends on whether the network neutral is not earthed (isolated or compensated), has a low-resistance or effective earthing. Setting notes are given in Section 2.5.1.4.

The evaluation of phase-earth loops is characterized by a high sensitivity in the event of earth faults and is therefore highly advantageous in networks with earthed star points. It automatically adapts to the prevailing infeed conditions; i.e. in the weak-infeed operation mode it becomes more current-sensitive, with high load currents the pickup threshold will be higher. This applies in particular if the network neutral is earthed low-resistance. If only the phase-earth loops are evaluated, it must be ensured that the overcurrent stage $I_{ph>>}$ responds in the event of phase-phase faults. If only one measuring system picks up, it can be decided whether this will result in a pickup of the phase-earth loops or the phase-phase loops in the earthed network (see Table 2-5).

Table 2-5 Loops and phase indications for single-phase overcurrent pickup U/I; Phase-to-earth voltages program

Pickup module	Measuring Current	Measuring Voltage	Earth fault detection	Parameter 1ph FAULTS	Valid Loop	Alarmed Phase(s)
L1 L2 L3	L1 L2 L3	L1-E L2-E L3-E	No No No	phase-phase	L3-L1 L1-L2 L2-L3	L1, L3 L1, L2 L2, L3
L1 L2 L3	L1 L2 L3	L1-E L2-E L3-E	No No No	phase-earth ¹⁾	L1-E L2-E L3-E	L1 L2 L3
L1 L2 L3	L1 L2 L3	L1-E L2-E L3-E	Yes Yes Yes	any	L1-E L2-E L3-E	L1, E L2, E L3, E

¹⁾ only active for earthed power systems

When evaluating the phase-to-phase loops, the sensitivity is particularly high for phase-to-phase faults. In extensive compensated networks this selection is advantageous because it excludes pickup as a result of single earth faults on principle. With two- and three-phase faults it automatically adapts to the prevailing infeed conditions, i.e. in weak-infeed operation mode it becomes more current-sensitive, with strong infeed and high load currents the pickup threshold will be higher. If only phase-to-phase loops are evaluated, the measuring loop is independent of the earth-fault detection, therefore this procedure is not suitable for earthed networks (see Table 2-6).

Table 2-6 Loops and phase indications for single-phase overcurrent pickup U/I; Phase-to-phase voltages program

Pickup module	Measuring Current	Measuring Voltage	Earth Fault Detection	Parameter 1ph FAULTS	Valid Loop	Alarmed Phase(s)
L1 L2 L3	L1 L2 L3	L1-L2 L2-L3 L3-L1	any	any	L1-L2 L2-L3 L3-L1	L1, L2 L2, L3 L1, L3

If the option has been chosen whereby voltage loop selection is dependent on earth-fault detection, then high sensitivity applies to phase-earth faults and to phase-phase faults. On principle, this option is independent of the treatment of the network neutral, however, it requires that the earth-fault criteria according to Section Earth Fault Detection are met for all earth faults or double earth faults (see Table 2-7).

Table 2-7 Loops and phase indications for single-phase overcurrent pickup U/I; Phase-to-earth-voltages program for earth fault, phase-to-phase voltages without earth fault

Pickup Module	Measuring Current	Measuring Voltage	Earth Fault Detection	Parameter 1ph FAULTS	Valid Loop	Alarmed Phase(s)
L1 L2 L3	L1 L2 L3	L1-L2 L2-L3 L3-L1	No No No	any	L1-L2 L2-L3 L3-L1	L1, L2 L2, L3 L1, L3
L1 L2 L3	L1 L2 L3	L1-E L2-E L3-E	Yes Yes Yes	any	L1-E L2-E L3-E	L1, E L2, E L3, E

Finally, it is also possible to only evaluate phase-earth voltage loops if an earth fault has been detected. For phase-phase faults only the overcurrent **I_{ph>>}** will then pick up. This is advantageous in networks with neutral points that have been earthed low-resistance, i.e. using earth-fault current limiting measures (so-called semi-solid earthing). In these cases only earth faults must be detected by the U/I pickup. In such networks it is usually even undesirable that phase-phase faults lead to a U/I pickup.

The measuring loop is independent of the setting **1ph FAULTS**. Table 2-8 shows the assignment of phase currents, loop voltages and measuring results.

Table 2-8 Loops and phase indications for single-phase overcurrent pickup U/I; Phase-to-earth voltages program for earth fault, I_{>>} without earth fault

Pickup Module	Measuring Current	Measuring Voltage	Earth Fault Detection	Parameter 1ph FAULTS	Valid Loop	Alarmed Phase(s)
L1 L2 L3	L1 L2 L3	L1-E L2-E L3-E	Yes Yes Yes	any	L1-E L2-E L3-E	L1, E L2, E L3, E
L1 L2 L3	L1 L2 L3	L1-E L2-E L3-E	No No No	any	no pickup no alarm via U _{Ph-E} </I>	

The pickup signals of the loops are converted into phase signals so that the faulted phase(s) can be indicated. If an earth fault has been detected, it will also be alarmed.

Voltage and angle-dependent current pickup U/I/φ

Phase-angle controlled U/I pickup can be applied when the U/I characteristic criteria can no longer distinguish reliably between load and short-circuit conditions. This is the case with small source impedances together with long lines or a sequence of lines and intermediate infeed. Then the local measured voltage will only drop to a small extent in the event of a short-circuit at the line end or in the back-up range of the distance protection so that the phase angle between current and voltage is required as an additional criterion for fault detection.

The U/I/φ pickup is a per phase and per loop pickup mode. It is crucial for the phase currents to exceed the pickup threshold, with the pickup value being dependent on the size of the loop voltages and the phase angle between current and voltage.

A precondition for measuring the phase-to-phase angles is that the associated phase currents as well as the current difference relevant for the loop have exceeded a minimum value **I_{ph>}** that can be set. The angle is determined by the phase-to-phase voltage and its corresponding current difference.

A precondition for measuring the phase-earth angle is that the associated phase current has exceeded a settable minimum value **I_{ph>}** and that an earth fault has been detected or only phase-to-earth measurements have been stipulated by setting parameters. The angle is determined by the phase-to-earth voltage and its corresponding phase current without considering the earth current.

Pickup on earth faults is effectively suppressed in networks with non-earthed neutral points by means of the measures described in Section „Earth Fault Detection“.

The basic characteristics of the U/I/φ pick-up can be seen from the current-voltage characteristic shown in Figure 2-42. Initially it is shaped like the U/I pickup characteristic (Figure 2-41).

For angles in the range of large phase difference, i.e. in the short-circuit angle area above the threshold angle φ_>, the characteristic between **U(I_>)** and **U(I_{φ>})** also takes effect; it is cut off by the overcurrent stage **I_{φ>}**. The bold dots in Figure 2-42 mark the

settings which determine the geometry of the current/voltage characteristic. The angle-dependent area, i.e. the area within the short-circuit angle of the characteristic in Figure 2-42, can either be set to affect in forward direction (in direction of line) or in both directions.

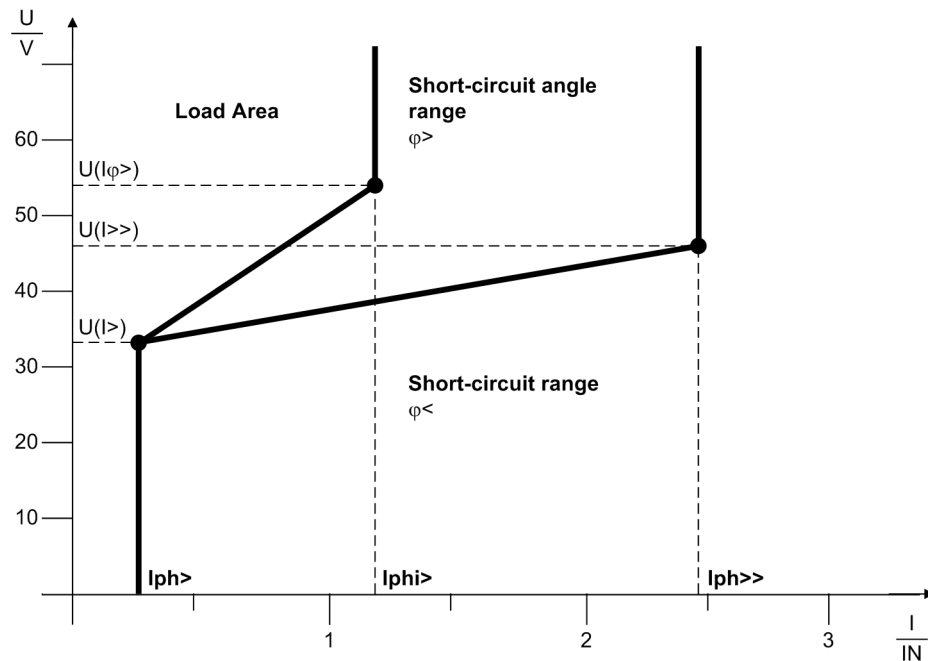


Figure 2-42 U/I/φ characteristic

Loop pickup will drop out if the signal falls below 95% of the respective current value or exceeds approx. 105% of the respective voltage value. A hysteresis of 5° applies to phase-angle measuring.

The adaptation to different network conditions is determined by pickup modes. As the U/I/φ pickup is an extension of the U/I pickup, the same program options are available. Table 2-5 to Table 2-8 also apply for single-phase pickup.

2.5.1.3 Calculation of the impedances

A separate measuring system is provided for each of the six possible impedance loops L1-E, L2-E, L3-E, L1-L2, L2-L3, L3-L1. The phase-earth loops are evaluated when an earth fault detection is recognized and the phase current exceeds a settable minimum value **Minimum Iph>**. The phase-phase loops are evaluated when the phase current in both of the affected phases exceeds the minimum value **Minimum Iph>**.

A jump detector synchronizes all the calculations with the fault inception. If a further fault occurs during the evaluation, the new measured values are immediately used for the calculation. The fault evaluation is therefore always done with the measured values of the current fault condition.

Phase-Phase Loops

To calculate the phase-to-phase loop, for instance during a two-phase short circuit L1-L2 (Figure 2-43), the loop equation is:

$$I_{L1} \cdot \underline{Z}_L - I_{L2} \cdot \underline{Z}_L = \underline{U}_{L1-E} - \underline{U}_{L2-E}$$

with

$\underline{U}, \underline{I}$ the (complex) measured quantities and
 $\underline{Z} = R + jX$ the (complex) line impedance.

The line impedance is computed to be

$$Z_L = \frac{U_{L1-E} - U_{L2-E}}{I_{L1} - I_{L2}}$$

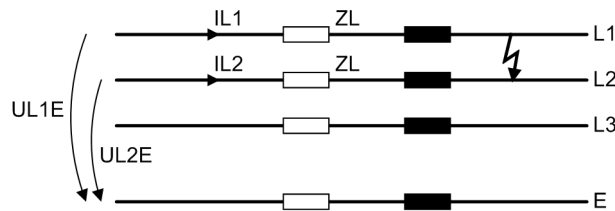


Figure 2-43 Short-circuit of a phase-phase loop

The calculation of the phase-to-phase loops does not take place as long as one of the concerned phases is switched off (during single-pole dead time) to avoid an incorrect measurement with the undefined measured values existing during this state. A state recognition (refer to Section 2.24.1) provides the corresponding blocking signal. A logic block diagram of the phase-to-phase measuring system is shown in Figure 2-44.

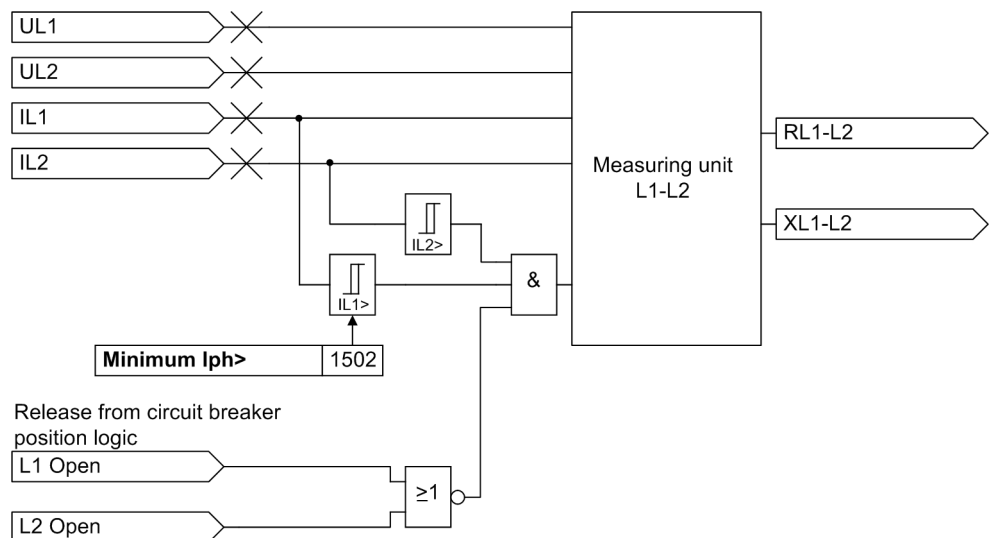


Figure 2-44 Logic for a phase-phase measuring unit, shown by the example of the L1-L2 loop

Phase-Earth Loops

For the calculation of the phase-earth loop, for example during an L3-E short-circuit (Figure 2-45) it must be noted that the impedance of the earth return path does not correspond to the impedance of the phase.

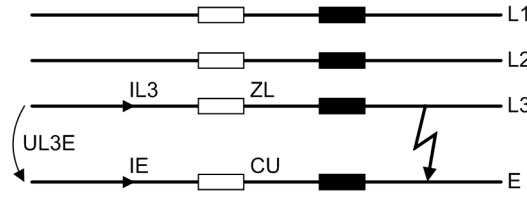


Figure 2-45 Short-circuit of a phase-earth loop

In the faulted loop

$$U_{L3-E} = I_{L3} \cdot (R_L - jX_L) - I_E \cdot \left(\frac{R_E}{R_L} \cdot R_L + j \left(\frac{X_E}{X_L} \right) \cdot X_L \right)$$

the voltage U_{L3-E} , the phase current I_{L3} and the earth current I_E are measured. The impedance to the fault location results from:

$$R_{L3-E} = \frac{U_{L3-E}}{I_{L3}} \cdot \frac{\cos(\varphi_U - \varphi_L) - \frac{I_E}{I_{L3}} \cdot \frac{X_E}{X_L} \cdot \cos(\varphi_U - \varphi_E)}{1 - \left(\frac{X_E}{X_L} + \frac{R_E}{R_L} \right) \cdot \frac{I_E}{I_{L3}} \cdot \cos(\varphi_E - \varphi_L) + \frac{R_E}{R_L} \cdot \frac{X_E}{X_L} \cdot \left(\frac{I_E}{I_{L3}} \right)^2}$$

and

$$X_{L3-E} = \frac{U_{L3-E}}{I_{L3}} \cdot \frac{\sin(\varphi_U - \varphi_L) - \frac{I_E}{I_{L3}} \cdot \frac{R_E}{R_L} \cdot \sin(\varphi_U - \varphi_E)}{1 - \left(\frac{X_E}{X_L} + \frac{R_E}{R_L} \right) \cdot \frac{I_E}{I_{L3}} \cdot \cos(\varphi_E - \varphi_L) + \frac{R_E}{R_L} \cdot \frac{X_E}{X_L} \cdot \left(\frac{I_E}{I_{L3}} \right)^2}$$

with

U_{L3-E} = phasor of the short circuit voltage

I_{L3} = phasor of the phase short-circuit current

I_E = phasor of the earth short-circuit current

φ_U = phase angle of the short-circuit voltage

φ_L = phase angle of the phase short-circuit current

φ_E = phase angle of the earth short-circuit current

The factors R_E/R_L and X_E/X_L are dependent only from the line constants, and no longer from the distance to fault.

The calculation of the phase-to-earth loops does not take place as long as the concerned phase is switched off (during single-pole dead time) to avoid an incorrect measurement with the now undefined measured values. A state recognition provides the corresponding blocking signal. A logic block diagram of the phase-to-earth measuring system is shown in Figure 2-46.

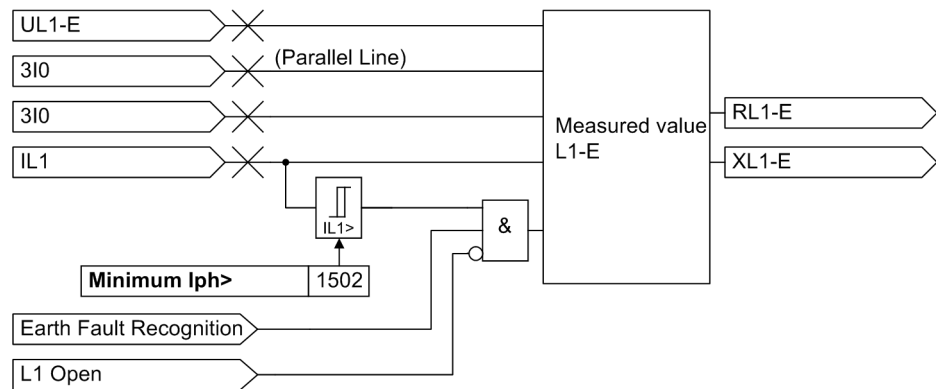


Figure 2-46 Logic of the phase-earth measuring system

Unfaulted Loops

The above considerations apply to the relevant short-circuited loop. A pickup with the current-based fault detection modes ($I>$, U/I , $U/I/\varphi$) guarantees that only the faulty loop(s) is/are released for the distance calculation. All six loops are calculated for the impedance pickup; the impedances of the unfaulted loops are also influenced by the short-circuit currents and voltages in the short-circuited phases. During a L1-E fault for example, the short-circuit current in phase L1 also appears in the measuring loops L1-L2 and L3-L1. The earth current is also measured in loops L2-E and L3-E. Combined with load currents which may flow, the unfaulted loops produce the so called „apparent impedances“ which have nothing to do with the actual fault distance.

These „apparent impedances“ in the unfaulted loops are usually larger than the short-circuit impedance of the faulted loop because the unfaulted loop only carries a part of the fault current and always has a larger voltage than the faulted loop. For the selectivity of the zones, they are usually of no consequence.

Apart from the **zone selectivity**, the **phase selectivity** is also important to achieve a correct identification of the faulted phases, to alarm the faulted phases and especially to enable single-pole automatic reclosure. Depending on the infeed conditions, close-in short-circuits may cause unfaulted loops to „see“ the fault further away than the faulted loop, but still within the tripping zone. This would cause three-pole tripping and therefore void the possibility of single-pole automatic reclosure. As a result power transfer via the line would be lost.

In the 7SD5 this is avoided by the implementation of a „loop verification“ function which operates in two steps:

Initially, the calculated loop impedances and its components (phase and/or earth) are used to simulate a replica of the line impedance. If this simulation returns a plausible line image, the corresponding loop pickup is designated as a definitely valid loop.

If the impedances of more than one loop are now located within the range of the zone, the smallest is still declared to be a valid loop. Furthermore, all loops that have an impedance which does not exceed the smallest loop impedance by more than 50% are declared as being valid. Loops with larger impedance are eliminated. Those loops which were declared as being valid in the initial stage, cannot be eliminated by this stage, even if they have larger impedances.

In this manner unfaulted „apparent impedances“ are eliminated on the one hand, while on the other hand, unsymmetrical multi-phase faults and multiple short-circuits are recognized correctly.

The loops that were designated as being valid are converted to phase information so that the fault detection correctly alarms the faulted phases.

Double earth faults in earthed systems

In systems with an effectively or low-resistant earthed starpoint, each connection of a phase with earth results in a short-circuit condition which must be isolated immediately by the closest protection systems. Fault detection occurs in the faulted loop associated with the faulted phase.

With double earth faults, fault detection is generally in two phase-earth loops. If both earth loops are in the same direction, a phase-phase loop may also pick up. It is possible to restrict the fault detection to particular loops in this case. It is often desirable to block the phase-earth loop of the leading phase, as this loop tends to overreach when there is infeed from both ends to a fault with a common earth fault resistance (Parameter 1521 **2Ph-E faults = Block leading Ø**). Alternatively, it is also possible to block the lagging phase-earth loop (Parameter **2Ph-E faults = Block lagging Ø**). All the affected loops can also be evaluated (Parameter **2Ph-E faults = All loops**), or only the phase-phase loop (Parameter **2Ph-E faults = Ø-Ø loops only**) or only the phase-earth loops (Parameter **2Ph-E faults = Ø-E loops only**). All these restrictions presuppose that the affected loops have the same direction.

In Table 2-9 the measured values used for the distance measurement in earthed systems during double earth faults are shown.

Table 2-9 Evaluation of the measured loops for double earth faults in an earthed system in case both earth faults are close to each other

Loop pickup	Evaluated loop(s)	Setting of parameter 1521
L1-E, L2-E, L1-L2 L2-E, L3-E, L2-L3 L1-E, L3-E, L3-L1	L2-E, L1-L2 L3-E, L2-L3 L1-E, L3-L1	2Ph-E faults = Block leading Ø
L1-E, L2-E, L1-L2 L2-E, L3-E, L2-L3 L1-E, L3-E, L3-L1	L1-E, L1-L2 L2-E, L2-L3 L3-E, L3-L1	2Ph-E faults = Block lagging Ø
L1-E, L2-E, L1-L2 L2-E, L3-E, L2-L3 L1-E, L3-E, L3-L1	L1-E, L2-E, L1-L2 L2-E, L3-E, L2-L3 L1-E, L3-E, L3-L1	2Ph-E faults = All loops
L1-E, L2-E, L1-L2 L2-E, L3-E, L2-L3 L1-E, L3-E, L3-L1	L1-L2 L2-L3 L3-L1	2Ph-E faults = Ø-Ø loops only
L1-E, L2-E, L1-L2 L2-E, L3-E, L2-L3 L1-E, L3-E, L3-L1	L1-E, L2-E L2-E, L3-E L1-E, L3-E	2Ph-E faults = Ø-E loops only

During three phase faults the fault detection of all three phase-to-phase loops usually occurs. In this case the three phase-to-phase loops are evaluated. If earth fault detection also occurs, the phase-to-earth loops are also evaluated.

Double earth faults in non-earthed systems

In isolated or resonant-earthed networks a single-phase earth fault does not result in a short circuit current flow. There is only a displacement of the voltage triangle (Figure 2-47). For the system operation this state is no immediate danger. The distance protection must not pick up in this case even though the voltage of the phase with the earth fault is equal to zero in the whole galvanically connected system. Any load currents will result in an impedance value that is equal to zero. Accordingly, a single-phase pickup phase-to-earth is prevented without earth current pickup in the 7SD5.

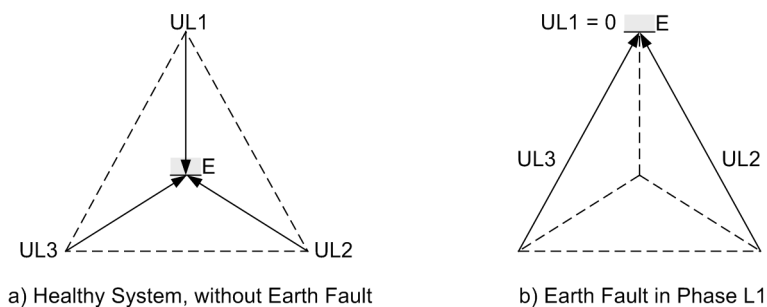


Figure 2-47 Earth fault in non-earthed neutral system

With the occurrence of earth faults — especially in large resonant-earthed systems — large fault inception transient currents can appear that may evoke the earth current pickup. In case of an overcurrent pick-up there may also be a phase current pickup. The 7SD5 features special measures against such spurious pickups.

With the occurrence of a double earth fault in isolated or resonant-earthed systems it is sufficient to switch off one of the faults. The second fault may remain in the system as a simple earth fault. Which of the faults is switched off depends on the double earth fault preference which is set the same in the whole galvanically-connected system. With 7SD5 the following double earth fault preferences (Parameter 1520 **PHASE PREF . 2phe**) can be selected:

Acyclic L3 before L1 before L2	L3 (L1) ACYCLIC
Acyclic L1 before L3 before L2	L1 (L3) ACYCLIC
Acyclic L2 before L1 before L3	L2 (L1) ACYCLIC
Acyclic L1 before L2 before L3	L1 (L2) ACYCLIC
Acyclic L3 before L2 before L1	L3 (L2) ACYCLIC
Acyclic L2 before L3 before L1	L2 (L3) ACYCLIC
Cyclic L3 before L1 before L2 before L3	L3 (L1) CYCLIC
Cyclic L1 before L3 before L2 before L1	L1 (L3) CYCLIC
All loops are measured	All loops

In the eight preference options one earth fault is switched off according to preference scheme; the second fault remains in the system as a simple earth fault.

The 7SD5 also enables the user to switch off both fault locations of a double earth fault. Set the double earth fault preference to **All loops**.

Table 2-10 lists all measured values used for the distance measuring in isolated or resonant-earthed systems.

Table 2-10 Evaluation of the Measuring Loops for Multi-phase Pickup in the Non-earthed Network

Loop pickup	Evaluated loop(s)	Setting of parameter 1520
L1-E, L2-E, (L1-L2) L2-E, L3-E, (L2-L3) L1-E, L3-E, (L3-L1)	L1-E L3-E L3-E	PHASE PREF.2phe = L3 (L1) ACYCLIC
L1-E, L2-E, (L1-L2) L2-E, L3-E, (L2-L3) L1-E, L3-E, (L3-L1)	L1-E L3-E L1-E	PHASE PREF.2phe = L1 (L3) ACYCLIC
L1-E, L2-E, (L1-L2) L2-E, L3-E, (L2-L3) L1-E, L3-E, (L3-L1)	L2-E L2-E L1-E	PHASE PREF.2phe = L2 (L1) ACYCLIC

Loop pickup	Evaluated loop(s)	Setting of parameter 1520
L1-E, L2-E, (L1-L2) L2-E, L3-E, (L2-L3) L1-E, L3-E, (L3-L1)	L1-E L2-E L1-E	PHASE PREF.2phe = L1 (L2) ACYCLIC
L1-E, L2-E, (L1-L2) L2-E, L3-E, (L2-L3) L1-E, L3-E, (L3-L1)	L2-E L3-E L3-E	PHASE PREF.2phe = L3 (L2) ACYCLIC
L1-E, L2-E, (L1-L2) L2-E, L3-E, (L2-L3) L1-E, L3-E, (L3-L1)	L2-E L2-E L3-E	PHASE PREF.2phe = L2 (L3) ACYCLIC
L1-E, L2-E, (L1-L2) L2-E, L3-E, (L2-L3) L1-E, L3-E, (L3-L1)	L1-E L2-E L3-E	PHASE PREF.2phe = L3 (L1) CYCLIC
L1-E, L2-E, (L1-L2) L2-E, L3-E, (L2-L3) L1-E, L3-E, (L3-L1)	L2-E L3-E L1-E	PHASE PREF.2phe = L1 (L3) CYCLIC
L1-E, L2-E, (L1-L2) L2-E, L3-E, (L2-L3) L1-E, L3-E, (L3-L1)	L1-E, L2-E L2-E, L3-E L3-E; L1-E	PHASE PREF.2phe = All loops

Parallel line measured value correction (optional)

During earth faults on parallel lines, the impedance values calculated by means of the loop equations are influenced by the coupling of the earth impedance of the two conductor systems (Figure 2-48). This causes measuring errors in the result of the impedance computation unless special measures are taken. A parallel line compensation may therefore be activated. In this manner the earth current of the parallel line is taken into consideration by the line equation and thereby allows for compensation of the coupling influence. The earth current of the parallel line must be connected to the device for this purpose. The loop equation is then as shown below, refer also to Figure 2-45.

$$I_{L3} \cdot Z_L - I_E \cdot Z_E - I_{EP} \cdot Z_M = U_{L3-E}$$

$$I_{L3} \cdot (R_L + jX_L) - I_E \cdot \left(\frac{R_E}{R_L} \cdot R_L + j \left(\frac{X_E}{X_L} \right) \cdot X_L \right) - I_{EP} \cdot \left(\frac{R_M}{R_L} \cdot R_L + j \left(\frac{X_M}{X_L} \right) \cdot X_L \right) = U_{L3-E}$$

and I_{EP} is the earth current of the parallel line and the ratios R_M/R_L and X_M/X_L are constant line parameters resulting from the geometry of the double circuit and the nature of the ground below the line. These line parameters are input to the device — along with all the other line data — during the parameterisation.

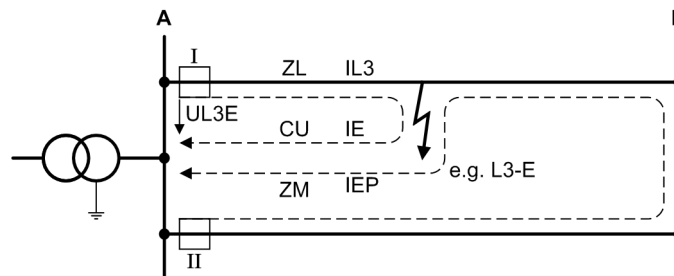


Figure 2-48 Earth fault on a double circuit line

Without parallel line compensation, the earth current on the parallel line will in most cases cause the reach threshold of the distance protection to be shortened (under-

The parallel line compensation only applies to faults on the protected feeder. For faults on the parallel line, the compensation may not be carried out, as this would cause severe overreach. The relay located in position II in Figure 2-48 must therefore not be compensated.

There are two ways of blocking Z1. If the device is operated in differential protection mode, zone Z1 can be blocked by setting a parameter (address 1533 **Z1 blkd by diff**). Another way of blocking the zone is to set a binary input (No. 3610 „>BLOCK Z1-Trip“).





Note

When switching onto a three-pole fault with the MHO characteristic, there will be no voltage in the memory or unfaulted loop voltage available. To ensure fault clearance when switching onto three-pole close-up faults, please make sure that in conjunction with the configured MHO characteristic the instantaneous tripping function is always enabled.

2.5.1.4 Setting Notes

At address 1501 **FCT Distance** the distance protection function can be switched **ON** or **OFF**.

Minimum current

The minimum current for fault detection **Minimum Iph>** (address 1502) in case of impedance pickup is set somewhat (approx. 10 %) below the minimum short-circuit current that may occur. For the other pickup modes it is set at address 1911.

Earth fault detection

In systems with earthed starpoint, the setting **3IO> Threshold** (address 1503) is set somewhat below the minimum expected earth fault current. $3I_0$ is defined as the sum of the phase currents $|I_{L1} + I_{L2} + I_{L3}|$, which equals the starpoint current of the set of current transformers. In non-earthed systems the setting value is recommended to be below the earth current value for double earth faults.

The preset value **3IO> / Iphmax** = 0,10 (address 1507) usually is recommended for the slope of the 3IO characteristic. This setting can only be changed in DIGSI at **Display Additional Settings**.

Addresses 1504 and 1509 are only relevant for **earthed** power systems. In non-earthed systems they are not accessible.

When setting **3U0> Threshold** (address 1504), care must be taken that operational asymmetries do not cause a pickup. $3U_0$ is defined as the sum of the phase-to-earth voltages $|U_{L1-E} + U_{L2-E} + U_{L3-E}|$. If the U_0 criterion is not required, address 1504 is set to ∞ .

In earthed power systems the earth fault detection can be complemented by a zero sequence voltage detection function. You can determine whether an earth fault is detected when a zero sequence current or a zero sequence voltage threshold is exceeded or when both criteria are met. **3IO> OR 3U0>** (default setting) applies at address 1509 **E/F recognition** if only one of the two criteria is valid. Select **3IO> AND 3U0>** to activate both criteria for earth-fault detection. This setting can only be changed in DIGSI at **Display Additional Settings**. If you want to detect only the earth current, set **3IO> OR 3U0>** and also **3U0> Threshold** (address 1504) to ∞ .



Note

Under no circumstances set address 1504 **3U0> Threshold** to ∞ , if you have set address 1509 **E/F recognition** = **3IO> AND 3U0>**, or earth-fault detection will no longer be possible.

In isolated-neutral systems or resonant-earthed systems, earth fault detection for double earth faults is equally possible using the zero-sequence voltage. The threshold value can be set at address 1505 **3UO> COMP/ISOL.**. If the U0-criterion for double earth faults is not used, set this value to ∞ .

Earth fault detection for double earth faults using the U0 criterion is only possible for asymmetrical, phase-to-phase voltages. Use address 1523 **Uph-ph unba1.** to specify how large the asymmetries can become in case of a load current resulting from a single earth fault.

If the earth fault detection by the I0 criterion threatens to pick up due to fault inception transients following the occurrence of a single earth fault, the detection can be delayed by means of a parameter **T3IO 1PHAS** (address 1218).

Please note that the parameter **T3IO 1PHAS** is also used by the differential protection function. The setting that you make here affects the differential protection function as well (see also Section 2.3.2 under margin heading „Delay Times“).

Application with series-compensated lines

In applications for, or in the proximity of, series-compensated lines (lines with series capacitors) address 1508 **SER-COMP.** is set to **YES**, to ensure that the direction determination operates correctly in all cases. The influence of the series capacitors on the direction determination is described in Section 2.5.2 under margin heading „Direction Determination in Case of Series-compensated Lines“.

Start of Delay Times

As was mentioned in the description of the measuring technique, each distance zone generates an output signal which is associated with the zone and the affected phase. The zone logic combines these zone fault detections with possible further internal and external signals. The delay times for the distance zones can be started either all together on general fault detection by the distance protection function, or individually at the moment the fault enters the respective distance zone. Parameter **Start Timers** (address 1510) is set by default to **on Dis. Pickup**. This setting ensures that all delay times continue to run together even if the type of fault or the selected measuring loop changes, e.g. because an intermediate infeed is switched off. This is also the preferred setting in the case of other distance protection relays in the power system working with this start timing. Where grading of the delay times is especially important, for instance if the fault location shifts from zone Z3 to zone Z2, the setting **on Zone Pickup** should be chosen.

Angle of inclination of the tripping characteristics

The shape of the tripping characteristic is among other factors influenced by the inclination angle **Distance Angle** (address 1511). Details about the tripping characteristics can be found in Section 2.5.2 and 2.5.3). Usually, the line angle is set here, i.e. the same value as in address 1105 **Line Angle** (Section 2.1.4.1). Irrespective of the line angle it is, however, possible to select a different inclination angle of the tripping characteristic.

Parallel line measured value correction (optional)

The mutual coupling between the two lines of a double-circuit configuration is only relevant to the 7SD5 when it is applied on a double-circuit line and when it is intended to implement parallel line compensation. A prerequisite is that the earth current of the parallel line is connected to the I_4 measuring input of the device and this is entered in the configuration settings. In this case, address 1515 **Paral.Line Comp** has to be set to **YES** (default setting).

The coupling factors were already set as part of the general protection data (Section 2.1.4.1), as was the reach of the parallel line compensation.

Double earth faults in effectively earthed systems

The loop selection for double earth faults is set at address 1521 **2Ph-E faults** (Phase-Phase-Earth fault detection). This parameter can only be altered in DIGSI at **Display Additional Settings**. In most cases, **Block leading Ø** (blocking of the leading phase, default setting) is favourable because the leading phase-earth loop tends to overreach, especially in conjunction with large earth fault resistance. In certain cases (fault resistance phase-phase larger than phase-earth) the setting **Block lagging Ø** (blocking of the lagging phase) may be more favourable. The evaluation of all affected loops with the setting **All loops** allows a maximum degree of redundancy. It is also possible to evaluate **Ø-Ø loops only** as a loop. This ensures the highest accuracy for 2-phase-to-earth faults. Finally it is only possible to declare the phase-to-earth loops as valid (setting **Ø-E loops only**).

Double earth faults in non-earthed systems

In isolated or resonant-earthed systems it must be guaranteed that the preference for double earth faults in whole galvanically-connected systems is consistent. The double earth fault preference is set in address 1520 **PHASE PREF. 2phe**.

7SD5 enables the user to detect all base points of a multiple earth fault. **PHASE PREF. 2phe = All loops** means that each earth fault point on a protected line is switched off independent from the preference. It can also be combined with a different preference. For a transformer feeder, for example, any base point can be switched off following occurrence of a double earth fault, whereas **L1 (L3) ACYCLIC** is consistently valid for the remainder of the system.

If the earth fault detection threatens to pick up due to fault inception transients following the occurrence of a single earth fault, the detection can be delayed via parameter **T3IO 1PHAS** (address 1218). Usually the presetting (0.04 s) is sufficient. For large resonant-earthed systems the time delay should be increased. Set parameter **T3IO 1PHAS** to ∞ if the earth current threshold can also be exceeded during steady-state conditions. Then, even with high earth current, no single-phase pickup is possible anymore. Double earth faults are, however, detected correctly and evaluated according to the preference mode.

Switching onto a fault

To determine the reaction of the distance protection during closure of the circuit breaker onto a dead fault, the parameter in address 1532 **SOTF zone** is used. The setting **Inactive** specifies that there is no special reaction, i.e. all distance stages operate according to their set zone parameters. The setting **Zone Z1B** causes all faults inside overreaching zone Z1B (in the direction specified for these zones) to be cleared without delay following closure of the circuit breaker. If **Z1B undirect.** is set, zone Z1B is relevant, but it acts in both directions, regardless of the operating direction set in address 1651 or 1751 **Op. mode Z1B**. The setting **PICKUP** implies that the non-delayed tripping following line energization is activated for all recognized faults in any zone (i.e. with general fault detection of the distance protection).

Blocking of Zone Z1

When the differential protection is active, zone Z1 can be blocked by setting 1533 **Z1 blkd by diff** to **YES**; this means that there will be no measurement and no pickup in Z1 as long as the differential protection is effective (No. 3120 „Diff active“). Zone Z1 will be reactivated immediately when the differential protection is ineffective, e.g. due to a communication failure. With address 1533 **Z1 blkd by diff** set to **NO**, zone Z1 operates independently of the differential protection.

Zone Z1 can also be blocked by the binary input 3610 „>BLOCK Z1-Trip“. This binary input allows, for instance, to specify further blocking conditions relating to the interaction with the differential protection using CFC. The effect of the binary input does not depend on the status of the differential protection.

Load range (only for impedance pickup)

When using the impedance pickup function, or with the variants 7SD5**5*-*E** and 7SD5**5*-*H*, there may be a risk of encroachment of the load impedance into the tripping characteristic of the distance protection on long heavily loaded lines. To exclude the risk of unwanted fault detection by the distance protection during heavy load flow, a load trapezoid characteristic may be set for tripping characteristics with large R-reaches, which excludes such unwanted fault detection by overload. This load trapezoid does not apply for the other pickup modes since the trip polygons are only released after pickup and the pickup function fulfills the task of distinguishing clearly between load operation and short-circuit. This load area is considered in the description of the tripping characteristics 2.5.2 and 2.5.3).

The R-value **R load (Ø-E)** (address 1541) refers to the phase-earth loops, **R load (Ø-Ø)** (address 1543) to the phase-phase loops. The values are set somewhat (approx. 10 %) below the minimum expected load impedance. The minimum load impedance results when the maximum load current and minimum operating voltage exist.

Calculation Example:

110 kV overhead line 150 mm² with the following data:

maximum transmittable power

$$P_{\max} = 100 \text{ MVA corresponds to}$$

$$I_{\max} = 525 \text{ A}$$

minimum operating voltage

$$U_{\min} = 0.9 U_N$$

$$\text{Current Transformer} = 600 \text{ A} / 5 \text{ A}$$

$$\text{Voltage Transformer} = 110 \text{ kV} / 0.1 \text{ kV}$$

The resulting minimum load impedance is therefore:

$$R_{L \text{ prim}} = \frac{U_{\min}}{\sqrt{3} \cdot I_{L \text{ max}}} = \frac{0.9 \cdot 110 \text{ kV}}{\sqrt{3} \cdot 525 \text{ A}} = 108.87 \text{ } \Omega$$

This value can be entered as a primary value when parameterizing with a PC and DIGSI. The conversion to secondary values is

$$R_{L \text{ sec}} = \frac{N_{CT}}{N_{VT}} \cdot R_{L \text{ prim}} = \frac{600 \text{ A} / 5 \text{ A}}{110 \text{ kV} / 0.1 \text{ kV}} \cdot 108.87 \text{ } \Omega = 11.88 \text{ } \Omega$$

when applying a security margin of 10 % the following is set:

$$\text{primary: } \mathbf{R \text{ load } (\text{Ø-Ø})} = 97.98 \text{ } \Omega \text{ or}$$

$$\text{secondary: } \mathbf{R \text{ load } (\text{Ø-Ø})} = 10.69 \text{ } \Omega.$$

The spread angle of the load trapezoid $\varphi \text{ load } (\text{Ø-E})$ (address 1542) and $\varphi \text{ load } (\text{Ø-Ø})$ (address 1544) must be greater (approx. 5°) than the maximum arising load angle (corresponding to the minimum power factor $\cos\varphi$).

Calculation Example:

Minimum power factor

$$\cos \varphi_{\min} = 0.63$$

$$\varphi_{\max} = 51^\circ$$

$$\text{Setting value } \varphi \text{ load } (\text{Ø-Ø}) = \varphi_{\max} + 5^\circ = 56^\circ.$$

Overcurrent, U/I and U/I_φ pickup

Depending on the ordered version, the 7SD5 distance protection, if configured as the main or backup protection function, features a range of fault detection modes, from which the appropriate type for the particular system conditions can be selected (7SD5***-*****-*D** and 7SD5***-*****-*G**).

If the device does not feature an explicit pickup function or if during configuration of the protection functions (Section 2.1.1.3) you have selected as pickup type **Dis**. **PICKUP = Z< (quadri lat.)** (address 117), the mentioned settings are not relevant and cannot be accessed.

Available pickup modes are described in Section 2.5.1 in detail. If the device has several alternative pickup modes, one option has been selected when configuring in address 117. Below, parameters are given and discussed for all pickup modes. With the following settings, only those parameters will appear that apply for the selected pickup mode.

With the U/I(φ) pickup mode you can determine the voltage measurement and, if applicable, the phase-angle measurement for phase-to-earth measuring units, and for phase-to-phase measuring loops separately. Address 1901 **PROGAM U/I** indicates which loop voltages apply to phase-to-earth and which to phase-to-phase:

In networks with **earthed** starpoint, a selection using U_{Ph-E} with earth faults and U_{Ph-Ph} with non-earthed faults is often preferred (address 1901 **PROGAM U/I = LE:Uphe / LL:Uphe**). This mode has a maximum sensitivity for all fault types; however, it requires the unambiguous detection of earth faults via the earth-fault detection function (also see Section 2.5.1). Otherwise, a mode using U_{Ph-E} for all fault types may be useful (address 1901 **PROGAM U/I = LE:Uphe / LL:Uphe**), accepting lesser sensitivity for earth-free faults, since the overcurrent stage $I_{ph}>>$ usually picks up there.

In networks with **low-resistance earthed** starpoint, the U/I(φ) pickup should only come into effect on earth faults as phase-to-phase faults are detected by the overcurrent pickup. In this case it is reasonable to set address 1901 **PROGAM U/I = LE:Uphe / LL:I>>**.

In **isolated** or **resonant-earthed** power systems it is possible to control the U/I(φ) pickup using phase-to-phase voltages only (address 1901 **PROGAM U/I = LE:Uphe / LL:Uphe**). Naturally, this excludes pickup by single earth faults, however, it also does not allow a correct double earth fault detection, therefore it is suitable only for small isolated cable networks.

Two further general settings refer to the final times, i.e. the tripping times in a worst case scenario for faults outside all distance zones. They should be set above the delay times for distance zones providing a final back-up option (see also configuration of the function settings for the distance zones in Section 2.5.2.2).

The directional final time **DELAY FORW. PU** (address 1902) only works with short-circuits in forward (line) direction if there is no impedance within a distance zone after pickup.

The non-directional final time **DEL. NON-DIR PU** (address 1903) works for all faults if there is no impedance within a distance zone after pickup.

Overcurrent Pickup

The maximum operational load current that can occur is crucial for the setting of **overcurrent pick-up**. Pickup due to overload must be ruled out! Therefore the pickup value **I_{ph>>}** (address 1910) must be set above the maximum (over-)load current that is expected (approx. 1.2 times). In this case, it must be ensured that the minimum fault current is above this value. If this is not the case, U/I pickup is required.

Calculation Example:

Maximum operational current (incl. overload) is 680 A, for current transformers 600 A/5 A, minimum short circuit is 1200 A. The following settings are made:

$$I_{ph>>} = I_{L\max} \cdot 1.2 = 680 \text{ A} \cdot 1.2 = 816 \text{ A}$$

This value is sufficiently below the minimum short-circuit current of 1200 A. When configuring via PC and DIGSI, this value can be entered directly as primary value. The conversion to secondary values is

$$I_{ph>>} = 816 \text{ A} \cdot \frac{5 \text{ A}}{600 \text{ A}} = 6.8 \text{ A}$$

The condition for minimum short-circuit current also applies to earth faults (in the earthed network) or for double earth faults as long as overcurrent pickup is solely used.

U/I(φ) pickup

If U/I pickup is required because the minimum short-circuit current is below the maximum load current (incl. a safety factor of 1.2), the condition for maximum load current in respect to **I_{ph>>}** still has to be observed. Then, the minimum current limit I_{ph>} (address 1911) is set to below the minimum short-circuit current (approx. 10 %). This also applies to the phase currents during earth faults or double earth faults.

At address 1930 **1ph FAULTS** you can select whether a phase-to-earth loop is selected in an earthed network for single-phase pickup without earth current (I_E release). The setting **1ph FAULTS = PHASE - EARTH** is useful if no or only little earth current can flow via the measuring point in the event of earth faults. With **1ph FAULTS = PHASE - PHASEONLY** the leading phase-phase loop is measured in the event of a single-phase pickup in the earthed network. This parameter can only be altered with DIGSI under **Additional Settings**.

The meaning of the settings is illustrated in Figure 2-50. **I_{ph>}** (section a, address 1911) is the minimum current as described in the previous section, **I_{ph>>}** (section c) is the overcurrent pickup.

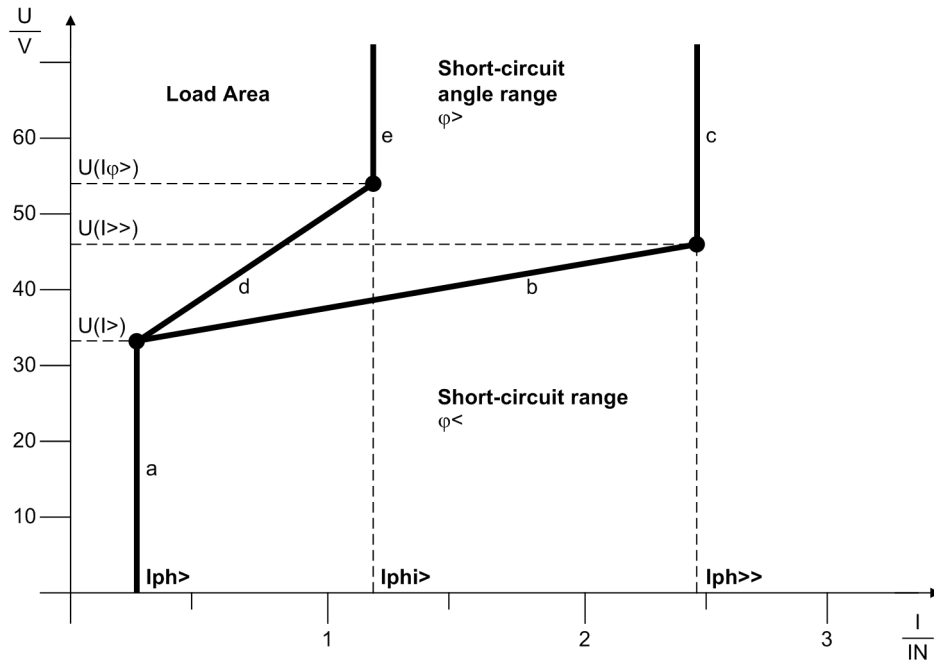


Figure 2-50 Parameters of the U/I/φ pickup

Angular dependence is not needed in the majority of cases. Then the voltage-dependent section b is valid which results in the characteristic a-b-c. When controlling with Uphe the voltages for phase-to-earth current are inserted in address 1912 **Uphe - e (I>>)** and 1913 **Uphe - e (I>)** for the voltage-dependent section b. When controlling with Uphe the voltages for phase-to-phase are set in address 1914 **Uphe - ph (I>>)** and 1915 **Uphe - ph (I>)**. The relevant settings are determined according to the pickup mode (see above).

The characteristic has to be set such that it is just below the minimum expected voltage at the maximum expected load current. If in doubt, check the pickup conditions in accordance with the U/I characteristic.

Angular dependence

If a distinction between short-circuit and load operation is not always possible using the U/I characteristic which is independent of the phase angle, the angular-dependent sections d - e can additionally be used. This is required for long lines or sections of lines with intermediate infeed in combination with small source impedances. Then the local measured voltage will only drop to a small extent in the event of a short circuit at the line end or in the backup range of the distance protection so that the phase angle between current and voltage is required as an additional criterion for fault detection.

The parameters **Iphi>** (address 1916) and **Uphe - e (Iphi>)** (address 1917) or **Uphe - ph (Iphi>)** (address 1918) determine the characteristic in the range of large angles κ , i.e. in the short-circuit angular range. The threshold angles themselves, which define the short-circuit angle range φ_K , are set in address 1920 $\varphi>$ and 1921 $\varphi<$. The short-circuit angle range φ_K is between these two angles. Here, too, the required voltage settings according to the pickup mode (see above) are relevant.

The characteristic for the load angle range has to be set in a way that is just below the minimum expected operating voltage at the maximum expected load current. In the range of the short-circuit angles φ_{SC} it must be ensured that load current may not cause pickup in this area. If reactive power has to be transferred via this line, it must be ensured that the maximum reactive current at minimum operating voltage is not

within the pickup range, i.e. the short-circuit angle range φ_{SC} . If in doubt, check the pickup conditions in accordance with the $U/I/\varphi$ characteristic. An arithmetic short-circuit calculation is recommended for extensive networks.

The lower threshold angle $\varphi>$ (address 1920) should be between the load angle and the short-circuit angle. Therefore it must be set smaller than the line angle $\varphi_L = \arctan(X_L/R_L)$ (approx. 10° to 20°). Subsequently, you should check that the angle is not exceeded during load conditions. If this is the case, for instance because the reactive power has to be transferred via this line, it must be ensured that the parameters of the voltage-dependent segment d, that is **Iphi>** and **Uph-e (Iphi>)** or **Uph-ph (Iphi>)** rule out a pickup as the result of reactive power (see above).

The upper threshold angle $\varphi<$ (address 1921) is not critical. 100° to 120° should be sufficient in all cases.

Angular dependence, i.e. increasing the sensitivity for a large short-circuit angle with section d and e in the characteristic, can be limited to the forward direction (line direction) using address 1919 **EFFECT φ** . In this case, **EFFECT φ** is set to **Forward**. Otherwise **EFFECT φ** = **forward&reverse**. This parameter can only be altered in DIGSI at **Display Additional Settings**.

2.5.1.5 Settings

Addresses which have an appended "A" can only be changed with DIGSI, under Additional Settings.

The table indicates region-specific presettings. Column C (configuration) indicates the corresponding secondary nominal current of the current transformer.

Addr.	Parameter	C	Setting Options	Default Setting	Comments
1218	T3I0 1PHAS		0.00 .. 0.50 sec; ∞	0.04 sec	Delay 1ph-faults (comp/isol. star-point)
1501	FCT Distance		ON OFF	ON	Distance protection
1502	Minimum Iph>	1A	0.05 .. 4.00 A	0.10 A	Phase Current threshold for dist. meas.
		5A	0.25 .. 20.00 A	0.50 A	
1503	3I0> Threshold	1A	0.05 .. 4.00 A	0.10 A	3I0 threshold for neutral current pickup
		5A	0.25 .. 20.00 A	0.50 A	
1504	3U0> Threshold		1 .. 100 V; ∞	5 V	3U0 threshold zero seq. voltage pickup
1505	3U0> COMP/ISOL.		10 .. 200 V; ∞	40 V	3U0> pickup (comp/ isol. star-point)
1507A	3I0>/ Iphmax		0.05 .. 0.30	0.10	3I0>-pickup-stabilisation (3I0> /Iphmax)
1508	SER-COMP.		NO YES	NO	Series compensated line
1509A	E/F recognition		3I0> OR 3U0> 3I0> AND 3U0>	3I0> OR 3U0>	criterion of earth fault recognition
1510	Start Timers		on Dis. Pickup on Zone Pickup	on Dis. Pickup	Condition for zone timer start
1511	Distance Angle		30 .. 90 °	85 °	Angle of inclination, distance charact.

Addr.	Parameter	C	Setting Options	Default Setting	Comments
1515	Paral.Line Comp		NO YES	YES	Mutual coupling parall.line compensation
1520	PHASE PREF.2phe		L3 (L1) ACYCLIC L1 (L3) ACYCLIC L2 (L1) ACYCLIC L1 (L2) ACYCLIC L3 (L2) ACYCLIC L2 (L3) ACYCLIC L3 (L1) CYCLIC L1 (L3) CYCLIC All loops	L3 (L1) ACYCLIC	Phase preference for 2ph-e faults
1521A	2Ph-E faults		Block leading Ø Block lagging Ø All loops Ø-Ø loops only Ø-E loops only	Block leading Ø	Loop selection with 2Ph-E faults
1523	Uph-ph unbal.		5 .. 50 %	25 %	Max Uph-ph unbal. for 1ph Flt. detection
1532	SOTF zone		PICKUP Zone Z1B Inactive Z1B undirect.	Inactive	Instantaneous trip after SwitchOnToFault
1533	Z1 blkd by diff		YES NO	YES	Zone Z1 blocked by diff. active
1541	R load (Ø-E)	1A	0.100 .. 600.000 Ω; ∞	∞ Ω	R load, minimum Load Impedance (ph-e)
		5A	0.020 .. 120.000 Ω; ∞	∞ Ω	
1542	φ load (Ø-E)		20 .. 60 °	45 °	PHI load, maximum Load Angle (ph-e)
1543	R load (Ø-Ø)	1A	0.100 .. 600.000 Ω; ∞	∞ Ω	R load, minimum Load Impedance (ph-ph)
		5A	0.020 .. 120.000 Ω; ∞	∞ Ω	
1544	φ load (Ø-Ø)		20 .. 60 °	45 °	PHI load, maximum Load Angle (ph-ph)
1605	T1-1phase		0.00 .. 30.00 sec; ∞	0.00 sec	T1-1phase, delay for single phase faults
1606	T1-multi-phase		0.00 .. 30.00 sec; ∞	0.00 sec	T1multi-ph, delay for multi phase faults
1615	T2-1phase		0.00 .. 30.00 sec; ∞	0.30 sec	T2-1phase, delay for single phase faults
1616	T2-multi-phase		0.00 .. 30.00 sec; ∞	0.30 sec	T2multi-ph, delay for multi phase faults
1617A	Trip 1pole Z2		NO YES	NO	Single pole trip for faults in Z2
1625	T3 DELAY		0.00 .. 30.00 sec; ∞	0.60 sec	T3 delay
1635	T4 DELAY		0.00 .. 30.00 sec; ∞	0.90 sec	T4 delay
1645	T5 DELAY		0.00 .. 30.00 sec; ∞	0.90 sec	T5 delay
1655	T1B-1phase		0.00 .. 30.00 sec; ∞	0.00 sec	T1B-1phase, delay for single ph. faults

Addr.	Parameter	C	Setting Options	Default Setting	Comments
1656	T1B-multi-phase		0.00 .. 30.00 sec; ∞	0.00 sec	T1B-multi-ph, delay for multi ph. faults
1657	1st AR -> Z1B		NO YES	NO	Z1B enabled before 1st AR (int. or ext.)
1901	PROGAM U/I		LE:Uphe/LL:Uphp LE:Uphp/LL:Uphp LE:Uphe/LL:Uphe LE:Uphe/LL:I>>	LE:Uphe/LL:Uphp	Pickup program U/I
1902	DELAY FORW. PU		0.00 .. 30.00 sec; ∞	1.20 sec	Trip delay for Forward-PICKUP
1903	DEL. NON-DIR PU		0.00 .. 30.00 sec; ∞	1.20 sec	Trip delay for non-directional PICKUP
1910	Iph>>	1A	0.25 .. 10.00 A	1.80 A	Iph>> Pickup (overcurrent)
		5A	1.25 .. 50.00 A	9.00 A	
1911	Iph>	1A	0.10 .. 4.00 A	0.20 A	Iph> Pickup (minimum current)
		5A	0.50 .. 20.00 A	1.00 A	
1912	Uph-e (I>>)		20 .. 70 V	48 V	Undervoltage (ph-e) at Iph>>
1913	Uph-e (I>)		20 .. 70 V	48 V	Undervoltage (ph-e) at Iph>
1914	Uph-ph (I>>)		40 .. 130 V	80 V	Undervoltage (ph-ph) at Iph>>
1915	Uph-ph (I>)		40 .. 130 V	80 V	Undervoltage (ph-ph) at Iph>
1916	Iphi>	1A	0.10 .. 8.00 A	0.50 A	Iphi> Pickup (minimum current at phi>)
		5A	0.50 .. 40.00 A	2.50 A	
1917	Uph-e (Iphi>)		20 .. 70 V	48 V	Undervoltage (ph-e) at Iphi>
1918	Uph-ph (Iphi>)		40 .. 130 V	80 V	Undervoltage (ph-ph) at Iphi>
1919A	EFFECT φ		forward&reverse Forward	forward&reverse	Effective direction of phi-pickup
1920	$\varphi>$		30 .. 60 °	50 °	PHI> pickup (lower set-point)
1921	$\varphi<$		90 .. 120 °	110 °	PHI< pickup (upper set-point)
1930A	1ph FAULTS		PHASE-EARTH PHASE-PHASEONLY	PHASE-EARTH	1ph-pickup loop selection (PU w/o earth)

2.5.1.6 Information List

No.	Information	Type of Information	Comments
3603	>BLOCK Distance	SP	>BLOCK Distance protection
3610	>BLOCK Z1-Trip	SP	>BLOCK Z1-Trip

No.	Information	Type of Information	Comments
3611	>ENABLE Z1B	SP	>ENABLE Z1B (with setted Time Delay)
3613	>ENABLE Z1Binst	SP	>ENABLE Z1B instantaneous (w/o T-Delay)
3617	>BLOCK Z4-Trip	SP	>BLOCK Z4-Trip
3618	>BLOCK Z5-Trip	SP	>BLOCK Z5-Trip
3619	>BLOCK Z4 Ph-E	SP	>BLOCK Z4 for ph-e loops
3620	>BLOCK Z5 Ph-E	SP	>BLOCK Z5 for ph-e loops
3651	Dist. OFF	OUT	Distance is switched off
3652	Dist. BLOCK	OUT	Distance is BLOCKED
3653	Dist. ACTIVE	OUT	Distance is ACTIVE
3654	Dis.ErrorK0(Z1)	OUT	Setting error K0(Z1) or Angle K0(Z1)
3655	DisErrorK0(>Z1)	OUT	Setting error K0(>Z1) or Angle K0(>Z1)
3671	Dis. PICKUP	OUT	Distance PICKED UP
3672	Dis.Pickup L1	OUT	Distance PICKUP L1
3673	Dis.Pickup L2	OUT	Distance PICKUP L2
3674	Dis.Pickup L3	OUT	Distance PICKUP L3
3675	Dis.Pickup E	OUT	Distance PICKUP Earth
3681	Dis.Pickup 1pL1	OUT	Distance Pickup Phase L1 (only)
3682	Dis.Pickup L1E	OUT	Distance Pickup L1E
3683	Dis.Pickup 1pL2	OUT	Distance Pickup Phase L2 (only)
3684	Dis.Pickup L2E	OUT	Distance Pickup L2E
3685	Dis.Pickup L12	OUT	Distance Pickup L12
3686	Dis.Pickup L12E	OUT	Distance Pickup L12E
3687	Dis.Pickup 1pL3	OUT	Distance Pickup Phase L3 (only)
3688	Dis.Pickup L3E	OUT	Distance Pickup L3E
3689	Dis.Pickup L31	OUT	Distance Pickup L31
3690	Dis.Pickup L31E	OUT	Distance Pickup L31E
3691	Dis.Pickup L23	OUT	Distance Pickup L23
3692	Dis.Pickup L23E	OUT	Distance Pickup L23E
3693	Dis.Pickup L123	OUT	Distance Pickup L123
3694	Dis.Pickup123E	OUT	Distance Pickup123E
3695	Dis Pickup φ L1	OUT	Dist.: Phi phase L1 Pickup
3696	Dis Pickup φ L2	OUT	Dist.: Phi phase L2 Pickup
3697	Dis Pickup φ L3	OUT	Dist.: Phi phase L3 Pickup
3701	Dis.Loop L1-E f	OUT	Distance Loop L1E selected forward
3702	Dis.Loop L2-E f	OUT	Distance Loop L2E selected forward
3703	Dis.Loop L3-E f	OUT	Distance Loop L3E selected forward
3704	Dis.Loop L1-2 f	OUT	Distance Loop L12 selected forward
3705	Dis.Loop L2-3 f	OUT	Distance Loop L23 selected forward
3706	Dis.Loop L3-1 f	OUT	Distance Loop L31 selected forward
3707	Dis.Loop L1-E r	OUT	Distance Loop L1E selected reverse
3708	Dis.Loop L2-E r	OUT	Distance Loop L2E selected reverse
3709	Dis.Loop L3-E r	OUT	Distance Loop L3E selected reverse
3710	Dis.Loop L1-2 r	OUT	Distance Loop L12 selected reverse
3711	Dis.Loop L2-3 r	OUT	Distance Loop L23 selected reverse
3712	Dis.Loop L3-1 r	OUT	Distance Loop L31 selected reverse
3713	Dis.Loop L1E<->	OUT	Distance Loop L1E selected non-direct.

No.	Information	Type of Information	Comments
3714	Dis. Loop L2E<->	OUT	Distance Loop L2E selected non-direct.
3715	Dis. Loop L3E<->	OUT	Distance Loop L3E selected non-direct.
3716	Dis. Loop L12<->	OUT	Distance Loop L12 selected non-direct.
3717	Dis. Loop L23<->	OUT	Distance Loop L23 selected non-direct.
3718	Dis. Loop L31<->	OUT	Distance Loop L31 selected non-direct.
3719	Dis. forward	OUT	Distance Pickup FORWARD
3720	Dis. reverse	OUT	Distance Pickup REVERSE
3741	Dis. Z1 L1E	OUT	Distance Pickup Z1, Loop L1E
3742	Dis. Z1 L2E	OUT	Distance Pickup Z1, Loop L2E
3743	Dis. Z1 L3E	OUT	Distance Pickup Z1, Loop L3E
3744	Dis. Z1 L12	OUT	Distance Pickup Z1, Loop L12
3745	Dis. Z1 L23	OUT	Distance Pickup Z1, Loop L23
3746	Dis. Z1 L31	OUT	Distance Pickup Z1, Loop L31
3747	Dis. Z1B L1E	OUT	Distance Pickup Z1B, Loop L1E
3748	Dis. Z1B L2E	OUT	Distance Pickup Z1B, Loop L2E
3749	Dis. Z1B L3E	OUT	Distance Pickup Z1B, Loop L3E
3750	Dis. Z1B L12	OUT	Distance Pickup Z1B, Loop L12
3751	Dis. Z1B L23	OUT	Distance Pickup Z1B, Loop L23
3752	Dis. Z1B L31	OUT	Distance Pickup Z1B, Loop L31
3755	Dis. Pickup Z2	OUT	Distance Pickup Z2
3758	Dis. Pickup Z3	OUT	Distance Pickup Z3
3759	Dis. Pickup Z4	OUT	Distance Pickup Z4
3760	Dis. Pickup Z5	OUT	Distance Pickup Z5
3771	Dis. Time Out T1	OUT	DistanceTime Out T1
3774	Dis. Time Out T2	OUT	DistanceTime Out T2
3777	Dis. Time Out T3	OUT	DistanceTime Out T3
3778	Dis. Time Out T4	OUT	DistanceTime Out T4
3779	Dis. Time Out T5	OUT	DistanceTime Out T5
3780	Dis. TimeOut T1B	OUT	DistanceTime Out T1B
3781	Dis. TimeOut Tfw	OUT	DistanceTime Out Forward PICKUP
3782	Dis. TimeOut Tnd	OUT	DistanceTime Out Non-directional PICKUP
3801	Dis. Gen. Trip	OUT	Distance protection: General trip
3802	Dis. Trip 1pL1	OUT	Distance TRIP command - Only Phase L1
3803	Dis. Trip 1pL2	OUT	Distance TRIP command - Only Phase L2
3804	Dis. Trip 1pL3	OUT	Distance TRIP command - Only Phase L3
3805	Dis. Trip 3p	OUT	Distance TRIP command Phases L123
3811	Dis. TripZ1/1p	OUT	Distance TRIP single-phase Z1
3813	Dis. TripZ1B1p	OUT	Distance TRIP single-phase Z1B
3816	Dis. TripZ2/1p	OUT	Distance TRIP single-phase Z2
3817	Dis. TripZ2/3p	OUT	Distance TRIP 3phase in Z2
3818	Dis. TripZ3/T3	OUT	Distance TRIP 3phase in Z3
3819	Dis. Trip FD->	OUT	Dist.: Trip by fault detection, forward
3820	Dis. Trip <->	OUT	Dist.: Trip by fault detec, rev/non-dir.
3821	Dis. TRIP 3p. Z4	OUT	Distance TRIP 3phase in Z4
3822	Dis. TRIP 3p. Z5	OUT	Distance TRIP 3phase in Z5
3823	DisTRIP3p. Z1sf	OUT	DisTRIP 3phase in Z1 with single-ph Flt.

No.	Information	Type of Information	Comments
3824	DisTRIP3p. Z1mf	OUT	DisTRIP 3phase in Z1 with multi-ph Flt.
3825	DisTRIP3p.Z1Bsf	OUT	DisTRIP 3phase in Z1B with single-ph Flt
3826	DisTRIP3p Z1Bmf	OUT	DisTRIP 3phase in Z1B with multi-ph Flt.
3850	DisTRIP Z1B Tel	OUT	DisTRIP Z1B with Teleprotection scheme

2.5.2 Distance Protection with Quadrilateral Characteristic (optional)

A tripping characteristic in the shape of a polygon is defined for each of the distance zones.

2.5.2.1 Method of Operation

Operating polygons

In total there are five independent and one additional controlled zone for each fault impedance loop. Figure 2-51 shows the shape of the polygons as example. The first zone is shaded and forward directional. The third zone is reverse directional.

In general, the polygon is defined by means of a parallelogram which intersects the axes with the values R and X as well as the tilt φ_{Dist} . A load trapezoid with the setting R_{Load} and φ_{Load} may be used to cut the area of the load impedance out of the polygon. The axial coordinates can be set individually for each zone; φ_{Dist} , R_{Load} and φ_{Load} are common for all zones. The parallelogram is symmetrical with respect to the origin of the R - X -coordinate system; the directional characteristic however limits the tripping range to the desired quadrants (refer to „Direction determination“ below).

The R -reach may be set separately for the phase-phase faults and the phase-earth faults to achieve a larger fault resistance coverage for earth faults if this is desired.

For the first zone Z1 an additional settable tilt α exists, which may be used to prevent overreach resulting from angle variance and/or two ended infeed to short-circuits with fault resistance. For Z1B and the higher zones this tilt does not exist.

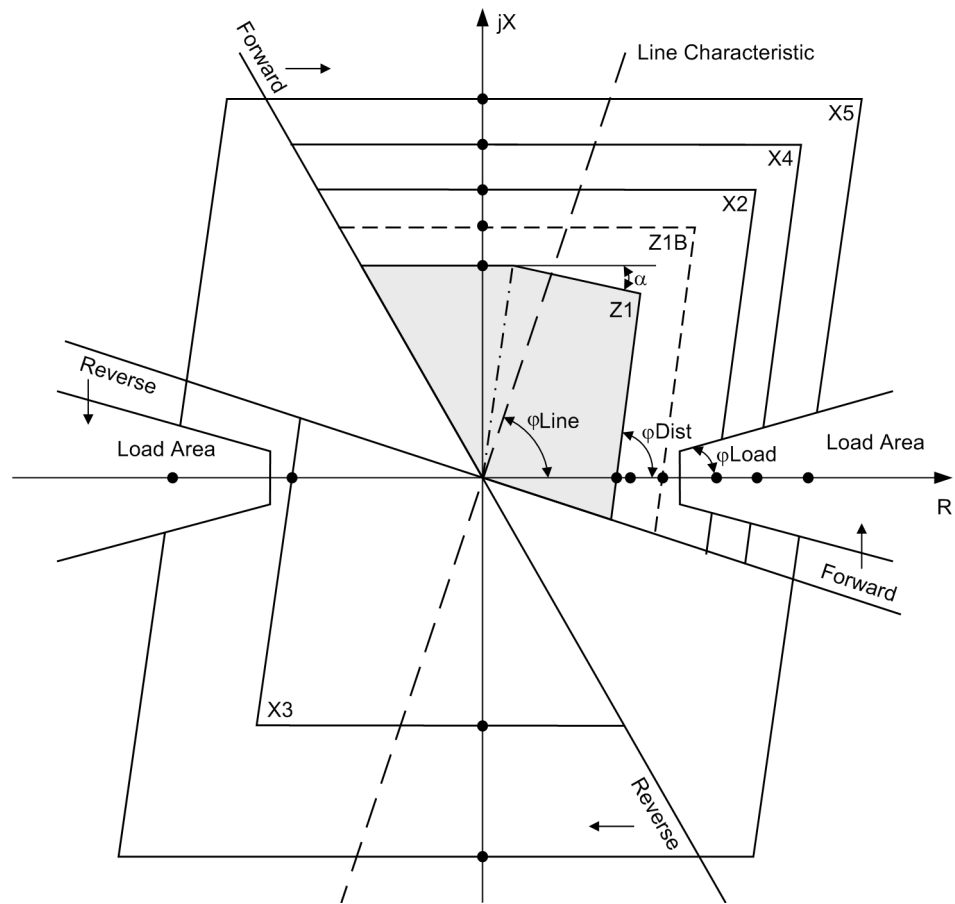


Figure 2-51 Polygonal characteristic (setting values are marked by dots)

Determination of direction

For each loop an impedance vector is also used to determine the direction of the short-circuit. Usually similar to the distance calculation, \underline{Z}_L is used. However, depending on the „quality“ of the measured values, different computation techniques are used. Immediately after fault inception, the short-circuit voltage is disturbed by transients. The voltage memorised prior to fault inception is therefore used in this situation. If even the steady-state short-circuit voltage (during a close-up fault) is too small for direction determination, an unfaulted voltage is used. This voltage is in theory perpendicular to the actual short-circuit voltage for both phase-to-earth loops as well as for phase-to-phase loops (Figure 2-52). This is taken into account when computing the direction vector by means of a 90° rotation. Table 2-11 shows the allocation of the measured values to the six fault loops for the determination of the fault direction.

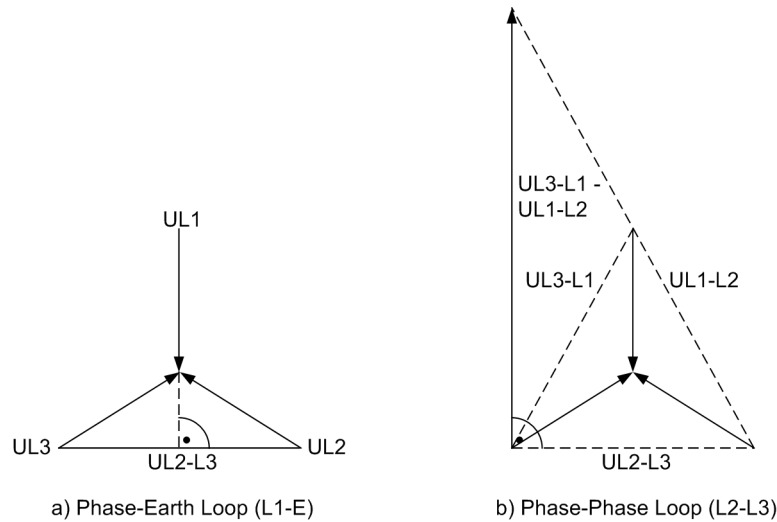


Figure 2-52 Direction determination of externally generated short-circuit tripping currents

Table 2-11 Voltage and current values for the determination of fault direction

Loop	Measuring Current (Direction)	Actual short-circuit voltage	Unfaulted voltage
L1-E	\underline{I}_{L1}	\underline{U}_{L1-E}	$\underline{U}_{L2} - \underline{U}_{L3}$
L2-E	\underline{I}_{L2}	\underline{U}_{L2-E}	$\underline{U}_{L3} - \underline{U}_{L1}$
L3-E	\underline{I}_{L3}	\underline{U}_{L3-E}	$\underline{U}_{L1} - \underline{U}_{L2}$
L1-E ¹⁾	$\underline{I}_{L1} - \underline{I}_E^{(1)}$	\underline{U}_{L1-E}	$\underline{U}_{L2} - \underline{U}_{L3}$
L2-E ¹⁾	$\underline{I}_{L2} - \underline{I}_E^{(1)}$	\underline{U}_{L2-E}	$\underline{U}_{L3} - \underline{U}_{L1}$
L3-E ¹⁾	$\underline{I}_{L3} - \underline{I}_E^{(1)}$	\underline{U}_{L3-E}	$\underline{U}_{L1} - \underline{U}_{L2}$
L1-L2	$\underline{I}_{L1} - \underline{I}_{L2}$	$\underline{U}_{L1} - \underline{U}_{L2}$	$\underline{U}_{L2-L3} - \underline{U}_{L3-L1}$
L2-L3	$\underline{I}_{L2} - \underline{I}_{L3}$	$\underline{U}_{L2} - \underline{U}_{L3}$	$\underline{U}_{L3-L1} - \underline{U}_{L1-L2}$
L3-L1	$\underline{I}_{L3} - \underline{I}_{L1}$	$\underline{U}_{L3} - \underline{U}_{L1}$	$\underline{U}_{L1-L2} - \underline{U}_{L2-L3}$

¹⁾ with consideration of earth impedance compensation

If there is neither a current measured voltage nor a memorized voltage available which is sufficient for measuring the direction, the relay selects the **Forward** direction. In practice this can only occur when the circuit breaker closes onto a de-energized line, and there is a fault on this line (e.g. closing onto an earthed line).

Figure 2-53 shows the theoretical steady-state characteristic. In practice, the limits of the directional characteristic when using memorized voltages is dependent on both the source impedance and the load transferred across the line prior to fault inception. Accordingly the directional characteristic includes a safety margin with respect to the borders of the first quadrant in the R–X diagram (Figure 2-53).

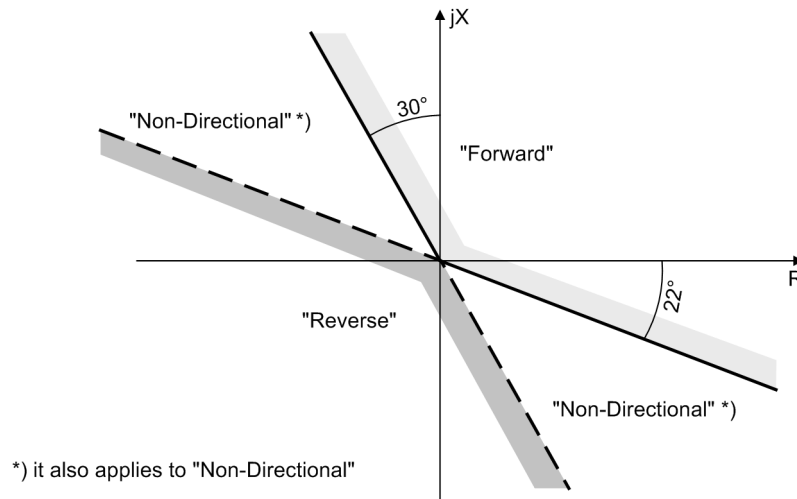


Figure 2-53 Directional characteristic in the R-X-diagram

Since each zone can be set to **Forward**, **Reverse** or **Non-Directional**, different (centrically mirrored) directional characteristics are available for **Forward** and **Reverse**. A non-directional zone has no directional characteristic. The entire tripping region applies here.

Characteristics of the Directional Measurement

The theoretical steady-state directional characteristic shown in Figure 2-53 applies to faulted loop voltages. In the case of quadrature voltages or memorized voltage, the position of the directional characteristic is dependent on both the source impedance as well as the load transferred across the line prior to fault inception.

Figure 2-54 shows the directional characteristic using quadrature or memorized voltage as well as taking the source impedance into account (no load transfer). As these voltages are equal to the corresponding generator voltage \underline{E} and they do not change after fault inception, the directional characteristic is shifted in the impedance diagram by the source impedance $\underline{Z}_{S1} = \underline{E}_1 / \underline{I}_1$. For the fault location F_1 (Figure 2-54a) the short-circuit location is in the forward direction and the source impedance is in the reverse direction. For all fault locations, right up to the device location (current transformers), a definite **Forward** decision is made (Figure 2-54b). If the current direction is reversed, the position of the directional characteristic changes abruptly (Figure 2-54c). A reversed current \underline{I}_2 now flows via the measuring location (current transformer) which is determined by the source impedance $\underline{Z}_{S2} + \underline{Z}_L$. When load is transferred across the line, the directional characteristic may additionally be rotated by the load angle.

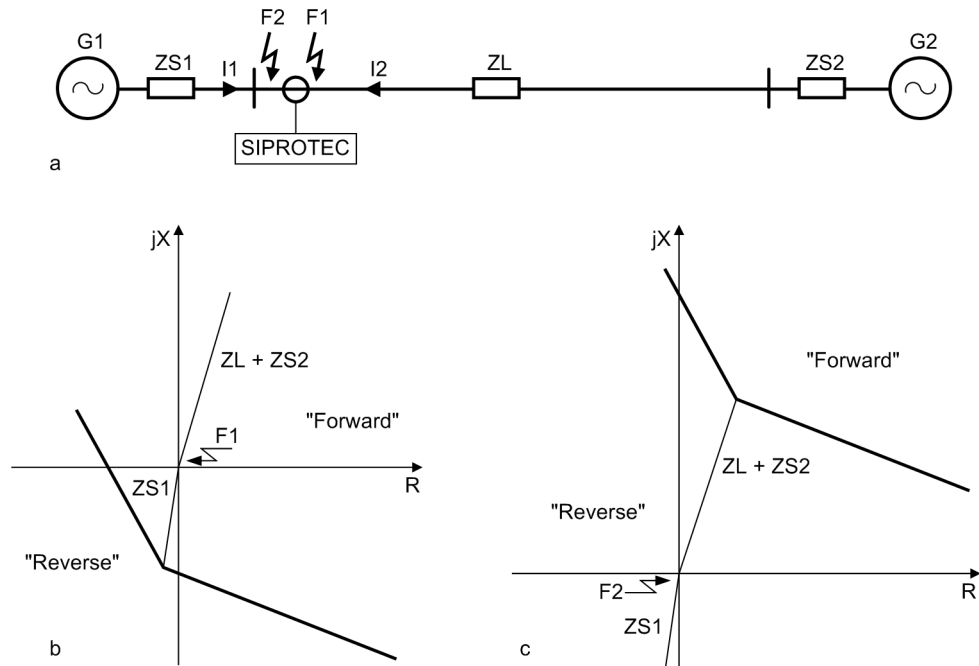


Figure 2-54 Directional characteristic with quadrature or memorized voltages

Determination of direction in case of series-compensated lines

The directional characteristics and their displacement by the source impedance apply also for lines with series capacitors. If a short-circuit occurs behind the local series capacitors, the short-circuit voltage however reverses its direction until the protective spark gap has picked up (see Figure 2-55).

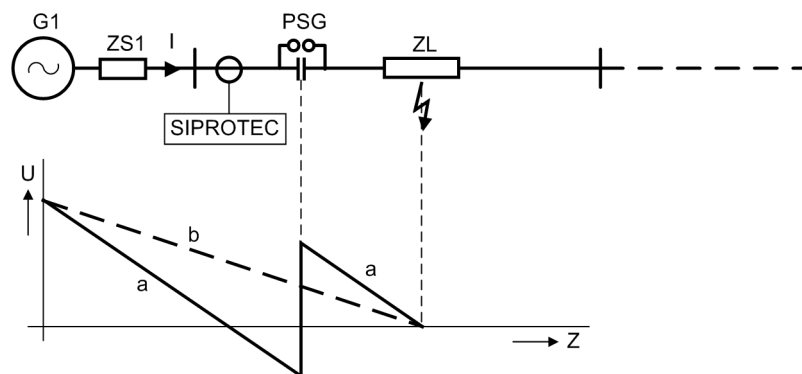


Figure 2-55 Voltage characteristic while a fault occurs after a series capacitor.

- a) without pickup of the protective spark gap
- b) with pickup of the protective spark gap

The distance protection function would thus detect a wrong fault direction. The use of memorized voltages however ensures that the direction is correctly detected (see Figure 2-56a).

Since the voltage prior to the fault is used for determining the direction, the zeniths of the directional characteristics in dependence of the source impedance and infeed conditions before the fault are thus far displaced that the capacitor reactance — which is

always smaller than the series reactance — does not cause the apparent direction reversal (Figure 2-56b).

If the short-circuit is located before the capacitor, from the relay location (current transformer) in reverse direction, the zeniths of the directional characteristics are shifted to the other direction (Figure 2-56c). A correct determination of the direction is thus also ensured in this case.

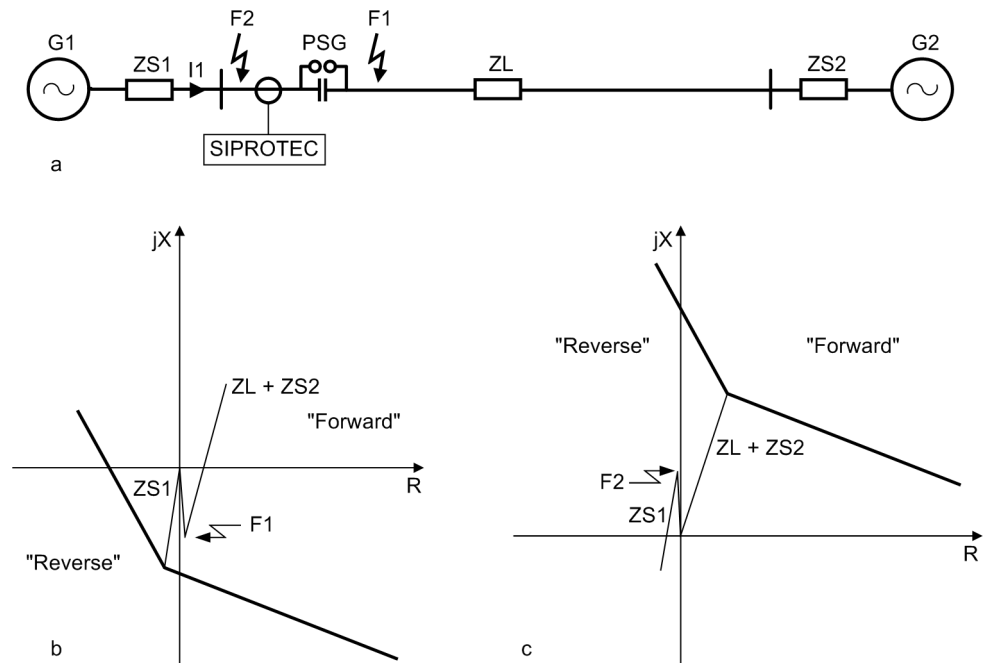


Figure 2-56 Determination of direction in case of series-compensated lines

Pickup and assignment to the polygons

Using the fault detection modes I, U/I or U/I/φ, the impedances that were calculated from the valid loops, are assigned, after the pick-up, to the zone characteristics set for the distance protection. To avoid unstable signals at the boundaries of a polygon, the characteristics have a hysteresis of approximately 5 % i.e. as soon as it has been determined that the fault impedance lies within a polygon, the boundaries are increased by 5 % in all directions. The loop information is also converted to phase segregated information.

Using the impedance pickup the calculated loop impedances are also assigned to the zone characteristics set for the distance protection, but without a query of an explicit fault detection scheme. The pickup range of the distance protection is determined from the thresholds of the largest-set polygon taking into consideration the respective direction. Here the loop information is also converted into faulted phase indication.

For each zone „pickup“ signals are generated and converted to phase information, e.g. „Dis Z1 L1“ (internal message) for zone Z1 and phase L1; this means that each phase and each zone is provided with separate pickup information; the information is then processed in the zone logic and by additional functions (e.g. teleprotection logic, Section 2.7). The loop information is also converted to phase segregated information. Another condition for „pickup“ of a zone is that the direction matches the direction configured for this zone (refer also to Section 2.6). Furthermore the distance protection may not be blocked or switched off completely. Figure 2-57 shows these conditions.

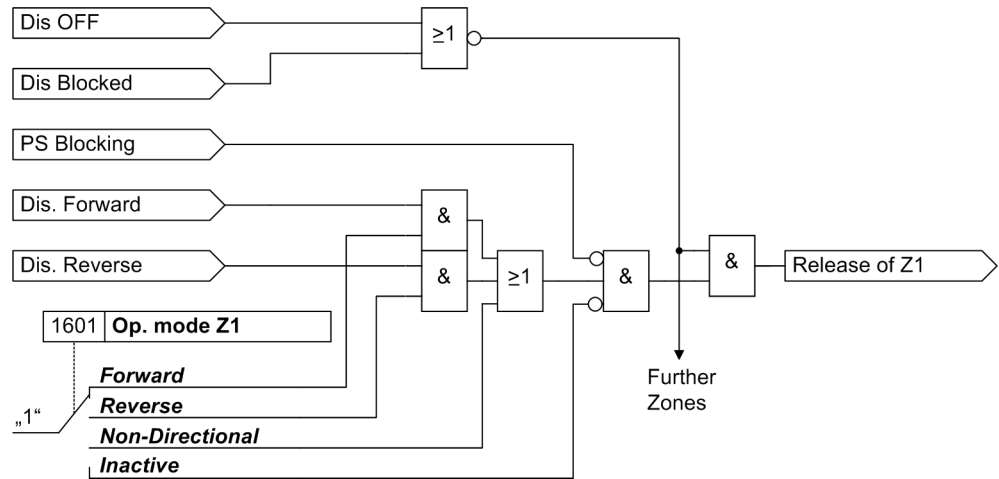


Figure 2-57 Release logic for a zone (example for Z1)

In total, the following zones are available:

Independent zones:

- 1st zone (fast tripping zone) Z1 with $X(Z1)$; $R(Z1) \emptyset-\emptyset$, $RE(Z1) \emptyset-E$; delayable with **T1-1phase** or **T1-multi-phase**,
- 2nd zone (backup zone) Z2 with $X(Z2)$; $R(Z2) \emptyset-\emptyset$, $RE(Z2) \emptyset-E$; may be delayed by **T2-1phase** or **T2-multi-phase**,
- 3rd zone (backup zone) Z3 with $X(Z3)$; $R(Z3) \emptyset-\emptyset$, $RE(Z3) \emptyset-E$; may be delayed by **T3 DELAY**,
- 4th zone (backup zone) Z4 with $X(Z4)$; $R(Z4) \emptyset-\emptyset$, $RE(Z4) \emptyset-E$; may be delayed by **T4 DELAY**,
- 5th zone (backup zone) Z5 with $X(Z5) +$ (forward) and $X(Z5) -$ (reverse); $R(Z5) \emptyset-\emptyset$, $RE(Z5) \emptyset-E$, delayable with **T5 DELAY**.

Dependent (controlled) zone:

- Overreaching zone Z1B with $X(Z1B)$; $R(Z1B) \emptyset-\emptyset$, $RE(Z1B) \emptyset-E$; may be delayed by **T1B-1phase** or **T1B-multi-phase**.

2.5.2.2 Setting Notes

Grading coordination chart

It is recommended to initially create a grading coordination chart for the entire galvanically interconnected system. This diagram should reflect the line lengths with their primary reactances X in Ω/km . For the reach of the distance zones, the reactances X are the deciding quantity.

The first zone Z1 is usually set to cover 85 % of the protected line without any trip time delay (i.e. $T1 = 0.00$ s). The protection clears faults in this range without additional time delay, i.e. the tripping time is the relay basic operating time.

The tripping time of the higher zones is sequentially increased by one time grading interval. The grading margin must take into account the circuit breaker operating time including the spread of this time, the resetting time of the protection equipment as well as the spread of the protection delay timers. Typical values are 0.2 s to 0.4 s. The reach is selected to cover up to approximately 80 % of the zone with the same set time delay on the shortest neighbouring feeder (see Figure 2-58).

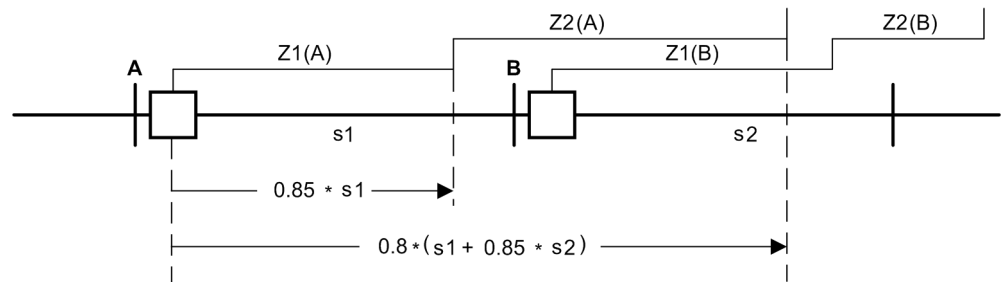


Figure 2-58 Setting the reach – example for device A
 s_1, s_2 Protected line section

When using a personal computer and DIGSI to apply the settings, these can be optionally entered as primary or secondary values.

In the case of parameterization with secondary quantities, the values derived from the grading coordination chart must be converted to the secondary side of the current and voltage transformers. In general:

$$Z_{\text{secondary}} = \frac{\text{Current Transformer Ratio}}{\text{Voltage Transformer Ratio}} \cdot Z_{\text{primary}}$$

Accordingly, the reach for any distance zone can be specified as follows:

$$X_{\text{sec}} = \frac{N_{\text{CT}}}{N_{\text{VT}}} \cdot X_{\text{prim}}$$

where

N_{CT} = Current transformer ratio

N_{VT} = Transformation ratio of voltage transformer

Calculation Example:

110 kV overhead line 150 mm² with the following data:

s (length) = 35 km

R_1/s = 0.19 Ω/km

X_1/s = 0.42 Ω/km

R_0/s = 0.53 Ω/km

X_0/s = 1.19 Ω/km

Current Transformer 600 A/5 A

Voltage transformer 110 kV / 0.1 kV

The following line data is calculated:

$$R_L = 0.19 \Omega/\text{km} \cdot 35 \text{ km} = 6.65 \Omega$$

$$X_L = 0.42 \Omega/\text{km} \cdot 35 \text{ km} = 14.70 \Omega$$

For the first zone, a setting of 85 % of the line length should be applied, which results in primary:

$$X_{1\text{prim}} = 0.85 \cdot X_L = 0.85 \cdot 14.70 \Omega = 12.49 \Omega$$

or secondary:

$$X1_{\text{sec}} = \frac{N_{\text{CT}}}{N_{\text{VT}}} \cdot X1_{\text{prim}} = \frac{600 \text{ A} / 5 \text{ A}}{110 \text{ kV} / 0.1 \text{ kV}} \cdot 12.49 \text{ } \Omega = 1.36 \text{ } \Omega$$

Resistance tolerance

The resistance setting R allows a reserve for fault resistance which appears as an additional resistance at the fault location and is added to the impedance of the line conductors. It comprises, for example, the resistance in arcs, the earth distribution resistance of earth points and others. The setting must consider these fault resistances, but should at the same time not be larger than necessary. On long heavily loaded lines, the setting may extend into the load impedance range. Fault detection due to overload conditions is then prevented with the load trapezoid. Refer to margin heading „Load range (only for impedance pickup)“ in Subsection 2.5.1. The resistance tolerance may be separately set for the phase-phase faults on the one hand and the phase-earth faults on the other hand. It is therefore possible to allow for a larger fault resistance for earth faults for example.

Most important for this setting on overhead lines, is the resistance of the fault arc. In cables on the other hand, an appreciable arc can not exist. On very short cables, care must however be taken that an arc fault on the local cable termination is inside the set resistance of the first zone.

The standard value for the arc voltage U_{Arc} is approx. 2.5 kV per meter of arc length.

Example:

A maximum arc voltage of 8 kV is assumed for phase-phase faults (line data as above). If the minimum primary short-circuit current is assumed to be 1000 A this corresponds to 8 Ω primary. The resistance setting for the first zone, including a safety margin of 20%, would be

primary:

$$R1_{\text{Prim}} = 0.5 \cdot R_{\text{Arc}} \cdot 1.2 = 0.5 \cdot 8 \text{ } \Omega \cdot 1.2 = 4.8 \text{ } \Omega$$

or secondary:

$$R1_{\text{sec}} = \frac{N_{\text{CT}}}{N_{\text{VT}}} \cdot R1_{\text{prim}} = \frac{600 \text{ A} / 5 \text{ A}}{110 \text{ kV} / 0.1 \text{ kV}} \cdot 4.8 \text{ } \Omega = 0.524 \text{ } \Omega$$

Only half the arc resistance was applied in the equation, as it is added to the loop impedance and therefore only half the arc resistance appears in the **per phase** impedance. Since an arc resistance is assumed to be present in this case, infeed from the opposite end need not be considered.

The resistance R_L of the line itself can be ignored with SIPROTEC 4 devices. It is taken into account by the shape of the polygon, provided that the inclination angle of the polygon **Distance Angle** (address 1511) is not set greater than the line angle **Line Angle** (address 1105).

A separate resistance tolerance can be set for earth faults. Figure 2-59 illustrates the relationships.

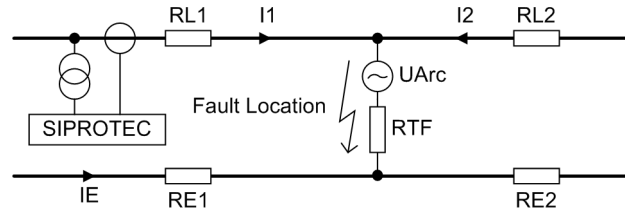


Figure 2-59 Resistance measurement of the distance protection in the presence of arc faults

The maximum arc resistance R_{Arc} must be determined for setting the distance zone in R direction. The maximum arc fault resistance is attained when the smallest fault current at which an arc is still present flows during an earth fault.

$$R_{Arc} = \frac{U_{Arc}}{I_1 + I_2} = \frac{U_{Arc}}{I_1 \cdot \left(1 + \frac{I_2}{I_1}\right)}$$

The earth fault resistance measured by the distance protection then results from the formula below (it is assumed that I_1 and I_E are in phase opposition):

$$R_{RE} = R_{L1} + \left(1 + \frac{I_2}{I_1}\right) \cdot \frac{R_{Arc} + R_{TF}}{1 + \frac{R_E}{R_L}}$$

with

R_{RE} Resistance measured by the SIPROTEC distance protection

R_{L1} Line resistance up to the fault location

R_{Arc} Arc resistance

R_E/R_L Setting in the distance protection (address 1116 and 1118)

I_2/I_1 Ratio between earth fault currents at the opposite end and the local end. For a correct R setting of the distance zone, the most unfavourable case must be considered. This most unfavourable case would be a maximum earth fault current at the opposite end and a minimum earth fault current at the local end. Moreover, the currents considered are the r.m.s. values without phase displacement. Where no information is available on the current ratio, a value of approx. „3“ can be assumed. On radial feeders with negligible infeed from the opposite end, this ratio is „0“.

R_{TF} Effective tower footing resistance of the overhead line system. Where no information is available on the amount of tower footing resistance, a value of 3 Ω can be assumed for overhead lines with earth wire (see also /5/).

The following recommended setting applies for the resistance tolerance of distance zone Z1:

$$R_{1E} = 1.2 \cdot \left(\left(1 + \frac{I_2}{I_1}\right) \cdot \frac{R_{Arc} + R_{TF}}{1 + \frac{R_E}{R_L}} \right)$$

with

R_{1E} Setting in the distance protection **RE(Z1) 0-E**, address 1604

1.2 Safety margin 20%

The resistance R_L of the line itself can be ignored with SIPROTEC 4 devices. It is taken into account by the shape of the polygon, provided that the inclination angle of the polygon **Distance Angle** (address 1511) is not set greater than the line angle **Line Angle** (address 1105).

Example:

Arc length: 2 m

Minimum fault current: 1.0 kA

Effective tower footing resistance of the overhead line system: 3 Ω

with

$$I_2/I_1 = 3$$

$$R_E/R_L = 0,6$$

Voltage transformer 110 kV / 0.1 kV

Current transformer 600 A / 5 A

The arc resistance would be:

$$R_{Arc} = \frac{2 \text{ m} \cdot 2.5 \text{ kV/m}}{1 \text{ kA} \cdot (1 + 3)} = 1.25 \Omega$$

and the tower footing resistances $R_{TF} = 3 \Omega$

As a result, the resistance must be set to

primary:

$$R_{1Eprim} = 1.2 \cdot \left(\left(1 + \frac{I_2}{I_1} \right) \cdot \frac{R_{Arc} + R_{TF}}{1 + \frac{R_E}{R_L}} \right) = 1.2 \cdot \left(4 \cdot \frac{4.25}{1.16} \right) = 12.75 \Omega$$

or secondary:

$$R_{1Esec} = \left(\frac{N_{CT}}{N_{VT}} \cdot R_{1Eprim} \right) = \frac{\frac{600 \text{ A}}{5 \text{ A}}}{\frac{110 \text{ kV}}{0.1 \text{ kV}}} \cdot 12.75 \Omega = 1.39 \Omega$$

In practice, the ratio between resistance and reactance setting is situated in the ranges shown below (see also /5/):

Type of Line	R/X Ratio of the Zone Setting
Short underground cable lines (approx. 0.5 km to 3 km / 0.3 to 1.88 miles)	3 to 5
Longer underground cable lines (> 3 km / 1.88 miles)	2 to 3
Short overhead lines < 10 km (6.25 miles)	2 to 5
Overhead lines < 100 km (62.5 miles)	1 to 2

Type of Line	R/X Ratio of the Zone Setting
Long overhead lines between 100 km and 200 km (62.5 miles and 125 miles)	0.5 to 1
Long EHV lines > 200 km (125 miles)	≤ 0,5

**Note**

The following must be kept in mind for short lines with a high R/X ratio for the zone setting: The angle errors of the current and voltage transformers cause a rotation of the measured impedance in the direction of the R axis. If due to the polygon, R_E/R_L - and X_E/X_L settings the loop reach in R direction is large in relation to the X direction, there is an increased risk of external faults being shifted into zone Z1. A grading factor 85% should only be used up to $R/X \leq 1$ (loop reach). For larger R/X settings, a reduced grading factor for zone Z1 can be calculated with the following formula (see also /5/).

The reduced grading factor is calculated from:

GF = Grading factor = reach of zone Z1 in relation to the line length

R = Loop reach in R direction for zone Z1 = $R_1 \cdot (1 + R_E/R_L)$

X = Loop reach in X direction for zone Z1 = $X_1 \cdot (1 + X_E/X_L)$

δ_U = Voltage transformer angle error (typical: 1°)

δ_I = Current transformer angle error (typical: 1°)

$$GF \leq \left[1 - \frac{R}{X} \cdot \tan(\delta_U + \delta_I) \right] \cdot 88.5 \%$$

In addition or as an alternative, it is also possible to use the setting 1607 **Zone Reduction**, to modify the inclination of the zone Z1 polygon and thus prevent overreach (see Figure 2-51).

**Note**

On long lines with small R/X ratio, care must be taken to ensure that the R reach of the zone settings is at least about half of the associated X setting. This is especially important for zone Z1 and overreach zone Z1B in order to achieve the shortest possible tripping times.

Independent zones Z1 up to Z5

By means of the parameter MODE = **Forward** or **Reverse** or **Non-Directional** each zone can be set (address 1601 **Op. mode Z1**, 1611 **Op. mode Z2**, 1621 **Op. mode Z3**, 1631 **Op. mode Z4** and 1641 **Op. mode Z5**). This allows any combination of graded zones - forward, reverse or non-directional -, for example on transformers, generators or bus couplers. In the fifth zone different reach in the X direction can be set for forward or reverse. Zones that are not required are set **Inactive**.

The values derived from the grading coordination chart are set for each of the required zones. The setting parameters are grouped for each zone. For the first zone these are the parameters **R(Z1) 0-0** (address 1602) for the R intersection of the polygon applicable to phase-phase faults, **X(Z1)** (address 1603) for the X intersection (reach), **RE(Z1) 0-E** (address 1604) for the R intersection applicable to phase-earth faults and delay time settings.

If a fault resistance at the fault location (arc, tower footing etc.) causes a voltage drop in the measured impedance loop, the phase angle difference between this voltage and the measure loop current may shift the determined fault location in X direction. Parameter **1607 Zone Reduction** allows an inclination of the upper limit of zone Z1 in the 1st quadrant (see Figure 2-51). This prevents spurious pickup of zone Z1 in the presence of faults outside the protected area. Since any detailed calculation in this context can only apply for one specific system and fault condition, and a next to unlimited number of complex calculations would be required to determine the setting, we suggest here a simplified but well-proven method:

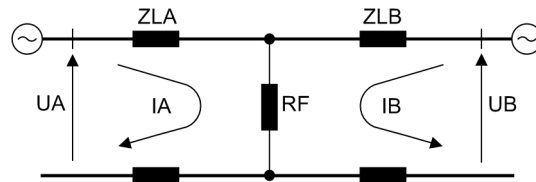


Figure 2-60 Equivalent circuit diagram for the recommended angle setting **Zone Reduction**.

The voltage drop at the fault location is:

$$\underline{U}_F = (\underline{I}_A + \underline{I}_B) \cdot R_F$$

If \underline{I}_A and \underline{I}_B have equal phase, then \underline{U}_F and \underline{I}_A have equal phase too. In this case the fault resistance R_F does not influence the measured X in the loop, and the **Zone Reduction** can be set to 0°.

In practice, \underline{I}_A and \underline{I}_B do not have equal phase; the difference results mostly from the phase difference between \underline{U}_A and \underline{U}_B . This angle (also called load angle) is therefore used to determine the **Zone Reduction** angle.

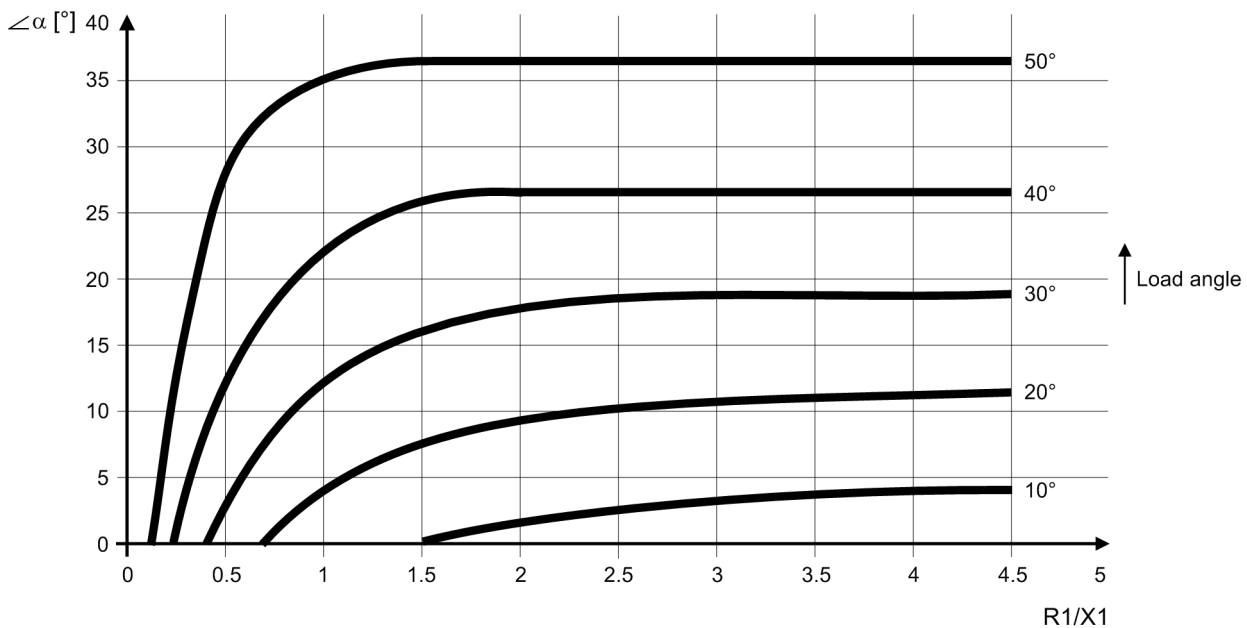


Figure 2-61 Recommended setting for 1607 **Zone Reduction** (this graphic applies for overhead lines with a line angle of more than 60°. A smaller setting may be chosen for cables or protected objects with a smaller angle)

The first step to determine the setting for 1607 **Zone Reduction** is to determine the maximum load angle for normal operation (by computer simulation). If this information is not available, a value of about 20° can be assumed for Western Europe. For other regions with less closely meshed systems, larger angles may have to be chosen. The next step is to select from Figure 2-61 the curve that matches the load angle. With the set ratio R1/X1 (zone Z1 polygon) the appropriate setting for 1607 **Zone Reduction** is then determined.

Example:

With a load angle of 20° and a setting $R/X = 2.5$ ($R1 = 25 \Omega$, $X1 = 10 \Omega$), a setting of 10° is adequate for 1607 **Zone Reduction**.

Different delay times can be set for single- and multiple-phase faults in the first zone: **T1-1phase** (Address 1605) and **T1-multi-phase** (address 1606). The first zone is normally set to operate without additional time delay.

For the remaining zones the following correspondingly applies:

X(Z2) (address 1613), **R(Z2) 0-0** (address 1612), **RE(Z2) 0-E** (address 1614);
X(Z3) (address 1623), **R(Z3) 0-0** (address 1622), **RE(Z3) 0-E** (address 1624);
X(Z4) (address 1633), **R(Z4) 0-0** (address 1632), **RE(Z4) 0-E** (address 1634);
X(Z5)+ (address 1643) for forward direction, **X(Z5)-** (address 1646) for reverse direction, **R(Z5) 0-0** (address 1642), **RE(Z5) 0-E** (address 1644).

For the second zone it is also possible to set separate delay times for single- and multiple-phase faults. In general the delay times are set the same. If stability problems are expected during multiple-phase faults, a shorter delay time can possibly be considered for **T2-multi-phase** (address 1616) and a longer delay can be tolerated for single-phase faults with **T2-1phase** (address 1615).

The zone timers for the remaining zones are set with the parameters **T3 DELAY** (address 1625), **T4 DELAY** (address 1635) and **T5 DELAY** (address 1645).

If the device is provided with the capability to trip single-pole, single-pole tripping is then possible in the zones Z1 and Z2. While single-pole tripping usually applies to single-phase faults in Z1 (if the remaining conditions for single-pole tripping are satisfied), this may also be selected for the second zone with address 1617 **Trip 1pole Z2**. Single pole tripping in zone 2 is only possible if this address is set to **YES**. The default setting is **NO**.



Note

For instantaneous tripping (undelayed) in the forward direction, the first zone **Z1** should always be used, as only the zone Z1 and Z1B are guaranteed to trip with the shortest operating time of the device. The further zones should be used sequentially for grading in the forward direction.

If instantaneous tripping (undelayed) is required in the reverse direction, the zone **Z3** should be used for this purpose, as only this zone ensures instantaneous pickup with the shortest device operating time for faults in the reverse direction. This setting is also recommended in teleprotection **BLOCKING** schemes.

With the binary input indications 3619 „>BLOCK Z4 Ph - E“ and 3620 „>BLOCK Z5 Ph - E“ zones Z4 and Z5 for phase-earth loops may be blocked. To block these zones permanently for phase-earth loops, binary input indications must be set to the logic value 1 using CFC.

Zone Z5 is preferably set as a non-directional final stage. It should include all other zones and also have sufficient reach in reverse direction. This ensures adequate pickup of the distance protection in response to fault conditions and correct verification of the short-circuit loops even under unfavourable conditions.



Note

Even if you do not need a non-directional distance stage, you should set Z5 according to the above aspects. Setting T5 to infinite prevents that this stage causes a trip.

Blocking of Zone Z1

If the main protection functions - differential protection and distance protection - operate in parallel, the distance protection of Zone Z1 may pick up before the differential protection (e.g. in the case of close-up faults). If this is desired, the distance protection works as a „booster“ stage for fast tripping. If the fast tripping acts on one end of the line only, accelerated tripping of zone Z1 is not desired (see also Section 2.5.1.4).

There are two ways of blocking Z1. If the device operates in differential protection mode, zone Z1 can be blocked by setting a parameter (address 1533 **Z1 blkd by diff**). Another way of blocking the zone is to set a binary input (No. 3610 „>BLOCK Z1-Trip“).

Controlled zone Z1B

The overreaching zone Z1B is a controlled stage. The normal zones Z1 to Z5 are not influenced by Z1B. There is no zone switching, but rather the overreaching zone is activated or deactivated by the corresponding criteria. In address 1651 **Op. mode Z1B** = **Forward**, it can also be switched **Reverse** or **Non-Directional**. If this stage is not required, it is set to **Inactive** (address 1651). The setting options are similar to those of zone Z1: Address 1652 **R(Z1B) 0-0**, address 1653 **X(Z1B)**, address 1654 **RE(Z1B) 0-E**. The delay times for single-phase and multiple-phase faults can again be set separately: **T1B-1phase** (Address 1655) and **T1B-multi-phase** (address 1656). If parameter **Op. mode Z1B** is set to **Forward** or **Reverse** a non-directional trip is also possible in case of closure onto a fault if parameter 1532 **S0TF zone** is set to **Z1B undirect**. (see also Section 2.5.1.4).

Zone Z1B is usually used in combination with automatic reclosure and/or teleprotection systems. It can be activated internally by the teleprotection functions (see also Section 2.7) or the integrated automatic reclosure (if available, see also Section 2.16), or externally by a binary input. It is generally set to at least 120 % of the line length. On three-terminal line applications („teed feeders“), it must be set to securely reach beyond the longest line section, even when there is additional infeed via the tee point. The delay times are set in accordance with the type of application, usually to zero or a very small delay. When used in conjunction with teleprotection comparison schemes, the dependence on the fault detection must be considered (refer to margin heading „Distance Protection Prerequisites“ in Section 2.7.14).

If the distance protection is used in conjunction with an automatic recloser, you can determine in address 1657 **1st AR -> Z1B** which distance zone is released prior to starting the AR. Normally the measurement takes place before the first protection trip in the first reclose cycle with overreaching zone Z1B. (**1st AR -> Z1B = YES**). This may be suppressed by changing the setting of **1st AR -> Z1B** to **NO**. In this case overreaching zone Z1B is not released before and during the first automatic reclose cycle. Zone Z1 is always released, unless it is blocked by a binary input or in differential protection mode. With an external automatic reclose device the setting only has an

effect when the service condition of this device is input via binary input „>Enable ARzones“ (No. 383).

2.5.2.3 Settings

Addresses which have an appended "A" can only be changed with DIGSI, under Additional Settings.

The table indicates region-specific presettings. Column C (configuration) indicates the corresponding secondary nominal current of the current transformer.

Addr.	Parameter	C	Setting Options	Default Setting	Comments
1601	Op. mode Z1		Forward Reverse Non-Directional Inactive	Forward	Operating mode Z1
1602	R(Z1) \emptyset - \emptyset	1A	0.050 .. 600.000 Ω	1.250 Ω	R(Z1), Resistance for ph-ph-faults
		5A	0.010 .. 120.000 Ω	0.250 Ω	
1603	X(Z1)	1A	0.050 .. 600.000 Ω	2.500 Ω	X(Z1), Reactance
		5A	0.010 .. 120.000 Ω	0.500 Ω	
1604	RE(Z1) \emptyset -E	1A	0.050 .. 600.000 Ω	2.500 Ω	RE(Z1), Resistance for ph-e faults
		5A	0.010 .. 120.000 Ω	0.500 Ω	
1605	T1-1phase		0.00 .. 30.00 sec; ∞	0.00 sec	T1-1phase, delay for single phase faults
1606	T1-multi-phase		0.00 .. 30.00 sec; ∞	0.00 sec	T1multi-ph, delay for multi phase faults
1607	Zone Reduction		0 .. 45 °	0 °	Zone Reduction Angle (load compensation)
1611	Op. mode Z2		Forward Reverse Non-Directional Inactive	Forward	Operating mode Z2
1612	R(Z2) \emptyset - \emptyset	1A	0.050 .. 600.000 Ω	2.500 Ω	R(Z2), Resistance for ph-ph-faults
		5A	0.010 .. 120.000 Ω	0.500 Ω	
1613	X(Z2)	1A	0.050 .. 600.000 Ω	5.000 Ω	X(Z2), Reactance
		5A	0.010 .. 120.000 Ω	1.000 Ω	
1614	RE(Z2) \emptyset -E	1A	0.050 .. 600.000 Ω	5.000 Ω	RE(Z2), Resistance for ph-e faults
		5A	0.010 .. 120.000 Ω	1.000 Ω	
1615	T2-1phase		0.00 .. 30.00 sec; ∞	0.30 sec	T2-1phase, delay for single phase faults
1616	T2-multi-phase		0.00 .. 30.00 sec; ∞	0.30 sec	T2multi-ph, delay for multi phase faults
1617A	Trip 1pole Z2		NO YES	NO	Single pole trip for faults in Z2

Addr.	Parameter	C	Setting Options	Default Setting	Comments
1621	Op. mode Z3		Forward Reverse Non-Directional Inactive	Reverse	Operating mode Z3
1622	R(Z3) Ø-Ø	1A	0.050 .. 600.000 Ω	5.000 Ω	R(Z3), Resistance for ph-ph-faults
		5A	0.010 .. 120.000 Ω	1.000 Ω	
1623	X(Z3)	1A	0.050 .. 600.000 Ω	10.000 Ω	X(Z3), Reactance
		5A	0.010 .. 120.000 Ω	2.000 Ω	
1624	RE(Z3) Ø-E	1A	0.050 .. 600.000 Ω	10.000 Ω	RE(Z3), Resistance for ph-e faults
		5A	0.010 .. 120.000 Ω	2.000 Ω	
1625	T3 DELAY		0.00 .. 30.00 sec; ∞	0.60 sec	T3 delay
1631	Op. mode Z4		Forward Reverse Non-Directional Inactive	Non-Directional	Operating mode Z4
1632	R(Z4) Ø-Ø	1A	0.050 .. 600.000 Ω	12.000 Ω	R(Z4), Resistance for ph-ph-faults
		5A	0.010 .. 120.000 Ω	2.400 Ω	
1633	X(Z4)	1A	0.050 .. 600.000 Ω	12.000 Ω	X(Z4), Reactance
		5A	0.010 .. 120.000 Ω	2.400 Ω	
1634	RE(Z4) Ø-E	1A	0.050 .. 250.000 Ω	12.000 Ω	RE(Z4), Resistance for ph-e faults
		5A	0.010 .. 50.000 Ω	2.400 Ω	
1635	T4 DELAY		0.00 .. 30.00 sec; ∞	0.90 sec	T4 delay
1641	Op. mode Z5		Forward Reverse Non-Directional Inactive	Inactive	Operating mode Z5
1642	R(Z5) Ø-Ø	1A	0.050 .. 600.000 Ω	12.000 Ω	R(Z5), Resistance for ph-ph-faults
		5A	0.010 .. 120.000 Ω	2.400 Ω	
1643	X(Z5)+	1A	0.050 .. 600.000 Ω	12.000 Ω	X(Z5)+, Reactance for Forward direction
		5A	0.010 .. 120.000 Ω	2.400 Ω	
1644	RE(Z5) Ø-E	1A	0.050 .. 600.000 Ω	12.000 Ω	RE(Z5), Resistance for ph-e faults
		5A	0.010 .. 120.000 Ω	2.400 Ω	
1645	T5 DELAY		0.00 .. 30.00 sec; ∞	0.90 sec	T5 delay
1646	X(Z5)-	1A	0.050 .. 600.000 Ω	4.000 Ω	X(Z5)-, Reactance for Reverse direction
		5A	0.010 .. 120.000 Ω	0.800 Ω	
1651	Op. mode Z1B		Forward Reverse Non-Directional Inactive	Forward	Operating mode Z1B (overreach zone)
1652	R(Z1B) Ø-Ø	1A	0.050 .. 600.000 Ω	1.500 Ω	R(Z1B), Resistance for ph-ph-faults
		5A	0.010 .. 120.000 Ω	0.300 Ω	

Addr.	Parameter	C	Setting Options	Default Setting	Comments
1653	X(Z1B)	1A	0.050 .. 600.000 Ω	3.000 Ω	X(Z1B), Reactance
		5A	0.010 .. 120.000 Ω	0.600 Ω	
1654	RE(Z1B) \emptyset -E	1A	0.050 .. 600.000 Ω	3.000 Ω	RE(Z1B), Resistance for ph-e faults
		5A	0.010 .. 120.000 Ω	0.600 Ω	
1655	T1B-1phase		0.00 .. 30.00 sec; ∞	0.00 sec	T1B-1phase, delay for single ph. faults
1656	T1B-multi-phase		0.00 .. 30.00 sec; ∞	0.00 sec	T1B-multi-ph, delay for multi ph. faults
1657	1st AR -> Z1B		NO YES	NO	Z1B enabled before 1st AR (int. or ext.)

2.5.3 Distance Protection with MHO Characteristic (optional)

Depending on the version ordered, the universal line protection 7SD5 can be equipped with an MHO characteristic in combination with the distance protection function. If both the polygonal and the MHO characteristic are available, they may be selected separately for phase-phase loops and phase-earth loops. The polygonal tripping characteristic is described in Section 2.5.2.

2.5.3.1 Functional Description

Basic characteristic

One MHO characteristic is defined for each distance zone, which represents the tripping characteristic of the corresponding zone. In total there are five independent and one additional controlled zone for each fault impedance loop. The basic shape of an MHO characteristic is shown in Figure 2-62 as an example of a zone.

The MHO characteristic is defined by the line of its diameter which intersects the origin of the coordinate system and the magnitude of the diameter which corresponds to the impedance Z_r , which determines the reach, and by the angle of inclination; the angle of inclination is set in address 1511 **Distance Angle** and normally corresponds to the line angle φ_{Line} . A load trapezoid with the setting R_{Load} and φ_{Load} may be used to cut the area of the load impedance out of the characteristic. The reach Z_r may be separately set for each zone; the inclination angle φ_{Dist} as well as the load impedance parameters R_{Load} and φ_{Load} are common to all zones. As the characteristic intersects the origin of the coordinate system, a separate directional characteristic is not required.

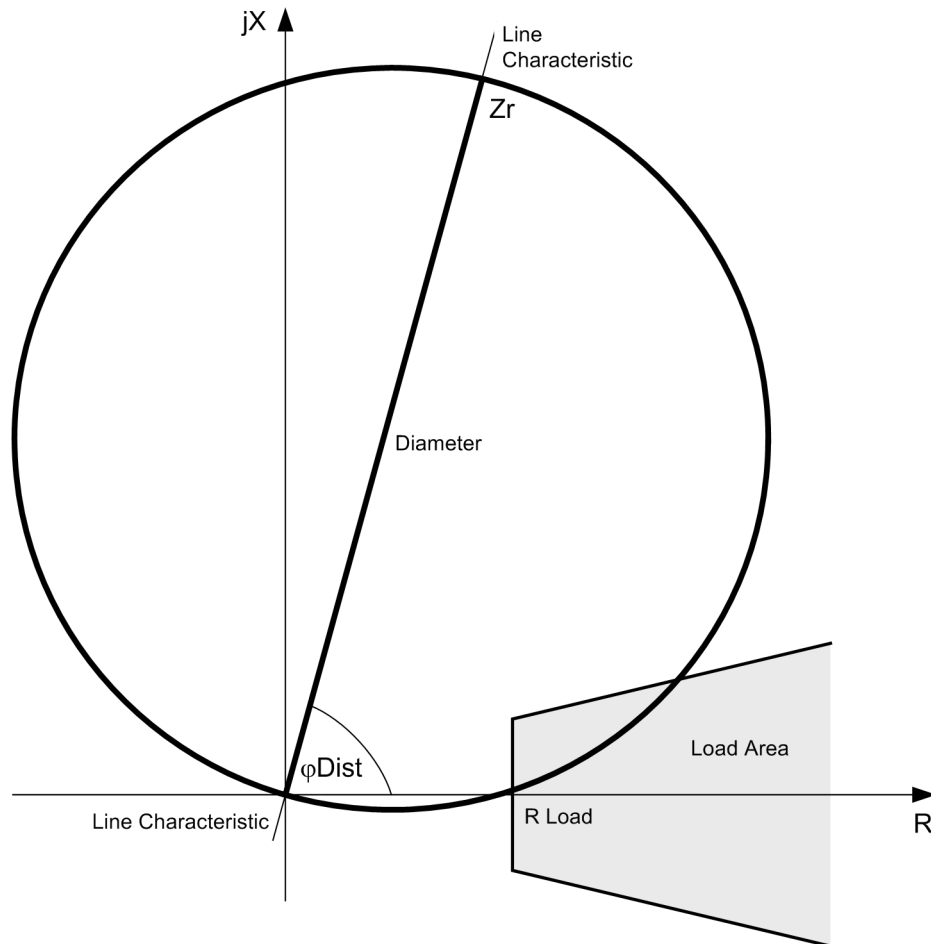


Figure 2-62 Basic shape of an MHO characteristic

Polarised MHO characteristic

As is the case with all characteristics that pass through the origin of the coordinate system, the MHO characteristic boundary around the origin itself is also not defined as the measured voltage is zero or too small to be evaluated in this case. For this reason, the MHO characteristic is polarized. The polarization determines the lower zenith of the circle, i.e. the lower intersection of the diameter line with the circle. The upper zenith which is determined by the reach setting Z_r remains unchanged. Immediately after fault inception, the short-circuit voltage is disturbed by transients; the voltage memorized prior to fault inception is therefore used for polarization. This causes a displacement of the lower zenith by an impedance corresponding to the memorized voltage (refer to Figure 2-63). When the memorized short-circuit voltage is too small, an unfaulted voltage is used. In theory this voltage is perpendicular to the voltage of the faulted loop for both phase-earth loops as well as phase-phase loops. This is taken into account by the calculation by means of a 90° rotation. The unfaulted loop voltages also cause a displacement of the lower zenith of the MHO characteristic.

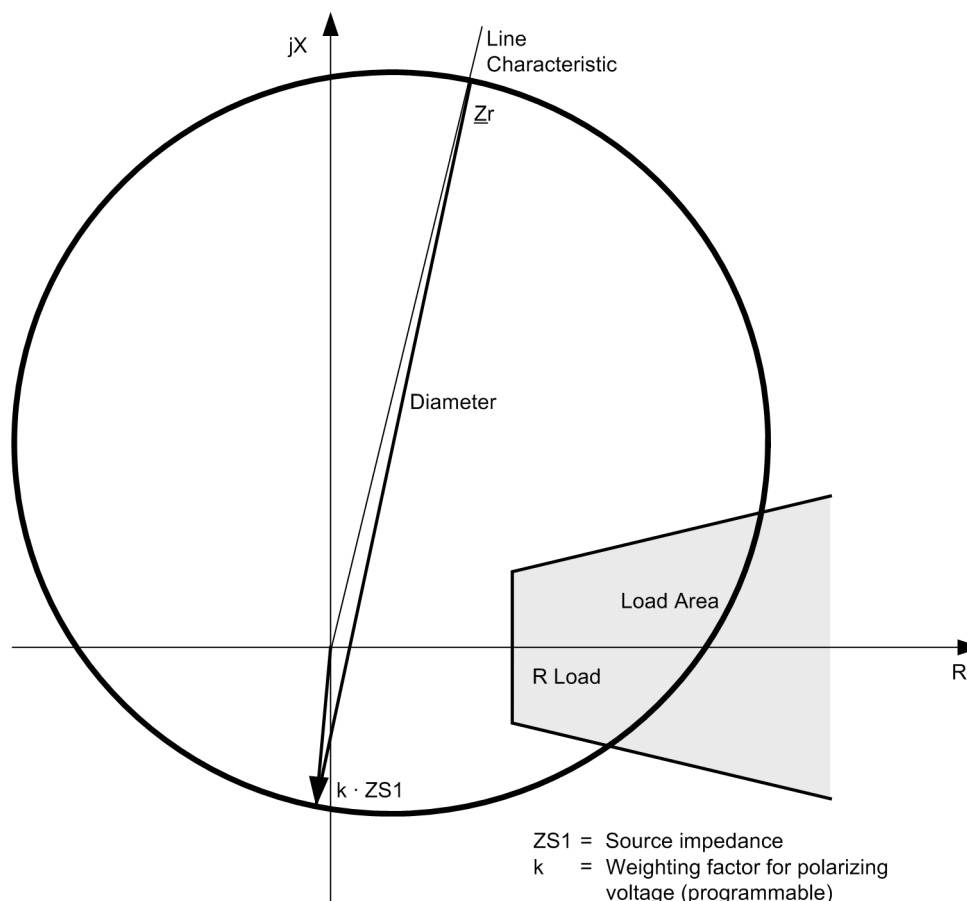


Figure 2-63 Polarized MHO characteristic

Properties of the MHO Characteristic

As the quadrature or memorized voltage (without load transfer) equals the corresponding generator voltage \underline{E} and does not change after fault inception (refer also to Figure 2-64), the lower zenith is shifted in the impedance diagram by the polarizing quantity $k \cdot \underline{Z}_{V1} = k \cdot \underline{E}_1 / \underline{I}_1$. The upper zenith is still defined by the setting value \underline{Z}_r . For the fault location F_1 (Figure 2-64a) the short-circuit location is in the forward direction and the source impedance is in the reverse direction. All fault locations, right up to the device mounting location (current transformers) are clearly inside the MHO characteristic (Figure 2-64b). If the current is reversed, the zenith of the circle diameter changes abruptly (Figure 2-64c). A reversed current \underline{I}_2 now flows via the measuring location (current transformer) which is determined by the source impedance $\underline{Z}_{S2} + \underline{Z}_L$. The zenith \underline{Z}_r remains unchanged; it now is the lower boundary of the circle diameter. In conjunction with load transfer via the line, the zenith vector may additionally be rotated by the load angle.

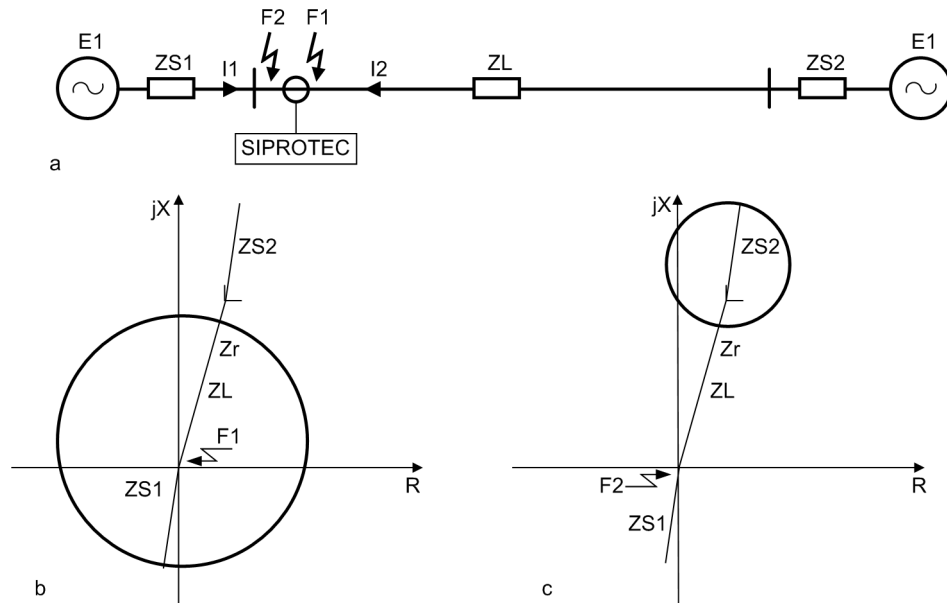


Figure 2-64 Polarized MHO characteristic with quadrature or memorized voltages

Selecting Polarization

Incorrect directional decisions may be reached with short lines resulting in tripping or blocking in spite of a reverse fault. This occurs because their zone reach is set very small. Therefore their loop voltages are also very small, resulting in the phase angle comparison between difference voltage and loop voltage being insufficiently accurate. If phase angle comparison is performed using a polarization voltage consisting of a loop voltage component recorded before the fault and a component of the current loop voltage, these problems may be avoided. The following equation shows the polarization voltage \underline{U}_P for a Ph-E loop:

$$\underline{U}_P = (1 - k_{Pre}) \cdot \underline{U}_{L-E} + k_{Pre} \cdot \underline{U}_{Ph-EMemorized}$$

The evaluation (factor k_{Pre}) of the prefault voltage may be set separately for Ph-E and Ph-Ph loops. In general the factor is set to 15 %. The memory polarization is only performed if the RMS value of the corresponding memorized voltage for Ph-E loops is greater than a 40 % of the nominal voltage U_N (address 204) and greater than a 70 % of U_N for Ph-Ph loops.

If there is no prefault voltage due to a sequential fault or energization onto a fault, the memorized voltage can only be used for a limited time. For single-pole faults and two-pole faults without earth path component a voltage which is not involved in the fault may be used for polarisation. This voltage is rotated by 90° in comparison with the fault-accurate voltage (cross polarization). The polarisation voltage \underline{U}_P is a mixed voltage which consists of the valid voltage and the corresponding unfaulted voltages. The following equation shows the polarisation voltage \underline{U}_P for a PH-E loop:

$$\underline{U}_P = (1 - k_{Cross}) \cdot \underline{U}_{L-E} + k_{Cross} \cdot \underline{U}_{L-EUnfaulted}$$

The cross polarisation is used if no memorized voltage is available. The evaluation (factor k_{Cross}) of the voltage may be set separately for Ph-E and Ph-Ph loops. In general the factor is set to 15 %.

**Note**

When switching onto a three-pole fault with the MHO characteristic, there will be no voltage in the memory or unfaulted loop voltage available. To ensure fault clearance when switching onto three-pole close-up faults, please make sure that in conjunction with the configured MHO characteristic the instantaneous tripping function is always enabled.

Determination of direction in case of series-compensated lines

The displacement of the characteristics by the source impedance applies also for lines with series capacitors. If a short-circuit occurs behind the local series capacitors, the short-circuit voltage however reverses its direction until the protective spark gap has picked up (see Figure 2-65).

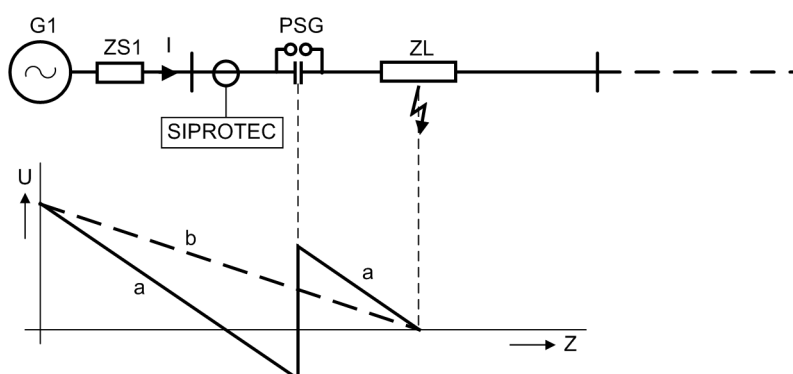


Figure 2-65 Voltage characteristic for a short-circuit after a series capacitor

- a) without pickup of the protective spark gap
- b) with pickup of the protective spark gap

The distance protection function would thus detect a wrong fault direction. However, even in this case pickup of the correct directional MHO characteristic is ensured by mixing in stored voltages (see Figure 2-66 a).

Since the voltage prior to the fault is mixed with the current voltage, the zeniths of the MHO characteristic dependent on the source impedance and infeed conditions before the fault are thus far displaced that the capacitor reactance — which is always smaller than the series reactance — does not cause the apparent direction reversal (Figure 2-66 b).

If the short-circuit is located before the capacitor, from the relay location (current transformer) in reverse direction, the zeniths of the MHO characteristic are shifted to the other direction (Figure 2-66c). A correct determination of the direction is thus also ensured in this case.

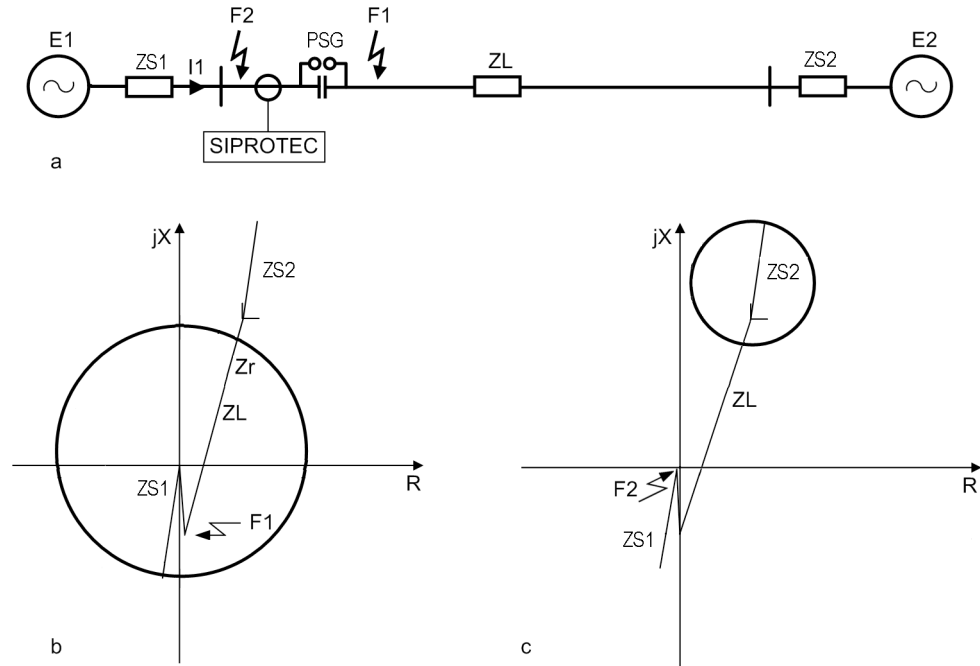


Figure 2-66 Polarized MHO characteristic for series-compensated lines

Assignment to tripping zones and zone pickup

The assignment of measured values to the tripping zones of the MHO characteristic is done for each zone by determining the angles between two differential phasors ΔZ_1 and ΔZ_2 (Figure 2-67). These phasors result from the difference between the two zeniths of the circle diameter and the fault impedance. The zenith Z_r corresponds to the set value for the zone under consideration (Z_r and ϕ_{MHO} as shown in Figure 2-62), the zenith kZ_V corresponds to the polarizing magnitude. Therefore the difference phasors are

$$\Delta Z_1 = Z_F - Z_r$$

$$\Delta Z_2 = Z_F - k \cdot Z_S$$

In the limiting case, Z_F is located on the perimeter of the circle. In this case the angle between the two difference phasors is 90° (Thales-theorem). Inside the characteristic the angle is greater than 90° and outside the circle it is less than 90° .

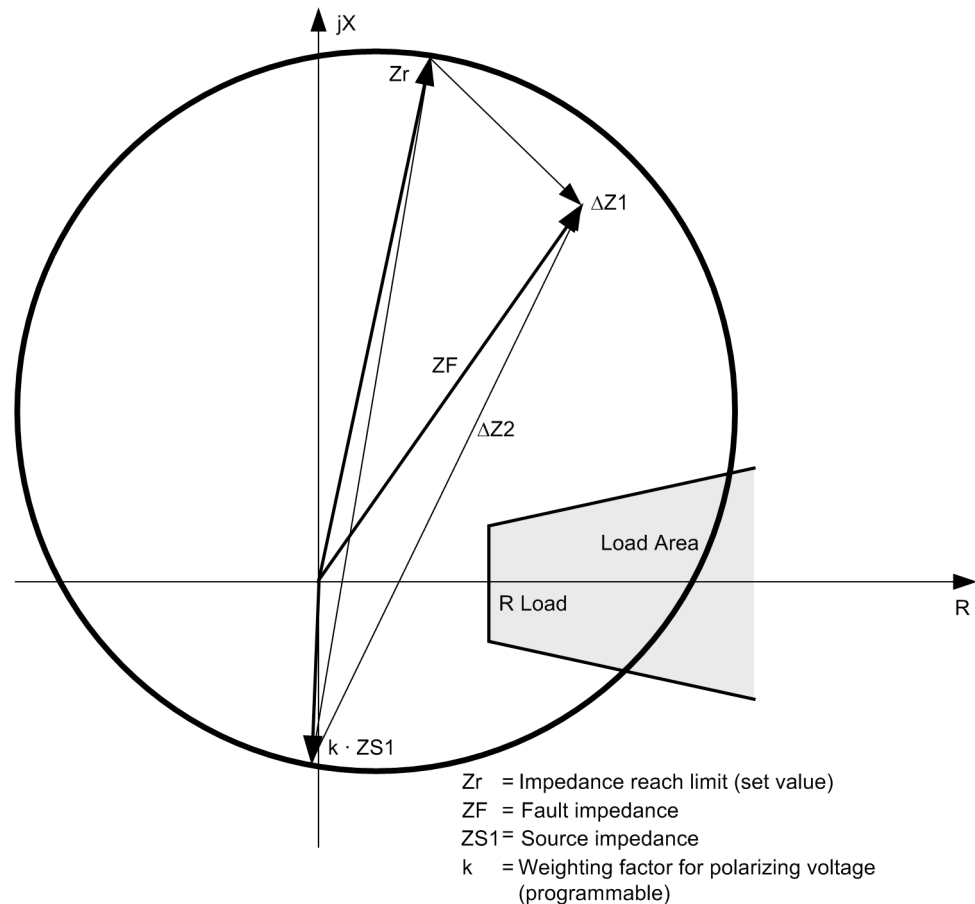


Figure 2-67 Phasor diagram of the MHO characteristic measured values

For each distance zone an MHO characteristic can be defined by means of the parameter Z_r . For each zone it may also be determined whether it operates **forwards** or **reverse**. In reverse direction the MHO characteristic is mirrored in the origin of the coordinate system. As soon as the fault impedance of any loop is confidently measured inside the MHO characteristic of a distance zone, the affected loop is designated as „picked up“. The loop information is also converted to phase segregated information. Another condition for pickup is that the distance protection may not be blocked or switched off completely. Figure 2-68 shows these conditions.

The zones and phases of such a valid pickup, e.g. „Dis. Z1 L1“ for zone Z1 and phase L1 are processed by the zone logic and the supplementary functions (e.g. teleprotection logic).

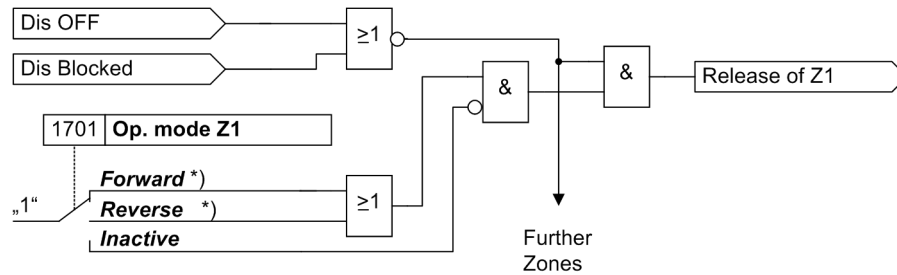


Figure 2-68 Release logic of a zone (example for Z1)

*) **forward** and **reverse** affect only the measured values, not the logic

In total, the following zones are available:

Independent zones:

- 1st zone (fast tripping zone) Z1 with **ZR(Z1)**; may be delayed by **T1 - 1phase** and **T1-multi-phase**,
- 2nd zone (backup zone) Z2 with **ZR(Z2)**; may be delayed by **T2 - 1phase** and **T2-multi-phase**,
- 3rd zone (backup zone) Z3 with **ZR(Z3)**; may be delayed by **T3 DELAY**,
- 4th zone (backup zone) Z4 with **ZR(Z4)**; may be delayed by **T4 DELAY**,
- 5th zone (backup zone) Z5 with **ZR(Z5)**; may be delayed by **T5 DELAY**.

Dependent (controlled) zone:

- Overreaching zone Z1B with **ZR(Z1B)**; may be delayed by **T1B - 1phase** and / or **T1B-multi-phase**.

2.5.3.2 Setting Notes

General

The function parameters for the MHO characteristic only apply if during the configuration of the scope of functions the MHO characteristic was selected for phase-phase measurement (address 115) and/or phase-earth measurement (address 116).

Grading coordination chart

It is recommended to initially create a grading coordination chart for the entire galvanically interconnected system. This diagram should reflect the line lengths with their primary impedances Z in Ω/km . For the reach of the distance zones, the impedances Z are the deciding quantities.

The first zone Z1 is usually set to cover 85 % of the protected line without any trip time delay (i.e. $T1 = 0.00$ s). The protection clears faults in this range without additional time delay, i.e. the tripping time is the relay basic operating time.

The tripping time of the higher zones is sequentially increased by one time grading interval. The grading margin must take into account the circuit breaker operating time including the spread of this time, the resetting time of the protection equipment as well as the spread of the protection delay timers. Typical values are 0.2 s to 0.4 s. The reach is selected to cover up to approximately 80 % of the subordinate zone on the shortest neighbouring feeder (Figure 2-58).

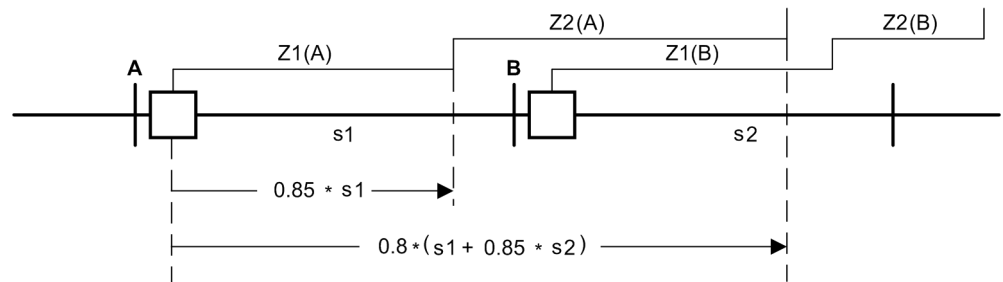


Figure 2-69 Setting the reach – example for device A
 s_1, s_2 Protected line section

When using a personal computer and DIGSI to apply the settings, these can be optionally entered as primary or secondary values.

In the case of parameterization with secondary quantities, the values derived from the grading coordination chart must be converted to the secondary side of the current and voltage transformers. In general:

$$Z_{\text{secondary}} = \frac{\text{Current Transformer Ratio}}{\text{Voltage Transformer Ratio}} \cdot Z_{\text{primary}}$$

Accordingly, the reach for any distance zone can be specified as follows:

$$Z_{\text{sec}} = \frac{N_{CT}}{N_{VT}} \cdot Z_{\text{prim}}$$

with

N_{CT} = Current transformer ratio

N_{VT} = Transformation ratio of voltage transformer

On long, heavily loaded lines, the MHO characteristic may extend into the load impedance range. This is of no consequence as the pickup by overload is prevented by the load trapezoid. Refer to margin heading „Load Area“ in Section 2.5.1.

Calculation Example:

110 kV overhead line 150 mm² with the following data:

s (length)	= 35 km
R_1/s	= 0.19 Ω/km
X_1/s	= 0.42 Ω/km
R_0/s	= 0.53 Ω/km
X_0/s	= 1.19 Ω/km

Current Transformer 600 A / 5 A

Voltage Transformer 110 kV / 0.1 kV

The following line data is calculated:

$$R_L = 0.19 \Omega/\text{km} \cdot 35 \text{ km} = 6.65 \Omega$$

$$X_L = 0.42 \Omega/\text{km} \cdot 35 \text{ km} = 14.70 \Omega$$

For the first zone, a setting of 85 % of the line length should be applied, which results in primary:

$$X1_{\text{prim}} = 0.85 \cdot X_L = 0.85 \cdot 14.70 \, \Omega = 12.49 \, \Omega$$

or secondary:

$$X1_{\text{sec}} = \frac{N_{\text{CT}}}{N_{\text{VT}}} \cdot X1_{\text{prim}} = \frac{600 \, \text{A} / 5 \, \text{A}}{110 \, \text{kV} / 0.1 \, \text{kV}} \cdot 12.49 \, \Omega = 1.36 \, \Omega$$

Independent zones Z1 up to Z5

Each zone can be set using the parameter MODE **Forward** or **Reverse** (address 1701 **Op. mode Z1**, 1711 **Op. mode Z2**, 1721 **Op. mode Z3**, 1731 **Op. mode Z4** and 1741 **Op. mode Z5**). This allows any combination of forward or reverse graded zones. Zones that are not required, are set **Inactive**.

The values derived from the grading coordination chart are set for each of the required zones. The setting parameters are grouped for each zone. For the first zone these are the parameters **ZR(Z1)** (address 1702) specifying the impedance of the upper zenith of the MHO characteristic from the origin (reach), as well as the relevant delay time settings.

Different delay times can be set for single- and multiple-phase faults in the first zone: **T1-1phase** (Address 1605) and **T1-multi-phase** (address 1606). The first zone is normally set to operate without additional time delay.

For the remaining zones the following correspondingly applies:

ZR(Z2) (address 1712);

ZR(Z3) (address 1722);

ZR(Z4) (address 1732);

ZR(Z5) (address 1742);

For the second zone it is also possible to set separate delay times for single- and multiple-phase faults. In general the delay times are set the same. If stability problems are expected during multiple-phase faults, a shorter delay time can possibly be considered for **T2-multi-phase** (address 1616) and a longer delay can be tolerated for single-phase faults with **T2-1phase** (address 1615).

The zone timers for the remaining zones are set with the parameters **T3 DELAY** (address 1625), **T4 DELAY** (address 1635) and **T5 DELAY** (address 1645).

If the device is provided with the capability to trip single-pole, single-pole tripping is then possible in the zones Z1 and Z2. While single-pole tripping usually applies to single-phase faults in Z1 (if the remaining conditions for single-pole tripping are satisfied), this may also be selected for the second zone with address 1617 **Trip 1pole Z2**. Single pole tripping in zone 2 is only possible if this address is set to **Yes**. The pre-setting is **No**.



Note

For instantaneous tripping (undelayed) in the forward direction, the first zone **Z1** should always be used, as only the Z1 and Z1B are guaranteed to trip with the shortest operating time of the device. The further zones should be used sequentially for grading in the forward direction.

If instantaneous tripping (undelayed) is required in the reverse direction, the zone **Z3** should be used for this purpose, as only this zone ensures instantaneous pickup with the shortest device operating time for faults in the reverse direction. This setting is also recommended in teleprotection **BLOCKING** schemes.

With binary input indications 3619 „>BLOCK Z4 Ph-E“ and 3620 „>BLOCK Z5 Ph-E“ zones Z4 and Z5 for phase-earth loops may be blocked. To block these zones permanently for phase-earth loops, said binary inputs must be set to the logic value of 1 via CFC.

Blocking of Zone Z1

If the main protection functions - differential protection and distance protection - operate in parallel, the distance protection of Zone Z1 may pick up before the differential protection (e.g. in the case of close-up faults). If this is desired, the distance protection works as a „booster“ stage for fast tripping. If the fast tripping acts on one end of the line only, accelerated tripping of zone Z1 is not desired (see also Section 2.5.1.4).

There are two ways of blocking Z1. If the device operates in differential protection mode, zone Z1 can be blocked by setting a parameter (address 1533 **Z1 blkd by diff**). Another way of blocking the zone is to set a binary input (No 3610 „>BLOCK Z1-Trip“).

Controlled zone Z1B

The overreaching zone Z1B is a controlled stage. The normal zones Z1 to Z5 are not influenced by Z1B. There is no zone switching, but rather the overreaching zone is activated or deactivated by the corresponding criteria. It can also be set in address 1751 **Op. mode Z1B** to **Forward** or **Reverse**. If this stage is not required, it is set to **Inactive** (address 1751). The setting options are similar to those of zone Z1: Address 1752 **ZR(Z1B)**. The delay times for single-phase and multiple-phase faults can again be set separately: **T1B-1phase** (Address 1655) and **T1B-multi-phase** (address 1656).

Zone Z1B is usually used in combination with automatic reclosure and/or teleprotection systems. It can be activated internally by the teleprotection functions (see also Section 2.7) or the integrated automatic reclosure (if available, see also Section 2.16), or externally by a binary input. It is generally set to at least 120 % of the line length. On three-terminal line applications („teed feeders“), it must be set to securely reach beyond the longest line section, even when there is additional infeed via the tee-off point. The delay times are set in accordance with the type of application, usually to zero or a very small delay. When used in conjunction with teleprotection comparison schemes, the dependence on the fault detection must be considered (refer to margin heading „Distance Protection Prerequisites“ in Section 2.7.14).

If the distance protection is used in conjunction with an automatic recloser, it may be determined in address 1657 **1st AR -> Z1B** which distance zones are released prior to a rapid automatic reclosure. Usually the overreaching zone Z1B is used for the first cycle (**1st AR -> Z1B = YES**). This may be suppressed by changing the setting of **1st AR -> Z1B** to **NO**. In this case the overreaching zone Z1B is not released before and during the 1st automatic reclose cycle. Zone Z1 is always released. The setting

only has an effect when the service condition of the automatic reclose function is input to the device via binary input „>Enable ARzones“ (No. 383).

Polarization

The degree of polarization with a fault-accurate memory voltage can be set in address 1771 **Mem.Polariz.PhE** for Ph-E loops, and in address 1773 **Mem.Polariz.P-P** for Ph-Ph loops. With an unfaulted valid voltage (cross-polarization), the evaluation factor can be set separately for Ph-E and Ph-Ph in address 1772 **CrossPolarizPhE** and 1774 **CrossPolarizP-P**. This setting can only be modified via DIGSI under **Additional Settings**.

These parameters have an impact on the expansion of the characteristics dependent on the source impedance. If the parameter is set to zero, the basic characteristic is displayed without expansion.

2.5.3.3 Settings

Addresses which have an appended "A" can only be changed with DIGSI, under Additional Settings.

The table indicates region-specific presettings. Column C (configuration) indicates the corresponding secondary nominal current of the current transformer.

Addr.	Parameter	C	Setting Options	Default Setting	Comments
1605	T1-1phase		0.00 .. 30.00 sec; ∞	0.00 sec	T1-1phase, delay for single phase faults
1606	T1-multi-phase		0.00 .. 30.00 sec; ∞	0.00 sec	T1multi-ph, delay for multi phase faults
1615	T2-1phase		0.00 .. 30.00 sec; ∞	0.30 sec	T2-1phase, delay for single phase faults
1616	T2-multi-phase		0.00 .. 30.00 sec; ∞	0.30 sec	T2multi-ph, delay for multi phase faults
1617A	Trip 1pole Z2		NO YES	NO	Single pole trip for faults in Z2
1625	T3 DELAY		0.00 .. 30.00 sec; ∞	0.60 sec	T3 delay
1635	T4 DELAY		0.00 .. 30.00 sec; ∞	0.90 sec	T4 delay
1645	T5 DELAY		0.00 .. 30.00 sec; ∞	0.90 sec	T5 delay
1655	T1B-1phase		0.00 .. 30.00 sec; ∞	0.00 sec	T1B-1phase, delay for single ph. faults
1656	T1B-multi-phase		0.00 .. 30.00 sec; ∞	0.00 sec	T1B-multi-ph, delay for multi ph. faults
1657	1st AR -> Z1B		NO YES	NO	Z1B enabled before 1st AR (int. or ext.)
1701	Op. mode Z1		Forward Reverse Inactive	Forward	Operating mode Z1
1702	ZR(Z1)	1A	0.050 .. 200.000 Ω	2.500 Ω	ZR(Z1), Impedance Reach
		5A	0.010 .. 40.000 Ω	0.500 Ω	
1711	Op. mode Z2		Forward Reverse Inactive	Forward	Operating mode Z2

Addr.	Parameter	C	Setting Options	Default Setting	Comments
1712	ZR(Z2)	1A	0.050 .. 200.000 Ω	5.000 Ω	ZR(Z2), Impedance Reach
		5A	0.010 .. 40.000 Ω	1.000 Ω	
1721	Op. mode Z3		Forward Reverse Inactive	Reverse	Operating mode Z3
1722	ZR(Z3)	1A	0.050 .. 200.000 Ω	5.000 Ω	ZR(Z3), Impedance Reach
		5A	0.010 .. 40.000 Ω	1.000 Ω	
1731	Op. mode Z4		Forward Reverse Inactive	Forward	Operating mode Z4
1732	ZR(Z4)	1A	0.050 .. 200.000 Ω	10.000 Ω	ZR(Z4), Impedance Reach
		5A	0.010 .. 40.000 Ω	2.000 Ω	
1741	Op. mode Z5		Forward Reverse Inactive	Inactive	Operating mode Z5
1742	ZR(Z5)	1A	0.050 .. 200.000 Ω	10.000 Ω	ZR(Z5), Impedance Reach
		5A	0.010 .. 40.000 Ω	2.000 Ω	
1751	Op. mode Z1B		Forward Reverse Inactive	Forward	Operating mode Z1B (extended zone)
1752	ZR(Z1B)	1A	0.050 .. 200.000 Ω	3.000 Ω	ZR(Z1B), Impedance Reach
		5A	0.010 .. 40.000 Ω	0.600 Ω	
1771A	Mem.Polariz.PhE		0.0 .. 100.0 %	15.0 %	Voltage Memory polarization (phase-e)
1772A	CrossPolarizPhE		0.0 .. 100.0 %	15.0 %	Cross polarization (phase-e)
1773A	Mem.Polariz.P-P		0.0 .. 100.0 %	15.0 %	Voltage Memory polarization (ph-ph)
1774A	CrossPolarizP-P		0.0 .. 100.0 %	15.0 %	Cross polarization (phase-phase)

2.5.4 Tripping Logic of the Distance Protection

2.5.4.1 Method of Operation

General pickup

Using the fault detection modes I, U/I or U/I/ φ , the signal „Dis . PICKUP“ (general pickup of the distance protection function) is generated after the pickup as soon as one of the conditions for pickup is fulfilled. As soon as any of the distance zones has determined with certainty that the fault is inside the tripping range, the signal „Dis . PICKUP“ is generated when using the impedance pickup.

The signal „Dis . PICKUP“ is indicated and made available for the initialisation of internal and external supplementary functions (e.g. teleprotection signal transmission, automatic reclosure).

**Zone logic of the independent zones
Z1 up to Z5**

As was mentioned in the description of the measuring technique, each distance zone generates an output signal which is associated with the zone and the affected phase. The zone logic combines these zone fault detections with possible further internal and external signals. The delay times for the distance zones can be started either all together on general fault detection by the distance protection function, or individually at that moment the fault enters the respective distance zone. Parameter **Start Timers** (address 1510) is set by default to **on Dis. Pickup**. This setting ensures that all delay times continue to run together even if the type of fault or the selected measuring loop changes, e.g. because an intermediate infeed is switched off. This is also the preferred setting in the case of other distance protection relays in the power system working with this start timing. Where grading of the delay times is especially important, for instance if the fault location shifts from zone Z3 to zone Z2, the setting **on Zone Pickup** should be chosen. The simplified zone logic is shown in Figure 2-70 for zone Z1, Figure 2-71 for zone Z2 and Figure 2-72 for zone Z3. Zones Z4 and Z5 function according to Figure 2-73.

In the case of zones Z1, Z2 and Z1B single-pole tripping is possible for single-phase faults if the device version includes the single-pole tripping option. Therefore the event output in these cases is provided for each pole. Different trip delay times can be set for single-phase and multiple-phase faults in these zones. In further zones, the tripping is always three-pole.



Note

The binary input „>1p Trip Perm“ (No. 381) must be activated to enable single-pole tripping. The internal automatic reclosure function may also grant the single-pole permission. The binary input is usually controlled from an external automatic reclosure device.

The trip delay times of the zones (except for Z1 which is usually set without delay) can be bypassed. The grading times are started either via zone pickup or general pickup of the distance protection function. The undelayed release results from the line energization logic, which may be externally initiated via the circuit breaker close signal derived from the circuit breaker control switch or from an internal line energization detection. Zones Z4 and Z5 may be blocked by external criteria (no. 3617 „>BLOCK Z4-Trip“, no. 3618 „>BLOCK Z5-Trip“).

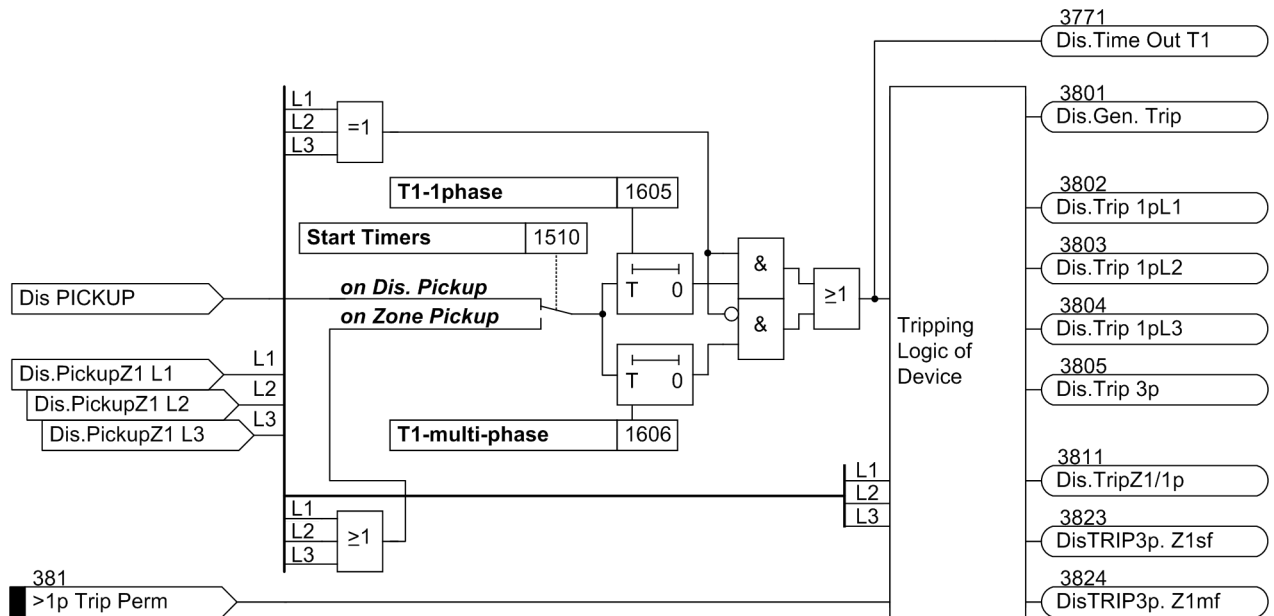


Figure 2-70 Tripping logic for the 1st zone

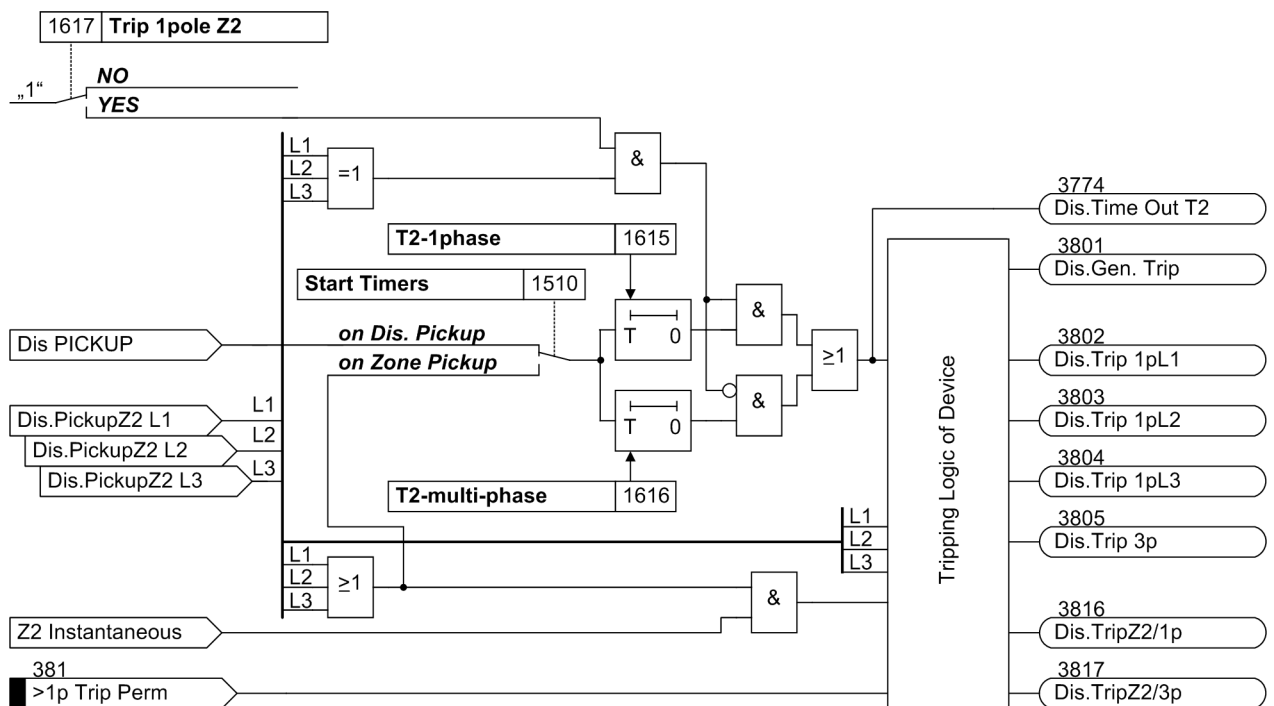


Figure 2-71 Tripping logic for the 2nd zone

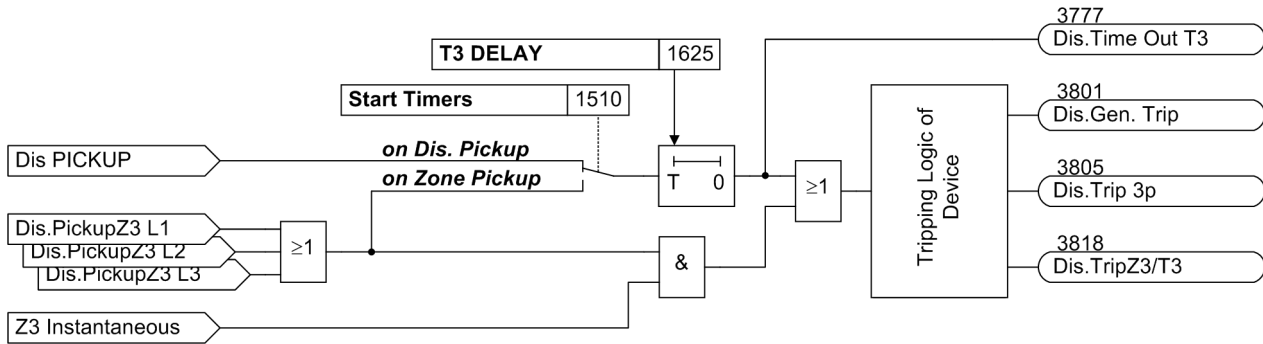


Figure 2-72 Tripping logic for the 3rd zone

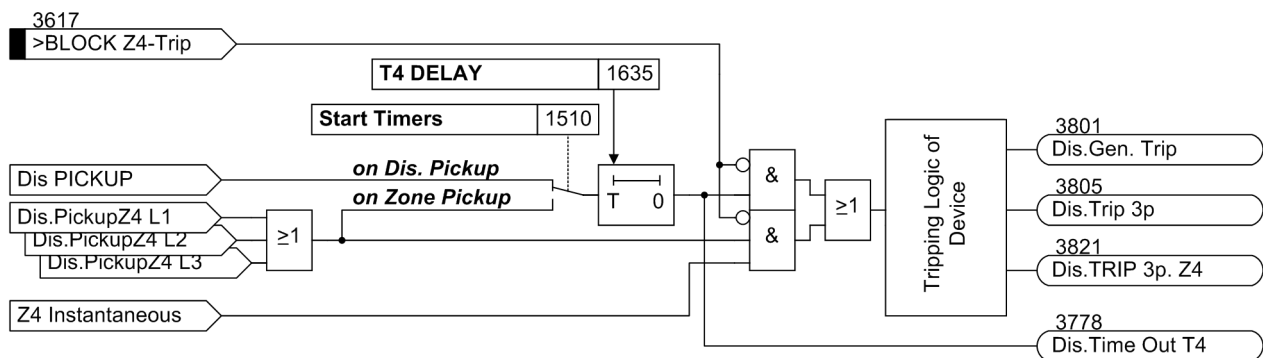


Figure 2-73 Tripping logic for the 4th and 5th zone, shown is zone Z4

Zone logic of the controlled zone Z1B

The controlled zone Z1B is usually applied as an overreaching zone. The logic is shown in Figure 2-74. It may be activated via various internal and external functions. The binary inputs for external activation of Z1B of the distance protection are „>ENABLE Z1B“ and „>Enable ARzones“. The former can, for example, be from an external teleprotection device, and only affects Z1B of the distance protection. The latter can also be controlled, e.g. by an external automatic reclosure device. In addition, it is possible to use zone Z1B as a rapid autoclosure stage that only operates for single-pole faults, for example, if only single-pole automatic reclose cycles are to be executed.

It is possible for the 7SD5 to trip single-pole during two-phase faults without earth connection in the overreaching zone when single-pole automatic reclosure is used.

As the device features an integrated teleprotection function, release signals from this function may activate zone Z1B provided that the internal teleprotection signal transmission function has been configured to one of the available schemes with parameter 121 **Teleprot. Dist.**, i.e., the function has not been set to **Disabled**). If the integrated AR function is activated, zone Z1B can be released in the first AR cycle provided that parameter 1657 **1st AR -> Z1B** is set accordingly.

If the distance protection is operated with one of the teleprotection schemes described in 2.7, the signal transmission logic controls the overreaching zone, i.e. it determines whether a non-delayed trip (or delayed with T1B) is permitted in the event of faults in the overreaching zone (i.e. up to the reach limit of zone Z1B) at both line ends. Whether the automatic reclosure device is ready for reclosure or not is irrelevant since the teleprotection function ensures the selectivity over 100% of the line length and fast tripping.

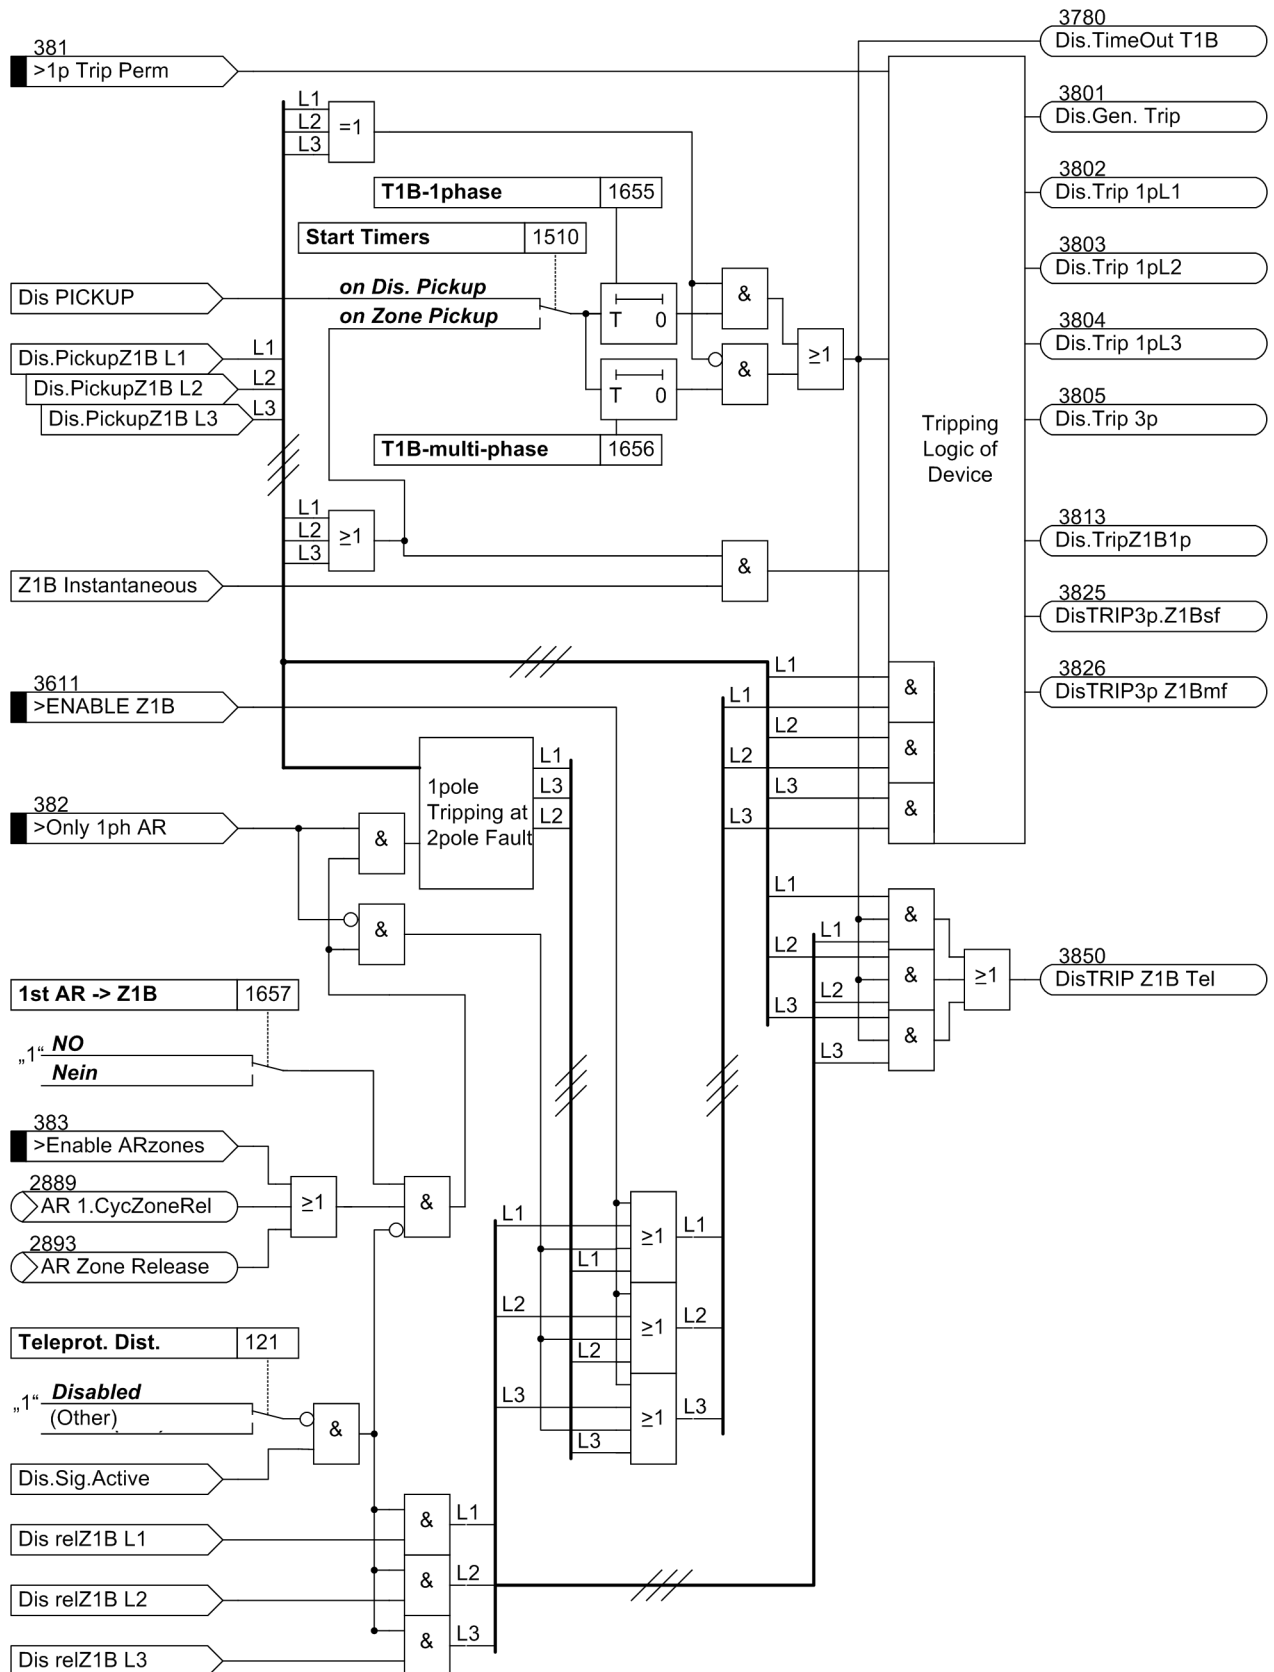


Figure 2-74 Tripping logic for the controlled zone Z1B

Tripping logic

In the actual tripping logic, the output signals generated by the individual zones are combined to form the output signals „Dis.Gen. Trip“, „Dis.Trip 1pL1“, „Dis.Trip 1pL2“, „Dis.Trip 1pL3“, „Dis.Trip 3p“. The single-pole information implies that tripping will take place single-pole only. Furthermore, the zone that initiated the tripping is identified; if single-pole tripping is possible, this is also alarmed as shown in the zone logic diagrams (Figures 2-70 to 2-74). The actual generation of the commands for the tripping (output) relay is executed in the tripping logic of the entire device.

2.5.4.2 Setting Notes

The trip delay times of the distance stages and intervention options which are also processed in the tripping logic of the distance protection were already considered with the zone settings.

Further setting options which affect the tripping are described as part of the tripping logic of the device.

2.6 Power Swing Detection (optional)

7SD5 has an integrated power swing supplement which allows both the blocking of trips by the distance protection during power swings (power swing blocking) and the tripping during unstable power swings (out-of-step tripping). To avoid uncontrolled tripping, the distance protection devices are supplemented with power swing blocking functions. At particular locations in the system, out-of-step tripping devices are also applied to split the system into islanded networks at selected locations, when system stability (synchronism) is lost due to severe (unstable) power swings.

2.6.1 Method of Operation

Following dynamic events such as load jumps, short-circuits, reclose dead times or switching actions it is possible that the generators must realign themselves, in an oscillatory manner, with the new load balance of the system. The distance protection registers large transient currents during the power swing and, especially at the electrical centre, small voltages (Figure 2-75). Small voltages with simultaneous large currents apparently imply small impedances, which again could lead to tripping by the distance protection. In expansive networks with large transferred power, even the stability of the energy transfer could be endangered by such power swings.

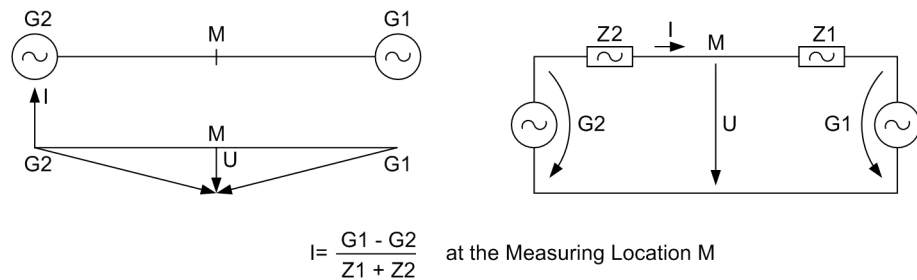


Figure 2-75 Power swing



Note

The power swing supplement works together with the impedance pickup and is only available in this combination.

The functional description is demonstrated using the example of the polygon characteristic. It is analogously relevant for the MHO characteristic (considering the corresponding MHO circles instead of the polygons).

To detect a power swing, the rate of change of the impedance vectors is measured. The indication is triggered when the impedance vector enters the power swing measuring range PPOL (refer to Figure 2-76) and the other criteria of power swing detection are met. The fault detection range APOL consists of the largest setting values for R and X (polygon characteristic) or of the largest setting value for ZR (MHO characteristic) of all activated zones. The power swing zone has a minimum distance Z_{Diff} of $5 \, \Omega$ (at $I_N = 1 \, A$) or $1 \, \Omega$ (at $I_N = 5 \, A$) in all directions from the fault detection zone. In the event of a short-circuit (1), the impedance vector abruptly changes from the load condition into this fault detection range. However, in the event of a synchronous power

swing, the apparent impedance vector initially enters the power swing range PPOL and only later enters the fault detection range APOL (2). It is also possible that a power swing vector will enter the area of the power swing range and leave it again without coming into contact with the fault detection range (3). If the vector enters the power swing polygon and passes through it leaving on the opposite side, then the sections of the network seen from the relay location have lost synchronism (4): The power transfer is unstable.

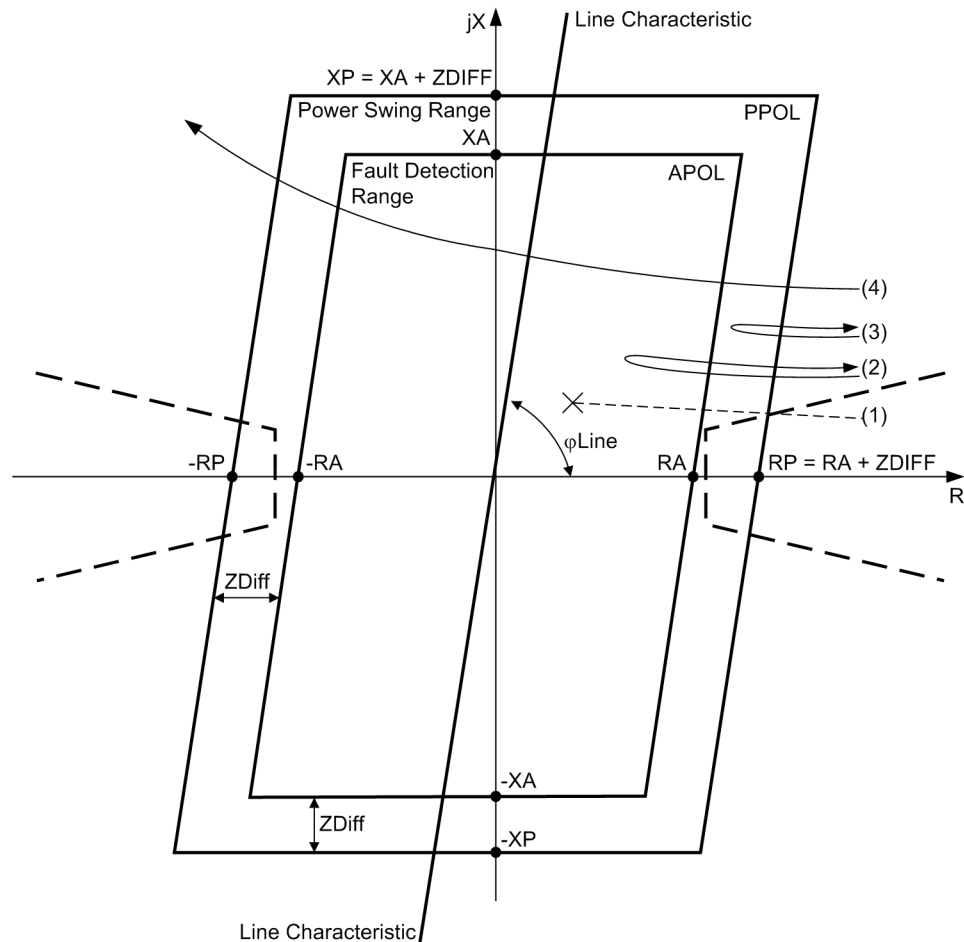


Figure 2-76 Pickup characteristic of the power swing detection for a polygon.

The same applies to the MHO characteristic (refer to Figure 2-77). The power swing circle also has a distance Z_{Diff} of 5Ω (at $I_N = 1 \text{ A}$) or 1Ω (at $I_N = 5 \text{ A}$) from the largest zone circle. If one or more reverse zones are set, this impedance distance from all zones is maintained.

The rate of change of the 3 impedance vectors is monitored in $1/4$ cycle intervals.

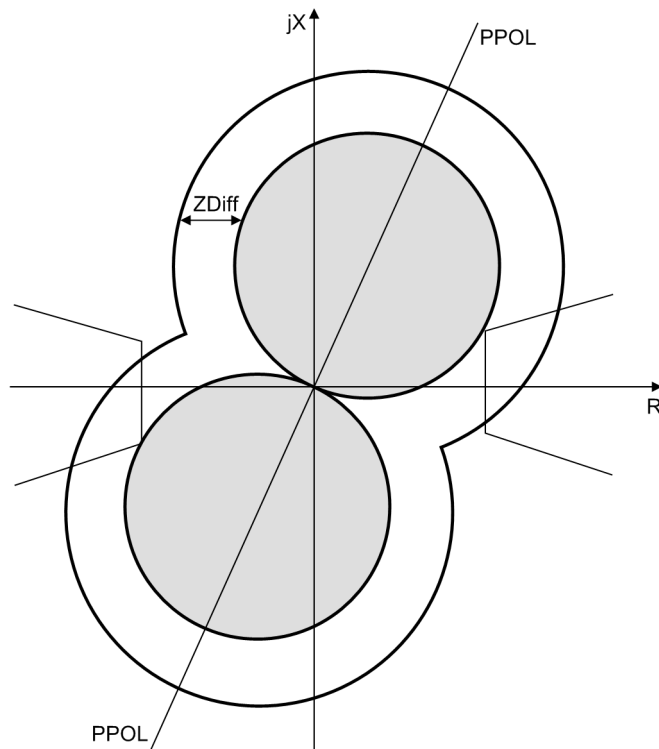


Figure 2-77 Pickup characteristic of the power swing detection for the MHO characteristic

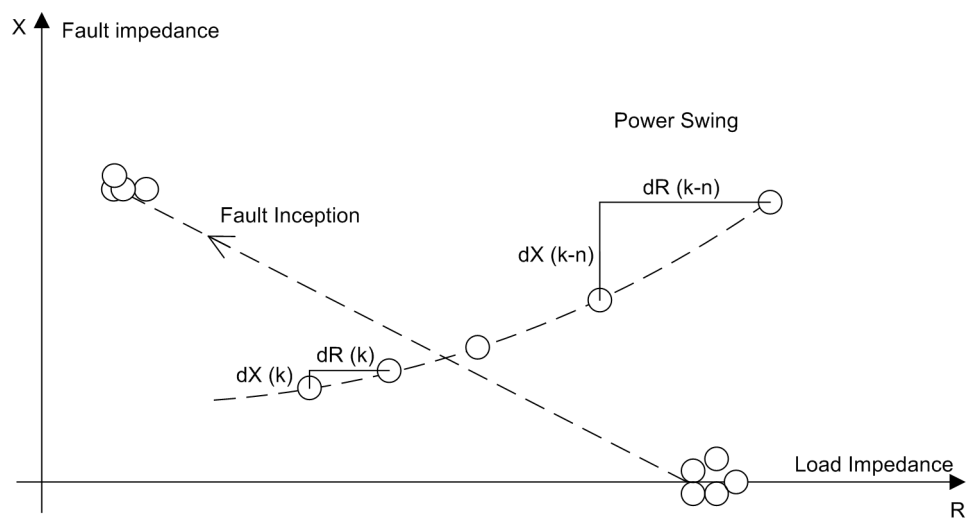


Figure 2-78 Impedance vector during power swing

Trajectory Continuity and Monotony

The rate of change of the impedance vector is very important for the differentiation between faults and power swing conditions. This is shown in Figure 2-78. During the power swing the measured impedance from one sample to the next has a defined change in R and X , referred to as $dR(k)$ and $dX(k)$. Important is also the fact that from one sample to the next the difference is small: i.e. $|dR(k) - dR(k+1)| < \text{threshold}$.

During a fault entry there is a rapid change that will not cause the power swing function to pick up.

Trajectory Stability

When the impedance vector enters the impedance characteristic during a power swing this is on a point of the elliptical curve that corresponds to steady state instability. For release of the power swing detection a further criterion is therefore used. In Figure 2-79 the range for steady state instability is shown. This range is detected in 7SD5. This is done by calculating the centre of the ellipse and checking if the actual measured X value is less than this value.

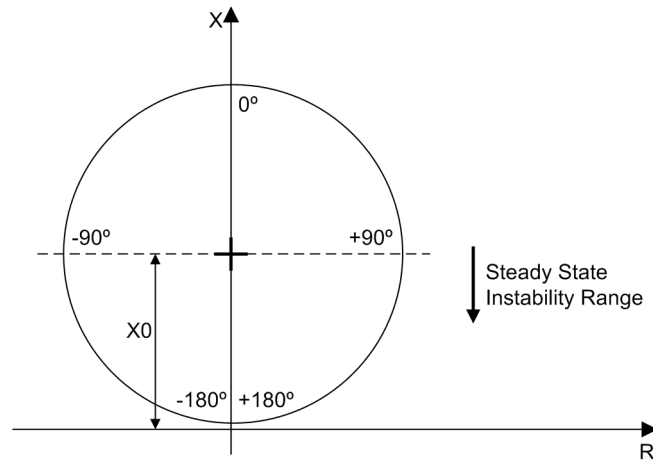


Figure 2-79 Steady state instability range

Trajectory Symmetry

By including a symmetry check in the release logic of the power swing blocking function, no power swing blocking will be done for an unsymmetrical system fault without participation of ground. To provide a detection of a power swing even during single pole opening, the symmetry check is done only during slow power swings. During slow power swings a power swing blocking is only available under symmetrical operating conditions or 3-pole short circuits.

Power Swing Detection

To ensure stable and secure operation of the power swing detection without risking unwanted power swing blocking during power system faults, a logical combination of a number of measuring criteria are used.

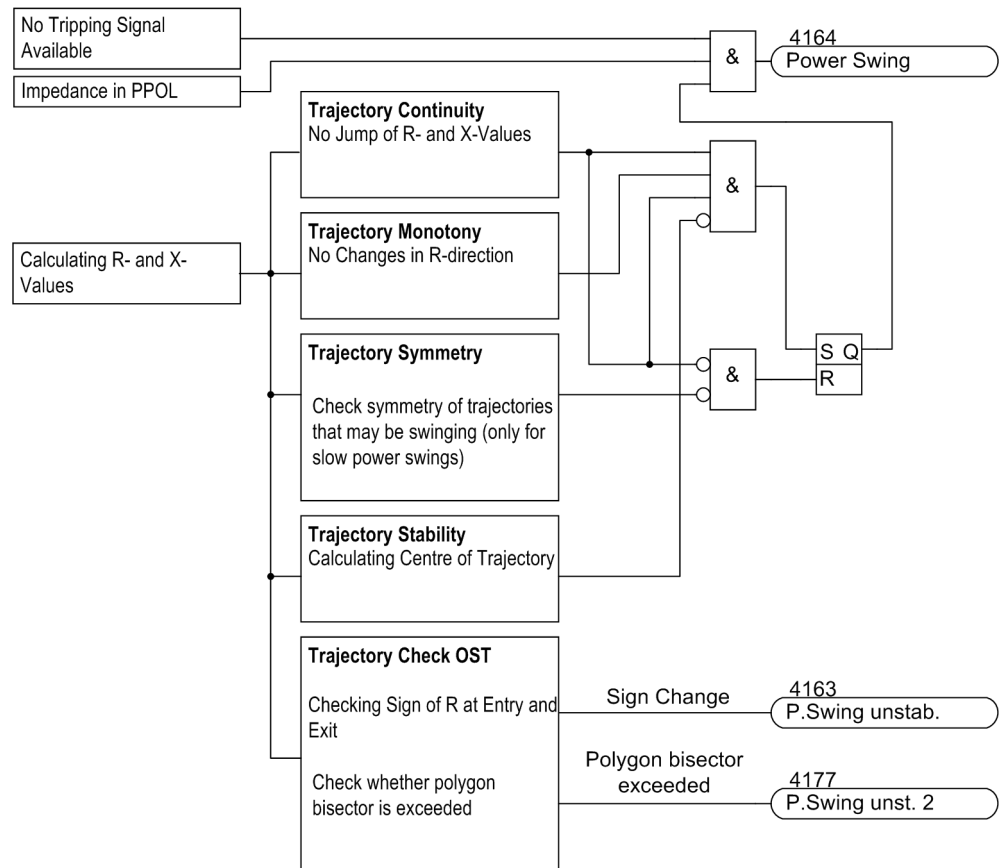


Figure 2-80 Logic diagram of power swing detection

In Figure 2-80 a simplified logic diagram for the power swing function is given. This measurement is done on a per phase basis although Figure 2-80 only shows the logic for one phase. Before a power swing detected signal is generated, the measured impedance must be inside the power swing polygon (PPOL).

In the following there are 4 measuring criteria:

Trajectory continuity	The calculated R and X values must create a constant line. There must be no jump from one measured value to the next. Refer to Figure 2-78.
Trajectory monotony	The impedance trajectory must initially not change R-direction. Refer to Figure 2-78.
Trajectory symmetry	During slow swing processes the impedance trajectories of the three phases must be symmetrical.
Trajectory stability	When the impedance trajectory enters the PPOL during a swing condition, the system must be in the area of steady state instability. In Figure 2-79 this corresponds to the lower half of the circle.

All these conditions must be true for the generation of a power swing block condition. Once the power swing block condition is set it will remain picked up until the impedance vector leaves the power swing polygon (PPOL). This is unless a fault occurs during this phase. The detection of a jump in the trajectory or non-symmetry of the trajectories will reset the power swing blocking condition. The power swing detection can be blocked via a binary input.

Power Swing Blocking

The power swing blocking affects the distance protection. If the criteria for power swing detection have been fulfilled in at least one phase, the following reactions are possible in relation to the power swing blocking function (set in address 2002 **P/S Op. mode**):

- Blocking of the trip command for all zones (**All zones block**): The trip command of the distance protection is blocked for all zones during a power swing.
- Blocking of the trip command for the first zone only (**Z1/Z1B block**): The trip command of the first zone (Z1) and that of the overreaching zone (Z1B) are blocked during a power swing. Faults in other zones are tripped with the associated grading time.
- Blocking of the trip command for the higher zones only (**Z2 to Z5 block**): the higher zones (Z2 to Z5) are blocked for the tripping during a power swing. Only a pickup in the first zone or the overreach zone (Z1 and Z1B) can lead to a trip command.
- Blocking of the first two zones (**Z1, Z1B, Z2 block**): The trip commands of the first and second zones (Z1 and Z2) and the overreaching zone (Z1B) are blocked during a power swing. A pickup in one of the higher zones (Z3 to Z5) can still lead to a trip.

The effect of the power swing block on the distance protection will be prolonged for a defined time (address 2007 **Trip DELAY P/S**). Thus transient states (e.g. switching operations) are compensated, which occur during a power swing and cause a jump in the measured quantities.

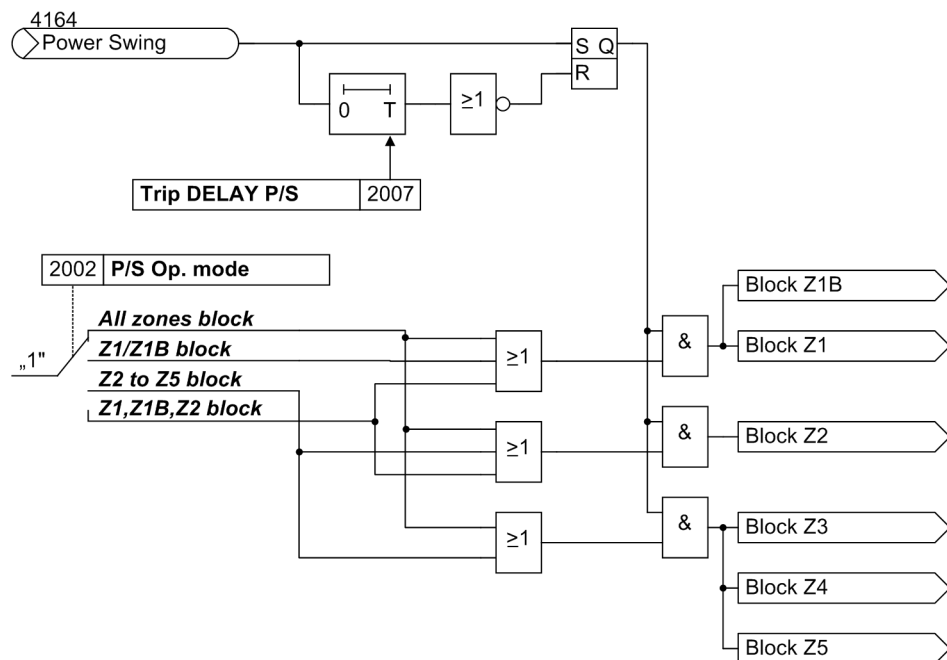


Figure 2-81 Blocking logic of the power swing supplement

Only trip commands in those phases are blocked in which power swings were detected. The associated measures taken apply to all phases when power swing has been detected. They are active for as long as the measured impedance vector is inside the power swing range PPOL, or if due to an abrupt change of the associated impedance vector the power swing criteria are no longer satisfied.

It is possible with No. 4160 „>Pow. Swing BLK“ to block the power swing detection via a binary input.

The logic shown in Figure 2-82 applies similarly for all other zones.

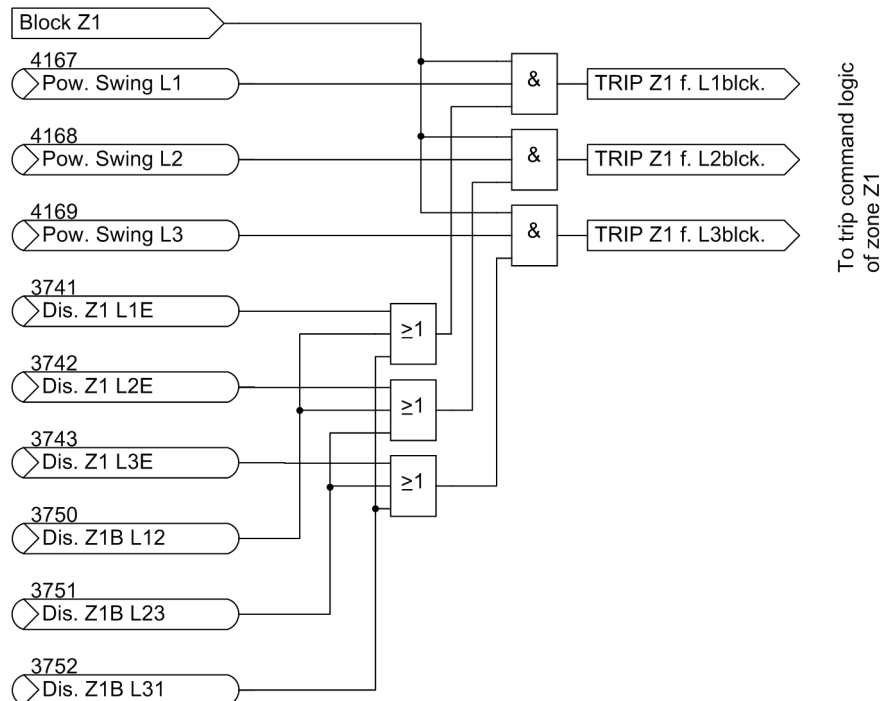


Figure 2-82 Blocking logic of the power swing supplement for zone Z1

Power Swing Tripping

If tripping in the event of an unstable power swing (out-of-step condition) is desired, the parameter **PowerSwing trip = YES** is set. If the criteria for power swing detection are satisfied, the distance protection is initially blocked according to the configured program for power swing blocking, to avoid tripping by the distance protection.

When the impedance vectors identified by the power swing detection exit the power swing characteristic PPOL, the sign of the R components in the vectors are checked to see if they are the same on exiting and entering the pickup polygon. If this is the case, the power swing process is inclined to stabilize. Otherwise, the vector passed through the power swing characteristic (loss of synchronism, case (4) in Figure 2-76). In this case power transmission is no longer possible. The device outputs an indication to that effect (No. 4163 „P.Swing unstab.“), provided that the parameter at address 2006 **PowerSwing trip** is set to **NO**. Indication No. 4163 „P.Swing unstab.“ is a pulse with a duration of approx. 50 ms, which can also be processed further via output relay, e.g. for a cycle counter or a pulse counter.

Once instability is detected, the device issues a three-pole trip command, thereby isolating the two system segments from each other. Power swing tripping is alarmed.

Indication No. 4177 „P.Swing unst. 2“ will already be transmitted when the impedance vector exceeds the polygon bisect through the origin. The angle of this straight line corresponds to the inclination angle of the polygons (address 1511 **Distance Angle**). Normally, this straight line is identical with the impedance characteristic of the power line. This indication is also a pulse with a duration of approx. 50 ms, which can also be processed further via CFC logic operation, however, does not result in tripping.

As the operating range of the power swing supplement depends on the distance protection settings, the power swing tripping can only be active when the distance protection has been activated.

2.6.2 Setting Notes

The power swing supplement is only active if it has been set to **Power Swing = Enabled** (address 120) during the configuration. For **Power Swing** no other parameters have to be set.

The four possible programs may be set in address 2002 **P/S Op. mode**, as described in Section 2.6: **All zones block**, **Z1/Z1B block**, **Z2 to Z5 block** or **Z1, Z1B, Z2 block**.

Additionally the tripping function for unstable oscillations (out-of-step condition, loss of system synchronism) can be set with parameter **PowerSwing trip** (address 2006), which should be set to **YES** if required (presetting is **NO**). In the event of power swing tripping it is recommended to set **P/S Op. mode = All zones block** for the power swing blocking, to avoid premature tripping by the distance protection.

The tripping delay after power swing blocking can be set in address 2007 **Trip DELAY P/S**.



Note

In order to ensure optimum power swing detection even under unfavourable conditions, it is recommended to set a non-directional distance zone. This zone should include all other zones. Preferably zone Z5 should be used for this. If tripping in zone Z5 is not desired, the delay time T5 can be set to infinite. The distance to the zones included in Z5 is not critical and may even be zero. The setting in negative X5 direction should not be less than about 50% of the value of the positive X5 direction, i.e. address 1646 \geq 50% address 1643.

2.6.3 Settings

Addr.	Parameter	Setting Options	Default Setting	Comments
2002	P/S Op. mode	All zones block Z1/Z1B block Z2 to Z5 block Z1, Z1B, Z2 block	All zones block	Power Swing Operating mode
2006	PowerSwing trip	NO YES	NO	Power swing trip
2007	Trip DELAY P/S	0.08 .. 5.00 sec; 0	0.08 sec	Trip delay after Power Swing Blocking

2.6.4 Information List

No.	Information	Type of Information	Comments
4160	>Pow. Swing BLK	SP	>BLOCK Power Swing detection
4163	P.Swing unstab.	OUT	Power Swing unstable
4164	Power Swing	OUT	Power Swing detected
4166	Pow. Swing TRIP	OUT	Power Swing TRIP command
4167	Pow. Swing L1	OUT	Power Swing detected in L1
4168	Pow. Swing L2	OUT	Power Swing detected in L2
4169	Pow. Swing L3	OUT	Power Swing detected in L3
4177	P.Swing unst. 2	OUT	Power Swing unstable 2

2.7 Teleprotection for Distance Protection (optional)

2.7.1 General

Purpose of Teleprotection

Faults which occur on the protected line, beyond the first distance zone, can only be cleared selectively by the distance protection after a delay time. On line sections that are shorter than the smallest sensible distance setting, faults can also not be selectively cleared instantaneously.

To achieve non-delayed and selective tripping on 100 % of the line length for all faults by the distance protection, the distance protection can exchange and process information with the opposite line end by means of teleprotection schemes. This is realized by means of send outputs and receive contacts.

As an alternative, digital communication lines can be used for signal transmission.

Transmission modes

A distinction is made between underreach and overreach schemes.

In underreach schemes, the protection is set with a normal grading characteristic. If a trip command occurs in the first zone, the other line end receives this information via a transmission channel. There the received signal initiates a trip, either by activation of overreach zone Z1B or via a direct trip command.

7SD5 allows:

- PUTT (Pickup),
- Permissive Underreach Transfer Trip with Zone Acceleration Z1B (PUTT),
- Direct (Underreach) Transfer Trip

In overreach schemes, the protection works from the start with a fast overreaching zone. This zone, however, can only cause a trip if the opposite end also detects a fault in the overreaching zone. A release (unblock) signal or a block signal can be transmitted. The following teleprotection schemes are differentiated:

Permissive (release) schemes:

- Permissive Overreach Transfer Trip (POTT) with overreaching zone Z1B
- Directional comparison,
- Unblocking with overreaching zone Z1B.

Blocking scheme:

- Blocking of overreaching zone Z1B.

Schemes via pilot wire:

- Pilot Wire Comparison
- Reverse Interlocking

As the distance zones Z1 ... Z5 (without Z1B) function independently, an instantaneous trip in Z1 without a release or blocking signal is always possible. If fast tripping in Z1 is not required (e.g. on very short lines), then Z1 must be delayed with T1.

Transmission channels

At least one channel in each direction is required for the signal transmission. For example, fibre optic connections or voice frequency modulated high frequency channels via pilot cables, power line carrier or microwave radio links can be used for this purpose.

As an alternative, digital communication lines connected to one of the protection data interfaces can be used for signal transmission. This connection can, for example, consist of a fibre-optic cable, a communication network or dedicated cables (control cables or twisted phone wires). In this case, the send and receive signals must be assigned to fast command channels of the protection data interface (DIGSI matrix).

The pilot wire comparison, that is exclusively applied to short lines, enables the user to operate a pilot wire pair (pilot wires or control wires) with direct current to guarantee the exchange of information between the line ends. Also the reverse interlocking operates with DC control signals.

7SD5 also allows the transmission of phase-selective signals. This has the advantage that reliable single-pole automatic reclosure can be carried out even if two single-phase faults occur on different lines in the system.

The signal transmission schemes are also suited for three terminal lines (teed feeders). In this case, a signal is transmitted from each of the three ends to each of the others in both directions.

If disturbances occur in the transmission path, the teleprotection supplement may be blocked without affecting the normal distance protection grading. The measuring reach control (enable zone Z1B) can be transmitted to the internal automatic reclose function or via the binary input „>Enable ARzones“ to an external reclosure device. With conventional signal transmission schemes, the disturbance is signalled by a binary input, with digital communication it is automatically detected by the protection device.

2.7.2 Method of Operation

Activation and Deactivation

The teleprotection function can be switched on and off by means of the parameter 2101 **FCT Telep. Dis.**, or via the system interface (if available) and via binary input (if this is allocated). The switched state is saved internally (refer to Figure 2-83) and secured against loss of auxiliary supply. It is only possible to switch on from the source where previously it had been switched off from. To be active, it is necessary that the function is not switched off from one of the three switching sources.

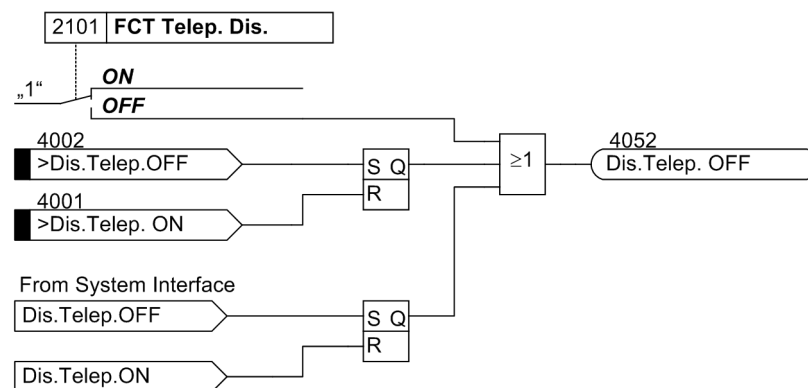


Figure 2-83 Activation and deactivation of teleprotection

2.7.3 PUTT (Pickup)

The following scheme is suited for conventional transmission media.

Principle

The PUTT scheme functionality is shown in Figure 2-84. In the case of a fault inside zone Z1, the transfer trip signal is sent to the opposite line end. The signal received there initiates the trip, provided that the protection function has picked up. The transmit signal can be prolonged by T_s (settable in address 2103 **Send Prolong.**), to compensate for possible differences in the pickup time at the two line ends. The distance protection is set such that the first zone reaches up to approximately 85% of the line length. On three terminal lines Z1 is also set to approximately 85 % of the shorter line section, but at least beyond the tee-off point.

The overreach zone Z1B is without consequence for the teleprotection scheme in this operating mode. It may, however, be controlled by the automatic reclosing function (see also section 2.16).

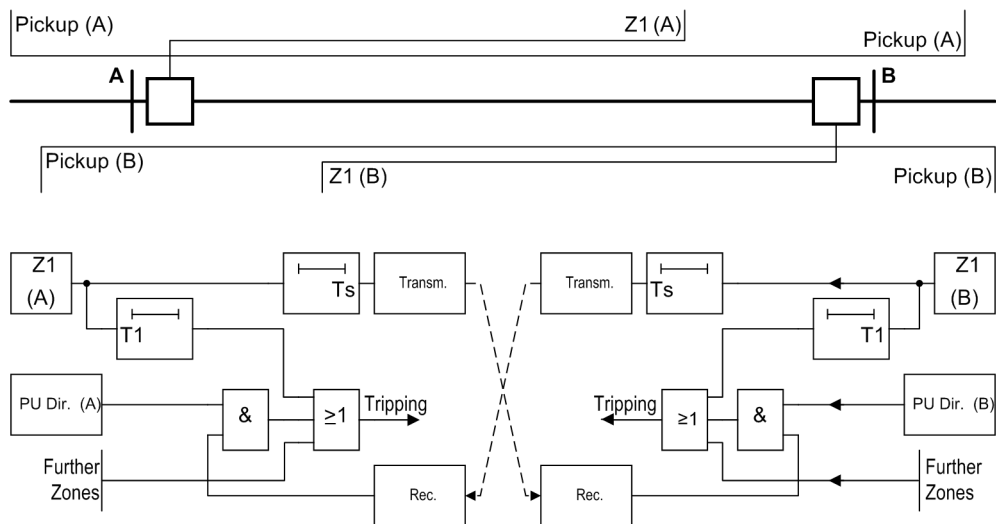


Figure 2-84 Operation scheme of the permissive underreach transfer trip with pickup

Sequence

The permissive transfer trip should only send for faults in the „Forward“ direction. Accordingly, the first zone Z1 of the distance protection must definitely be set to **Forward** in address 1601 **Op. mode Z1**, refer also to Section 2.5.1 under the margin heading „Independent Zones Z1 up to Z5“.

On two terminal lines, the signal transmission may be phase segregated. Send and receive circuits in this case are built up for each phase. On three terminal lines, the transmit signals are sent to both opposite line ends. The receive signals are then combined with an OR logic function. With the parameter **Type of Line** (address 2102) the device is informed as to whether it has one or two opposite line ends.

If at one line end there is weak or zero infeed, so that the distance protection does not pick up, the circuit breaker can still be tripped. This „weak-infeed tripping“ is referred to in Section 2.11.2.

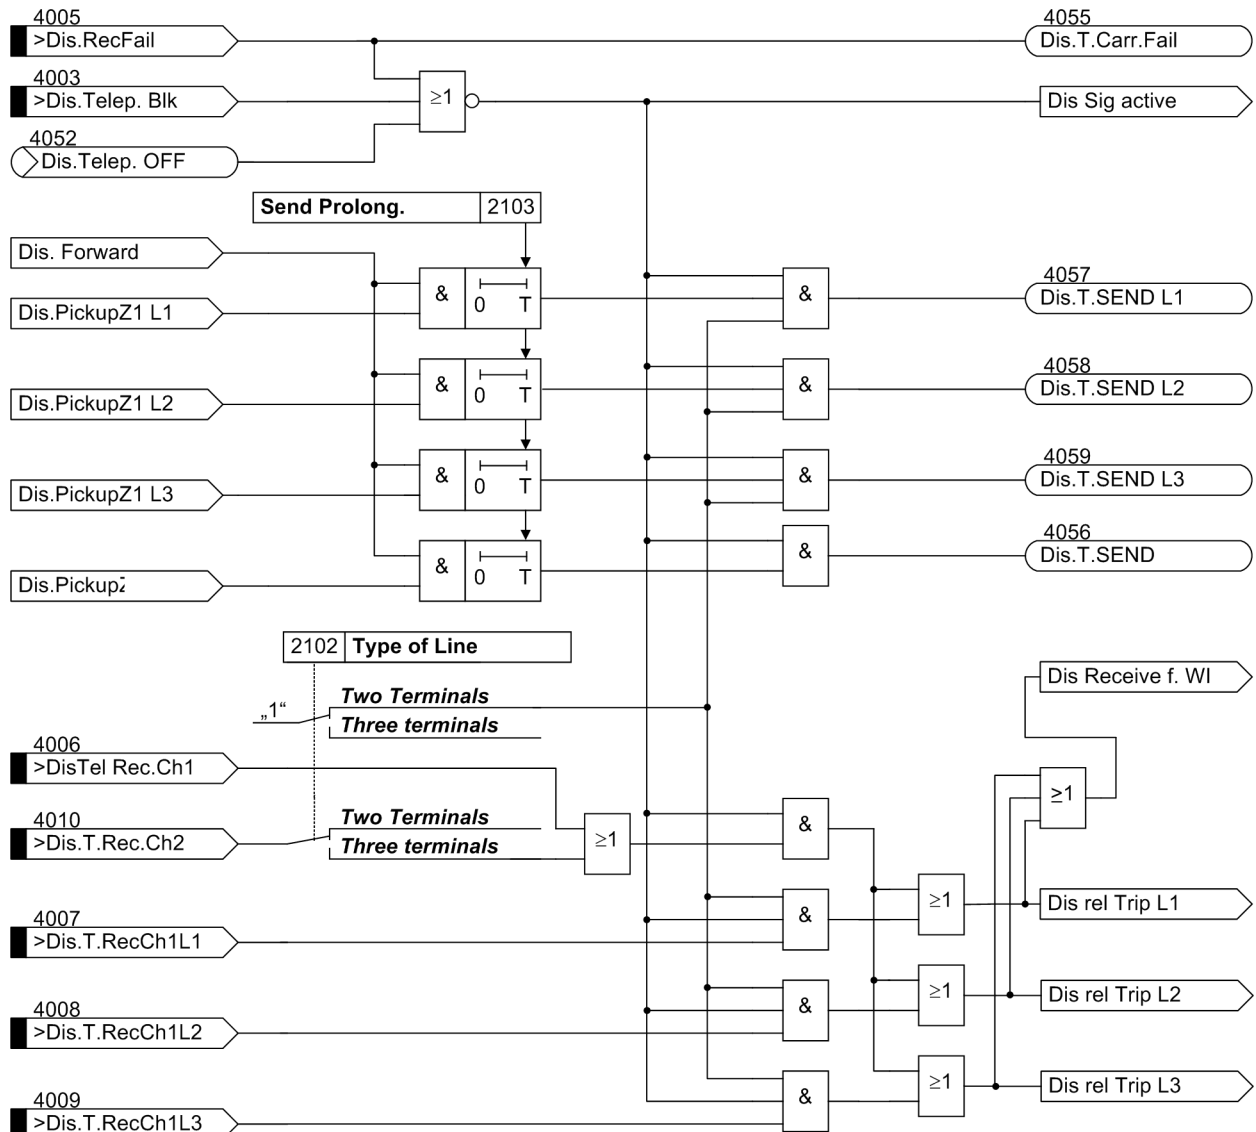


Figure 2-85 Logic diagram of the permissive underreach transfer trip (PUTT) with pickup (one line end)

2.7.4 Permissive Underreach Transfer Trip with Zone Acceleration Z1B (PUTT)

Principle

Figure 2-86 shows the operation scheme for the permissive underreach transfer trip with zone acceleration. In the case of a fault inside zone Z1, the transfer trip signal is sent to the opposite line end. The signal received there causes tripping if the fault is detected in the preset direction inside zone Z1B. The transmit signal can be prolonged by T_S (settable at address 2103 **Send Prolong.**) to compensate for possible differences in the pickup times at the two line ends. The distance protection is set in such a way that the first zone reaches up to approximately 85% of the line length, the overreaching zone, however, is set to reach beyond the next station (approximately 120% of the line length). On three terminal lines Z1 is also set to approximately 85% of the shorter line section, but at least beyond the tee-off point. Z1B must securely reach beyond the longer line section, even when additional infeed is possible via the tee point.

In address 121 **Teleprot. Dist.** the **PUTT (Z1B)** option can be configured.
 Address 2101 **FCT Telep. Dis.** allows to set the teleprotection scheme to (**ON**).

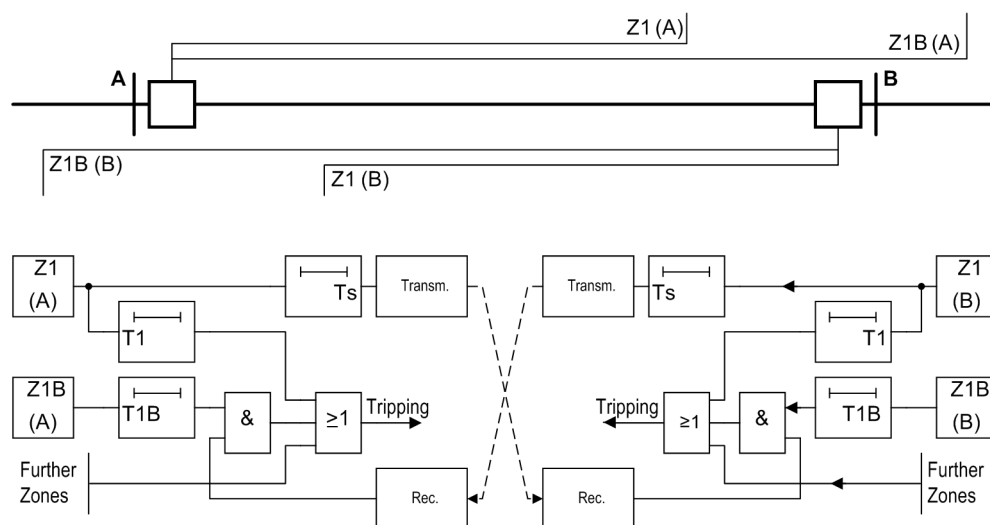


Figure 2-86 Operation scheme of the permissive underreach transfer trip via Z1B

Sequence

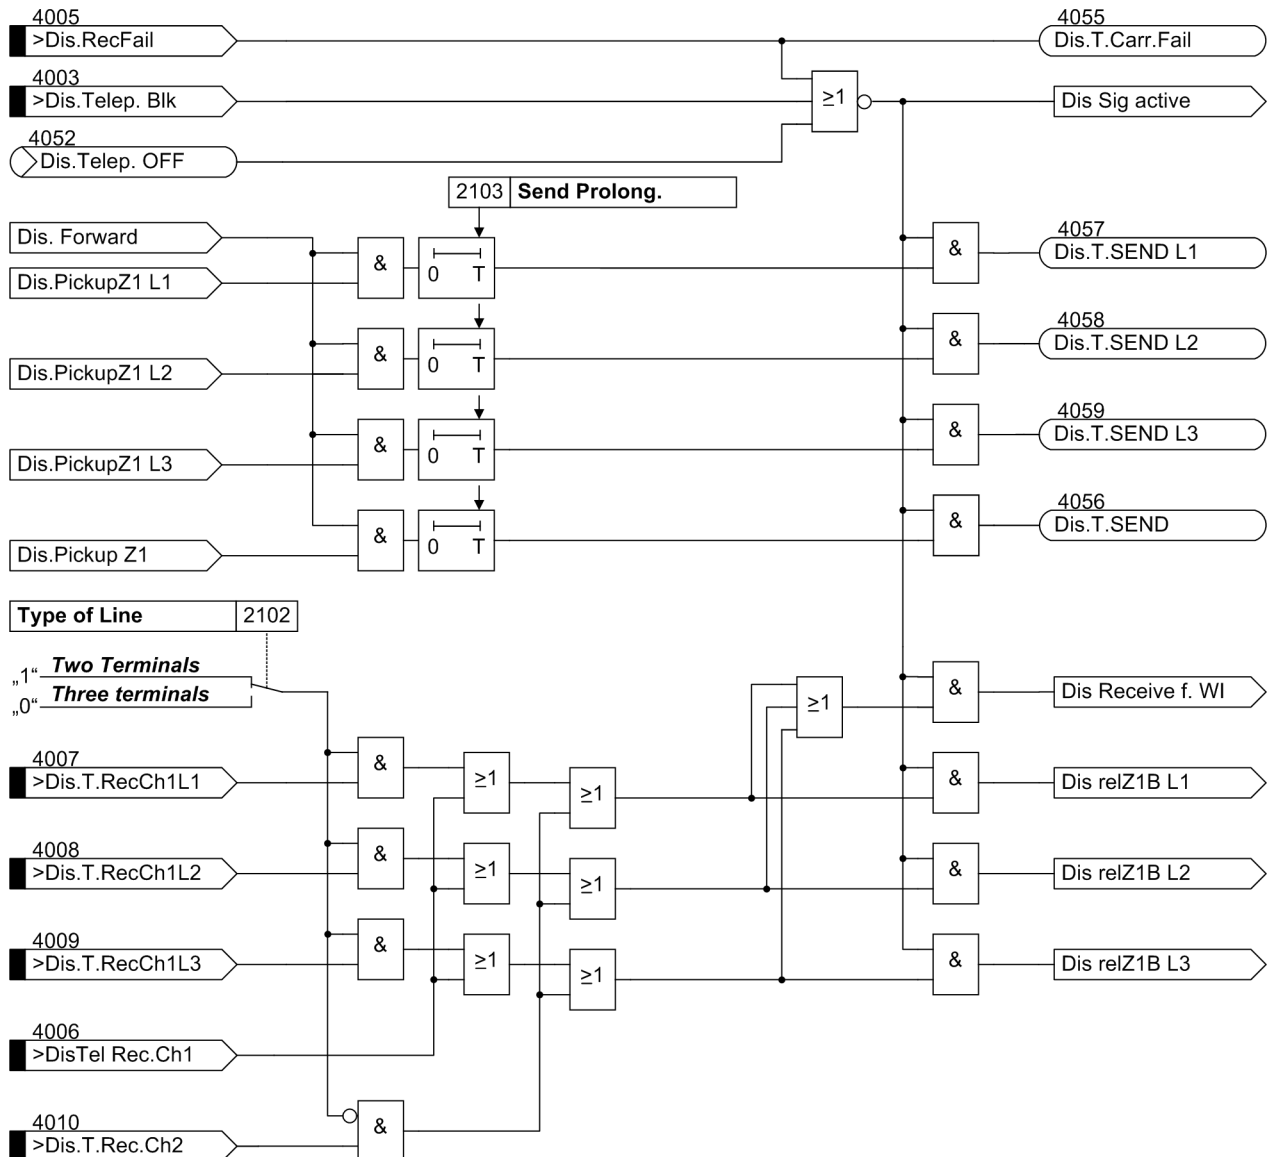


Figure 2-87 Logic diagram of the permissive underreach transfer trip (PUTT) using Z1B (one line end)

The permissive transfer trip should only send for faults in the „Forward“ direction. Accordingly, the first zone Z1 of the distance protection must definitely be set to 1601 **Op. mode Z1** in address **Forward**, see also Section 2.5.1 under margin heading „Independent zones Z1 up to Z5“.

On two terminal lines, the signal transmission may be phase-selective. In this case, send and receive circuits are built up for each phase. On three terminal lines, the transmit signal is sent to both opposite line ends. The receive signals are then combined with an OR logic function.

With the parameter **Type of Line** (address 2102) the device is informed as to whether it has one or two opposite line ends.

During disturbance of the signal transmission path, the overreaching zone Z1B may be activated by an automatic reclosure by setting parameter **1st AR -> Z1B**, and by an external recloser device via the binary input „>Enable ARzones“.

If at one line end there is weak or zero infeed, so that the distance protection does not pick up, the circuit breaker can still be tripped. This „weak-infeed tripping“ is described in Section 2.11.2.

2.7.5 Direct Underreach Transfer Trip

Principle

As is the case with PUTT (pickup) or PUTT with zone acceleration, a fault in the first zone Z1 is transmitted to the opposite line end by means of a transfer trip signal. The signal received there causes a trip without further queries after a short security margin T_v (settable in address 2202 **Trip Time DELAY**) (Figure 2-88). The transmit signal can be prolonged by T_s (settable in address 2103 **Send Prolong.**), to compensate for possible differences in the pickup time at the two line ends. The distance protection is set such that the first zone reaches up to approximately 85% of the line length. On three terminal lines Z1 is also set to approximately 85 % of the shorter line section, but at least beyond the tee-off point. Care must be taken to ensure that Z1 does not reach beyond one of the two other line ends. The overreaching zone Z1B is not required here. It may, however, be activated by internal automatic reclosure or external criteria via the binary input „>Enable ARzones“.

The advantage compared to the permissive underreach transfer trip with zone acceleration lies in the fact that both line ends are tripped without the necessity for any further measures, even if one line end has no infeed. There is however no further supervision of the trip signal at the receiving end.

The direct underreach transfer trip application is not provided by its own selectable teleprotection scheme setting, but implemented by setting the teleprotection supplement to operate in the permissive underreach transfer trip scheme (address 121 **Teleprot. Dist. = PUTT (Z1B)** or **PUTT (Pickup)**), and using the binary inputs for direct external trip at the receiving end. Correspondingly, the transmit circuit in Section „The principle of PUTT“ (Figure 2-85) applies. For the receive circuit the logic of the „external trip“ as described in Section 2.12 applies.

On two terminal lines, the signal transmission may be phase segregated. Send and receive circuits in this case are built up for each phase. On three terminal lines, the transmit signals are sent to both opposite line ends. The receive signals are then combined with a logical OR function.

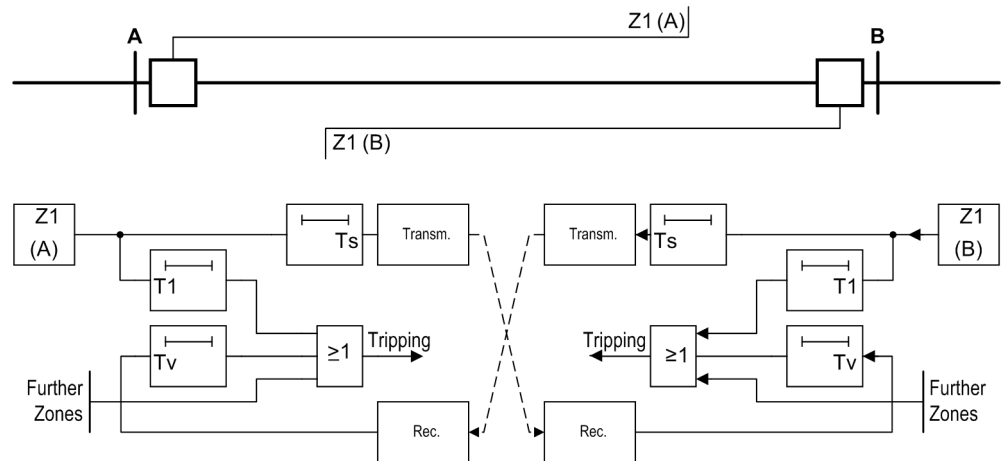


Figure 2-88 Function diagram of the direct underreach transfer trip scheme

2.7.6 Permissive Overreach Transfer Trip (POTT)

Principle

The permissive overreach transfer mode uses a permissive release principle. The overreaching zone Z1B set beyond the opposite station is decisive. This mode can also be used on extremely short lines where a setting of 85% of line length for zone Z1 is not possible and accordingly selective non-delayed tripping could not be achieved. In this case, however, zone Z1 must be delayed by T1, to avoid non-selective tripping by zone Z1 (Figure 2-89).

If the distance protection recognises a fault inside overreaching zone Z1B, it initially sends a release signal to the opposite line end. If a release signal is also received from the opposite end, the trip signal is routed to the command relay. A prerequisite for fast tripping is therefore that the fault is recognised inside Z1B in forward direction at both line ends. The distance protection is set in such a way that overreaching zone Z1B reaches beyond the next station (approximately 120% of the line length). On three terminal lines Z1B must be set to reliably reach beyond the longer line section, even if there is an additional infeed via the tee point. The first zone is set in accordance with the usual grading scheme, i.e. approximately 85% of the line length; on three terminal lines at least beyond the tee point.

The transmit signal can be prolonged by T_s (settable under address 2103 **Send Prolong.**). The prolongation of the send signal only comes into effect if the protection has already issued a trip command. This ensures release of the opposite line end even when the short-circuit has been switched off rapidly by the independent zone Z1.

For all zones except Z1B, tripping results without release from the opposite line end, allowing the protection to function with the usual grading characteristic independent of the signal transmission.

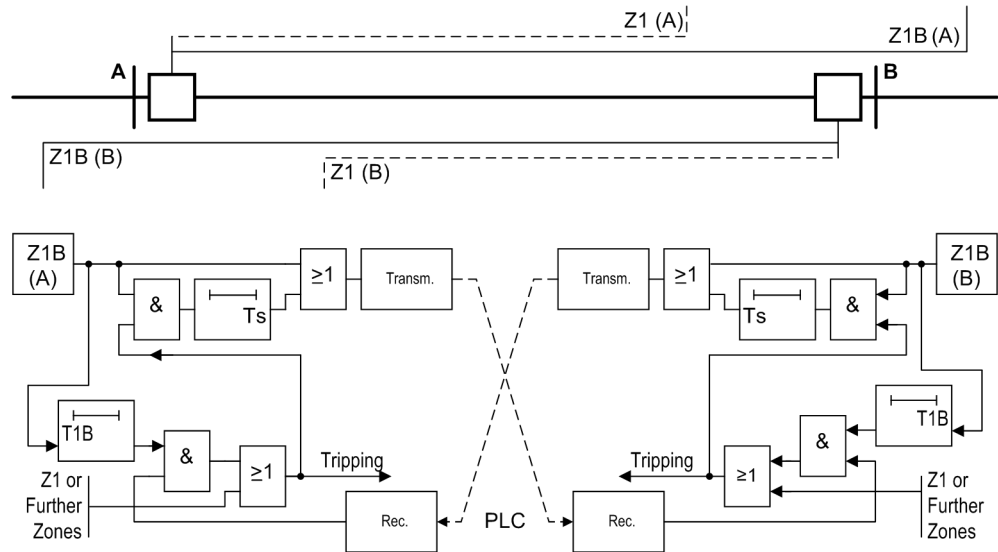


Figure 2-89 Operation scheme of the permissive overreach transfer trip method

Sequence

The permissive overreach transfer trip only functions for faults in the „Forward“ direction. Accordingly, the first overreach zone ZB1 of the distance protection must definitely be set to **Forward** in addresses 1651 **Op. mode Z1B**, refer also to Section 2.5.2 under the margin heading „Controlled Zone ZB1“.

On two terminal lines, the signal transmission may be phase segregated. Send and receive circuits in this case are built up for each phase. On three terminal lines, the transmit signal is sent to both opposite line ends. The receive signals are then combined with a logical AND gate, as all three line ends must transmit a send signal during an internal fault.

With the parameter **Type of Line** (address 2102) the device is informed as to whether it has one or two opposite line ends (Figure 2-90).

During disturbance of the signal transmission path, the overreaching zone Z1B may be activated by an automatic reclosure by setting parameter **1st AR -> Z1B**, and by an external recloser device via the binary input „>Enable ARzones“.

The occurrence of erroneous signals resulting from transients during clearance of external faults or from direction reversal resulting during the clearance of faults on parallel lines, is neutralized by the „Transient Blocking“.

On feeders with single-end infeed, the line end with no infeed cannot generate a release signal as no fault detection occurs there. To achieve tripping by the permissive overreach transfer scheme also in this case, the device features a special function. This „Weak Infeed Function“ (echo function) is referred to in Section „Measures for Weak and Zero Infeed“. It is activated when a signal is received from the opposite line end — in the case of three terminal lines from at least one of the opposite line ends — without the device having detected a fault.

The circuit breaker can also be tripped at the line end with no or only weak infeed. This „weak-infeed tripping“ is referred to in Section 2.11.2.

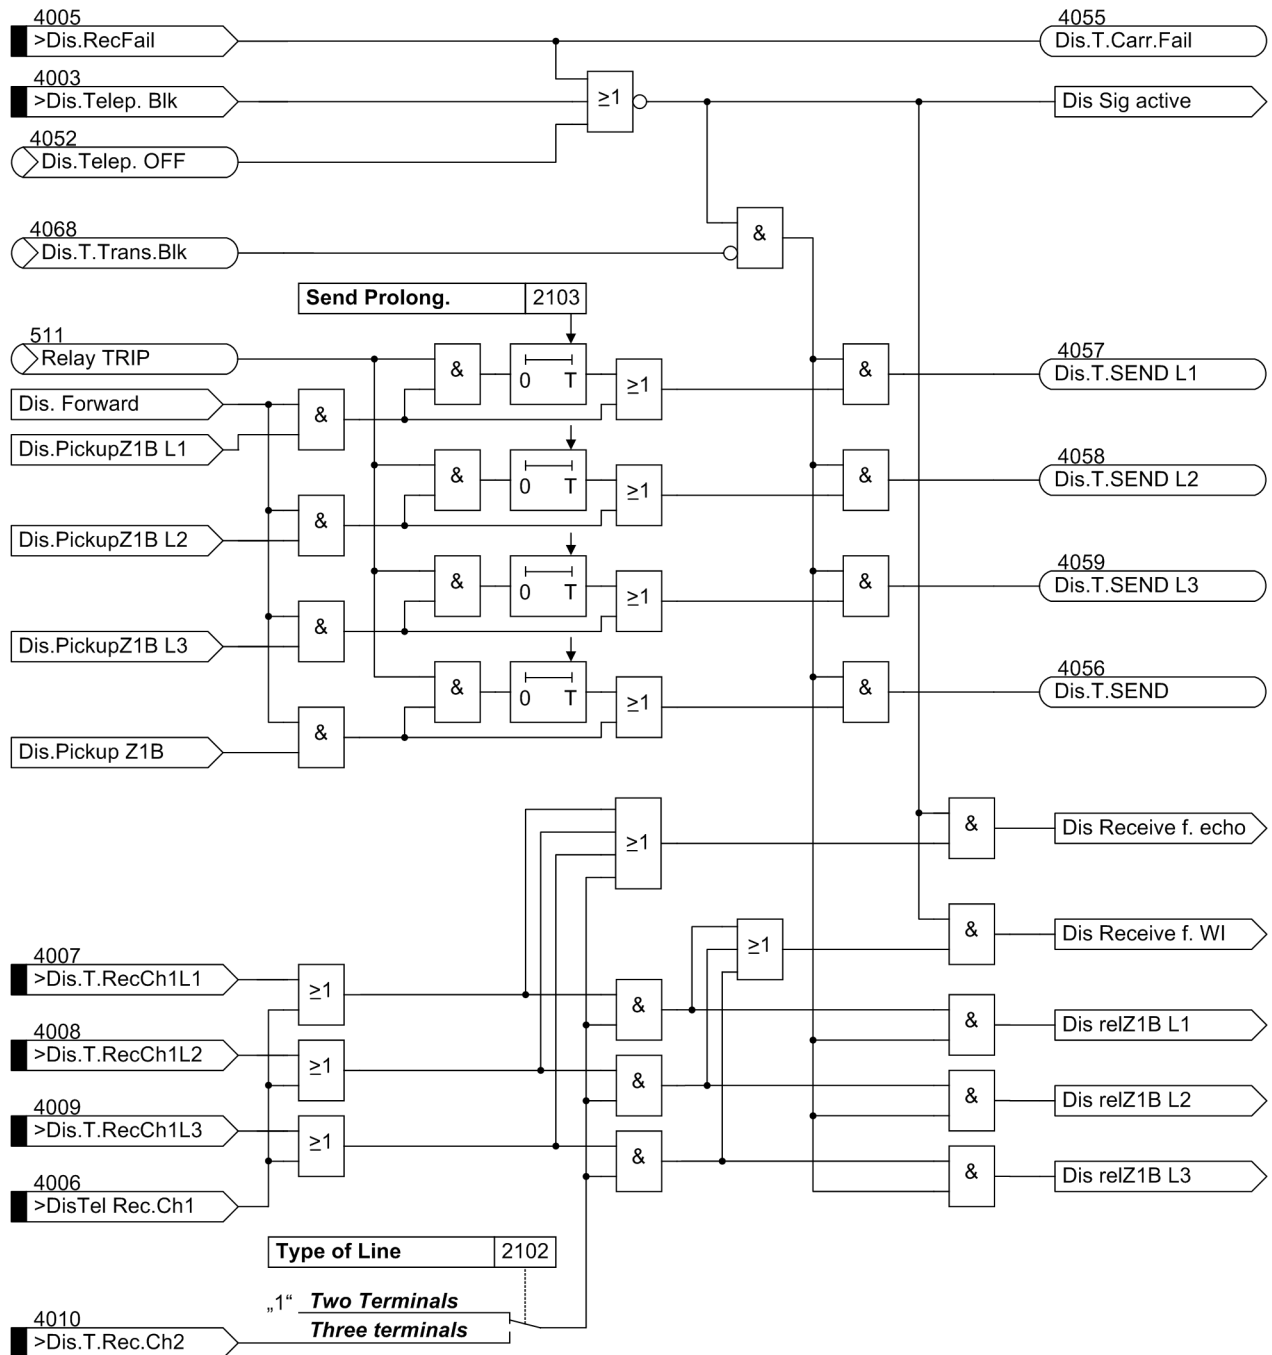


Figure 2-90 Logic diagram of the permissive overreach transfer trip (POTT) scheme (one line end)

2.7.7 Directional comparison pickup

Principle

The directional comparison scheme is a permissive scheme. Figure 2-91 shows the operation scheme.

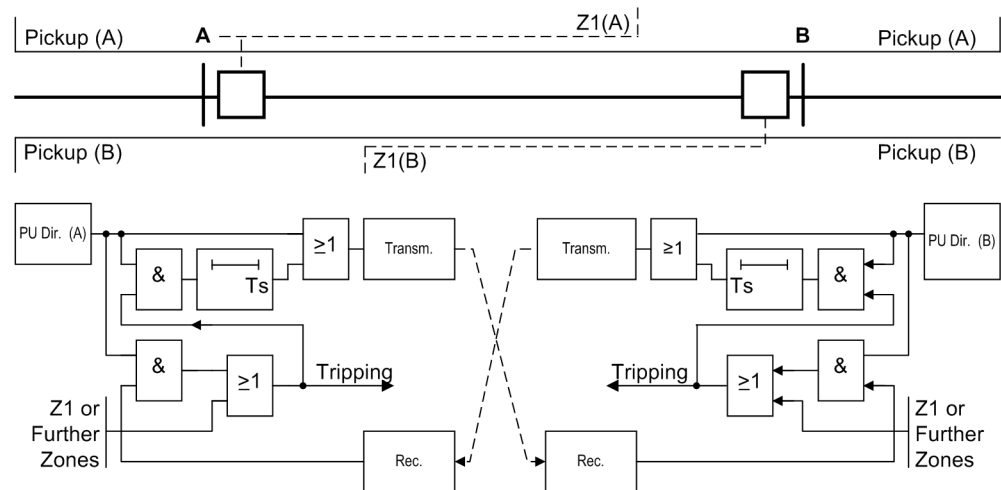


Figure 2-91 Operation scheme of the directional comparison pickup

If the distance protection detects a fault in line direction, it initially sends a release signal to the opposite line end. If a release signal is also received from the opposite line end, a trip signal is transmitted to the trip relay. This is only the case if the opposite line end also detects a fault in line direction. A prerequisite for fast tripping is therefore that the fault is recognized in **both** line ends in forward direction. The distance stages operate independent from the directional comparison pickup.

The transmit signal can be prolonged by T_S (settable under address 2103 **Send Prolong.**). The prolongation of the send signal only comes into effect if the protection has already issued a trip command. This ensures release of the opposite line end even when the short-circuit has been switched off rapidly by the independent zone Z1.

Sequence

Figure 2-92 shows the logic diagram of the directional comparison scheme for one line end.

On two terminal lines, the signal transmission may be phase segregated. Send and receive circuits in this case are built up for each phase. On three terminal lines, the transmit signal is sent to both opposite line ends. The receive signals are then combined with a logical AND gate, as all three line ends must transmit a send signal during an internal fault. With the setting parameter **Type of Line** (address 2102) the device is informed as to whether it has one or two opposite line ends.

The occurrence of erroneous signals resulting from transients during clearance of external faults or from direction reversal resulting during the clearance of faults on parallel lines, is neutralized by the „Transient Blocking“.

On feeders with single-end infeed, the line end with no infeed cannot generate a release signal as no fault detection occurs there. To achieve tripping by the permissive overreach transfer scheme also in this case, the device features a special function. This „Weak Infeed Function“ (echo function) is activated when a signal is received from the opposite line end — in the case of three terminal lines from at least one of the opposite line ends — without the device having detected a fault.

The circuit breaker can also be tripped at the line end with no or only weak infeed. This „weak-infeed tripping“ is referred to in Section 2.11.2.

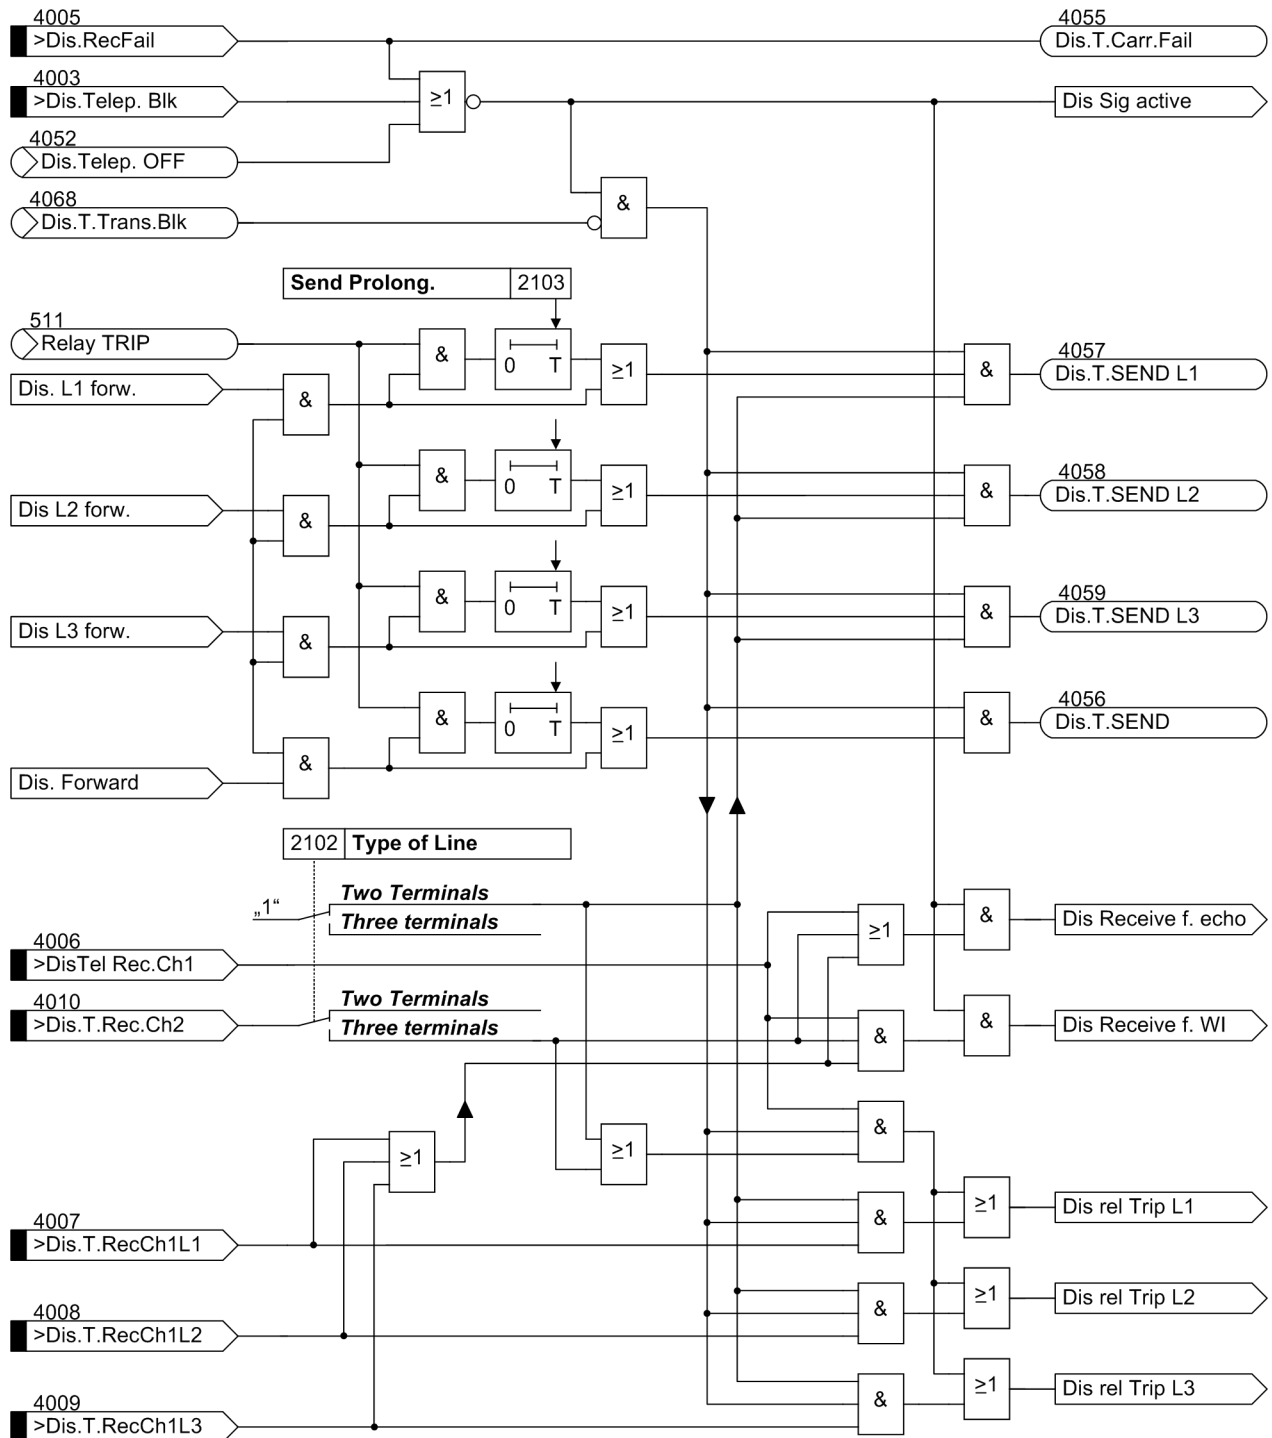


Figure 2-92 Logic diagram of the directional comparison scheme (one line end)

2.7.8 Directional unblocking scheme

Principle

The unblocking method is a permissive scheme. It differs from the permissive over-reach transfer scheme in that tripping is possible also when no release signal is received from the opposite line end. It is therefore mainly used for long lines when the signal must be transmitted across the protected line by means of power line carrier

(PLC) and the attenuation of the transmitted signal at the fault location may be so severe that reception at the other line cannot necessarily be guaranteed. A special unblock logic takes effect here.

The scheme functionality is shown in Figure 2-93.

Two signal frequencies which are keyed by the transmit output of the 7SD5 are required for the transmission. If the transmission device has a channel monitoring, then the monitoring frequency f_0 is keyed over to the working frequency f_U (unblocking frequency). When the protection recognizes a fault inside the overreaching zone Z1B, it initiates the transmission of the unblock frequency f_U . During the quiescent state or during a fault outside Z1B, or in the reverse direction, the monitoring frequency f_0 is transmitted.

If a release signal is also received from the opposite end, the trip signal is routed to the command relay. Accordingly, it is a prerequisite for fast tripping that the fault is recognised inside Z1B in forward direction at both line ends. The distance protection is set in such a way that overreaching zone Z1B reaches beyond the next station (approximately 120% of the line length). On three terminal lines Z1B must be set to reliably reach beyond the longer line section, even if there is an additional infeed via the tee point. The first zone is set in accordance with the usual grading scheme, i.e. approximately 85% of the line length; on three terminal lines at least beyond the tee point.

The transmit signal can be prolonged by T_S (settable under address 2103 **Send Prolong.**). The prolongation of the send signal only comes into effect if the protection has already issued a trip command. This ensures release of the opposite line end even when the short-circuit has been switched off rapidly by the independent zone Z1.

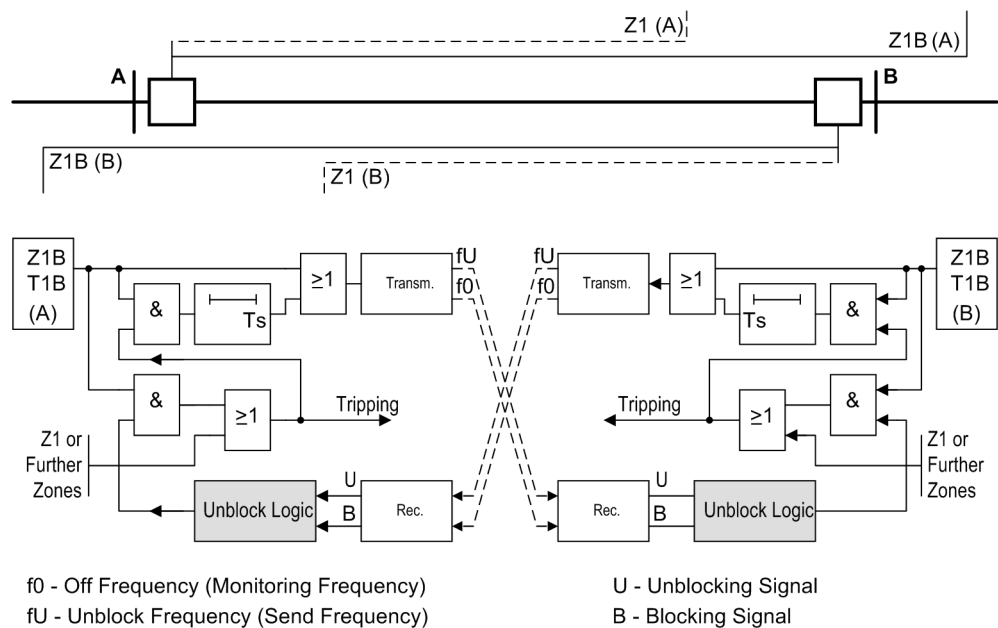


Figure 2-93 Function diagram of the directional unblocking method

For all zones except Z1B, tripping results without release from the opposite line end, allowing the protection to function with the usual grading characteristic independent of the signal transmission.

Sequence

Figure 2-94 shows the logic diagram of the unblocking scheme for one line end.

The unblock scheme only functions for faults in the „forward“ direction. Accordingly, the overreaching zone Z1B of the distance protection must definitely be set to **Forward**: in Address 1651 **Op. mode Z1B**, see also Subsection 2.5.1 at margin heading „Controlled Zone Z1B“.

On two terminal lines, the signal transmission may be phase segregated. Send and receive circuits in this case are built up for each phase. On three terminal lines the send signal is transmitted to both opposite ends. The receive signals are then combined with a logical AND gate, as all three line ends must transmit a send signal during an internal fault. With the setting parameter **Type of Line** (address 2102) the device is informed as to whether it has one or two opposite line ends.

An unblock logic is inserted before the receive logic, which in essence corresponds to that of the permissive overreach transfer scheme, see Figure 2-95. If an interference free unblock signal is received, a receive signal, e.g. „>Dis.T.UB ub 1“, appears and the blocking signal, e.g. „>Dis.T.UB bl 1“ disappears. The internal signal „Unblock 1“ is passed on to the receive logic, where it initiates the release of the overreaching zone Z1B of the distance protection (when all remaining conditions have been fulfilled).

If the transmitted signal does not reach the other line end because the short-circuit on the protected feeder causes too much attenuation or reflection of the transmitted signal, neither the unblocking signal e.g., „>Dis.T.UB ub 1“, nor the blocking signal „>Dis.T.UB bl 1“ will appear on the receiving side. In this case, the release „Unblock 1“ is issued after a security delay time of 20 ms and passed onto the receive logic. This release is however removed after a further 100 ms via the timer stage 100/100 ms. When the transmission is functional again, one of the two receive signals must appear again, either „>Dis.T.UB ub 1“ or „>Dis.T.UB bl 1“; after a further 100 ms (drop-off delay of the timer stage 100/100 ms) the quiescent state is reached again, i.e. the direct release path to the signal „Unblock L1“ and thereby the usual release is possible.

If none of the signals is received for a period of more than 10 s the alarm „Dis.T.UB Fail1“ is generated.

During disturbance of the signal transmission path, the overreaching zone Z1B may be activated by an automatic reclosure (internal or external) via the binary input „>Enable ARzones“.

The occurrence of erroneous signals resulting from transients during clearance of external faults or from direction reversal resulting during the clearance of faults on parallel lines, is neutralized by the „Transient Blocking“.

On feeders with single-end infeed, the line end with no infeed cannot generate a release signal as no fault detection occurs there. To achieve tripping by the directional unblocking scheme also in this case, the device features a special function. This „Weak Infeed Function“ (echo function) is referred to in Section „Measures for Weak and Zero Infeed“. It is activated when a signal is received from the opposite line end — in the case of three terminal lines from at least one of the opposite line ends — without the device having detected a fault.

The circuit breaker can also be tripped at the line end with no or only weak infeed. This „weak-infeed tripping“ is referred to in Section 2.11.2.

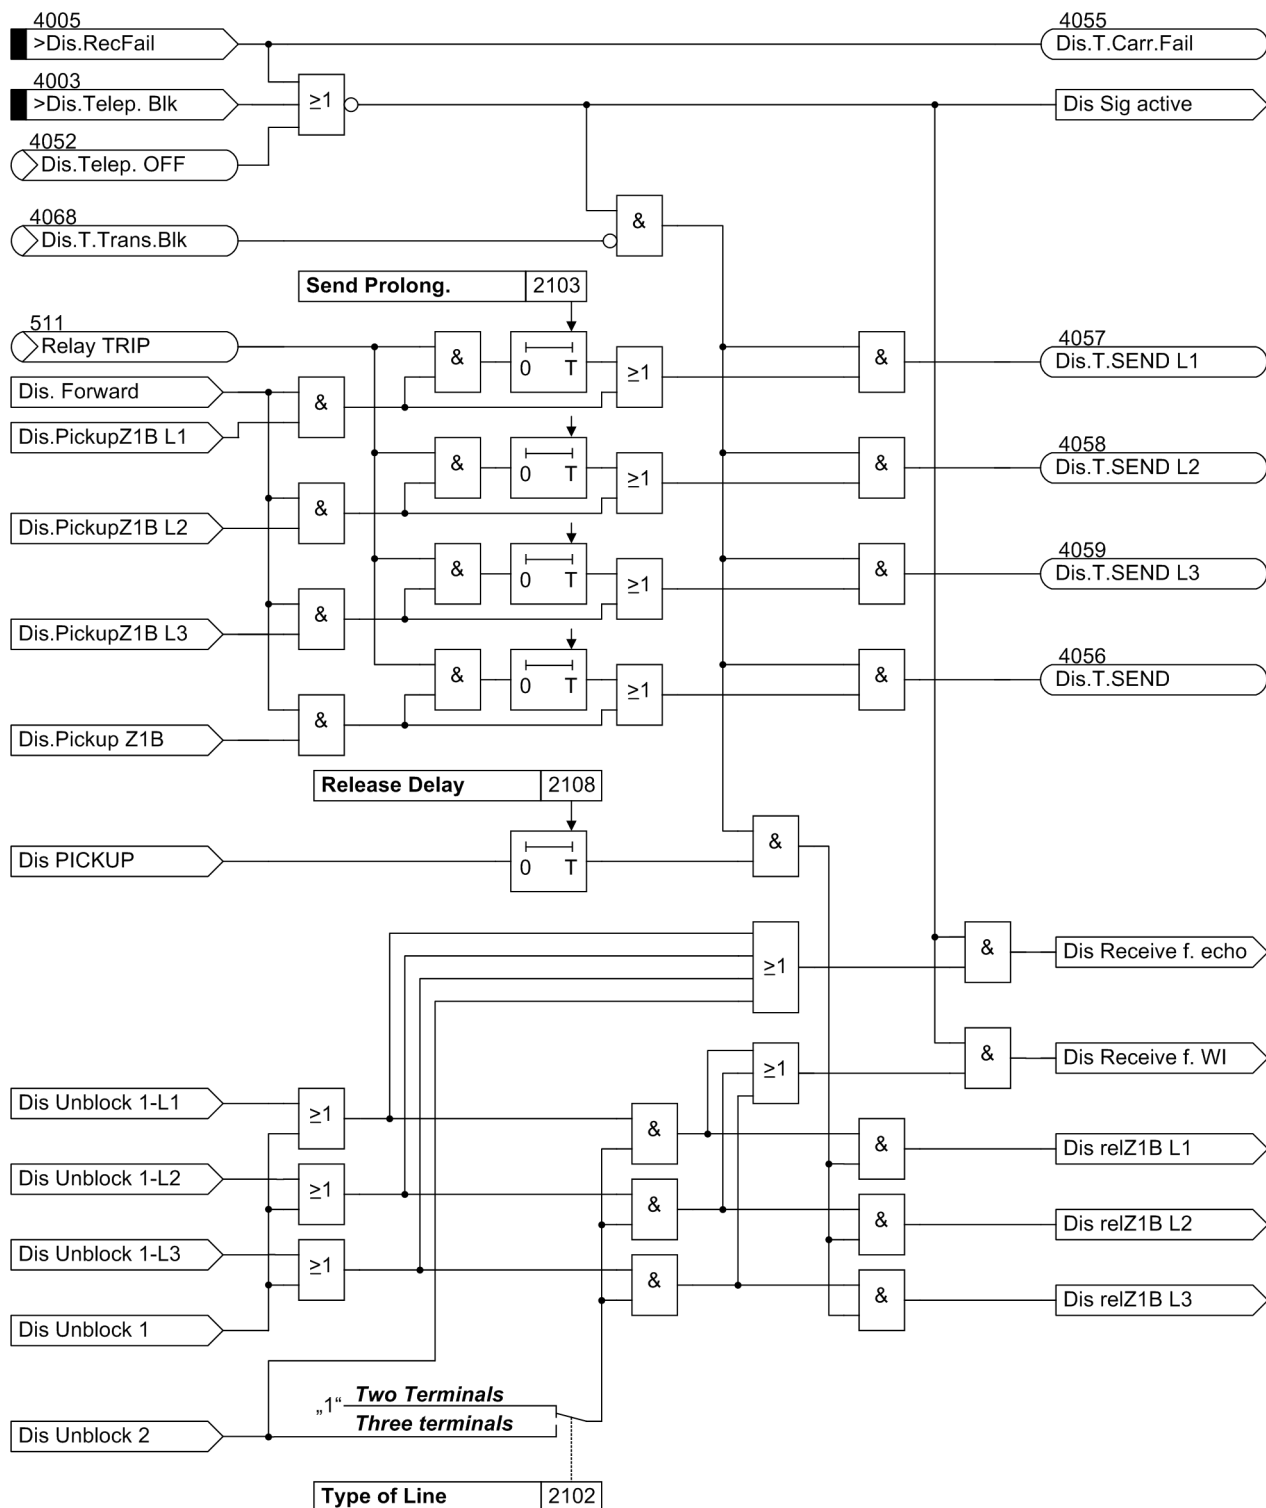


Figure 2-94 Send and enabling logic of the unblocking scheme

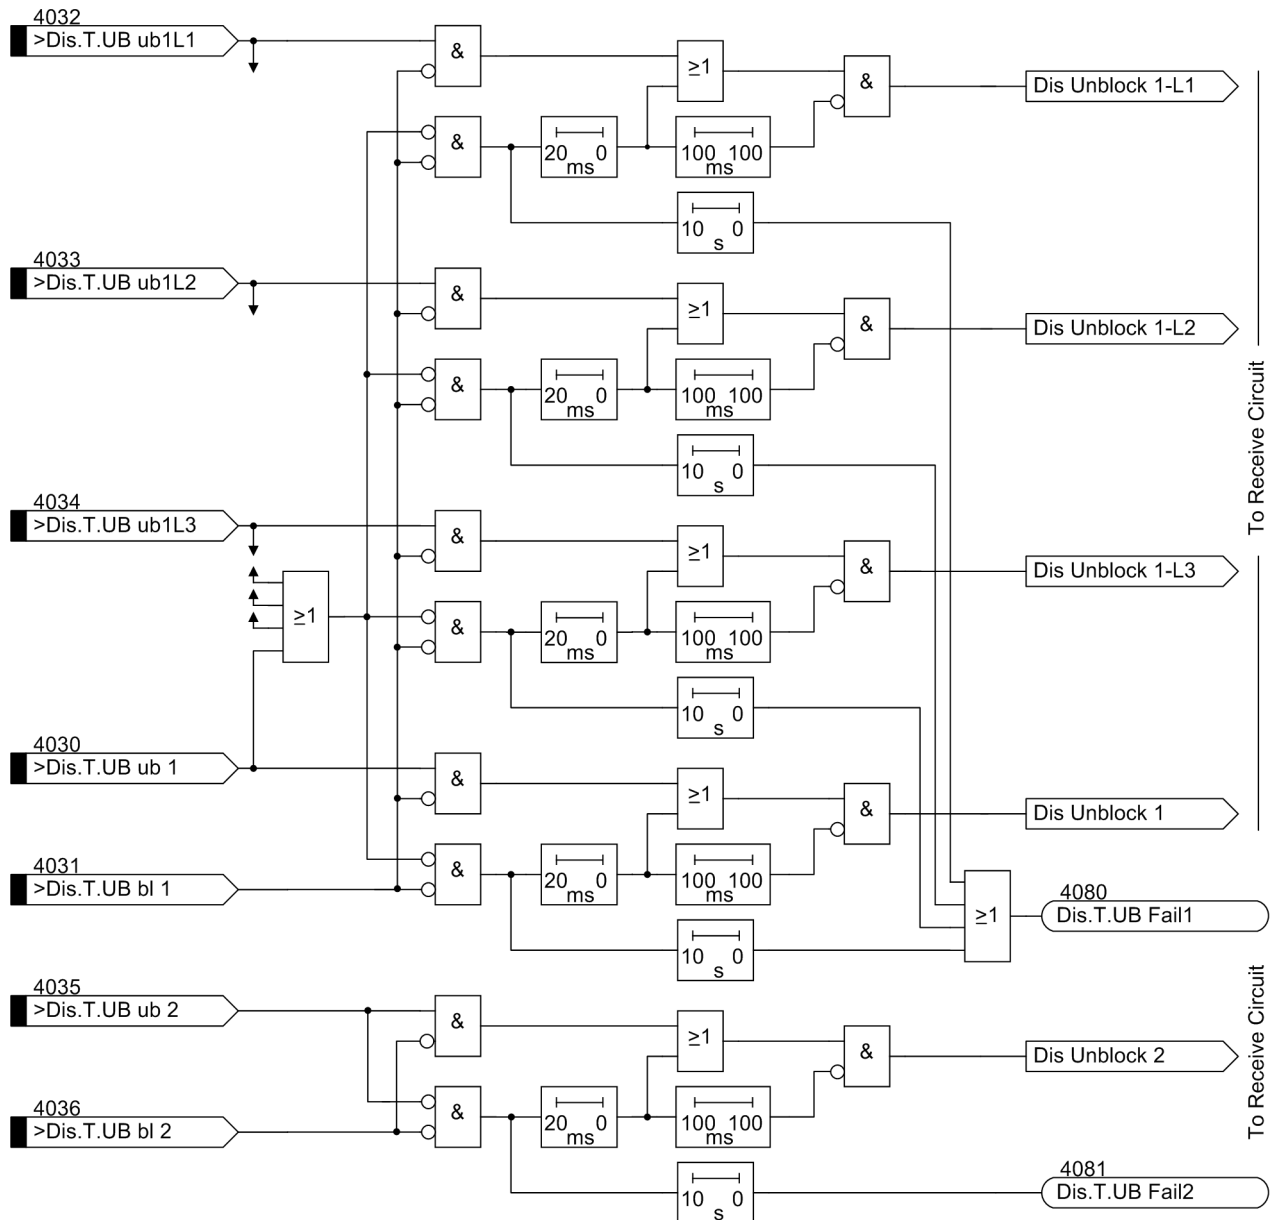


Figure 2-95 Unblock logic

2.7.9 Directional blocking scheme

Principle

In the case of the blocking scheme, the transmission channel is used to send a block signal from one line end to the other. The signal may be sent directly after fault inception (jump detector above dotted line in Figure 2-96), and stopped immediately, as soon as the distance protection detects a fault in the forward direction, alternatively the signal is only sent when the distance protection detects the fault in the reverse direction. It is stopped immediately as soon as the distance protection detects a fault in forward direction. Tripping is possible with this scheme even if no signal is received from the opposite line end. It is therefore mainly used for long lines when the signal must be transmitted across the protected line by means of power line carrier (PLC) and the attenuation of the transmitted signal at the fault location may be so severe that reception at the other line cannot necessarily be guaranteed.

The scheme functionality is shown in Figure 2-96.

Faults inside the overreaching zone Z1B, which is set to approximately 120% of the line length, will initiate tripping if a blocking signal is not received from the other line end. On three terminal lines, Z1B must be set to reliably reach beyond the longer line section, even if there is an additional infeed via the tee point. Due to possible differences in the pickup times of the devices at both line ends and due to the signal transmission time delay, the tripping must be somewhat delayed by T_V in this case.

To avoid signal race conditions, a transmit signal can be prolonged by the settable time T_S once it has been initiated.

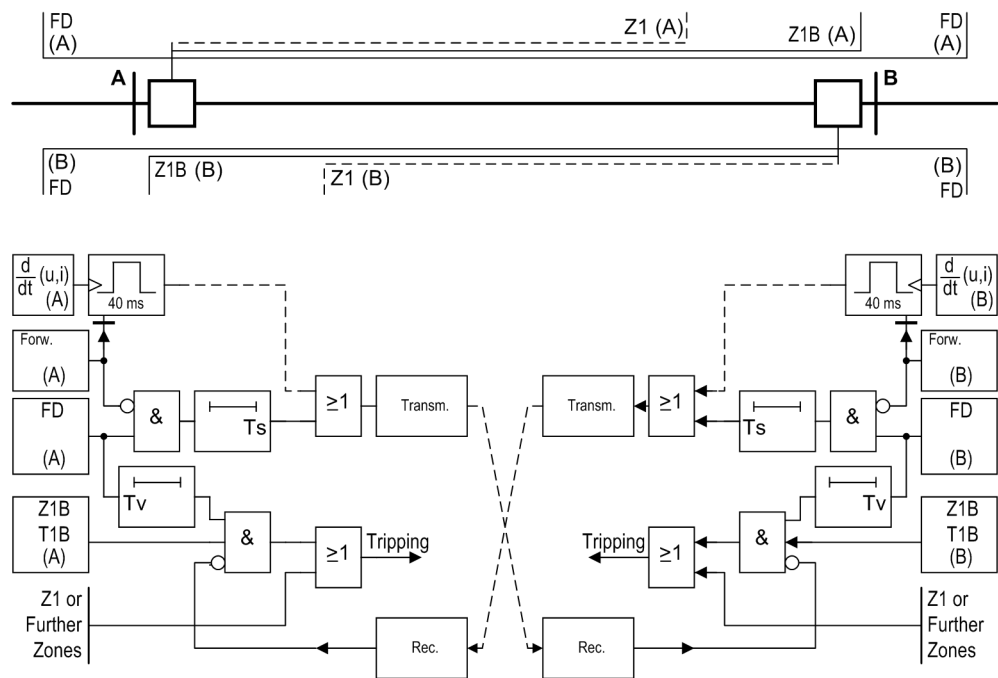


Figure 2-96 Function diagram of the blocking scheme

Sequence

Figure 2-97 shows the logic diagram of the blocking scheme for one line end.

The overreach zone Z1B is blocked which is why it must be set to **Forward** (address 1651 **Op. mode Z1B**, see also Section 2.5.1 at margin heading „Controlled Zone Z1B“).

On two terminal lines, the signal transmission may be phase segregated. Send and receive circuits in this case are built up for each phase. On three terminal lines, the transmit signals are sent to both opposite line ends. The receive signals are then combined with a logical OR gate as no blocking signal must be received from any line end during an internal fault. With the parameter **Type of Line** (address 2102) the device is informed as to whether it has one or two opposite line ends.

7SD5 Manual
C53000-G1176-C169-3

As soon as the distance protection has detected a fault in the reverse direction, a blocking signal is transmitted (e.g. „Dis . T . SEND“, No. 4056). The transmitted signal may be prolonged by setting address 2103 accordingly. The blocking signal is stopped if a fault is detected in the forward direction (e.g. „Dis . T . BL STOP“, No. 4070). Very rapid blocking is possible by transmitting also the output signal of the jump detector for measured values. To do so, the output „DisJumpBlocking“ (No. 4060) must also be allocated to the transmitter output relay. As this jump signal appears at every measured value jump, it should only be used if the transmission channel can be relied upon to respond promptly to the disappearance of the transmitted signal.

If there is a disturbance in the signal transmission path the overreaching zone can be blocked via a binary input. The distance protection operates with the usual time grading characteristic (non delayed trip in Z1). The overreach zone Z1B may, however, be activated by internal automatic reclosure or external criteria via the binary input „>Enable ARzones“.

The occurrence of erroneous signals resulting from transients during clearance of external faults or from direction reversal resulting during the clearance of faults on parallel lines is neutralised by „Transient blocking“. The received blocking signals also prolong the release by the transient blocking time **TrBlk BlockTime** (address 2110) if it has been present for at least the waiting time **TrBlk Wait Time** (address 2109), see Figure 2-102). After expiration of **TrBlk BlockTime** (address 2110) the delay time **Release Delay** (address 2108) is restarted.

It lies in the nature of the blocking scheme that single end fed short-circuits can also be tripped rapidly without any special measures, as the non feeding end cannot generate a blocking signal.

2.7.10 Pilot Wire Comparison

In the pilot wire comparison the overreaching zone Z1B functions as instantaneous zone at both ends of the protected line. Zone Z1B is set to reach beyond the next station. The pilot wire comparison avoids non-selective tripping.

The information exchange between both line ends is carried out via a closed quiescent current loop (Figure 2-98) that is fed by a substation battery. One NC contact must be allocated for each signal output, the receiving input must be configured to „low“-active. As an alternative two auxiliary relay combinations (e.g. 7PA5210-3D) are possible for inverting the contact.

In the quiescent state the pilot wires carry direct current that, at the same time, monitors the healthy state of the connection.

If the distance protection picks up, the following signal appears: „Dis . T . SEND“. The NC contact is opened and the pilot wire loop is initially interrupted. A trip by Z1B is blocked via the receiving input „>DisTel Rec.Ch1“. If the protection system then detects a fault within the overreaching zone Z1B, the send signal resets. The NC contact returns to its quiescent state (closed). If the loop in the remote station is also closed after the same sequence, the loop is energized again: the tripping is again released at both ends.

In case the short-circuit occurred outside the protected line the pilot wire loop is also interrupted by the pickup of both devices (both NC contacts „Dis . T . SEND“ are opened). Since the send signal will not reset at least at one of the line ends (fault is not in line direction in zone Z1B), the loop at that end will remain open. Both receiving inputs are deenergized and block the tripping (because of L-active). The other dis-

tance stages including Z1, however, operate independently so that the back-up protection function is not affected.

For lines shorter than the shortest settable line please take into consideration that the first distance zone is either set to disabled or that T1 is delayed for at least one grading time interval.

If the line has single-end infeed an instantaneous trip for the whole line is possible. Since no pickup occurs on the non-feeding line end, the loop is not interrupted at that point, but only on the feeding line end. After the fault is detected within Z1B, the loop will be closed again and the trip command is executed.

To guarantee that the time period between pickup and tripping of the protection function is sufficient to open and close the pilot wire loop, T1B must be delayed for a short period. If the pilot wire comparison is used with two different types of devices at both line ends (e.g. 7SD5 at one line end and a standard protection relay at the other end) care must be taken that the difference in pickup and trip delay of the two devices, which may be considerable, does not lead to an unwanted release. This must also be taken into consideration for the delay of T1B.

The quiescent state loop ensures a steady check of the pilot wire connections against interruptions. Since the loop is interrupted during each fault, the signal for pilot wire failure is delayed by 10 s. The pilot wire comparison supplement is then blocked. It does not need to be blocked from external as the pilot wire failure is recognized internally. The other stages of the distance protection continue operating according to the normal grading coordination chart.

Due to the low current consumption of the binary inputs it may be necessary to additionally burden the pilot wire loop with an external shunt connected resistor so that the binary inputs are not hold by the charge of the pilot wire after an interruption of the loop. As an alternative it is possible to connect auxiliary relay combinations (e.g. 7PA5210-3D).

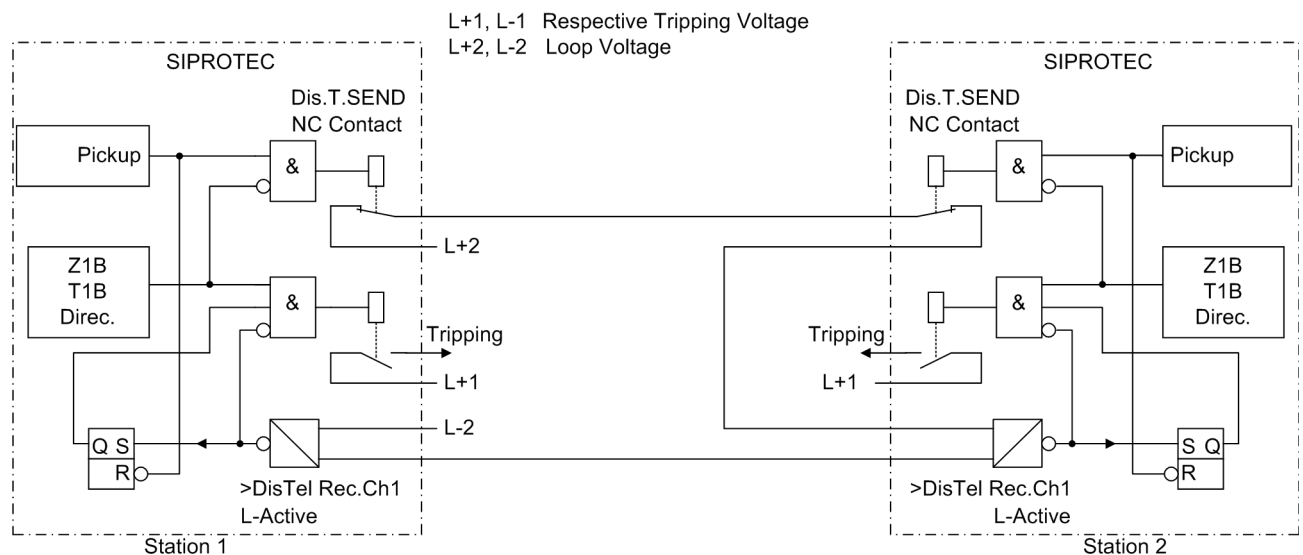


Figure 2-98 Pilot wire comparison - principle

Please take note that both binary inputs are connected in series with each other and the resistance of the pilot wires. Therefore the loop voltage must not be too low or the pickup voltage of the binary inputs must not be too high.

Operation with three terminals is also possible if the device allows it. The following figure shows the logic for two terminals.

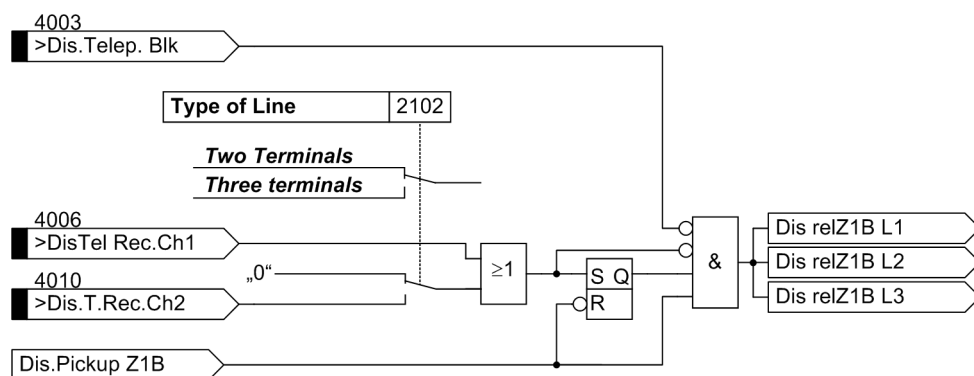


Figure 2-99 Receive circuit of pilot wire comparison logic

The isolation voltage of the pilot wires and the binary inputs and outputs must also be taken into account. In the event of an earth fault the induced longitudinal voltage must neither exceed 60% of the isolation voltage of the pilot wires nor 60% of the isolation of the device. The pilot wire comparison is therefore only suited for short lines.

2.7.11 Reverse Interlocking

If the distance protection function of the 7SD5 is used as backup protection in single-end fed transformer feeders, the reverse interlocking function ensures a fast protection of the busbar without endangering the selectivity for faults on the outgoing feeders.

Figure 2-100 shows the logic for reverse interlocking.



The overreach zone Z1B, whose delay time T1B must be set longer than the pickup time Ta of the protection devices of the outgoing lines, is blocked after the pickup of an inferior protection. The pickup signal is sent (according to Figure 2-101) via the receive input (4006 „>DisTe1 Rec.Ch1“) of the distance protection. If no signal is received this zone guarantees fast tripping of the busbar for

- The reverse interlocking of the distance protection is performed by specific release or blocking of the overreach zone Z1B. It can be realized by the blocking mode (parallel connection of the NO contacts as illustrated in Figure 2-101) or the release mode (series connection of the NC contacts).

7SD5 Manual
C53000-G1176-C169-3

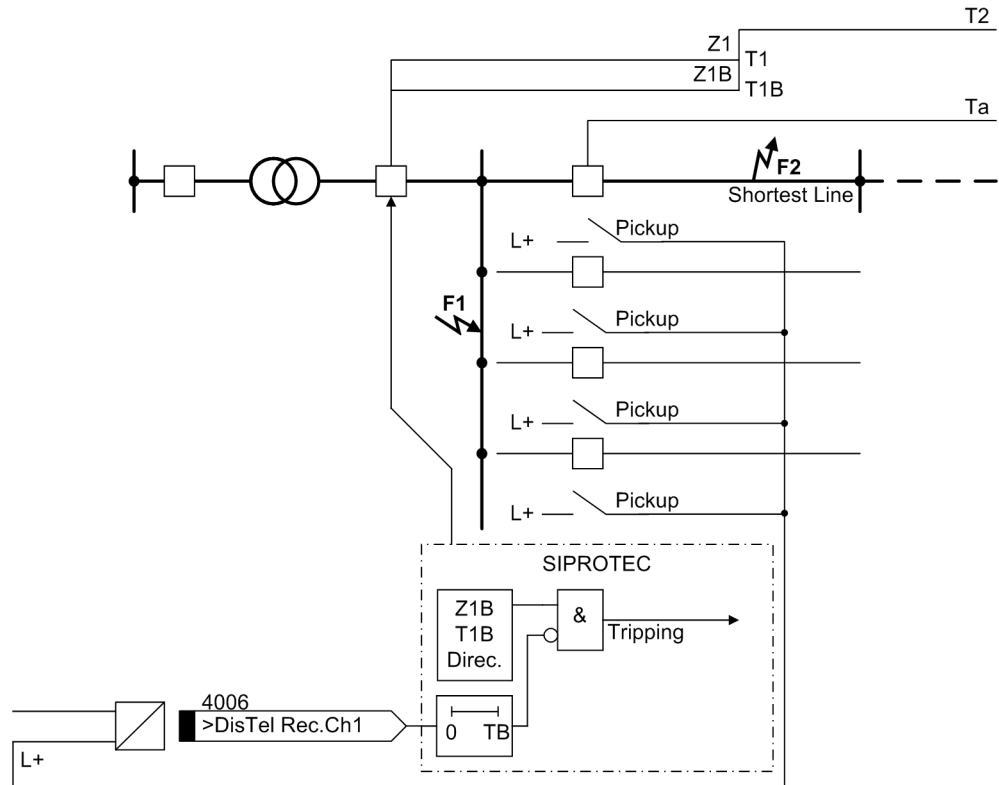


Figure 2-101 Reverse interlocking - functional principle and grading example

2.7.12 Transient Blocking

In the overreach schemes, the transient blocking provides additional security against erroneous signals due to transients caused by clearance of an external fault or by fault direction reversal during clearance of a fault on a parallel line.

The principle of transient blocking scheme is that following the incidence of an external fault, the formation of a release signal is prevented for a certain (settable) time. In the case of permissive schemes, this is achieved by blocking of the transmit and receive circuit.

Figure 2-102 shows the principle of the transient blocking for a directional comparison and for a permissive scheme.

If, following fault detection, a non-directional fault or a fault in the reverse direction is determined within the waiting time **TrBlk Wait Time** (address 2109), the transmit circuit and the release of the overreaching zone Z1B are prevented. This blocking is maintained for the duration of the transient blocking time **TrBlk BlockTime** (address 2110) also after the reset of the blocking criterion. But if a trip command is already present in Z1, the transient blocking time **TrBlk BlockTime** is terminated and thus the blocking of the signal transmission scheme in the event of an internal fault is prevented.

In the case of the blocking scheme, the transient blocking also prolongs the received block signal as shown in the logic diagram Figure 2-102. After expiration of **TrBlk BlockTime** (address 2110) the delay time **Release Delay** (address 2108) is re-started.

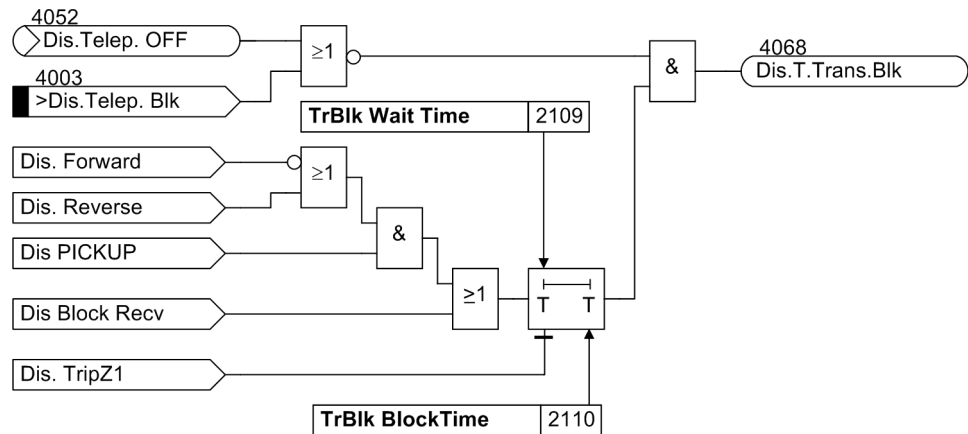


Figure 2-102 Transient blocking for permissive schemes

2.7.13 Measures for Weak or Zero Infeed

In cases where there is weak or no infeed present at one line end, the distance protection will not pick up. Neither a trip nor a send signal can therefore be generated there. With the comparison schemes, using a permissive signal, fast tripping could not even be achieved at the line end with strong infeed without special measures, as the end with weak infeed does not transmit a permissive release signal.

To achieve fast tripping at both line ends in such cases, the distance protection provides special supplements for feeders with weak infeed.

To enable also the line end with the weak infeed to trip, devices of the 7SD5 type feature a weak infeed tripping supplement. As this is a separate protective function with a dedicated trip command, it is described in a separate section (refer to Section 2.11.2).

Echo Function

If there is no fault detection, the echo function causes the received signal to be sent back to the other line end as an „echo“, where it is used to initiate permissive tripping.

The common echo signal (see Figure 2-139, Section 2.11.1) is triggered by both the distance protection and the earth fault protection. Figure 2-103 shows the generation of the echo release by the distance protection.

The detection of the weak infeed condition and accordingly the requirement for an echo are combined in a central AND gate. The distance protection must neither be switched off nor blocked as it would otherwise always produce an echo due to the missing fault detection. If, however, the time delayed overcurrent protection is used as an emergency function, an echo is nevertheless possible if the distance protection is out of service because the fault detection of the emergency time overcurrent protection replaces the distance protection fault detection. During this mode the emergency time overcurrent protection must naturally not also be blocked or switched off.

Even if the emergency time overcurrent protection does not pick up, an echo is created for permissive schemes during the emergency function. The time overcurrent protection at the weaker end must operate with more sensitivity than the distance protection at the end with high infeed. Otherwise the selectivity concerning 100% of the line length is not given.

The central condition for an echo is the absence of distance protection or overcurrent protection fault detection with the simultaneous reception of a signal from the telepro-

tection scheme logic, as shown in the corresponding logic diagrams (Figure 2-92 or Figure 2-94).

When the distance protection picks up single-pole or two-pole, it is nevertheless possible to send an echo if the measurement of the phases that have not picked up has revealed weak infeed.

To avoid an incorrect echo following switching off of the line and reset of the fault detection, the RS flip-flop in Figure 2-103 latches the fault detection condition until the signal receive condition resets, thereby barring the release of an echo. In any event the echo can be blocked via the binary input „>Dis.T.BlkEcho“.

Figure 2-103 shows the generation of the echo release signal. Since this function is also associated with the weak infeed tripping, it is described separately (see Section 2.11.1).

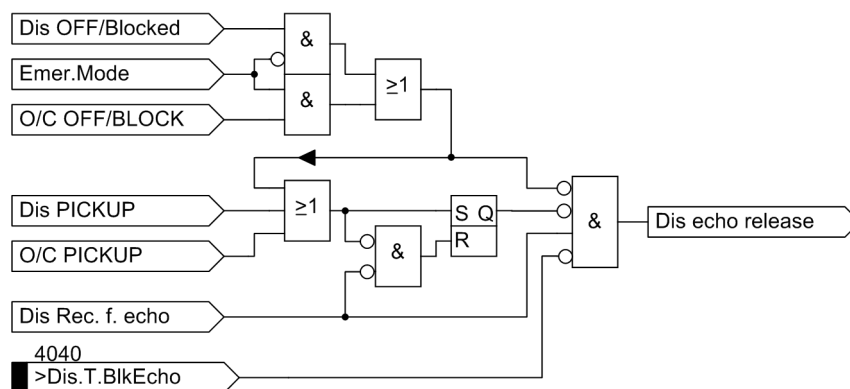


Figure 2-103 Generation of the echo release signal

2.7.14 Setting Notes

General

The teleprotection supplement of distance protection is only in service if it is set during the configuration to one of the possible modes of operation in address 121. Depending on this configuration, only those parameters which are applicable to the selected mode appear here. If the teleprotection supplement is not required the address 121 is set to **Teleprot. Dist. = Disabled**.

The following modes are possible with conventional transmission links (as described in Section 2.7):

Direct underreach transfer trip Remote trip without any pickup,

PUTT (Pickup) PUTT (Pickup)

PUTT (Z1B) Permissive Underreach Transfer Trip with Zone Acceleration Z1B (PUTT)

POTT Permissive Overreach Transfer Trip (POTT),

Dir.Comp.Pickup Directional comparison pickup,

UNBLOCKING Directional unblocking scheme,

BLOCKING Directional blocking scheme,

Pilot wire comp Pilot wire comparison,
Rev. Interlock Reverse interlock

At address 2101 **FCT Telep. Dis.** the use of a teleprotection scheme can be turned **ON** or **OFF**.

If the teleprotection has to be applied to a three terminal line the setting in address 2102 must be **Type of Line = Three terminals**, if not, the setting remains **Two Terminals**.

The following modes are possible with digital transmission using the protection data interface:

PUTT (Z1B) Permissive Underreach Transfer Trip with Zone Acceleration Z1B (PUTT) via protection interface,
POTT Permissive Overreach Transfer Trip (POTT),
Dir.Comp.Pickup Directional comparison pickup,

The send and receive signals must in these cases be assigned to fast command channels of the protection data interface (DIGSI matrix).

Distance Protection Prerequisites

For all applications of teleprotection schemes (except PUTT), it must be ensured that the fault detection of the distance protection in the reverse direction has a greater reach than the overreaching zone of the opposite line end (refer to the shaded areas in Figure 2-104 on the right hand side)! This is normally predefined for the U/I/φ pickup since the local voltage of a reverse fault is smaller than the voltage of the remote supplying end. For impedance pickup at least one of the distance stages must be set to **Reverse** or **Non-Directional**. During a fault in the shaded area (in the left section of the picture), this fault would be in zone Z1B of the protection at B as zone Z1B is set incorrectly. The distance protection at A would not pick up and therefore interpret this as a fault with single end infeed from B (echo from A or no block signal at A). This would result in a false trip!

The blocking scheme needs furthermore a fast reverse stage to generate the blocking signal. Apply zone 3 with non-delayed setting to this end.

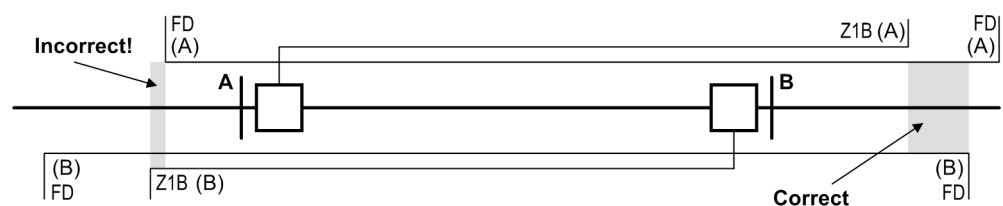


Figure 2-104 Distance protection setting with permissive overreach schemes

Time Settings

The send signal prolongation **Send Prolong.** (address 2103) must ensure that the send signal reliably reaches the opposite line end, even if there is very fast tripping at the sending line end and/or the signal transmission time is relatively long. In the case of the permissive overreaching schemes **POTT**, **Dir.Comp.Pickup** and **UNBLOCKING** this signal prolongation time is only effective if the device has already issued a trip command. This ensures the release of the other line ends even if the short-circuit has been cleared very rapidly by the instantaneous zone Z1. In the case of the blocking scheme **BLOCKING**, the transmit signal is always prolonged by this time. In this case, it corresponds to a transient blocking following a reverse fault. This parameter can only be altered in DIGSI at **Display Additional Settings**.

In order to detect steady-state line faults such as open circuits, a monitoring time **Delay for alarm** is started when a fault is detected (address 2107). Upon expiration of this time the fault is considered a permanent failure. This parameter can only be altered in DIGSI at **Display Additional Settings**.

With the release delay **Release Delay** (address 2108) the release of the zone Z1B can be delayed. This is only required for the blocking scheme **BLOCKING** to allow sufficient transmission time for the blocking signal during external faults. This delay **only** has an effect on the receive circuit of the teleprotection; conversely the permissive signal is not delayed by the set time delay T1B of the overreaching zone Z1B. For **Pilot wire comp** and **Rev. Interlock** T1B must be delayed so that there is enough time between the pickup of the distance protection function and the trip signal of zone Z1B.

Transient blocking

The parameters **TrBlk Wait Time** and **TrBlk BlockTime** serve the transient blocking with the permissive overreaching schemes POTT and UNBLOCKING. With permissive underreach transfer trip they are of no consequence.

The time **TrBlk Wait Time** (address 2109) is a waiting time prior to transient blocking. The transient blocking is activated in the permissive overreach transfer schemes only after the distance protection recognizes a fault in forward direction within this time after fault detection. In the case of the blocking scheme, the waiting time prevents transient blocking in the event that the blocking signal reception from the opposite line end is very fast. With the setting ∞ there is no transient blocking. This parameter can only be altered with DIGSI under **Additional Settings**.

It is absolutely necessary that the transient blocking time **TrBlk BlockTime** (address 2110) is longer than the duration of transients resulting from the inception or clearance of external short circuits. During this time the send signal is blocked for the permissive overreach schemes **POTT** and **UNBLOCKING** if the protection had initially detected a reverse fault. In the case of blocking scheme **BLOCKING**, the blocking of the Z1B release is prolonged by this time by both the detection of a reverse fault and the (blocking) received signal. After expiration of **TrBlk BlockTime** (address 2110) the delay time **Release Delay** (address 2108) is restarted for the blocking scheme. Since the blocking scheme always requires setting the delay time **Release Delay**, the transient blocking time **TrBlk BlockTime** (address 2110) can usually be set very short. This parameter can only be altered with DIGSI under **Additional Settings**.

Echo function

The echo function settings are common to all weak infeed measures and summarized in tabular form in Section 2.11.2.2.



Note

The „ECHO SIGNAL“ (No. 4246) must be allocated separately to the output relays for the transmitter actuation, as it is not contained in the transmit signals of the transmission functions.

2.7.15 Settings

Addresses which have an appended "A" can only be changed with DIGSI, under Additional Settings.

Addr.	Parameter	Setting Options	Default Setting	Comments
2101	FCT Telep. Dis.	ON OFF	ON	Teleprotection for Distance protection
2102	Type of Line	Two Terminals Three terminals	Two Terminals	Type of Line
2103A	Send Prolong.	0.00 .. 30.00 sec	0.05 sec	Time for send signal prolongation
2107A	Delay for alarm	0.00 .. 30.00 sec	10.00 sec	Time Delay for Alarm
2108	Release Delay	0.000 .. 30.000 sec	0.000 sec	Time Delay for release after pickup
2109A	TrBlk Wait Time	0.00 .. 30.00 sec; ∞	0.04 sec	Transient Block.: Duration external flt.
2110A	TrBlk BlockTime	0.00 .. 30.00 sec	0.05 sec	Transient Block.: Blk.T. after ext. flt.

2.7.16 Information List

No.	Information	Type of Information	Comments
4001	>Dis.Telep. ON	SP	>Distance Teleprotection ON
4002	>Dis.Telep.OFF	SP	>Distance Teleprotection OFF
4003	>Dis.Telep. Blk	SP	>Distance Teleprotection BLOCK
4005	>Dis.RecFail	SP	>Dist. teleprotection: Carrier faulty
4006	>DisTel Rec.Ch1	SP	>Dis.Tele. Carrier RECEPTION Channel 1
4007	>Dis.T.RecCh1L1	SP	>Dis.Tele.Carrier RECEPTION Channel 1, L1
4008	>Dis.T.RecCh1L2	SP	>Dis.Tele.Carrier RECEPTION Channel 1, L2
4009	>Dis.T.RecCh1L3	SP	>Dis.Tele.Carrier RECEPTION Channel 1, L3
4010	>Dis.T.Rec.Ch2	SP	>Dis.Tele. Carrier RECEPTION Channel 2
4030	>Dis.T.UB ub 1	SP	>Dis.Tele. Unblocking: UNBLOCK Channel 1
4031	>Dis.T.UB bl 1	SP	>Dis.Tele. Unblocking: BLOCK Channel 1
4032	>Dis.T.UB ub1L1	SP	>Dis.Tele. Unblocking: UNBLOCK Ch. 1, L1
4033	>Dis.T.UB ub1L2	SP	>Dis.Tele. Unblocking: UNBLOCK Ch. 1, L2
4034	>Dis.T.UB ub1L3	SP	>Dis.Tele. Unblocking: UNBLOCK Ch. 1, L3
4035	>Dis.T.UB ub 2	SP	>Dis.Tele. Unblocking: UNBLOCK Channel 2
4036	>Dis.T.UB bl 2	SP	>Dis.Tele. Unblocking: BLOCK Channel 2
4040	>Dis.T.BlkEcho	SP	>Dis.Tele. BLOCK Echo Signal
4050	Dis.T.on/off BI	IntSP	Dis. Teleprotection ON/OFF via BI
4052	Dis. Telep. OFF	OUT	Dis. Teleprotection is switched OFF
4054	Dis.T.Carr.rec.	OUT	Dis. Telep. Carrier signal received
4055	Dis.T.Carr.Fail	OUT	Dis. Telep. Carrier CHANNEL FAILURE
4056	Dis.T.SEND	OUT	Dis. Telep. Carrier SEND signal
4057	Dis.T.SEND L1	OUT	Dis. Telep. Carrier SEND signal, L1
4058	Dis.T.SEND L2	OUT	Dis. Telep. Carrier SEND signal, L2
4059	Dis.T.SEND L3	OUT	Dis. Telep. Carrier SEND signal, L3
4060	DisJumpBlocking	OUT	Dis.Tele.Blocking: Send signal with jump
4068	Dis.T.Trans.Blk	OUT	Dis. Telep. Transient Blocking
4070	Dis.T.BL STOP	OUT	Dis. Tele.Blocking: carrier STOP signal

No.	Information	Type of Information	Comments
4080	Dis.T.UB Fail1	OUT	Dis. Tele.Unblocking: FAILURE Channel 1
4081	Dis.T.UB Fail2	OUT	Dis. Tele.Unblocking: FAILURE Channel 2
4082	Dis.T.BL STOPL1	OUT	DisTel Blocking: carrier STOP signal, L1
4083	Dis.T.BL STOPL2	OUT	DisTel Blocking: carrier STOP signal, L2
4084	Dis.T.BL STOPL3	OUT	DisTel Blocking: carrier STOP signal, L3

2.8 Earth Fault Protection in Earthed Systems (optional)

The line protection 7SD5 features protective functions for high-resistance earth faults in grounded systems. These options are available — partly depending on the ordered version:

- Three overcurrent stages with definite time tripping characteristic (definite time),
 - One overcurrent stage with inverse time characteristic (IDMT) or
 - One zero sequence voltage stage with inverse time characteristic
 - One zero sequence power stage with inverse time characteristic

The elements may be configured independently of each other and combined according to the user's requirements. If the fourth current-, voltage or power-dependent stage is not required, it may be employed as a fourth definite time stage.

Each stage may be set to be non-directional or directional — forward or reverse. A signal transmission may be combined with these four stages. For each stage it may be determined if it should coordinate with the teleprotection function. If the protection is applied in the proximity of transformers, an inrush restraint can be activated. Furthermore, blocking by external criteria is possible via binary inputs (e.g. for reverse interlocking or external automatic reclosure). During energisation of the protected feeder onto a dead fault it is also possible to release any stage - or also several - for non-delayed tripping. Stages that are not required are set inactive.

In the line protection 7SD5, the distance protection function (order option) can be supplemented by the earth fault protection function. In the case of short-circuits with high fault resistances, the fault detection of the distance protection often does not pick up because the measured impedance is outside the fault detection characteristic of the distance protection. High fault resistances can be found, for instance, in overhead lines without earth wire or in sandy soil.

2.8.1 Functional Description

Measured Quantities

The zero-sequence current is used as measured variable. According to its definition equation it is obtained from the sum of the three phase currents, i.e. $3 \cdot I_0 = I_{L1} + I_{L2} + I_{L3}$. Depending on the version ordered, and the configured application for the fourth current input I_4 of the device, the zero-sequence current can be measured or calculated.

If input I_4 is connected in the starpoint of the set of current transformers or to a separate earth current transformer on the protected feeder, the earth current is directly available as a measured value.

If the device is fitted with the highly sensitive current input for I_4 , this current I_4 is used considering the factor **I4/Iph CT** (address 221, see Section 2.1.2.1). As the linear range of this measuring input is severely restricted in the high range, this current is only evaluated up to an amplitude of approx. 1.6A. In the event of larger currents, the device automatically switches over to the evaluation of the zero sequence current derived from the phase currents. Naturally, all three phase currents obtained from a set of three star-connected current transformers must be available and connected to the device. The processing of the earth current is then also possible if very small as well as large earth fault currents may occur.

If the fourth current input I_4 is otherwise utilized, e.g. for a transformer starpoint current or for the earth current of a parallel line, the device calculates the zero sequence

current from the phase currents. Naturally in this case also all three phase currents derived from a set of three star connected current transformers must be available and connected to the device.

The zero sequence voltage is determined by its defining equation $3 \underline{U}_0 = \underline{U}_{L1-E} + \underline{U}_{L2-E} + \underline{U}_{L3-E}$. Depending on the application of the fourth voltage input U_4 of the device, the zero sequence voltage is measured or calculated. If the fourth voltage input is connected to the open delta winding U_{delta} of a voltage transformer set and if it is configured accordingly (address 210 **U4 transformer = Udelta transf.**, see Section 2.1.2.1), this voltage is used considering the factor **Uph / Udelta** (address 211, see Section 2.1.2.1). If not, the device calculates the zero sequence voltage from the phase voltages. Naturally, all three phase-to-earth voltages obtained from a set of three star-connected voltage transformers must be available and connected to the device.

Definite time very high set current stage $3I_0>>>$

The triple zero-sequence current $3 I_0$ is passed through a numerical filter and then compared with the set value **3I0>>>**. If this value is exceeded an alarm is issued. After the corresponding delay time **T 3I0>>>** has expired, a trip command is issued which is also alarmed. The reset threshold is approximately 95 % of the pickup threshold.

Figure 2-105 shows the logic diagram of the $3I_0>>>$ stage. The function blocks „direction determination“, „permissive teleprotection“ and the generation of the signals „switch onto“ and „EF Inrush“ are common to all stages and described below. They may, however, affect each stage individually. This is accomplished with the following setting parameters:

- **Op. mode 3I0>>>**, determines the operating direction of the stage: **Forward**, **Reverse**, **Non-Directional** or **Inactive**,
- **3I0>>> Telep/BI** determines whether a non-delayed trip with the teleprotection scheme or via binary input 1310 „>EF InstTRIP“ is possible (**YES**) or not (**NO**),
- **3I0>>>S0TF-Trip**, determines whether during switching onto a fault tripping shall be instantaneous (**YES**) or not (**NO**) with this stage.
- **3I0>>>InrushBlk** which is used to switch the inrush stabilization (rush blocking) on (**YES**) or off (**NO**).



The logic of the high-set current stage $3I_0 \gg$ is the same as that of the $3I_0 >>>$ stage. In all references **3I0>>>** must merely be replaced with **3I0>>**. In all other respects Figure 2-105 applies.

The logic of the overcurrent stage $3I_0>$, too, is the same as that of the $3I_0>>>$ stage. In all references **$3I_0>>>$** must merely be replaced with **$3I_0>$** . In all other respects Figure 2-105 applies. This stage operates with a specially optimized digital filter that completely suppresses all harmonic components beginning with the 2nd harmonic. Therefore it is particularly suited for a highly-sensitive earth fault detection.


217

Inverse time over-current stage **3I_{OP}**

The logic of the stages with inverse time delay functions in the same way as the remaining stages. This stage operates with a specially optimized digital filter that completely suppresses all harmonic components beginning with the 2nd harmonic. Therefore it is particularly suited for a highly-sensitive earth fault detection. However, the time delay is calculated here based on the type of the set characteristic, the intensity of the earth current and a time multiplier **3I_{OP} Time Dial** (IEC characteristic, Figure 2-106) or a time multiplier **TimeDial TD3I_{OP}** (ANSI characteristic). A pre-selection of the available characteristics was already carried out during the configuration of the protection functions. Furthermore, an additional fixed delay **Add.T-DELAY** may be selected. The characteristics are shown in the Technical Data.

Fig. 2-106 shows the logic diagram. The setting addresses of the IEC characteristics are shown by way of an example. In the setting information the different setting addresses are described in detail.

It is also possible to implement this stage equally with a definite time delay. In this case **3I_{OP} PICKUP** is the pickup threshold and **Add.T-DELAY** the definite time delay. The inverse time characteristic is then effectively bypassed.

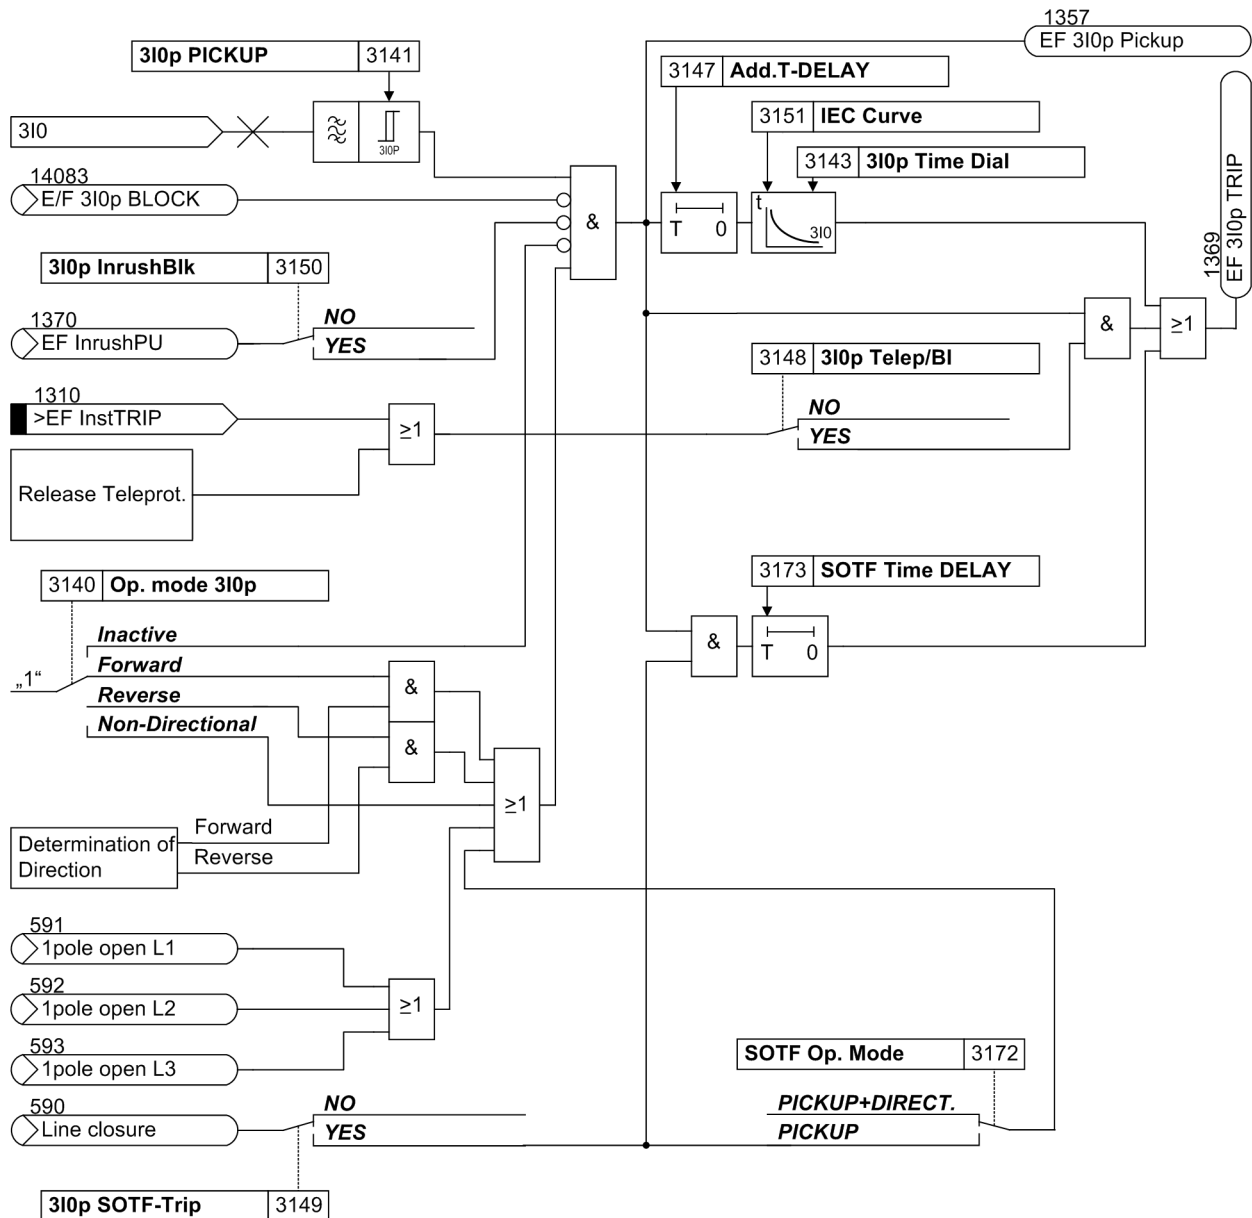Figure 2-106 Logic diagram of the 3I_{0p} stage (inverse time overcurrent protection), for example IEC characteristics


Inverse time over-current stage with logarithmic inverse characteristic

The inverse logarithmic characteristic differs from the other inverse characteristics mainly by the fact that the shape of the curve can be influenced by a number of parameters. The slope and a time shift **3I_{0p} MaxT-DELAY** which directly affect the curve, can be changed. The characteristics are shown in the Technical Data.

Figure 2-107 shows the logic diagram. In addition to the curve parameters, a minimum time **3I_{0p} MinT-DELAY** can be determined; below this time no tripping can occur. Below a current factor of **3I_{0p} Startpoint**, which is set as a multiple of the basic setting **3I_{0p} PICKUP**, no tripping can take place.

Further information regarding the effect of the various parameters can be found in the setting information of the function parameters in Section 2.8.2.

The remaining setting options are the same as for the other curves.

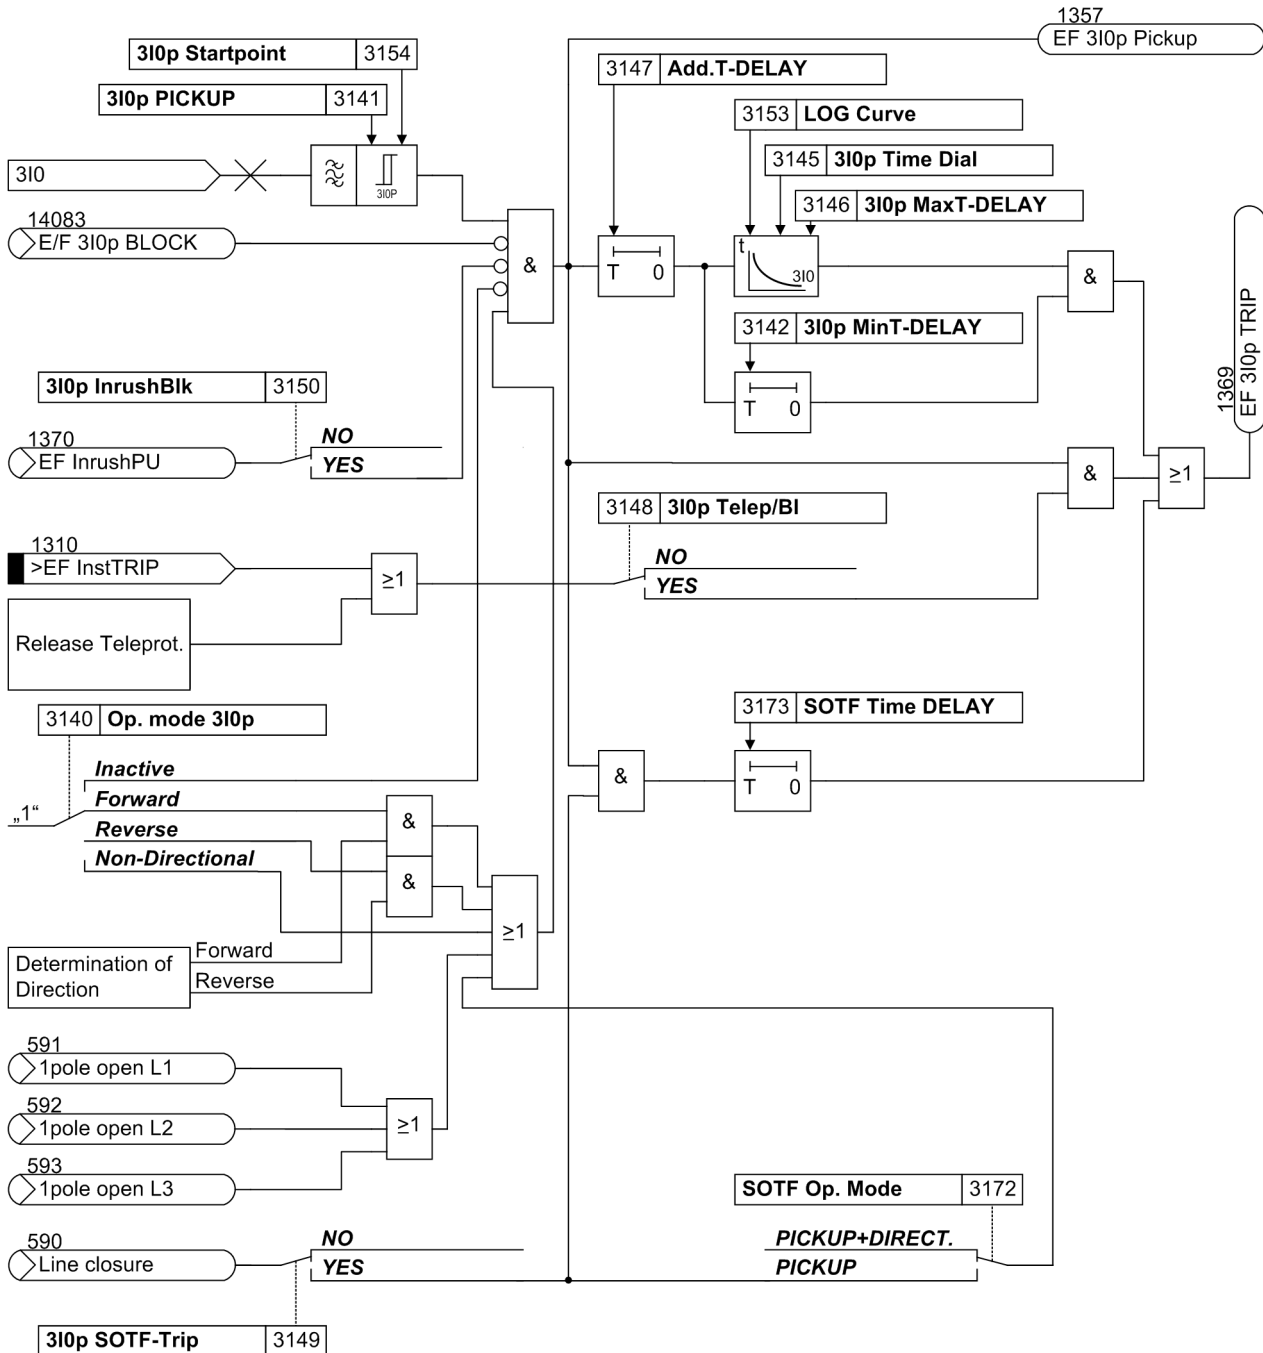Figure 2-107 Logic diagram of the 3I_{0p} stage for the inverse logarithmic characteristic

Zero sequence voltage time protection (U₀ inverse)

The zero sequence voltage time protection operates according to a voltage-dependent trip time characteristic. It can be used instead of the time overcurrent stage with inverse time delay.

The voltage/time characteristic can be displaced in voltage direction for a determined constant voltage **U0inv. minimum**, valid for $t \rightarrow \infty$ and in time direction by a determined constant time **T forw. (U0inv)**. The characteristics are shown in the Technical Data.

Figure 2-108 shows the logic diagram. The tripping time depends on the level of the zero sequence voltage U₀. For meshed earthed systems the zero sequence voltage

increases towards the earth fault location. The inverse characteristic results in the shortest command time for the relay closest to the fault. The other relays then reset.

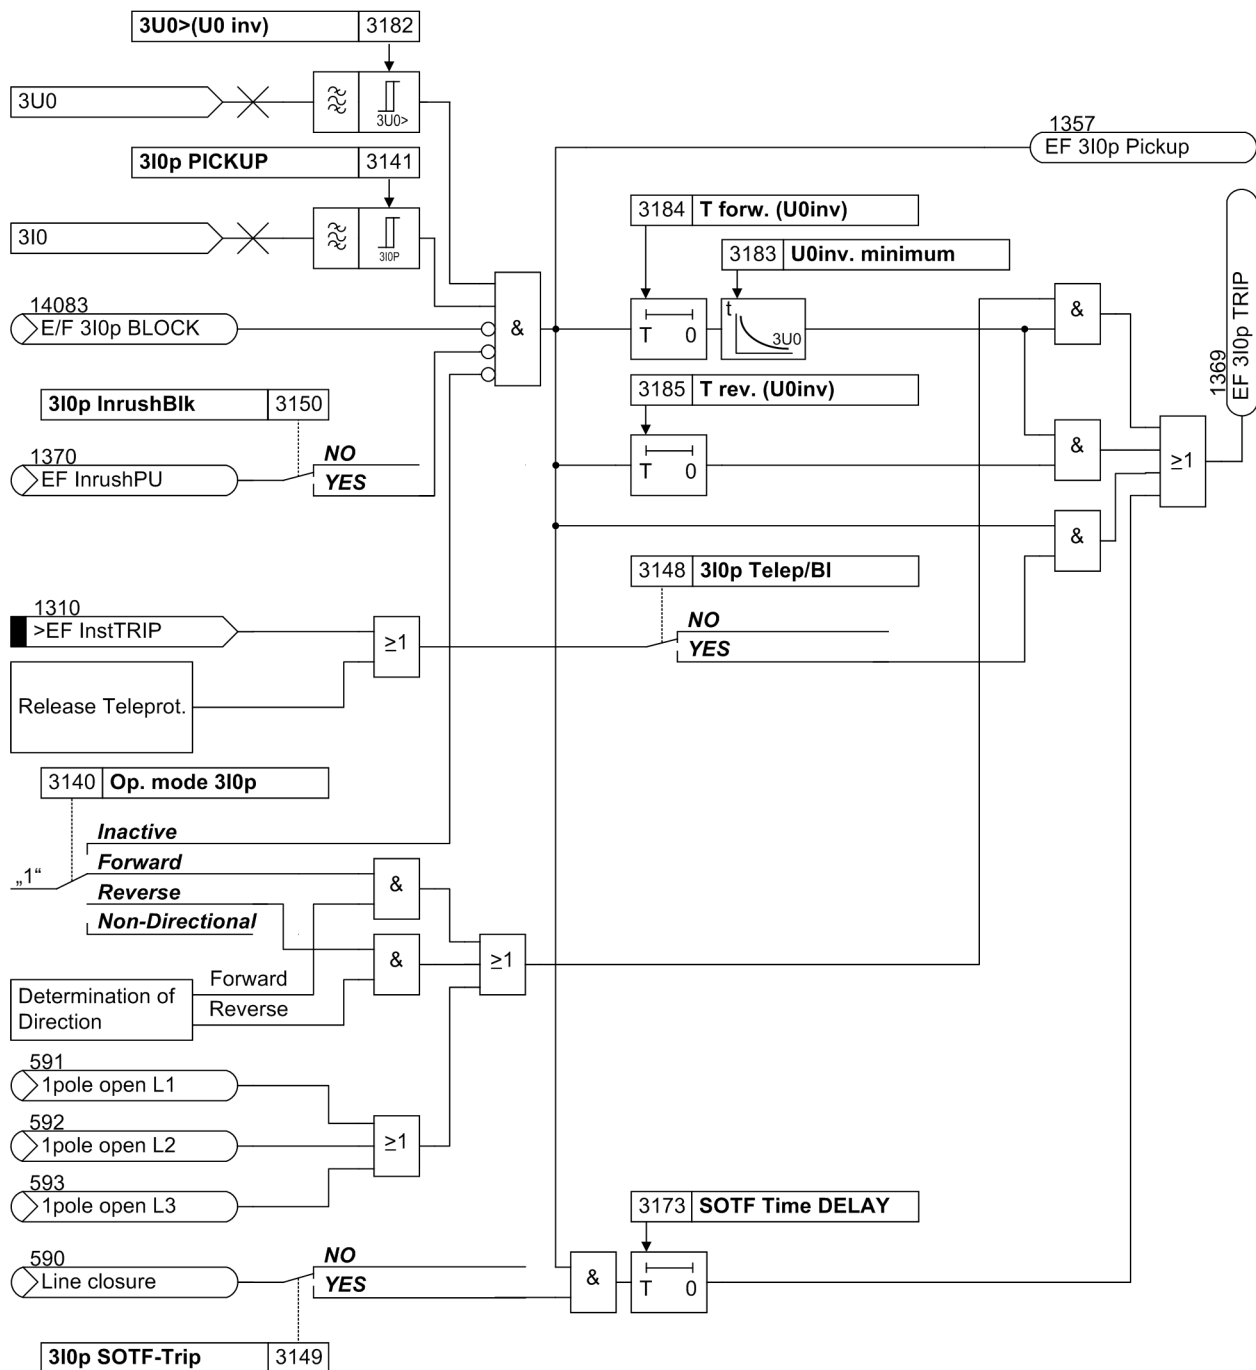


Figure 2-108 Directional zero-sequence voltage time protection with non-directional backup stage

A further time stage **T rev. (U0inv)** provokes non-directional tripping with a voltage-independent delay. This stage can be set above the directional stage. When tripping with this stage it is, however, a prerequisite that the time of the voltage-controlled stage has already expired (without directional check). In case the zero se-

quence voltage is too low or the voltage transformer circuit breaker is tripped, this stage is also disabled.

Zero sequence power protection


The zero sequence power protection operates according to a power-dependent trip time characteristic. It can be used instead of an inverse time overcurrent stage.

The power is calculated from the zero-sequence voltage and the zero-sequence current. The component S_r is decisive in direction of a configurable compensation angle φ_{comp} , which is also referred to as compensated zero-sequence power, i.e.

$$S_r = 3I_0 \cdot 3U_0 \cdot \cos(\varphi - \varphi_{\text{Comp}})$$

where $\varphi = \angle (U_0; I_0)$. φ_{Comp} thus determines the direction of the maximum sensitivity ($\cos(\varphi - \varphi_{\text{Comp}}) = 1$ if $\varphi = \varphi_{\text{Comp}}$). Due to its sign information the power calculation automatically includes the direction. The power for the reverse direction can be determined by reversing the sign.

The power-time characteristic can be displaced in power direction via a reference value S_{ref} (= basic value for the inverse characteristic for $\varphi = \varphi_{\text{comp}}$) and in time direction by a factor k .

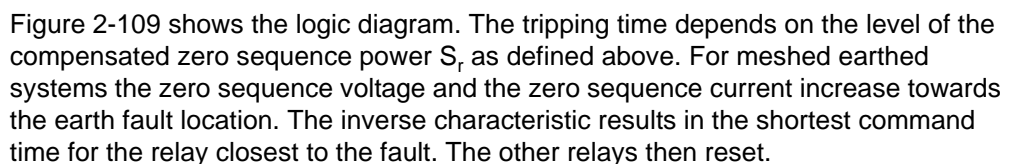

Non-symmetrical load conditions in multiple-earthed systems or different current transformer errors can result in a zero sequence current. This zero sequence current could cause faulty pickup of the earth current stages if low pickup thresholds are set. To avoid this, the earth current stages are stabilized by the phase current: as the phase currents increase, the pickup thresholds are increased (Figure 2-110). The stabilization factor (= slope) may be changed by means of the parameter **Iph-STAB**. **Slope** (address 3104). It applies to all stages.

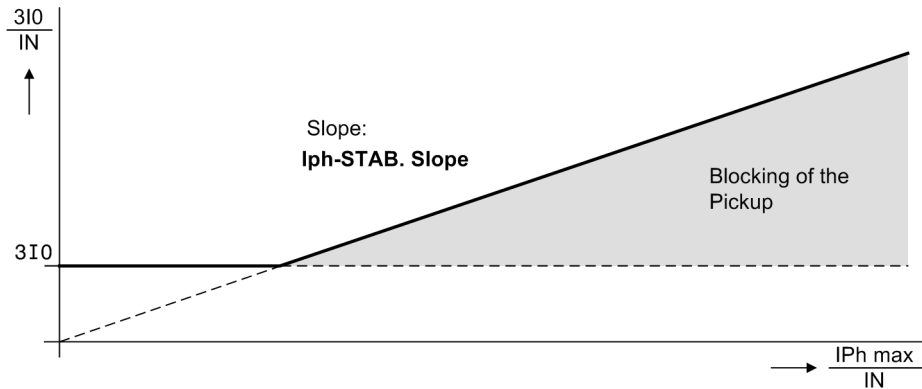


Figure 2-110 Phase current stabilization

Inrush restraint

If the device is connected to a transformer feeder, large inrush currents can be expected when the transformer is energized; if the transformer starpoint is earthed, also in the zero sequence path. The inrush current may be a multiple of the rated current and flow for several tens of milliseconds up to several minutes.

Although the fundamental current is evaluated by filtering of the measured current, an incorrect pickup during energization of the transformer may result if very short delay times are set. In the rush current there is a substantial portion of fundamental current depending on the type and size of the transformer that is being energized.

The inrush stabilization blocks tripping of all those stages for which it has been activated, for as long as the rush current is recognized.

The inrush current is characterized by a relatively large amount of second harmonic (twice rated frequency). This second harmonic is almost non-existent in the short-circuit current. Numerical filters that carry out a Fourier analysis of the current are used for the frequency analysis. As soon as the harmonic content is greater than the set value (**2nd InrushRest**), the affected stage is blocked.

Inrush blocking is not effective below a certain current threshold. This threshold is 22 mA on the secondary side for devices with sensitive earth current transformer and $0.41 I_N$ for devices with normal earth current transformer.

Determination of direction with zero sequence system (zero voltage and/or transformer star point current)

The direction determination is carried out with the measured current $I_E (= -3 \cdot I_0)$, which is compared to a reference voltage \underline{U}_P .

The voltage required for direction determination \underline{U}_P may be derived of the starpoint current I_Y of an earthed transformer (source transformer), provided that the transformer is available.

Moreover, both the zero sequence voltage $3 \cdot \underline{U}_0$ and the starpoint current I_Y of a transformer can be used for measurement. The reference magnitude \underline{U}_P then is the sum of the zero sequence voltage $3 \cdot \underline{U}_0$ and a value which is proportional to reference current I_Y . This value is about 20 V for rated current (Figure 2-111).

The directional polarization using the transformer starpoint current is independent of voltage transformers and therefore also functions reliably during a fault in the voltage transformer secondary circuit. It is, however, a requirement that not all, but at least a substantial amount of the earth fault current flows via the transformer, the starpoint current of which is measured.

The determination of direction requires a minimum current $3I_0$ and a minimum displacement voltage which can be set as **3U0>**. If the displacement voltage is too small,

the direction can only be determined if it is polarised with the transformer starpoint current and this exceeds a minimum value corresponding to the setting **1Y>**. Direction determination with $3\underline{U}_0$ is blocked if the device detects a fault condition in the voltage transformer secondary circuit (binary input reports trip of the voltage transformer mcb, „Fuse Failure Monitor“, measured voltage failure monitoring) or a single-pole dead time.

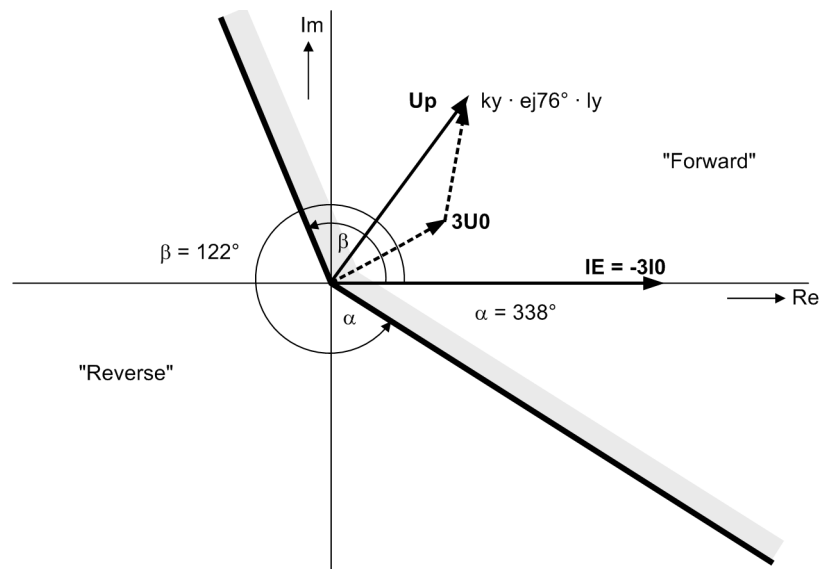


Figure 2-111 Directional characteristic of the earth fault protection

Determination of direction with negative phase-sequence system

It is advantageous to use negative sequence system values for the direction measurement if the resulting zero sequence voltages during earth faults are too small for an accurate measurement or when the zero sequence values are subject to interference by, for example, mutual coupling from a parallel line. It can also be used if the zero sequence voltage is not available at the device.

Otherwise this function operates the same as the direction measurement with zero sequence current and zero sequence voltage. Instead of $3\ I_0$ and $3\ \underline{U}_0$ the negative sequence signals $3\ \underline{I}_2$ and $3\ \underline{U}_2$ are simply used for the measurement. These signals must also have a minimum magnitude of **3I2>** or **3U2>**.

It is also possible to determine the direction with a zero sequence system or a negative sequence system. In this case the device determines whether the zero sequence quantity or the negative sequence voltage is larger. The direction is determined by the larger of the two values. The direction is not determined during the single-pole dead time.

Determination of direction with compensated zero sequence power

The zero-sequence power may also be used for direction determination. In this case the sign of the compensated zero-sequence power is decisive. This is the zero-sequence power component as mentioned in the above paragraph „Zero-Sequence Power“ S_r in direction of a configurable compensation angle φ_{comp} , i.e.

$$S_r = 3I_0 \cdot 3U_0 \cdot \cos(\varphi - \varphi_{Comp}).$$

The direction determination yields

- forward if S_r is positive and $S_r > S_{FORWARD}$,
- reverse if S_r negative and $|S_r| > S_{FORWARD}$,

The determination of direction requires a minimum current $3I_0$ and a minimum displacement voltage which can be set as $3U_0$. The prerequisite is still that the compensated zero sequence power has a configurable minimum magnitude. Direction determination is also blocked if the device detects a fault condition in the voltage transformer secondary circuit (binary input reports trip of the voltage transformer mcb, „Fuse Failure Monitor“, measured voltage failure monitoring) or a single-pole dead time. Figure 2-112 shows an example of the directional characteristic.

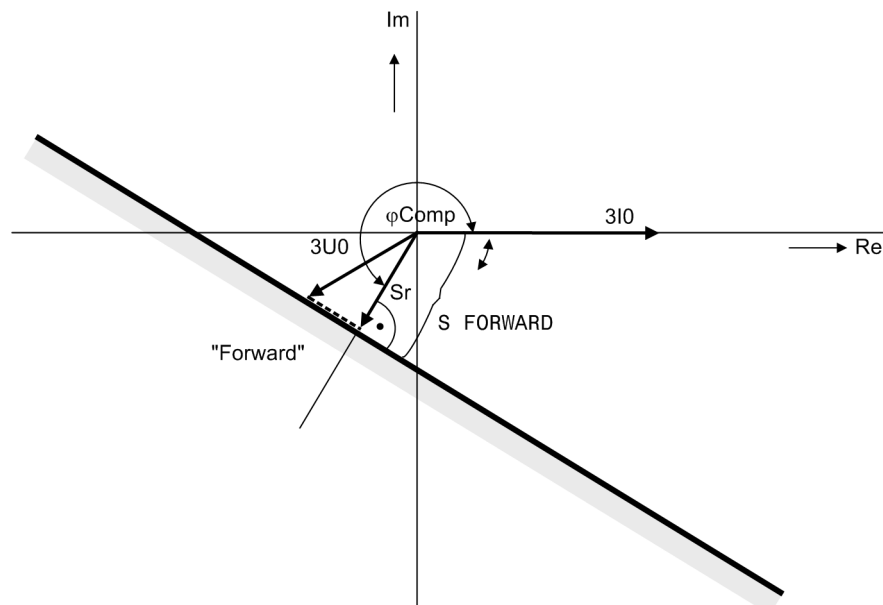


Figure 2-112 Directional characteristic with zero sequence power, example S_r = setting value
S FORWARD

Selection of the earth faulted phase

Since the earth fault protection employs the quantities of the zero sequence system and the negative sequence system, the faulted phase can not be determined directly. To enable single-pole automatic reclosure in case of high-resistance earth faults, the earth fault protective function features a phase selector. By means of the distribution of the currents and voltages it detects whether a fault is single-phase or multiple-phase. If the fault is single-phase, it selects the faulted phase. The phase selector is blocked during a single-pole automatic reclosure.

Once a multi-phase fault has been detected, a three-pole trip command is generated. Three-pole tripping is also initiated if single-pole tripping is not permitted (due to the setting or three-pole coupling of other internal extra functions or external devices via binary input, e.g. reclosing device).

The phase selector evaluates the phase-to-earth voltages, the phase-to-phase currents and the symmetrical components of the currents. If a single-phase fault can be detected with certainty due to a considerable voltage collapse or a high overcurrent, the trip is initiated in the concerned phase. Accordingly, three-pole tripping is initiated if the currents and/or voltages indicate a multi-phase fault.

If the methods described cannot detect the fault type beyond doubt, the negative sequence system and the zero sequence system are ultimately filtered out of the phase currents. The phase angle between negative sequence current and zero sequence current is used to determine the fault type i.e. whether the fault is single-phase or multi-phase. The phase currents are also evaluated to rectify the load current if necessary. This method relies on the fact that in the event of a single phase fault the fault-

free phases can conduct either no fault currents at all or only such fault currents that are approximately in phase.

The phase selector has an action time of approximately 40°ms. If the phase selector has not made a decision during this time, three-pole tripping is initiated. Three-pole tripping is initiated anyway as soon as a multi-pole fault has been detected, as described above.

Figure 2-113 shows the logic diagram. The phase determined by the phase selector can be processed selectively for each phase, for example the internal information „E/F PickupL1“ etc. is used for phase-selective signal transmission.

External indication of the phase-selective pickup is performed via the information „E/F L1 selec.“ etc. This information appears only if the phase was clearly detected. Single-pole tripping requires of course the general prerequisites to be fulfilled (device must be suited for single-pole tripping, single-pole tripping allowed).

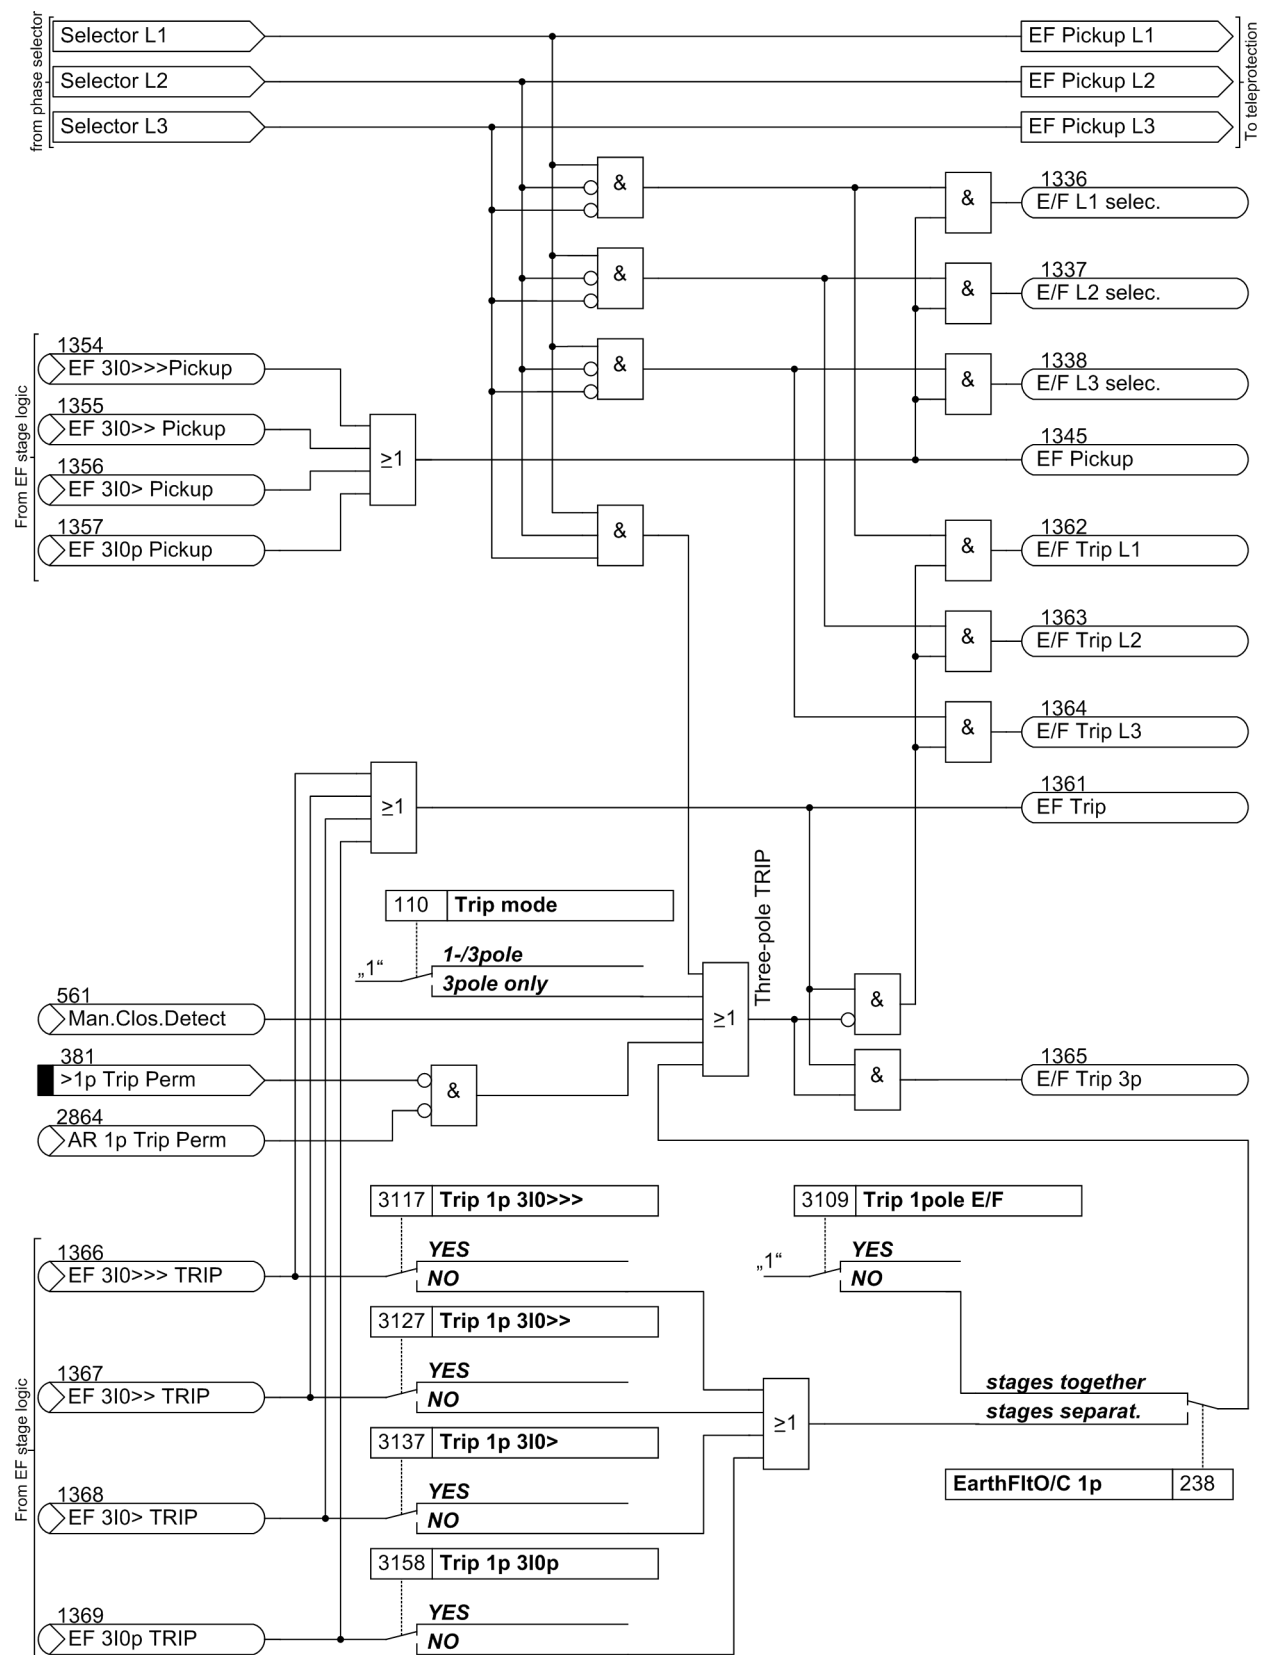


Figure 2-113 Logic diagram of single-pole tripping with phase selector

Blocking

The earth fault protection can be blocked by the differential protection to give preference to the selective fault clearance by the differential protection over tripping by the earth fault protection. Triggering the differential protection only causes a blocking of the trigger logic for the earth fault protection. Already started delay times are reset. The trigger messages of the earth fault protection continue to be output, while the interaction with the signal transmission method / Echo is performed. Blocking of the earth fault protection by means of differential trips is maintained 40 scan cycles (length of the earth fault protection filter) after blocking is OFF. This prevents a false pickup of the earth fault protection for extremely fast reset of the blocking.

The earth fault protection can be blocked by the distance protection. If in this case a fault is detected by the distance protection, the earth fault protection will not trip. This gives the selective fault clearance by the distance protection preference over tripping by the earth fault protection. The blocking can be restricted by configuration to single-phase or multi-phase faults and to faults in distance zone Z1 or Z1/Z1B. The blocking only affects the time sequence and tripping by the earth fault protective function and after the cause of the blocking has been cleared, it is maintained for approximately 40ms to prevent signal race conditions. It is issued as fault indication „EF TRIP BLOCK“ (No. 1335).

The earth fault protection can also be blocked during the single-pole dead time of an automatic reclose cycle. This prevents an incorrect measurement resulting from the zero sequence current and voltage signals arising in this state. The blocking affects optionally the entire protective function or the individual stages and is maintained for approximately 40ms after reclosure to prevent signal race conditions. If the complete function is blocked, the indication „E / F BLOCK“ (No. 1332) is output. The blocking of individual stages is signaled by the indications 14080 to 14083.

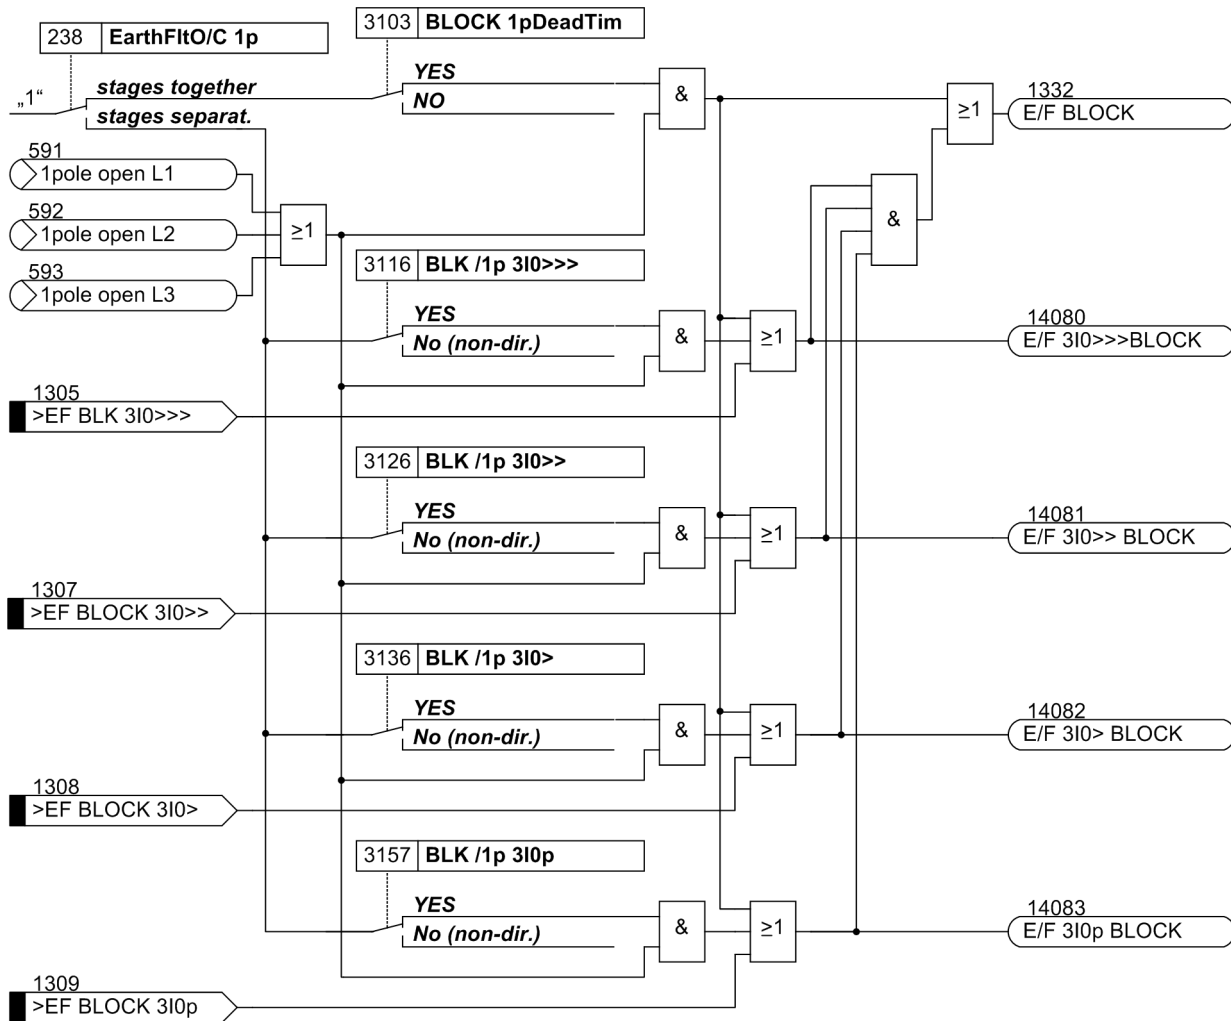


Figure 2-114 Logic diagram of single-pole tripping with phase selector

If the device is combined with an external automatic reclose device or if single-pole tripping can result from a separate (parallel tripping) protection device, the earth fault protection must be blocked via binary input during the single-pole open condition.

Switching onto an earth fault

The line energisation detection can be used to achieve fast tripping when energising the circuit breaker in case of an earth fault. The earth fault protection can then trip three-pole without delay. Parameters can be set to determine to which stage(s) the non-delayed tripping following energisation applies (see also logic diagrams from Figure 2-105 to Figure 2-109).

The non-delayed tripping in case of line energisation detection is blocked as long as the inrush-stabilization recognizes a rush current. This prevents instantaneous tripping by a stage which, under normal conditions, is sufficiently delayed during energisation of a transformer.

2.8.2 Setting Notes

General

During the configuration of the device scope of functions (refer to Section 2.1.1, address 131 **Earth Fault 0/C**) it was determined which group of characteristics is to be available. Only those parameters that apply to the available characteristics, according to the selected configuration and the version of the device, are accessible in the procedures described below.

Parameter 3101 **FCT EarthFlt0/C** can be used to switch the earth fault protection **ON** or **OFF**. This refers to all stages of the earth fault protection.

If not required, each of the four stages can be deactivated by setting its **MODE...** to **Inactive** (see below).

Blocking

The earth fault protection can be blocked by the distance protection to give preference to the selective fault clearance by the distance protection over tripping by the earth fault protection. In address 3102 **BLOCK for Dist.** it is determined whether blocking is performed during each fault detection of the distance protection (**every PICKUP**) or only during single-phase fault detection by the distance protection (**1phase PICKUP**) or only during multiple-phase fault detection by the distance protection (**multiph. PICKUP**). If blocking is desired, set **NO**.

It is also possible to block the earth fault protection trip only for pickup of the distance protection on the protected line section. To block the earth fault protection for faults occurring within zone Z1, set address 3174 **BLK for DisZone** to **in zone Z1**. To block the earth fault protection for faults occurring within zone Z1 or Z1B, set address 3174 **BLK for DisZone** to **in zone Z1/Z1B**. If, however, blocking of the earth fault protection by the distance protection is to take effect regardless of the fault location, set address 3174 **BLK for DisZone** to **in each zone**.

Address 3102 thus refers to the fault type and address 3174 and to the fault location. The two blocking options create an AND condition. To block the earth fault protection only for single-phase faults occurring in zone Z1, set address 3102 **BLOCK for Dist. = 1phase PICKUP** and 3174 **BLK for DisZone = in zone Z1**. To block the earth fault protection for any fault type (any distance protection pickup) occurring within zone Z1, the setting 3102 **BLOCK for Dist. = every PICKUP** and 3174 **BLK for DisZone = in zone Z1** applies.

The earth fault protection must be blocked during single-pole automatic reclose dead time to avoid pickup with the zero sequence values and, if applicable, the negative sequence values arising during this state.

When setting the power system data (Section 2.1.2.1), it was specified whether all stages of the earth fault protection are blocked together or separately during the single-pole dead time.

When setting 238 **EarthFlt0/C 1p** to **stages together**, parameter 3103 **BLOCK 1pDeadTim** becomes visible; the parameters for phase-selective blocking are hidden.

Parameter 3103 **BLOCK 1pDeadTim** must be set to **YES** (presetting for devices with single-pole tripping) if a single-pole automatic reclosure is to be performed. If not, set **NO**.

Setting parameter 3103 **BLOCK 1pDeadTim** to **YES** completely blocks the earth fault protection if the Open Pole Detector has recognized a single-pole dead time. If no single-pole tripping is carried out in the protected network, this parameter should be set to **NO**.

Regardless of how parameter address 3103 **BLOCK 1pDeadTim** is set, the earth fault protection will always be blocked during the single-pole dead time, if it has issued a trip command itself. This is necessary because otherwise the picked up earth fault protection cannot drop out if the fault current was caused by load current.

When setting **stages separat.**, the parameters for phase-selective blocking become visible (3116 **BLK /1p 3IO>>>**, 3126 **BLK /1p 3IO>>**, 3136 **BLK /1p 3IO>** and 3157 **BLK /1p 3IOp**), parameter 3103 **BLOCK 1pDeadTim** is hidden.

The parameters 3116, 3126, 3136 and 3157 can be used to determine which stage is to be blocked during the single-pole dead time. If the corresponding stage is to be blocked, the setting **YES** remains unchanged; if not, set **No (non-dir.)**.



Note

Stages of the earth fault protection, which are not to be blocked during the single-pole dead time, will not be blocked even if the earth fault protection itself gives a single-pole trip command. Pickup and trip command of the earth fault protection can thus only drop out if the earth current caused by the load current is below the threshold value of such a stage.

The earth fault protection can also be blocked by the differential protection. The parameter 3175 **EF BLK Dif.PU** can be used to activate (setting value **YES**) or deactivate (setting value **NO**) this blocking. For the duration of blocking the earth-fault protection trip the message 1335 „EF TRIP BLOCK“ is reported as ON.

Trip

When setting the power system data (Section 2.1.2.1), it was specified whether single-pole tripping is set for all stages of the earth fault protection together or separately.

When setting 238 **EarthFlt0/C 1p to stages together**, parameter 3109 **Trip 1pole E/F** becomes visible; the parameters for phase-selective settings are hidden.

Address 3109 **Trip 1pole E/F** specifies that the earth fault protection trips single-pole, provided that the faulted phase can be determined with certainty. This address is only valid for devices that have the option to trip single-pole. If you are using single-pole automatic reclosure, the setting **YES** (default setting) remains valid. Otherwise set **NO**.

When setting **stages separat.**, the parameters for the phase-selective setting are visible (3117 **Trip 1p 3IO>>>**, 3127 **Trip 1p 3IO>>**, 3137 **Trip 1p 3IO>** and 3158 **Trip 1p 3IOp**) parameter 3109 **Trip 1pole E/F** is hidden.

The parameters 3117, 3127, 3137 and 3158 can be used to determine which stage is to trip single-pole, provided that the faulted phase can be determined with certainty. If the corresponding stage is to trip single-pole, the setting **YES** remains unchanged; if not, set **No (non-dir.)**.

Definite time stages

First of all, the mode for each stage is set: address 3110 **Op. mode 3IO>>>**, address 3120 **Op. mode 3IO>>** and address 3130 **Op. mode 3IO>**. Each stage can be set to operate **Forward** (usually towards line), **Reverse** (usually towards busbar) or **Non-Directional** (in both directions). If a single stage is not required, set its mode to **Inactive**.

The definite time stages **3IO>>>** (address 3111), **3IO>>** (address 3121) and **3IO>** (address 3131) can be used for a three-stage definite time overcurrent protection. They can also be combined with the inverse time stage **3IOp PICKUP** (address 3141,

see below). The pick up thresholds should in general be selected such that the most sensitive stage picks up with the smallest expected earth fault current.

The $3I_{0>>}$ and $3I_{0>>>}$ stages are best suited for fast tripping stages (instantaneous), as these stages use an abridged filter with shorter response time. On the other hand, the stages $3I_{0>}$ and $3I_{0P}$ are best suited for very sensitive earth fault detection due to their effective method of suppressing harmonics.

If no inverse time stage, but rather a fourth definite time stage is required, the „inverse time“ stage can be implemented as a definite time stage. This must already be taken regard of during the configuration of the protection functions (refer to Section 2.1.1.3, address 131 **Earth Fault 0/C = Definite Time**). For this stage, the address 3141 **3I0p PICKUP** then determines the current pickup threshold and address 3147 **Add.T-DELAY** the definite time delay.

The values for the time delay settings **T 3I0>>>** (address 3112), **T 3I0>>** (address 3122) and **T 3I0>** (address 3132) are derived from the earth fault grading coordination diagram of the system.

During the selection of the current and time settings, regard must be taken as to whether a stage should be direction dependent and whether it uses teleprotection. Refer also to the margin headings „Determination of Direction“ and „Teleprotection with Earth Fault Protection“.

The set time delays are pure additional delays, which do not include the operating time (measuring time).

Inverse time stage with IEC characteristic

If the fourth stage has been configured as an inverse time overcurrent stage with IEC characteristic (address 131 **Earth Fault 0/C = TOC IEC**), you first set the mode: Address 3140 **Op. mode 3I0p**. This stage can be set to operate **Forward** (usually towards line) or **Reverse** (usually towards busbar) or **Non-Directional** (in both directions). If the stage is not required, set its mode to **Inactive**.

For the inverse time overcurrent stage $3I_{0P}$ it is possible to select different characteristics depending on order variant and configuration (Section 2.1.1.3, address 131). With IEC characteristics (address 131 **Earth Fault 0/C = TOC IEC**) the following options are available in address 3151 **IEC Curve**:

Normal Inverse (inverse, type A according to IEC 60255–3),

Very Inverse (very inverse, type B according to IEC 60255–3),

Extremely Inv. (extremely inverse, type C according to IEC 60255–3), and

LongTimeInverse (longtime, type B according to IEC 60255–3).

The characteristics and equations they are based on are listed in the Technical Data.

The setting of the pickup threshold **3I0p PICKUP** (address 3141) is similar to the setting of definite time stages (see above). In this case it must be noted that a safety margin between the pickup threshold and the set value has already been incorporated. Pickup only occurs at a current which is approximately 10 % above the set value.

The time multiplier setting **3I0p Time Dial** (address 3143) is derived from the grading coordination chart which was set up for earth faults in the system.

In addition to the inverse time delay, a constant (fixed length) time delay can also be set if this is required. The setting **Add.T-DELAY** (address 3147) is added to the time of the set curve.

During the selection of the current and time settings, regard must be taken as to whether a stage should be direction dependent and whether it uses teleprotection.

Refer also to the margin headings „Determination of Direction“ and „Teleprotection with Earth Fault Protection“.

Inverse time stage with ANSI characteristic

If the fourth stage has been configured as an inverse time overcurrent stage with ANSI characteristic (address 131 **Earth Fault 0/C = TOC ANSI**), you first set the mode: Address 3140 **Op. mode 3IOp**. This stage can be set to operate **Forward** (usually towards line) or **Reverse** (usually towards busbar) or **Non-Directional** (in both directions). If the stage is not required, set its mode to **Inactive**.

For the inverse time overcurrent stage 3I_{OP} it is possible to select different characteristics depending on order variant and configuration (Section 2.1.1, address 131). With ANSI characteristics (address 131 **Earth Fault 0/C = TOC ANSI**) the following options are available in address 3152 **ANSI Curve**:

Inverse,
Short Inverse,
Long Inverse,
Moderately Inv.,
Very Inverse,
Extremely Inv.,
Definite Inv..

The characteristics and equations they are based on are listed in the Technical Data.

The setting of the pickup threshold **3IOp PICKUP** (address 3141) is similar to the setting of definite time stages (see above). In this case it must be noted that a safety margin between the pickup threshold and the set value has already been incorporated. Pickup only occurs at a current which is approximately 10 % above the set value.

The time multiplier setting **3IOp Time Dial** (address 3144) is derived from the grading coordination chart which was set up for earth faults in the system.

In addition to the inverse time delay, a constant (fixed length) time delay can also be set if this is required. The setting **Add. T-DELAY** (address 3147) is added to the time of the set curve.

During the selection of the current and time settings, regard must be taken as to whether a stage should be direction dependent and whether it uses teleprotection. Refer also to the margin headings „Determination of Direction“ and „Teleprotection with Earth Fault Protection“.

Inverse time stage with logarithmic inverse characteristic

If you have configured the inverse time overcurrent stage with logarithmic inverse characteristic (address 131 **Earth Fault 0/C = TOC Logarithm.**), the operating mode is initially set: Address 3140 **Op. mode 3IOp**. This stage can be set to operate **Forward** (usually towards line) or **Reverse** (usually towards busbar) or **Non-Directional** (in both directions). If the stage is not required, set its mode to **Inactive**.

For the logarithmic inverse characteristic (address 131 **Earth Fault 0/C = TOC Logarithm.**) the setting of address is 3153 **LOG Curve = Log. inverse**.

The characteristic and the formula on which it is based can be found in the Technical Data.

Figure 2-115 illustrates the influence of the most important setting parameters on the curve. **3IOp PICKUP** (address 3141) is the reference value for all current values, while **3IOp Startpoint** (address 3154) determines the beginning of the curve, i.e.

the lowest operating range on the current axis (referred to **3I0p PICKUP**). The timer setting **3I0p MaxT-DELAY** (address 3146) determines the starting point of the curve (for $3I_0 = \mathbf{3I0p PICKUP}$). The time factor **3I0p Time Dial** (address 3145) changes the slope of the curve. For large currents, **3I0p MinT-DELAY** (address 3142) determines the lower limit on the time axis. For currents larger than $35 \cdot \mathbf{3I0p PICKUP}$ the operating time no longer decreases.

Finally, at address 3147 **Add. T-DELAY** a fixed time delay can be set as was done for the other curves.

During the selection of the current and time settings, regard must be taken as to whether a stage should be direction dependent and whether it uses teleprotection. Refer also to the margin headings „Determination of Direction“ and „Teleprotection with Earth Fault Protection“.

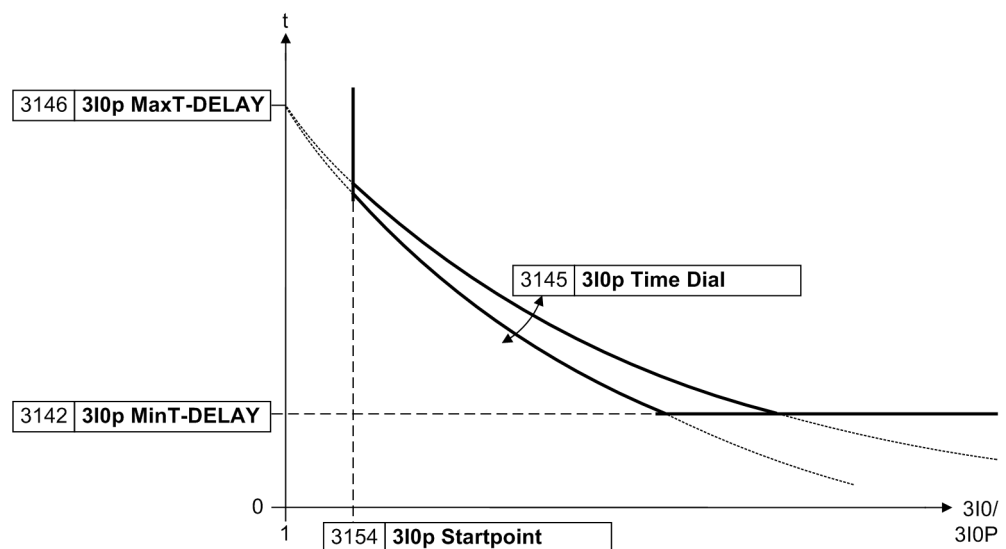


Figure 2-115 Curve parameters in the logarithmic-inverse characteristic

Zero sequence voltage stage with inverse characteristic

If you have configured the zero sequence voltage controlled stage (address 131 **Earth Fault 0/C = U0 inverse**), the operating mode is initially set: Address 3140 **Op. mode 3I0p**. This stage can be set to operate **Forward** (usually towards line) or **Reverse** (usually towards busbar) or **Non-Directional** (in both directions). If the stage is not required, set its mode to **Inactive**.

Address 3141 **3I0p PICKUP** indicates the minimum current value above which this stage is required to operate. The value must be exceeded by the minimum earth fault current value.

The voltage-controlled characteristic is based on the following formula:

$$t = \frac{2 \text{ s}}{0.25 U_0 / V - U_{0 \min} / V}$$

U_0 is the actual zero sequence voltage. $U_{0 \min}$ is the setting value **U0inv. minimum** (address 3183). Please take into consideration that the formula is based on the zero sequence voltage U_0 , not on $3U_0$. The function is illustrated in the Technical Data.

Figure 2-116 shows the most important parameters. **U0inv. minimum** displaces the voltage-controlled characteristic in direction of $3U_0$. The set value is the asymptote for

this characteristic ($t \rightarrow \infty$). In Figure 2-116, **a'** shows an asymptote that belongs to the characteristic **a**.

The minimum voltage **3U0>(U0 inv)** (address 3182) is the lower voltage threshold. It corresponds to the line **c** in Figure 2-116. In characteristic **b** (asymptote not drawn) the curve is cut by the minimum voltage **3U0>(U0 inv)** (line **c**).

In address 3184, an additional time **T forw. (U0inv)** that is added to the voltage-controlled characteristic can be set for directional-controlled tripping.

With the non-directional time **T rev. (U0inv)** (address 3185) a non-directional back-up stage can be generated.

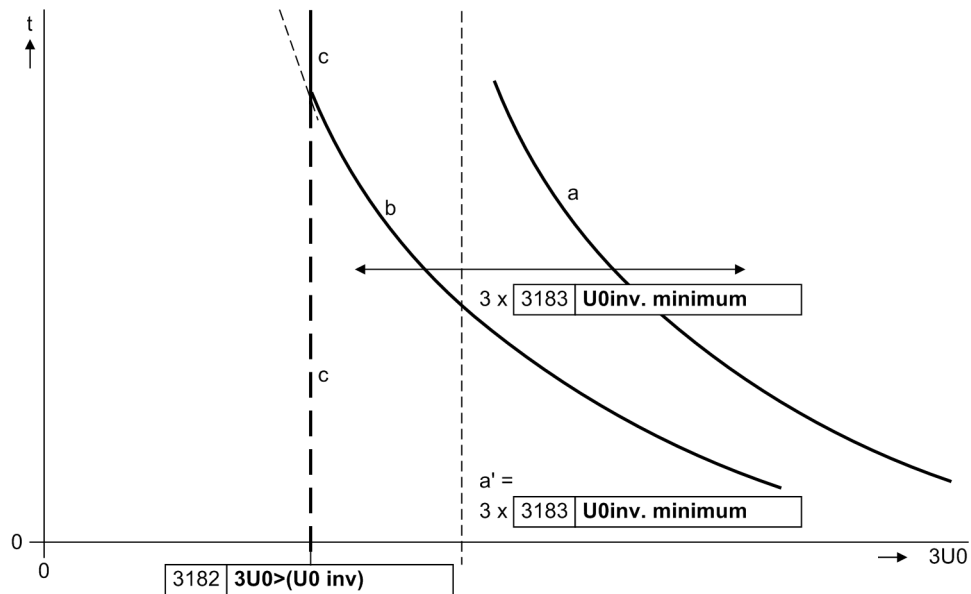


Figure 2-116 Characteristic settings of the zero-sequence voltage time dependent stage — without additional times

Zero sequence power stage

If you have configured the fourth stage as zero-sequence power stage (address 131 **Earth Fault 0/C = Sr inverse**), set the mode first: Address 3140 **Op. mode 3I0p**. This stage can be set to operate **Forward** (usually towards line) or **Reverse** (usually towards busbar) or **Non-Directional** (in both directions). If the stage is not required, set its mode to **Inactive**. The zero-sequence power protection is to operate always in line direction.

Address 3141 **3I0p PICKUP** indicates the minimum current value above which this stage is required to operate. The value must be exceeded by the minimum earth fault current value.

The zero-sequence power S_r is calculated according to the formula:

$$S_r = 3I_0 \cdot 3U_0 \cdot \cos(\varphi - \varphi_{\text{Comp}})$$

The angle φ_{Comp} is set as maximum-sensitivity angle at address 3168 **PHI comp**. It refers to the zero-sequence voltage in relation to the zero-sequence current. The default setting 255° thus corresponds to a zero sequence impedance angle of 75° ($255^\circ - 180^\circ$). Refer also to margin heading „Zero Sequence Power Protection“.

The trip time depends on the zero sequence power according to the following formula:

$$t = k \cdot \frac{S_{ref}}{S_r}$$

Where S_r is the compensated power according to above formula. S_{ref} is the setting value **S ref** (address 3156), that indicates the pickup value of the stage at $\varphi = \varphi_{comp}$. Factor **k** (address 3155) can be set to displace the zero-sequence time characteristic in time direction, the reference value **S ref** can be set for displacement in power direction.

The time setting **Add. T-DELAY** (address 3147) allows an additional power-independent delay time to be set.

Direction determination

The direction of each required stage was already determined when setting the different stages.

According to the requirements of the application, the directionality of each stage is individually selected. If, for instance, a directional earth fault protection with a non-directional back-up stage is required, this can be implemented by setting the $3I_0>>$ stage directional with a short or no delay time and the $3I_0>$ stage with the same pickup threshold, but a longer delay time as directional backup stage. The $3I_0>>>$ stage could be applied as an additional high set instantaneous stage.

If a stage is to operate with teleprotection according to Section 2.9, it may operate without delay in conjunction with a permissive scheme. In the blocking scheme, a short delay equal to the signal transmission time, plus a small reserve margin of approx. 20 ms is sufficient.

Direction determination of the overcurrent stages usually uses the earth current as measured quantity $I_E = -3I_0$, whose angle is compared with a reference quantity. The desired reference quantity is set in **POLARIZATION** (address 3160):

The default setting **U0 + IY or U2** is universal. The device then selects automatically whether the reference quantity is composed of the zero sequence voltage plus the transformer starpoint current, or whether the negative-sequence voltage is used, depending on which quantity prevails. You can even apply this setting when no transformer starpoint current I_Y is connected to the device since an unconnected current does not have any effect.

The setting **U0 + IY** can also be applied with or without transformer starpoint current connected.

If the direction determination must be carried out using only I_Y as reference signal, apply the setting **with IY only**. This makes sense if a reliable transformer starpoint current I_Y is always available at the device input I_4 . The direction determination is then not influenced by disturbances in the secondary circuit of the voltage transformers. This presupposes that the device is equipped with a current input I_4 of normal sensitivity and that the current from the transformer starpoint infeed is connected to I_4 .

If direction determination is to be carried out using exclusively the negative sequence system signals $3I_2$ and $3U_2$, the setting **with U2 and I2** is applied. In this case, only the negative-sequence signals calculated by the device are used for direction determination. In that case, the device does not require any zero-sequence signals for direction determination.

If you are using the zero-sequence power protection (address 131 **Earth Fault O/C = Sr inverse**), it is reasonable to conduct the direction determination also via the zero-sequence power. In this case, apply the option **zero seq. power** for **POLARIZATION**.

Finally, the threshold values of the reference quantities must be set. **3U0>** (address 3164) determines the minimum operating voltage for direction determination with U_0 . If U_0 is not used for the direction determination, this setting is of no consequence. The set threshold should not be exceeded by asymmetries in the operational measured voltage. The setting value relates to the triple zero-sequence voltage, that is

$$3 \cdot U_0 = |\underline{U}_{L1} + \underline{U}_{L2} + \underline{U}_{L3}|$$

If the voltage dependent characteristic (U0 inverse) is used as directional stage, it is reasonable for the minimum polarizing voltage to use a value that is equal to or below the minimum voltage of the voltage-controlled characteristic (address 3182).

Only if you have set in the **P.System Data 1** (see Section 2.1.2.1) the connection of the fourth current transformer **I4 transformer** (address 220) = **IY starpoint**, address 3165 **IY>** will appear. It is the lower threshold for the current measured in the starpoint of a source transformer. A relatively sensitive setting can be applied for this value, as the measurement of the starpoint current is quite accurate by nature.

If the direction determination must be carried out with the negative sequence system signals, the setting values **3U2>** (address 3166) and **3I2>** (address 3167) are decisive for the lower limit of the direction determination. The setting values must in this case also be selected such that operational asymmetry in the system does not lead to a pickup.

If you are using the zero-sequence power protection and the fault direction is determined on the basis of the zero-sequence power, address 3169 **S forward** indicates the value of the compensated zero-sequence power above which the direction is recognized as forward. This value should be smaller than the reference power **S ref** (address 3156, see above paragraph at „Zero-Sequence Power Stage“). This ensures the availability of direction determination even with smaller zero-sequence power conditions.

The position of the directional characteristic can be changed depending on the selected method of direction determination (address 3160 **POLARIZATION**, see above). All methods based on angle measurement between measured signal and reference signal (i.e. all methods except **POLARIZATION = zero seq. power**) allow the angle range of the direction determination to be changed with the setting angles **Dir. ALPHA** and **Dir. BETA** (addresses 3162 and 3163). This parameter can only be altered using DIGSI at **Additional Settings**. As these set values are not critical, the presettings may be left unchanged. If you want to change these values, refer to margin heading „Determination of Direction with Zero Sequence System“ for the angle determination.

The direction determination **POLARIZATION** with **zero seq. power** determines the directional characteristic by means of the compensation angle **PHI comp** (address 3168) which indicates the symmetry axis of the directional characteristic. This value is also not critical for direction determination. For information on the angle definition, refer to margin heading „Direction Determination with Zero-Sequence Power“. This angle determines at the same time the maximum sensitivity of the zero-sequence power stage thus also affecting indirectly the trip time as described above (margin heading „Zero-Sequence Power Stage“).

Teleprotection with earth fault protection

The earth fault protection in the 7SD5 may be expanded to a directional comparison protection using the integrated teleprotection logic. Additional information regarding the available teleprotection schemes and their mode of operation may be obtained from Section 2.9. If this is to be used, certain preconditions must already be observed when setting the earth current stage.

Initially, it must be determined which stage must operate in conjunction with the teleprotection. This stage must be set directional in the line direction. If, for example, the $3I_0>$ stage should operate as directional comparison, set address 3130 **Op. mode 3IO> = Forward** (see above „Definite Time Stages“).

Furthermore, the device must be informed that the applicable stage has to function together with the teleprotection to allow undelayed release of the tripping during internal faults. For the $3I_0>$ stage this means that address 3133 **3IO> Telep/BI** is set to **YES**. The time delay set for this stage **T 3IO>** (address 3132) then functions as a back-up stage, e.g. during failure of the signal transmission. For the remaining stages the corresponding setting parameter is set to **NO**, therefore, in this example: address 3123 **3IO>> Telep/BI** for stage $3I_0>>$, address 3113 **3IO>>> Telep/BI** for stage $3I_0>>>$, address 3148 **3IOp Telep/BI** for stage $3I_{0P}$ (if used).

If the echo function is used in conjunction with the teleprotection scheme, or if the weak-infeed tripping function should be used, the additional teleprotection stage **3IOMin Teleprot** (address 3105) must be set to avoid non-selective tripping during through-fault earth current measurement. For further information refer to Section 2.9, margin heading „Earth Fault Protection Prerequisites“.

Switching onto an earth fault

It is possible to determine with a setting which stage trips without delay following closure onto a dead fault. The parameters **3IO>>>SOTF-Trip** (address 3114), **3IO>> SOTF-Trip** (address 3124), **3IO> SOTF-Trip** (address 3134) and, if necessary, **3IOp SOTF-Trip** (address 3149) are available for the stages which can be set to **YES** or **NO** for each stage. Selection of the most sensitive stage is usually not reasonable as a solid short-circuit may be assumed following switching onto a fault, whereas the most sensitive stage often also has to detect high resistance faults. It is important to avoid that the selected stage picks up due to transients when it is switched on.

On the other hand, it does not matter if a selected stage may pick up due to inrush conditions on transformers. The switch-onto-fault tripping of a stage is blocked by the inrush stabilization even if it is set as instantaneous switch-onto-fault stage.

To avoid a spurious pickup due to transient overcurrents, the delay **SOTF Time DELAY** (address 3173) can be set. Usually, the default setting **0** can be retained. In the case of long cables, where large peak inrush currents can occur, a short delay may be useful. The time delay depends on the severity and duration of the transient overcurrents as well as on which stages were selected for the fast switch onto fault clearance.

With the parameter **SOTF Op. Mode** (address 3172) it is finally possible to determine whether the fault direction must be checked (**PICKUP+DIRECT.**) or not (**PICKUP**), before a switch-onto-fault tripping is generated. It is the direction setting for each stage that applies for this direction check.

Phase current stabilization

To avoid a spurious pickup of the stages in the case of asymmetrical load conditions or varying current transformer measuring errors in earth systems, the earth current stages are restrained by the phase currents: as the phase currents increase, the pickup thresholds are increased. By means of the setting in address 3104 **Iph-STAB. Slope** the preset value of 10 % for all stages can be jointly changed for all stages. This parameter can only be altered in DIGSI at **Display Additional Settings**.

Inrush restraint

The inrush restraint is only required if the device is applied to transformer feeders or on lines that end on a transformer; in this case also only for such stages that have a pickup threshold below the inrush current and have a very short or zero delay. The parameters **3IO>>>InrushBlk** (address 3115), **3IO>> InrushBlk** (address 3125),

3I0> InrushBlk (address 3135) and **3I0p InrushBlk** (address 3150) can be set to **YES** (inrush restraint active) or **NO** (inrush restraint inactive) for each stage. If the inrush restraint has been disabled for all stages, the following parameters are of no consequence.

For the recognition of the inrush current, the portion of second harmonic current content referred to the fundamental current component can be set in address 3170 **2nd InrushRest**. Above this threshold the inrush blocking is effective. The preset value (15 %) should be sufficient in most cases. Lower values imply higher sensitivity of the inrush blocking (smaller portion of second harmonic current results in blocking).

In applications on transformer feeders or lines that are terminated on transformers it may be assumed that, if very large currents occur, a short-circuit has occurred in front of the transformer. In the event of such large currents, the inrush restraint is inhibited. This threshold value which is set in the address 3171 **Imax InrushRest**, should be larger than the maximum expected inrush current (RMS value).

2.8.3 Settings

Addresses which have an appended "A" can only be changed with DIGSI, under Additional Settings.

The table indicates region-specific presettings. Column C (configuration) indicates the corresponding secondary nominal current of the current transformer.

Addr.	Parameter	C	Setting Options	Default Setting	Comments
3101	FCT EarthFltO/C		ON OFF	ON	Earth Fault overcurrent function
3102	BLOCK for Dist.		every PICKUP 1phase PICKUP multiph. PICKUP NO	every PICKUP	Block E/F for Distance protection
3103	BLOCK 1pDeadTim		YES NO	YES	Block E/F for 1pole Dead time
3104A	lph-STAB. Slope		0 .. 30 %	10 %	Stabilisation Slope with lphase
3105	3IoMin Teleprot	1A	0.01 .. 1.00 A	0.50 A	3Io-Min threshold for Teleprot. schemes
		5A	0.05 .. 5.00 A	2.50 A	
3105	3IoMin Teleprot	1A	0.003 .. 1.000 A	0.500 A	3Io-Min threshold for Teleprot. schemes
		5A	0.015 .. 5.000 A	2.500 A	
3109	Trip 1pole E/F		YES NO	YES	Single pole trip with earth flt.prot.
3110	Op. mode 3I0>>>		Forward Reverse Non-Directional Inactive	Inactive	Operating mode
3111	3I0>>>	1A	0.05 .. 25.00 A	4.00 A	3I0>>> Pickup
		5A	0.25 .. 125.00 A	20.00 A	
3112	T 3I0>>>		0.00 .. 30.00 sec; ∞	0.30 sec	T 3I0>>> Time delay

Addr.	Parameter	C	Setting Options	Default Setting	Comments
3113	3I0>>> Telep/BI		NO YES	NO	Instantaneous trip via Tele-prot./BI
3114	3I0>>>SOTF-Trip		NO YES	NO	Instantaneous trip after SwitchOnToFault
3115	3I0>>>InrushBlk		NO YES	NO	Inrush Blocking
3116	BLK /1p 3I0>>>		YES No (non-dir.)	YES	Block 3I0>>> during 1pole dead time
3117	Trip 1p 3I0>>>		YES NO	YES	Single pole trip with 3I0>>>
3120	Op. mode 3I0>>		Forward Reverse Non-Directional Inactive	Inactive	Operating mode
3121	3I0>>	1A	0.05 .. 25.00 A	2.00 A	3I0>> Pickup
		5A	0.25 .. 125.00 A	10.00 A	
3122	T 3I0>>		0.00 .. 30.00 sec; ∞	0.60 sec	T 3I0>> Time Delay
3123	3I0>> Telep/BI		NO YES	NO	Instantaneous trip via Tele-prot./BI
3124	3I0>> SOTF-Trip		NO YES	NO	Instantaneous trip after SwitchOnToFault
3125	3I0>> InrushBlk		NO YES	NO	Inrush Blocking
3126	BLK /1p 3I0>>		YES No (non-dir.)	YES	Block 3I0>> during 1pole dead time
3127	Trip 1p 3I0>>		YES NO	YES	Single pole trip with 3I0>>
3130	Op. mode 3I0>		Forward Reverse Non-Directional Inactive	Inactive	Operating mode
3131	3I0>	1A	0.05 .. 25.00 A	1.00 A	3I0> Pickup
		5A	0.25 .. 125.00 A	5.00 A	
3131	3I0>	1A	0.003 .. 25.000 A	1.000 A	3I0> Pickup
		5A	0.015 .. 125.000 A	5.000 A	
3132	T 3I0>		0.00 .. 30.00 sec; ∞	0.90 sec	T 3I0> Time Delay
3133	3I0> Telep/BI		NO YES	NO	Instantaneous trip via Tele-prot./BI
3134	3I0> SOTF-Trip		NO YES	NO	Instantaneous trip after SwitchOnToFault
3135	3I0> InrushBlk		NO YES	NO	Inrush Blocking
3136	BLK /1p 3I0>		YES No (non-dir.)	YES	Block 3I0> during 1pole dead time

Addr.	Parameter	C	Setting Options	Default Setting	Comments
3137	Trip 1p 3I0>		YES NO	YES	Single pole trip with 3I0>
3140	Op. mode 3I0p		Forward Reverse Non-Directional Inactive	Inactive	Operating mode
3141	3I0p PICKUP	1A	0.05 .. 25.00 A	1.00 A	3I0p Pickup
		5A	0.25 .. 125.00 A	5.00 A	
3141	3I0p PICKUP	1A	0.003 .. 25.000 A	1.000 A	3I0p Pickup
		5A	0.015 .. 125.000 A	5.000 A	
3142	3I0p MinT-DELAY		0.00 .. 30.00 sec	1.20 sec	3I0p Minimum Time Delay
3143	3I0p Time Dial		0.05 .. 3.00 sec; ∞	0.50 sec	3I0p Time Dial
3144	3I0p Time Dial		0.50 .. 15.00 ; ∞	5.00	3I0p Time Dial
3145	3I0p Time Dial		0.05 .. 15.00 sec; ∞	1.35 sec	3I0p Time Dial
3146	3I0p MaxT-DELAY		0.00 .. 30.00 sec	5.80 sec	3I0p Maximum Time Delay
3147	Add.T-DELAY		0.00 .. 30.00 sec; ∞	1.20 sec	Additional Time Delay
3148	3I0p Telep/BI		NO YES	NO	Instantaneous trip via Teleprot./BI
3149	3I0p SOTF-Trip		NO YES	NO	Instantaneous trip after SwitchOnToFault
3150	3I0p InrushBlk		NO YES	NO	Inrush Blocking
3151	IEC Curve		Normal Inverse Very Inverse Extremely Inv. LongTimeInverse	Normal Inverse	IEC Curve
3152	ANSI Curve		Inverse Short Inverse Long Inverse Moderately Inv. Very Inverse Extremely Inv. Definite Inv.	Inverse	ANSI Curve
3153	LOG Curve		Log. inverse	Log. inverse	LOGARITHMIC Curve
3154	3I0p Startpoint		1.0 .. 4.0	1.1	Start point of inverse characteristic
3155	k		0.00 .. 3.00 sec	0.50 sec	k-factor for Sr-characteristic
3156	S ref	1A	1 .. 100 VA	10 VA	S ref for Sr-characteristic
		5A	5 .. 500 VA	50 VA	
3157	BLK /1p 3I0p		YES No (non-dir.)	YES	Block 3I0p during 1pole dead time
3158	Trip 1p 3I0p		YES NO	YES	Single pole trip with 3I0p

Addr.	Parameter	C	Setting Options	Default Setting	Comments
3160	POLARIZATION		U0 + IY or U2 U0 + IY with IY only with U2 and I2 zero seq. power	U0 + IY or U2	Polarization
3162A	Dir. ALPHA		0 .. 360 °	338 °	ALPHA, lower angle for forward direction
3163A	Dir. BETA		0 .. 360 °	122 °	BETA, upper angle for forward direction
3164	3U0>		0.5 .. 10.0 V	0.5 V	Min. zero seq.voltage 3U0 for polarizing
3165	IY>	1A	0.05 .. 1.00 A	0.05 A	Min. earth current IY for polarizing
		5A	0.25 .. 5.00 A	0.25 A	
3166	3U2>		0.5 .. 10.0 V	0.5 V	Min. neg. seq. polarizing voltage 3U2
3167	3I2>	1A	0.05 .. 1.00 A	0.05 A	Min. neg. seq. polarizing current 3I2
		5A	0.25 .. 5.00 A	0.25 A	
3168	PHI comp		0 .. 360 °	255 °	Compensation angle PHI comp. for Sr
3169	S forward	1A	0.1 .. 10.0 VA	0.3 VA	Forward direction power threshold
		5A	0.5 .. 50.0 VA	1.5 VA	
3170	2nd InrushRest		10 .. 45 %	15 %	2nd harmonic ratio for inrush restraint
3171	Imax InrushRest	1A	0.50 .. 25.00 A	7.50 A	Max.Current, overriding inrush restraint
		5A	2.50 .. 125.00 A	37.50 A	
3172	SOTF Op. Mode		PICKUP PICKUP+DIRECT.	PICKUP+DIRECT.	Instantaneous mode after SwitchOnToFault
3173	SOTF Time DELAY		0.00 .. 30.00 sec	0.00 sec	Trip time delay after SOTF
3174	BLK for DisZone		in zone Z1 in zone Z1/Z1B in each zone	in each zone	Block E/F for Distance Protection Pickup
3175	EF BLK Dif.PU		YES NO	YES	Block E/F for Differential Prot. Pickup
3182	3U0>(U0 inv)		1.0 .. 10.0 V	5.0 V	3U0> setpoint
3183	U0inv. minimum		0.1 .. 5.0 V	0.2 V	Minimum voltage U0min for T->oo
3184	T forw. (U0inv)		0.00 .. 32.00 sec	0.90 sec	T-forward Time delay (U0inv)
3185	T rev. (U0inv)		0.00 .. 32.00 sec	1.20 sec	T-reverse Time delay (U0inv)

2.8.4 Information List

No.	Information	Type of Information	Comments
1305	>EF BLK 3I0>>>	SP	>Earth Fault O/C Block 3I0>>>
1307	>EF BLOCK 3I0>>	SP	>Earth Fault O/C Block 3I0>>
1308	>EF BLOCK 3I0>	SP	>Earth Fault O/C Block 3I0>
1309	>EF BLOCK 3I0p	SP	>Earth Fault O/C Block 3I0p
1310	>EF InstTRIP	SP	>Earth Fault O/C Instantaneous trip
1331	E/F Prot. OFF	OUT	Earth fault protection is switched OFF
1332	E/F BLOCK	OUT	Earth fault protection is BLOCKED
1333	E/F ACTIVE	OUT	Earth fault protection is ACTIVE
1335	EF TRIP BLOCK	OUT	Earth fault protection Trip is blocked
1336	E/F L1 selec.	OUT	E/F phase selector L1 selected
1337	E/F L2 selec.	OUT	E/F phase selector L2 selected
1338	E/F L3 selec.	OUT	E/F phase selector L3 selected
1345	EF Pickup	OUT	Earth fault protection PICKED UP
1354	EF 3I0>>>Pickup	OUT	E/F 3I0>>> PICKED UP
1355	EF 3I0>> Pickup	OUT	E/F 3I0>> PICKED UP
1356	EF 3I0> Pickup	OUT	E/F 3I0> PICKED UP
1357	EF 3I0p Pickup	OUT	E/F 3I0p PICKED UP
1358	EF forward	OUT	E/F picked up FORWARD
1359	EF reverse	OUT	E/F picked up REVERSE
1361	EF Trip	OUT	E/F General TRIP command
1362	E/F Trip L1	OUT	Earth fault protection: Trip 1pole L1
1363	E/F Trip L2	OUT	Earth fault protection: Trip 1pole L2
1364	E/F Trip L3	OUT	Earth fault protection: Trip 1pole L3
1365	E/F Trip 3p	OUT	Earth fault protection: Trip 3pole
1366	EF 3I0>>> TRIP	OUT	E/F 3I0>>> TRIP
1367	EF 3I0>> TRIP	OUT	E/F 3I0>> TRIP
1368	EF 3I0> TRIP	OUT	E/F 3I0> TRIP
1369	EF 3I0p TRIP	OUT	E/F 3I0p TRIP
1370	EF InrushPU	OUT	E/F Inrush picked up
14080	E/F 3I0>>>BLOCK	OUT	E/F 3I0>>> is blocked
14081	E/F 3I0>> BLOCK	OUT	E/F 3I0>> is blocked
14082	E/F 3I0> BLOCK	OUT	E/F 3I0> is blocked
14083	E/F 3I0p BLOCK	OUT	E/F 3I0p is blocked

2.9 Teleprotection for Earth Fault Protection (optional)

2.9.1 General

With the aid of the integrated comparison logic, the directional earth fault protection according to Section 2.8 can be expanded to a directional comparison protection scheme.

Transmission Modes

One of the stages which must be directional **Forward** is used for the directional comparison. This stage can only trip rapidly if a fault is also detected in the forward direction at the other line end. A release (unblock) signal or a block signal can be transmitted.

The following permissive schemes exist:

- Directional comparison,
- Directional unblock scheme

and blocking scheme:

- Blocking of the directional stage.

Further stages can be set as directional and/or non-directional backup stages.

Transmission Channels

For the signal transmission, one channel in each direction is required. Fibre optic connections or voice frequency modulated high frequency channels via pilot cables, power line carrier or microwave radio links can be used for this purpose. If the same transmission channel is used as for the transmission by the distance protection, the transmission mode must also be the same!

As an alternative, digital communication lines connected to one of the protection data interfaces can be used for signal transmission, For example: Fibre optic cables, communication networks or dedicated cables (control cable or twisted phone wire). In this case, send and receive signals must be linked to the remote commands via CFC. Directional comparison pickup is suitable for these kinds of transmission.

7SD5 also allows the transmission of phase-selective signals. This has the advantage that single-pole automatic reclosure can be carried out even if two single-phase faults occur on different lines in the system. If no single-phase fault is detected, signals are transmitted for all three phases. With earth fault protection, phase-selective transmission only makes sense if the earth faulted phase is identified by means of the phase selector (address 3109 **Trip 1pole E/F** is set to **YES**, refer also to Section 2.8 under „Tripping“).

The signal transmission schemes are also suited to three terminal lines (teed feeders). In this case, signal transmission channels are required from each of the three ends to each of the others in both directions.

In case of disturbances on the transmission path, the teleprotection supplement may be blocked. In conventional signal transmission schemes, the disturbance will be signalled at a binary input.

Activation and Deactivation

The comparison function can be switched on and off by means of the parameter 3201 **FCT Telep. E/F**, via the system interface (if available) and via binary inputs (if allocated). The switch states are saved internally (refer to Figure 2-117) and secured against loss of auxiliary supply. It is only possible to switch on from the source from

where it had previously been switched off. To be active, it is necessary that the function is switched on from all three switching sources.

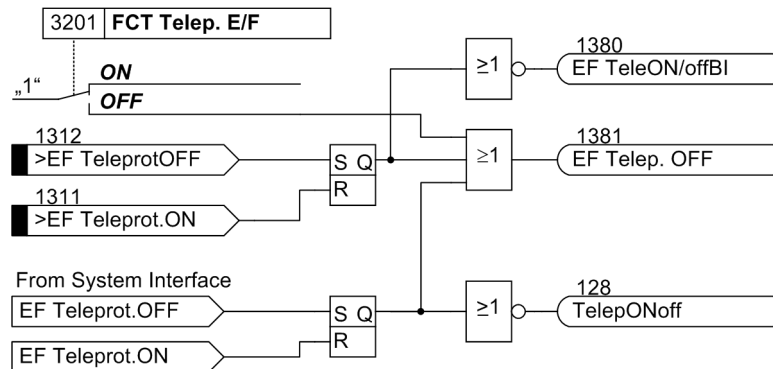


Figure 2-117 Activation and deactivation of the signal transmission logic

2.9.2 Directional Comparison Pickup

The following procedure is suited for both conventional and digital transmission media.

Principle

The directional comparison scheme is a permissive scheme. The scheme functionality is shown in Figure 2-91.

When the earth fault protection recognizes a fault in the forward direction, it initially sends a permissive signal to the opposite line end. If a permissive signal is also received from the opposite end, a trip signal is routed to the trip logic. Accordingly it is a prerequisite for fast tripping that the fault is recognized in the forward direction at both line ends.

The send signal can be prolonged by T_S (settable). The prolongation of the send signal only comes into effect if the protection has already issued a trip command. This ensures that the permissive signal releases the opposite line end even if the earth fault is very rapidly cleared by a different independent protection.

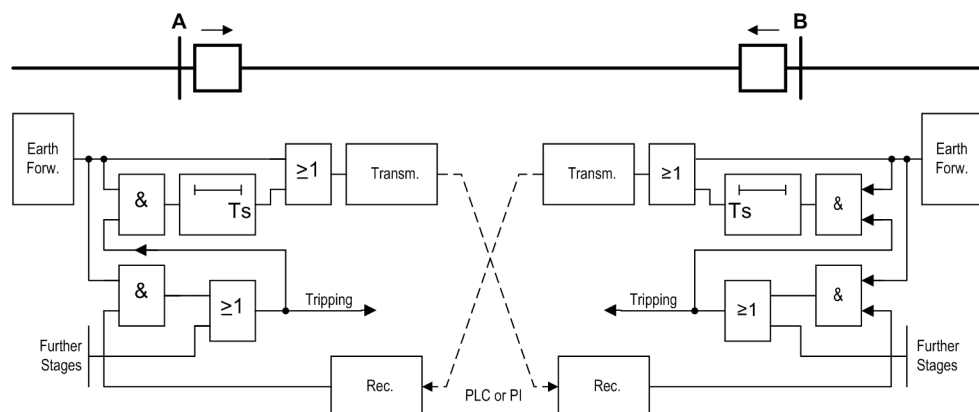


Figure 2-118 Operation scheme of the directional comparison pickup

Sequence

Figure 2-119 shows the logic diagram of the directional comparison scheme for one line end.

The permissive overreach transfer trip only functions for faults in the „Forward“ direction. Accordingly the overcurrent stage intended for operation in the direction comparison mode must definitely be set to **Forward (3I0... DIRECTION)**; refer also to Section 2.8 under margin heading „Teleprotection with Earth Fault Protection“.

On two terminal lines, the signal transmission may be phase segregated. Send and receive circuits in this case are built up for each phase. On three terminal lines, the transmit signal is sent to both opposite line ends. The receive signals are then combined with a logical AND gate, as all three line ends must transmit a send signal during an internal fault. With the setting parameter **Line Config.** (address 3202) the device is informed as to whether it has one or two opposite line ends.

The occurrence of erroneous signals resulting from transients during clearance of external faults or from direction reversal resulting during the clearance of faults on parallel lines, is neutralized by the „Transient Blocking“ (see margin heading „Transient Blocking“).

On lines where there is only a single-sided infeed or where the starpoint is only earthed behind one line end, the line end without zero sequence current cannot generate a release signal as fault detection does not take place there. To ensure tripping by the directional comparison also in this case, the device has special features. This „Weak Infeed Function“ (echo function) is referred to at the margin heading „Echo function“. It is activated when a signal is received from the opposite line end — in the case of three terminal lines from at least one of the opposite line ends — without the device having detected a fault.

The circuit breaker can also be tripped at the line end with no or only weak infeed. This „weak-infeed tripping“ is referred to in Section 2.11.2.

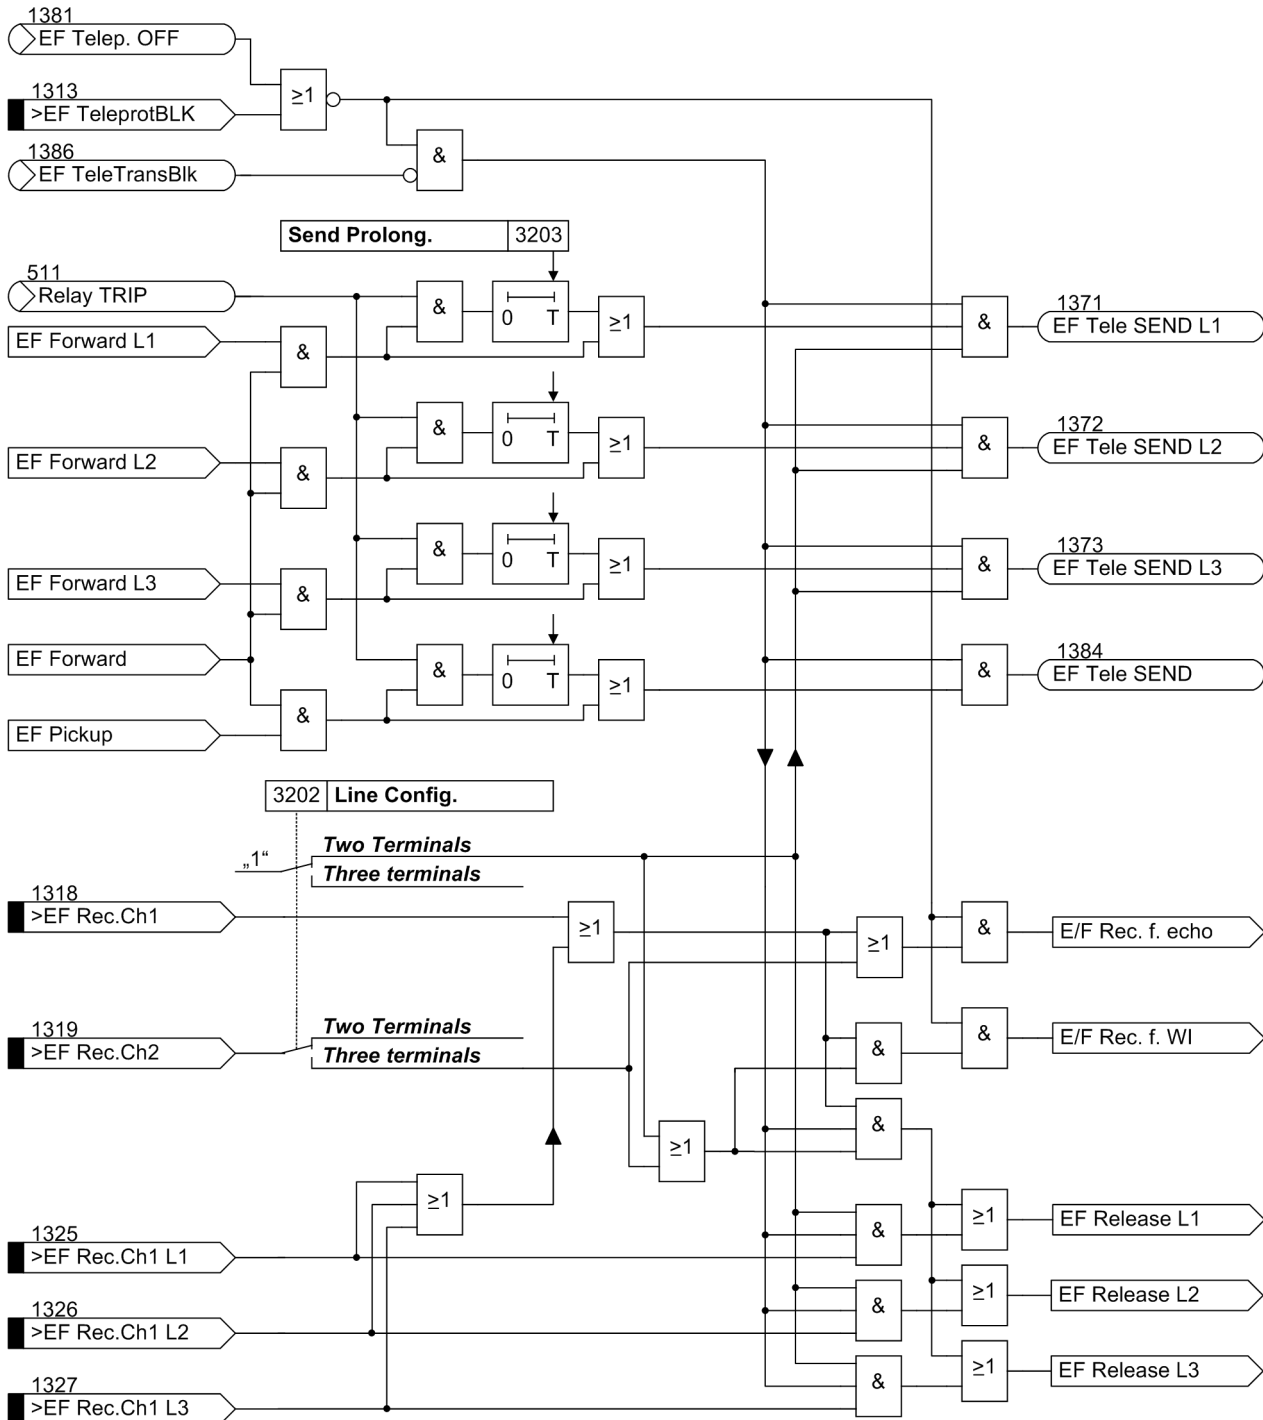


Figure 2-119 Logic diagram of the directional comparison scheme (one line end)

2.9.3 Directional Unblocking Scheme

The following scheme is suited for conventional transmission media.

Principle

The unblocking method is a permissive scheme. It differs from the directional comparison scheme in that tripping is possible also when no release signal is received from

The scheme functionality is shown in Figure 2-120.

If the unblock frequency is received from the opposite end, a signal is routed to the trip logic. A pre-condition for fast fault clearance is therefore that the earth fault is recognized in the forward direction at both line ends.

 


Figure 2-121 shows the logic diagram of the unblocking scheme for one line end.

On two terminal lines, the signal transmission may be phase segregated. Send and receive circuits in this case are built up for each phase. On three terminal lines, the transmit signal is sent to both opposite line ends. The receive signals are then combined with a logical AND gate, as all three line ends must transmit a send signal during an internal fault. With the setting parameter **Line Config.** (address 3202) the device is informed as to whether it has one or two opposite line ends.

7SD5 Manual
C53000-G1176-C169-3

unlock signal is received, a receive signal, e.g. „>EF UB ub 1“, appears and the blocking signal, e.g. „>EF UB bl 1“ disappears. The internal signal „Unblock 1“ is passed on to the receive logic, where it initiates the release of the tripping (when all remaining conditions have been fulfilled).

If the transmitted signal does not reach the other line end because the short-circuit on the protected feeder causes too much attenuation or reflection of the transmitted signal, the unblock logic takes effect: neither the unblocking signal „>EF UB ub 1“ nor the monitoring signal „>EF UB bl 1“ are received. In this case, the release „Unblock 1“ is issued after a security delay time of 20 ms and passed onto the receive logic. This release is however removed after a further 100 ms via the timer stage 100/100 ms. When the transmission is functional again, one of the two receive signals must appear again, either „>EF UB ub 1“ or „>EF UB bl 1“; after a further 100 ms (dropout delay of the timer stage 100/100 ms) the quiescent state is reached again, i.e. the direct release path to the signal „Unblock 1“ and thereby the usual release is possible. On three terminal lines, the unblock logic can be controlled via both receive channels.

If none of the signals is received for a period of more than 10 s the alarm „EF TeleUB Fail1“ is generated.

The occurrence of erroneous signals resulting from transients during clearance of external faults or from direction reversal resulting during the clearance of faults on parallel lines, is neutralized by the „Transient Blocking“.

On lines where there is only a single-sided infeed or where the starpoint is only earthed behind one line end, the line end without zero sequence current cannot generate a release signal as fault detection does not take place there. To ensure tripping by the directional comparison also in this case, the device has special features. This „Weak Infeed Function“ is referred to in Section „Measures for Weak and Zero Infeed“. The function is activated when a signal is received from the opposite line end — in the case of three terminal lines from at least one of the opposite line ends — without the device having detected a fault.

The circuit breaker can also be tripped at the line end with no or only weak infeed. This „weak-infeed tripping“ is referred to in Section 2.11.2.

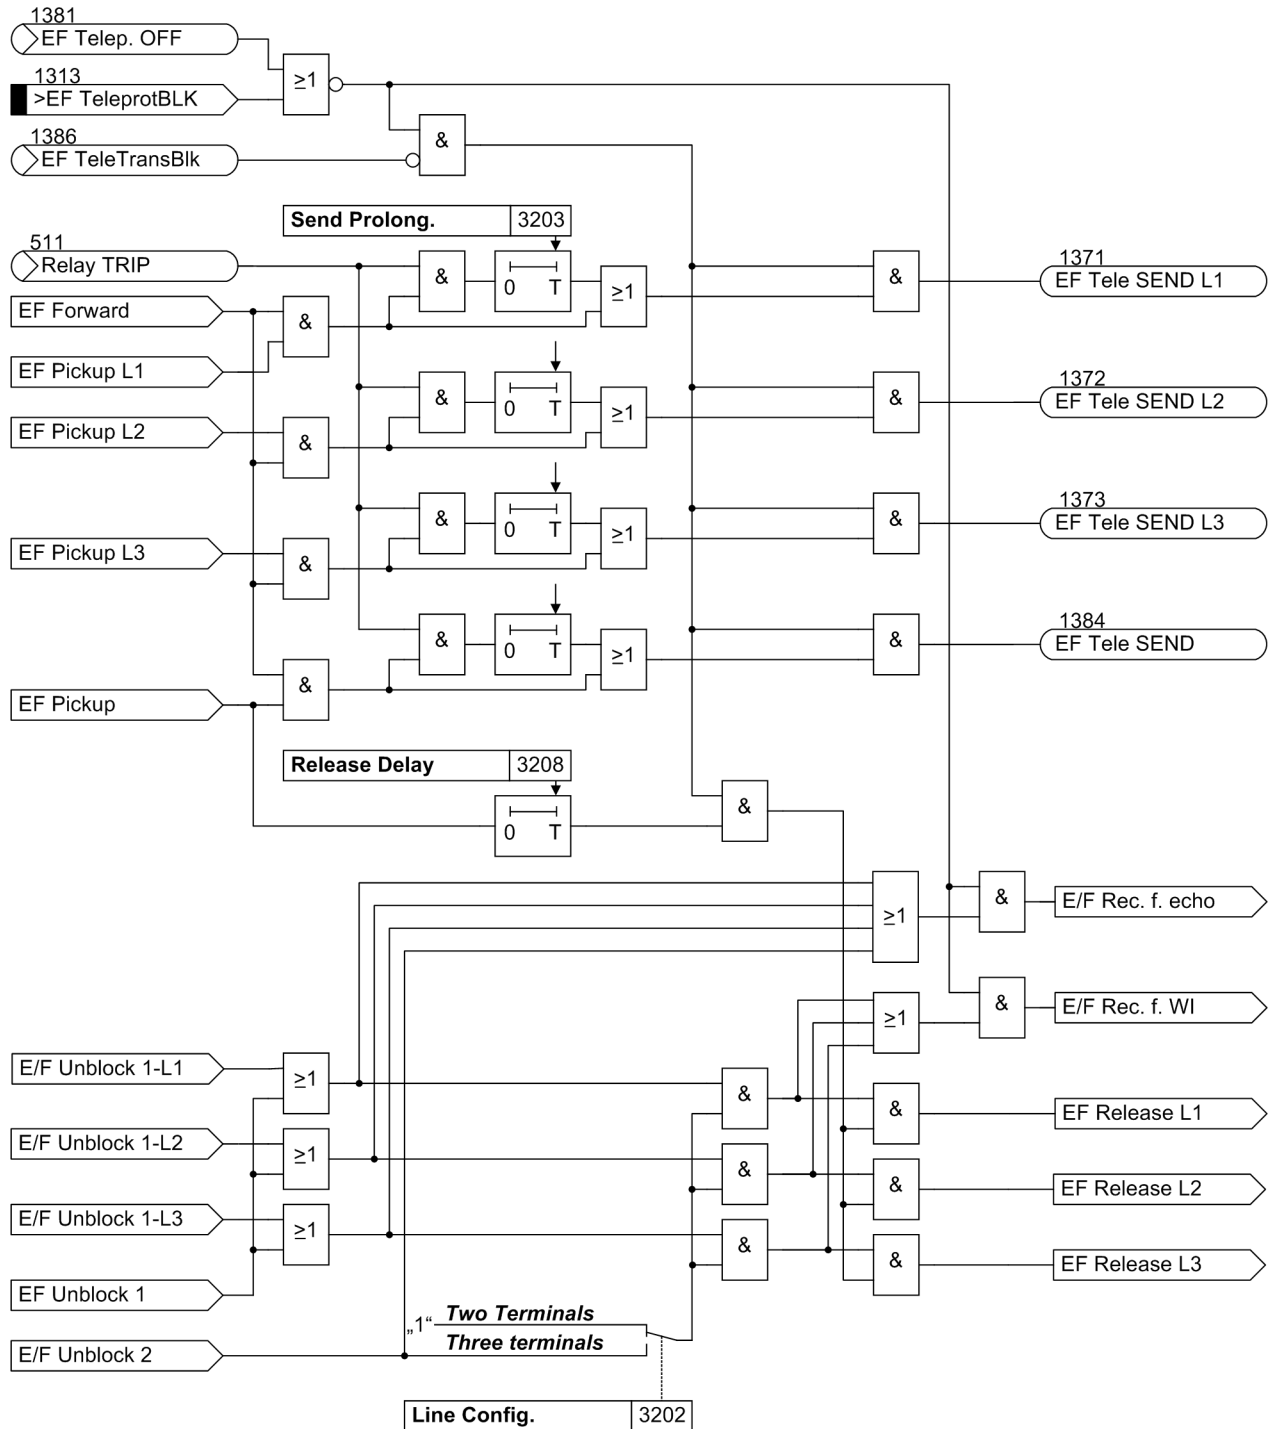


Figure 2-121 Logic diagram of the unblocking scheme (one line end)

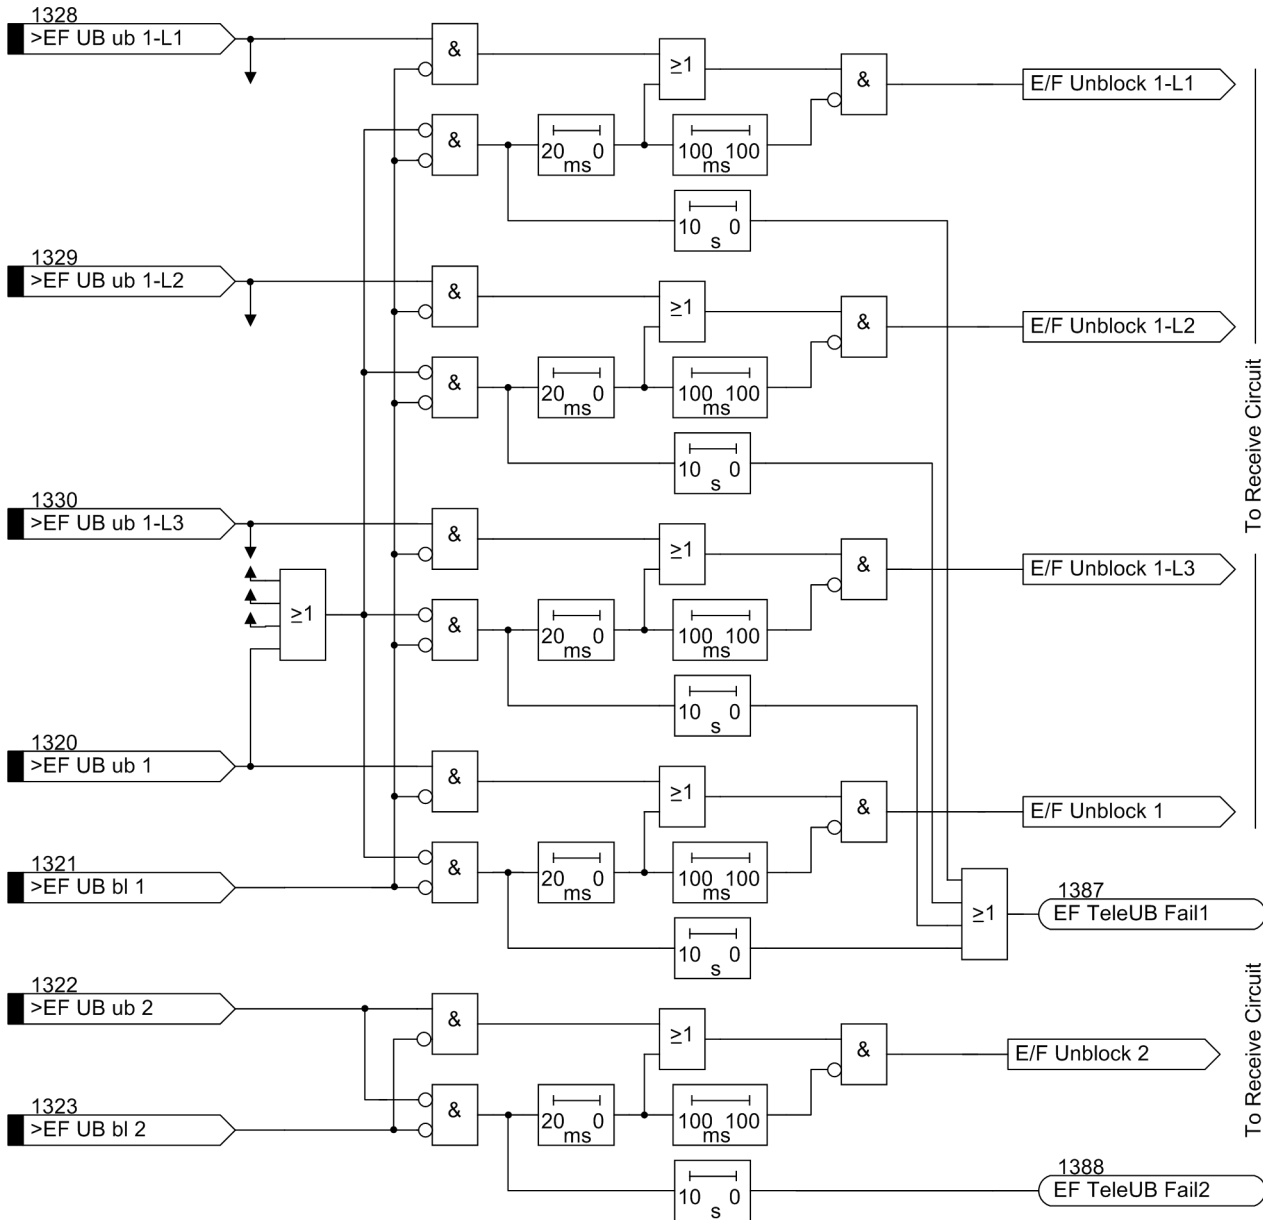


Figure 2-122 Unblock logic

2.9.4 Directional Blocking Scheme

The following scheme is suited for conventional transmission media.

Principle

In the case of the blocking scheme, the transmission channel is used to send a blocking signal from one line end to the other. The signal is sent as soon as the protection detects a fault in reverse direction, alternatively also immediately after fault inception (jump detector above dotted line). It is stopped immediately as soon as the earth fault protection detects an earth fault in forward direction. Tripping is possible with this scheme even if no signal is received from the opposite line end. It is therefore mainly used for long lines when the signal must be transmitted across the protected line by means of power line carrier (PLC) and the attenuation of the transmitted signal at the

fault location may be so severe that reception at the other line end cannot necessarily be guaranteed.

The scheme functionality is shown in Figure 2-123.

Earth faults in the forward direction cause tripping if a blocking signal is not received from the opposite line end. Due to possible differences in the pick up time delays of the devices at both line ends and due to the signal transmission time delay, the tripping must be somewhat delayed by T_V in this case.

To avoid signal race conditions, a transmit signal can be prolonged by the settable time T_S once it has been initiated.

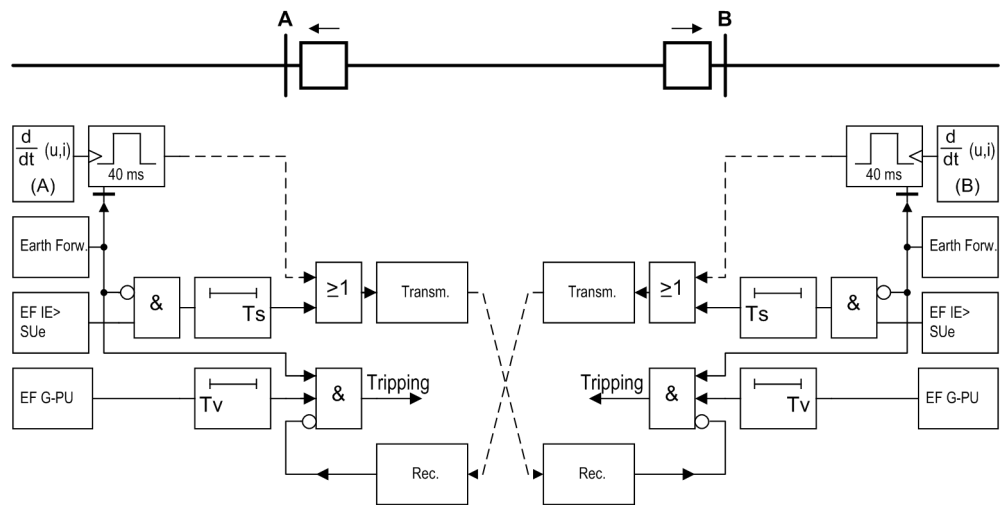


Figure 2-123 Operation scheme of the directional blocking method

Sequence

Figure 2-124 shows the logic diagram of the blocking scheme for one line end.

The stage to be blocked must be set to **Forward (310... DIRECTION)**; refer also to Section 2.8 under margin heading „Teleprotection with Earth Fault Protection“.

On two terminal lines, the signal transmission may be phase segregated. Send and receive circuits in this case are built up for each phase. On three terminal lines, the transmit signal is sent to both opposite line ends. The receive signal is then combined with a logical OR gate as no blocking signal must be received from any line end during an internal fault. With the setting parameter **Line Config.** (address 3202) the device is informed as to whether it has one or two opposite line ends.

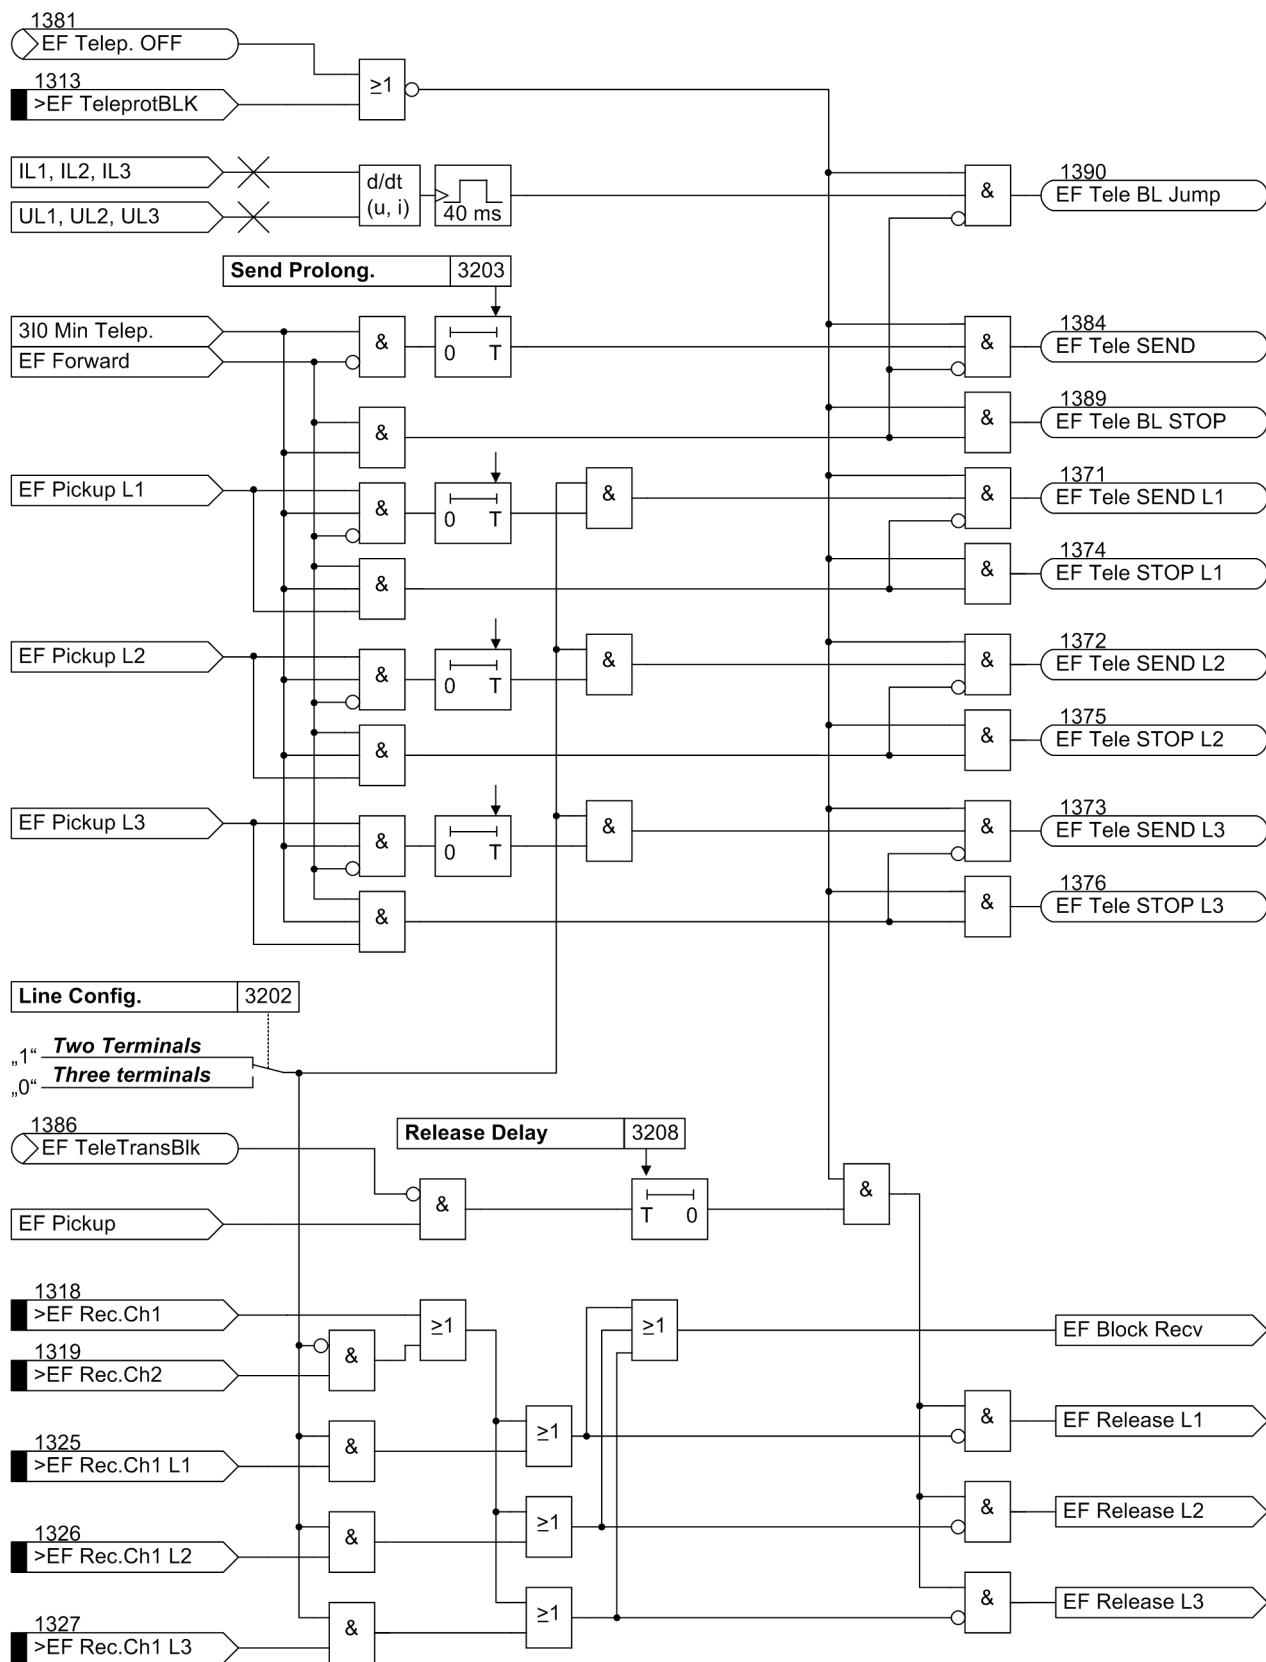


Figure 2-124 Logic diagram of the blocking scheme (one line end)

As soon as the earth fault protection has detected a fault in the reverse direction, a blocking signal is transmitted (e.g. „EF Tele SEND“, No. 1384). The transmitted signal may be prolonged by setting address 3203 accordingly. The blocking signal is stopped if a fault is detected in the forward direction (e.g. „EF Tele BL STOP“, No. 1389). Very rapid blocking is possible by transmitting also the output signal of the jump detector for measured values. To do so, the output „EF Tele BL Jump“ (No. 1390) must also be allocated to the transmitter output relay. As this jump signal appears at every measured value jump, it should only be used if the transmission channel can be relied upon to respond promptly to the disappearance of the transmitted signal.

The occurrence of erroneous signals resulting from transients during clearance of external faults or from direction reversal resulting during the clearance of faults on parallel lines is neutralised by „Transient blocking“. The received blocking signals also prolong the release by the transient blocking time **TrBlk BlockTime** (address 3210) if it has been present for at least the waiting time **TrBlk Wait Time** (address 3209), see Figure 2-125). After expiration of **TrBlk BlockTime** (address 3210) the delay time **Release Delay** (address 3208) is restarted.

It lies in the nature of the blocking scheme that single end fed short-circuits can also be tripped rapidly without any special measures, as the non-feeding end cannot generate a blocking signal.

2.9.5 Transient Blocking

Transient blocking provides additional security against erroneous signals due to transients caused by clearance of an external fault or by fault direction reversal during clearance of a fault on a parallel line.

The principle of transient blocking scheme is that following the incidence of an external fault, the formation of a release signal is prevented for a certain (settable) time. In the case of permissive schemes, this is achieved by blocking of the transmit and receive circuit.

Figure 2-125 shows the principle of the transient blocking for a directional comparison and directional unblocking scheme.

If, following fault detection, a non-directional fault or a fault in the reverse direction is determined within the waiting time **TrBlk Wait Time** (address 3209), the transmit circuit and the trip release are prevented. This blocking is maintained for the duration of the transient blocking time **TrBlk BlockTime** (address 3210) also after the reset of the blocking criterion.

With the blocking scheme the transient blocking prolongs also the received blocking signal as shown in the logic diagram Figure 2-125. After expiration of **TrBlk BlockTime** (address 3210) the delay time **Release Delay** (address 3208) is restarted.

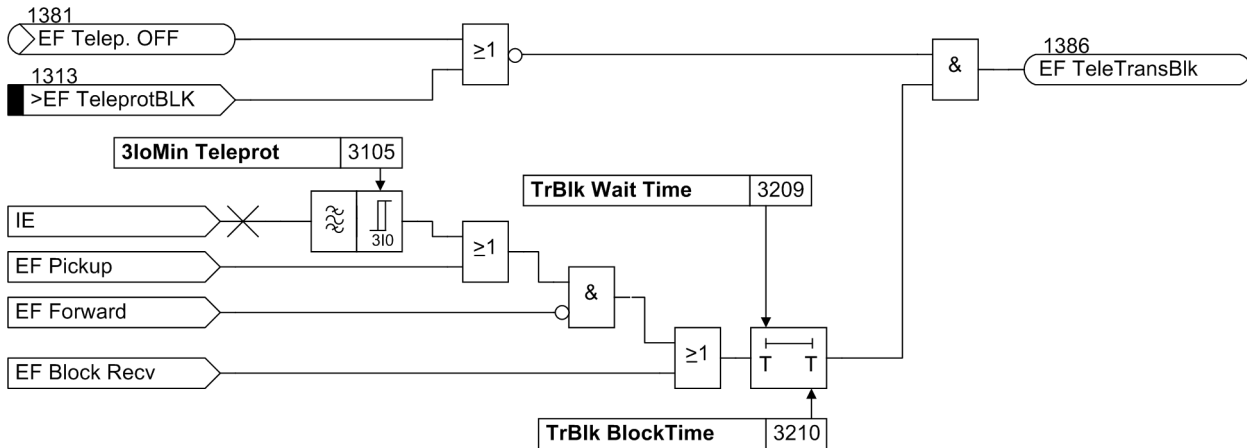


Figure 2-125 Transient blocking

2.9.6 Measures for Weak or Zero Infeed

On lines where there is only a single-sided infeed or where the starpoint is only earthed behind one line end, the line end without zero sequence current cannot generate a permissive signal, as fault detection does not take place there. With the comparison schemes, using a permissive signal, fast tripping could not even be achieved at the line end with strong infeed without special measures, as the end with weak infeed does not transmit a permissive release signal.

To achieve rapid tripping at both line ends under these conditions, the device has a special supplement for lines with weak zero sequence infeed.

To enable even the line end with the weak infeed to trip, 7SD5 provides a weak infeed tripping supplement. As this is a separate protection function with a dedicated trip command, it is described separately in Section 2.11.2.

Echo Function

The received signal at the line end that has no earth current is returned to the other line end as an „echo“ by the echo function. The received echo signal at the other line end enables the release of the trip command.

The common echo signal (see Figure 2-139, Section 2.11.1) is triggered by both the earth fault protection and the distance protection. Figure 2-126 shows the generation of the echo release by the earth fault protection.

The detection of the weak infeed condition and accordingly the requirement for an echo are combined in a central AND gate. The earth fault protection must neither be switched off nor blocked, as it would otherwise always produce an echo due to the missing fault detection.

The essential condition for an echo is the absence of an earth current (current stage **3IoMin Teleprot**) with simultaneous receive signal from the teleprotection scheme logic, as shown in the corresponding logic diagrams (Figure 2-119, or 2-121).

To prevent the generation of an echo signal after the line has been tripped and the earth current stage **3IoMin Teleprot** has reset, it is not possible to generate an echo if a fault detection by the earth current stage had already been present (RS flip-flop in Figure 2-126). The echo can in any event be blocked via the binary input „>EF BlkEcho“.

Figure 2-126 shows the generation of the echo release signal. Since this function is also associated with the weak infeed tripping, it is described separately (see Section 2.11.1).

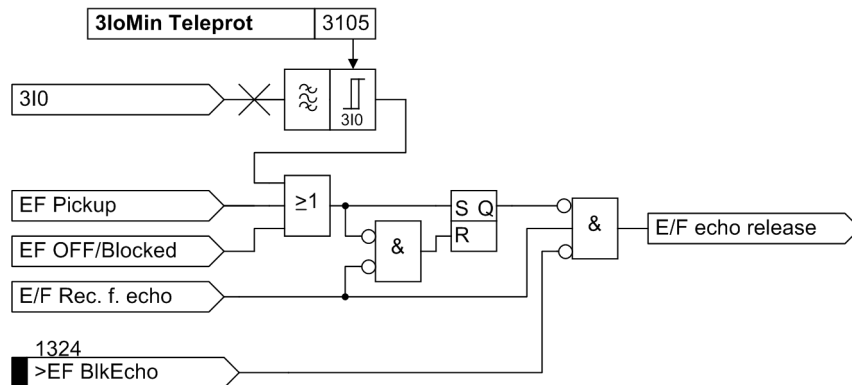


Figure 2-126 Generation of the echo release signal

2.9.7 Setting Notes

General

The teleprotection supplement for earth fault protection is only operational if it was set to one of the available modes during the configuration of the device (address 132). Depending on this configuration, only those parameters which are applicable to the selected mode appear here. If the teleprotection supplement is not required the address 132 is set to **Teleprot. E/F = Disabled**.

The following modes are possible with conventional transmission links (as described in Section 2.9):

Dir.Comp.Pickup	Directional comparison pickup,
UNBLOCKING	Directional unblocking scheme,
BLOCKING	Directional blocking scheme.

At address 3201 **FCT Telep. E/F** the use of a teleprotection scheme can be switched **ON** or **OFF**.

If the teleprotection has to be applied to a three terminal line, the setting in address 3202 must be **Line Config. = Three terminals**, if not, the setting remains **Two Terminals**.

The following mode is possible with digital transmission using the protection data interface:

Dir.Comp.Pickup	= Directional comparison pickup,
------------------------	----------------------------------

In this case, send and receive signals must be linked to the remote commands via CFC.

Earth Fault Protection Prerequisites

In the application of the comparison schemes, absolute care must be taken that both line ends recognize an external earth fault (earth fault through-current) in order to avoid a faulty echo signal in the case of the permissive schemes, or in order to ensure the blocking signal in the case of the blocking scheme. If, during an earth fault according to Figure 2-127, the protection at B does not recognize the fault, this would be in-

terpreted as a fault with single-sided infeed from A (echo from B or no blocking signal from B), which would lead to unwanted tripping by the protection at A. Therefore, the earth fault protection features an earth fault stage **3IoMin Teleprot** (address 3105). This stage must be set more sensitive than the earth current stage used for the teleprotection. The larger the capacitive earth current (I_{EC} in Figure 2-127) is, the smaller this stage must be set. On overhead lines a setting equal to 70 % to 80 % of the earth current stage is usually adequate. On cables or very long lines where the capacitive currents in the event of an earth fault are of the same order of magnitude as the earth fault currents, the echo function should not be used or restricted to the case where the circuit breaker is open; the blocking scheme should not be used under these conditions at all.

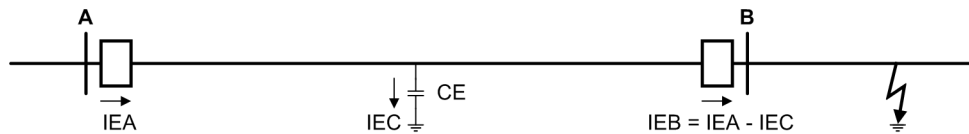


Figure 2-127 Possible current distribution during external earth fault

On three terminal lines (teed feeders) it should further be noted that the earth fault current is not equally distributed on the line ends during an external fault. The most unfavourable case is shown in Figure 2-128. In this case, the earth current flowing in from A is distributed equally on the line ends B and C. The setting value **3IoMin Teleprot** (address 3105), which is decisive for the echo or the blocking signal, must therefore be set smaller than one half of the setting value for the earth current stage used for teleprotection. In addition, the above comments regarding the capacitive earth current which is left out in Figure 2-128 apply. If the earth current distribution is different from the distribution assumed here, the conditions are more favourable as one of the two earth currents I_{EB} or I_{EC} must then be larger than in the situation described previously.

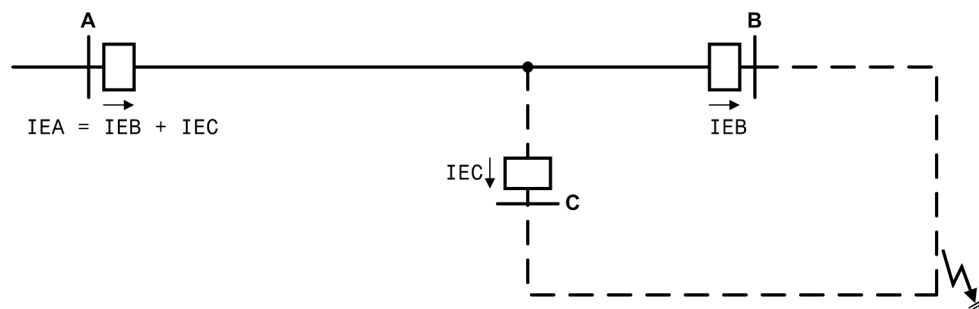


Figure 2-128 Possible unfavourable current distribution on a three terminal line during an external earth fault

Time Settings

The send signal prolongation **Send Prolong** (address 3203) must ensure that the send signal reliably reaches the opposite line end, even if there is very fast tripping at the sending line end and/or the signal transmission time is relatively long. In the case of the permissive schemes **Dir. Comp. Pickup** and **UNBLOCKING**, this signal prolongation time is only effective if the device has already issued a trip command. This ensures the release of the other line end even if the short-circuit is cleared very rapidly by a different protection function or other stage. In the case of the blocking scheme **BLOCKING**, the transmit signal is always prolonged by this time. In this case, it corre-

sponds to a transient blocking following a reverse fault. This parameter can only be altered in DIGSI at **Display Additional Settings**.

In order to detect steady-state line faults such as open circuits, a monitoring time **Delay for alarm** is started when a fault is detected (address 3207). Upon expiration of this time the fault is considered a permanent failure. This parameter can only be altered in DIGSI at **Display Additional Settings**.

The release of the directional tripping can be delayed by means of the permissive signal delay **Release Delay** (address 3208). In general, this is **only** required for the blocking scheme **BLOCKING** to allow sufficient transmission time for the blocking signal during external faults. This delay only has an effect on the receive circuit of the teleprotection. Conversely, tripping by the comparison protection is **not** delayed by the set time delay of the directional stage.

Transient blocking

The setting parameters **TrBlk Wait Time** and **TrBlk BlockTime** are for the transient blocking with the comparison protection. This parameter can only be altered in DIGSI at **Display Additional Settings**.

The time **TrBlk Wait Time** (address 3209) is a waiting time prior to transient blocking. In the case of the permissive schemes, only once the directional stage of the earth fault protection has recognized a fault in the reverse direction, within this period of time after fault detection, will the transient blocking be activated. In the case of the blocking scheme, the waiting time prevents transient blocking in the event that the blocking signal reception from the opposite line end is very fast. With the setting ∞ there is no transient blocking.

It is absolutely necessary that the transient blocking time **TrBlk BlockTime** (address 3210) is longer than the duration of transients resulting from the inception or clearance of external earth faults. The send signal is delayed by this time with the permissive overreach schemes **Dir.Comp.Pickup** and **UNBLOCKING** if the protection had initially detected a reverse fault. In the blocking scheme, the blocking of the stage release is prolonged by this time by both the detection of a reverse fault and the (blocking) received signal. After expiration of **TrBlk BlockTime** (address 3210) the delay time **Release Delay** (address 3208) is restarted. Since the blocking scheme always requires setting the delay time **Release Delay**, the transient blocking time **TrBlk BlockTime** (address 3210) can usually be set very short.

Echo function

The echo function settings are common to all weak infeed measures and summarized in tabular form in Section 2.11.2.2.



Note

The „ECHO SIGNAL“ (No. 4246) must be separately allocated to the output relay for the transmitter actuation as it is not included in the transmit signals of the transmission functions.

2.9.8 Settings

Addresses which have an appended "A" can only be changed with DIGSI, under Additional Settings.

Addr.	Parameter	Setting Options	Default Setting	Comments
3201	FCT Telep. E/F	ON OFF	ON	Teleprotection for Earth Fault O/C
3202	Line Config.	Two Terminals Three terminals	Two Terminals	Line Configuration
3203A	Send Prolong.	0.00 .. 30.00 sec	0.05 sec	Time for send signal prolongation
3207A	Delay for alarm	0.00 .. 30.00 sec	10.00 sec	Unblocking: Time Delay for Alarm
3208	Release Delay	0.000 .. 30.000 sec	0.000 sec	Time Delay for release after pickup
3209A	TrBlk Wait Time	0.00 .. 30.00 sec; ∞	0.04 sec	Transient Block.: Duration external flt.
3210A	TrBlk BlockTime	0.00 .. 30.00 sec	0.05 sec	Transient Block.: Blk.T. after ext. flt.

2.9.9 Information List

No.	Information	Type of Information	Comments
1311	>EF Teleprot.ON	SP	>E/F Teleprotection ON
1312	>EF TeleprotOFF	SP	>E/F Teleprotection OFF
1313	>EF TeleprotBLK	SP	>E/F Teleprotection BLOCK
1318	>EF Rec.Ch1	SP	>E/F Carrier RECEPTION, Channel 1
1319	>EF Rec.Ch2	SP	>E/F Carrier RECEPTION, Channel 2
1320	>EF UB ub 1	SP	>E/F Unblocking: UNBLOCK, Channel 1
1321	>EF UB bl 1	SP	>E/F Unblocking: BLOCK, Channel 1
1322	>EF UB ub 2	SP	>E/F Unblocking: UNBLOCK, Channel 2
1323	>EF UB bl 2	SP	>E/F Unblocking: BLOCK, Channel 2
1324	>EF BlkEcho	SP	>E/F BLOCK Echo Signal
1325	>EF Rec.Ch1 L1	SP	>E/F Carrier RECEPTION, Channel 1, Ph.L1
1326	>EF Rec.Ch1 L2	SP	>E/F Carrier RECEPTION, Channel 1, Ph.L2
1327	>EF Rec.Ch1 L3	SP	>E/F Carrier RECEPTION, Channel 1, Ph.L3
1328	>EF UB ub 1-L1	SP	>E/F Unblocking: UNBLOCK Chan. 1, Ph.L1
1329	>EF UB ub 1-L2	SP	>E/F Unblocking: UNBLOCK Chan. 1, Ph.L2
1330	>EF UB ub 1-L3	SP	>E/F Unblocking: UNBLOCK Chan. 1, Ph.L3
1371	EF Tele SEND L1	OUT	E/F Telep. Carrier SEND signal, Phase L1
1372	EF Tele SEND L2	OUT	E/F Telep. Carrier SEND signal, Phase L2
1373	EF Tele SEND L3	OUT	E/F Telep. Carrier SEND signal, Phase L3
1374	EF Tele STOP L1	OUT	E/F Telep. Block: carrier STOP signal L1
1375	EF Tele STOP L2	OUT	E/F Telep. Block: carrier STOP signal L2
1376	EF Tele STOP L3	OUT	E/F Telep. Block: carrier STOP signal L3
1380	EF TeleON/offBI	IntSP	E/F Teleprot. ON/OFF via BI
1381	EF Telep. OFF	OUT	E/F Teleprotection is switched OFF
1384	EF Tele SEND	OUT	E/F Telep. Carrier SEND signal
1386	EF TeleTransBlk	OUT	E/F Telep. Transient Blocking
1387	EF TeleUB Fail1	OUT	E/F Telep. Unblocking: FAILURE Channel 1
1388	EF TeleUB Fail2	OUT	E/F Telep. Unblocking: FAILURE Channel 2

No.	Information	Type of Information	Comments
1389	EF Tele BL STOP	OUT	E/F Telep. Blocking: carrier STOP signal
1390	EF Tele BL Jump	OUT	E/F Tele.Blocking: Send signal with jump

2.10 Restricted Earth Fault Protection (optional)

The restricted earth fault protection detects earth faults in power transformers, the starpoint of which is led to earth. It is also suitable when a starpoint former is installed within a protected zone of a non-earthed power transformer. A precondition is that a current transformer is installed in the starpoint connection, i.e. between the starpoint and the earthing electrode. The starpoint CT and the phase CTs define the limits of the protected zone exactly.

2.10.1 Application Examples

Figures 2-129 and 2-130 show two application examples. A prerequisite is that the I4 transformer detects the starpoint current of the transformer side to be protected.

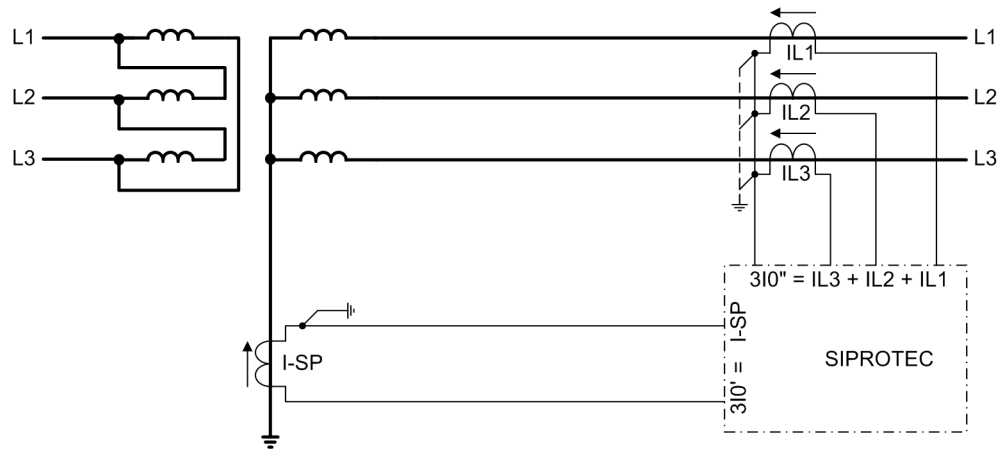


Figure 2-129 Restricted earth fault protection on an earthed transformer winding

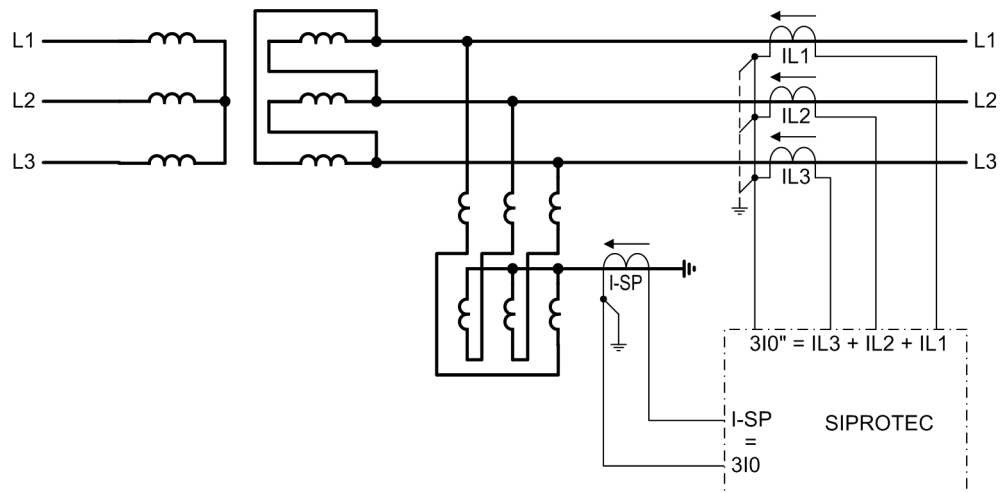


Figure 2-130 Restricted earth fault protection on a non-earthed transformer winding with neutral reactor (starpoint former) within the protected zone

2.10.2 Functional Description

Measuring principle

During healthy operation, no starpoint current I_{SP} flows through the starpoint lead. The sum of the phase currents $3I_0 = I_{L1} + I_{L2} + I_{L3}$ is also approximately zero.

When an earth fault occurs in the protected zone, a starpoint current I_{SP} will flow; depending on the earthing conditions of the power system a further earth current may be recognized in the residual current path of the phase current transformers (dashed arrow in Figure 2-131), which is, however, more or less in phase with the starpoint current. All currents which flow into the protected zone are defined positive.

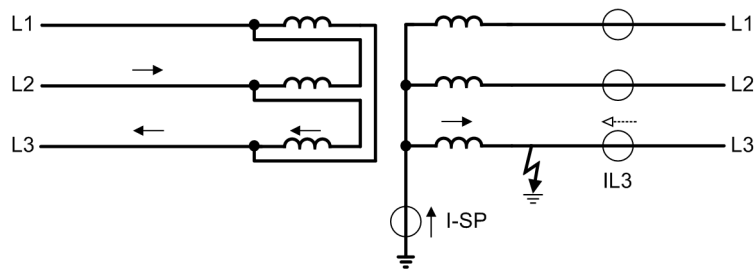


Figure 2-131 Example for an earth fault in a transformer with current distribution

When an earth fault occurs outside the protected zone (Figure 2-132), a starpoint current I_{SP} will flow equally; but an equal current $3I_0$ must flow through the phase current transformers. Since the current direction is normally defined as positive in the direction of the protected object, this current is in phase opposition with I_{SP} .

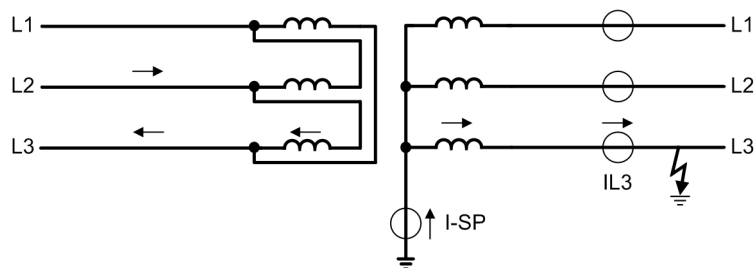


Figure 2-132 Example for an earth fault outside a transformer with current distribution

When a fault without earth connection occurs outside the protected zone, a residual current may occur in the residual current path of the phase current transformers which is caused by different saturation of the phase current transformers under strong through-current conditions. This current could simulate a fault in the protected zone. Measures must be taken to prevent this current from causing a trip. For this, the restricted earth fault protection provides stabilization methods which differ strongly from the usual stabilization methods of differential protection schemes since it uses, besides the magnitude of the measured currents, the phase relationship, too.

Evaluation of Measurement Quantities

The restricted earth fault protection compares the fundamental wave of the current flowing in the starpoint connection, which is designated as $3I_0'$ in the following, with the fundamental wave of the sum of the phase currents, which should be designated in the following as $3I_0''$. Thus, the following applies (Figure 2-133):

$$3I_0' = I_{St}$$

$$3I_0'' = I_{L1} + I_{L2} + I_{L3}$$

Only $3I_0'$ acts as the tripping effect quantity. During a fault within the protected zone this current is always present.

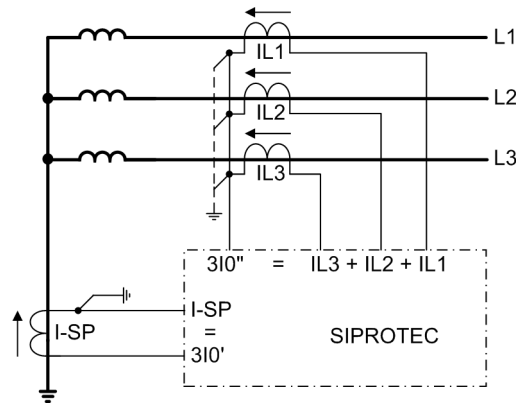


Figure 2-133 Principle of restricted earth fault protection

When an earth fault occurs outside the protected zone, another earth current flows through the phase current transformers. This is, on the primary side, in counter-phase with the starpoint current and has equal magnitude. The maximum information of the currents is evaluated for restraint: the magnitude of the currents and their phase position. The following is defined:

A tripping current

$$I_{Trip} = |3I_0'|$$

and a stabilisation or restraining current

$$I_{stab} = k \cdot (|3I_0' - 3I_0''| - |3I_0' + 3I_0''|)$$

where k is a stabilisation factor which will be explained below, at first we assume $k = 1$. I_{REF} produces the tripping effect quantity, I_{Rest} counteracts this effect.

To clarify the situation, three important operating conditions with ideal and matched measurement quantities are considered:

1. Through-fault current on an external earth fault:

$3I_{0''}$ is in phase opposition with $3I_{0'}$, and of equal magnitude, i.e. $3I_{0''} = -3I_{0'}$

$$I_{Ref} = |3I_{0'}|$$

$$I_{Rest} = |3I_{0'} + 3I_{0'}| - |3I_{0'} - 3I_{0'}| = 2 \cdot |3I_{0'}|$$

The tripping effect current (I_{Ref}) equals the starpoint current; restraint (I_{Rest}) corresponds to twice the tripping effect current.

2. Internal earth fault, fed only from the starpoint

In this case $3I_{0''} = 0$

$$I_{Ref} = |3I_{0'}|$$

$$I_{Rest} = |3I_{0'} - 0| - |3I_{0'} + 0| = 0$$

The tripping effect current (I_{Ref}) equals the starpoint current; restraint (I_{stab}) is zero, i.e. full sensitivity during internal earth fault.

3. Internal earth fault, fed from the starpoint and from the system, e.g. with equal earth current magnitude:

In this case $3I_{0''} = 3I_{0'}$

$$I_{Ref} = |3I_{0'}|$$

$$I_{stab} = |3I_{0'} - 3I_{0'}| - |3I_{0'} + 3I_{0'}| = -2 \cdot |3I_{0'}|$$

The tripping effect current (I_{Ref}) equals the starpoint current; the restraining quantity (I_{stab}) is negative and, therefore, set to zero, i.e. full sensitivity during internal earth fault.

This result shows that for an internal fault no restraint is effective since the restraining quantity is either zero or negative. Thus, small earth current can cause tripping. In contrast, strong restraint becomes effective for external earth faults. Figure 2-134 shows that the restraint is the strongest when the residual current from the phase current transformers is high (area with negative $3I_{0''}/3I_{0'}$). With ideal current transformers, the currents $3I_{0''}$ and $3I_{0'}$ would be inversely equal, i.e. $3I_{0''}/3I_{0'} = -1$.

If the starpoint current transformer is designed weaker than the phase current transformers (e.g. by selection of a smaller accuracy limit factor or by higher secondary burden), no trip will be possible under through-fault condition even in case of severe saturation as the magnitude of $3I_{0''}$ is always higher than that of $3I_{0'}$.

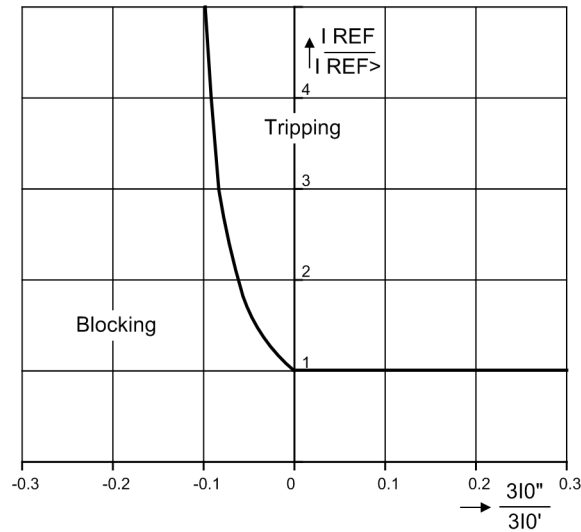


Figure 2-134 Tripping characteristic of the restricted earth fault protection depending on the earth current ratio $3I_0''/3I_0'$ (both currents in phase + or counter-phase –);
 $I_{REF>} =$ setting; $I_{Trip} =$ tripping current

It was assumed in the above examples that the currents $3I_0''$ and $3I_0'$ are in counter-phase for external earth faults which is only true for the primary measured quantities. Current transformer saturation may cause phase shifting between the fundamental waves of the secondary currents which reduces the restraint quantity. If the phase displacement $\varphi(3I_0''; 3I_0') = 90^\circ$ then the restraint quantity is zero. This corresponds to the conventional method of direction determination by use of the vectorial sum and difference comparison.

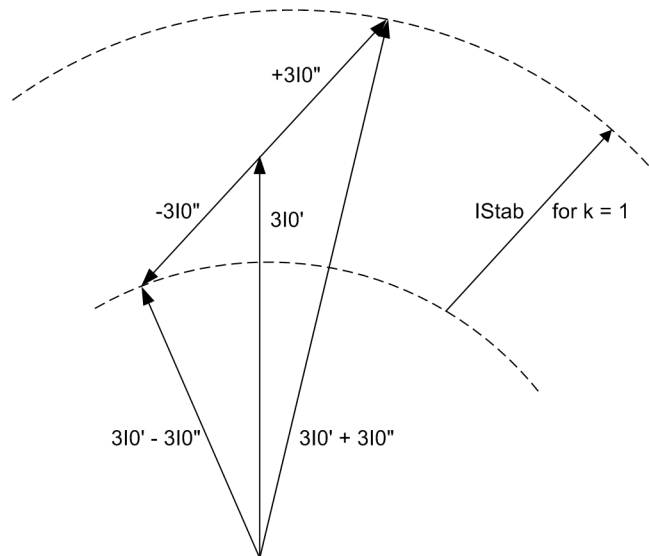


Figure 2-135 Phasor diagram of the restraint quantity during external fault

The restraint quantity can be influenced by means of a factor k . This factor has a certain relationship to the limit angle φ_{Limit} .

This limit angle determines for which phase displacement between $3I_{0''}$ and $3I_{0'}$ the pickup value for $3I_{0''} = 3I_{0'}$ grows to ∞ , i.e. no pickup occurs. In 7SD5 $k = 4$.

The restraint quantity I_{Rest} in the above example a) is quadrupled once more; it becomes thus 8 times the tripping effect quantity I_{Ref} .

The threshold angle $\varphi_{Limit} = 100^\circ$. That means no trip is possible for phase displacement $\varphi(3I_{0''}; 3I_{0'}) \geq 100^\circ$.

Figure 2-136 shows the operating characteristics of the restricted earth fault protection dependent of the phase displacement between $3I_{0''}$ and $3I_{0'}$ for a constant infeed ratio $|3I_{0''}| = |3I_{0'}|$.

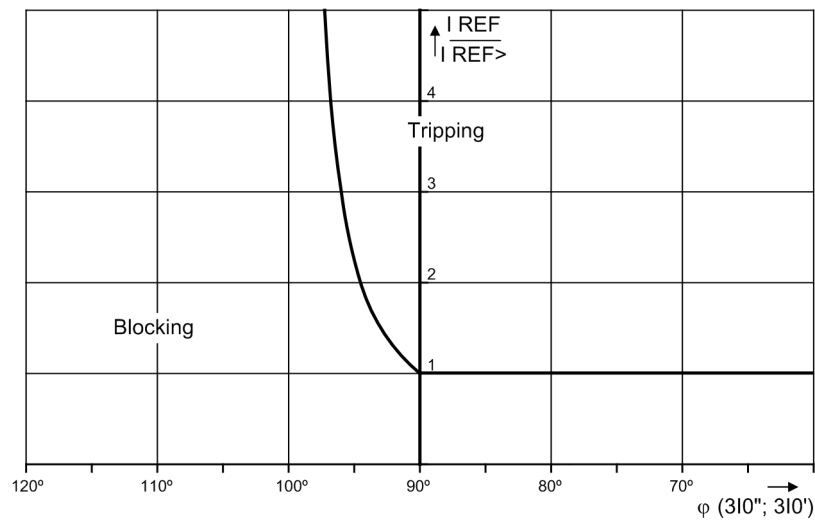


Figure 2-136 Tripping characteristic of the restricted earth fault protection depending on the phase displacement between $3I_{0''}$ and $3I_{0'}$ at $3I_{0''} = 3I_{0'}$ (180° = external fault)

It is also possible to increase the tripping value in the tripping area proportional to the arithmetic sum of all currents. In this case the pickup value with the arithmetic sum of all currents is stabilised, i.e. with „ $I_{restREF} = \sum |I| = |I_{L1}| + |I_{L2}| + |I_{L3}| + |I_4|$ “ (Figure 2-137). The slope of this restraint characteristic can be set.

Pickup

Normally, a differential protection does not need a pickup or „fault detection“ function, since the condition for a fault detection is identical to the trip condition. But the restricted earth fault protection provides like all protection functions a fault detection signal which forms an additional precondition for tripping and defines the fault inception instant for a number of further activities.

As soon as the fundamental wave of the differential current exceeds 85 % of the pickup value, fault detection is indicated. In this aspect, the differential current is represented by the sum of all in-flowing currents.

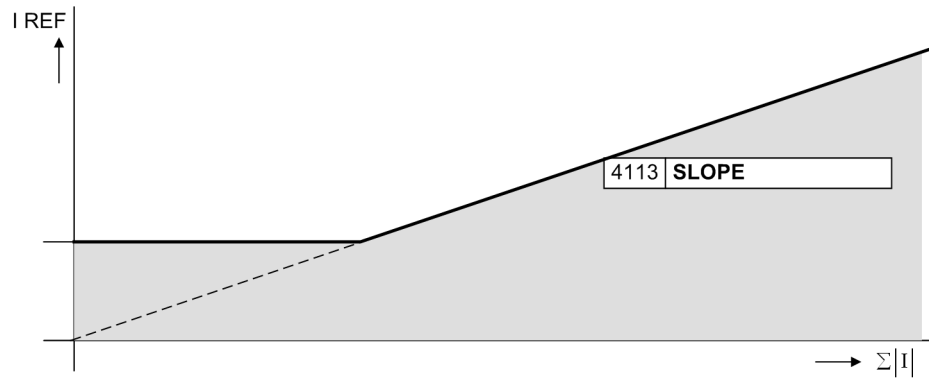


Figure 2-137 Increasing the pickup value

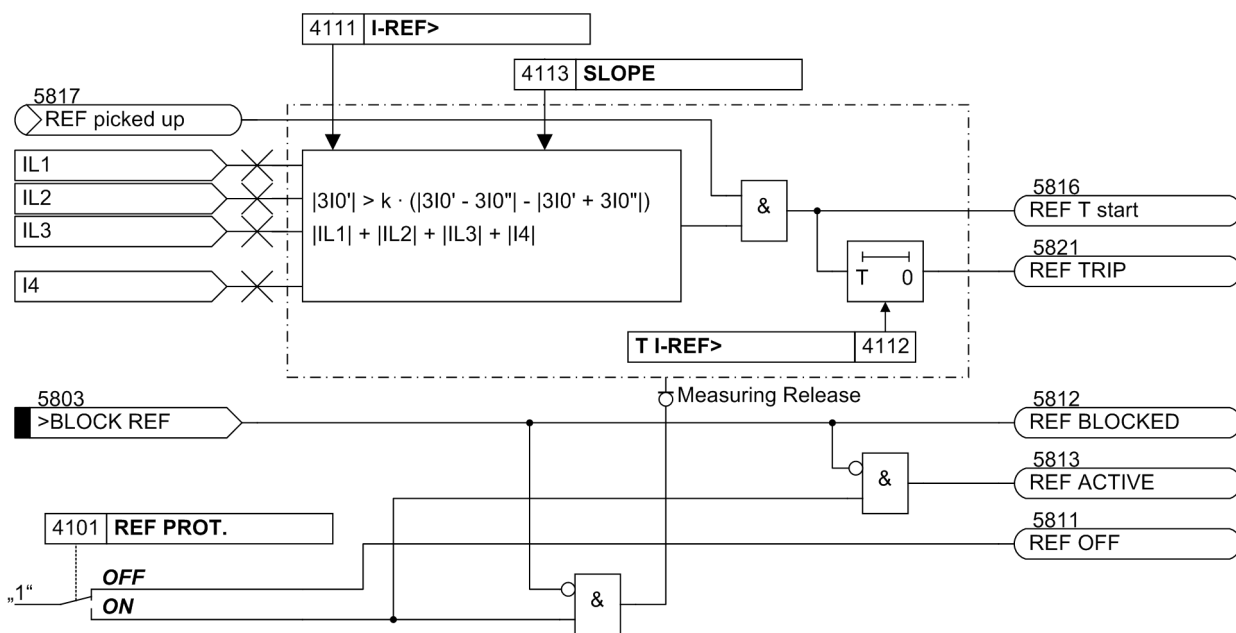


Figure 2-138 Logic diagram of the restricted earth fault protection (simplified)

2.10.3 Setting Notes

General

The restricted earth fault protection can only operate if this function has been set during configuration of the functional scope (Section 2.1.2) under address 141 **REF PROT.** on **Enabled**. Operation requires the address 143 **TRANSFORMER** to be set on **YES** and the address 220 **I4 transformer** on **IY starpoint**. The address 221 **I4/Iph CT** must be set under margin heading „Connection of the Currents“ as described in section 2.1.2.1.

The earth fault differential protection can under address 4101 **REF PROT.** be activated (**ON**) or deactivated (**OFF**).

**Note**

When delivered from factory, the restricted earth fault protection is switched OFF. The reason is that the protection must not be in operation unless at least the assigned side and CT polarity have been properly set before. Without proper settings, the device may show unexpected reactions (incl. tripping)!

The sensitivity of the protection is determined by the **I - REF>** setting (address 4111). The earth fault current which flows through the starpoint lead of the transformer is decisive. A further earth current which may be supplied from the network does not influence the sensitivity.

The set value can be increased in the tripping quadrant depending on the arithmetic sum of the currents (stabilization by the sum of all current magnitudes) which is set under address 4113 **SLOPE**. This parameter can only be altered in DIGSI at **Additional Settings**. The preset value 0 is normally adequate.

For special applications, it may be advantageous to delay the trip command of the protection. This can be done by setting an additional delay time (address 4112 **T I - REF>**). This parameter can only be altered in DIGSI at **Additional Settings**. Normally, this additional delay time is set to 0. This setting is a pure delay time which does not include the inherent operating time of the protection.

The value indication 5827 „REF S:“ is the restraining quantity resulting from the tripping characteristic, and is not identical with the measured value 30655 „IrestREF=“.

Value message 5826 „REF D:“ is the tripping value stabilized via the tripping curve. The reported values „REF S:“ and „REF D:“ refer to the time when the output message 5816 „REF T start“ is reported, i.e. the starting time of **T I - REF>** (address 4112).

The following relations apply for calculating the quantities (see section 2.10 margin heading „Evaluation of the measured quantities“):

$$\text{REF S} = |3I_0'| - 3I_0''| - |3I_0' + 3I_0''|$$

$$\text{REF D} = |3I_0'| \quad \text{for REF S} \leq 0$$

$$\text{REF D} = |3I_0'| - k \cdot \text{REF S} \quad \text{for EDS S} > 0 \text{ (with } k = 4\text{)}$$

2.10.4 Settings

Addresses which have an appended "A" can only be changed with DIGSI, under Additional Settings.

The table indicates region-specific presettings. Column C (configuration) indicates the corresponding secondary nominal current of the current transformer.

Addr.	Parameter	C	Setting Options	Default Setting	Comments
4101	REF PROT.		OFF ON	OFF	Restricted Earth Fault Protection
4111	I-REF>	1A	0.05 .. 2.00 A	0.15 A	Pick up value I REF>
		5A	0.25 .. 10.00 A	0.75 A	

Addr.	Parameter	C	Setting Options	Default Setting	Comments
4112A	T I-REF>		0.00 .. 60.00 sec; ∞	0.00 sec	T I-REF> Time Delay
4113A	SLOPE		0.00 .. 0.95	0.00	Slope of Charac. I-REF> = f(I-SUM)

2.10.5 Information List

No.	Information	Type of Information	Comments
5803	>BLOCK REF	SP	>BLOCK restricted earth fault prot.
5811	REF OFF	OUT	Restricted earth fault is switched OFF
5812	REF BLOCKED	OUT	Restricted earth fault is BLOCKED
5813	REF ACTIVE	OUT	Restricted earth fault is ACTIVE
5816	REF T start	OUT	Restr. earth flt.: Time delay started
5817	REF picked up	OUT	Restr. earth flt.: picked up
5821	REF TRIP	OUT	Restr. earth flt.: TRIP
5826	REF D:	VI	REF: Value D at trip (without Tdelay)
5827	REF S:	VI	REF: Value S at trip (without Tdelay)

2.11 Measures for Weak and Zero Infeed

In cases where there is no or only weak infeed present at one line end, the distance protection does not pick up there during a short-circuit on the line. Likewise, on lines where there is only a single sided infeed or where the star-point is only earthed behind one line end, the line end without zero sequence current cannot generate a permissive signal, as fault detection does not take place there. The settings and information table applies for the following functions.

2.11.1 Echo Function

2.11.1.1 Functional Description

Figure 2-139 shows the method of operation of the echo function. At address 2501 **FACT Weak Infeed** (weak infeed FunCTion) can be activated (**ECHO only**) or deactivated (**OFF**). By means of this „switch“ the weak infeed tripping function can also be activated (**ECHO and TRIP**, refer also to Section 2.11.2). This setting is common to the teleprotection functions for the distance protection and for the earth fault protection.

If there is no fault detection or no earth current, the echo function causes the received signal to be sent back to the other line end as an „echo“, where it is used to initiate permissive tripping.

In applications with one common transmission channel used by both the distance and the earth fault protection spurious trippings may occur, if distance protection and earth fault protection create an echo independently from each other. In this case parameter **Echo: 1channel** has to be set to **YES**.

If the conditions for an echo signal are met by the distance protection or the earth fault protection (see also Sections 2.7 and 2.9 under „Echo Function“), a short delay **Trip/Echo DELAY** is initially activated. This delay is necessary to avoid transmission of the echo if the protection at the weak line end has a longer fault detection time during reverse faults or if it picks up a little later due to unfavourable short-circuit or earth current distribution. If, however, the circuit breaker at the non-feeding line end is open, this delay of the echo signal is not required. The echo delay time may then be bypassed. The circuit breaker position is provided by the central information control functions (refer to Section 2.24.1).

The echo impulse is then transmitted (alarm output „ECHO SIGNAL“), the duration of which can be set with the parameter **Trip EXTENSION**. The „ECHO SIGNAL“ must be allocated separately to the output relay(s) for transmission, as it is not contained in the transmit signals „Dis.T.SEND“, „Dis.T.SEND L*“ or „EF Tele SEND“.



Note

The „ECHO SIGNAL“ (No. 4246) must be separately allocated to the output relay for the transmitter actuation as it is not included in the transmit signals of the transmission functions. On the digital protection data interface with permissive overreach transfer trip mode, the echo is transmitted as a separate signal without taking any special measures.

After output of the echo pulse or transmission of the distance protection or the earth fault protection, a new echo cannot be sent for at least 50 ms. This prevents echo repetition after the line has been switched off.

In the case of the blocking scheme and the underreach schemes, the echo function is not required and therefore ineffective.

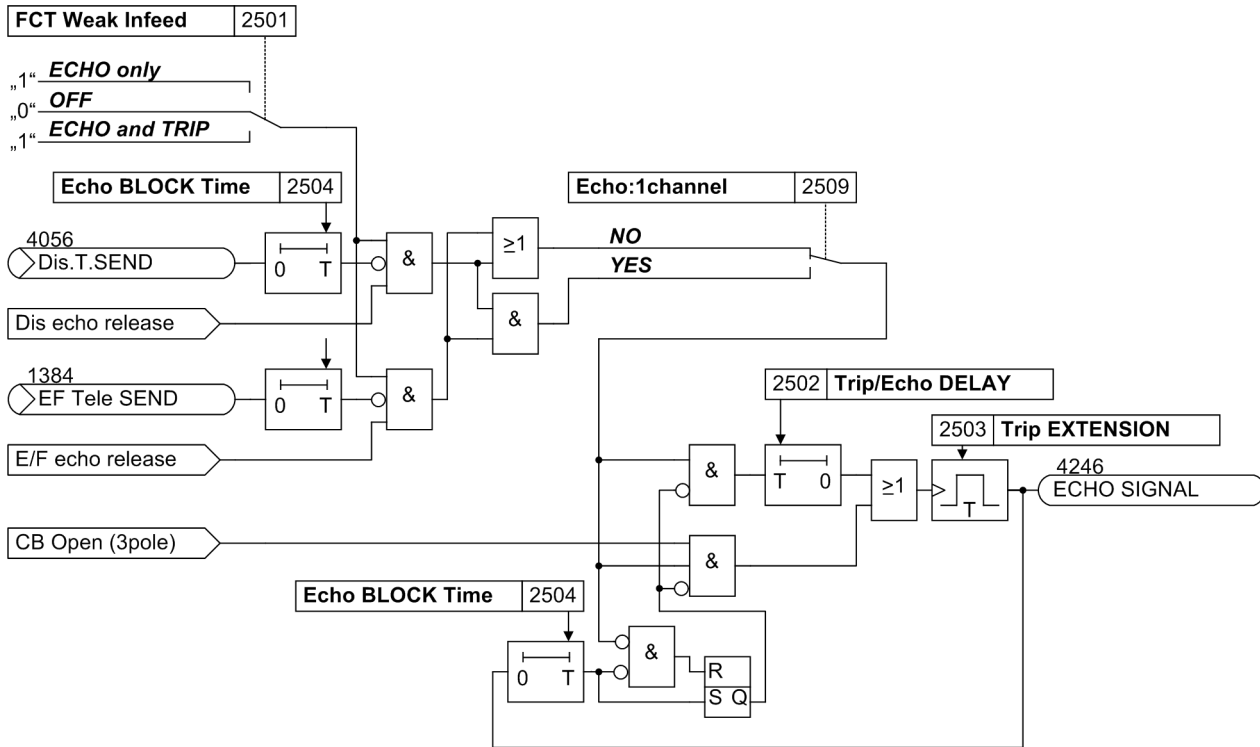


Figure 2-139 Logic diagram of the echo function with teleprotection

2.11.2 Classical Tripping

2.11.2.1 Method of Operation

Transmission modes

By coordinating the weak infeed function with the teleprotection in conjunction with distance protection and/or earth fault protection, fast tripping can also be achieved at both line ends in the above cases.

At the strong infeed line end, the distance protection can always trip instantaneously for faults inside zone Z1. With permissive teleprotection schemes, fast tripping for faults on 100% of the line length is achieved by activation of the echo function (see section 2.7). This provides the permissive release of the trip signal at the strong infeed line end.

The permissive teleprotection scheme in conjunction with the earth fault protection can also achieve release of the trip signal at the strong infeed line end by means of the echo function (refer to Section 2.9).

In many cases tripping of the circuit breaker at the weak infeeding line end is also desired. For this purpose the device 7SD5 has a dedicated protection function with dedicated trip command.

Pickup with undervoltage

In Figure 2-140 the logic diagram of the weak-infeed tripping is shown. The function can be activated (**ECHO and TRIP**) or deactivated (**OFF**) in address 2501 **FCT Weak Infeed** (Weak Infeed FunCTion). If this „switch“ is set to **ECHO only**, the tripping is also disabled; however the echo function to release the infeeding line end is activated (refer also to Section 2.7 and 2.9). The tripping function can be blocked at any time via the binary input „>BLOCK Weak Inf“.

The logic for the detection of a weak-infeed condition is built up per phase in conjunction with the distance protection and additionally once for the earth fault protection. Since the undervoltage check is performed for each phase, single-pole tripping is also possible, provided the device version has the single-pole tripping option.

In the event of a short-circuit, it may be assumed that only a small voltage appears at the line end with the weak-infeed condition, as the small fault current only produces a small voltage drop in the short-circuit loop. In the event of zero-infeed, the loop voltage is approximately zero. The weak-infeed tripping is therefore dependent on the measured undervoltage **UNDervOLTAGE** which is also used for the selection of the faulty phase.

If a signal is received from the opposite line end without fault detection by the local protection, this indicates that there is a fault on the protected feeder. In the case of three terminal lines when using a comparison scheme a receive signal from both ends may be present. In the case of underreach schemes one receive signal from at least one end is sufficient.

After a security margin time of 40 ms following the start of the receive signal, the weak-infeed tripping is released if the remaining conditions are satisfied: undervoltage, circuit breaker closed and no pickup of the distance protection or of the earth fault protection.

To avoid a faulty pickup of the weak infeed function following tripping of the line and reset of the fault detection, the function cannot pick up anymore once a fault detection in the affected phase was present (RS flip-flop in Figure 2-140).

In the case of the earth fault protection, the release signal is routed via the phase segregated logic modules. Single-phase tripping is therefore also possible if both distance protection and earth fault protection or exclusively earth fault protection issues a release condition.

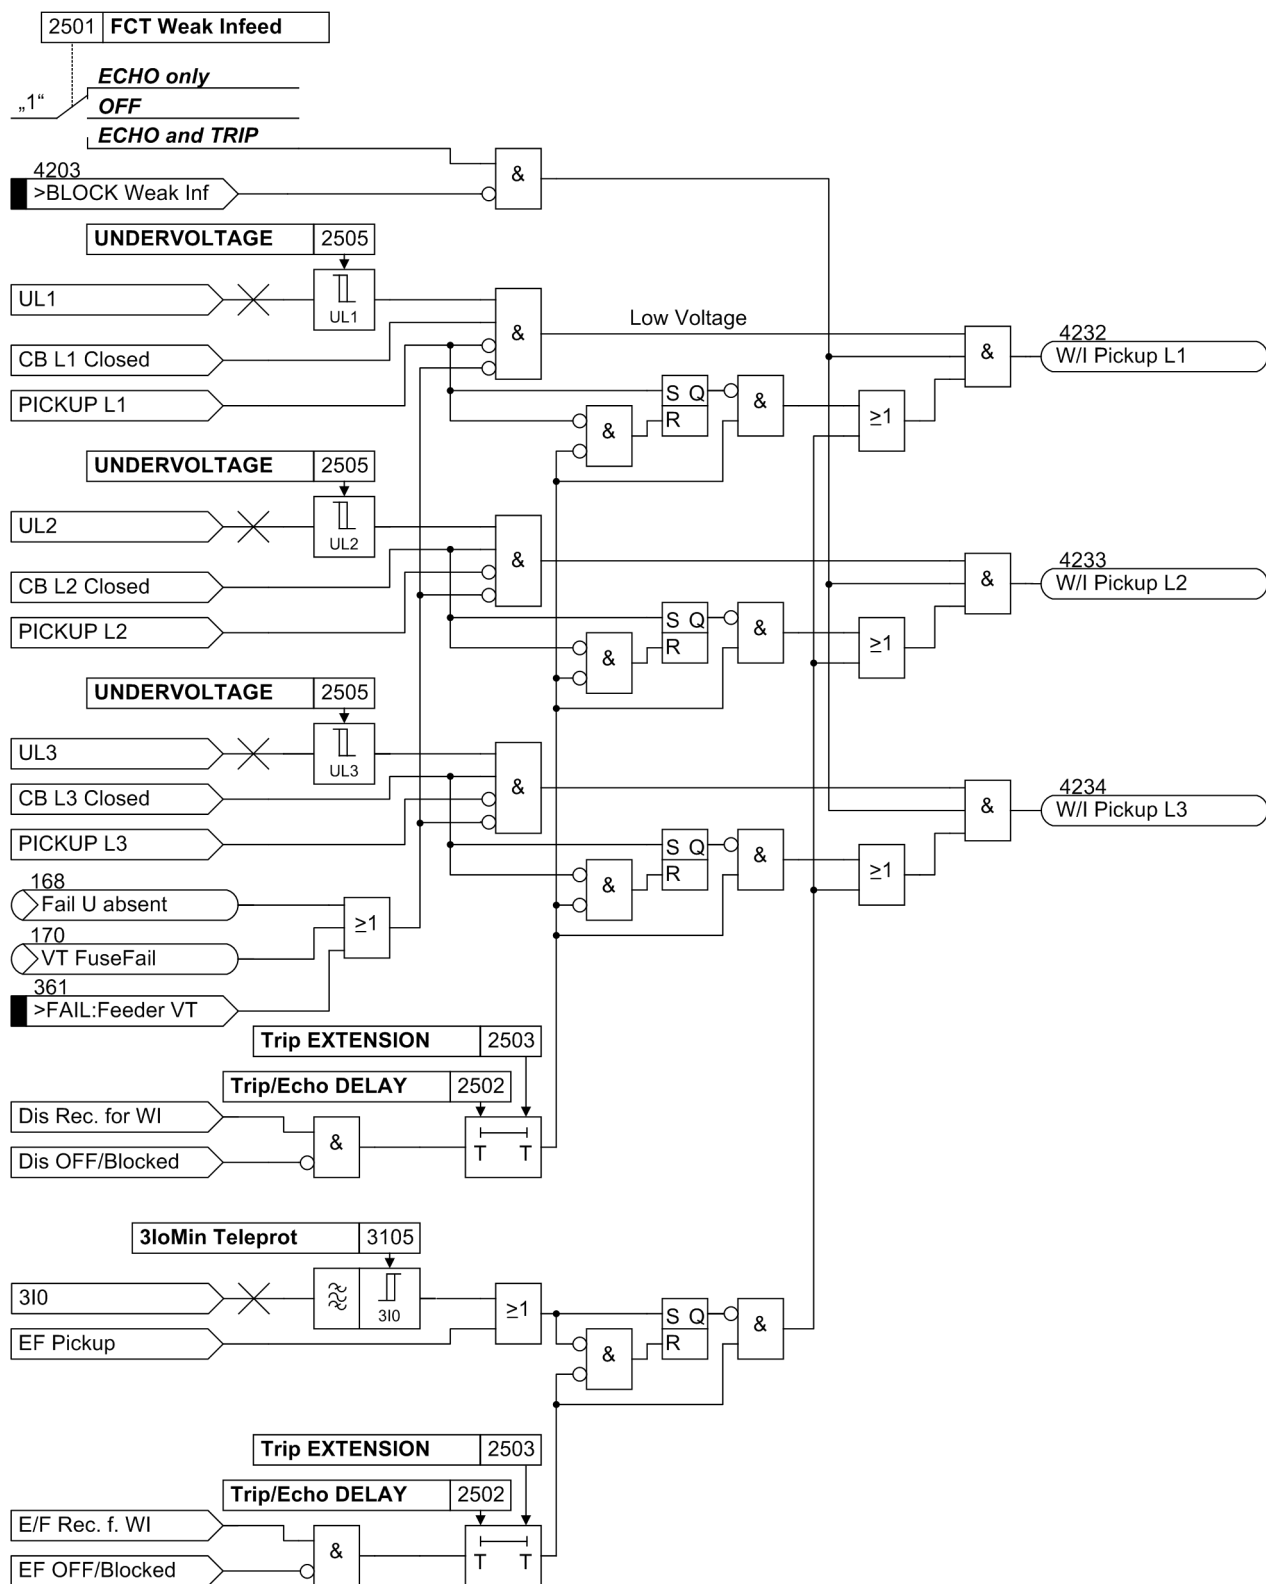


Figure 2-140 Logic diagram of the weak infeed tripping

2.11.2.2 Setting Notes

General

It is a prerequisite for the operation of the weak infeed function that this function is enabled during the configuration of the device at address 125 **Weak Infeed = Enabled**.

With the parameter **FCT Weak Infeed** (address 2501) it is determined whether the device shall trip during a weak infeed condition or not. With the setting **ECHO and TRIP** both the echo function and the weak infeed tripping function are activated. With the setting **ECHO only** the echo function for provision of the release signal at the in-feeding line end is activated. There is, however, no tripping at the line end with missing or weak infeed condition. As the weak-infeed measures are dependent on the signal reception from the opposite line end, they only make sense if the protection is coordinated with teleprotection (refer to Section 2.7 and/or 2.9).

The receive signal is a functional component of the trip condition. Accordingly, the weak infeed tripping function must **not be used with the blocking schemes**. It is only permissible with the permissive schemes and the comparison schemes with release signals! In all other cases it should be switched **OFF** at address 2501. In such cases it is better to disable this function from the onset by setting address 125 to **Disabled** during the device configuration. The associated parameters are then not accessible.

The undervoltage setting value **UNDERVOLTAGE** (address 2505) must in any event be set below the minimum expected operational phase-earth voltage. The lower limit for this setting is given by the maximum expected voltage drop at the relay location on the weak-infeed side during a short-circuit on the protected feeder for which the distance protection may no longer pick up.

Echo function

In the case of line ends with weak infeed, it is sensible to set the echo function in conjunction with the permissive overreach transfer schemes, so that the feeding line end is also released. The setting lists concerning the weak infeed are listed in Section 2.11.3.2. The echo function in address 2501 **FCT Weak Infeed** can be activated (**ECHO only**) or deactivated (**OFF**). By means of this „switch“ the weak infeed tripping function can also be activated (**ECHO and TRIP**).

Please do not fail to observe the notes on the setting of the distance protection stages at margin heading „Distance Protection Prerequisites“ in Section 2.7, and the notes on earth fault protection regarding the setting of the earth current stage **3IoMin Teleprot** at margin heading „Earth Fault Protection Prerequisites“ in Section 2.9.

The echo delay time **Trip/Echo DELAY** (address 2502) must be set long enough to avoid incorrect echo signals resulting from the difference in fault detection pick-up time of the distance protection functions or the earth fault protection function at all line ends during external faults (through-fault current). Typical setting is approx. 40ms (presetting). This parameter can only be altered with DIGSI under **Additional Settings**.

The echo impulse duration **Trip EXTENSION** (address 2503) may be matched to the configuration data of the signal transmission equipment. It must be long enough to ensure that the receive signal is recognized even with different pickup times by the protection devices at the line ends and different response times of the transmission equipment. In most cases approx. 50ms (presetting) is sufficient. This parameter can only be altered with DIGSI under **Additional Settings**.

An endless echo signal between the line ends is avoided (e.g. interference coupling in the signal path) by blocking a new echo for a certain time **Echo BLOCK Time** (address 2504) after each output of an echo signal. Typical setting is approx. 50ms. In addition, the echo is also blocked for the time **Echo BLOCK Time** after the distance

protection or earth fault protection signal was sent. This parameter can only be altered with DIGSI under **Additional Settings**.

In applications with one common transmission channel used by both the distance and the earth fault protection spurious trippings may occur if distance protection and earth fault protection create an echo independently of each other. In this case the parameter **Echo: 1 channel1** (address 2509) has to be set to **YES**. The presetting is **NO**.



Note

The „ECHO SIGNAL“ (No. 4246) must be separately allocated to the output relay for the transmitter actuation as it is not included in the transmit signals of the transmission functions.

2.11.3 Tripping According to French Specification

2.11.3.1 Functional Description

An alternative for detecting weak infeed is only available in the models 7SD5***-**D**.

Pickup with Relative Voltage Jump

In addition to the classical function of weak infeed, the so called **Logic no. 2** (address 125) presents an alternative to the method used so far.

This function operates independently of the teleprotection scheme by using its own receive signal and it is able to trip with delay and without delay.

Non-delayed Tripping

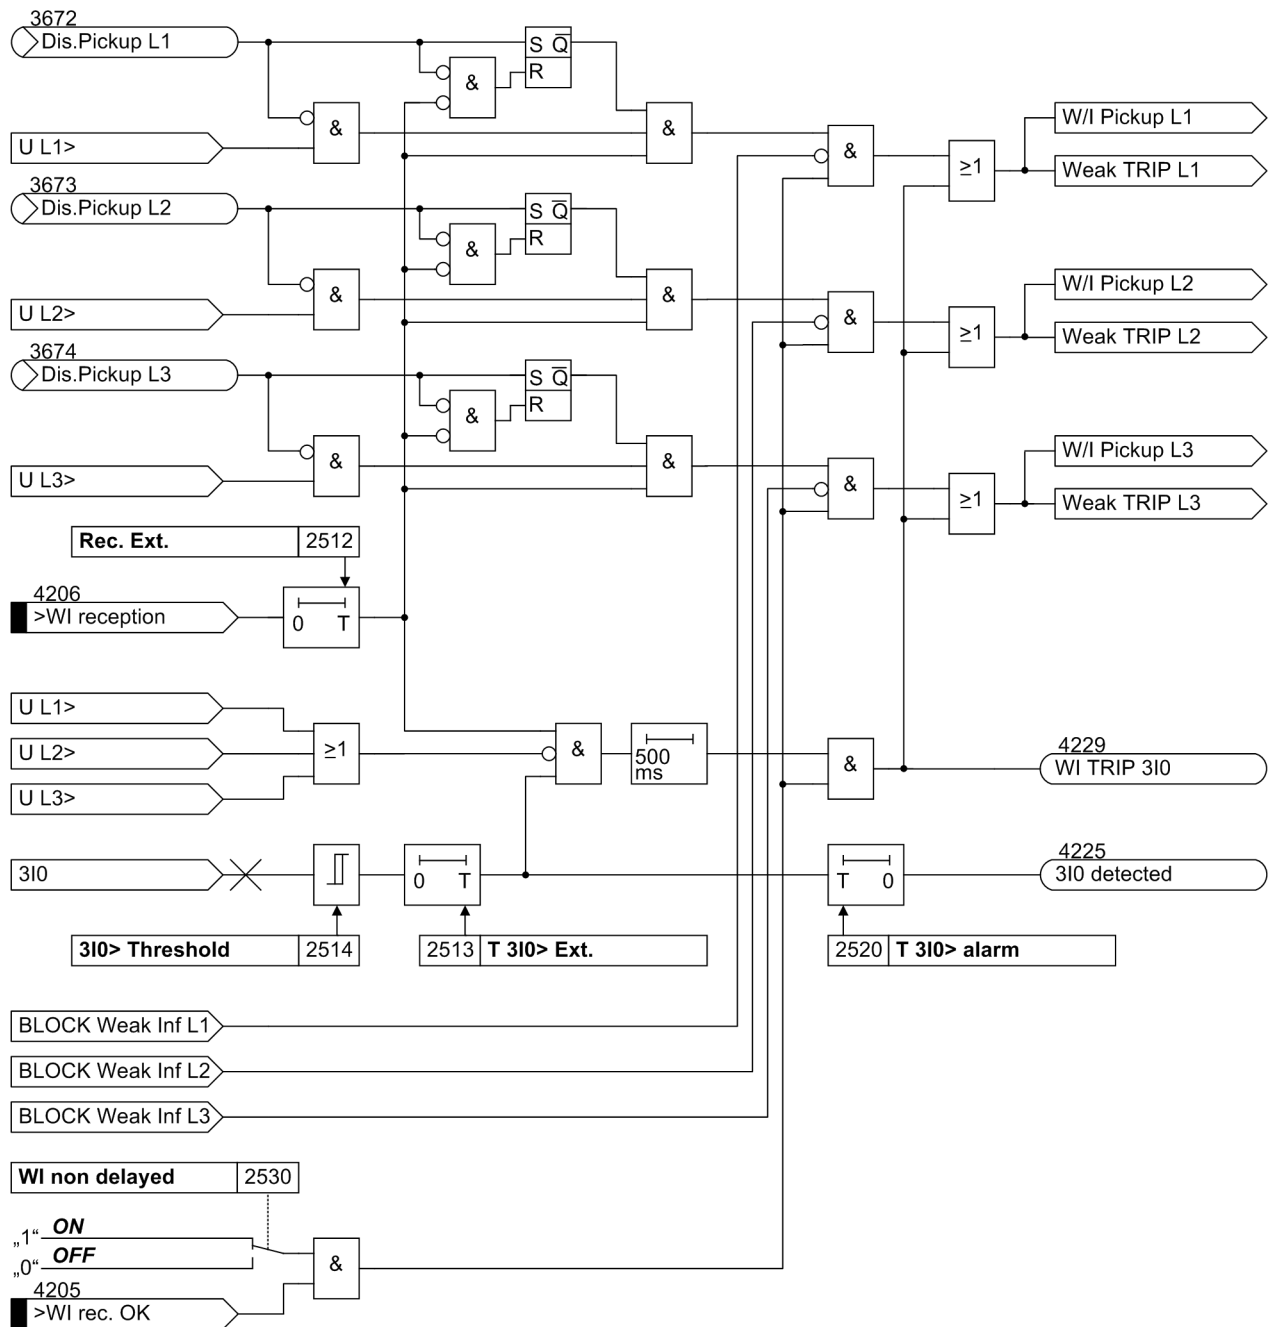


Figure 2-141 Logic diagram for non-delayed tripping

Trip with Delay

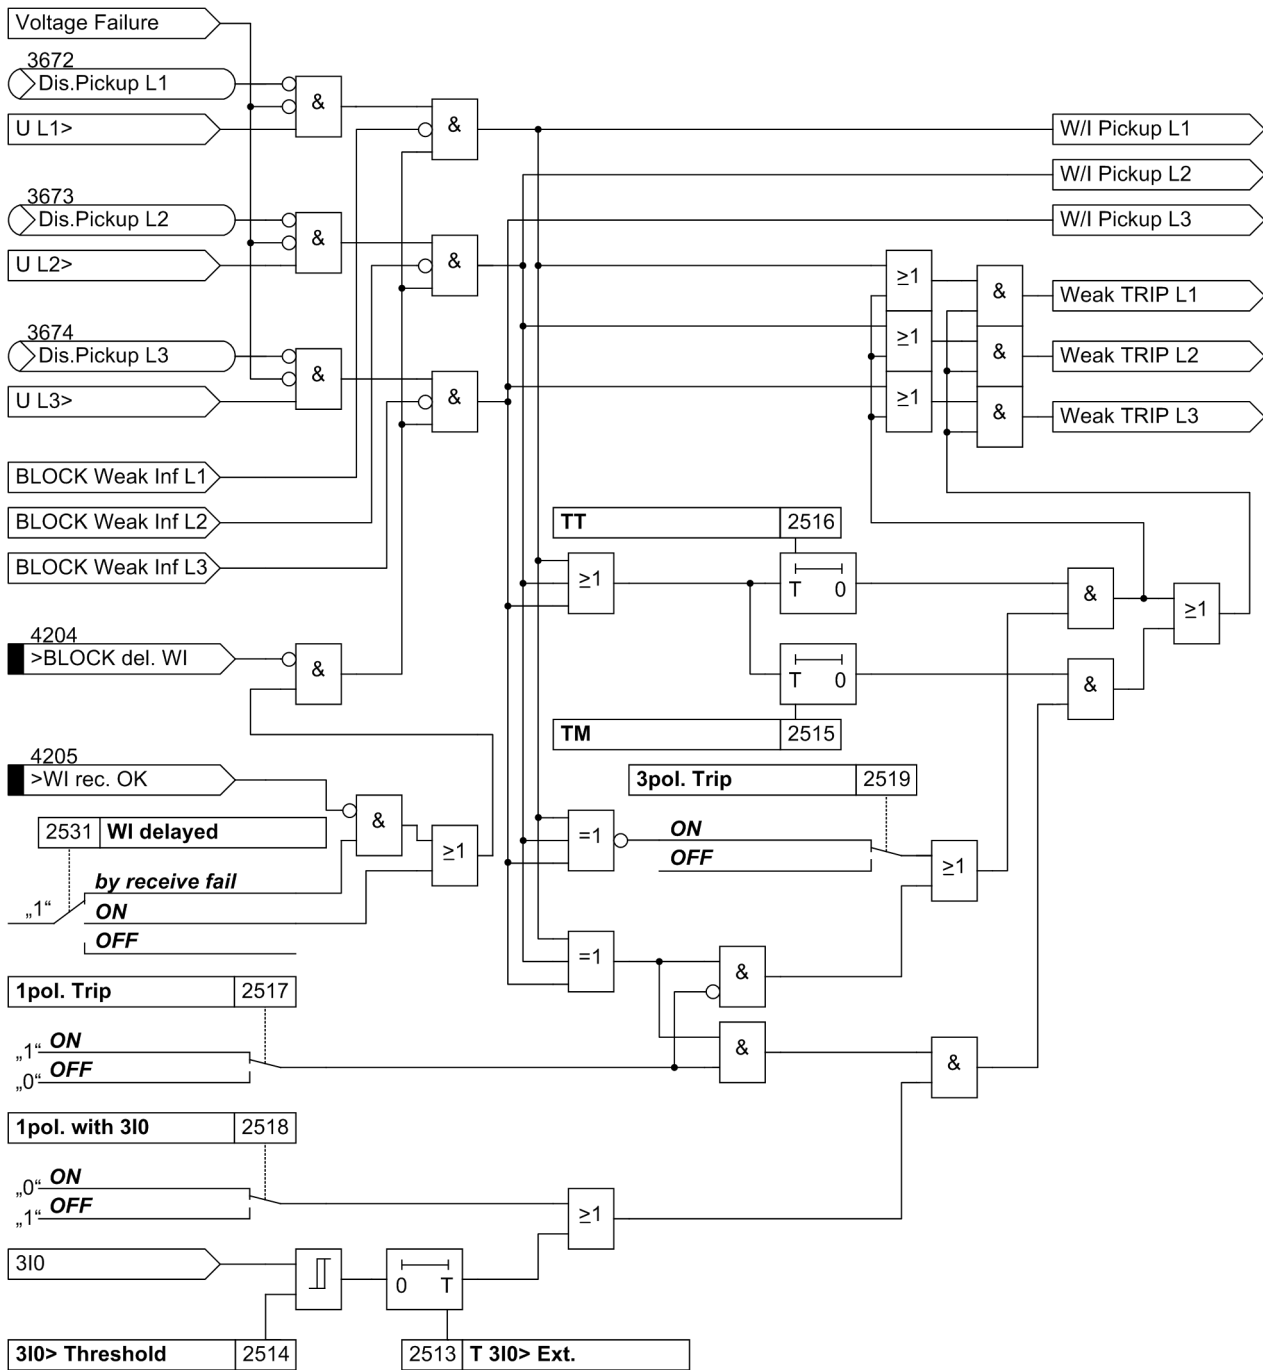


Figure 2-142 Logic for delayed tripping

2.11.3.2 Setting Notes

Phase selection

Phase selection is accomplished via undervoltage detection. For this purpose no absolute voltage threshold in volts is parameterized, but a factor (address 2510 **Uphe<Factor**) which is multiplied with the measured phase-phase voltage, and yields the

voltage threshold. This method considers operational deviations from the rated voltage in the undervoltage threshold and adjusts them to the current conditions.

The undervoltage threshold is created from the mean value via the measured phase-to-phase voltages of the last 500 ms and delayed via a voltage memory. Thus changes of the phase-to-phase voltage affect the threshold only slowly. The time constant can be set at address 2511 **Time const. τ** . In case of pickup the last determined voltage threshold of the phase that has picked up remains until a trip command is issued. This ensures that an influence of the voltage threshold by the fault is avoided for long waiting times. The undervoltage is determined for all 3 phases.

If the measured phase-to-phase voltage falls below the threshold (address 1131 **PoleOpenVoltage**), undervoltage is no longer detected in this phase.

Since a positive feedback occurs during tripping, i. e. the measured fault status cannot be eliminated by switching off, the picked up element drops out after the WI tripping. When the current voltage exceeds the dropout threshold, a new pickup is possible after a maximum of 1 s.

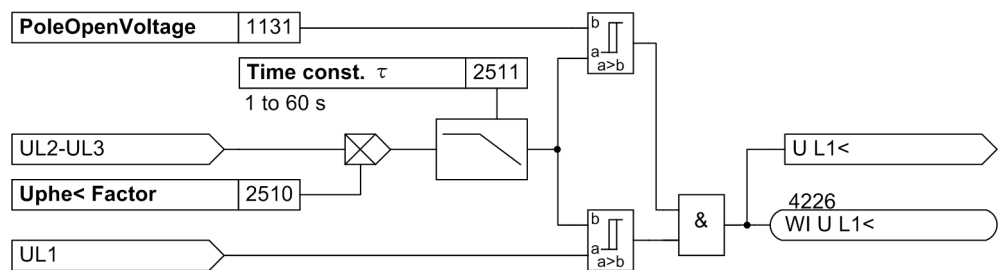


Figure 2-143 Undervoltage detection for U_{L1-E}

Instantaneous tripping

An undelayed TRIP command is issued if a receive signal „>WI reception“ is present and if an undervoltage is detected simultaneously. The receive signal is prolonged at address 2512 **Rec. Ext.** so that a trip command is still possible in the event of a quick dropout of the transmitting line end.

To prevent a faulty pickup of the weak infeed function following tripping of the line and reset of the fault detection by the distance protection function, a pickup is blocked in the corresponding phase. This blocking is maintained until the receive signal disappears.

If a receive signal applies and no undervoltage is detected, but the zero sequence current threshold **3IO> Threshold** is exceeded (address 2514), a fault on the line can be assumed. If this state (receive signal, no undervoltage and zero sequence current) applies for longer than 500 ms, 3-pole tripping is initiated. The time delay for the signal „3IO> exceeded“ is set at address 2513 **T 3IO> Ext.**. If the zero sequence current exceeds the threshold **3IO> Threshold** for longer than the set time **T 3IO> alarm** (address 2520), the annunciation „3IO detected“ is issued.

The non-delayed stage operates only if binary input „>WI rec. OK“ reports the proper functioning of the transmission channel.

Moreover, the phase-selective block signals **BLOCK Weak Inf** affect the non-delayed logic. Faulty pickups are thus prevented, especially after the dedicated line end was shut down.

In address 2530 **WI non delayed** the stage for instantaneous tripping is switched **OFF** or **ON** continuously.

Trip with delay

The operation of the delayed tripping is determined by three parameters:

- Address 2517 **1pol. Trip** enables a single-pole trip command for phase-to-ground faults if it is parameterised to **ON**
- Address 2518 **1pol. with 3IO**, if set to **ON**, allows a single-pole trip command only if also the threshold **3IO> Threshold** for the zero current has been exceeded. If the threshold **3IO> Threshold** is not exceeded, phase-to-ground faults do not cause a tripping. Position **OFF** allows a single-pole trip command even when **3IO> Threshold** is not exceeded. The time delay of „3IO> exceeded“ is set at address 2513 **T 3IO> Ext..**
- Address 2519 **3pol. Trip**, if set to **ON**, also allows a three-pole trip command in the event of a multi-pole pickup. In position **OFF** only the multi-pole pickup is reported but a three-pole trip command is not issued (only reporting). A 1-pole or 3-pole trip command for 1-pole pickup can still be issued.

A delayed tripping stage is implemented to allow tripping the dedicated line end in case the transmission channel is faulted. When undervoltage conditions have been detected, this stage picks up in one or more phases and trips with delay after a configured time (address 2515 **TM** and address 2516 **TT**) depending on the set stage mode (address 2517 **1pol. Trip** and 2519 **3pol. Trip**). If no trip command is issued in a pickup after the times 2515 **TM** and 2516 **TT** have elapsed, the voltage memory is reset and the pickup is cancelled.

Address 2531 **WI delayed** allows to set delayed tripping as operating mode. With **ON** this stage is permanently active. With the setting **by receive fail**, this stage will only be active if **is not** „>WI rec. OK“ reported OFF. With **OFF** this stage is permanently switched off.

To avoid erroneous pickup, phase selection via undervoltage is blocked entirely in the event of voltage failure (pickup of the fuse failure monitor or of the VT mcb). In addition, the relevant phases are blocked when the distance protection function is activated.

2.11.4 Tables on Classical Tripping and Tripping according to French Specification

2.11.4.1 Settings

Addresses which have an appended "A" can only be changed with DIGSI, under Additional Settings.

The table indicates region-specific presettings. Column C (configuration) indicates the corresponding secondary nominal current of the current transformer.

Addr.	Parameter	C	Setting Options	Default Setting	Comments
2501	FCT Weak Infeed		OFF ECHO only ECHO and TRIP	ECHO only	Weak Infeed function
2502A	Trip/Echo DELAY		0.00 .. 30.00 sec	0.04 sec	Trip / Echo Delay after carrier receipt
2503A	Trip EXTENSION		0.00 .. 30.00 sec	0.05 sec	Trip Extension / Echo Impulse time
2504A	Echo BLOCK Time		0.00 .. 30.00 sec	0.05 sec	Echo Block Time
2505	UNDERVOLTAGE		2 .. 70 V	25 V	Undervoltage (ph-e)

Addr.	Parameter	C	Setting Options	Default Setting	Comments
2509	Echo:1channel		NO YES	NO	Echo logic: Dis and EF on common channel
2510	Uphe< Factor		0.10 .. 1.00	0.70	Factor for undervoltage Uphe<
2511	Time const. τ		1 .. 60 sec	5 sec	Time constant Tau
2512A	Rec. Ext.		0.00 .. 30.00 sec	0.65 sec	Reception extension
2513A	T 3I0> Ext.		0.00 .. 30.00 sec	0.60 sec	3I0> exceeded extension
2514	3I0> Threshold	1A	0.05 .. 1.00 A	0.50 A	3I0 threshold for neutral current pickup
		5A	0.25 .. 5.00 A	2.50 A	
2515	TM		0.00 .. 30.00 sec	0.40 sec	WI delay single pole
2516	TT		0.00 .. 30.00 sec	1.00 sec	WI delay multi pole
2517	1pol. Trip		ON OFF	ON	Single pole WI trip allowed
2518	1pol. with 3I0		ON OFF	ON	Single pole WI trip with 3I0
2519	3pol. Trip		ON OFF	ON	Three pole WI trip allowed
2520	T 3I0> alarm		0.00 .. 30.00 sec	10.00 sec	3I0> exceeded delay for alarm
2530	WI non delayed		ON OFF	ON	WI non delayed
2531	WI delayed		ON by receive fail OFF	by receive fail	WI delayed

2.11.4.2 Information List

No.	Information	Type of Information	Comments
4203	>BLOCK Weak Inf	SP	>BLOCK Weak Infeed
4204	>BLOCK del. WI	SP	>BLOCK delayed Weak Infeed stage
4205	>WI rec. OK	SP	>Reception (channel) for Weak Infeed OK
4206	>WI reception	SP	>Receive signal for Weak Infeed
4221	WeakInf. OFF	OUT	Weak Infeed is switched OFF
4222	Weak Inf. BLOCK	OUT	Weak Infeed is BLOCKED
4223	Weak Inf ACTIVE	OUT	Weak Infeed is ACTIVE
4225	3I0 detected	OUT	Weak Infeed Zero seq. current detected
4226	WI U L1<	OUT	Weak Infeed Undervoltg. L1
4227	WI U L2<	OUT	Weak Infeed Undervoltg. L2
4228	WI U L3<	OUT	Weak Infeed Undervoltg. L3
4229	WI TRIP 3I0	OUT	WI TRIP with zero sequence current
4231	WeakInf. PICKUP	OUT	Weak Infeed PICKED UP
4232	W/I Pickup L1	OUT	Weak Infeed PICKUP L1
4233	W/I Pickup L2	OUT	Weak Infeed PICKUP L2
4234	W/I Pickup L3	OUT	Weak Infeed PICKUP L3

No.	Information	Type of Information	Comments
4241	WeakInfeed TRIP	OUT	Weak Infeed General TRIP command
4242	Weak TRIP 1p.L1	OUT	Weak Infeed TRIP command - Only L1
4243	Weak TRIP 1p.L2	OUT	Weak Infeed TRIP command - Only L2
4244	Weak TRIP 1p.L3	OUT	Weak Infeed TRIP command - Only L3
4245	Weak TRIP L123	OUT	Weak Infeed TRIP command L123
4246	ECHO SIGNAL	OUT	ECHO Send SIGNAL

2.12 Direct Local Trip

Any signal from an external protection or monitoring device can be coupled into the signal processing of the 7SD5 by means of a binary input. This signal can be delayed, alarmed and routed to one or several output relays.

2.12.1 Functional Description

External trip of the local circuit breaker

Figure 2-144 shows the logic diagram. If device and circuit breaker are capable of single-phase operation, it is also possible to trip single-pole. The tripping logic of the device ensures that the conditions for single-pole tripping are met (e.g. single-phase tripping permissible, automatic reclosure ready).

The external tripping can be switched on and off with a setting parameter and may be blocked via binary input.

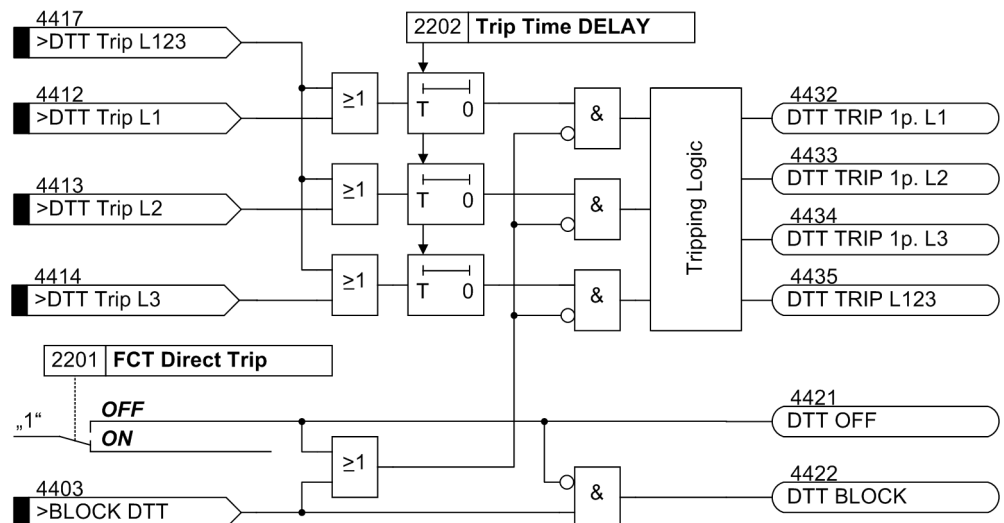


Figure 2-144 Logic diagram of the local external tripping

Remote trip of the circuit breaker at the opposite line end

On conventional transmission paths, one transmission channel per desired transmission direction is required for remote tripping at the remote end. For example, fibre optic connections or voice frequency modulated high frequency channels via pilot cables, power line carrier or microwave radio links can be used for this purpose in the following ways.

If the trip command of the distance protection is to be transmitted, it is best to use the integrated teleprotection function for the transmission of the signal as this already incorporates the optional extension of the transmitted signal, as described in Section 2.7. Any of the commands can of course be used to trigger the transmitter to initiate the send signal.

On the receiver side, the external local trip function is used. The receive signal is routed to a binary input which is assigned to the logical binary input function „>DTT Trip L123“. If single-pole tripping is desired, you can also use binary inputs „>DTT Trip L1“, „>DTT Trip L2“ and „>DTT Trip L3“. Figure 2-144 thus also applies in this case.

2.12.2 Setting Notes

General

A precondition for the direct local trip is that the configuration of the functions (Section 2.1.1) has been configured in address 122 **DTT Direct Trip = Enabled**. At address 2201 **FCT Direct Trip** it can also be switched **ON** or **OFF**.

For direct local trip, a trip time delay can be set in address 2202 **Trip Time DELAY**. This delay can be used as a grading margin.

Once a trip command has been issued, it is maintained for at least as long as the set minimum trip command duration **TMin TRIP CMD** which was set for the device in general in address 240 (Section 2.1.2). Reliable operation of the circuit breaker is therefore ensured, even if the initiating signal pulse is very short.

2.12.3 Settings

Addr.	Parameter	Setting Options	Default Setting	Comments
2201	FCT Direct Trip	ON OFF	OFF	Direct Transfer Trip (DTT)
2202	Trip Time DELAY	0.00 .. 30.00 sec; ∞	0.01 sec	Trip Time Delay

2.12.4 Information List

No.	Information	Type of Information	Comments
4403	>BLOCK DTT	SP	>BLOCK Direct Transfer Trip function
4412	>DTT Trip L1	SP	>Direct Transfer Trip INPUT Phase L1
4413	>DTT Trip L2	SP	>Direct Transfer Trip INPUT Phase L2
4414	>DTT Trip L3	SP	>Direct Transfer Trip INPUT Phase L3
4417	>DTT Trip L123	SP	>Direct Transfer Trip INPUT 3ph L123
4421	DTT OFF	OUT	Direct Transfer Trip is switched OFF
4422	DTT BLOCK	OUT	Direct Transfer Trip is BLOCKED
4432	DTT TRIP 1p. L1	OUT	DTT TRIP command - Only L1
4433	DTT TRIP 1p. L2	OUT	DTT TRIP command - Only L2
4434	DTT TRIP 1p. L3	OUT	DTT TRIP command - Only L3
4435	DTT TRIP L123	OUT	DTT TRIP command L123

2.13 Direct Remote Trip and Transmission of Binary Information

2.13.1 Functional Description

7SD5 allows the transmission of up to 28 items of binary information of any type from one device to the others via the communication links provided for protection tasks. Four of them are transmitted like protection signals with high priority, i.e. very fast, and are therefore especially suitable for the transmission of other protection signals which are generated outside of 7SD5. The other 24 are transmitted in the background and are suitable for information on the events taking place in a substation which may also be useful in other substations (see also the specifications in Chapter „Technical Data“).

The information can be injected into the device via binary inputs and output at the other devices via binary outputs. On both the transmitting and the receiving side the integrated user-defined CFC logic allows to perform logical operations on the signals and on other information from the protective and monitoring functions of the devices. Also an internal indication can be assigned via CFC to a transmission input and transmitted to the remote end(s).

The used binary inputs and the signal outputs must be allocated accordingly when configuring the input and output functions. The four high-priority signals are injected into the device via the binary inputs „>Remote Trip1“ to „>Remote Trip4“, are transmitted to the devices of the other ends and can be processed at each receiving side with the output functions „RemoteTrip1 rec“ to „RemoteTrip4 rec“.

The remaining 24 items of information reach the device via the binary inputs „>Rem. Signal 1“ to „>Rem. Signal24“ and are correspondingly available under „Rem. Sig 1recv“ etc. at the receiving side.

When assigning the binary inputs and outputs using DIGSI, you can provide the information to be transmitted with your own designation. If, for example, a line has a unit connected power transformer at one end and you wish to transmit trip by the Buchholz protection as „>Remote Trip1“ to the other end, you may use the input and designate it „Buchholz TRIP“. At the other end, you designate the incoming information, „RemoteTrip1 rec“ e.g. „Buchholz remote“, and assign it to an output trip relay. In case of Buchholz protection trip the indications will then be given according to your designations.

Also devices which have logged out of the line protection system (see Section 2.2.2.1 „Mode: Log out device“) can send and receive remote indications and commands.

The indications of the devices, e.g. „Rel1 Login“ of the topology exploration, can be used to determine whether the signals of the sending devices are still available. They are transmitted if a device x is actively involved in the communication topology.

Once a transmission fault has been detected, the time **Td ResetRemote** at address 4512 is started for resetting the remote signals. This means that, if the communication is interrupted, a present receive signal retains its last status for a time **Td ResetRemote** before it is reset.

No further settings are required for the transmission of binary information. Each device sends the injected information to all other devices at the ends of the protected object. Where selection is necessary, it will have to be carried out by appropriate allocation and, if necessary, by a link at the receiving side.

2.13.2 Information List

No.	Information	Type of Information	Comments
3541	>Remote Trip1	SP	>Remote Trip 1 signal input
3542	>Remote Trip2	SP	>Remote Trip 2 signal input
3543	>Remote Trip3	SP	>Remote Trip 3 signal input
3544	>Remote Trip4	SP	>Remote Trip 4 signal input
3545	RemoteTrip1 rec	OUT	Remote Trip 1 received
3546	RemoteTrip2 rec	OUT	Remote Trip 2 received
3547	RemoteTrip3 rec	OUT	Remote Trip 3 received
3548	RemoteTrip4 rec	OUT	Remote Trip 4 received
3549	>Rem. Signal 1	SP	>Remote Signal 1 input
3550	>Rem.Signal 2	SP	>Remote Signal 2 input
3551	>Rem.Signal 3	SP	>Remote Signal 3 input
3552	>Rem.Signal 4	SP	>Remote Signal 4 input
3553	>Rem.Signal 5	SP	>Remote Signal 5 input
3554	>Rem.Signal 6	SP	>Remote Signal 6 input
3555	>Rem.Signal 7	SP	>Remote Signal 7 input
3556	>Rem.Signal 8	SP	>Remote Signal 8 input
3557	>Rem.Signal 9	SP	>Remote Signal 9 input
3558	>Rem.Signal10	SP	>Remote Signal 10 input
3559	>Rem.Signal11	SP	>Remote Signal 11 input
3560	>Rem.Signal12	SP	>Remote Signal 12 input
3561	>Rem.Signal13	SP	>Remote Signal 13 input
3562	>Rem.Signal14	SP	>Remote Signal 14 input
3563	>Rem.Signal15	SP	>Remote Signal 15 input
3564	>Rem.Signal16	SP	>Remote Signal 16 input
3565	>Rem.Signal17	SP	>Remote Signal 17 input
3566	>Rem.Signal18	SP	>Remote Signal 18 input
3567	>Rem.Signal19	SP	>Remote Signal 19 input
3568	>Rem.Signal20	SP	>Remote Signal 20 input
3569	>Rem.Signal21	SP	>Remote Signal 21 input
3570	>Rem.Signal22	SP	>Remote Signal 22 input
3571	>Rem.Signal23	SP	>Remote Signal 23 input
3572	>Rem.Signal24	SP	>Remote Signal 24 input
3573	Rem.Sig 1recv	OUT	Remote signal 1 received
3574	Rem.Sig 2recv	OUT	Remote signal 2 received
3575	Rem.Sig 3recv	OUT	Remote signal 3 received
3576	Rem.Sig 4recv	OUT	Remote signal 4 received
3577	Rem.Sig 5recv	OUT	Remote signal 5 received
3578	Rem.Sig 6recv	OUT	Remote signal 6 received
3579	Rem.Sig 7recv	OUT	Remote signal 7 received
3580	Rem.Sig 8recv	OUT	Remote signal 8 received
3581	Rem.Sig 9recv	OUT	Remote signal 9 received
3582	Rem.Sig10recv	OUT	Remote signal 10 received
3583	Rem.Sig11recv	OUT	Remote signal 11 received
3584	Rem.Sig12recv	OUT	Remote signal 12 received

No.	Information	Type of Information	Comments
3585	Rem.Sig13recv	OUT	Remote signal 13 received
3586	Rem.Sig14recv	OUT	Remote signal 14 received
3587	Rem.Sig15recv	OUT	Remote signal 15 received
3588	Rem.Sig16recv	OUT	Remote signal 16 received
3589	Rem.Sig17recv	OUT	Remote signal 17 received
3590	Rem.Sig18recv	OUT	Remote signal 18 received
3591	Rem.Sig19recv	OUT	Remote signal 19 received
3592	Rem.Sig20recv	OUT	Remote signal 20 received
3593	Rem.Sig21recv	OUT	Remote signal 21 received
3594	Rem.Sig22recv	OUT	Remote signal 22 received
3595	Rem.Sig23recv	OUT	Remote signal 23 received
3596	Rem.Sig24recv	OUT	Remote signal 24 received

2.14 Instantaneous High-Current Switch-onto-Fault Protection (SOTF)

2.14.1 Functional Description

General

The instantaneous high-current switch-onto-fault protection function is provided to disconnect immediately, and without delay, feeders that are switched onto a high-current fault. It serves, e.g. as a rapid protection for connecting a feeder with closed grounding disconnector. In order to function properly, the devices at all ends of the protected object must know the circuit breaker positions (breaker auxiliary contacts).

A second stage works fast and without delay, regardless of the circuit breaker position.

I>>> stage

The pickup of the I>>> stage measures each phase current and compares it to the setting value I>>>. The currents are numerically filtered to eliminate the DC component. DC current components in the fault current and in the CT secondary circuit following the switching off of large currents practically have no influence on this high-current pickup operation. If the setting value is exceeded by more than twice its value, the stage will automatically use the peak value of the unfiltered measured quantity so that extremely short command times are possible.

This stage is only enabled when the local circuit breaker is closed while all remaining line ends of the protected object are open. The devices exchange the status of their respective circuit breakers continuously via the communication link. If the protected object is already live (from a different end) the stage is not effective. An indispensable precondition for the functioning of the I-STUB stage is that the auxiliary contacts of the circuit breakers are connected at all ends of the protected object and allocated to the relevant binary inputs. If this is not the case, this stage is not effective. The central function control communicates the information of the circuit breaker position to the high-current instantaneous tripping (see also Section 2.24.1).

Figure 2-145 shows the logic diagram. The I-STUB stage at the bottom of the diagram operates separately for each phase. During the manual closing of the circuit breaker all three phases are enabled via the internal signal „SOTF enab. L123“ which is issued by the central functional control of the protection, provided that the manual closing can be recognized there (see Section 2.24.1).

 
Tripping can also be enabled separately for each phase by the signals „SOTF enab. Lx“. This applies also, for example, to automatic reclosure after single-pole tripping. Then, single-pole tripping with this stage is possible, but only if the device is designed for single-pole tripping.

I>>>> stage

The I>>>> stage trips regardless of the position of the circuit breakers. Here, the currents are also numerically filtered and the peak value of the currents is measured from the double setting value onwards. Figure 2-145 shows the logic diagram in the upper part.

Therefore, this stage is used when current grading is possible. This is possible with a small source impedance and at the same time a high impedance of the protected object (an example can be found in the advice on setting notes, Section 2.14.2).

The I>>>> stage is enabled automatically by the current-step monitoring di/dt of the device for a duration of 50 ms. This stage operates separately for each phase.



long lines with small source impedance. In other cases it is set to ∞ (default setting). This parameter can only be altered with DIGSI under **Additional Settings**.

When using a PC and DIGSI for the parameterisation, the values can be optionally entered as primary or secondary quantities. For settings with secondary quantities the currents will be converted to the secondary side of the current transformers.

Exemplary calculation:

110 kV overhead line 150 mm² with the data:

$$s \text{ (length)} = 60 \text{ km}$$

$$R_1/s = 0.19 \text{ } \Omega/\text{km}$$

$$X_1/s = 0.42 \text{ } \Omega/\text{km}$$

Short-circuit power at the feeding end:

$$S_k = 3.5 \text{ GVA (subtransient, since the } I_{>>>> \text{ stage can respond to the first peak value)}$$

Current transformer 600 A/5 A

From that the line impedance Z_L and the source impedance Z_S are calculated:

$$Z_1/s = \sqrt{0.19^2 + 0.42^2} \text{ } \Omega/\text{km} = 0.46 \text{ } \Omega/\text{km}$$

$$Z_L = 0.46 \text{ } \Omega/\text{km} \cdot 60 \text{ km} = 27.66 \text{ } \Omega$$

$$Z_V = \frac{110 \text{ kV}^2}{3500 \text{ MVA}} = 3.46 \text{ } \Omega$$

The three-phase short-circuit current at line end is $I_{sc \text{ end}}''$ (with source voltage $1.1 \cdot U_N$):

$$I_{k \text{ End}}'' = \frac{1.1 \cdot U_N}{\sqrt{3} \cdot (Z_V + Z_L)} = \frac{1.1 \cdot 110 \text{ kV}}{\sqrt{3} \cdot (3.46 \text{ } \Omega + 27.66 \text{ } \Omega)} = 2245 \text{ A}$$

With a safety factor of 10 %, the following primary setting value results:

$$\text{Setting value } I_{>>>> = 1.1 \cdot 2245 \text{ A} = 2470 \text{ A}$$

or the secondary settings value:

$$\text{Setting Value } I_{>>>> = 1.1 \cdot \frac{2245 \text{ A}}{600 \text{ A}} \cdot 5 \text{ A} = 20.6 \text{ A}$$

i.e. in case of fault currents exceeding 2470 A (primary) or 20.6 A (secondary) you can be sure that a short-circuit has occurred on the protected line. This line can be disconnected immediately.

Note: The calculation was carried out with absolute values, which is sufficiently precise for overhead lines. A complex calculation is only needed if the angles of the source impedance and the line impedance vary considerably.

2.14.3 Settings

Addresses which have an appended "A" can only be changed with DIGSI, under Additional Settings.

The table indicates region-specific presettings. Column C (configuration) indicates the corresponding secondary nominal current of the current transformer.

Addr.	Parameter	C	Setting Options	Default Setting	Comments
2401	FCT HS/SOTF-O/C		ON OFF	ON	Inst. High Speed/SOTF-O/C is
2404	I>>>	1A	0.10 .. 15.00 A; ∞	1.50 A	I>>> Pickup
		5A	0.50 .. 75.00 A; ∞	7.50 A	
2405A	I>>>>	1A	1.00 .. 25.00 A; ∞	∞ A	I>>>> Pickup
		5A	5.00 .. 125.00 A; ∞	∞ A	

2.14.4 Information List

No.	Information	Type of Information	Comments
4253	>BLOCK SOTF-O/C	SP	>BLOCK Instantaneous SOTF Overcurrent
4271	SOTF-O/C OFF	OUT	SOTF-O/C is switched OFF
4272	SOTF-O/C BLOCK	OUT	SOTF-O/C is BLOCKED
4273	SOTF-O/C ACTIVE	OUT	SOTF-O/C is ACTIVE
4281	SOTF-O/C PICKUP	OUT	SOTF-O/C PICKED UP
4282	SOF O/CpickupL1	OUT	SOTF-O/C Pickup L1
4283	SOF O/CpickupL2	OUT	SOTF-O/C Pickup L2
4284	SOF O/CpickupL3	OUT	SOTF-O/C Pickup L3
4285	I>>>>O/C p.upL1	OUT	High Speed-O/C Pickup I>>>> L1
4286	I>>>>O/C p.upL2	OUT	High Speed-O/C Pickup I>>>> L2
4287	I>>>>O/C p.upL3	OUT	High Speed-O/C Pickup I>>>> L3
4289	HS/SOF TRIP1pL1	OUT	High Speed/SOTF-O/C TRIP - Only L1
4290	HS/SOF TRIP1pL2	OUT	High Speed/SOTF-O/C TRIP - Only L2
4291	HS/SOF TRIP1pL3	OUT	High Speed/SOTF-O/C TRIP - Only L3
4292	HS/SOF TRIP 1p	OUT	High Speed/SOTF-O/C TRIP 1pole
4293	HS/SOF Gen.TRIP	OUT	High Speed/SOTF-O/C General TRIP
4294	HS/SOF TRIP 3p	OUT	High Speed/SOTF-O/C TRIP 3pole
4295	HS/SOF TRIPL123	OUT	High Speed/SOTF-O/C TRIP command L123

2.15 Backup Time Overcurrent Protection

The 7SD5 device has an integrated time overcurrent protection function. This function may optionally be used either as back-up time delayed overcurrent protection or as emergency overcurrent protection. Please note that this protection function is available in addition to main protection functions, such as differential and distance protection, to provide even more security.

2.15.1 General

While the line protection 7SD5 with configured differential protection can only operate properly if each device correctly receives the data of the other devices, and while a distance protection can only operate properly if the correct measuring voltage is applied to the device, the emergency time overcurrent protection only requires the local currents. The emergency time overcurrent protection is automatically activated when the data communication of the differential protection is disturbed and the measuring voltage fails (emergency operation). Both differential protection and distance protection are then blocked.

This means that emergency operation replaces the differential protection and/or the distance protection as short-circuit protection if protection data communication fails and the distance protection working in parallel detects a failure of the measuring voltages from one of the following conditions:

- The „Voltage transformer mcb tripped“ signal is received via binary input, indicating that the measured voltage signal is lost, or
- One of the internal monitoring functions (e.g. current sum, wire break or „Fuse-Failure-Monitor“) is activated, see Section 2.23.1.3.

For the overcurrent protection there are in total four stages for the phase currents and four stages for the earth currents as follows:

- Two overcurrent stages with a definite time characteristic (O/C with DT),
- One overcurrent stage with inverse time characteristic (IDMT),
- A further overcurrent stage which has an additional enable input.

These four stages are independent from each other and are freely combinable. Blocking from external criteria via binary inputs is possible, as well as switch-onto-fault tripping. It is also possible to release one or more of the stages in switching-onto-fault conditions. If not all stages are required, each individual stage can be deactivated by setting the pickup threshold to ∞ .

2.15.2 Functional Description

Measured values

The phase currents are fed to the device via the input transformers of the measuring input. The earth current $3 \cdot I_0$ is either measured directly or calculated.

If I_4 is connected to the starpoint of the current transformer set (address 220 **I4 transformer = In prot. line**, see section 2.1.2 of **P.System Data 1**), the earth current will be directly available as measured value. It is used considering the **I4/Iph CT** factor (address 221).

If the ground current of own the neutral line is not connected to the fourth current input I_4 (address 220 **I4 transformer** cannot be parameterized to **In prot. line**),

the device will calculate the ground current from the phase currents. Of course, all three phase currents of three star-connected current transformers must be available and connected.

Definite Time High-set Current Stage I>>

Each phase current is compared with the setting value **Iph>>** after numerical filtering; the earth current is compared with **3IO>> PICKUP**. Currents above the associated pickup value are detected and signalled. After expiry of the associated time delays **T Iph>>** or **T 3IO>>** a trip command is issued. The dropout value is approximately 7% below pickup value, but at least 1.8% of the nominal current, below the pickup value.

Figure 2-146 shows the logic diagram of the I>>-stages. The stages can be blocked via the binary input „>BLOCK O/C I>>“. In addition, the earth current stage can be blocked separately via the binary input „>BLOCK O/C Ie>>“, e.g. during a single-pole dead time before reclosure in order to avoid a spurious tripping with the zero phase sequence system which is present then.

The binary input „>O/C InstTRIP“ and the evaluation of the indication „switch“ (onto fault) are common to all stages and described below. They may, however, separately affect the phase and/or earth current stages. This can be achieved with two parameters:

- **I>> Telep/BI** (address 2614), determines whether a non-delayed trip of this stage via binary input „>O/C InstTRIP“ is possible (**YES**) or impossible (**NO**). This parameter is also used for instantaneous tripping before automatic reclosure.
- **I>> SOTF** (address 2615), determines whether this stage shall issue non-delayed tripping (**YES**) or not (**NO**) in case of switching-onto-fault conditions.

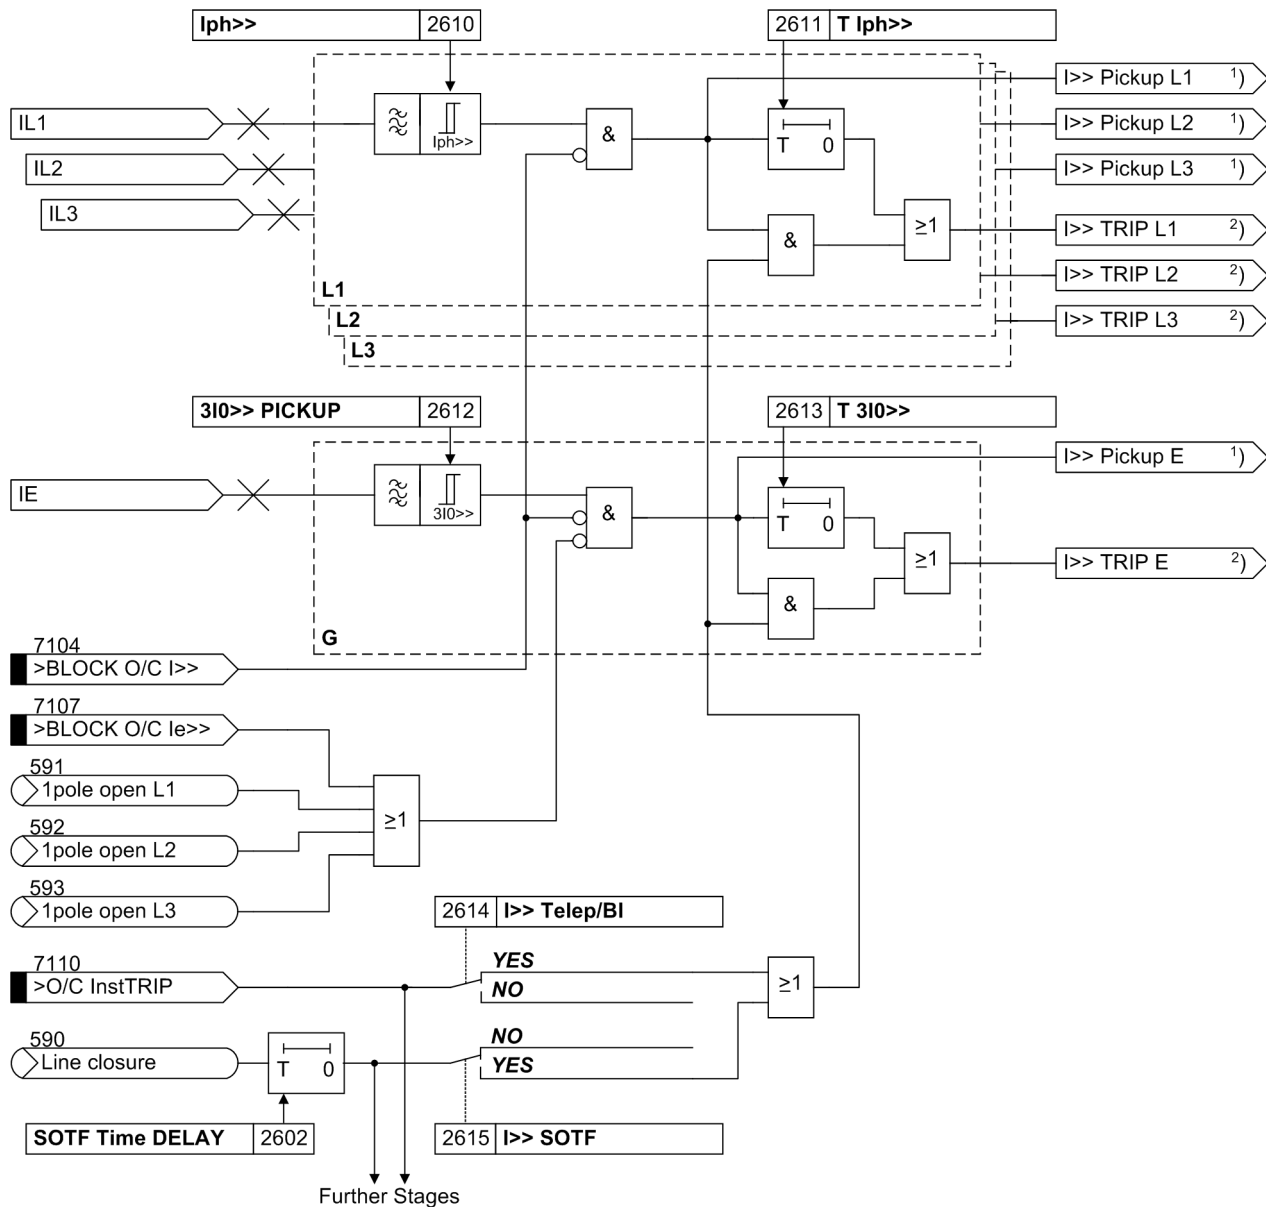


Figure 2-146 Logic diagram of the I>> stage

- 1) Output indications associated with the pickup signals are listed in Table 2-12
- 2) Output indications associated with the trip signals are listed in Table 2-13

Definite time over-current stage I>

The logic of the overcurrent stage I> is the same as that of the I>> stages. In all references **Iph>>** must merely be replaced with **Iph>** or **310>> PICKUP** with **310>**. Parameter 2624 **I> Telep/BI** is default as **NO**. In all other respects Figure 2-146 applies.

Inverse time over-current stage I_p

The logic of the inverse overcurrent stage also operates chiefly in the same way as the remaining stages. However, the time delay is calculated here based on the type of the set characteristic, the intensity of the current and a time multiplier (following figure). A pre-selection of the available characteristics was already carried out during the configuration of the protection functions. Furthermore, an additional constant time delay **T Ip Add** or **T 310p Add** may be selected, which is added to the inverse time. The possible characteristics are shown in the Technical Data.

The following figure shows the logic diagram. The setting parameter addresses of the IEC characteristics are shown by way of an example. In the setting information (Section 2.15.3) the different setting addresses are elaborated upon.

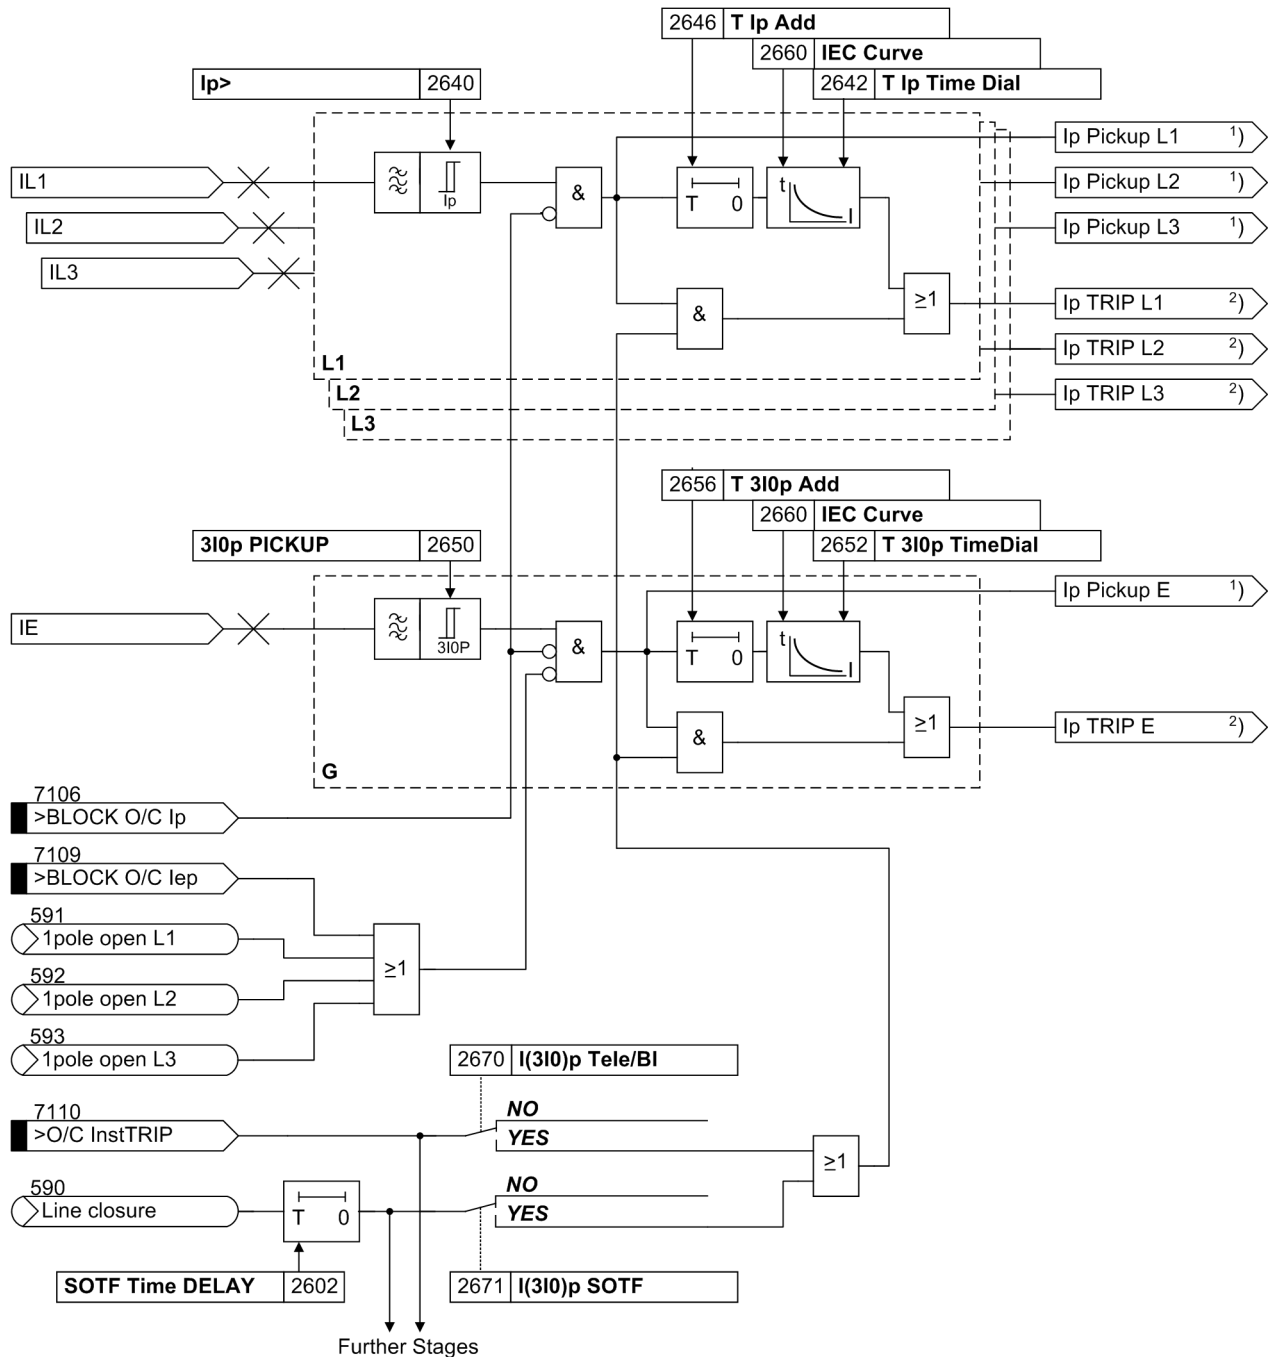


Figure 2-147 Logic diagram of the I_p stage (inverse time overcurrent protection) - example of IEC curve

- 1) Output indications associated with the pickup signals are listed in Table 2-12
- 2) Output indications associated with the trip signals are listed in Table 2-13

Additional Stage I>>>

The additional definite time or instantaneous overcurrent stage I-STUB has an extra enable input (Figure 2-148). It is therefore also suitable e.g. as an emergency stage.

The enable input „>I - STUB ENABLE“ can be assigned to the output signal „Emer . mode“ (either via binary outputs and inputs or via the user-definable logic CFC functions). The stage is then automatically active when the differential protection is not effective due to a data disturbance, and the distance protection due to a failure of the measuring voltage.

The I>>> stage can, however, also be used as a standard additional and independent overcurrent stage, since it works independent of the other stages. In this case, the enable input „>I - STUB ENABLE“ must be activated permanently (via a binary input or CFC).

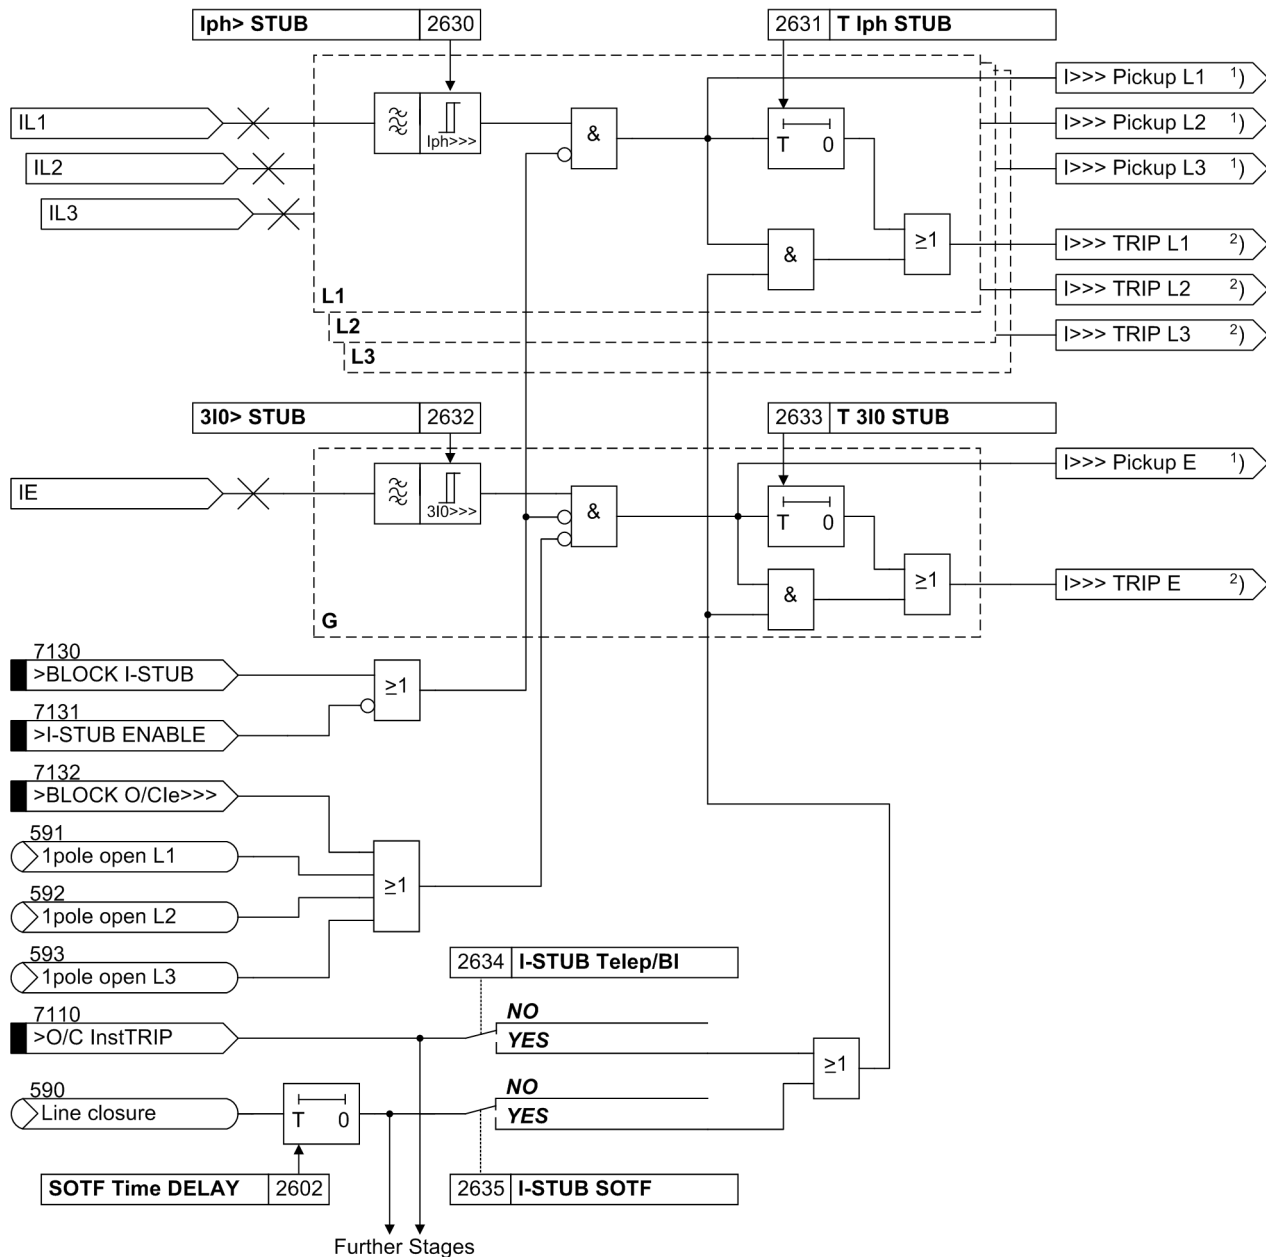


Figure 2-148 Logic diagram of the I>>> stage

- 1) Output indications associated with the pickup signals are listed in Table 2-12
- 2) Output indications associated with the trip signals are listed in Table 2-13

Instantaneous tripping before automatic reclosure

If automatic reclosure must be performed, a quick clearance of the fault before reclosure is usually desirable. A release signal from an external automatic reclosure device can be injected via binary input „>O/C InstTRIP“. The interconnection of the internal auto recloser is performed via an additional CFC logic, which typically connects the output signal 2889 „AR 1.CycZoneRel“ with the input signal „>O/C InstTRIP“. Any stage of the overcurrent protection can thus perform an instantaneous trip before reclosure via the parameter **Telep/BI**

Switching onto a fault

To achieve fast tripping of the circuit breaker in case of an earth fault, the internal line energization detection can be used. The time overcurrent protection can then trip three-pole without delay or with a reduced delay. It can be determined via parameter setting for which stage(s) the instantaneous tripping following energization applies (refer also to the logic diagrams Figure 2-146, 2-147 and 2-148). This function is independent of the high-current instantaneous tripping described in Section 2.14.

Pickup logic and tripping logic

The pickup signals of the individual phases (or the earth) and of the stages are linked in such a way that both the phase information and the stage which has picked up are indicated (Table 2-12).

Table 2-12 Pickup signals of the single phases

Internal Indication	Display	Output Indication	No.
I>> PU L1 I> PU L1 Ip PU L1 I>>> PU L1	2-146 2-147 2-148	„O/C Pickup L1“	7162
I>> PU L2 I> PU L2 Ip PU L2 I>>> PU L2	2-146 2-147 2-148	„O/C Pickup L2“	7163
I>> PU L3 I> PU L3 Ip PU L3 I>>> PU L3	2-146 2-147 2-148	„O/C Pickup L3“	7164
I>> PU E I> PU E Ip PU E I>>> PU E	2-146 2-147 2-148	„O/C Pickup E“	7165
I>> PU L1 I>> PU L2 I>> PU L3 I>> PU E	2-146 2-146 2-146 2-146	„O/C PICKUP I>>“	7191
I> PU L1 I> PU L2 I> PU L3 I> PU E		„O/C PICKUP I>“	7192
Ip PU L1 Ip PU L2 Ip PU L3 Ip PU E	2-147 2-147 2-147 2-147	„O/C PICKUP Ip“	7193
I>>> PU L1 I>>> PU L2 I>>> PU L3 I>>> PU E	2-148 2-148 2-148 2-148	„I-STUB PICKUP“	7201
(All pickups)		„O/C PICKUP“	7161

For the tripping signals (table 2-13) the stage which caused the tripping is also output. If the device has the option to trip single-pole, and if this option has been activated, the pole which has been tripped is also indicated (refer also to Section 2.24.1 „Tripping Logic of the Entire Device“).

Table 2-13 Trip signals of the single phases

Internal indication	Display	Output indication	No.
I>> TRIP L1 I> TRIP L1 Ip TRIP L1 I>>> TRIP L1 ¹⁾	2-146 2-147 2-148	„O/C TRIP 1p.L1“ or „O/C TRIP L123“	7212 or 7215
I>> TRIP L2 I> TRIP L2 Ip TRIP L2 I>>> TRIP L2 ¹⁾	2-146 2-147 2-148	„O/C TRIP 1p.L2“ or „O/C TRIP L123“	7213 or 7215
I>> TRIP L3 I> TRIP L3 Ip TRIP L3 I>>> TRIP L3 ¹⁾	2-146 2-147 2-148	„O/C TRIP 1p.L3“ or „O/C TRIP L123“	7214 or 7215
I>> TRIP E I> TRIP E Ip TRIP E I>>> TRIP E ²⁾	2-146 2-147 2-148	„O/C TRIP L123“	7215
I>> TRIP L1 I>> TRIP L2 I>> TRIP L3 I>> TRIP E	2-146 2-146 2-146 2-146	„O/C TRIP I>>“	7221
I> TRIP L1 I> TRIP L2 I> TRIP L3 I> TRIP E		„O/C TRIP I>“	7222
Ip TRIP L1 Ip TRIP L2 Ip TRIP L3 Ip TRIP E	2-147 2-147 2-147 2-147	„O/C TRIP Ip“	7223
I>>> TRIP L1 I>>> TRIP L2 I>>> TRIP L3 I>>> TRIP E	2-148 2-148 2-148 2-148	„I-STUB TRIP“	7235
(General TRIP)		„O/C TRIP“	7211

¹⁾ If tripping by the 3I0 measuring unit is performed simultaneously or after tripping by a phase measuring unit and if single-pole tripping is effective, „O/C TRIP 1p.L1“, „O/C TRIP 1p.L2“ or „O/C TRIP 1p.L3“ is signaled.

²⁾ If tripping is only performed by the 3I0 measuring unit but not by a phase measuring unit, „O/C TRIP L123“ is signaled.

2.15.3 Setting Notes

General

During configuration of the scope of functions for the device (address 126) the available characteristics were determined. Depending on the configuration and the order variant, only those parameters that apply to the selected characteristics are accessible in the procedures described below.

If the differential protection and the distance protection operate in parallel in the protective relay, emergency operation will not be activated unless both protection functions have become ineffective. If only one of the two protection functions fails, the other protection function can provide complete protection of the object, so that emergency operation is not yet required in such a case.

Emergency operation is activated if only one of the protection functions (address 115, 116 and 117 = **Disabled** or address 112 **DIFF. PROTECTION = Disabled**) has been configured.

Address 2601 is set according to the desired mode of operation of the overcurrent protection: **Operating Mode = ON** means that the time overcurrent protection operates independently of the other protection functions, i.e. as a backup time overcurrent protection. If it is intended to work only as an emergency function in case of a transmission and/or voltage failure, set **Only Emer. prot.** Finally, it can also be set to **OFF**.

If not all stages are required, each individual stage can be deactivated by setting the pickup threshold to ∞ . But if you set only an associated time delay to ∞ this does not suppress the pickup signals but prevents the timers from running.

The I>> stage is effective even if the operating mode of the time overcurrent protection has been set to **Only Emer. prot** and „>I - STUB ENABLE“ is released.

One or several stages can be set as instantaneous tripping stages when switching onto a fault. This is chosen during the setting of the individual stages (see below). To avoid a spurious pickup due to transient overcurrents, the delay **SOTF Time DELAY** (address 2602) can be set. Typically, the presetting of **0** is correct. A short delay can be useful in case of long cables for which high inrush currents can be expected, or for transformers. The time delay depends on the severity and duration of the transient overcurrents as well as on which stages were selected for the fast switch onto fault clearance.

High-current elements $I_{ph}>>$, $3I_0>>$

The I>> stages **I_{ph}>>** (address 2610) and **3I₀>> PICKUP** (address 2612) together with the I> stages or the I_p stages result in a two-stage characteristic. Of course, all three stages can be combined as well. If one stage is not required, the pickup value has to be set to ∞ . The I>> stages always operates with a defined delay time.

If the I>> stages are used for instantaneous tripping before the automatic reclosure (via CFC interconnection), the current setting corresponds to the I> or I_p stages (see below). In this case only the different delay times are of interest. The times **T I_{ph}>>**(address 2611) and **T 3I₀>>** (address 2613) can then be set to **0** or a very low value, as the fast clearance of the fault takes priority over the selectivity before the automatic reclosure is initiated. These stages have to be blocked before final trip in order to achieve the selectivity.

For very long lines with a small source impedance or on applications with large reactances (e.g. transformers, series reactors), the I>> stages can also be used for current grading. In this case they must be set in such a way that they do not pick up in case of a fault at the end of the line. The times can then be set to **0** or to a small value.

When using a personal computer and DIGSI to apply the settings, these can be optionally entered as primary or secondary values. For settings with secondary values the currents will be converted for the secondary side of the current transformers.

Calculation Example:

110 kV overhead line 150 mm²:

$$s \text{ (length)} = 60 \text{ km}$$

$$R_1/s = 0.19 \text{ } \Omega/\text{km}$$

$$X_1/s = 0.42 \text{ } \Omega/\text{km}$$

Short-circuit power at the beginning of the line:

$$S_k' = 2.5 \text{ GVA}$$

Current Transformer 600 A / 5 A

From that the line impedance Z_L and the source impedance Z_S are calculated:

$$Z_1/s = \sqrt{0.19^2 + 0.42^2} \text{ } \Omega/\text{km} = 0.46 \text{ } \Omega/\text{km}$$

$$Z_L = 0.46 \text{ } \Omega/\text{km} \cdot 60 \text{ km} = 27.66 \text{ } \Omega$$

$$Z_S = \frac{(110 \text{ kV})^2}{2500 \text{ MVA}} = 4.84 \text{ } \Omega$$

The three-phase fault current at the line end is $I_{sc \text{ end}}$:

$$I_{F \text{ end}} = \frac{1.1 \cdot U_N}{\sqrt{3} \cdot (Z_S + Z_L)} = \frac{1.1 \cdot 110 \text{ kV}}{\sqrt{3} \cdot (4.84 \text{ } \Omega + 27.66 \text{ } \Omega)} = 2150 \text{ A}$$

With a safety factor of 10 %, the following primary setting value is calculated:

$$\text{Set value } I_{>>} = 1.1 \cdot 2150 \text{ A} = 2365 \text{ A}$$

or the secondary setting value:

$$\text{Setting value } I_{>>} = 1.1 \cdot \frac{2150 \text{ A}}{600 \text{ A}} \cdot 5 \text{ A} = 19.7 \text{ A}$$

i.e. in case of fault currents exceeding 2365 A (primary) or 19.7A (secondary) you can be sure that a short-circuit has occurred on the protected line. This fault can immediately be cleared by the time overcurrent protection.

Note: the calculation was carried out with absolute values, which is sufficiently precise for overhead lines. If the angles of the source impedance and the line impedance vary considerably, a complex calculation must be carried out.

A similar calculation must be carried out for earth faults, with the maximum earth current occurring at the line end during a short-circuit being decisive.

The set time delays are pure additional delays, which do not include the operating time (measuring time).

The parameter **I>> Telep/BI** (address 2614) defines whether the time delays **T Iph>>** (address 2611) and **T 3IO>>** (address 2613) can be bypassed by the binary input „>0/C InstTRIP“ (No 7110) or by the operational automatic reclosure function. The binary input (if allocated) is applied to all stages of the time overcurrent protection. With **I>> Telep/BI = YES** you define that the I>> stages trip without delay after pickup if the binary input was activated. For **I>> Telep/BI = NO** the set delays are always active.

Instantaneous tripping by the operational auto-reclosure function should only be chosen if the overcurrent protection is set to emergency function. Since the fast main protection function - differential protection and/or distance protection - guarantees a fast and selective tripping with or without auto-reclosure, the overcurrent protection as a back-up protection may not perform a non-selective trip, even before auto-reclosure.

If the **I>>** stage, when switching the line on to a fault, is to trip without delay or with a short delay, **SOTF Time DELAY** (address 2602, see above under margin heading „General“), the parameter **I>> SOTF** (address 2615) is set to **YES**. Any other stage can be selected as well for this instantaneous tripping.

Overcurrent stages **I_{ph}>, 3I₀> in definite-time overcurrent-time protection**

For the setting of the current pickup value, **I_{ph}>** (address 2620), the maximum operating current is most decisive. Pickup due to overload should never occur, since the device in this operating mode operates as fault protection with correspondingly short tripping times and not as overload protection. For this reason, a pickup value of about 10 % above the expected peak load is recommended for line protection, and a setting of about 20 % above the expected peak load is recommended for transformers and motors.

When using a personal computer and DIGSI to apply the settings, these can be optionally entered as primary or secondary values. For settings with secondary values the currents will be converted for the secondary side of the current transformers.

Calculation Example:

110 kV overhead line 150 mm²

maximum transmittable power

$$P_{\max} = 120 \text{ MVA}$$

corresponding to

$$I_{\max} = 630 \text{ A}$$

Current Transformer 600 A / 5 A

Safety factor 1.1

With settings in primary quantities the following setting value is calculated:

$$\text{Set value } I> = 1.1 \cdot 630 \text{ A} = 693 \text{ A}$$

With settings in secondary quantities the following setting value is calculated:

$$\text{Setting value } I> = 1.1 \cdot \frac{630 \text{ A}}{600 \text{ A}} \cdot 5 \text{ A} = 5.8 \text{ A}$$

The earth current stage **3I₀>** (address 2622) should be set to detect the smallest earth fault current to be expected.

The time delay **T I_{ph}>** (address 2621) results from the time grading schedule designed for the network. For the use as emergency overcurrent protection shorter delay times make sense (one grading time step above instantaneous tripping), since this function is to work only in case of a failure of the main protection functions, i.e. differential and/or distance protection.

The time **T 3I₀>** (address 2623) can normally be set shorter, according to a separate time grading schedule for earth currents.

The set times are mere additional delays for the independent stages, which do not include the inherent operating time of the protection. If only the phase currents are to be monitored, set the pickup value of the earth fault stage to ∞ .

The parameter **I> Telep/BI** (address 2624) defines whether the time delays **T I_{ph}>** (address 2621) and **T 3I₀>** (address 2623) can be bypassed by the binary input „>0/C InstTRIP“. The binary input (if allocated) is applied to all stages of the time-overcurrent protection. With **I> Telep/BI = YES** you define that the **I>** stages trip without delay after pickup if the binary input was activated. For **I> Telep/BI = NO** the set delays are always active.

Instantaneous tripping by the operational auto-reclosure function should only be chosen if the overcurrent protection is set to emergency function. Since the fast main protection function - differential protection and/or distance protection - guarantees a fast and selective tripping with or without auto-reclosure, the overcurrent protection as a back-up protection may not perform a non-selective trip, even before auto-reclosure.

If the I> stage, when switching the line on to a fault, is to trip without delay or with a short delay, **SOTF Time DELAY** (address 2602, see above under margin heading „General“), the parameter **I> SOTF** (address 2625) is set to **YES**. We recommend, however, not to choose the sensitive setting for the switch on to a fault function as energizing of the line on to a fault should cause a large fault current. It is important to avoid that the selected stage picks up due to transients during line energization.

Overcurrent stages I_p, 3I_{0p} in inverse- time overcurrent protection with IEC characteristics

In the case of time inverse overcurrent stages, various characteristics can be selected, depending on the ordering version of the device and the configuration (address 126), with IEC characteristics (address 126 **Back-Up 0/C = TOC IEC**) the following options are available in address 2660 **IEC Curve**:

Normal Inverse (inverse, type A according to IEC 60255-3),

Very Inverse (very inverse, type B according to IEC 60255-3),

Extremely Inv. (extremely inverse, type C according to IEC 60255-3), and

LongTimeInverse (longtime, type B according to IEC 60255-3).

The characteristics and equations they are based on are listed in the „Technical Data“.

For the setting of the current thresholds **Ip>** (address 2640) and **3I0p PICKUP** (address 2650) the same considerations as for the overcurrent stages of the definite time protection (see above) apply. In this case, it must be noted that a safety margin between the pickup threshold and the set value has already been incorporated. Pickup only occurs at a current which is approximately 10% above the set value.

The above example shows that the maximum expected operating current may directly be applied as setting here.

Primary: Set value IP = 630 A,

Secondary: Set value IP = 5.25 A, i.e. (630 A/600 A) X 5 A.

The time multiplier **T Ip Time Dial** (address 2642) derives from the time grading schedule set for the network. For the use as emergency overcurrent protection shorter delay times make sense (one grading time step above instantaneous tripping), since this function is to work only in case of a failure of the main protection functions, i.e. differential and/or distance protection.

The time multiplier setting **T 3I0p TimeDial** (address 2652) can usually be set smaller according to a separate earth fault grading plan. If only the phase currents are to be monitored, set the pickup value of the earth fault stage to ∞.

In addition to the current-dependent delays, a time fixed delay can be set, if necessary. The settings **T Ip Add** (address 2646 for phase currents) and **T 3I0p Add** (address 2656 for earth currents) are in addition to the time delays resulting from the set curves.

The parameter **I(3I0)p Tele/BI** (address 2670) defines whether the time delays **T Ip Time Dial** (address 2642), including the additional delay **T Ip Add** (address 2646), and **T 3I0p TimeDial** (address 2652), including the additional delay **T 3I0p Add** (address 2656), can be bypassed by the binary input „>0/C InstTRIP“ (No. 7110). The binary input (if allocated) is applied to all stages of the time-overcurrent protection. With **I(3I0)p Tele/BI = YES** you define that the IP stages trip

without delay after pickup if the binary input was activated. For **I(3I0)p Tele/BI = NO** the set delays are always active.

Instantaneous tripping by the operational auto-reclosure function should only be chosen if the overcurrent protection is set to emergency function. Since the fast main protection function - differential protection and/or distance protection - guarantees a fast and selective tripping with or without auto-reclosure, the overcurrent protection as a back-up protection may not perform a non-selective trip, even before auto-reclosure.

If the IP stage, when switching the line on to a fault, is to trip without delay or with a short delay, **SOTF Time DELAY** (address 2602, see above under margin heading „General“), the parameter **I(3I0)p SOTF** (address 2671) is set to **YES**. We recommend, however, not to choose the sensitive setting for the switch on to a fault function as energizing of the line on to a fault should cause a large fault current. It is important to avoid that the selected stage picks up due to transients during line energization.

Overcurrent stages **I_p, 3I_{0p} in inverse-time overcurrent protection with ANSI characteristics**

In the case of the inverse overcurrent stages, various characteristics can be selected, depending on the ordering version of the device and the configuration (address 126). With the ANSI characteristics (address 126 **Back-Up 0/C = TOC ANSI**), the following options are available at address 2661 **ANSI Curve**:

Inverse,
Short Inverse,
Long Inverse,
Moderately Inv.,
Very Inverse,
Extremely Inv. and
Definite Inv..

The characteristics and equations they are based on are listed in the „Technical Data“.

For the setting of the current thresholds **Ip>** (address 2640) and **3I0p PICKUP** (address 2650) the same considerations as for the overcurrent stages of the definite time protection (see above) apply. In this case, it must be noted that a safety margin between the pickup threshold and the set value has already been incorporated. Pickup only occurs at a current which is approximately 10°% above the set value.

The above example shows that the maximum expected operating current may directly be applied as setting here.

Primary: Set value IP = 630 A,

Secondary: Setting value IP = 5.25 A, i.e. (630 A/600 A) X 5 A.

The time multiplier **Time Dial TD Ip** (address 2643) derives from the time grading schedule set for the network. For the use as emergency overcurrent protection shorter delay times make sense (one grading time step above instantaneous tripping), since this function is to work only in case of a failure of the main protection functions, i.e. differential and/or distance protection.

The time multiplier setting **TimeDial TD3I0p** (address 2653) can usually be set smaller according to a separate earth fault grading plan. If only the phase currents are to be monitored, set the pickup value of the earth fault stage to ∞.

In addition to the current-dependent delays, a delay of constant length can be set, if necessary. The setting **T Ip Add** (address 2646 for phase currents) and **T 3I0p Add** (address 2656 for earth currents) are in addition to the time delays resulting from the set curves.

The parameter **I(3IO)p Tele/BI** (address 2670) defines whether the time delays **Time Dial TD Ip** (address 2643), including the additional delay **T Ip Add** (address 2646), and **TimeDial TD3IOp** (address 2653), including the additional delay **T 3IOp Add** (address 2656), can be bypassed by the binary input „>O/C InstTRIP“ (No. 7110). The binary input (if allocated) is applied to all stages of the time-overcurrent protection. With **I(3IO)p Tele/BI = YES** you define that the IP stages trip without delay after pickup if the binary input was activated. For **I(3IO)p Tele/BI = NO** the set delays are always active.

Instantaneous tripping by the operational auto-reclosure function should only be chosen if the overcurrent protection is set to emergency function. Since the fast main protection function - differential protection and/or distance protection - guarantees a fast and selective tripping with or without auto-reclosure, the overcurrent protection as a back-up protection may not perform a non-selective trip, even before auto-reclosure.

If the IP stage, when switching the line on to a fault, is to trip without delay or with a short delay, **SOTF Time DELAY** (address 2602, see above under margin heading „General“), the parameter **I(3IO)p SOTF** (address 2671) is set to **YES**. We recommend, however, not to choose the sensitive setting for the switch on to a fault function as energizing of the line on to a fault should cause a large fault current. It is important to avoid that the selected stage picks up due to transients during line energization.

Additional stage I_{ph}>>>

The I-STUB stage can be used as an additional definite time overcurrent stage since it operates independently of the other stages. In this case, the enable input „>I - STUB ENABLE“ (No. 7131) must be activated permanently (via a binary input or CFC).

Since the I-STUB stage has an additional enable input, it is also suitable e.g. as an emergency stage if the remaining stages are used as backup stages. The enable input „>I - STUB ENABLE“ (No. 7131) is then assigned the output signal „Emer. mode“ (No. 2054) (either via binary outputs and inputs or via the user-definable CFC logic functions).

The considerations when using the I-STUB stage as an emergency function are the same as for the I> stages. The setting value **Iph> STUB** (address 2630) must here too be higher than the maximum operational current to be expected, in order to avoid pickup without fault. The delay **T Iph STUB** (address 2631), however, can be shorter than defined in the time grading schedule since this stage works only in emergency operation, i.e. in case of a communication failure of the differential protection or a local measurement voltage failure of the distance protection. Normally, one grading time above the base time of the differential protection is sufficient.

Accordingly, the earth current stage **3IO> STUB** (address 2632) should pick up on the smallest earth current to be expected during an earth fault and the delay **T 3IO STUB** (address 2633) should exceed the base time of the differential protection by one grading time. If only the phase currents are to be monitored, set the pickup value of the earth current stage to ∞ .

The I-STUB stage can also be accelerated by the release signal „>O/C InstTRIP“ (No. 7110), e.g. before an auto-reclosure. This is defined with parameter **I-STUB Telep/BI** (address 2634). Set it to **YES** if the I-STUB stage is to trip without delay while the binary input „>O/C InstTRIP“ is activated or the internal automatic reclosure function is ready to operate.

Instantaneous tripping by the operational automatic reclosure should only be chosen if the I-STUB stage is set as an emergency function. If the main protective function - differential and/or distance protection - is out of operation, this emergency stage ensures instantaneous tripping before automatic reclosure.

Instantaneous tripping when the line is switched onto a fault is also possible with the I-STUB stage. Set the parameter **I - STUB SOTF** (address 2635) to **YES** if instantaneous tripping is desired.

2.15.4 Settings

The table indicates region-specific presettings. Column C (configuration) indicates the corresponding secondary nominal current of the current transformer.

Addr.	Parameter	C	Setting Options	Default Setting	Comments
2601	Operating Mode		ON Only Emer. prot OFF	ON	Operating mode
2602	SOTF Time DELAY		0.00 .. 30.00 sec	0.00 sec	Trip time delay after SOTF
2610	lph>>	1A	0.10 .. 25.00 A; ∞	2.00 A	lph>> Pickup
		5A	0.50 .. 125.00 A; ∞	10.00 A	
2611	T lph>>		0.00 .. 30.00 sec; ∞	0.30 sec	T lph>> Time delay
2612	3l0>> PICKUP	1A	0.05 .. 25.00 A; ∞	0.50 A	3l0>> Pickup
		5A	0.25 .. 125.00 A; ∞	2.50 A	
2613	T 3l0>>		0.00 .. 30.00 sec; ∞	2.00 sec	T 3l0>> Time delay
2614	l>> Telep/BI		NO YES	YES	Instantaneous trip via Tele-prot./BI
2615	l>> SOTF		NO YES	NO	Instantaneous trip after SwitchOnToFault
2620	lph>	1A	0.10 .. 25.00 A; ∞	1.50 A	lph> Pickup
		5A	0.50 .. 125.00 A; ∞	7.50 A	
2621	T lph>		0.00 .. 30.00 sec; ∞	0.50 sec	T lph> Time delay
2622	3l0>	1A	0.05 .. 25.00 A; ∞	0.20 A	3l0> Pickup
		5A	0.25 .. 125.00 A; ∞	1.00 A	
2623	T 3l0>		0.00 .. 30.00 sec; ∞	2.00 sec	T 3l0> Time delay
2624	l> Telep/BI		NO YES	NO	Instantaneous trip via Tele-prot./BI
2625	l> SOTF		NO YES	NO	Instantaneous trip after SwitchOnToFault
2630	lph> STUB	1A	0.10 .. 25.00 A; ∞	1.50 A	lph> STUB Pickup
		5A	0.50 .. 125.00 A; ∞	7.50 A	
2631	T lph STUB		0.00 .. 30.00 sec; ∞	0.30 sec	T lph STUB Time delay
2632	3l0> STUB	1A	0.05 .. 25.00 A; ∞	0.20 A	3l0> STUB Pickup
		5A	0.25 .. 125.00 A; ∞	1.00 A	
2633	T 3l0 STUB		0.00 .. 30.00 sec; ∞	2.00 sec	T 3l0 STUB Time delay
2634	I-STUB Telep/BI		NO YES	NO	Instantaneous trip via Tele-prot./BI
2635	I-STUB SOTF		NO YES	NO	Instantaneous trip after SwitchOnToFault

Addr.	Parameter	C	Setting Options	Default Setting	Comments
2640	Ip>	1A	0.10 .. 4.00 A; ∞	∞ A	Ip> Pickup
		5A	0.50 .. 20.00 A; ∞	∞ A	
2642	T Ip Time Dial		0.05 .. 3.00 sec; ∞	0.50 sec	T Ip Time Dial
2643	Time Dial TD Ip		0.50 .. 15.00 ; ∞	5.00	Time Dial TD Ip
2646	T Ip Add		0.00 .. 30.00 sec	0.00 sec	T Ip Additional Time Delay
2650	3I0p PICKUP	1A	0.05 .. 4.00 A; ∞	∞ A	3I0p Pickup
		5A	0.25 .. 20.00 A; ∞	∞ A	
2652	T 3I0p TimeDial		0.05 .. 3.00 sec; ∞	0.50 sec	T 3I0p Time Dial
2653	TimeDial TD3I0p		0.50 .. 15.00 ; ∞	5.00	Time Dial TD 3I0p
2656	T 3I0p Add		0.00 .. 30.00 sec	0.00 sec	T 3I0p Additional Time Delay
2660	IEC Curve		Normal Inverse Very Inverse Extremely Inv. LongTimeInverse	Normal Inverse	IEC Curve
2661	ANSI Curve		Inverse Short Inverse Long Inverse Moderately Inv. Very Inverse Extremely Inv. Definite Inv.	Inverse	ANSI Curve
2670	I(3I0)p Tele/BI		NO YES	NO	Instantaneous trip via Teleprot./BI
2671	I(3I0)p SOTF		NO YES	NO	Instantaneous trip after SwitchOnToFault

2.15.5 Information List

No.	Information	Type of Information	Comments
7104	>BLOCK O/C I>>	SP	>BLOCK Backup OverCurrent I>>
7105	>BLOCK O/C I>	SP	>BLOCK Backup OverCurrent I>
7106	>BLOCK O/C Ip	SP	>BLOCK Backup OverCurrent Ip
7107	>BLOCK O/C Ie>>	SP	>BLOCK Backup OverCurrent Ie>>
7108	>BLOCK O/C Ie>	SP	>BLOCK Backup OverCurrent Ie>
7109	>BLOCK O/C Iep	SP	>BLOCK Backup OverCurrent Iep
7110	>O/C InstTRIP	SP	>Backup OverCurrent InstantaneousTrip
7130	>BLOCK I-STUB	SP	>BLOCK I-STUB
7131	>I-STUB ENABLE	SP	>Enable I-STUB-Bus function
7132	>BLOCK O/Cle>>>	SP	>BLOCK Backup OverCurrent Ie>>>
7151	O/C OFF	OUT	Backup O/C is switched OFF
7152	O/C BLOCK	OUT	Backup O/C is BLOCKED
7153	O/C ACTIVE	OUT	Backup O/C is ACTIVE
7161	O/C PICKUP	OUT	Backup O/C PICKED UP

No.	Information	Type of Information	Comments
7162	O/C Pickup L1	OUT	Backup O/C PICKUP L1
7163	O/C Pickup L2	OUT	Backup O/C PICKUP L2
7164	O/C Pickup L3	OUT	Backup O/C PICKUP L3
7165	O/C Pickup E	OUT	Backup O/C PICKUP EARTH
7171	O/C PU only E	OUT	Backup O/C Pickup - Only EARTH
7172	O/C PU 1p. L1	OUT	Backup O/C Pickup - Only L1
7173	O/C Pickup L1E	OUT	Backup O/C Pickup L1E
7174	O/C PU 1p. L2	OUT	Backup O/C Pickup - Only L2
7175	O/C Pickup L2E	OUT	Backup O/C Pickup L2E
7176	O/C Pickup L12	OUT	Backup O/C Pickup L12
7177	O/C Pickup L12E	OUT	Backup O/C Pickup L12E
7178	O/C PU 1p. L3	OUT	Backup O/C Pickup - Only L3
7179	O/C Pickup L3E	OUT	Backup O/C Pickup L3E
7180	O/C Pickup L31	OUT	Backup O/C Pickup L31
7181	O/C Pickup L31E	OUT	Backup O/C Pickup L31E
7182	O/C Pickup L23	OUT	Backup O/C Pickup L23
7183	O/C Pickup L23E	OUT	Backup O/C Pickup L23E
7184	O/C Pickup L123	OUT	Backup O/C Pickup L123
7185	O/C PickupL123E	OUT	Backup O/C Pickup L123E
7191	O/C PICKUP I>>	OUT	Backup O/C Pickup I>>
7192	O/C PICKUP I>	OUT	Backup O/C Pickup I>
7193	O/C PICKUP Ip	OUT	Backup O/C Pickup Ip
7201	I-STUB PICKUP	OUT	O/C I-STUB Pickup
7211	O/C TRIP	OUT	Backup O/C General TRIP command
7212	O/C TRIP 1p.L1	OUT	Backup O/C TRIP - Only L1
7213	O/C TRIP 1p.L2	OUT	Backup O/C TRIP - Only L2
7214	O/C TRIP 1p.L3	OUT	Backup O/C TRIP - Only L3
7215	O/C TRIP L123	OUT	Backup O/C TRIP Phases L123
7221	O/C TRIP I>>	OUT	Backup O/C TRIP I>>
7222	O/C TRIP I>	OUT	Backup O/C TRIP I>
7223	O/C TRIP Ip	OUT	Backup O/C TRIP Ip
7235	I-STUB TRIP	OUT	O/C I-STUB TRIP

2.16 Automatic Reclosure Function (optional)

Experience shows that about 85% of the arc faults on overhead lines are extinguished automatically after being tripped by the protection. The line can therefore be re-energised. Reclosure is performed by an automatic reclose function (AR).

Automatic reclosure is only permitted on overhead lines because the option of automatic extinguishing of a fault arc only exists there. It should not be used in any other case. If the protected object consists of a mixture of overhead lines and other equipment (e.g. overhead line directly connected to a transformer or overhead line/cable), it must be ensured that reclosure can only be performed in the event of a fault on the overhead line.

If the circuit breaker poles can be operated individually, a single-pole automatic reclosure is usually initiated in the case of single-phase faults and a three-pole automatic reclosure in the case of multi-phase faults in the network with earthed system star point. If the fault still exists after reclosure (arc not extinguished or metallic short-circuit), the protection issues a final trip. In some systems several reclosing attempts are performed.

In the model with single-pole tripping the 7SD5 allows phase-selective single-pole tripping. A single- and three-pole, one- and multi-shot automatic reclosure is integrated depending on the order variant.

The 7SD5 can also operate in conjunction with an external automatic reclosure device. In this case, the signal exchange between 7SD5 and the external reclosure device must be effected via binary inputs and outputs.

It is also possible to initiate the integrated auto reclose function by an external protection device (e.g. a backup protection). The use of two 7SD5 with automatic reclosure function or the use of one 7SD5 with an automatic reclosure function and a second protection with its own automatic reclosure function is also possible.

2.16.1 Functional Description

Reclosure is performed by an automatic reclosure circuit (ARC). An example of the normal time sequence of a double reclosure is shown in the figure below.

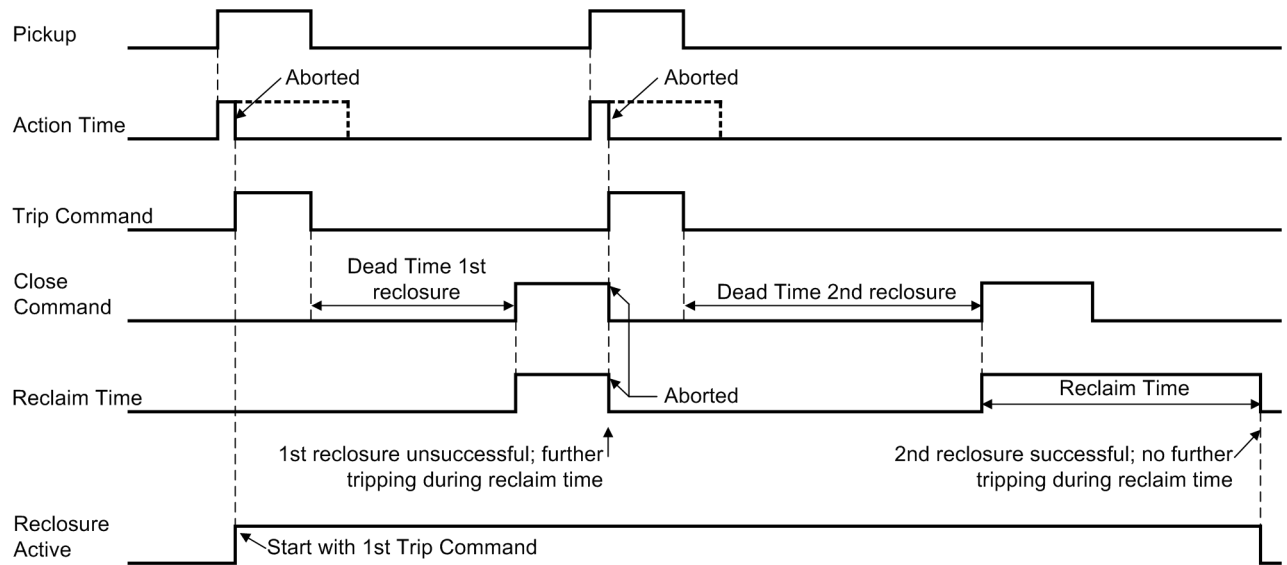


Figure 2-149 Timing diagram of a double-shot reclosure with action time (2nd reclosure successful)

The integrated automatic reclosure function allows up to 8 reclosure attempts. The first four reclose cycles may operate with different parameters (action and dead times, single-/three-pole). The parameters of the fourth cycle apply to the fifth cycle and onwards.

Activation and deactivation

The automatic reclosure function can be switched on and off by means of the parameter 3401 **AUTO RECLOSE**, via the system interface (if available) and via binary inputs (if allocated). The switch states are saved internally (refer to Figure 2-150) and secured against loss of auxiliary supply. It is only possible to switch on from the source from where it had previously been switched off. To be active, it is necessary that the function is switched on from all three switching sources.

Alteration of the switching state via setting or system interface is not possible during a running fault.

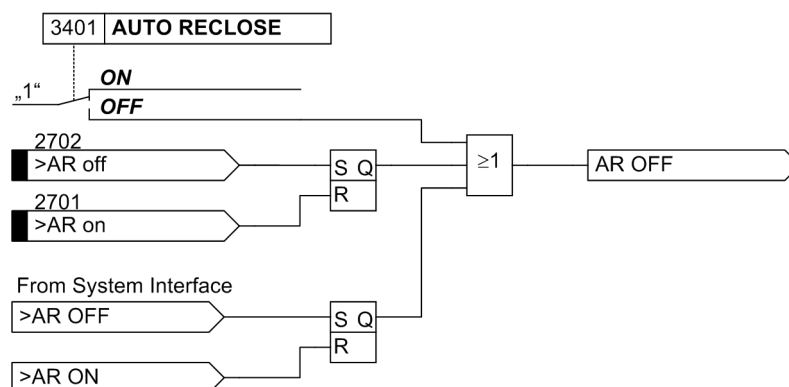


Figure 2-150 Activation and deactivation of the auto-reclosure function

Selectivity before reclosure

In order for the automatic reclosure to be successful, all faults on the entire overhead line must be cleared at all line ends simultaneously — as fast as possible.

This is the usual case in differential protection schemes because the strict selective zone definition of the protected object by the current transformer sets always allows non-delayed tripping.

In the distance protection, for example, the overreach zone Z1B may be released before the first reclosure. This implies that faults up to the zone reach limit of Z1B are tripped without delay for the first cycle (Figure 2-151). A limited unselectivity in favour of fast simultaneous tripping is accepted here because a reclosure will be performed in any case. The normal stages of the distance protection (Z1, Z2, etc.) and the normal grading of the other short-circuit functions are independent of the automatic reclosure function.

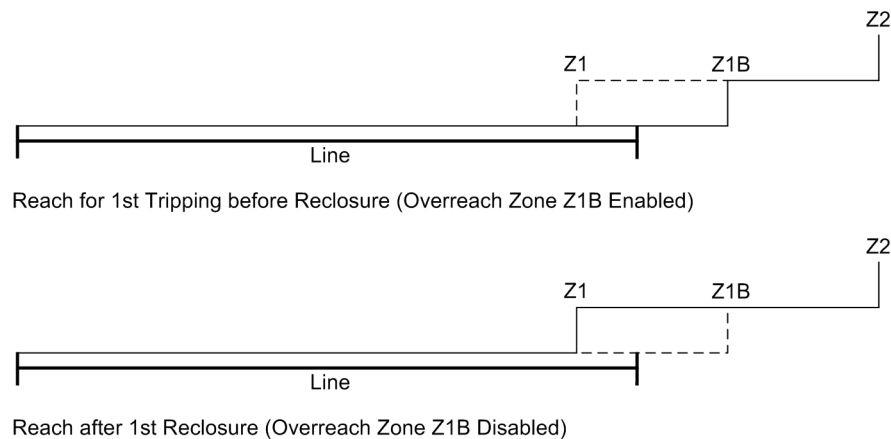


Figure 2-151 Reach control before first reclosure, using distance protection

If the distance protection is operated with one of the signal transmission methods described in Section 2.7 the signal transmission logic controls the overreaching zone, i.e. it determines whether a non-delayed trip (or delayed with T1B) is permitted in the event of faults in the overreaching zone (i.e. up to the reach limit of zone Z1B) at both line ends simultaneously. Whether the automatic reclosure device is ready for reclosure or not is irrelevant, because the teleprotection function ensures the selectivity over 100% of the line length and fast, simultaneous tripping. The same applies for the earth fault-direction comparison protection (Section 2.9).

If, however, the signal transmission is switched off or the transmission path is disturbed, the internal automatic reclosure circuit can determine whether the overreaching zone (Z1B in the distance protection) is released for fast tripping. If no reclosure is expected (e.g. circuit breaker not ready) the normal grading of the distance protection (i.e. fast tripping only for faults in zone Z1) must apply to retain selectivity.

However, fast tripping of the protection may also be desired before reclosure after tripping by other short-circuit protection functions. For this purpose, every short-circuit protection which can start the automatic reclosure function has the possibility of initiating non-delayed tripping in at least one stage when the automatic reclosure function is ready for the first reclosure cycle. Please note, however, that fast, non-selective tripping should be avoided as long as the differential protection works properly: there should be no non-delayed tripping of the distance protection as the second main protection function, even if there is an automatic reclosure.

Fast tripping before reclosure is also possible with multiple reclosures. Appropriate links between the output signals (e.g. 2nd reclosure ready: „AR 2.CycZoneRel“) and the inputs for enabling/releasing non-delayed tripping of the protection functions

can be established via the binary inputs and outputs or the integrated user-definable logic functions (CFC).

Mixed Lines Overhead Line/Cable

In the distance protection, it is possible to use the distance zone signals to distinguish between cable and overhead line faults to a certain extent. The automatic reclosure circuit can then be blocked by appropriate signals generated by means of the user-programmable logic functions (CFC) if there is a fault in the cable section.

Initiation

Initiation of the automatic reclosure means storing the first trip signal of a power system fault that was generated by a protection function which operates with the automatic reclosure function. In case of multiple reclosure, initiation therefore only takes place once, with the first trip command. This storing of the first trip signal is the prerequisite for all subsequent activities of the automatic reclosure function. The starting is important when the first trip command has not appeared before expiry of an action time (see below under „Action times“).

Automatic reclosure is not started if the circuit breaker has not been ready for at least one OPEN-CLOSE-OPEN-cycle at the instant of the first trip command. This can be achieved by setting parameters. For further information, please refer to „Interrogation of Circuit Breaker Ready State“.

Each short-circuit protection function can be parameterized as to whether it should operate with the automatic reclose function or not, i.e. whether it should start the reclose function or not. The same goes for external trip commands applied via binary input and/or the trip commands generated by the teleprotection via permissive or intertrip signals.

Those protection and monitoring functions in the device which do not respond to short-circuits or similar conditions (e.g. an overload protection) do not initiate the automatic reclosure function because a reclosure will be of no use here. The breaker failure protection must not start the auto-reclosure either.

Action Times

It is often desirable to neutralise the ready-for-reclosure-state if the short-circuit condition was sustained for a certain time, e.g. because it is assumed that the arc has burned in to such an extent that there is no longer any chance of automatic arc extinction during the reclose dead time. Also for the sake of selectivity (see above), faults that are usually cleared after a time delay should not lead to reclosure. It is therefore recommended to use action times in conjunction with the distance protection.

The automatic reclosure function of the 7SD5 can be operated with or without action times (configuration parameter **AR control mode**, address 134, see Section 2.1.1.3). No starting signal is necessary from the protection functions or external protection devices that operate without action time. Initiation takes place as soon as the first trip command appears.

When operating with action time, an action time is available for each reclose cycle. The action times are always started by the general starting signal (with logic OR combination of all internal and external protection functions which can start the automatic reclose function). If no trip command is present before the action time expires, the corresponding reclosure cycle is not carried out.

For each reclosure cycle, you may set whether or not it allows the initiation. Following the first general pickup, only the action times of those cycles that are set such that they may start off the recloser are considered since the other cycles are not allowed to be the first cycle under any circumstances. By means of the action times and the permission to start the recloser (permission to be the first cycle that is executed) it is possible

to determine which reclose cycles are executed depending on the time used by the protection function to trip.

Example 1: 3 cycles are set. Starting of the auto-reclosure is allowed for at least the first cycle. The action times are set as follows:

- 1st Reclosure: T Action = 0.2 s;
- 2nd Reclosure: T Action = 0.8 s;
- 3rd Reclosure: T Action = 1.2 s;

Since reclosure is ready before the fault occurs, the first trip of a time overcurrent protection following a fault is fast, i.e. before the end of any action time. The automatic reclosure function is therefore started (the first cycle is initiated). After unsuccessful reclosure the 2nd cycle would then become active; but the time overcurrent protection would not trip in this example until after 1s according to its grading time. Since the action time for the second cycle was exceeded here, it is blocked. The 3rd cycle with its parameters is therefore carried out now. If the trip command only appeared more than 1.2s after the 1st reclosure, there would have been no further reclosure.

Example 2: 3 cycles are set. Starting is only allowed for the first. The action times are set as in example 1. The first protection trip takes place 0.5 s after starting. Since the action time for the 1st cycle has already expired at this time, this cannot start the automatic reclose function. As the 2nd and 3rd cycles are not permitted to start the reclose function they will also not be initiated. Therefore no reclosure takes place as no starting took place.

Example 3: 3 cycles are set. At least the first two cycles are set such that they can start the recloser. The action times are set as in example 1. The first protection trip takes place 0.5 s after starting. Since the action time for the 1st cycle has already expired at this time, it cannot start the automatic reclosure function, but the 2nd cycle, for which initiating is allowed, is activated immediately. This 2nd cycle therefore starts the automatic reclosure circuit, the 1st cycle is practically skipped.

Operating modes of the automatic reclosure

The dead times — these are the times from elimination of the fault (drop off of the trip command or signalling via auxiliary contacts) to the initiation of the automatic close command — may vary depending on the automatic reclosure operating mode selected when determining the function scope and the resulting signals of the starting protective functions.

In control mode **TRIP . . .** (With TRIP command ...) single-pole or single-/three-pole reclose cycles are possible if the device and the circuit breaker are suitable. In this case, different dead times (for every AR cycle) are possible after single-pole tripping and after three-pole tripping. The protective function that issues the trip command determines the type of trip: Single-pole or three-pole. The dead time is controlled dependent on this.

In control mode **PICKUP . . .** (With PICKUP...) different dead times can be set for every reclose cycle after single-, two- and three-phase faults. Here the decisive factor is the pickup diagram of the protective functions at the instant the trip command disappears. This mode enables to make the dead times dependent on the type of fault in the case of three-pole reclose cycles.

Blocking reclosure

Different conditions lead to blocking of the automatic reclosure. No reclosure is possible, for example, if it is blocked via a binary input. If the automatic reclosure has not yet been started, it cannot be started at all. If a reclosure cycle is already in progress, dynamic blocking takes place (see below).

Each individual cycle may also be blocked via binary input. In this case the cycle concerned is declared as invalid and will be skipped in the sequence of permissible cycles. If blocking takes place while the cycle concerned is already running, this leads to aborting of the reclosure, i.e. no reclosure takes place even if other valid cycles have been parameterized.

Internal blocking signals, with a limited duration, arise during the course of the reclose cycles:

The blocking time **T-RECLAIM** (address 3403) is started with each automatic reclosure command. The only exception is the ADT mode where the blocking time can be disabled by setting it to 0 s. If the reclosure is successful, all functions of the automatic reclosure return to the idle state at the end of the blocking time; a fault after expiry of the blocking time is treated as a new fault in the power system. If the blocking time is disabled in ADT mode, each new trip after reclosing is considered as a new fault. If one of the protective functions causes another trip during the blocking time, the next reclosure cycle will be started if multiple reclosure has been set. If no further reclosure attempts are permitted, the last reclosure is regarded as unsuccessful in case of another trip during the blocking time. The automatic reclosure is blocked dynamically.

The dynamic lock-out locks the reclosure for the duration of the dynamic lock-out time (0.5 s). This occurs, for example, after a final tripping or other events which block the auto reclose function after it has been started. Restarting is locked out for this time. When this time expires, the automatic reclosure function returns to its quiescent state and is ready for a new fault in the network.

If the circuit breaker is closed manually (by the control discrepancy switch connected to a binary input, the local control functions or via one of the serial interfaces), the automatic reclosure is blocked for a manual-close-blocking time **T-BLOCK MC**, address 3404. If a trip command occurs during this time, it can be assumed that a metallic short-circuit is present (e.g. closed earth switch). Every trip command within this time is therefore final. With the user definable logic functions (CFC) further control functions can be processed in the same way as a manual-close command.

Interrogation of the Circuit Breaker Ready State

A precondition for automatic reclosure following clearance of a short-circuit is that the circuit breaker is ready for at least one OPEN-CLOSE-OPEN-cycle when the automatic reclosure circuit is started (i.e. at the time of the first trip command). The readiness of the circuit breaker is signalled to the device via the binary input „>CB1 Ready“ (No. 371). If no such signal is available, the circuit-breaker interrogation can be suppressed (presetting of address 3402) as automatic reclosure would otherwise not be possible at all.

In the event of a single cycle reclosure this interrogation is usually sufficient. Since, for example, the air pressure or the spring tension for the circuit breaker mechanism drops after the trip, no further interrogation should take place.

Especially when multiple reclosing attempts are programmed, it is recommended to monitor the circuit breaker condition not only prior to the first, but also before each following reclosing attempt. Reclosure will be blocked until the binary input indicates that the circuit breaker is ready to complete another CLOSE-TRIP cycle.

The time needed by the circuit breaker to regain the ready state can be monitored by the 7SD5. This monitoring time **CB TIME OUT** (address 3409) starts as soon as the CB indicates the not ready state. The dead time may be extended if the ready state is not indicated when it expires. However, if the circuit breaker does not indicate its ready status for a longer period than the monitoring time, reclosure is dynamically blocked (see also above under margin heading „Reclosure Blocking“).

Processing the circuit breaker auxiliary contacts

If the circuit breaker auxiliary contacts are connected to the device, the reaction of the circuit breaker is also checked for plausibility.

In the case of single-pole tripping this applies to each individual breaker pole. This assumes that the auxiliary contacts are connected to the appropriate binary inputs for each pole („>CB1 Pole L1“, No. 366; „>CB1 Pole L2“, No. 367; „>CB1 Pole L3“, No. 368).

If, instead of the individual pole auxiliary contacts, the series connections of the normally open and normally closed contacts are used, the CB is assumed to have all three poles open when the series connection of the normally closed contacts is closed (binary input „>CB1 3p Open“, No. 411). All three poles are assumed closed when the series connection of the normally open contacts is closed (binary input „>CB1 3p Closed“, No. 410). If none of these input indications is active, it is assumed that the breaker is open at one pole (even if this condition also exists theoretically when two poles are open).

The device continuously checks the position of the circuit breaker: As long as the auxiliary contacts indicate that the CB is not closed (three-pole), the automatic reclosure function cannot be started. This ensures that a close command can only be issued if the CB has previously tripped (out of the closed state).

The valid dead time begins when the trip command disappears or signals taken from the CB auxiliary contacts indicate that the CB (pole) has opened and that the trip command has disappeared.

If, after a **single-pole** trip command, the CB has opened **three-pole**, this is considered as a three-pole tripping. If three-pole reclose cycles are allowed, the dead time for three-pole tripping becomes active in the **operating mode with trip command** (see margin heading „Operating modes of the automatic reclosure“, above); in control by pickup the pickup diagram of the starting protective function(s) still applies. If three-pole cycles are not allowed, the reclosure is blocked dynamically. The trip command was final.

The latter also applies if the CB trips two poles following a single-pole trip command. The device can only detect this if the auxiliary contacts of each pole are connected individually. The device immediately initiates three pole coupling which results in a three-pole trip command.

If the CB auxiliary contacts indicate that at least one further pole has opened during the dead time after single-pole tripping, a three-pole reclose cycle is initiated with the dead time for three-pole reclosure provided that this is permitted. If the auxiliary contacts are connected for each pole individually, the device can detect a two-pole open CB. In this case the device immediately sends a three-pole trip command provided that the forced three-pole trip is activated (see Section 2.16.2 at margin heading „Forced three-pole trip“).

Sequence of a three-pole reclose cycle

If the automatic reclosure function is ready, the fault protection trips three-pole for all faults inside the stage selected for reclosure. The automatic reclosure function is started. When the trip command resets or the circuit breaker opens (auxiliary contact criterion) a(n) (adjustable) dead time starts. At the end of this dead time, the circuit breaker receives a close command. At the same time, the (adjustable) blocking time is started. If, when configuring the protective functions, at address 134 **AR control mode = with Pickup** was set, different dead times can be parameterised depending on the type of fault recognised by the protection.

If the fault is cleared (successful reclosure), the reclaim time expires and all functions return to their quiescent state. The fault is cleared.

If the fault has not been eliminated (unsuccessful reclosure), the short-circuit protection initiates a final trip following a protection stage active without reclosure. Any fault during the reclaim time leads to a final trip.

After unsuccessful reclosure (final tripping) the automatic reclosure is blocked dynamically (see also margin heading „Reclose Block“, above).

The sequence above applies for single reclosure cycles. In 7SD5 multiple reclosure (up to 8 shots) is also possible (see below).

Sequence of a single-pole reclose cycle

Single-pole reclose cycles are only possible with the appropriate device version and if this was selected during the configuration of the protective functions (address 110 **Trip mode**, see also Section 2.1.1.3). Of course, the circuit breaker must also be suitable for single-pole tripping.

If the automatic reclosure function is ready, the short-circuit protection trips single-pole for all single-phase faults inside the stage(s) selected for reclosure. Under the general settings (address 1156 **Trip2phFlt**, see also Section 2.1.4.1) it can also be selected that single-pole tripping takes place for two-phase faults without earth. Single-pole tripping is of course only possible by short-circuit protective functions which can determine the faulty phase.

If multiple-phase faults occur, the fault protection issues a final three-pole trip with the stage that is valid without reclosure. Any three-pole trip is final. The automatic reclosure function is blocked dynamically (see also margin heading „Blocking reclosure“, above).

The automatic reclosure is started in the case of single-pole tripping. The (adjustable) dead time for the single-pole reclose cycle starts with reset of the trip command or opening of the circuit breaker pole (auxiliary contact criterion). After expiry of the dead time, the circuit breaker receives a close command. At the same time, the (adjustable) blocking time is started. If the reclosure is blocked during the dead time following a single-pole trip, immediate three-pole tripping can take place as an option (forced three-pole trip).

If the fault is cleared (successful reclosure), the reclaim time expires and all functions return to their quiescent state. The fault is cleared.

If the fault has not been eliminated (unsuccessful reclosure), the short-circuit protection initiates a final three-pole trip following the protection stage valid without reclosure. Any fault during the blocking time leads to a final three-pole trip.

After unsuccessful reclosure (final tripping) the automatic reclosure is blocked dynamically (see also margin heading „Reclose Block“, above).

The sequence above applies for single reclosure cycles. In 7SD5 multiple reclosure (up to 8 shots) is also possible (see below).

Sequence of a single- and three-pole reclose cycle

This operating mode is only possible with the appropriate device version and if this was selected during configuration of the protective functions (address 110, see also Section 2.1.1.3). Of course, the circuit breaker must also be suitable for single-pole tripping.

If the automatic reclosure function is ready, the short-circuit protection trips single-pole for single-phase faults inside the stage(s) selected for reclosure, it trips three-pole for multiple-phase faults. In the general settings (address 1156 **Trip2phFlt**, see also Section 2.1.4.1) it can also be selected that single-pole tripping takes place for two-phase faults without earth. Single-pole tripping is of course only possible for short-circuit protective functions which can determine the faulty phase. The valid protection stage selected for reclosure ready state applies to all fault types.

The automatic reclosure is started at the moment of tripping. Depending on the type of fault, the (adjustable) dead time for the single-pole reclose cycle or the (separately adjustable) dead time for the three-pole reclose cycle starts following the reset of the trip command or opening of the circuit breaker (pole) (auxiliary contact criterion). After expiry of the dead time, the circuit breaker receives a close command. At the same time, the (adjustable) blocking time is started. If the reclosure is blocked during the dead time following a single-pole trip, immediate three-pole tripping can take place as an option (forced three-pole trip).

If the fault is cleared (successful reclosure), the reclaim time expires and all functions return to their quiescent state. The fault is cleared.

If the fault has not been eliminated (unsuccessful reclosure), the short-circuit protection initiates a final three-pole trip with the protection stage valid without reclosure. Any fault during the blocking time leads to a final three-pole trip.

After unsuccessful reclosure (final tripping), the automatic reclosure is blocked dynamically (see also margin heading „Reclose Block“, above).

The sequence above applies for single reclosure cycles. In 7SD5 multiple reclosure (up to 8 shots) is also possible (see below).

Multiple auto-reclosure

If a short-circuit still exists after a reclosure attempt, further reclosure attempts can be made. Up to 8 reclosure attempts are possible with the automatic reclosure function integrated in the 7SD5.

The first four reclose cycles are independent of each other. Each one has separate action and dead times, can operate with single- or three-pole trip and can be blocked separately via binary inputs. The parameters and intervention possibilities of the fourth cycle also apply to the fifth cycle and onwards.

The sequence is the same in principle as in the different reclosure programs described above. However, if the first reclosure attempt was unsuccessful, the reclosure function is not blocked, but instead the next reclose cycle is started. The appropriate dead time starts with the reset of the trip command or opening of the circuit breaker (pole) (auxiliary contact criterion). The circuit breaker receives a new close command after expiry of the dead time. At the same time the reclaim time is started.

Until the set maximum number of permissible auto-reclose cycles has been reached, the reclaim time is reset with every new trip command after reclosure and started again with the next close command.

If one of the reclosing attempts is successful, i.e. the fault disappeared after reclosure, the blocking time expires and the automatic reclosing system is reset. The fault is cleared.

If none of the cycles is successful, the short-circuit protection initiates a final three-pole trip after the last permissible reclosure, following a protection stage valid without auto-reclosure. The automatic reclosure function is blocked dynamically (see also margin heading „Blocking reclosure“, above).

Handling Evolving Faults

When single-pole or single-and three-pole reclose cycles are executed in the network, particular attention must be paid to sequential faults.

Sequential faults are faults which occur during the dead time after clearance of the first fault.

There are various ways of handling sequential faults in the 7SD5 depending on the requirements of the network:

For the **Detection** of an evolving fault you can select whether the trip command of a protective function during the dead time or every further pickup is the criterion for an evolving fault.

There are also various selectable possibilities for the **response** of the internal auto-reclose function to a detected evolving fault.

- **EV. FLT. MODE Stops AutoRec1:**

The reclosure is blocked as soon as a sequential fault is detected. The tripping by the sequential fault is always three-pole. This applies irrespective of whether three-pole cycles have been permitted or not. There are no further reclosure attempts; the automatic reclosure is blocked dynamically (see also margin heading „Blocking reclosure“, above).

- **EV. FLT. MODE starts 3p AR:**

As soon as a sequential fault is detected, the recloser switches to a three-pole cycle. Each trip command is three-pole. The separately settable dead time for sequential faults starts with the clearance of the sequential fault; after the dead time the circuit breaker receives a close command. The further sequence is the same as for single- and three-pole cycles.

The complete dead time in this case consists of the part of the dead time for the single-pole reclosure up to the elimination of the sequential fault plus the dead time for the sequential fault. This makes sense because the duration of the three-pole dead time is most important for the stability of the network.

If reclosure is blocked due to a sequential fault without the protection issuing a three-pole trip command (e.g. for sequential fault detection with starting), the device can send a three-pole trip command so that the circuit breaker does not remain open with one pole (forced three-pole trip).

Forced three-pole trip

If reclosure is blocked during the dead time of a single-pole cycle without a three-pole trip command having been initiated, the breaker would remain open at one pole. In most cases, the circuit breaker is equipped with a pole discrepancy supervision which will trip the remaining poles after a few seconds. By setting a parameter, you can achieve that the tripping logic of the device immediately sends a three-pole trip command in this case. This forced three-pole trip pre-empts the pole discrepancy supervision of the CB because the forced three-pole trip of the device is initiated as soon as the reclosure is blocked following a single-pole trip or if the CB auxiliary contacts report an implausible breaker state.

When different internal protective functions initiate a single-pole trip in different phases, the device will issue a three-pole trip command due to the tripping logic (Section 2.24.1), independent of this forced three-pole trip. This is also true for trip commands given via the direct local trip inputs (Section 2.12) or the reception of a remote trip (Section 2.13) since these signals directly affect the tripping logic of the device.

If the device trips single-pole and if an external trip command in another phase only reaches the device via one of the binary inputs, e.g. „>Trip L1 AR“ to the internal automatic reclosure function, this is not routed to the tripping logic. In this case, three-pole trip is ensured only if the forced three-pole trip is effective.

The forced three-pole trip is also activated when only three-pole cycles are allowed, but a single-pole trip is signalled externally via a binary input.

Dead Line Check (DLC)

If the voltage of a disconnected phase does not disappear following a trip, reclosure can be prevented. A prerequisite for this function is that the voltage transformers are connected on the line side of the circuit breaker. To select this function the dead line check must be activated. The automatic reclosure function then checks the discon-

nected line for no-voltage: the line must have been without voltage for at least an adequate measuring time during the dead time. If this was not the case, the reclosure is blocked dynamically.

This no-voltage check on the line is of advantage if a small generator (e.g. wind generator) is connected along the line.

Adaptive Dead Time (ADT)

In all the previous alternatives it was assumed that defined and equal dead times were set at both line ends, if necessary for different fault types and/or reclose cycles.

It is also possible to set the dead times at one line end only and to configure the adaptive dead time at all other ends. This can be done provided that the voltage transformers are located on the line side of the circuit breaker or that a means for transfer of a close command to the remote line end exists.

Figure 2-152 shows an example with voltage measurement. It is assumed that device I is operating with defined dead times whereas the adaptive dead time is configured at position II. It is important that the line is fed at least from busbar A, i.e. the side with the defined dead times.

With the adaptive dead time the automatic reclosure function at line ends II and III decides independently whether and when reclosure is useful and permissible and when it is not. The criterion is the line voltage at ends II and III. Thus, reclosure at ends II and III takes place as soon as it is apparent that voltage has been applied to the line. All phase-to-phase and phase-to-earth voltages are monitored.

In the illustrated example, the lines are disconnected at positions I, II and III. At I reclosure takes place after the parameterized dead time. At III the ADT function can be used for a reclosure after a short delay (to ensure a sufficient voltage measuring time) since the voltage remains if there is also an infeed on busbar B.

If the fault has been cleared (successful reclosure), line A - B is re-connected to the voltage at busbar A through position I. Device II detects this voltage and also recloses after a short delay (to ensure a sufficient voltage measuring time). The fault is cleared.

If the fault has not been cleared after reclosure at I (unsuccessful reclosure), a switch on to fault occurs at I, no healthy voltage appears at II. The device there detects this and does not reclose.

In the case of multiple reclosure the sequence may be repeated several times following an unsuccessful reclosure until one of the reclosures attempts is successful or a final trip takes place.

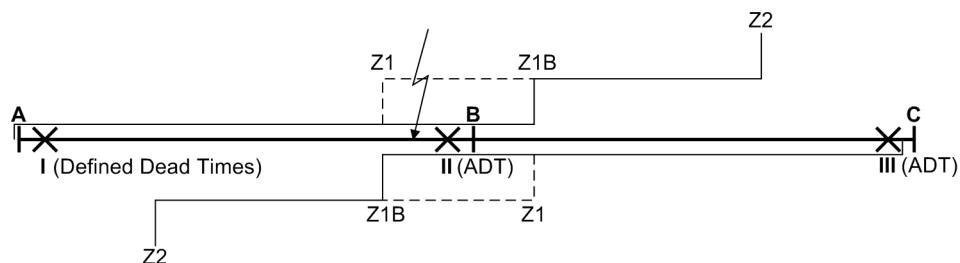


Figure 2-152 Example of adaptive dead time (ADT)

A, B, C	Busbars
I, II, III	Relay installation locations
X	Tripped circuit breakers

As is shown by the example, the adaptive dead time has the following advantages:

- The circuit breaker at position II is not reclosed at all if the fault persists and is not unnecessarily stressed as a result.
- With non-selective tripping on an external fault by an overreaching time-graded protection, no further auto-reclosure attempts can be generated there because the fault current path via busbar B and position II remains interrupted even after several reclosure attempts.
- At position I overreach is allowed in the case of multiple reclosures and even in the event of final tripping because the line remains open at position II and therefore no actual overreach can occur at I.

CLOSE-Command Transmission (Remote-CLOSE)

With close command transmission via the digital connection paths the dead times are only set at one line end. The other line end (or line ends in lines with more than two ends) are set to „Adaptive Dead Time (ADT)“. The latter just responds to the received close commands from the transmitting end.

The transmission of the close command by the transmitting line end is delayed until it is sure that the local reclosure was successful. This means that after reclosure a possible local pickup is still waited for. This delay prevents unnecessary closing at the remote end on the one hand but also increases the time until reclosure takes place there. This is not critical for a single-pole reclosure or in radial or meshed networks if no stability problems are expected under these conditions.

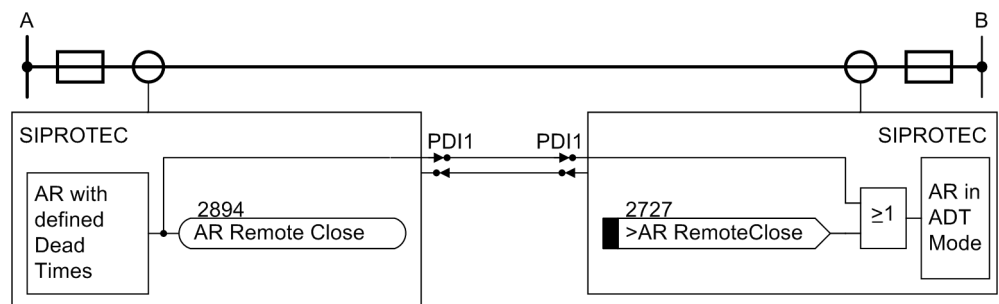


Figure 2-153 AR Remote-Close function via protection data interface

The close command can be transmitted by a teleprotection scheme using the protection data interfaces. When the indication „AR Remote Close“ is output, this information is transmitted at the same time to the remote end via the protection data interface. The information is OR-combined with the information of the binary input „>AR RemoteClose“ and made available to the automatic reclosure. (Figure 2-153)

Connecting an External Auto-Reclosure Device

If the 7SD5 has to work with an external reclosure device, the binary inputs and outputs provided for this purpose must be taken into consideration. The following inputs and outputs are recommended:

Binary inputs:

383 „>Enable ARzones“	With this binary input, the external reclosure device controls stages of the individual short-circuit protection functions which are active before reclosure (e.g. overreaching zone in the distance protection). This input is not required if no overreaching stage is used (e.g. differential protection or comparison mode with distance protection, see also above margin heading „Selectivity before Reclosure“).
382 „>Only 1ph AR“	The external reclosure device is only programmed for 1 pole; the stages of the individual protective functions that are activated before reclosure via No 383 only do so in the case of single-phase faults; in the event of multiple-phase faults these stages of the individual short-circuit protection functions do not operate. This input is not required if no overreaching stage is used (e.g. differential protection or comparison mode with distance protection, see also margin heading „Selectivity before reclosure“, above).
381 „>1p Trip Perm“	The external reclosure device allows one-pole tripping (logic inversion or three-pole coupling). If this input is not assigned or not routed (matrix), the protection functions trip three-pole for all faults. If the external reclosure device cannot supply this signal but supplies a „three-pole coupling“ signal instead, this must be taken into account in the allocation of the binary inputs: the signal must be inverted in this case (L-active = active without voltage).

Binary outputs:

501 „Relay PICKUP“	Start of protection device, general (if required by external recloser device).
512 „Relay TRIP 1pL1“	Trip of the device 1-pole L1.
513 „Relay TRIP 1pL2“	Trip of the device 1-pole L2.
514 „Relay TRIP 1pL3“	Trip of the device 1-pole L3.
515 „Relay TRIP 3ph.“	Trip protective device 3-pole.

In order to obtain a phase-segregated trip indication, the respective single-pole trip commands must be combined with the three-pole trip command on one output.

Figure, 2-154 for example, shows the interconnection between a 7SD5 and an external reclosure device with a mode selector switch.

Depending on the external reclosure device requirements, the three-pole indications (No. 512, 513, 514) can be combined to one „single-pole tripping“ output; No. 515 sends the „three-pole tripping“ signal to the external device.

In case of exclusively three-pole reclose cycles, the general pickup signal (No. 501, if required by the external reclosure device) and trip signal (No. 511) of 7SD5 (see Figure 2-155) are usually sufficient.

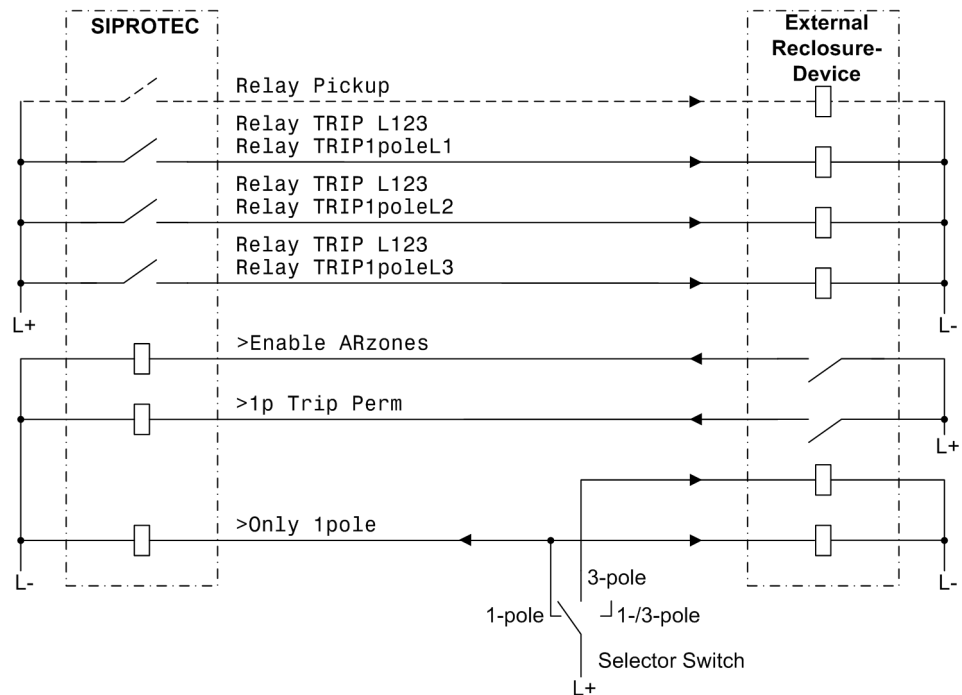


Figure 2-154 Connection example with external auto-reclosure device for 1-/3-pole AR with mode selector switch

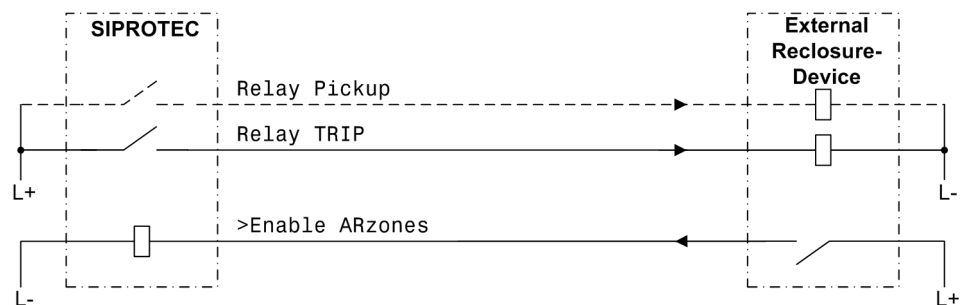


Figure 2-155 Connection example with external reclosure device for 3-pole AR

Control of the internal automatic reclosure by an external protection device

If the 7SD5 is equipped with the internal automatic reclosure function, it may also be controlled by an external protection device. This is of use, for example, on line ends with redundant protection or additional back-up protection when the second protection is used for the same line end and has to work with the automatic reclosure function integrated in the 7SD5.

The binary inputs and outputs provided for this functionality must be considered in this case. It must be decided whether the internal auto-reclosure is to be controlled by the starting (pickup) or by the trip command of the external protection (see also above under „Control Mode of the Automatic Reclosure“).

If the auto-reclosure is controlled by the **trip command**, the following inputs and outputs are recommended to be used:

The automatic reclosure function is started via the Binary inputs:

2711 „>AR Start“	General fault detection for the automatic reclosure circuit (only required for action time),
2712 „>Trip L1 AR“	Trip command L1 for the automatic reclosure circuit,
2713 „>Trip L2 AR“	Trip command L2 for the automatic reclosure circuit,
2714 „>Trip L3 AR“	Trip command L3 for the automatic reclosure circuit.

The general fault detection determines the starting of the action times. It is also necessary if the automatic reclosure circuit is to detect sequential faults by fault detection. In other cases this input information is superfluous.

The trip commands decide whether the dead time for single-pole or three-pole reclose cycles is activated or whether the reclosure is blocked in three-pole tripping (depending on the parameterisation of dead times).

Figure 2-156 shows the interconnection between the internal automatic reclosure of 7SD5 and an external protection device, as a connection example for single-pole cycles.

To achieve three pole coupling of the external protection and to release, if necessary, its accelerated stages before reclosure, the following output functions are suitable:

2864 „AR 1p Trip Perm“	Internal automatic reclosure function ready for single-pole reclose cycle, i.e. allows single-pole tripping (logic inversion of the three-pole coupling).
2889 „AR 1.CycZoneRel“	Internal automatic reclosure function ready for the first reclose cycle, i.e. releases the stage of the external protection device for reclosure, the corresponding outputs can be used for other cycles. This output can be omitted if the external protection does not require an overreaching stage (e.g. differential protection or comparison mode with distance protection).
2820 „AR Program1pole“	Internal automatic reclosure function is programmed for one pole, i.e. only recloses after single-pole tripping. This output can be omitted if no overreaching stage is required (e.g. differential protection or comparison mode with distance protection).

Instead of the three phase-segregated trip commands, the single-pole and three-pole tripping may also be signalled to the internal automatic reclosure function - provided that the external protection device is capable of this -, i.e. assign the following binary inputs of the 7SD5:

2711 „>AR Start“	General fault detection for the internal automatic reclosure function (only required for action time),
2715 „>Trip 1pole AR“	Trip command single-pole for the internal automatic reclosure,
2716 „>Trip 3pole AR“	Trip command three-pole for the internal automatic reclosure function,

If only three-pole reclosure cycles are to be executed, it is sufficient to assign the binary input „>Trip 3pole AR“ (No. 2716) for the trip signal. Figure 2-157 shows an example. Any overreaching stages of the external protection are enabled again by „AR 1.CycZoneRel“ (No. 2889) and, if necessary, of further cycles.

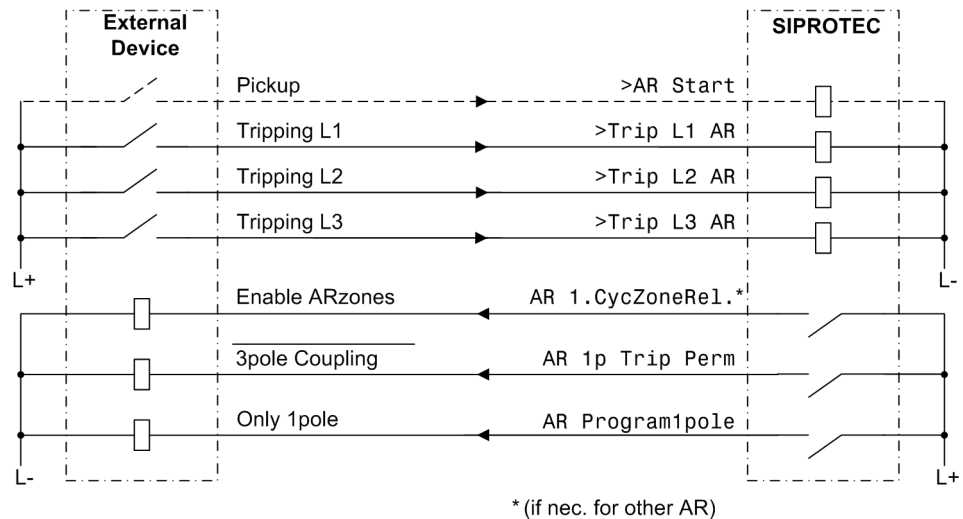


Figure 2-156 Connection example with external protection device for 1-/3-pole reclosure; AR control mode = with TRIP

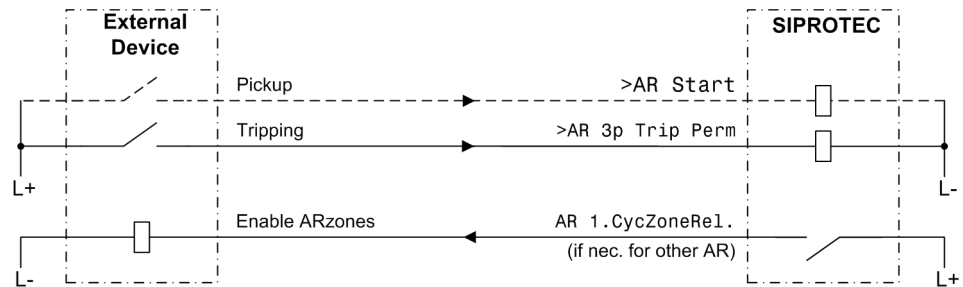


Figure 2-157 Connection example with external protection device for 3-pole reclosure; AR control mode = with TRIP

But if the internal automatic reclose function is controlled by the **pickup** (only possible for three-pole tripping: 110 **Trip mode = 3pole only**), the phase-dedicated pickup signals of the external protection must be connected if distinction shall be made between different types of fault. The general trip command then suffices for tripping (No. 2746). Figure 2-158 shows a connection example.

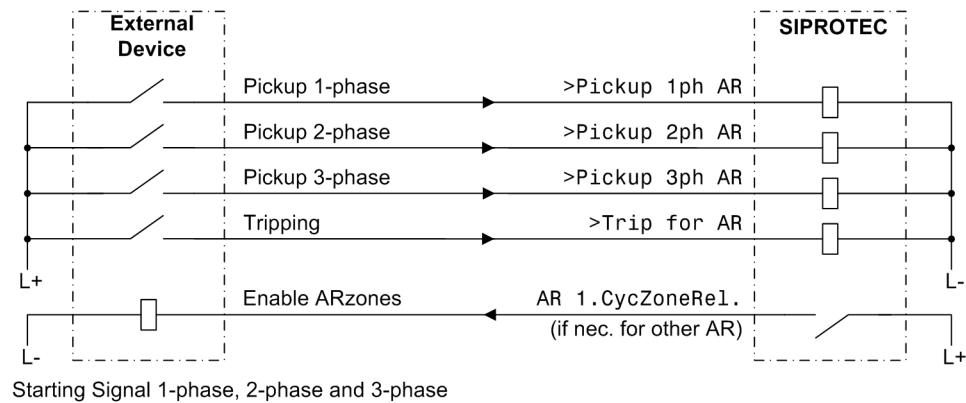
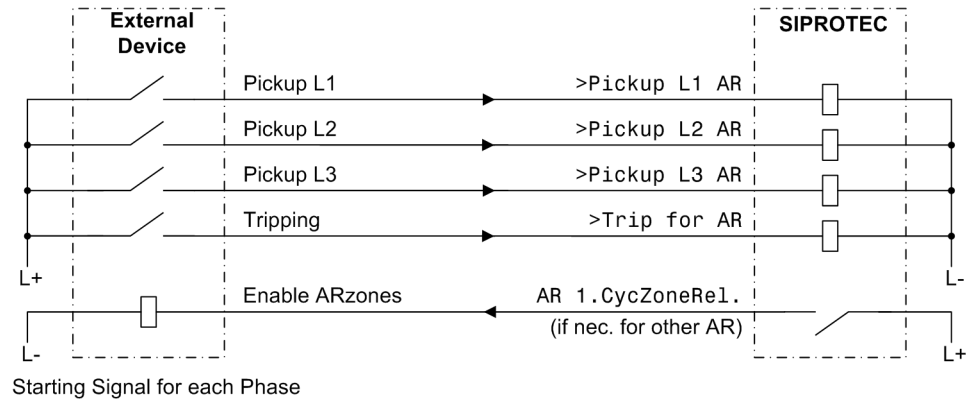


Figure 2-158 Connection example with external protection device for fault detection dependent dead time — dead time control by pickup signals of the protection device; AR control mode = with PICKUP

2 Protection Relays with 2 Automatic Reclosure Circuits

If redundant protection is provided for a line and each protection operates with its own automatic reclosure function, a certain signal exchange between the two combinations is necessary. The connection example in Figure 2-159 shows the necessary cross-connections.

If phase segregated auxiliary contacts of the circuit breaker are connected, a three-pole coupling by the 7SD5 is ensured when more than one CB pole is tripped. This requires activation of the forced three-pole trip (see Section 2.16.2 at margin heading „Forced three-pole trip“). An external automatic three-pole coupling is therefore unnecessary if the above conditions are met. This prevents two-pole tripping under all circumstances.

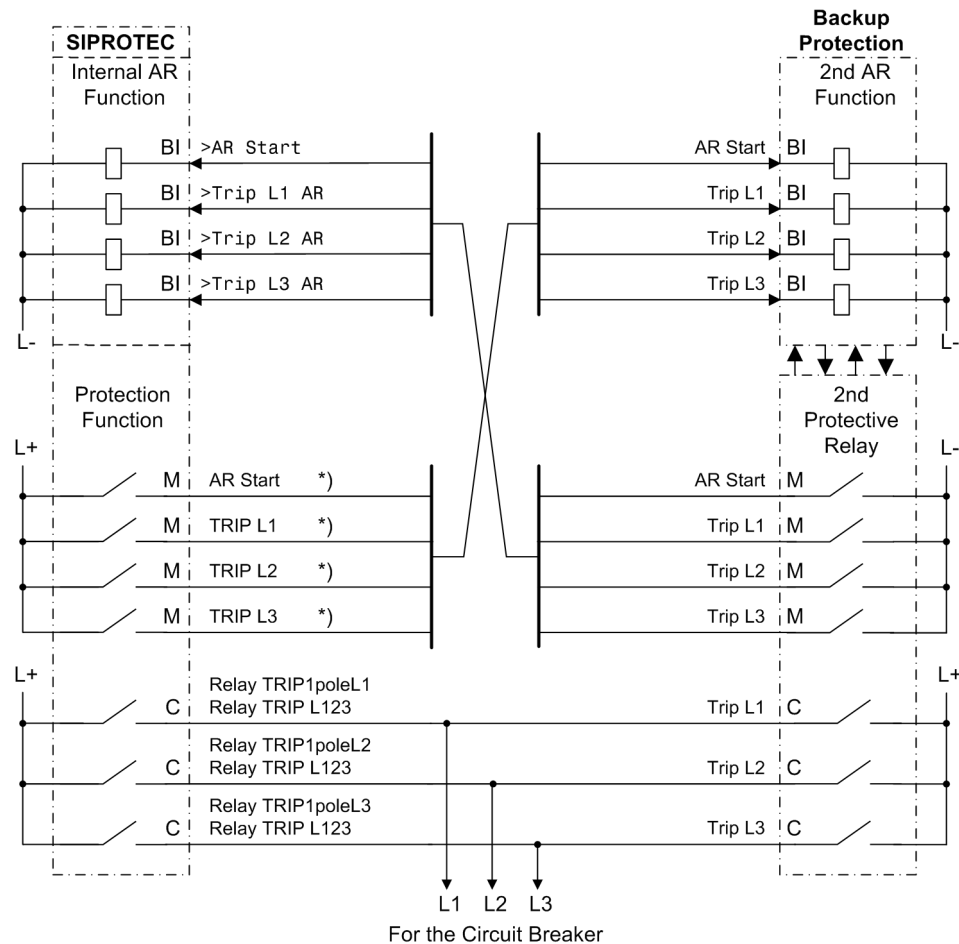


Figure 2-159 Connection example for 2 protection devices with 2 automatic reclosure functions

BI Binary inputs

M Signal output

K Command

*) for all protection functions operating with AR.

2.16.2 Setting Notes

General

If no reclosure is required on the feeder to which the 7SD5 line protection is applied (e.g. for cables, transformers) the auto reclose function must be removed during configuration of the device (address 133, see Section 2.1.1.3). The auto reclose function is then fully disabled, i.e. the automatic reclosure is not processed in the 7SD5. No signals regarding the auto reclose function are generated, and the binary inputs for the auto reclose function are ignored. All parameters for setting the automatic reclosure function are inaccessible and of no significance. Tripping is always three-pole for all faults.

If, on the other hand, the internal automatic reclosure function is to be used, the type of reclosure must be selected during the configuration of the functions (see Section 2.1.1.3) in address 133 **Auto Reclose** the AR control mode and in address 134 the **AR control mode**.

Up to 8 reclosure attempts are allowed with the integrated automatic reclosure function in the 7SD5. Whereas the settings in address 3401 to 3441 are common to all reclosure cycles, the individual settings of the cycles are made from address 3450 onwards. It is possible to set different individual parameters for the first four reclose cycles. From the fifth cycle on the parameters for the fourth cycle apply.

The automatic reclosing function can be turned **ON** or **OFF** under address 3401 **AUTO RECLOSE**.

A prerequisite for automatic reclosure taking place after a trip due to a short-circuit is that the circuit breaker is ready for at least one OPEN-CLOSE-OPEN cycle at the time the automatic reclosure circuit is started, i.e. at the time of the first trip command. The readiness of the circuit breaker is signalled to the device via the binary input „>CB1 Ready“ (No. 371). If no such signal is available, leave the setting under address 3402 **CB? 1 . TRIP** = **NO** because no automatic reclosure would be possible at all otherwise. If circuit breaker interrogation is possible, you should set **CB? 1 . TRIP** = **YES**.

Furthermore, the circuit breaker ready state can also be interrogated prior to every reclosure. This is set when setting the individual reclose cycles (see below).

To check that the ready status of the circuit breaker is regained during the dead times, you can set a circuit breaker ready monitor time under address 3409 **CB TIME OUT**. The time is set slightly longer than the recovery time of the circuit breaker after a TRIP-CLOSE-TRIP cycle. If the circuit breaker is not ready again by the time this timer expires, no reclosure takes place, the automatic reclosure function is blocked dynamically.

Waiting for the circuit breaker to be ready can cause an increase of the dead times. Interrogation of a synchronism check (if used) can also delay reclosure. To avoid uncontrolled prolongation, it is possible to set a maximum prolongation of the dead time in this case in address 3411 **T-DEAD EXT..** This prolongation is unlimited if the setting ∞ is applied. This parameter can only be altered in DIGSI at **Display Additional Settings**. Remember that longer dead times are only permissible after three-pole tripping when no stability problems occur or a synchronism check takes place before reclosure.

The reclaim time **T-RECLAIM** (address 3403) defines the time that must elapse, after a successful reclosing attempt, before the auto reclose function is reset. Re-tripping by a protective function within this time initiates the next reclose cycle in the event of multiple reclosure; if no further reclosure is permitted, the last reclosure is treated as unsuccessful. The reclaim time must therefore be longer than the longest response time of a protective function which can start the automatic reclosure circuit. When operating the AR in ADT mode, it is possible to deactivate the reclaim time by setting it to 0 s.

A few seconds are generally sufficient. In areas with frequent thunderstorms or storms, a shorter blocking time may be necessary to avoid feeder lockout due to sequential lightning strikes or cable flashovers.

A longer reclaim time should be chosen where circuit breaker supervision is not possible (see above) during multiple reclosures, e.g. because of missing auxiliary contacts and information on the circuit breaker ready status. In this case, the reclaim time should be longer than the time required for the circuit breaker mechanism to be ready.

The blocking duration following manual-close detection **T-BLOCK MC** (address 3404) must ensure the circuit breaker to open and close reliably (0.5 s to 1 s). If a fault is detected by a protective function within this time after closing of the circuit breaker was detected, no reclosure takes place and a final three-pole trip command is issued. If this is not desired, address 3404 is set to **0**.

The options for handling evolving faults are described in Section 2.16 under margin heading „Handling Evolving Faults“. The treatment of sequential faults is not necessary on line ends where the adaptive dead time is applied (address 133 **Auto Reclose = ADT**). The addresses 3406 and 3407 are then of no consequence and therefore not accessible.

The detection of an evolving fault can be defined under address 3406 **EV. FLT. RECOG.. EV. FLT. RECOG. with PICKUP** means that, during a dead time, every **pickup** of a protective function will be interpreted as an evolving fault. With **EV. FLT. RECOG. with TRIP** a fault during a dead time is only interpreted as an evolving fault if it has led to a **trip command** by a protection function. This may also include trip commands which are coupled in from external via a binary input or which have been transmitted from an opposite end of the protected object. If an external protection device operates together with the auto-reclosure, evolving fault detection with pickup presupposes that a pickup signal from the external device is also connected to the 7SD5; otherwise an evolving fault can only be detected with the external trip command even if **with PICKUP** was set here.

The reaction in response to sequential faults can be selected at address 3407. **EV. FLT. MODE Stops AutoRec1** means that no reclosure is performed after detection of a sequential fault. This is always useful when only single-pole reclosure is to take place or when stability problems are expected due to the subsequent three-pole dead time. If a three-pole reclose cycle is to be initiated by tripping of the sequential fault, set **EV. FLT. MODE = starts 3p AR**. In this case a separately adjustable three-pole dead time is started with the three-pole trip command due to the sequential fault. This is only useful if three-pole reclosure is also permitted.

Address 3408 **T-Start MONITOR** monitors the reaction of the circuit breaker after a trip command. If the CB has not opened during this time (from the beginning of the trip command), the automatic reclosure is blocked dynamically. The criterion for circuit breaker opening is the position of the circuit breaker auxiliary contact or the disappearance of the trip command. If a circuit breaker failure protection (internal or external) is used on the feeder, this time should be shorter than the delay time of the circuit breaker failure protection so that no reclosure takes place if the circuit breaker fails.



Note

If the breaker failure protection (BF) is to perform a single-pole TRIP repetition, the time setting of parameter 3408 **T-Start MONITOR** must be longer than the time set for parameter 3903 **1p-RETRIP (T1)**.

To enable that the busbar is tripped by the breaker failure protection without preceding three-pole coupling of the trip command (by AR or BF), the time set for 3408 **T-Start MONITOR** also has to be longer than the time set for 3906 **T2**. In this case, the AR must be blocked by a signal from the BF to prevent the AR from reclosing after a busbar TRIP. It is recommended to connect the signal 1494 „BF T2 - TRIP (bus)“ to the AR input 2703 „>AR block“ by means of CFC.

If the reclosure command is transmitted to the opposite end, this transmission can be delayed by the time setting in address 3410 **T RemoteClose**. This transmission is only possible if the device operates with adaptive dead time at the remote end (address 133 **Auto Reclose = ADT**). This parameter is otherwise irrelevant. On the one hand, this delay serves to prevent the remote end device from reclosing unnecessarily when local reclosure is unsuccessful. On the other hand, it should be noted that the line is not available for energy transport until the remote end has also closed. This

delay must therefore be added to the dead time for consideration of the network stability.

Configuration of auto-reclosure

This configuration concerns the interaction between the protection and supplementary functions of the device and the auto reclose function. The selection of device functions which are to start the automatic reclosure circuit and which are not to, is made here.

Address 3420	AR WITH DIFF, i.e. with differential protection
Address 3421	AR w/ SOTF-O/C, i.e. with high-current switch-onto-fault function
Address 3422	AR w/ DIST., i.e. with distance protection
Address 3423	AR WITH I.TRIP, i.e. with permissive underreach transfer trip (PUTT)
Address 3424	AR w/ DTT, i.e. with direct transfer trip
Address 3425	AR w/ BackUpO/C, i.e. with time overcurrent protection
Address 3426	AR w/ W/I, with weak-infeed trip function
Address 3427	AR w/ EF-O/C, i.e. with earth fault protection for earthed systems

For the functions which are to start the auto-reclosure function, the corresponding address is set to **YES**, for the others to **NO**. The other functions cannot start the automatic reclosure because reclosure is of little use here.

Forced Three-Pole Trip

If a blocking of the auto-reclosure occurs during the dead time of a 1-pole cycle without a previous 3-pole trip command, the breaker remains open at one pole. With address 3430 **AR TRIP 3pole** it is possible to determine that the tripping logic of the device issues a three-pole trip command in this case (pole discrepancy prevention for the CB poles). Set this address to **YES** if the CB can be tripped single-pole and if it has no pole discrepancy protection. Nevertheless, the device pre-empt the pole discrepancy supervision of the CB because the forced three-pole trip of the device is immediately initiated as soon as the reclosure is blocked following a single-pole trip or if the CB auxiliary contacts report an implausible breaker state (see also Section 2.16 at margin heading „Processing the circuit breaker auxiliary contacts“). The forced three-pole trip is also activated when only three-pole cycles are allowed, but a single-pole trip is signalled externally via a binary input.

The forced three-pole trip is unnecessary if only a common three-pole control of the CB is possible.

Dead line check

Under address 3431 the dead line check can be switched active. It presupposes that voltage transformers are installed on the line side of the feeder and connected to the device. If this is not the case or the function is not used, set **DLC / RDT = WITHOUT**.

DLC / RDT = DLC means that the dead line check of the line voltage is used. This only enables reclosure after it becomes apparent that the line is dead. In this case, the phase-earth voltage limit is set in address 3441 **U-dead** below which the line is considered voltage-free (disconnected). The setting is applied in Volts secondary. This value can be entered as a primary value when parameterising with a PC and DIGSI. Address 3438 **T U-stable** determines the measuring time available for determining the no-voltage condition. Address 3440 is irrelevant here.

Adaptive dead time (ADT)

When operating with adaptive dead time, it must be ensured in advance that **one** end per line operates with defined dead times and has an infeed. The other (or the others in multi-branch lines) may operate with adaptive dead time. It is essential that the voltage transformers are located on the line side of the circuit breaker. Details about this function can be found in Section 2.16 at margin heading „Adaptive Dead Time (ADT) and Close Command-transfer (Remote-CLOSE)“.

For the line end with defined dead times the number of desired reclose cycles must be set during the configuration of the protective functions (Section 2.1.1) in address 133 **Auto Reclose**. Additionally, the intertrip command of the differential protection should be activated (see Section 2.4, address 1301 **I-TRIP SEND = YES**). For the devices operating with adaptive dead time, address 133 **Auto Reclose** must have been set to **ADT** during the configuration of the protective functions (Section 2.1.1). Only the parameters described below are interrogated in the latter case. No settings are then made for the individual reclosure cycles.

The adaptive dead time may be voltage-controlled or Remote-CLOSE-controlled. Both are possible at the same time. In the first case, reclosure takes place as soon as the returning voltage, after reclosure at the remote end, is detected. For this purpose the device must be connected to voltage transformers located on the line side. In the case of Remote-CLOSE, the autoreclosure waits until the Remote-CLOSE command is received from the remote end.

The action time **T-ACTION ADT** (address 3433) is the timeframe after initiation (fault detection) by any protective function which can start the automatic reclosure function within which the trip command must appear. If no trip command is issued until the action time has expired, there is no reclosure. Depending on the configuration of the protective functions (see Section 2.1.1.3), the action time may also be omitted; this applies especially when an initiating protective function has no fault detection signal.

The dead times are determined by the reclosure command of the device at the line end with the defined dead times. In cases where this reclosure command does not appear, e.g. because the reclosure was in the meantime blocked at this end, the readiness of the local device must return to the quiescent state at some time. This takes place after the maximum wait time **T-MAX ADT** (address 3434). This must be long enough to include the last reclosure of the remote end. In the case of single cycle reclosure, the sum total of maximum dead time plus reclaim time of the other device is sufficient. In the case of multiple reclosure the worst case is that all reclosures of the other end except the last one are unsuccessful. The time of all these cycles must be taken into account. To save having to make exact calculations, it is possible to use the sum of all dead times and all protection operating times plus one reclaim time.

At address 3435 **ADT 1p allowed** it can be determined whether single-pole tripping is allowed (provided that single-pole tripping is possible). If **NO**, the protection trips three-pole for all fault types. If **YES**, the actual trip signal of the starting protective functions is decisive. If the blocking time is unequal to 0 s and single-pole tripping is allowed, single-pole tripping will be prevented during the blocking time. Each fault is thus disconnected in three poles while the blocking time expires.

Address 3403 **T-RECLAIM** allows disabling the blocking time in ADT mode. In doing so, the ADT cycle including its settings and release conditions is restarted after unsuccessful automatic reclosing. If the blocking time is activated, the single-pole permission at address 3435 and the protection releases are disabled while the blocking time expires.

Under address 3436 **ADT CB? CLOSE** it can be determined whether circuit breaker ready is interrogated before reclosure after an adaptive dead time. With the setting **YES**, the dead time may be extended if the circuit breaker is not ready for a CLOSE-OPEN-cycle when the dead time expires. The maximum extension that is possible is the circuit breaker monitoring time; this was set for all reclosure cycles under address 3409 (see above). Details about the circuit breaker monitoring can be found in the function description, Section 2.16, at margin heading „Interrogation of the Circuit Breaker Ready State“.

If there is a danger of stability problems in the network during a three-pole reclosure cycle, set address 3437 **ADT SynRequest** to **YES**. In this case a check is made

before reclosure following a three-pole trip whether the voltages of feeder and busbar are sufficiently synchronous. This is only done on condition that either the internal synchronism and voltage check functions are available, or that an external device is available for synchronism and voltage check. If only single-pole reclose cycles are executed or if no stability problems are expected during three-pole dead times (e.g. due to closely meshed networks or in radial networks), set address 3437 to **NO**.

Addresses 3438 and 3440 are only significant if the voltage-controlled adaptive dead time is used. 3440 **U-live** is the phase-earth voltage limit above which the line is considered to be fault-free. The setting must be smaller than the lowest expected operating voltage. The setting is applied in Volts secondary. This value can be entered as a primary value when parameterising with a PC and DIGSI. Address 3438 **T U-stable** establishes the measuring time used to determine that the line is fault-free with this returning voltage. It should be longer than any transient oscillations resulting from line energization.

1st reclosure cycle

If working on a line with adaptive dead time, no further parameters are needed for the individual reclose cycles in this case. All the following parameters assigned to the individual cycles are then superfluous and inaccessible.

Address 3450 **1.AR: START** is only available if the automatic reclosure is configured with action time in the operating mode, i. e. if during configuration of the protective functions (see Section 2.1.1.3) address 134 **AR control mode = Pickup w/ Tact** or **Trip w/ Tact** was set (the first setting only applies to three-pole tripping). It determines whether automatic reclosure should be started at all with the first cycle. This address is included mainly due to the uniformity of the parameters for every reclosure attempt and is set to **YES** for the first cycle. If several cycles are performed, you can (at **AR control mode = Pickup ...**) set this parameter and different action times to control the effectiveness of the individual cycles. Notes and examples are listed in Section 2.16 at margin heading „Action times“.

The action time **1.AR: T-ACTION** (address 3451) is the timeframe after initiation (fault detection) by any protective function which can start the automatic reclosure function within which the trip command must appear. If no trip command is issued until the action time has expired, there is no reclosure. Depending on the configuration of the protective functions, the action time may also be omitted; this applies especially when an initiating protective function has no fault detection signal.

Depending on the configured operating mode of the automatic reclosure (address 134 **AR control mode**) only address 3456 and 3457 (if **AR control mode = with TRIP...**) are available or address 3453 to 3455 (if **AR control mode = with PICKUP ...**).

In **AR control mode = with TRIP ...** you can set different dead times for single-pole and three-pole reclose cycles. Whether single-pole or three-pole tripping is triggered depends solely on the initiating protective functions. Single-pole tripping is of course only possible if the device and the corresponding protective function are also capable of single-pole tripping:

Table 2-14 AR control mode = **with TRIP...**

3456	1.AR Tdead1Trip	is the dead time after single-pole tripping,
3457	1.AR Tdead3Trip	is the dead time after three-pole tripping.

If you only want to allow a single-pole reclose cycle, set the dead time for three-pole tripping to ∞ . If you only want to allow a three-pole reclose cycle, set the dead time for single-pole tripping to ∞ , the protection then trips three-pole for each fault type.

The dead time after single-pole tripping (if set) **1.AR Tdead1Trip** (address 3456) should be long enough for the short-circuit arc to be extinguished and the surrounding air to be de-ionized so that the reclosure promises to be successful. The longer the line, the longer is this time due to the charging of the conductor capacitances. Conventional values are 0.9 s to 1.5 s.

For three-pole tripping (address 3457 **1.AR Tdead3Trip**) the network stability is the main concern. Since the disconnected line cannot transfer any synchronising forces, only a short dead time is often permitted. Usual values are 0.3 s to 0.6 s. If the device is operating with a synchronism check (compare Section 2.17), a longer time may be tolerated under certain circumstances. Longer three-pole dead times are also possible in radial networks.

For **AR control mode = with PICKUP ...** it is possible to make the dead times dependent on the type of fault detected by the initiating protection function(s).

Table 2-15 AR control mode = **with PICKUP ...**

3453	1.AR Tdead 1Flt	is the dead time after single-phase pickup,
3454	1.AR Tdead 2Flt	is the dead time after two-phase pickup,
3455	1.AR Tdead 3Flt	is the dead time after three-phase pickup.

If the dead time is to be the same for all fault types, set all three parameters the same. Note that these settings only cause different dead times for different pickups. The tripping can only be three-pole.

If, when setting the reaction to sequential faults (see above at „General“), you have set address 3407 **EV. FLT. MODE starts 3p AR**, you can set a separate dead time for the three-pole dead time after clearance of the sequential fault **1.AR: Tdead EV.** (address 3458). Stability aspects are also decisive here. Normally the setting constraints are similar to address 3457 **1.AR Tdead3Trip**.

Under address 3459 **1.AR: CB? CLOSE** it can be determined whether the readiness of the circuit breaker ("circuit breaker ready") is interrogated before this first reclosure. With the setting **YES**, the dead time may be extended if the circuit breaker is not ready for a CLOSE–TRIP–cycle when the dead time expires. The maximum extension that is possible is the circuit breaker monitoring time; this time was set for all reclosure cycles under address 3409 **CB TIME OUT** (see above). Details about the circuit breaker monitoring can be found in the function description, Section 2.16, at margin heading „Interrogation of the Circuit Breaker Ready State“.

If there is a danger of stability problems in the network during a three-pole reclosure cycle, set address 3460 **1.AR SynRequest** to **YES**. In this case a check is made before each reclosure following a three-pole trip whether the voltages of feeder and busbar are sufficiently synchronous. This is only done on condition that either the internal synchronism and voltage check functions are available, or that an external device is available for synchronism and voltage check. If only single-pole reclose cycles are executed or if no stability problems are expected during three-pole dead times (e.g. due to closely meshed networks or in radial networks), set address 3460 to **NO**.

2nd to 4th reclosure cycle

If several cycles have been set in the configuration of the scope of protection functions, you can set individual reclosure parameters for the 2nd to 4th cycles. The same options are available as for the first cycle. Again, only some of the parameters shown below will be available depending on the selections made during configuration of the scope of protection functions.

For the 2nd cycle:

3461	2.AR: START	Start in 2nd cycle generally allowed
3462	2.AR: T-ACTION	Action time for the 2nd cycle
3464	2.AR Tdead 1Flt	Dead time after single-phase pickup
3465	2.AR Tdead 2Flt	Dead time after two-phase pickup
3466	2.AR Tdead 3Flt	Dead time after three-phase pickup
3467	2.AR Tdead1Trip	Dead time after single-pole tripping
3468	2.AR Tdead3Trip	Dead time after three-pole tripping
3469	2.AR: Tdead EV.	Dead time after evolving fault
3470	2.AR: CB? CLOSE	CB ready interrogation before reclosing
3471	2.AR SynRequest	Sync. check after three-pole tripping

For the 3rd cycle:

3472	3.AR: START	Start in 3rd cycle generally allowed
3473	3.AR: T-ACTION	Action time for the 3rd cycle
3475	3.AR Tdead 1Flt	Dead time after single-phase pickup
3476	3.AR Tdead 2Flt	Dead time after two-phase pickup
3477	3.AR Tdead 3Flt	Dead time after three-phase pickup
3478	3.AR Tdead1Trip	Dead time after single-pole tripping
3479	3.AR Tdead3Trip	Dead time after three-pole tripping
3480	3.AR: Tdead EV.	Dead time after evolving fault
3481	3.AR: CB? CLOSE	CB ready interrogation before reclosing
3482	3.AR SynRequest	Sync. check after three-pole tripping

For the 4th cycle:

3483	4.AR: START	Start in 4th cycle generally allowed
3484	4.AR: T-ACTION	Action time for the 4th cycle
3486	4.AR Tdead 1Flt	Dead time after single-phase pickup
3487	4.AR Tdead 2Flt	Dead time after two-phase pickup
3488	4.AR Tdead 3Flt	Dead time after three-phase pickup
3489	4.AR Tdead1Trip	Dead time after single-pole tripping
3490	4.AR Tdead3Trip	Dead time after three-pole tripping
3491	4.AR: Tdead EV.	Dead time after evolving fault
3492	4.AR: CB? CLOSE	CB ready interrogation before reclosing
3493	4.AR SynRequest	Sync. check after three-pole tripping

5th to 8th reclosure cycle

If more than four cycles were set during configuration of the functional scope, the dead times preceding the fifth (5th) through the ninth (9th) reclosing attempts are equal to the open breaker time which precedes the fourth (4th) reclosing attempt.

Notes on the Information Overview

The most important information about automatic reclosure is briefly explained insofar as it was not mentioned in the following lists or described in detail in the preceding text.

„>BLK 1 .AR- cycle“ (No. 2742) to „>BLK 4 . - n . AR“ (No. 2745)

The respective auto-reclose cycle is blocked. If the blocking state already exists when the automatic reclosure function is initiated, the blocked cycle is not executed and may be skipped (if other cycles are permitted). The same applies if the automatic reclosure function is started (running), but not internally blocked. If the block signal of a cycle appears while this cycle is being executed (in progress), the automatic reclosure function is blocked dynamically; no further automatic reclosures cycles are then executed.

„AR 1.CycZoneRel“ (No. 2889) to „AR 4.CycZoneRel“ (No. 2892)

The automatic reclosure is ready for the respective reclosure cycle. This information indicates which cycle will be run next. For example, external protection functions can use this information to release accelerated or overreaching trip stages prior to the corresponding reclose cycle.

„AR is blocked“ (No. 2783)

The automatic reclosure is blocked (e.g. circuit breaker not ready). This information indicates to the operational information system that in the event of an upcoming system fault there will be a final trip, i.e. without reclosure. If the automatic reclosure has been started, this information does not appear.

„AR not ready“ (No. 2784)

The automatic reclosure is not ready for reclosure at the moment. In addition to the „AR is blocked“ (No. 2783) mentioned above there are also obstructions during the course of the auto-reclosure cycles such as „action time run out“ or „last reclaim time running“. This information is particularly helpful during testing because no protection test cycle with reclosure may be initiated during this state.

„AR in progress“ (No. 2801)

This information appears with starting of the automatic reclosure function, i.e. with the first trip command which can start the automatic reclosure. If this reclosure was successful (or any in the case of multiple cycles), this information resets with the expiry of the last blocking time. If no reclosure was successful or if reclosure was blocked, it ends with the last – the final – trip command.

„AR Sync.Request“ (No. 2865)

Measuring request to an external synchronism check device. The information appears at the end of a dead time subsequent to three-pole tripping if a synchronism request was parameterised for the corresponding cycle. Reclosure only takes place when the synchronism check device has provided release signal „>Sync.release“ (No. 2731).

„>Sync.release“ (No. 2731)

Release of reclosure by an external synchronism check device if this was requested by the output information „AR Sync.Request“ (No. 2865).

2.16.3 Settings

Addresses which have an appended "A" can only be changed with DIGSI, under Additional Settings.

Addr.	Parameter	Setting Options	Default Setting	Comments
3401	AUTO RECLOSE	OFF ON	ON	Auto-Reclose Function
3402	CB? 1.TRIP	YES NO	NO	CB ready interrogation at 1st trip
3403	T-RECLAIM	0.50 .. 300.00 sec	3.00 sec	Reclaim time after successful AR cycle
3403	T-RECLAIM	0.50 .. 300.00 sec; 0	3.00 sec	Reclaim time after successful AR cycle
3404	T-BLOCK MC	0.50 .. 300.00 sec; 0	1.00 sec	AR blocking duration after manual close
3406	EV. FLT. RECOG.	with PICKUP with TRIP	with TRIP	Evolving fault recognition
3407	EV. FLT. MODE	Stops AutoRecl starts 3p AR	starts 3p AR	Evolving fault (during the dead time)
3408	T-Start MONITOR	0.01 .. 300.00 sec	0.50 sec	AR start-signal monitoring time
3409	CB TIME OUT	0.01 .. 300.00 sec	3.00 sec	Circuit Breaker (CB) Supervision Time
3410	T RemoteClose	0.00 .. 300.00 sec; ∞	0.20 sec	Send delay for remote close command
3411A	T-DEAD EXT.	0.50 .. 300.00 sec; ∞	∞ sec	Maximum dead time extension
3420	AR WITH DIFF	YES NO	YES	AR with differential protection ?
3421	AR w/ SOTF-O/C	YES NO	YES	AR with switch-onto-fault overcurrent ?
3422	AR w/ DIST.	YES NO	YES	AR with distance protection ?
3423	AR WITH I.TRIP	YES NO	YES	AR with intertrip ?
3424	AR w/ DTT	YES NO	YES	AR with direct transfer trip ?
3425	AR w/ BackUpO/C	YES NO	YES	AR with back-up overcurrent ?
3426	AR w/ W/I	YES NO	YES	AR with weak infeed tripping ?
3427	AR w/ EF-O/C	YES NO	YES	AR with earth fault overcurrent prot. ?
3430	AR TRIP 3pole	YES NO	YES	3pole TRIP by AR
3431	DLC / RDT	WITHOUT DLC	WITHOUT	Dead Line Check / Reduced Dead Time
3433	T-ACTION ADT	0.01 .. 300.00 sec; ∞	0.20 sec	Action time

Addr.	Parameter	Setting Options	Default Setting	Comments
3434	T-MAX ADT	0.50 .. 3000.00 sec	5.00 sec	Maximum dead time
3435	ADT 1p allowed	YES NO	NO	1pole TRIP allowed
3436	ADT CB? CLOSE	YES NO	NO	CB ready interrogation before re-closing
3437	ADT SynRequest	YES NO	NO	Request for synchro-check after 3pole AR
3438	T U-stable	0.10 .. 30.00 sec	0.10 sec	Supervision time for dead/live voltage
3440	U-live>	30 .. 90 V	48 V	Voltage threshold for live line or bus
3441	U-dead<	2 .. 70 V	30 V	Voltage threshold for dead line or bus
3450	1.AR: START	YES NO	YES	Start of AR allowed in this cycle
3451	1.AR: T-ACTION	0.01 .. 300.00 sec; ∞	0.20 sec	Action time
3453	1.AR Tdead 1Flt	0.01 .. 1800.00 sec; ∞	1.20 sec	Dead time after 1phase faults
3454	1.AR Tdead 2Flt	0.01 .. 1800.00 sec; ∞	1.20 sec	Dead time after 2phase faults
3455	1.AR Tdead 3Flt	0.01 .. 1800.00 sec; ∞	0.50 sec	Dead time after 3phase faults
3456	1.AR Tdead1Trip	0.01 .. 1800.00 sec; ∞	1.20 sec	Dead time after 1pole trip
3457	1.AR Tdead3Trip	0.01 .. 1800.00 sec; ∞	0.50 sec	Dead time after 3pole trip
3458	1.AR: Tdead EV.	0.01 .. 1800.00 sec	1.20 sec	Dead time after evolving fault
3459	1.AR: CB? CLOSE	YES NO	NO	CB ready interrogation before re-closing
3460	1.AR SynRequest	YES NO	NO	Request for synchro-check after 3pole AR
3461	2.AR: START	YES NO	NO	AR start allowed in this cycle
3462	2.AR: T-ACTION	0.01 .. 300.00 sec; ∞	0.20 sec	Action time
3464	2.AR Tdead 1Flt	0.01 .. 1800.00 sec; ∞	1.20 sec	Dead time after 1phase faults
3465	2.AR Tdead 2Flt	0.01 .. 1800.00 sec; ∞	1.20 sec	Dead time after 2phase faults
3466	2.AR Tdead 3Flt	0.01 .. 1800.00 sec; ∞	0.50 sec	Dead time after 3phase faults
3467	2.AR Tdead1Trip	0.01 .. 1800.00 sec; ∞	∞ sec	Dead time after 1pole trip
3468	2.AR Tdead3Trip	0.01 .. 1800.00 sec; ∞	0.50 sec	Dead time after 3pole trip
3469	2.AR: Tdead EV.	0.01 .. 1800.00 sec	1.20 sec	Dead time after evolving fault
3470	2.AR: CB? CLOSE	YES NO	NO	CB ready interrogation before re-closing
3471	2.AR SynRequest	YES NO	NO	Request for synchro-check after 3pole AR
3472	3.AR: START	YES NO	NO	AR start allowed in this cycle
3473	3.AR: T-ACTION	0.01 .. 300.00 sec; ∞	0.20 sec	Action time
3475	3.AR Tdead 1Flt	0.01 .. 1800.00 sec; ∞	1.20 sec	Dead time after 1phase faults

Addr.	Parameter	Setting Options	Default Setting	Comments
3476	3.AR Tdead 2Flt	0.01 .. 1800.00 sec; ∞	1.20 sec	Dead time after 2phase faults
3477	3.AR Tdead 3Flt	0.01 .. 1800.00 sec; ∞	0.50 sec	Dead time after 3phase faults
3478	3.AR Tdead1Trip	0.01 .. 1800.00 sec; ∞	∞ sec	Dead time after 1pole trip
3479	3.AR Tdead3Trip	0.01 .. 1800.00 sec; ∞	0.50 sec	Dead time after 3pole trip
3480	3.AR: Tdead EV.	0.01 .. 1800.00 sec	1.20 sec	Dead time after evolving fault
3481	3.AR: CB? CLOSE	YES NO	NO	CB ready interrogation before re-closing
3482	3.AR SynRequest	YES NO	NO	Request for synchro-check after 3pole AR
3483	4.AR: START	YES NO	NO	AR start allowed in this cycle
3484	4.AR: T-ACTION	0.01 .. 300.00 sec; ∞	0.20 sec	Action time
3486	4.AR Tdead 1Flt	0.01 .. 1800.00 sec; ∞	1.20 sec	Dead time after 1phase faults
3487	4.AR Tdead 2Flt	0.01 .. 1800.00 sec; ∞	1.20 sec	Dead time after 2phase faults
3488	4.AR Tdead 3Flt	0.01 .. 1800.00 sec; ∞	0.50 sec	Dead time after 3phase faults
3489	4.AR Tdead1Trip	0.01 .. 1800.00 sec; ∞	∞ sec	Dead time after 1pole trip
3490	4.AR Tdead3Trip	0.01 .. 1800.00 sec; ∞	0.50 sec	Dead time after 3pole trip
3491	4.AR: Tdead EV.	0.01 .. 1800.00 sec	1.20 sec	Dead time after evolving fault
3492	4.AR: CB? CLOSE	YES NO	NO	CB ready interrogation before re-closing
3493	4.AR SynRequest	YES NO	NO	Request for synchro-check after 3pole AR

2.16.4 Information List

No.	Information	Type of Information	Comments
127	AR ON/OFF	IntSP	Auto Reclose ON/OFF (via system port)
2701	>AR on	SP	>AR: Switch on auto-reclose function
2702	>AR off	SP	>AR: Switch off auto-reclose function
2703	>AR block	SP	>AR: Block auto-reclose function
2711	>AR Start	SP	>External start of internal Auto reclose
2712	>Trip L1 AR	SP	>AR: External trip L1 for AR start
2713	>Trip L2 AR	SP	>AR: External trip L2 for AR start
2714	>Trip L3 AR	SP	>AR: External trip L3 for AR start
2715	>Trip 1pole AR	SP	>AR: External 1pole trip for AR start
2716	>Trip 3pole AR	SP	>AR: External 3pole trip for AR start
2727	>AR RemoteClose	SP	>AR: Remote Close signal
2731	>Sync.release	SP	>AR: Sync. release from ext. sync.-check
2737	>BLOCK 1pole AR	SP	>AR: Block 1pole AR-cycle
2738	>BLOCK 3pole AR	SP	>AR: Block 3pole AR-cycle
2739	>BLK 1phase AR	SP	>AR: Block 1phase-fault AR-cycle
2740	>BLK 2phase AR	SP	>AR: Block 2phase-fault AR-cycle

No.	Information	Type of Information	Comments
2741	>BLK 3phase AR	SP	>AR: Block 3phase-fault AR-cycle
2742	>BLK 1.AR-cycle	SP	>AR: Block 1st AR-cycle
2743	>BLK 2.AR-cycle	SP	>AR: Block 2nd AR-cycle
2744	>BLK 3.AR-cycle	SP	>AR: Block 3rd AR-cycle
2745	>BLK 4.-n. AR	SP	>AR: Block 4th and higher AR-cycles
2746	>Trip for AR	SP	>AR: External Trip for AR start
2747	>Pickup L1 AR	SP	>AR: External pickup L1 for AR start
2748	>Pickup L2 AR	SP	>AR: External pickup L2 for AR start
2749	>Pickup L3 AR	SP	>AR: External pickup L3 for AR start
2750	>Pickup 1ph AR	SP	>AR: External pickup 1phase for AR start
2751	>Pickup 2ph AR	SP	>AR: External pickup 2phase for AR start
2752	>Pickup 3ph AR	SP	>AR: External pickup 3phase for AR start
2781	AR off	OUT	AR: Auto-reclose is switched off
2782	AR on	IntSP	AR: Auto-reclose is switched on
2783	AR is blocked	OUT	AR: Auto-reclose is blocked
2784	AR not ready	OUT	AR: Auto-reclose is not ready
2787	CB not ready	OUT	AR: Circuit breaker not ready
2788	AR T-CBreadyExp	OUT	AR: CB ready monitoring window expired
2796	AR on/off BI	IntSP	AR: Auto-reclose ON/OFF via BI
2801	AR in progress	OUT	AR: Auto-reclose in progress
2809	AR T-Start Exp	OUT	AR: Start-signal monitoring time expired
2810	AR TdeadMax Exp	OUT	AR: Maximum dead time expired
2818	AR evolving Flt	OUT	AR: Evolving fault recognition
2820	AR Program1pole	OUT	AR is set to operate after 1p trip only
2821	AR Td. evol.Flt	OUT	AR dead time after evolving fault
2839	AR Tdead 1pTrip	OUT	AR dead time after 1pole trip running
2840	AR Tdead 3pTrip	OUT	AR dead time after 3pole trip running
2841	AR Tdead 1pFlt	OUT	AR dead time after 1phase fault running
2842	AR Tdead 2pFlt	OUT	AR dead time after 2phase fault running
2843	AR Tdead 3pFlt	OUT	AR dead time after 3phase fault running
2844	AR 1stCyc. run.	OUT	AR 1st cycle running
2845	AR 2ndCyc. run.	OUT	AR 2nd cycle running
2846	AR 3rdCyc. run.	OUT	AR 3rd cycle running
2847	AR 4thCyc. run.	OUT	AR 4th or higher cycle running
2848	AR ADT run.	OUT	AR cycle is running in ADT mode
2851	AR CLOSE Cmd.	OUT	AR: Close command
2852	AR Close1.Cyc1p	OUT	AR: Close command after 1pole, 1st cycle
2853	AR Close1.Cyc3p	OUT	AR: Close command after 3pole, 1st cycle
2854	AR Close 2.Cyc	OUT	AR: Close command 2nd cycle (and higher)
2861	AR T-Recl. run.	OUT	AR: Reclaim time is running
2862	AR successful	OUT	AR successful
2864	AR 1p Trip Perm	OUT	AR: 1pole trip permitted by internal AR
2865	AR Sync.Request	OUT	AR: Synchro-check request
2871	AR TRIP 3pole	OUT	AR: TRIP command 3pole
2889	AR 1.CycZoneRel	OUT	AR 1st cycle zone extension release
2890	AR 2.CycZoneRel	OUT	AR 2nd cycle zone extension release

No.	Information	Type of Information	Comments
2891	AR 3.CycZoneRel	OUT	AR 3rd cycle zone extension release
2892	AR 4.CycZoneRel	OUT	AR 4th cycle zone extension release
2893	AR Zone Release	OUT	AR zone extension (general)
2894	AR Remote Close	OUT	AR Remote close signal send

2.17 Synchronism and Voltage Check (optional)

The synchronism and voltage check function ensures, when switching a line onto a busbar, that the stability of the network is not endangered. The voltage of the feeder to be energized is compared to that of the busbar to check conformance in terms of magnitude, phase angle and frequency within certain tolerances. Optionally, deenergization of the feeder can be checked before it is connected to an energized busbar (or vice versa).

The synchronism check can either be conducted only for automatic reclosure, only for manual closure (this includes also closing via control command) or in both cases. Different close permission (release) criteria can also be programmed for automatic and manual closure.

Syncro check is also possible without external matching transformers if a power transformer is located between the measuring points.

Closing is released for synchronous or asynchronous system conditions. In the latter case, the device determines the time for issuing the close command such that the voltages are identical the instant the breaker poles make contact.

2.17.1 Method of Operation

General

For comparing the two voltages, the synchronism check uses the voltages U_{sy1} and U_{sy2} . If the voltage transformers for the protective functions (U_{sy1}) are connected to the outgoing feeder side, U_{sy2} has to be connected to a busbar voltage.

If, however, the voltage transformers for the protective functions U_{sy1} are connected to the busbar side, U_{sy2} has to be connected to a feeder voltage.

U_{sy2} can be any phase-to-earth or phase-to-phase voltage (see Section 2.1.2.1 margin heading Voltage connection).

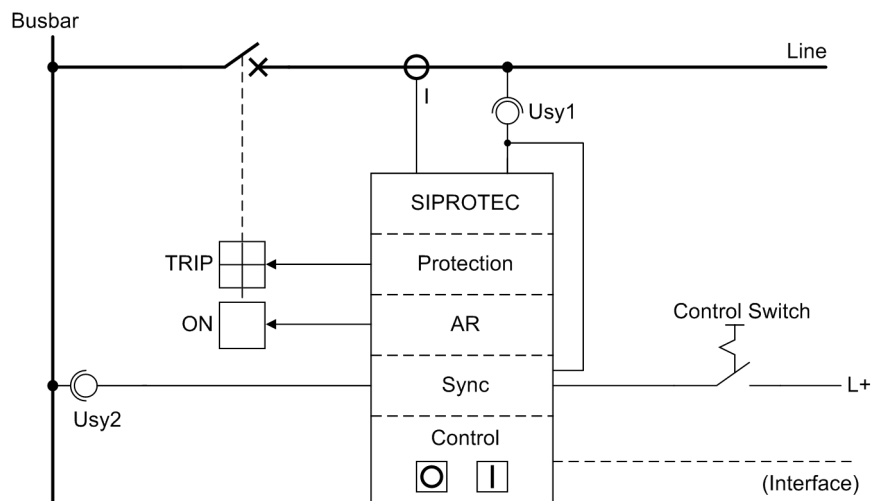


Figure 2-160 Synchronism check on closing - example

If a power transformer is located between the feeder voltage transformers and the busbar voltage transformers (Figure 2-161), its vector group can be compensated for by the 7SD5 relay, so that no external matching transformers are necessary.

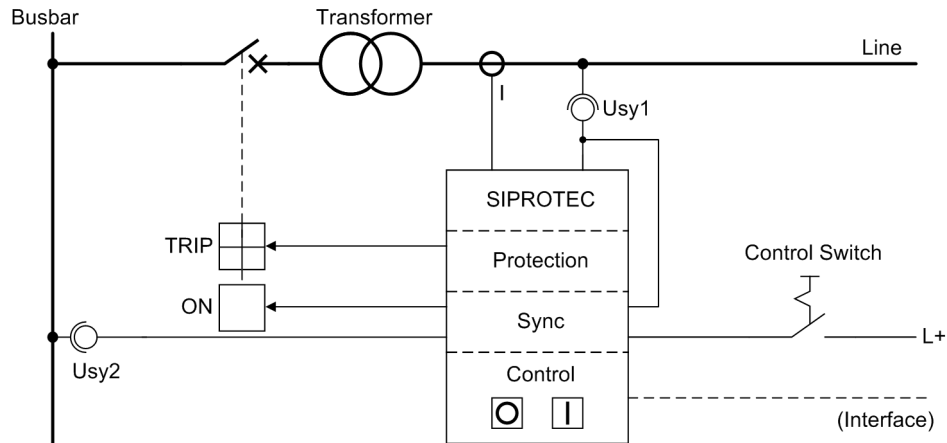


Figure 2-161 Synchronism check across a transformer - example

The synchronism check function in the 7SD5 usually operates in conjunction with the integrated automatic reclose, manual close, and the control functions of the relay. It is also possible to employ an external automatic reclosing system. In such a case signal exchange between the devices is accomplished via binary inputs and outputs (see Figure 2-162).

When closing via the integrated control function, the configured interlocking conditions may have to be verified before checking the conditions for synchronism. After the synchronism check grants the release, the interlocking conditions are not checked a second time.

Furthermore, switching is possible with synchronous or asynchronous system conditions or both. Synchronous switching means that the closing command is issued as soon as the critical values (voltage magnitude difference **AR maxVolt.Diff** or **MC maxVolt.Diff**, angle difference **AR maxAngleDiff** or **MC maxAngleDiff** and frequency difference **AR maxFreq.Diff** or **MC maxFreq.Diff**) lie within the set tolerances. For switching with asynchronous system conditions, the device calculates the correct timing of the closing command from the angle difference **AR maxAngleDiff** or **MC maxAngleDiff** and the frequency difference **AR maxFreq.Diff** or **MC maxFreq.Diff** so that the angle difference of the voltages (between busbar and feeder) is nearly 0° at the instant the circuit breaker primary contacts close. For this purpose, the device must be informed of the operating time of the circuit breaker for closing. Different frequency limit thresholds apply to switching under synchronism and asynchronous conditions. If closing is permitted exclusively under synchronous system conditions, the frequency difference limit for this condition can be set. If closing is permitted under synchronous as well as under asynchronous system conditions, a frequency difference below 0.01 Hz is treated as a synchronous condition, a higher frequency difference value can then be set for closing under asynchronous system conditions.


The synchro check function only operates when it is requested to do so. Various possibilities exist for this purpose:

- Measuring request from the internal automatic reclosure device. If the internal automatic reclosing function is set accordingly (one or more reclosing attempts set to synchronism check, see also Section 2.16.2), the measuring request is accomplished internally. The release conditions for automatic reclosing apply (parameter AR...).
- Request to execute a check synchronism measurement from an external automatic reclosure device. The measuring request must be activated via the binary input „>Sync. Start AR“ (no. 2906). The release conditions for automatic reclosing apply (parameter AR...).
- Measuring request from the manual CLOSE detection. The manual CLOSE detection of the central function control (Section 2.24.1) issues a measuring request provided that this was configured in the power system data 2 (Section 2.1.4.1, address 1151). This requires that the device is informed of the manual closing via binary input „>Manual Close“ (no. 356). The release conditions for manual closure apply (parameter MC...).
- Request to execute a check synchronism measurement from an external closing command. Binary input „>Sync. Start MC“ (no. 2905) fulfills this purpose. Unlike „>Manual Close“ (see previous paragraph), this merely affects the measuring request to the synchronism check function, but not other integrated manual CLOSE functions such as instantaneous tripping when switching onto a fault (e.g. overreaching zone for distance protection or accelerated tripping of a time overcurrent stage). The release conditions for manual closure apply (parameter MC...).
- Measuring request from the integrated control function via control keys or via the serial interface using DIGSI on a PC or from a control centre. The release conditions for manual closure apply (parameter MC...).

The synchronism-check function gives permission for passage „Sync. release“ (No. 2951) of the closing command to the required function. Furthermore, a separate closing command is available as output indication „Sync. CloseCmd“ (No. 2961).

The check of the release conditions is limited by an adjustable synchronous monitoring time **T-SYN. DURATION**. The configured conditions must be fulfilled within this time. If they are not, the synchronism will not be checked. A new synchronism check sequence requires a new request.

The device generates messages if, after a request to check synchronism, the conditions for release are not fulfilled, i.e. if the absolute voltage difference **AR maxVolt.Diff** or **MC maxVolt.Diff**, frequency difference **AR maxFreq.Diff** or **MC maxFreq.Diff** or angle difference **AR maxAngleDiff** or **MC maxAngleDiff** lie outside the permissible limit values. A precondition for these indications is that voltages within the operating range of the relay are available. When a closing command originates from the integrated control function and the conditions for synchronism are not fulfilled, the command is cancelled, i.e. the control function outputs „CO–“ (refer also to Section 2.26.1).

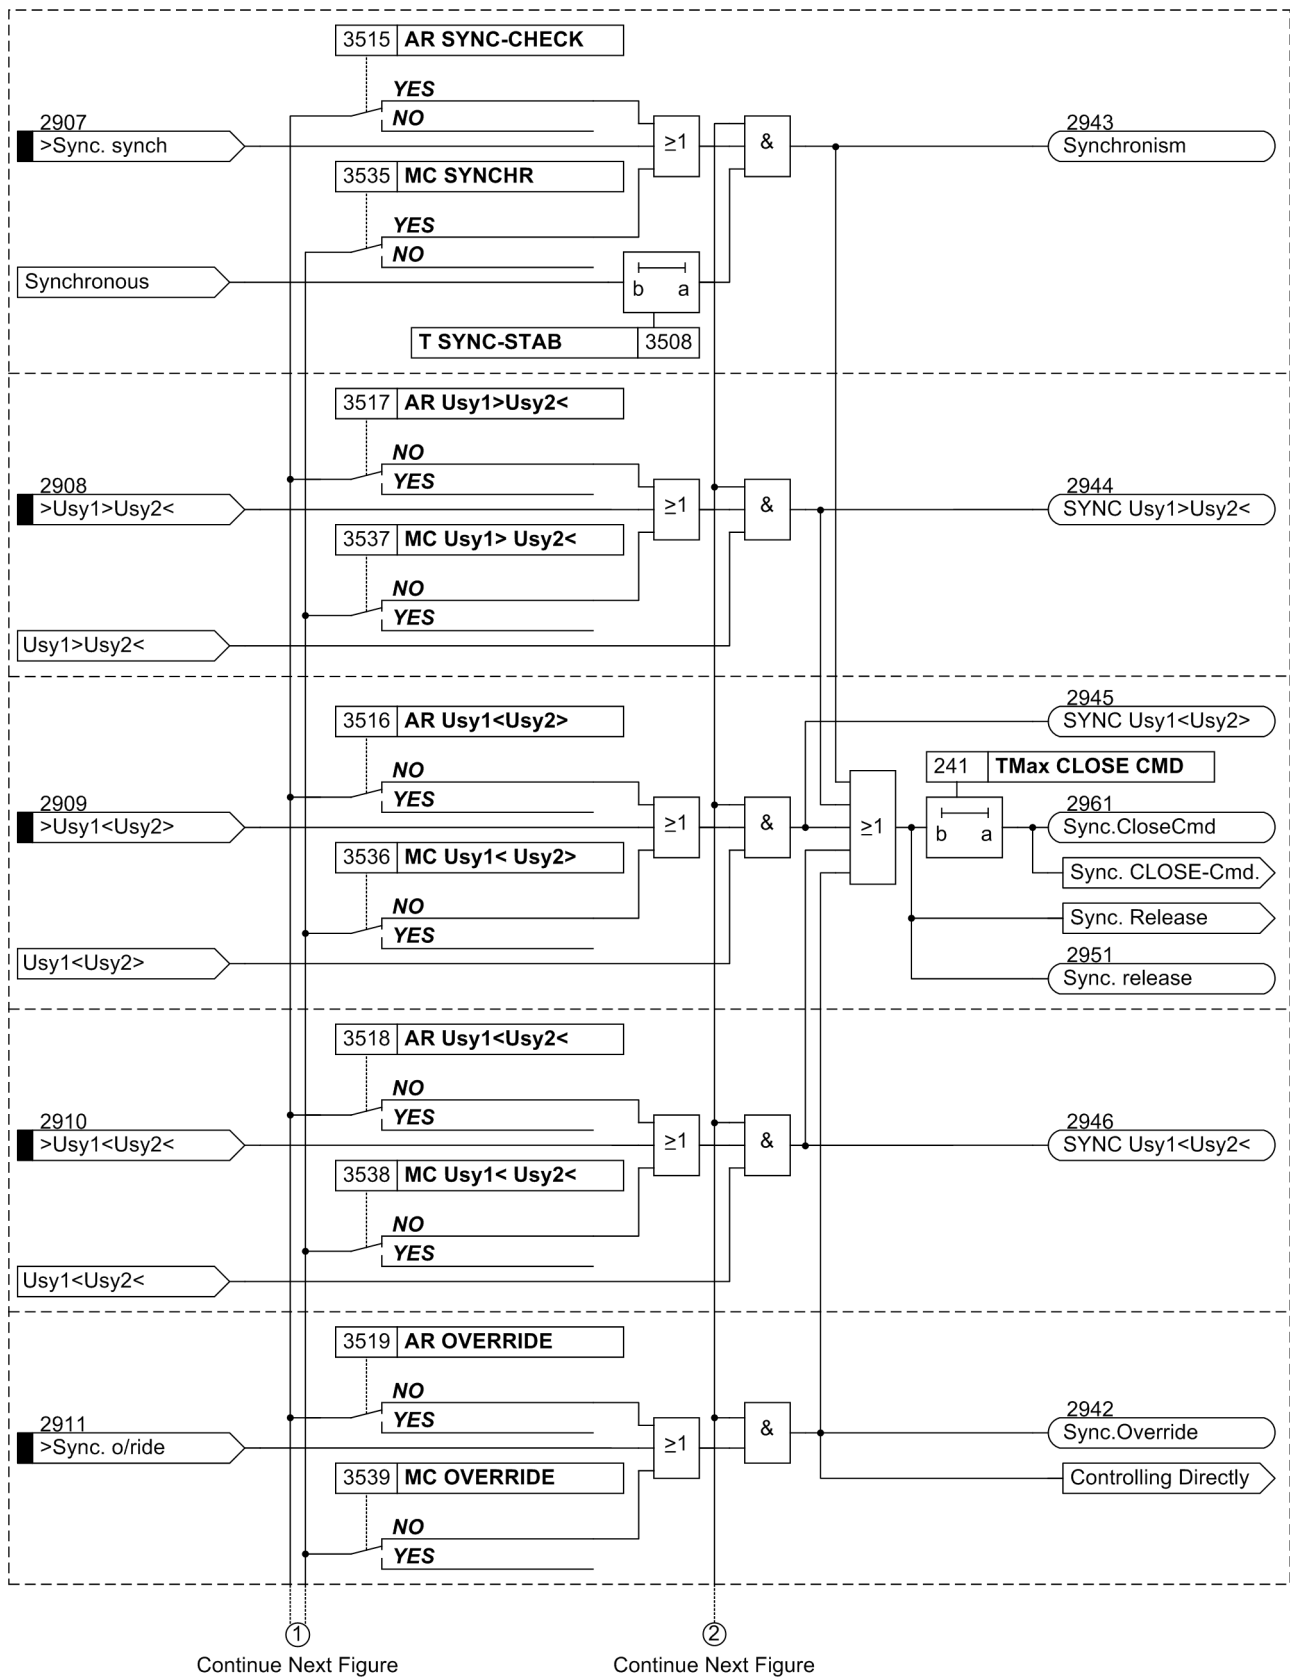

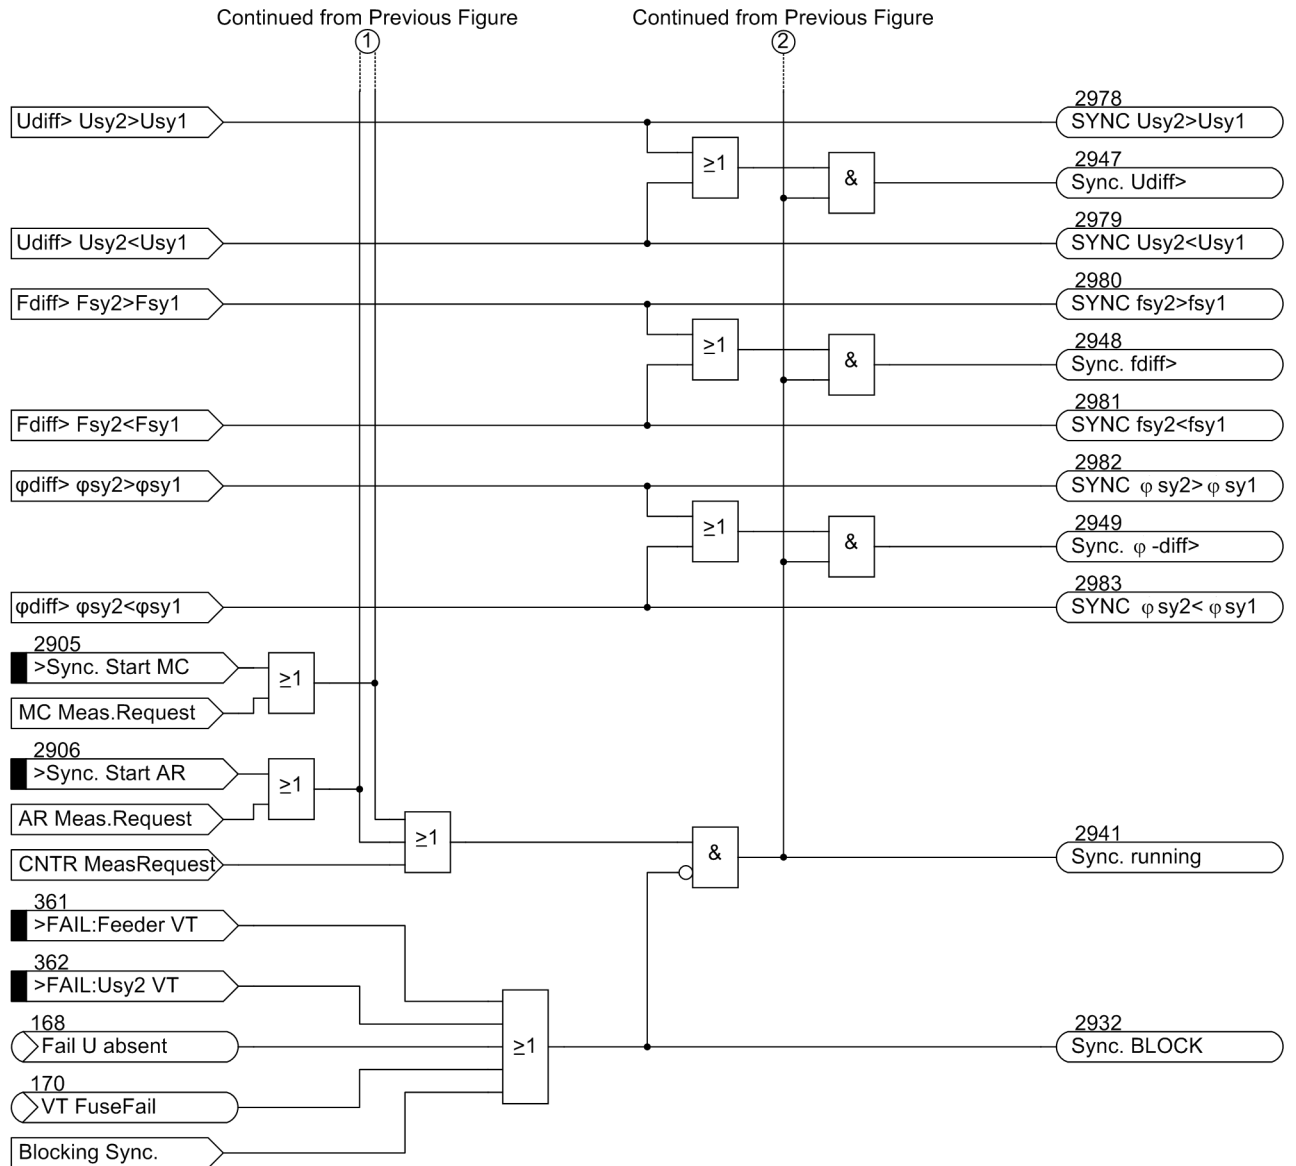


Figure 2-162 Synchro check logic

Operating modes

The closing check for automatic reclosing is possible in one of the following operating modes:

AR SYNC-CHECK

Release at synchronism, that is when the critical values **AR maxVolt.Diff**, **AR maxFreq.Diff**, **AR maxAngleDiff** are within the set limits.

AR Usy1<Usy2>

Release if measuring point Usy1< is de-energised and the measuring point Usy2> is energised.

AR Usy1>Usy2<

Release if measuring point Usy1> is energised and the measuring point Usy2< is de-energised.

AR Usy1<Usy2<

Release if measuring point Usy1< is de-energised and the measuring point Usy2< is also de-energised.

AR OVERRIDE

Release without any check.

The closing check for manual reclosing is possible in one of the following operating modes:

MC SYNCHR	Release at synchronism, that is when the critical values MC maxVolt.Diff , MC maxFreq.Diff , MC maxAngleDiff are within the set limits.
MC Usy1< Usy2>	Release if measuring point Usy1< is de-energised and the measuring point Usy2> is energised.
MC Usy1> Usy2<	Release if measuring point Usy1> is energised and the measuring point Usy2< is de-energised.
MC Usy1< Usy2<	Release if measuring point Usy1< is de-energised and the measuring point Usy2< is also de-energised.
MC OVERRIDE	Release without any check.

Each of these conditions can be enabled or disabled individually; combinations are also possible, e.g. release if **AR Usy1<Usy2>** or **AR Usy1>Usy2<** are fulfilled. Combination of **AR OVERRIDE** with other parameters is, of course, not reasonable (see also Figure 2-162).

The release conditions can be configured individually for automatic reclosing or for manual closing or for closing via control commands. For example, manual closing and control closing can be allowed in cases of synchronism or dead line, whilst, before an automatic reclose attempt dead line conditions are only checked at one line end and after the automatic reclose attempt only synchronism at the other end.

Dead-line closing

To release the closing command to couple a dead overhead line to a live busbar, the following conditions are checked:

- Is the feeder voltage below the set value **Dead Volt. Thr.**?
- Is the busbar voltage above the setting value **Live Volt. Thr.** but below the maximum voltage **Umax**?
- Is the frequency within the permitted operating range $f_N \pm 3 \text{ Hz}$?

After successful check the closing command is released.

Corresponding conditions apply when switching a live line onto a dead busbar or a dead line onto a dead busbar.

Closing under synchronous system conditions

Before releasing a closing command at synchronous conditions, the following conditions are checked:

- Is the busbar voltage above the setting value **Live Volt. Thr.** but below the maximum voltage **Umax**?
- Is the feeder voltage above the setting value **Live Volt. Thr.** but below the maximum voltage **Umax**?
- Is the voltage difference $|U_{sy1} - U_{sy2}|$ within the permissible tolerance **AR maxVolt.Diff** or **MC maxVolt.Diff**?
- Are the two frequencies f_{sy1} and f_{sy2} within the permitted operating range $f_N \pm 3 \text{ Hz}$?
- Does the frequency difference $|f_{sy1} - f_{sy2}|$ lie within the permissible tolerance **AR maxFreq.Diff** or **MC maxFreq.Diff**?
- Is the angle difference $|\varphi_{sy1} - \varphi_{sy2}|$ within the permissible tolerance **AR maxAngleDiff** or **MC maxAngleDiff**?

To check whether these conditions are fulfilled for a certain minimum time, you can set this minimum time as **T SYNC-STAB**. Checking the synchronism conditions can also

be confined to the a maximum monitoring time **T-SYN. DURATION**. This implies that the conditions must be fulfilled within the time **T-SYN. DURATION** for the duration of **T SYNC-STAB**. This the case, the closing release is granted.

Closing under asynchronous system conditions

Before releasing a closing command at asynchronous conditions, the following conditions are checked:

- Is the busbar voltage above the setting value **Live Volt. Thr.** but below the maximum voltage **U_{max}**?
- Is the feeder voltage above the setting value **Live Volt. Thr.** but below the maximum voltage **U_{max}**?
- Is the voltage difference $|U_{sy1} - U_{sy2}|$ within the permissible tolerance **AR maxVolt.Diff** or **MC maxVolt.Diff**?
- Are the two frequencies f_{sy1} and f_{sy2} within the permitted operating range $f_N \pm 3$ Hz?
- Does the frequency difference $|f_{sy1} - f_{sy2}|$ lie within the permissible tolerance **AR maxFreq.Diff** or **MC maxFreq.Diff**?

When the check has been terminated successfully, the device determines the next synchronizing time from the angle difference and the frequency difference. The close command is issued at synchronization time minus the operating time of the circuit breaker.

2.17.2 Setting Notes

Preconditions

When setting the general power system data (Power system data 1, refer to Section 2.1.2.1) a number of parameters regarding the measured quantities and the operating mode of the synchronism check function must be applied.

This concerns the following parameters:

203 Unom PRIMARY	primary rated voltage of the voltage transformers of the protective functions (phase-to-phase) in kV, measuring point U_{sy1} ;
204 Unom SECONDARY	secondary rated voltage of the protective functions (phase-to-phase) in V, measuring point U_{sy1} ;
210 U4 transformer	Voltage measuring input U_4 must be set to Usy2 transf. ;
212 Usy2 connection	voltage connection of measuring point U_{sy2} (e.g. U_{L1-L2}),
214 φ Usy2-Usy1	phase displacement between the voltages U_{sy2} and U_{sy1} if a transformer is switched in between;
215 Usy1/Usy2 ratio	ratio between the secondary voltage U_{sy1} and voltage U_{sy2} under nominal condition;
230 Rated Frequency	the operating range of the synchronism check refers to the nominal frequency of the power system ($f_N \pm 3$ Hz);
1103 FullScaleVolt.	Nominal operational voltage of the primary power system (phase-phase) in kV;
and, if closing at asynchronous system conditions is allowed,	
239 T-CB close	the closing time of the circuit breaker.



WARNING!

Closing at Asynchronous System Conditions!

Closing under asynchronous system conditions requires the closing time of the circuit breaker to be set correctly in the Power System Data 1 (address 239).

Otherwise, faulty synchronization may occur.

General

The synchronism check can only operate if it has been set to **Enabled** and parameter **U4 transformer** (address 210) to **Usy2 transf.** during configuration of the device scope (address 135).

The measured values of synchronism check (636 „Udiff =“, 637 „Usy1=“, 638 „Usy2=“, 647 „F-diff=“, 649 „F-sy1 =“, 646 „F-sy2 =“ and 648 „φdif=“) are only available if the synchronism check is in service.

Different interrogation conditions can be parameterized for automatic reclosure on the one hand and for manual closure on the other hand. Each closing command is considered a manual reclosure if it was initiated via the integrated control function or via a serial interface.

The general limit values for synchronism check are set at address 3501 to 3508. Additionally, addresses 3510 to 3519 are relevant for automatic reclosure, addresses 3530 to 3539 are relevant for manual closure. Moreover, address 3509 is relevant for closure via the integrated control function.

The complete synchronism check function is switched **ON** or **OFF** in address 3501 **FCT Synchronism**. If switched off, the synchronism check does not verify the synchronization conditions and release is not granted. You can also set **ON:w/o CloseCmd**: the CLOSE command is in this case not included in the common device alarm „Relay CLOSE“ (No. 510), but the alarm „Sync.CloseCmd“ (No. 2961) is issued.

Address 3502 **Dead Volt. Thr.** indicates the voltage threshold below which the feeder or the busbar can safely be considered de-energised (for checking a de-energised feeder or busbar). The setting is applied in Volts secondary. This value can be entered as a primary value when parameterising with a PC and DIGSI. Depending on the VT connection these are phase-to-earth voltages or phase-to-phase voltages.

Address 3503 **Live Volt. Thr.** indicates the voltage above which the feeder or busbar is regarded as being definitely energised (for energised line or busbar check and for the lower limit of synchronism check). It must be set below the minimum operational undervoltage to be expected. The setting is applied in volts secondary. This value can be entered as a primary value when parameterising with a PC and DIGSI. Depending on the connection of the voltages these are phase-to-earth voltages or phase-to-phase voltages.

The maximum permissible voltage for the operating range of the synchronism check function is set in address 3504 **Umax**. The setting is applied in Volts secondary. This value can be entered as a primary value when parameterising with a PC and DIGSI. Depending on the VT connection these are phase-to-earth voltages or phase-to-phase voltages.

Verification of the release conditions via synchronism check can be limited to a configurable synchronous monitoring time **T-SYN. DURATION** (address 3507). The configured conditions must be fulfilled within this time. If not, closure will not be released. If this time is set to ∞ , the conditions will be checked until they are fulfilled or the measurement request is cancelled.

If the conditions for synchronous operation must be checked to be maintained for a certain duration, this minimum duration **T SYNC-STAB** can be set in address 3508.

Synchronism conditions for automatic reclosure

Addresses 3510 to 3519 are relevant to the check conditions before automatic reclosure of the circuit breaker. When setting the parameters for the internal automatic reclosing function (Section 2.16.2), it is decided with which automatic reclosing cycle synchronism and voltage check should be carried out.

Address 3510 **Op.mode with AR** determines whether closing under asynchronous system conditions is allowed for automatic reclosure. Set this parameter to **with T-CB close** to allow asynchronous closing; the relay will then consider the circuit breaker closing time before determining the correct instant for the close command. Remember that closing under asynchronous system conditions is allowed only if the circuit breaker closing time is set correctly (see above under „Preconditions“)! If you wish to permit automatic reclosure only under synchronous system conditions, set this address to **w/o T-CB close**.

The permissible difference between the voltages is set in address 3511 **AR maxVolt.Diff**. The setting is applied in Volts secondary. This value can be entered as a primary value when parameterising with a PC and DIGSI. Depending on the VT connection these are phase-to-earth voltages or phase-to-phase voltages.

The permissible frequency difference between the voltages is set in address 3512 **AR maxFreq.Diff**, the permissible phase angle difference in address 3513 **AR maxAngleDiff**.

The further release conditions for automatic reclosing are set at addresses 3515 to 3519.

The following addresses mean:

3515 AR SYNC-CHECK	both measuring points U_{sy1} and U_{sy2} must be energised (Live Volt. Thr. , address 3503); the synchronism conditions are checked, i.e. AR maxVolt.Diff (address 3511), AR maxFreq.Diff (address 3512) and AR maxAngleDiff (address 3513). This parameter can only be altered with DIGSI under Additional Settings ;
3516 AR Usy1<Usy2>	the measuring point U_{sy1} must be de-energised (Dead Volt. Thr. , address 3502), measuring point U_{sy2} must be energised (Live Volt. Thr. , address 3503) ;
3517 AR Usy1>Usy2<	the measuring point U_{sy1} must be energised (Live Volt. Thr. , address 3503), measuring point U_{sy2} must be de-energised (Dead Volt. Thr. , address 3502);
3518 AR Usy1<Usy2<	both measuring points U_{sy1} and U_{sy2} must be de-energised (Dead Volt. Thr. , address 3502);
3519 AR OVERRIDE	Automatic reclosure is released without any check.

The five possible release conditions are independent from each other and can be combined.

Synchronism conditions for manual closure and control command

Addresses 3530 to 3539 are relevant to the check conditions before manual closure and closing via control command of the circuit breaker. When setting the general protection data (Power System Data 2, Section 2.1.4.1) it was already decided at address 1151 whether synchronism and voltage check should be carried out before manual closing. With the following setting in address **SYN.MAN.CL = w/o Sync-check**, no checks are performed before manual closing.

For commands through the integrated control (local, DIGSI, serial interface), address 3509 **SyncCB** determines whether synchronism checks will be performed or not. This address also informs the device to which switching device of the control the synchronising request refers. You can select from the switching devices which are available for the integrated control. Choose the circuit breaker to be operated via the synchronism check. This is usually the circuit breaker which is operated in case of manual closing or automatic reclosure. If you set **SyncCB = none** here, a CLOSE command via the integrated control will be carried out without synchronism check.

Address 3530 **Op.mode with MC** determines whether closing under asynchronous system conditions is allowed for manual closing or reclosure via control command. Set this parameter to **with T-CB close** to allow asynchronous closing; the relay will then consider the circuit breaker closing time before determining the correct instant for the close command. Remember that closing under asynchronous system conditions is allowed only if the circuit breaker closing time is set correctly (see above under „Pre-conditions“)! If you wish to permit manual closure or closing via control command only under synchronous system conditions, set this address to **w/o T-CB close**.

The permissible difference between the voltages is set in address 3531 **MC maxVolt.Diff**. The setting is applied in Volts secondary. This value can be entered as a primary value when parameterising with a PC and DIGSI. Depending on the VT connection these are phase-to-earth voltages or phase-to-phase voltages.

The permissible frequency difference between the voltages is set at address 3532 **MC maxFreq.Diff**, the permissible phase angle difference at address 3533 **MC maxAngleDiff**.

The further release conditions for manual reclosing or reclosure via control command are set under addresses 3535 to 3539.

The following addresses mean:

- | | |
|-----------------------------|---|
| 3535 MC SYNCHR | both measuring points U_{sy1} and U_{sy2} must be energised (Live Volt. Thr. , address 3503); the synchronism conditions are checked i.e. MC maxVolt.Diff (address 3531), MC maxFreq.Diff (address 3532) and MC maxAngleDiff (address 3533). This parameter can only be altered in DIGSI at Display Additional Settings ; |
| 3536 MC $U_{sy1} < U_{sy2}$ | the measuring point U_{sy1} must be de-energised (Dead Volt. Thr. , address 3502), measuring point U_{sy2} must be energised (Live Volt. Thr. , address 3503) ; |
| 3537 MC $U_{sy1} > U_{sy2}$ | the measuring point U_{sy1} must be energised (Live Volt. Thr. , address 3503), measuring point U_{sy2} must be de-energised (Dead Volt. Thr. , address 3502); |

- 3538 **MC Usy1< Usy2<** both measuring points U_{sy1} and U_{sy2} must be de-energised (**Dead Volt. Thr.**, address 3502);
- 3539 **MC OVERRIDE** Manual closing or closing via control command is released without any check.

The five possible release conditions are independent from each other and can be combined.



Note

The closing functions of the device issue individual output indications for the corresponding close command. Be sure that the output indications are assigned to the correct output relays.

No. 2851 „AR CLOSE Cmd.“ for CLOSE via command of the automatic reclosure,

No. 562 „Man.Close Cmd“ for manual CLOSE via binary input,

No. 2961 „Sync.CloseCmd“ for CLOSE via synchronism check (not required if synchronism check releases the other CLOSE commands),

No. 7329 „CB1-TEST close“ for CLOSE by circuit breaker test, additionally CLOSE command via control, e.g. „Brk Close“.

No. 510 „Relay CLOSE“ general CLOSE command. It comprises all CLOSE commands described above.

Notes on the Information List

The most important information of the device is briefly explained in so far as it cannot be interpreted in the following information lists or described in detail in the foregoing text.

„>Sync. Start MC“ (No. 2905)

Binary input which enables direct initiation of the synchronism check with setting parameters for manual close. This initiation with setting parameter for manual close has always precedence if binary inputs „>Sync. Start MC“ (No. 2905) and „>Sync. Start AR“ (No. 2906, see below) are activated at the same time.

„>Sync. Start AR“ (No 2906)

Measuring request from an external automatic reclosure device. The parameters of synchronism check set for automatic reclosure are valid here.

„Sync. req.CNTRL“ (No 2936)

Measurement request of the control function; this request is evaluated on event-triggered basis and only generated if the control issues a measurement request.

„Sync. release“ (No 2951)

Release signal to an external automatic reclosure device.

2.17.3 Settings

Addresses which have an appended "A" can only be changed with DIGSI, under Additional Settings.

Addr.	Parameter	Setting Options	Default Setting	Comments
3501	FCT Synchronism	ON OFF ON:w/o CloseCmd	ON	Synchronism and Voltage Check function
3502	Dead Volt. Thr.	1 .. 100 V	5 V	Voltage threshold dead line / bus
3503	Live Volt. Thr.	20 .. 125 V	90 V	Voltage threshold live line / bus
3504	Umax	20 .. 140 V	110 V	Maximum permissible voltage
3507	T-SYN. DURATION	0.01 .. 600.00 sec; ∞	1.00 sec	Maximum duration of synchronism-check
3508	T SYNC-STAB	0.00 .. 30.00 sec	0.00 sec	Synchronous condition stability timer
3509	SyncCB	(Setting options depend on configuration)	None	Synchronizable circuit breaker
3510	Op.mode with AR	with T-CB close w/o T-CB close	w/o T-CB close	Operating mode with AR
3511	AR maxVolt.Diff	1.0 .. 60.0 V	2.0 V	Maximum voltage difference
3512	AR maxFreq.Diff	0.03 .. 2.00 Hz	0.10 Hz	Maximum frequency difference
3513	AR maxAngleDiff	2 .. 80 °	10 °	Maximum angle difference
3515A	AR SYNC-CHECK	YES NO	YES	AR at Usy2>, Usy1>, and Synchr.
3516	AR Usy1<Usy2>	YES NO	NO	AR at Usy1< and Usy2>
3517	AR Usy1>Usy2<	YES NO	NO	AR at Usy1> and Usy2<
3518	AR Usy1<Usy2<	YES NO	NO	AR at Usy1< and Usy2<
3519	AR OVERRIDE	YES NO	NO	Override of any check before AR
3530	Op.mode with MC	with T-CB close w/o T-CB close	w/o T-CB close	Operating mode with Man.Cl
3531	MC maxVolt.Diff	1.0 .. 60.0 V	2.0 V	Maximum voltage difference
3532	MC maxFreq.Diff	0.03 .. 2.00 Hz	0.10 Hz	Maximum frequency difference
3533	MC maxAngleDiff	2 .. 80 °	10 °	Maximum angle difference
3535A	MC SYNCHR	YES NO	YES	Manual Close at Usy2>, Usy1>, and Synchr
3536	MC Usy1< Usy2>	YES NO	NO	Manual Close at Usy1< and Usy2>
3537	MC Usy1> Usy2<	YES NO	NO	Manual Close at Usy1> and Usy2<

Addr.	Parameter	Setting Options	Default Setting	Comments
3538	MC Usy1< Usy2<	YES NO	NO	Manual Close at Usy1< and Usy2<
3539	MC OVERRIDE	YES NO	NO	Override of any check before Man.CI

2.17.4 Information List

No.	Information	Type of Information	Comments
2901	>Sync. on	SP	>Switch on synchro-check function
2902	>Sync. off	SP	>Switch off synchro-check function
2903	>BLOCK Sync.	SP	>BLOCK synchro-check function
2905	>Sync. Start MC	SP	>Start synchro-check for Manual Close
2906	>Sync. Start AR	SP	>Start synchro-check for AR
2907	>Sync. synch	SP	>Sync-Prog. Live bus / live line / Sync
2908	>Usy1>Usy2<	SP	>Sync-Prog. Usy1>Usy2<
2909	>Usy1<Usy2>	SP	>Sync-Prog. Usy1<Usy2>
2910	>Usy1<Usy2<	SP	>Sync-Prog. Usy1<Usy2<
2911	>Sync. o/ride	SP	>Sync-Prog. Override (bypass)
2930	Sync. on/off BI	IntSP	Syncro-check ON/OFF via BI
2931	Sync. OFF	OUT	Syncro-check is switched OFF
2932	Sync. BLOCK	OUT	Syncro-check is BLOCKED
2934	Sync. faulty	OUT	Syncro-check function faulty
2935	Sync.Tsup.Exp	OUT	Syncro-check supervision time expired
2936	Sync. req.CNTRL	OUT	Syncro-check request by control
2941	Sync. running	OUT	Synchronization is running
2942	Sync.Override	OUT	Syncro-check override/bypass
2943	Synchronism	OUT	Synchronism detected
2944	SYNC Usy1>Usy2<	OUT	SYNC Condition Usy1>Usy2< true
2945	SYNC Usy1<Usy2>	OUT	SYNC Condition Usy1<Usy2> true
2946	SYNC Usy1<Usy2<	OUT	SYNC Condition Usy1<Usy2< true
2947	Sync. Udiff>	OUT	Sync. Voltage diff. greater than limit
2948	Sync. fdiff>	OUT	Sync. Freq. diff. greater than limit
2949	Sync. ϕ -diff>	OUT	Sync. Angle diff. greater than limit
2951	Sync. release	OUT	Synchronism release (to ext. AR)
2961	Sync.CloseCmd	OUT	Close command from synchro-check
2970	SYNC fsy2>>	OUT	SYNC frequency fsy2 > (fn + 3Hz)
2971	SYNC fsy2<<	OUT	SYNC frequency fsy2 < (fn + 3Hz)
2972	SYNC fsy1>>	OUT	SYNC frequency fsy1 > (fn + 3Hz)
2973	SYNC fsy1<<	OUT	SYNC frequency fsy1 < (fn + 3Hz)
2974	SYNC Usy2>>	OUT	SYNC voltage Usy2 >Umax (P.3504)
2975	SYNC Usy2<<	OUT	SYNC voltage Usy2 < U> (P.3503)
2976	SYNC Usy1>>	OUT	SYNC voltage Usy1 >Umax (P.3504)
2977	SYNC Usy1<<	OUT	SYNC voltage Usy1 < U> (P.3503)
2978	SYNC Usy2>Usy1	OUT	SYNC Udiff too large (Usy2>Usy1)

No.	Information	Type of Information	Comments
2979	SYNC $U_{sy2} < U_{sy1}$	OUT	SYNC Udiff too large ($U_{sy2} < U_{sy1}$)
2980	SYNC $f_{sy2} > f_{sy1}$	OUT	SYNC fdiff too large ($f_{sy2} > f_{sy1}$)
2981	SYNC $f_{sy2} < f_{sy1}$	OUT	SYNC fdiff too large ($f_{sy2} < f_{sy1}$)
2982	SYNC $\varphi_{sy2} > \varphi_{sy1}$	OUT	SYNC PHldiff too large ($PHI_{sy2} > PHI_{sy1}$)
2983	SYNC $\varphi_{sy2} < \varphi_{sy1}$	OUT	SYNC PHldiff too large ($PHI_{sy2} < PHI_{sy1}$)

2.18 Undervoltage and Overvoltage Protection (optional)

Voltage protection has the function of protecting electrical equipment against under-voltage and overvoltage. Both operational states are unfavourable as overvoltage may cause, for example, insulation problems or undervoltage may cause stability problems.

The overvoltage protection in the 7SD5 detects the phase voltages U_{L1-E} , U_{L2-E} and U_{L3-E} , the phase-to-phase voltages U_{L1-L2} , U_{L2-L3} and U_{L3-L1} , as well as the displacement voltage $3U_0$. Instead of the displacement voltage any other voltage that is connected to the fourth voltage input U_4 of the device can be detected. Furthermore, the device calculates the positive sequence system voltage and the negative sequence system voltage so that the symmetrical components are also monitored. Here compounding is also possible which calculates the voltage at the remote line end.

The undervoltage protection can also use the phase voltages U_{L1-E} , U_{L2-E} and U_{L3-E} , the phase-to-phase voltages U_{L1-L2} , U_{L2-L3} and U_{L3-L1} , as well as the positive sequence system.

These voltage protection functions can be combined according to the user's requirements. They can be switched on or off separately, or used for alarm purposes only. In the latter case the respective trip commands do not appear. Each voltage protection function is two-stage, i.e. it is provided with two threshold setting stages, each one with its respective time delay.

Abnormally high voltages often occur e.g. in low loaded, long distance transmission lines, in islanded systems when generator voltage regulation fails, or after full load shutdown of a generator with the generator disconnected from the system. Even if compensation reactors are used to avoid line overvoltages by compensation of the line capacitance and thus reduction of the overvoltage, the overvoltage will endanger the insulation if the reactors fail (e.g. due to fault clearance). The line must be de-energised within a very short time.

The undervoltage protection can be applied, for example, for disconnection or load shedding tasks in a system. Furthermore, this protection scheme can detect menacing stability problems. With induction machines undervoltages have an effect on the stability and permissible torque thresholds.

2.18.1 Overvoltage protection

Overvoltage Phase–Earth

Figure 2-163 depicts the logic diagram of the phase voltage stages. The fundamental frequency is numerically filtered from each of the three measuring voltages so that harmonics or transient voltage peaks are largely eliminated. Two threshold stages **Uph-e>** and **Uph-e>>** are compared with the voltages. If a phase voltage exceeds these thresholds it is indicated phase-segregated. Furthermore, a general pickup indication „Uph-e> Pickup“ „Uph-e>> Pickup“ is given. The drop-out to pickup ratio can be set (**Uph-e>(>) RESET**).

Every stage starts a time delay which is common to all phases. Expiry of the respective time delay **T Uph-e>** or **T Uph-e>>** is signalled and usually results in the trip command „Uph-e>(>) TRIP“.

The overvoltage protection phase–earth can be blocked via a binary input „>Uph-e>(>) BLK“.

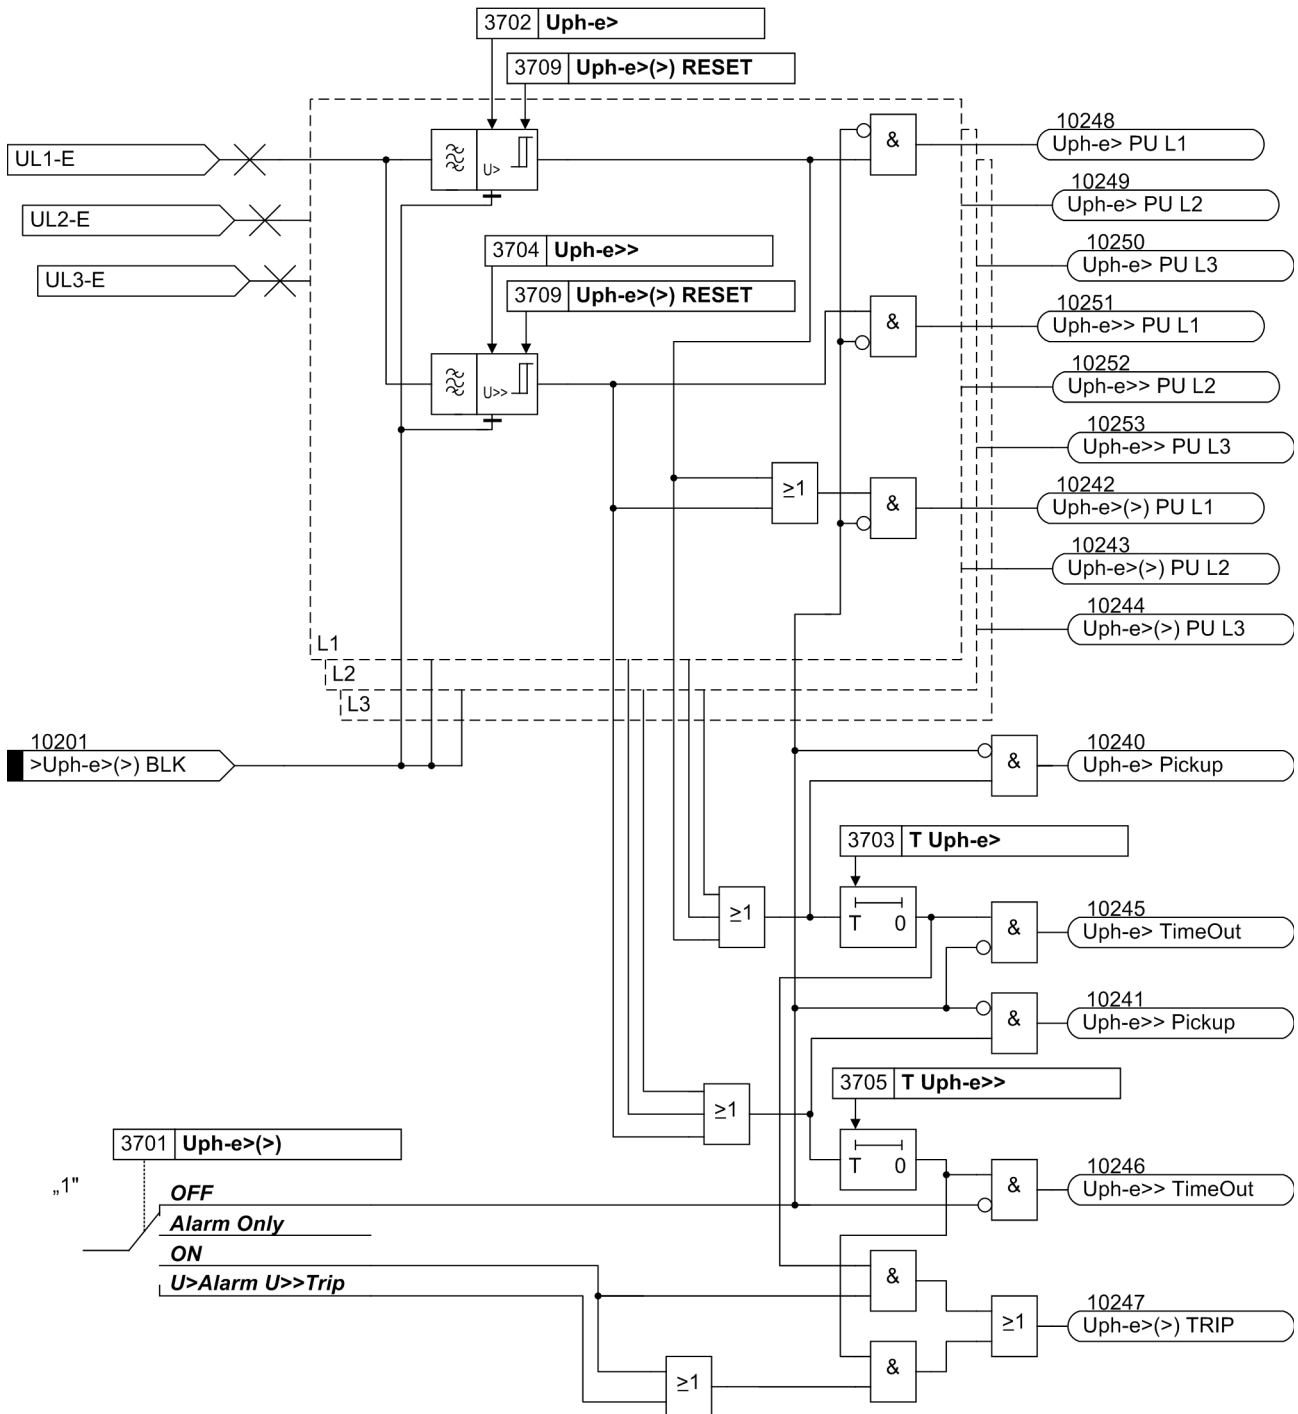


Figure 2-163 Logic diagram of the overvoltage protection for phase voltage

Phase-phase over-voltage

The phase-phase overvoltage protection operates just like the phase-earth protection except that it detects phase-to-phase voltages. Accordingly, phase-to-phase voltages which have exceeded one of the stage thresholds **Uph-ph>** or **Uph-ph>>** are also indicated. Beyond this, Figure 2-163 applies in principle.

The phase-phase overvoltage protection can also be blocked via a binary input „>Uph-ph>(>) BLK“.

Overvoltage positive sequence system U_1

The device calculates the positive sequence system according to its defining equation

$$\underline{U}_1 = 1/3 \cdot (\underline{U}_{L1} + \underline{a} \cdot \underline{U}_{L2} + \underline{a}^2 \cdot \underline{U}_{L3})$$

where $\underline{a} = e^{j120^\circ}$.

The resulting positive sequence voltage is fed to the two threshold stages **U1>** and **U1>>** (see Figure 2-164). Combined with the associated time delays **T U1>** and **T U1>>** these stages form a two-stage overvoltage protection for the positive sequence system. Here too, the drop-out to pickup ratio can be set.

The overvoltage protection for the positive sequence system can also be blocked via a binary input „>U1>(>) BLK“.

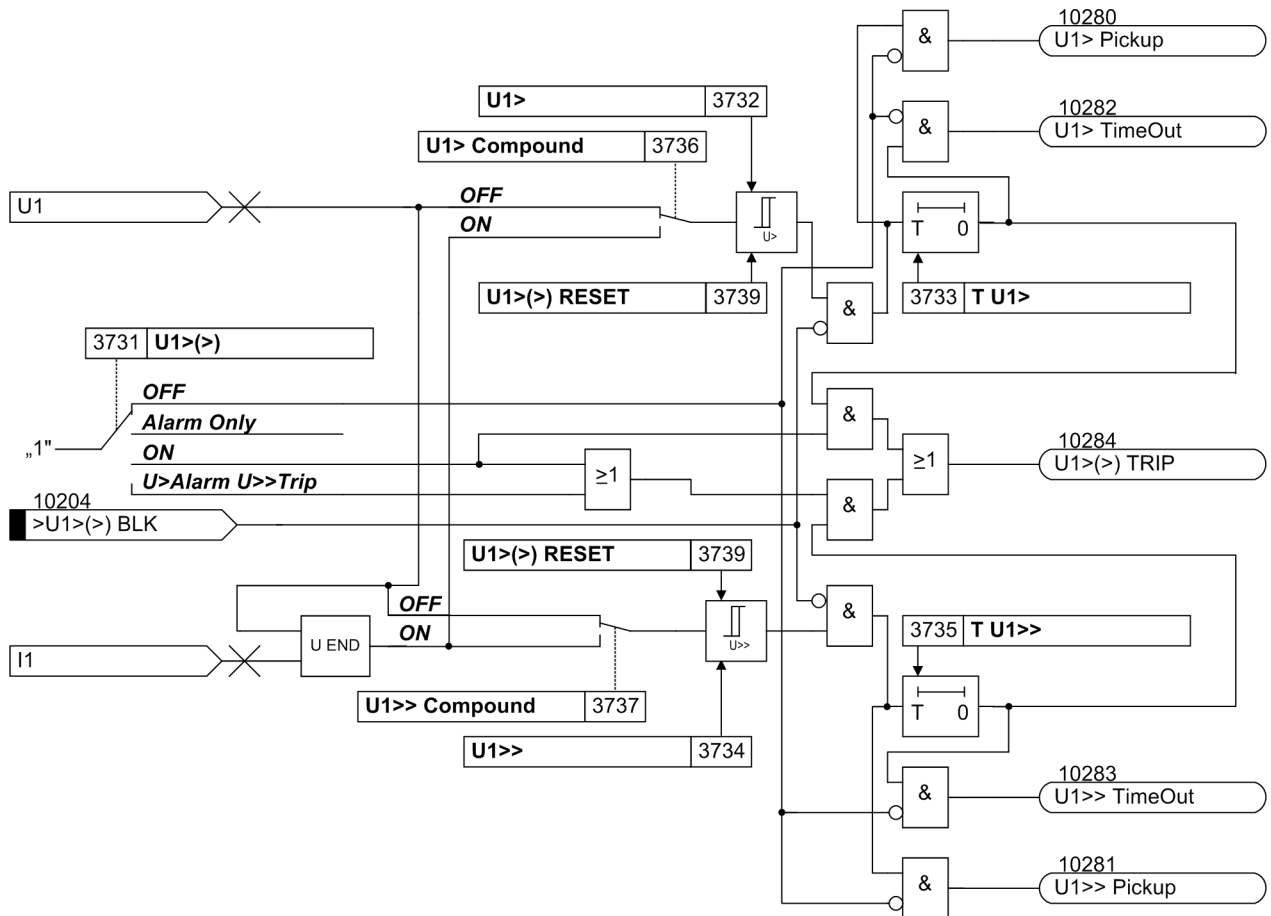


Figure 2-164 Logic diagram of the overvoltage protection for the positive sequence voltage system

Overvoltage protection U_1 with configurable compounding

The overvoltage protection for the positive sequence system may optionally operate with compounding. The compounding calculates the positive sequence system of the voltage at the remote line end. This option is thus particularly well suited for detecting a steady-state voltage increase caused by long transmission lines operating at weak load or no load due to the capacitance per unit length (Ferranti effect). In this case the overvoltage condition exists at the other line end but it can only be removed by switching off the local line end.

For calculating the voltage at the opposite line end, the device requires the line data (inductance per unit length, capacitance per unit length, line angle, line length) which were entered in the Power System Data 2 (Section 2.1.4.1) during configuration.

Compounding is only available if address 137 is set to **Enabl. w. comp.**. In this case the calculated voltage at the other line end is also indicated in the operational measured values.



Note

Compounding is not suited for lines with series capacitors.

The voltage at the remote line end is calculated from the voltage measured at the local line end and the flowing current by means of a PI equivalent circuit diagram (refer also to Figure 2-165).

$$\underline{U}_{\text{End}} = \underline{U}_{\text{Meas}} - \left(\underline{I}_{\text{Meas}} - \frac{j\omega C_L}{2} \cdot \underline{U}_{\text{Meas}} \right) \cdot (R_L + j\omega L_L)$$

with

$\underline{U}_{\text{End}}$	the calculated voltage at the remote line end,
$\underline{U}_{\text{Meas}}$	the measured voltage at the local line end,
$\underline{I}_{\text{Meas}}$	the measured current at the local line end,
C_L	the service capacitance of the line,
R_L	the ohmic service resistance of the line,
L_L	the line inductance.

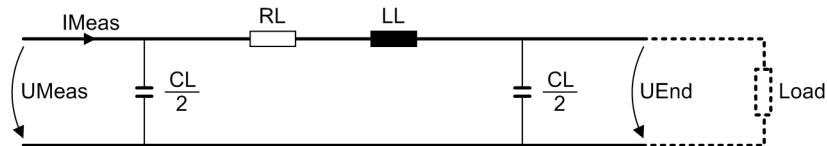


Figure 2-165 PI equivalent diagram for compounding


Overvoltage negative sequence system \underline{U}_2

The device calculates the negative sequence system voltages according to its defining equation:

$$\underline{U}_2 = 1/3 \cdot (\underline{U}_{L1} + \underline{a}^2 \cdot \underline{U}_{L2} + \underline{a} \cdot \underline{U}_{L3})$$

where $\underline{a} = e^{j120^\circ}$.

The resulting negative sequence voltage is fed to the two threshold stages **U2>** and **U2>>**. Figure 2-166 shows the logic diagram. By combining the associated time delays **T U2>** and **T U2>>** a two-stage overvoltage protection for the negative sequence system is formed. Here too, the drop-out to pickup ratio can be set.

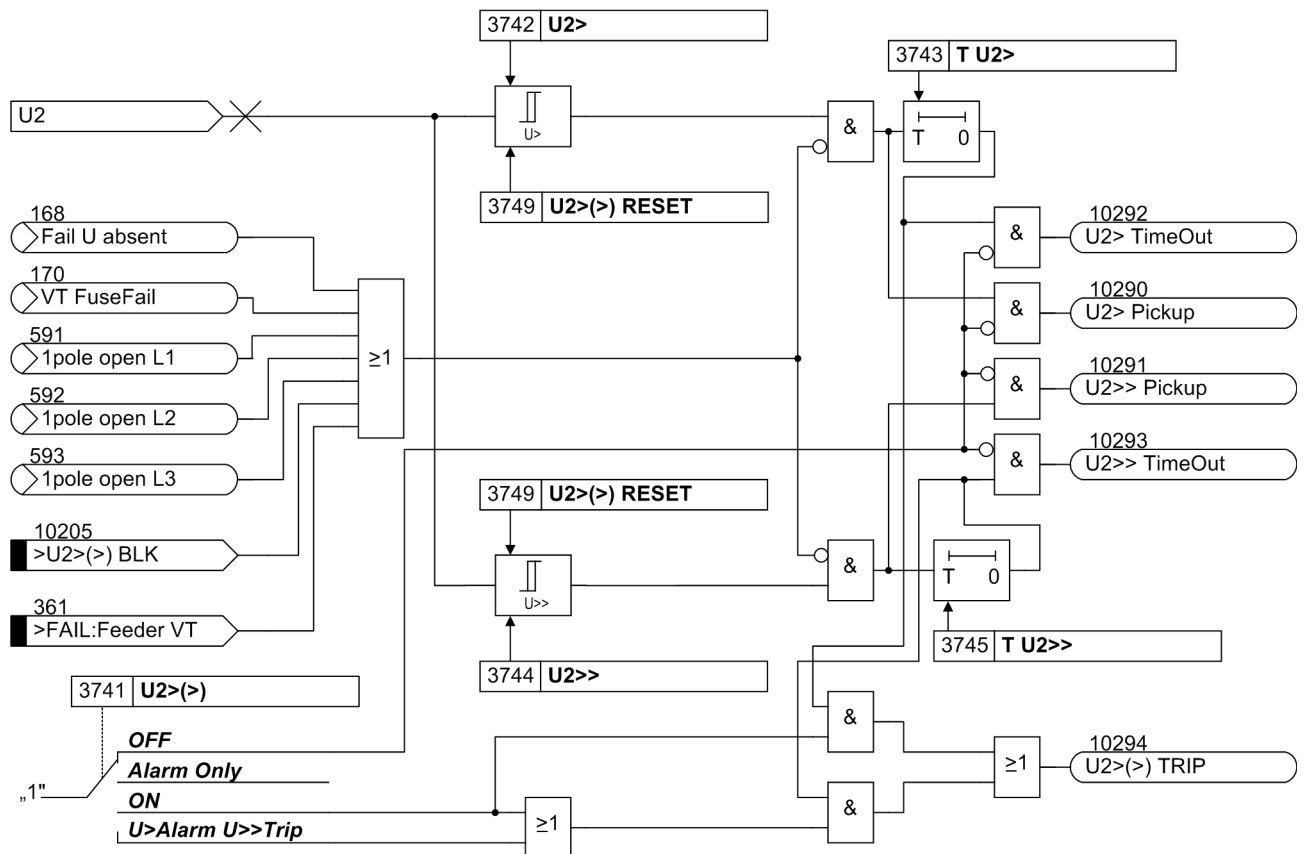Figure 2-166 Logic diagram of the overvoltage protection for the negative sequence voltage system U_2

The overvoltage protection for the negative sequence system can also be blocked via a binary input „ $>U_2 >(>) BLK$ “. The stages of the negative sequence voltage protection are automatically blocked as soon as an asymmetrical voltage failure was detected („Fuse–Failure–Monitor“, also see Section 2.23.1, margin heading „Fuse Failure Monitor (Non-symmetrical Voltages)“) or when the trip of the mcb for voltage transformers has been signalled via the binary input „ $>FAIL:Feeder VT$ “ (internal indication „internal blocking“).

During single-pole dead time the stages of the negative sequence overvoltage protection are automatically blocked since arising negative sequence values are only influenced by the asymmetrical power flow, not by the fault in the system. If the device cooperates with an external automatic reclosure function, or if a single-pole tripping can be triggered by a different protection system (working in parallel), the overvoltage protection for the negative sequence system must be blocked via a binary input during single-pole tripping.

Overvoltage zero sequence system $3U_0$

Figure 2-167 depicts the logic diagram of the zero sequence voltage stage. The fundamental frequency is numerically filtered from the measuring voltage so that the harmonics or transient voltage peaks remain largely harmless.

The triple zero sequence voltage $3 \cdot U_0$ is fed to the two threshold stages **3U0>** and **3U0>>**. Combined with the associated time delays **T 3U0>** and **T 3U0>>** these stages form a two-stage overvoltage protection for the zero sequence system. Here too, the drop-off to pickup ratio can be set (**3U0>(>) RESET**). Furthermore, a restraint delay can be configured which is implemented by repeated measuring (approx. 3 periods).

The overvoltage protection for the zero sequence system can also be blocked via a binary input „>3U0> (>) BLK“. The stages of the zero sequence voltage protection are automatically blocked as soon as an asymmetrical voltage failure was detected („Fuse–Failure–Monitor“, also see Section 2.23.1, margin heading „Fuse Failure Monitor (Non-symmetrical Voltages)“) or when the trip of the mcb for voltage transformers has been signalled via the binary input „>FAIL:Feeder VT“ (internal indication „internal blocking“).

The stages of the zero sequence voltage protection are automatically blocked during single-pole automatic reclose dead time to avoid pickup with the asymmetrical power flow arising during this state. If the device cooperates with an external automatic reclosure function, or if a single-pole tripping can be triggered by a different protection system (working in parallel), the overvoltage protection for the zero sequence system must be blocked via a binary input during single-pole tripping.

According to Figure 2-167 the device calculates the voltage to be monitored:

$$3 \cdot \underline{U}_0 = \underline{U}_{L1} + \underline{U}_{L2} + \underline{U}_{L3}$$

This applies if no suitable voltage is connected to the fourth measuring input U_4 .

However, if the displacement voltage U_{delta} of the voltage transformer set is directly connected to the fourth measuring input U_4 of the device and this information was entered during configuration, the device will automatically use this voltage and calculate the triple zero sequence voltage.

$$3 \cdot U_0 = \mathbf{Uph} / \mathbf{Udelta} \cdot U_4$$

Since the voltage transformation ratio of the voltage transformer set is usually

$$\frac{U_{N \text{ prim}}}{\sqrt{3}} / \frac{U_{N \text{ sec}}}{\sqrt{3}} / \frac{U_{N \text{ sec}}}{3}$$

the factor is set to $\mathbf{Uph} / \mathbf{Udelta} = 3/\sqrt{3} = \sqrt{3} = 1.73$. For more details, refer to **General Power System Data (Power System Data 1)** in Section 2.1.4.1 at margin heading „Voltage Connections“ via address 211.

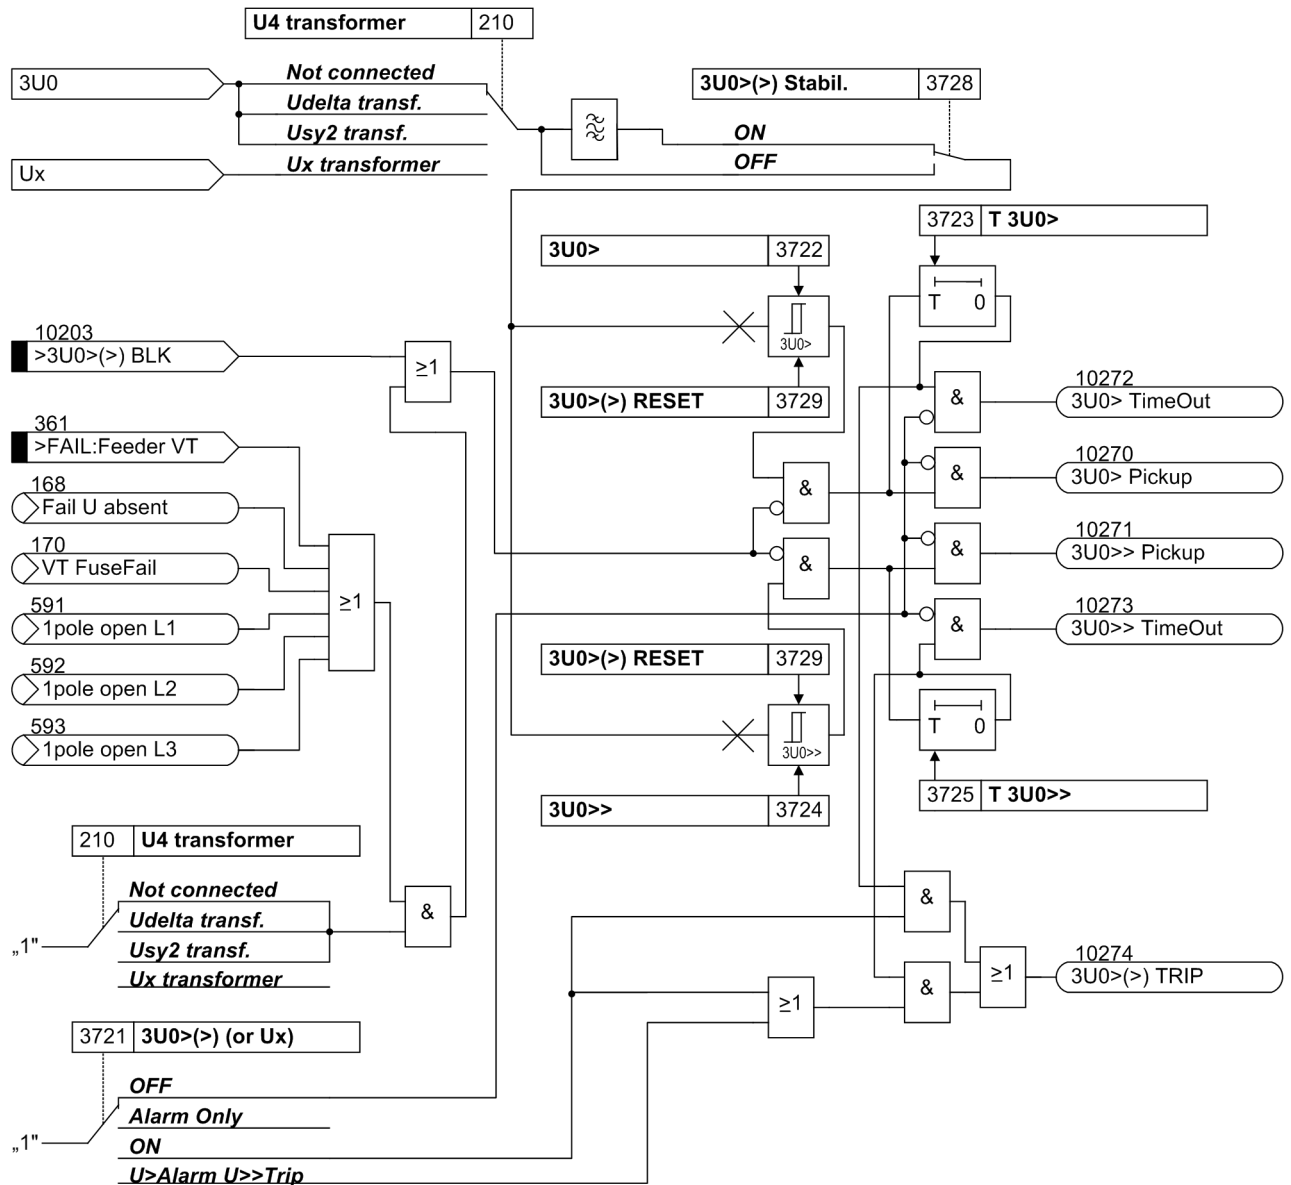


Figure 2-167 Logic diagram of the overvoltage protection for zero sequence voltage

Freely selectable single-phase voltage

As the zero sequence voltage stages operate separately and independent from the other protective overvoltage functions they can be used for any other single-phase voltage. Therefore the fourth voltage input U_4 of the device must be assigned accordingly (also see Section 2.1.2, „Voltage Transformer Connection“).

The stages can be blocked via a binary input „>3U0> (>) BLK“. Internal blocking is not accomplished in this application case.

2.18.2 Undervoltage protection

Undervoltage Phase-Earth

Figure 2-168 depicts the logic diagram of the phase voltage stages. The fundamental frequency is numerically filtered from each of the three measuring voltages so that harmonics or transient voltage peaks are largely harmless. Two threshold stages **Up_{h-e}** and **Up_{h-e}<<** are compared with the voltages. If phase voltage falls below a

threshold it is indicated phase-segregated. Furthermore, a general pickup indication „Uph-e< Pickup“ „Uph-e<< Pickup“ is given. The drop-out to pickup ratio can be set (**Uph-e<(<) RESET**).

Every stage starts a time delay which is common to all phases. Expiry of the respective time delay **T Uph-e<** or **T Uph-e<<** is signalled and results in the trip command „Uph-e<(<) TRIP“.

Depending on the configuration of the substations, the voltage transformers are located on the busbar side or on the outgoing feeder side. This results in a different behaviour of the undervoltage protection when the line is de-energised. While the voltage usually remains present or reappears on the busbar side after a trip command and opening of the circuit breaker, it becomes zero on the outgoing side. For the undervoltage protection this results in a pickup state being present if the voltage transformers are on the outgoing side. If this pickup must be reset, the current can be used as an additional criterion (current supervision **CURR.SUP. Uphe<**) to achieve this result. Undervoltage will then only be detected if, together with the undervoltage condition, the minimum current **PoleOpenCurrent** of the corresponding phase is also exceeded. This condition is communicated by the central function control of the device.

The undervoltage protection phase–earth can be blocked via a binary input „Uph-e<(<) BLK“. The stages of the undervoltage protection are then automatically blocked if a voltage failure is detected („Fuse–Failure–Monitor“, also see Section 2.23.1) or if the trip of the mcb of the voltage transformers is indicated (internal blocking) via the binary input „>FAIL:Feeder VT“.

Also during a single-pole automatic reclose dead time the stages of the undervoltage protection are automatically blocked in the pole open state. If necessary, the current criterion will be considered so that they do not respond to the undervoltage of the disconnected phase when voltage transformers are located on the outgoing side. Only such stages are blocked during the single-pole dead time that can actually generate a trip command according to their setting.

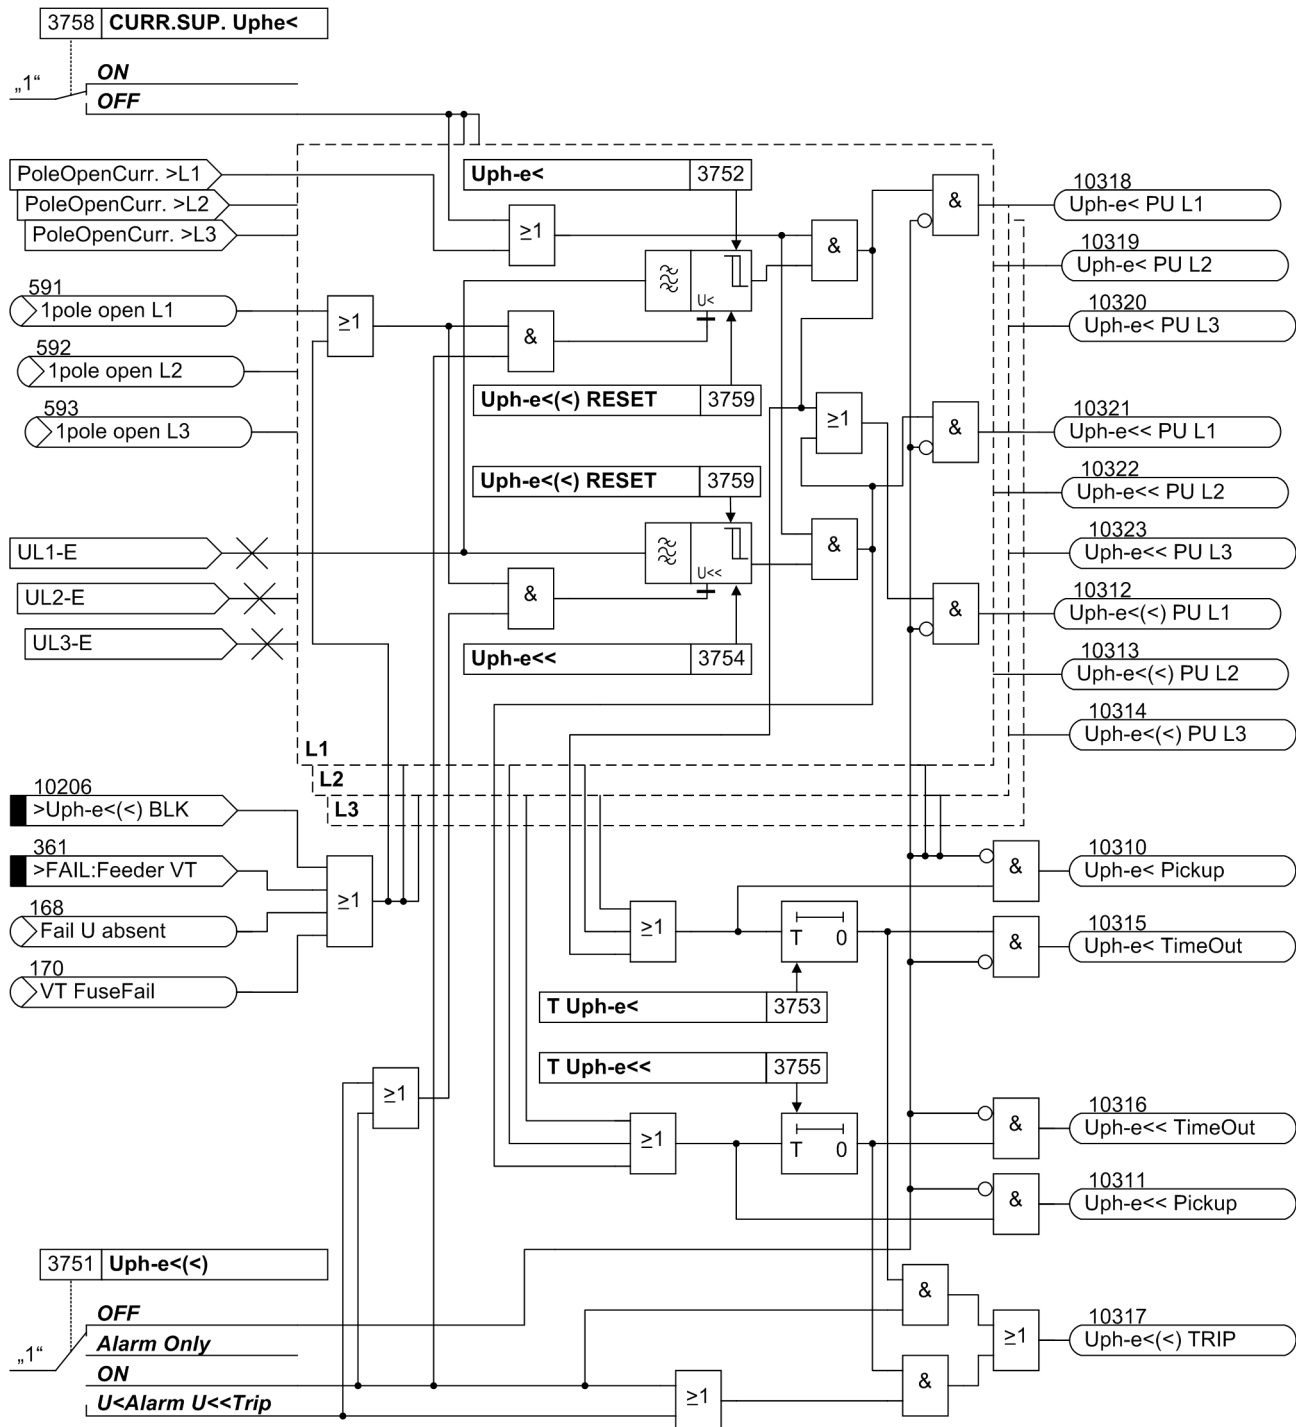


Figure 2-168 Logic diagram of the undervoltage protection for phase voltages

Phase-phase undervoltage

Basically, the phase-phase undervoltage protection operates like the phase-earth protection except that it detects phase-to-phase voltages. Accordingly, both phases are indicated during pickup of an undervoltage stage if one of the stage thresholds **Uph-ph<** or **Uph-ph<<** was undershot. Beyond this, Figure 2-168 applies in principle.

It is sufficient for the current criterion that current flow is detected in one of the involved phases.

The phase-phase undervoltage protection can also be blocked via a binary input „>Uphph< (<) BLK“. There is an automatic blocking if the measuring voltage failure was detected or voltage mcb tripping was indicated (internal blocking of the phases affected by the voltage failure).

During single-pole dead time for automatic reclosure the stages of the undervoltage protection are automatically blocked in the disconnected phase so that it does not respond to the undervoltage of the disconnected phase provided that the voltage transformers are located on the outgoing side. Only such stages are blocked during the single-pole dead time that can actually initiate tripping according to their setting.

Undervoltage positive sequence system U_1

The device calculates the positive sequence system according to its defining equation

$$\underline{U}_1 = \frac{1}{3} \cdot (\underline{U}_{L1} + \underline{a} \cdot \underline{U}_{L2} + \underline{a}^2 \cdot \underline{U}_{L3})$$

where $\underline{a} = e^{j120^\circ}$.

The resulting positive sequence voltage is fed to the two threshold stages **U1<** and **U1<<** (see Figure 2-169). Combined with the associated time delays **T U1<** and **T U1<<** these stages form a two-stage undervoltage protection for the positive sequence system.

Current can be used as an additional criterion for the undervoltage protection of the positive sequence system (current supervision **CURR . SUP . U1<**). An undervoltage is only detected if the current flow is detected in at least one phase together with the undervoltage criterion.

The undervoltage protection for the positive sequence system can be blocked via the binary input „>U1< (<) BLK“. The stages of the undervoltage protection are automatically blocked if voltage failure is detected („Fuse-Failure-Monitor“, also see Section 2.23.1) or, if the trip of the mcb for the voltage transformer is indicated via the binary input „>FAIL:Feeder VT“ (internal blocking).

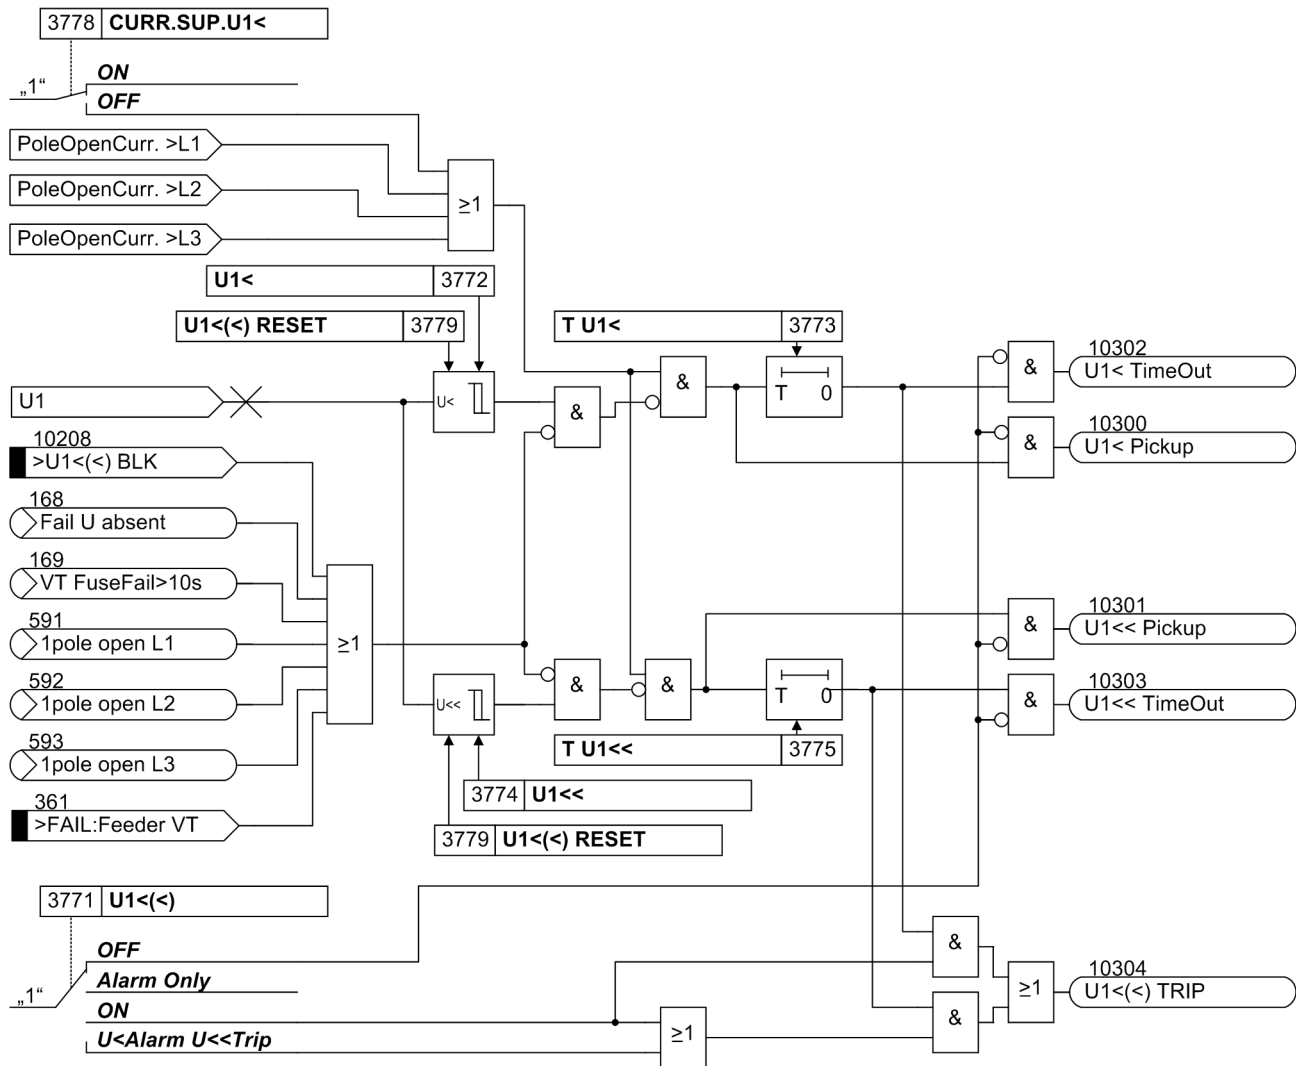


Figure 2-169 Logic diagram of the undervoltage protection for positive sequence voltage system

During single-pole dead time for automatic reclosure the stages of the undervoltage protection are automatically blocked in the positive sequence system so that they do not respond to the reduced voltage caused by the disconnected phase in case the voltage transformers are located on the outgoing side.

2.18.3 Setting Notes

General

The voltage protection can only operate if, when configuring the device scope (address 137), it has been set to **Enabled**. Compounding is only available if (address 137) is set to **Enabl. w. comp.**.

The overvoltage and undervoltage stages can detect phase-to-earth voltages, phase-to-phase voltages or the symmetrical positive sequence system of the voltages; for overvoltage also the symmetrical negative sequence system, zero sequence voltage or a different single-phase voltage can be used. Any combination is possible. Detection procedures that are not required are switched **OFF**.



Note

For overvoltage protection it is particularly important to observe the setting hints: NEVER set an overvoltage stage (U_{L-E} , U_{L-L} , U_1) lower than an undervoltage stage. This would put the device immediately into a state of permanent pickup which cannot be reset by any measured value operation. As a result, operation via DIGSI or via the front display would be impossible due to the permanent pickup!

Phase-earth over-voltage

The phase voltage stages can be switched **ON** or **OFF** in address 3701 **Uph-e>(>)**. In addition to this, you can set **Alarm Only**, i.e. these stages operate and send alarms but do not generate any trip command. The setting **U>Alarm U>>Trip** creates in addition also a trip command only for the U>> stage.

The settings of the voltage threshold and the timer values depend on the type of application. To detect steady-state overvoltages on long lines carrying no load, set the **Uph-e>** stage (address 3702) to at least 5 % above the maximum stationary phase-earth voltage expected during operation. Additionally, a high dropout to pickup ratio is required (address 3709 **Uph-e>(>) RESET** = 0.98 presetting). This parameter can only be altered in DIGSI at **Display Additional Settings**. The delay time **T Uph-e>** (address 3703) should be a few seconds so that overvoltages with short duration may not result in tripping.

The $U_{ph>>}$ stage (address 3704) is provided for high overvoltages with short duration. Here an adequately high pickup value is set, e.g. the $1\frac{1}{2}$ -fold of the nominal phase-earth voltage. 0.1 s to 0.2 s are sufficient for the delay time **T Uph-e>>** (address 3705).

Phase-phase over-voltage

Basically, the same considerations apply as for the phase voltage stages. These stages may be used instead of the phase voltage stages or be used additionally. Depending on your choice, set address 3711 **Uph-ph>(>)** to **ON**, **OFF**, **Alarm Only** or **U>Alarm U>>Trip**.

As phase-to-phase voltages are monitored, the phase-to-phase values are used for the settings **Uph-ph>** (address 3712) and **Uph-ph>>** (address 3714).

For the delay times **T Uph-ph>** (address 3713) and **T Uph-ph>>** (address 3715) the same considerations apply as above. The same is true for the dropout ratios (address 3719 **Uphph>(>) RESET**). The latter setting can only be altered in DIGSI at **Display Additional Settings**.

Overvoltage positive sequence system U_1

You can use the positive sequence voltage stages instead of or in addition to previously mentioned overvoltage stages. Depending on your choice, set address 3731 **U1>(>)** to **ON**, **OFF**, **Alarm Only** or **U>Alarm U>>Trip**.

For symmetrical voltages an increase of the positive sequence system corresponds to an AND gate of the voltages. These stages are particularly suited to the detection of steady-state overvoltages on long, weak-loaded transmission lines (Ferranti effect). Here too, the **U1>** stage (address 3732) with a longer delay time **T U1>** (address 3733) is used for the detection of steady-state overvoltages (some seconds), the **U1>>** stage (address 3734) with the short delay time **T U1>>** (address 3735) is used for the detection of high overvoltages that may jeopardise insulation.

Note that the positive sequence system is established according to its defining equation $U_1 = \frac{1}{3} \cdot |\underline{U}_{L1} + \underline{a} \cdot \underline{U}_{L2} + \underline{a}^2 \cdot \underline{U}_{L3}|$. For symmetrical voltages this is equivalent to a phase-to-earth voltage.

If you want the voltage at the remote line end to be decisive for overvoltage detection, you use the compounding feature. To do so, you must have set during the configuration of the protective functions (Section 2.1.1.3) address 137 **U/O VOLTAGE** to **Enabl. w. comp.** (enabled with compounding).

In addition, the compounding feature needs the line data, which have been set in the **General Protection Data (Power System Data 2)** (Section 2.1.4.1): Address 1111 **x'**, address 1112 **c'** and address 1113 **Line Length**, as well as address 1105 **Line Angle**. These data are vital for a correct compounding calculation. If the values provided here do not correspond to real conditions, the compounding may calculate a too high voltage at the remote end, which will cause immediate pickup as soon as the measured values are applied. In such a case, the pickup state can only be reset by switching off the measuring voltage.

Compounding can be switched **ON** or **OFF** separately for each of the U1 stages: for the **U1>** stage at address 3736 **U1> Compound** and for the **U1>>** stage at address 3737 **U1>> Compound**.

The dropout to pickup ratio (address 3739 **U1> (>) RESET**) is set as high as possible with regard to the detection of even small steady-state overvoltages. This parameter can only be altered in DIGSI at **Display Additional Settings**.

Overvoltage negative sequence system U_2

The negative sequence voltage stages detect asymmetrical voltages. If such voltages should cause tripping, set address 3741 **U2> (>)** to **ON**. If you want only an alarm to be generated, set address 3741 **U2> (>)** to **Alarm Only**. If you want only one stage to generate a trip command, choose the setting **U>Alarm U>>Trip**. With this setting a trip command is output by the 2nd stage only. If negative sequence voltage protection is not required, set this parameter to **OFF**.

This protective function also has two stages, one being **U2>** (address 3742) with a greater time delay **T U2>** (address 3743) for steady-state asymmetrical voltages and the other being **U2>>** (address 3744) with a short delay time **T U2>>** (address 3745) for high asymmetrical voltages.

Note that the negative sequence system is established according to its defining equation $U_2 = \frac{1}{\sqrt{3}} \cdot |\underline{U}_{L1} + a^2 \cdot \underline{U}_{L2} + a \cdot \underline{U}_{L3}|$. For symmetrical voltages and two swapped phases this is equivalent to the phase-to-earth voltage value.

The dropout to pickup ratio **U2> (>) RESET** can be set in address 3749. This parameter can only be altered in DIGSI at **Display Additional Settings**.

Overvoltage zero sequence system

The zero sequence voltage stages can be switched **ON** or **OFF** in address 3721 **3U0> (>) (or Ux)**. They can also be set to **Alarm Only**, i.e. these stages operate and send alarms but do not generate any trip commands. If you want a trip command of the 2nd stage to be created anyway, the setting must be **U>Alarm U>>Trip**. This protection function can be used for any other single-phase voltage which is connected to the fourth voltage measurement input U_4 . Also refer to Section 2.1.2.1 and see margin heading „Voltage Transformer Connection“.

This protective function also has two stages. The settings of the voltage threshold and the timer values depend on the type of application. Here no general guidelines can be established. The stage **3U0>** (address 3722) is usually set with a high sensitivity and a longer delay time **T 3U0>** (address 3723). The **3U0>>** stage (address 3724) and its delay time **T 3U0>>** (address 3725) allow you to implement a second stage with less sensitivity and a shorter delay time.

Similar considerations apply if this voltage stage is used for a different voltage at the measuring input U_4 .

The zero-voltage stages feature a special time stabilisation due to repeated measurements allowing them to be set rather sensitive. This stabilisation can be disabled in address 3728 **3U0>(>) Stab11**. if a shorter pickup time is required. This parameter can only be altered in DIGSI at **Display Additional Settings**. Please consider that sensitive settings combined with short pickup times are not recommended.

The dropout to pickup ratio **3U0>(>) RESET** can be set in address 3729. This parameter can only be altered in DIGSI at **Display Additional Settings**.

When setting the voltage values please observe the following:

- If the U_{en} voltage of the set of voltage transformers is connected to U_4 and if this was already set in the Power System Data 1 (refer also to Section 2.1.2.1 under margin heading „Voltage Connection“, address 210 **U4 transformer = Udelta transf.**), the device multiplies this voltage by the matching ratio **Uph / Udelta** (address 211), usually with 1.73. Therefore the voltage measured is $\sqrt{3} \cdot U_{en} = 3 \cdot U_0$. When the voltage triangle is fully displaced, the voltage will be $\sqrt{3}$ times the phase-to-phase voltage.
- If any other voltage is connected to U_4 , which is not used for voltage protection, and if this was already set in the Power System Data 1 (refer also to Section 2.1.2.1 under margin heading „Voltage Connection“, e.g. **U4 transformer = Uxy2 transf.** or **U4 transformer = Not connected**), the device calculates the zero sequence voltage from the phase voltages according to its definition $3 \cdot U_0 = |\underline{U}_{L1} + \underline{U}_{L2} + \underline{U}_{L3}|$. When the voltage triangle is fully displaced, the voltage will be $\sqrt{3}$ times the phase-to-phase voltage.
- If any other voltage is connected to U_4 , which is used for voltage protection, and if this was already set in the Power System Data 1 (refer also to Section 2.1.2.1, under margin heading „Voltage Connection“, **U4 transformer = Ux transformer**), this voltage will be used for the voltage stages without any further factors. This „zero sequence voltage protection“ then is, in reality, a single-phase voltage protection for any kind of voltage at U_4 . Note that with a sensitive setting, i.e. close to operational values that are to be expected, not only the time delay **T 3U0>** (address 3723) must be greater, but also the reset ratio **3U0>(>) RESET** (address 3729) must be set as high as possible.

Phase-earth under-voltage

The phase voltage stages can be switched **ON** or **OFF** in address 3751 **Uph-e<(<)**. In addition to this, you can set **Alarm Only**, i.e. these stages operate and send alarms but do not generate any trip command. You can generate a trip command for the 2nd stage only in addition to the alarm by setting **U<Alarm U<<Trip**.

This undervoltage protection function has two stages. The **Uph-e<** stage (address 3752) with a longer setting of the time **T Uph-e<** (address 3753) operates in the case of minor undervoltages. However, the value set here must not be higher than the undervoltage permissible in operation. In the presence of higher voltage dips, the **Uph-e<<** stage (address 3754) with the delay **T Uph-e<<** (address 3755) becomes active.

The dropout to pickup ratio **Uph-e<(<) RESET** can be set in address 3759. This parameter can only be altered in DIGSI at **Display Additional Settings**.

The settings of the voltages and times depend on the intended use; therefore no general recommendations for the settings can be given. For load shedding, for example, the values are often determined by a priority grading coordination chart. In case of stability problems, the permissible levels and durations of overvoltages must be observed. With induction machines undervoltages have an effect on the permissible torque thresholds.

If the voltage transformers are located on the line side, the measuring voltages will be missing when the line is disconnected. To avoid that the undervoltage levels in these cases are or remain picked up, the current criterion **CURR.SUP. Uphe<** (address 3758) is switched **ON**. With busbar side voltage transformers it can be switched **OFF**. However, if the busbar is dead, the undervoltage protection will pick up and expire and then remain in a picked-up state. It must therefore be ensured in such cases that the protection is blocked by a binary input.

Phase-phase undervoltage

Basically, the same considerations apply as for the phase voltage stages. These stages may replace the phase voltage stages or be used additionally. Depending on your choice, set address 3761 **Uph-ph<(<)** to **ON**, **OFF**, **Alarm Only** or **U<Alarm U<<Trip**.

As phase-to-phase voltages are monitored, the phase-to-phase values are used for the settings **Uph-ph<** (address 3762) and **Uph-ph<<** (address 3764).

The corresponding times delay are **T Uph-ph<** (address 3763) and **T Uphph<<** (address 3765).

The dropout to pickup ratio **Uphph<(<) RESET** can be set in address 3769. This parameter can only be altered in DIGSI at **Display Additional Settings**.

If the voltage transformers are located on the line side, the measuring voltages will be missing when the line is disconnected. To avoid that the undervoltage levels in these cases are or remain picked up, the current criterion **CURR.SUP. Uphph<** (address 3768) is switched **ON**. With busbar side voltage transformers it can be switched **OFF**. However, if the busbar is dead, the undervoltage protection will pick up and expire and then remain in a picked-up state. It must therefore be ensured in such cases that the protection is blocked by a binary input.

Undervoltage positive sequence system U_1

The positive sequence undervoltage stages can be used instead of or in addition to previously mentioned undervoltage stages. Depending on your choice, set address 3771 **U1<(<)** to **ON**, **OFF**, **Alarm Only** or **U<Alarm U<<Trip**.

Basically, the same considerations apply as for the other undervoltage stages. Especially in case of stability problems, the positive sequence system is advantageous, since the positive sequence system is relevant for the limit of the stable energy transmission.

To achieve the two-stage condition, the **U1<** stage (address 3772) is combined with a greater time delay **T U1<** (address 3773), and the **U1<<** stage (address 3774) with a shorter time delay **T U1<<** (address 3775).

Note that the positive sequence system is established according to its defining equation $U_1 = \frac{1}{3} \cdot |U_{L1} + \underline{a} \cdot U_{L2} + \underline{a}^2 \cdot U_{L3}|$. For symmetrical voltages this is equivalent to a phase-earth voltage.

The dropout to pickup ratio **U1<(<) RESET** can be set in address 3779. This parameter can only be altered in DIGSI at **Display Additional Settings**.

If the voltage transformers are located on the line side, the measuring voltages will be missing when the line is disconnected. To avoid that the undervoltage levels in these cases are or remain picked up, the current criterion **CURR.SUP. U1<** (address 3778) is switched **ON**. With busbar side voltage transformers it can be switched **OFF**. However, if the busbar is dead, the undervoltage protection will pick up and expire and then remain in a picked-up state. It must therefore be ensured in such cases that the protection is blocked by a binary input.

2.18.4 Settings

Addresses which have an appended "A" can only be changed with DIGSI, under Additional Settings.

Addr.	Parameter	Setting Options	Default Setting	Comments
3701	Uph-e>(>)	OFF Alarm Only ON U>Alarm U>>Trip	OFF	Operating mode Uph-e overvoltage prot.
3702	Uph-e>	1.0 .. 170.0 V; ∞	85.0 V	Uph-e> Pickup
3703	T Uph-e>	0.00 .. 100.00 sec; ∞	2.00 sec	T Uph-e> Time Delay
3704	Uph-e>>	1.0 .. 170.0 V; ∞	100.0 V	Uph-e>> Pickup
3705	T Uph-e>>	0.00 .. 100.00 sec; ∞	1.00 sec	T Uph-e>> Time Delay
3709A	Uph-e>(>) RESET	0.30 .. 0.99	0.98	Uph-e>(>) Reset ratio
3711	Uph-ph>(>)	OFF Alarm Only ON U>Alarm U>>Trip	OFF	Operating mode Uph-ph overvoltage prot.
3712	Uph-ph>	2.0 .. 220.0 V; ∞	150.0 V	Uph-ph> Pickup
3713	T Uph-ph>	0.00 .. 100.00 sec; ∞	2.00 sec	T Uph-ph> Time Delay
3714	Uph-ph>>	2.0 .. 220.0 V; ∞	175.0 V	Uph-ph>> Pickup
3715	T Uph-ph>>	0.00 .. 100.00 sec; ∞	1.00 sec	T Uph-ph>> Time Delay
3719A	Uph-ph>(>) RESET	0.30 .. 0.99	0.98	Uph-ph>(>) Reset ratio
3721	3U0>(>) (or Ux)	OFF Alarm Only ON U>Alarm U>>Trip	OFF	Operating mode 3U0 (or Ux) overvoltage
3722	3U0>	1.0 .. 220.0 V; ∞	30.0 V	3U0> Pickup (or Ux>)
3723	T 3U0>	0.00 .. 100.00 sec; ∞	2.00 sec	T 3U0> Time Delay (or T Ux>)
3724	3U0>>	1.0 .. 220.0 V; ∞	50.0 V	3U0>> Pickup (or Ux>>)
3725	T 3U0>>	0.00 .. 100.00 sec; ∞	1.00 sec	T 3U0>> Time Delay (or T Ux>>)
3728A	3U0>(>) Stabil.	ON OFF	ON	3U0>(>): Stabilization 3U0-Measurement
3729A	3U0>(>) RESET	0.30 .. 0.99	0.95	3U0>(>) Reset ratio (or Ux)
3731	U1>(>)	OFF Alarm Only ON U>Alarm U>>Trip	OFF	Operating mode U1 overvoltage prot.
3732	U1>	2.0 .. 220.0 V; ∞	150.0 V	U1> Pickup
3733	T U1>	0.00 .. 100.00 sec; ∞	2.00 sec	T U1> Time Delay
3734	U1>>	2.0 .. 220.0 V; ∞	175.0 V	U1>> Pickup
3735	T U1>>	0.00 .. 100.00 sec; ∞	1.00 sec	T U1>> Time Delay
3736	U1> Compound	OFF ON	OFF	U1> with Compounding

Addr.	Parameter	Setting Options	Default Setting	Comments
3737	U1>> Compound	OFF ON	OFF	U1>> with Compounding
3739A	U1>(>) RESET	0.30 .. 0.99	0.98	U1>(>) Reset ratio
3741	U2>(>)	OFF Alarm Only ON U>Alarm U>>Trip	OFF	Operating mode U2 overvoltage prot.
3742	U2>	2.0 .. 220.0 V; ∞	30.0 V	U2> Pickup
3743	T U2>	0.00 .. 100.00 sec; ∞	2.00 sec	T U2> Time Delay
3744	U2>>	2.0 .. 220.0 V; ∞	50.0 V	U2>> Pickup
3745	T U2>>	0.00 .. 100.00 sec; ∞	1.00 sec	T U2>> Time Delay
3749A	U2>(>) RESET	0.30 .. 0.99	0.98	U2>(>) Reset ratio
3751	Uph-e<(<)	OFF Alarm Only ON U<Alarm U<<Trip	OFF	Operating mode Uph-e undervoltage prot.
3752	Uph-e<	1.0 .. 100.0 V; 0	30.0 V	Uph-e< Pickup
3753	T Uph-e<	0.00 .. 100.00 sec; ∞	2.00 sec	T Uph-e< Time Delay
3754	Uph-e<<	1.0 .. 100.0 V; 0	10.0 V	Uph-e<< Pickup
3755	T Uph-e<<	0.00 .. 100.00 sec; ∞	1.00 sec	T Uph-e<< Time Delay
3758	CURR.SUP. Uphe<	ON OFF	ON	Current supervision (Uph-e)
3759A	Uph-e<(<) RESET	1.01 .. 1.20	1.05	Uph-e<(<) Reset ratio
3761	Uph-ph<(<)	OFF Alarm Only ON U<Alarm U<<Trip	OFF	Operating mode Uph-ph undervoltage prot.
3762	Uph-ph<	1.0 .. 175.0 V; 0	50.0 V	Uph-ph< Pickup
3763	T Uph-ph<	0.00 .. 100.00 sec; ∞	2.00 sec	T Uph-ph< Time Delay
3764	Uph-ph<<	1.0 .. 175.0 V; 0	17.0 V	Uph-ph<< Pickup
3765	T Uph-ph<<	0.00 .. 100.00 sec; ∞	1.00 sec	T Uph-ph<< Time Delay
3768	CURR.SUP.Uphph<	ON OFF	ON	Current supervision (Uph-ph)
3769A	Uphph<(<) RESET	1.01 .. 1.20	1.05	Uph-ph<(<) Reset ratio
3771	U1<(<)	OFF Alarm Only ON U<Alarm U<<Trip	OFF	Operating mode U1 undervoltage prot.
3772	U1<	1.0 .. 100.0 V; 0	30.0 V	U1< Pickup
3773	T U1<	0.00 .. 100.00 sec; ∞	2.00 sec	T U1< Time Delay
3774	U1<<	1.0 .. 100.0 V; 0	10.0 V	U1<< Pickup
3775	T U1<<	0.00 .. 100.00 sec; ∞	1.00 sec	T U1<< Time Delay

Addr.	Parameter	Setting Options	Default Setting	Comments
3778	CURR.SUP.U1<	ON OFF	ON	Current supervision (U1)
3779A	U1<() RESET	1.01 .. 1.20	1.05	U1<() Reset ratio

2.18.5 Information List

No.	Information	Type of Information	Comments
10201	>Uph-e>() BLK	SP	>BLOCK Uph-e>() Overvolt. (phase-earth)
10202	>Uph-ph>() BLK	SP	>BLOCK Uph-ph>() Overvolt (phase-phase)
10203	>3U0>() BLK	SP	>BLOCK 3U0>() Overvolt. (zero sequence)
10204	>U1>() BLK	SP	>BLOCK U1>() Overvolt. (positive seq.)
10205	>U2>() BLK	SP	>BLOCK U2>() Overvolt. (negative seq.)
10206	>Uph-e<() BLK	SP	>BLOCK Uph-e<() Undervolt (phase-earth)
10207	>Uphph<() BLK	SP	>BLOCK Uphph<() Undervolt (phase-phase)
10208	>U1<() BLK	SP	>BLOCK U1<() Undervolt (positive seq.)
10215	Uph-e>() OFF	OUT	Uph-e>() Overvolt. is switched OFF
10216	Uph-e>() BLK	OUT	Uph-e>() Overvolt. is BLOCKED
10217	Uph-ph>() OFF	OUT	Uph-ph>() Overvolt. is switched OFF
10218	Uph-ph>() BLK	OUT	Uph-ph>() Overvolt. is BLOCKED
10219	3U0>() OFF	OUT	3U0>() Overvolt. is switched OFF
10220	3U0>() BLK	OUT	3U0>() Overvolt. is BLOCKED
10221	U1>() OFF	OUT	U1>() Overvolt. is switched OFF
10222	U1>() BLK	OUT	U1>() Overvolt. is BLOCKED
10223	U2>() OFF	OUT	U2>() Overvolt. is switched OFF
10224	U2>() BLK	OUT	U2>() Overvolt. is BLOCKED
10225	Uph-e<() OFF	OUT	Uph-e<() Undervolt. is switched OFF
10226	Uph-e<() BLK	OUT	Uph-e<() Undervolt. is BLOCKED
10227	Uph-ph<() OFF	OUT	Uph-ph<() Undervolt. is switched OFF
10228	Uph-ph<() BLK	OUT	Uphph<() Undervolt. is BLOCKED
10229	U1<() OFF	OUT	U1<() Undervolt. is switched OFF
10230	U1<() BLK	OUT	U1<() Undervolt. is BLOCKED
10231	U</> ACTIVE	OUT	Over-/Under-Voltage protection is ACTIVE
10240	Uph-e> Pickup	OUT	Uph-e> Pickup
10241	Uph-e>> Pickup	OUT	Uph-e>> Pickup
10242	Uph-e>() PU L1	OUT	Uph-e>() Pickup L1
10243	Uph-e>() PU L2	OUT	Uph-e>() Pickup L2
10244	Uph-e>() PU L3	OUT	Uph-e>() Pickup L3
10245	Uph-e> TimeOut	OUT	Uph-e> TimeOut
10246	Uph-e>> TimeOut	OUT	Uph-e>> TimeOut
10247	Uph-e>() TRIP	OUT	Uph-e>() TRIP command
10248	Uph-e> PU L1	OUT	Uph-e> Pickup L1
10249	Uph-e> PU L2	OUT	Uph-e> Pickup L2
10250	Uph-e> PU L3	OUT	Uph-e> Pickup L3
10251	Uph-e>> PU L1	OUT	Uph-e>> Pickup L1

No.	Information	Type of Information	Comments
10252	Uph-e>> PU L2	OUT	Uph-e>> Pickup L2
10253	Uph-e>> PU L3	OUT	Uph-e>> Pickup L3
10255	Uphph> Pickup	OUT	Uph-ph> Pickup
10256	Uphph>> Pickup	OUT	Uph-ph>> Pickup
10257	Uphph>(>)PU L12	OUT	Uph-ph>(>) Pickup L1-L2
10258	Uphph>(>)PU L23	OUT	Uph-ph>(>) Pickup L2-L3
10259	Uphph>(>)PU L31	OUT	Uph-ph>(>) Pickup L3-L1
10260	Uphph> TimeOut	OUT	Uph-ph> TimeOut
10261	Uphph>> TimeOut	OUT	Uph-ph>> TimeOut
10262	Uphph>(>) TRIP	OUT	Uph-ph>(>) TRIP command
10263	Uphph> PU L12	OUT	Uph-ph> Pickup L1-L2
10264	Uphph> PU L23	OUT	Uph-ph> Pickup L2-L3
10265	Uphph> PU L31	OUT	Uph-ph> Pickup L3-L1
10266	Uphph>> PU L12	OUT	Uph-ph>> Pickup L1-L2
10267	Uphph>> PU L23	OUT	Uph-ph>> Pickup L2-L3
10268	Uphph>> PU L31	OUT	Uph-ph>> Pickup L3-L1
10270	3U0> Pickup	OUT	3U0> Pickup
10271	3U0>> Pickup	OUT	3U0>> Pickup
10272	3U0> TimeOut	OUT	3U0> TimeOut
10273	3U0>> TimeOut	OUT	3U0>> TimeOut
10274	3U0>(>) TRIP	OUT	3U0>(>) TRIP command
10280	U1> Pickup	OUT	U1> Pickup
10281	U1>> Pickup	OUT	U1>> Pickup
10282	U1> TimeOut	OUT	U1> TimeOut
10283	U1>> TimeOut	OUT	U1>> TimeOut
10284	U1>(>) TRIP	OUT	U1>(>) TRIP command
10290	U2> Pickup	OUT	U2> Pickup
10291	U2>> Pickup	OUT	U2>> Pickup
10292	U2> TimeOut	OUT	U2> TimeOut
10293	U2>> TimeOut	OUT	U2>> TimeOut
10294	U2>(>) TRIP	OUT	U2>(>) TRIP command
10300	U1< Pickup	OUT	U1< Pickup
10301	U1<< Pickup	OUT	U1<< Pickup
10302	U1< TimeOut	OUT	U1< TimeOut
10303	U1<< TimeOut	OUT	U1<< TimeOut
10304	U1<(<) TRIP	OUT	U1<(<) TRIP command
10310	Uph-e< Pickup	OUT	Uph-e< Pickup
10311	Uph-e<< Pickup	OUT	Uph-e<< Pickup
10312	Uph-e<(<) PU L1	OUT	Uph-e<(<) Pickup L1
10313	Uph-e<(<) PU L2	OUT	Uph-e<(<) Pickup L2
10314	Uph-e<(<) PU L3	OUT	Uph-e<(<) Pickup L3
10315	Uph-e< TimeOut	OUT	Uph-e< TimeOut
10316	Uph-e<< TimeOut	OUT	Uph-e<< TimeOut
10317	Uph-e<(<) TRIP	OUT	Uph-e<(<) TRIP command
10318	Uph-e< PU L1	OUT	Uph-e< Pickup L1
10319	Uph-e< PU L2	OUT	Uph-e< Pickup L2

No.	Information	Type of Information	Comments
10320	Uph-e< PU L3	OUT	Uph-e< Pickup L3
10321	Uph-e<< PU L1	OUT	Uph-e<< Pickup L1
10322	Uph-e<< PU L2	OUT	Uph-e<< Pickup L2
10323	Uph-e<< PU L3	OUT	Uph-e<< Pickup L3
10325	Uph-ph< Pickup	OUT	Uph-ph< Pickup
10326	Uph-ph<< Pickup	OUT	Uph-ph<< Pickup
10327	Uphph<(<)PU L12	OUT	Uphph<(<) Pickup L1-L2
10328	Uphph<(<)PU L23	OUT	Uphph<(<) Pickup L2-L3
10329	Uphph<(<)PU L31	OUT	Uphph<(<) Pickup L3-L1
10330	Uphph< TimeOut	OUT	Uphph< TimeOut
10331	Uphph<< TimeOut	OUT	Uphph<< TimeOut
10332	Uphph<(<) TRIP	OUT	Uphph<(<) TRIP command
10333	Uphph< PU L12	OUT	Uph-ph< Pickup L1-L2
10334	Uphph< PU L23	OUT	Uph-ph< Pickup L2-L3
10335	Uphph< PU L31	OUT	Uph-ph< Pickup L3-L1
10336	Uphph<< PU L12	OUT	Uph-ph<< Pickup L1-L2
10337	Uphph<< PU L23	OUT	Uph-ph<< Pickup L2-L3
10338	Uphph<< PU L31	OUT	Uph-ph<< Pickup L3-L1

2.19 Frequency Protection (optional)

The frequency protection function detects overfrequencies or underfrequencies in the system or in electrical machines. If the frequency is outside the permissible range, appropriate actions are initiated such as load shedding or separating the generator from the system.

Underfrequency is caused by increased real power demand of the loads or by a reduction of the generated power e.g. in the event of disconnection from the network, generator failure or faulty operation of the power frequency control. Underfrequency protection is also applied for generators which operate (temporarily) to an island network. This is due to the fact that the reverse power protection cannot operate in case of a drive power failure. The generator can be disconnected from the power system by means of the underfrequency protection. Underfrequency also results in increased reactive power demand of inductive loads.

Overfrequency is caused for instance by load shedding, system disconnection or malfunction of the power frequency control. There is also a risk of self-excitation for generators feeding long lines under no-load conditions.

2.19.1 Method of Operation

Frequency stages

Frequency protection consists of the four frequency elements f1 to f4. Each element can be set as overfrequency stage (f>) or as underfrequency stage (f<) with individual thresholds and time delays. This ensures variable matching to the application purpose.

- If an element is set to a value above the rated frequency, it is automatically interpreted to be an overfrequency stage f>.
- If an element is set to a value below the rated frequency, it is automatically interpreted to be an underfrequency stage f<.
- If an element is set exactly to the rated frequency, it is inactive.

Each element can be blocked via binary input and also the entire frequency protection function can be blocked.

Frequency measurement

The largest of the 3 phase-to-phase voltages is used for frequency measurement. It must amount to at least 65 % of the nominal voltage set in parameter 204, **Unom SECONDARY**. Below that value frequency measurement will not take place.

Numerical filters are employed to calculate from the measured voltage a quantity that is proportional to the frequency which is virtually linear in the specified range ($f_N \pm 10\%$). Filters and repeated measurements ensure that the frequency evaluation is virtually free from harmonic influences and phase jumps.

An accurate and quick measurement result is obtained by considering also the frequency change. When changing the frequency of the power system, the sign of the quotient $\Delta f / \Delta t$ remains unchanged during several repeated measurements. If, however, a phase jump in the measured voltage temporarily simulates a frequency deviation, the sign of $\Delta f / \Delta t$ will subsequently reverse. Thus the measurement results corrupted by a phase jump are quickly discarded.

The dropout value of each frequency element is approximately 20 mHz below (for f>) or above (for f<) of the pickup value.

Operating ranges

Frequency evaluation requires a measured quantity that can be processed. This implies that at least a sufficiently high voltage is available and that the frequency of this voltage is within the working range of the frequency protection.

The frequency protection automatically selects the largest of the phase-to-phase voltages. If all three voltages are below the operating range of $65\% \cdot U_N$ (secondary), the frequency cannot be determined. In that case the indication 5215 „Freq UnderV Blk“ is displayed. If the voltage falls below this minimum value after a frequency stage has picked up, the picked up element will drop out. This implies also that all frequency stages will drop out after a line has been switched off (with voltage transformers on line side).

When connecting a measuring voltage with a frequency outside the configured threshold of a frequency element, the frequency protection is immediately ready to operate. Since the filters of the frequency measurement must first go through a transient state, the command output time may increase slightly (approx. 1 period). This is because a frequency element picks up only if the frequency has been detected outside the configured threshold in five consecutive measurements.

The frequency range is from 25 Hz to 70 Hz. If the frequency leaves this operating range, the frequency stages will drop out. If the frequency returns into the operating range, the measurement can be resumed provided that the measuring voltage is also inside the operating range. But if the measuring voltage is switched off, the picked up element will drop out immediately.

Power swings

In interconnected networks, frequency deviations may also be caused by power swings. Depending on the power swing frequency, the mounting location of the device and the setting of the frequency stages, power swings may cause the frequency protection to pickup and even to trip. In such cases out-of-step trips cannot be prevented by operating the distance protection with power swing blocking (see also Section 2.6). Rather, it is reasonable to block the frequency protection once power swings are detected. This can be accomplished via binary inputs and binary outputs or by corresponding logic operations using the user-defined logic (CFC). If, however, the power swing frequencies are known, tripping of the frequency protection function can also be avoided by adapting the delay times of the frequency protection correspondingly.

Pickup/tripping

Figure 2-170 shows the logic diagram for the frequency protection function.

Once the frequency was reliably detected to be outside the configured thresholds of a stage (above the setting value for $f >$ elements or below for $f <$ elements), a pickup signal of the corresponding stage is generated. The decision is considered reliable if 5 measurements taken in intervals of $1/2$ period yield one frequency outside the set threshold.

After pickup, a delay time per element can be started. When the associated time has elapsed, one trip command per element is issued. A picked up element drops out if the pickup condition is no longer valid after 5 measurements or if the measuring voltage was switched off or the frequency is outside the operating range. When a frequency stage drops out, the tripping signal of the corresponding frequency stage is immediately reset, but the trip command is maintained for at least the minimum command duration which was set for all tripping functions of the device.

Each of the four frequency elements can be blocked individually by binary inputs. The blocking takes immediate effect. It is also possible to block the entire frequency protection function via binary input.

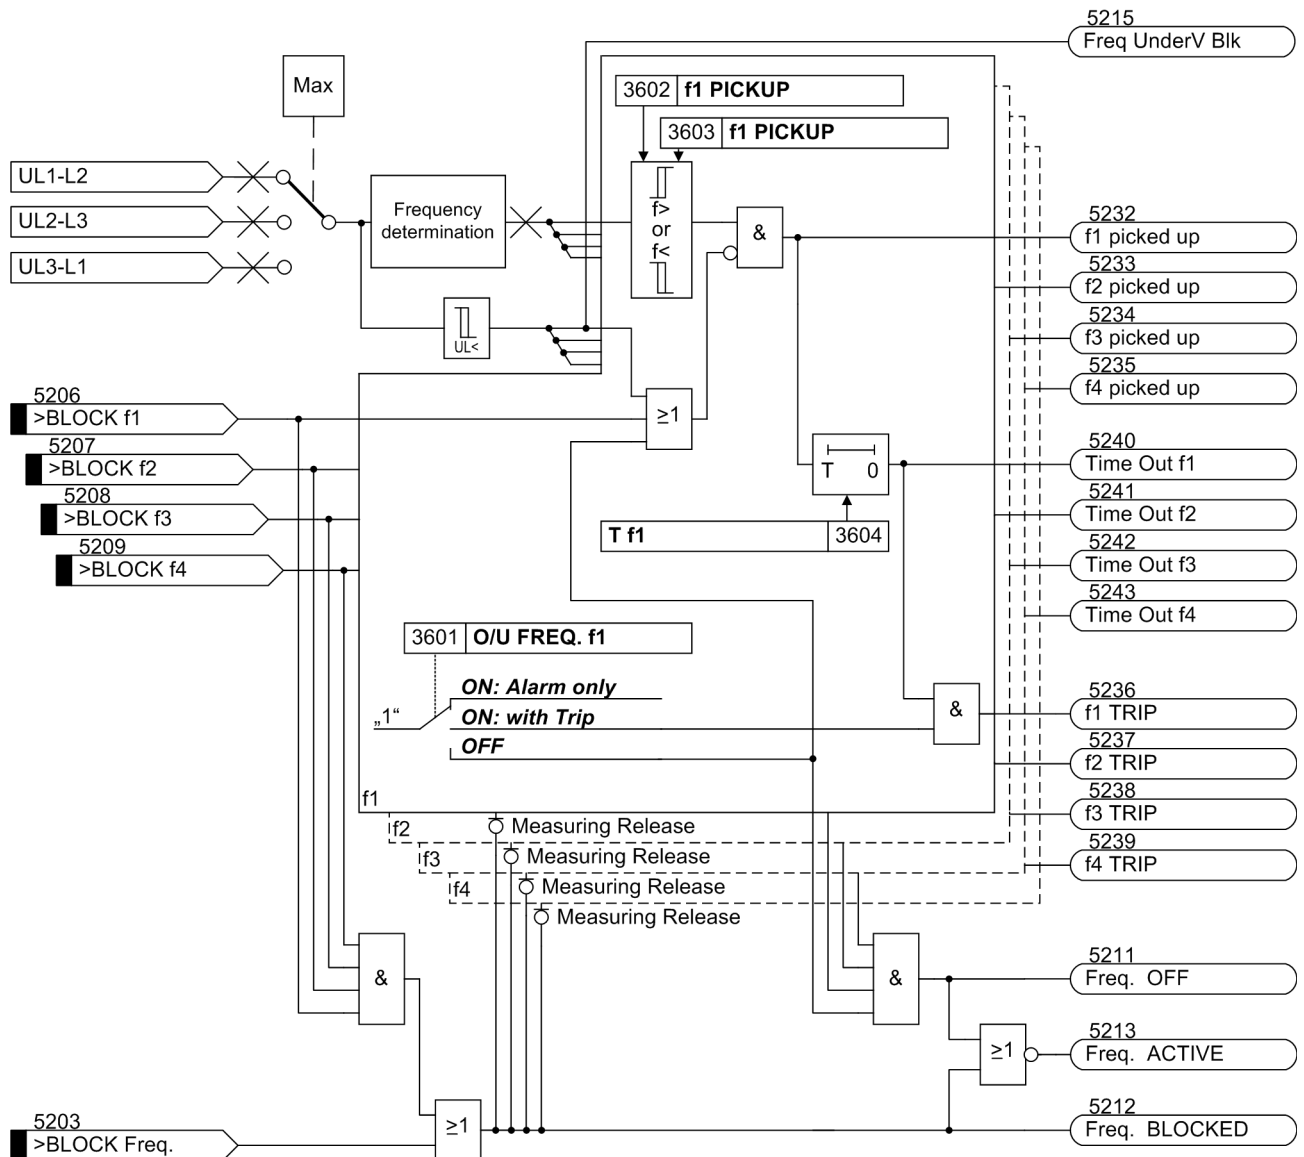


Figure 2-170 Logic diagram of the frequency protection

2.19.2 Setting Notes

General

Frequency protection is only in effect and accessible if address 136 **FREQUENCY Prot.** is set to **Enabled** during configuration of protective functions. If the function is not required, **Disabled** is to be set.

The frequency protection function features 4 frequency stages f1 to f4 each of which can function as overfrequency stage or underfrequency stage. Each stage can be set active or inactive. This is set in addresses:

- 3601 **O/U FREQ.** **f1** for frequency stage f1,
- 3611 **O/U FREQ.** **f2** for frequency stage f2,
- 3621 **O/U FREQ.** **f3** for frequency stage f3,
- 3631 **O/U FREQ.** **f4** for frequency stage f4,

The following 3 options are available:

- Stage **OFF**: The stage is ineffective;
- Stage **ON: with Trip**: The stage is effective and issues an alarm and a trip command (after time has expired) following irregular frequency deviations;
- Stage **ON: Alarm only**: The stage is effective and issues an alarm but no trip command following irregular frequency deviations.

Pickup values, delay time

The configured pickup value determines whether a frequency element is to respond to overfrequency or underfrequency.

- If a stage is set to a value above the rated frequency, it is automatically interpreted to be an overfrequency stage $f>$.
- If a stage is set to a value below the rated frequency, it is automatically interpreted to be an underfrequency stage $f<$.
- If a stage is set exactly to the rated frequency, it is inactive.

A pickup value can be set for each stage according to above rules. The addresses and possible setting ranges are determined by the nominal frequency as configured in the Power System Data 1 (Section 2.1.2.1) in **Rated Frequency** (address 230).

Please note that none of the frequency stages is set to less than 30 mHz above (for $f>$) or below (for $f<$) of the nominal frequency. Since the frequency stages have a hysteresis of approx. 20 mHz, it may otherwise happen that the element does not drop out when returning to the nominal frequency.

Only those addresses are accessible that match the configured nominal frequency. For each element, a trip delay time can be set:

- Address 3602 **f1 PICKUP** pickup value for frequency stage f1 at $f_N = 50$ Hz,
Address 3603 **f1 PICKUP** pickup value for frequency stage f1 at $f_N = 60$ Hz,
Address 3604 **T f1** trip delay for frequency stage f1;
- Address 3612 **f2 PICKUP** pickup value for frequency stage f2 at $f_N = 50$ Hz,
Address 3613 **f2 PICKUP** pickup value for frequency stage f2 at $f_N = 60$ Hz,
Address 3614 **T f2** trip delay for frequency element f2;
- Address 3622 **f3 PICKUP** pickup value for frequency stage f3 at $f_N = 50$ Hz,
Address 3623 **f3 PICKUP** pickup value for frequency stage f3 at $f_N = 60$ Hz,
Address 3624 **T f3** trip delay for frequency stage f3;
- Address 3632 **f4 PICKUP** pickup value for frequency stage f4 at $f_N = 50$ Hz,
Address 3633 **f4 PICKUP** pickup value for frequency stage f4 at $f_N = 60$ Hz,
Address 3634 **T f4** trip delay for frequency element f4.

The set times are additional delay times not including the operating times (measuring time, dropout time) of the protective function.

If underfrequency protection is used for load shedding purposes, then the frequency settings relative to other feeder relays are generally based on the priority of the customers served by the protective relay. Normally, it is required for load shedding a frequency / time grading that takes into account the importance of the consumers or consumer groups.

In interconnected networks, frequency deviations may also be caused by power swings. Depending on the power swing frequency, the mounting location of the device and the setting of the frequency stages, it is reasonable to block the entire frequency protection function or single stages once a power swing has been detected. The delay times must then be co-ordinated thus that a power swing is detected before the frequency protection trips.

Further application examples exist in the field of power stations. The frequency values to be set mainly depend, also in these cases, on the specifications of the power system/power station operator. In this context, the underfrequency protection also ensures the power station's own demand by disconnecting it from the power system on time. The turbo regulator regulates the machine set to the nominal speed. Consequently, the station's own demands can be continuously supplied at nominal frequency.

Since the dropout threshold is 20 mHz below or above the trip frequency, the resulting „minimum“ trip frequency is 30 mHz above or below the nominal frequency.

A frequency increase can, for example, occur due to a load shedding or malfunction of the speed regulation (e.g. in a stand-alone system). In this way, the frequency protection can, for example, be used as overspeed protection.

2.19.3 Settings

Addr.	Parameter	Setting Options	Default Setting	Comments
3601	O/U FREQ. f1	ON: Alarm only ON: with Trip OFF	ON: Alarm only	Over/Under Frequency Protection stage f1
3602	f1 PICKUP	45.50 .. 54.50 Hz	49.50 Hz	f1 Pickup
3603	f1 PICKUP	55.50 .. 64.50 Hz	59.50 Hz	f1 Pickup
3604	T f1	0.00 .. 600.00 sec	60.00 sec	T f1 Time Delay
3611	O/U FREQ. f2	ON: Alarm only ON: with Trip OFF	ON: Alarm only	Over/Under Frequency Protection stage f2
3612	f2 PICKUP	45.50 .. 54.50 Hz	49.00 Hz	f2 Pickup
3613	f2 PICKUP	55.50 .. 64.50 Hz	57.00 Hz	f2 Pickup
3614	T f2	0.00 .. 600.00 sec	30.00 sec	T f2 Time Delay
3621	O/U FREQ. f3	ON: Alarm only ON: with Trip OFF	ON: Alarm only	Over/Under Frequency Protection stage f3
3622	f3 PICKUP	45.50 .. 54.50 Hz	47.50 Hz	f3 Pickup
3623	f3 PICKUP	55.50 .. 64.50 Hz	59.50 Hz	f3 Pickup
3624	T f3	0.00 .. 600.00 sec	3.00 sec	T f3 Time Delay
3631	O/U FREQ. f4	ON: Alarm only ON: with Trip OFF	ON: Alarm only	Over/Under Frequency Protection stage f4
3632	f4 PICKUP	45.50 .. 54.50 Hz	51.00 Hz	f4 Pickup
3633	f4 PICKUP	55.50 .. 64.50 Hz	62.00 Hz	f4 Pickup
3634	T f4	0.00 .. 600.00 sec	30.00 sec	T f4 Time Delay

2.19.4 Information List

No.	Information	Type of Information	Comments
5203	>BLOCK Freq.	SP	>BLOCK frequency protection
5206	>BLOCK f1	SP	>BLOCK frequency protection stage f1
5207	>BLOCK f2	SP	>BLOCK frequency protection stage f2
5208	>BLOCK f3	SP	>BLOCK frequency protection stage f3
5209	>BLOCK f4	SP	>BLOCK frequency protection stage f4
5211	Freq. OFF	OUT	Frequency protection is switched OFF
5212	Freq. BLOCKED	OUT	Frequency protection is BLOCKED
5213	Freq. ACTIVE	OUT	Frequency protection is ACTIVE
5215	Freq UnderV Blk	OUT	Frequency protection undervoltage Blk
5232	f1 picked up	OUT	Frequency protection: f1 picked up
5233	f2 picked up	OUT	Frequency protection: f2 picked up
5234	f3 picked up	OUT	Frequency protection: f3 picked up
5235	f4 picked up	OUT	Frequency protection: f4 picked up
5236	f1 TRIP	OUT	Frequency protection: f1 TRIP
5237	f2 TRIP	OUT	Frequency protection: f2 TRIP
5238	f3 TRIP	OUT	Frequency protection: f3 TRIP
5239	f4 TRIP	OUT	Frequency protection: f4 TRIP
5240	Time Out f1	OUT	Frequency protection: TimeOut Stage f1
5241	Time Out f2	OUT	Frequency protection: TimeOut Stage f2
5242	Time Out f3	OUT	Frequency protection: TimeOut Stage f3
5243	Time Out f4	OUT	Frequency protection: TimeOut Stage f4

2.20 Fault Locator

The measurement of the distance to a fault is an important supplement to the protection functions. Availability of the line for power transmission within the system can be increased when the fault is located and cleared faster.

2.20.1 Functional Description

General

The fault locator is an autonomous and independent function which uses the line and power system parameters set in other functions. In the event of a fault, it is triggered by the protective functions provided in the 7SD5 device. For lines with two ends, the 7SD5 provides the option of a double-ended fault locating, which significantly improves accuracy of fault locating especially in the case of double-ended infeed, faults involving earth currents, and high resistance faults. In the event of a fault, both line ends exchange their local measured values (phase currents and phase-to-earth voltages) via the protection data interface. For this function, the 7SD5 of both line ends must be equipped with the „double-ended fault locator“ option. If there are more than two line ends, single-ended fault locating will be used.

When double-ended fault locating is used, the single-ended (conventional) fault locator may be initiated simultaneously, depending on the information from the remote end, if

- double-ended fault locating is switched off or blocked,
- no values from the opposite end are available, or
- no fault locating is possible because of heavily distorted measuring signals or faults outside the protected object.

The protected object can be an inhomogeneous line. For calculation purposes, the line can be divided into different sections such as a short cable followed by an overhead line. In such protected objects, you can configure each section individually. Without this information, the fault locator uses the general line data (see Section 2.1.4).

For the internal decision whether the single-ended or the double-ended fault locating method will be used, the device calculates, on the basis of the line's known voltage profile, a distance difference from measurement errors, line asymmetry and line geometry. If this distance difference is too large in proportion to the length of the respective line section, the result of the double-ended fault locating is discarded, and the distance is calculated on a single-end basis.

Double earth faults with different base points, reverse faults and faults that extend beyond the opposite line end are only calculated with single-ended fault locating.

The fault locating can be triggered by the trip command of the protection or also by fault detection. In the latter case, a fault location calculation is also possible if a different protection device clears the fault.

Fault locating using the single-ended fault locator

The measuring principle of the single-ended fault locator is very similar to that of the distance protection function. Here, too, the device calculates the impedances.

The measured values of fault currents and fault voltages (at intervals of 1/20 period) are stored in a cyclic buffer and frozen shortly after the trip command is issued before any distortion of the measured values occurs due to the opening of the circuit breaker even with very fast circuit breakers. The filtering of the measured values and the number of impedance calculations are automatically adapted to the number of reliable measured values in the determined data window. If no sufficient data windows with re-

liable values could be determined for fault locating, the „Flt.Loc.invalid“ indication is issued.

The evaluation of the measured values in the short-circuit loops is carried out after the short-circuit has been cleared. Short-circuit loops are those which caused the trip. In the event of tripping by the earth fault protection, the three phase-to-earth loops are also evaluated.

Double-Ended Fault Locator

The double-ended fault locating method also considers line capacitance and line resistance. It adapts the fault location for an optimum matching between the voltages calculated for the fault location and the values measured at the line ends. It is assumed in this context that voltages on a line cannot leap. The voltage at the presumed fault location is calculated once with the values measured on the left side and once with those from the right side. The actual fault location is where there is no or hardly any difference between the voltage characteristics from the left and the right side.

The double-ended fault locating method is based on the assumption that in a line without branches, with known currents and voltages at each line end, the voltage can be calculated for any location x of the line. This is true for both the left and the right line side. Since the voltage at fault location calculated from both sides must be the same, the fault is located at the intersection of the two voltage characteristics. These characteristics are calculated with the telegraph equation from the locally measured currents and voltages, and the reactances per line unit. Figure 2-171 shows a simplified schematic in which linear voltage characteristics are assumed.

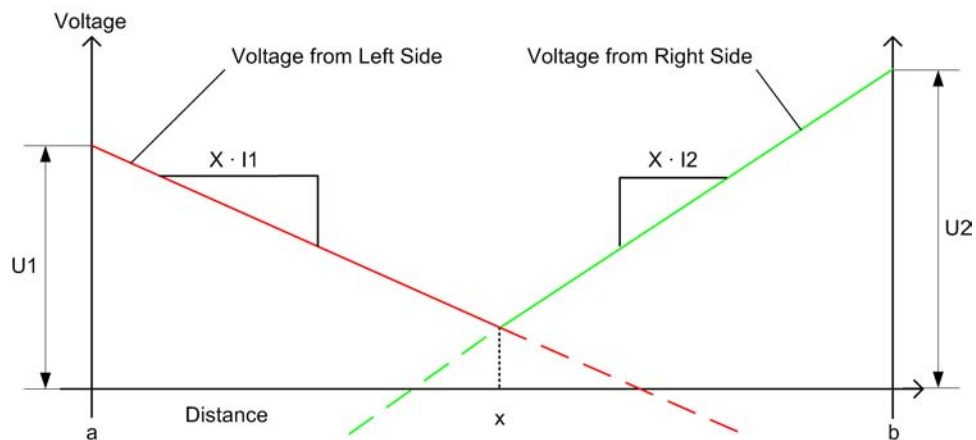


Figure 2-171 Curves of voltages on a faulty line (simplified)

The double-ended fault locating method used here has the following advantages over the single-ended method:

- Correct fault locating is possible even with power flowing on the line, with double-sided infeed and high fault resistances.
- The precision of fault locating is not affected by an inaccurate setting of the earth impedance compensation.
- The method is stable against the influence of a parallel line, so parallel line compensation is not required.
- The accuracy can be increased if the line asymmetry (selection of the central conductor) is taken into account.

Output of the Fault Locator

The fault locating issues the following results:

- The short-circuit loop which was used to determine the fault reactance,
- Fault reactance X in Ω primary and Ω secondary,
- Fault resistance R in Ω primary and Ω secondary,
- The distance to fault d in kilometres or miles of the line proportional to the reactance, converted on the basis of the set line reactance per unit line length,
- The distance to fault d in % of the line length, calculated on the basis of the set reactance per unit length and the set line length.

The additional indications always show the results of single-ended fault locating.

The fault location indicated in per cent can, at the same time, be output as BCD-code (Binary Coded Decimal). This, however, must have been preset in address 138 during the configuration of the protection functions (Section 2.1.1.3). A further prerequisite is that the required number of binary outputs is allocated for this purpose.

10 output relays are needed. They are classified as follows:

- 4 outputs for the units ($1 \cdot 2^0 + 1 \cdot 2^1 + 1 \cdot 2^2 + 1 \cdot 2^3$),
- 4 outputs for the tens ($10 \cdot 2^0 + 10 \cdot 2^1 + 10 \cdot 2^2 + 10 \cdot 2^3$),
- 1 output for the hundreds ($100 \cdot 2^0$),
- 1 output for the ready-state annunciation „BCD dist. VALID“ (No. 1152).

Once a fault was located, the corresponding binary outputs pick up. Then the output „BCD dist. VALID“ signals that the data are now valid. The duration can be set. In the event of a new fault, the data of the former fault are cleared automatically.

The output range extends from 0 % to 195 %. Output „197“ means that a negative fault was detected. Output „199“ describes an overflow, i. e. the calculated value is higher than the maximum possible value of 195 %.

**Note**

If no different line sections are parameterised, the distance output in kilometres, miles or percent is only accurate for homogeneous lines. If the line is composed of line sections with different reactances per section, e.g. overhead line–cable sections, the reactance calculated by the fault locating can be evaluated for the separate calculation of the fault distance or several line sections can be set.

Line sections

The line type is determined by the line section settings. If, for instance, the line includes a cable and an overhead line, two different sections must be configured. The system can distinguish between up to three different line types. When configuring these line data, please note that DIGSI will only show you two or three different tabs for setting those parameters if you have first configured that number of line sections.

Line symmetry (only for double-ended fault locating)

The asymmetry of a line can be taken into account in order to achieve higher accuracy of the double-ended fault locating. The asymmetry is estimated on the basis of the phase arrangement. You must set the central phase. If you do not wish an estimation of the asymmetry, it can be switched off. The system assumes lines having a high degree of symmetry with respect to the central phase, in particular a single-level arrangement. Figure 2-172 shows possible phase arrangements.

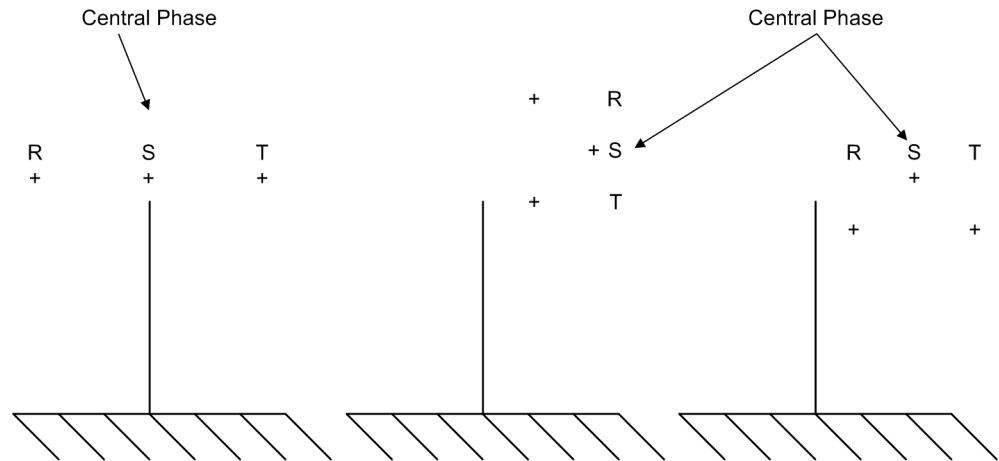


Figure 2-172 Single-level arrangement with central phase

Parallel line measured value correction (single-ended fault locating)

In the case of earth faults on double circuit lines, the measured values obtained for calculation of the impedance are influenced by the mutual coupling of the earth impedance of **both** parallel lines. This causes measuring errors in the result of the impedance computation unless special measures are taken. The device is therefore provided with a parallel line compensation function. This function takes the earth current of the parallel line into consideration when solving the line equation, thereby compensating for the coupling influence as was the case with the derivation of the distance by the distance protection (refer to Section 2.5.1 under „Parallel Line Measured Value Correction“). The earth current of the parallel line must, of course, be connected to the device and the current input I_4 must be configured accordingly during the setting of the **General Power System Data (Power System Data 1)** (Section 2.1.2.1 under „Current Transformer Connection“).

The parallel line compensation only applies to faults on the protected feeder. For external faults, including those on the parallel line, compensation is impossible.

Correction of measured values for load current on double-end fed lines (single-ended fault locator)

When faults occur on loaded lines fed from both ends (Figure 2-173), the fault voltage \underline{U}_{F1} is influenced not only by the source voltage \underline{E}_1 , but also by the source voltage \underline{E}_2 , when both voltages are applied to the common earth resistance R_F . This causes measuring errors in the result of the impedance computation unless special measures are taken, since the current component \underline{I}_{F2} cannot be seen at the measuring point M. For long heavily loaded lines, this can give a significant error in the X-component of the fault impedance (the determining factor for the distance calculation).

For single-ended fault location calculation, a load compensation feature is provided in the 7SD5 which corrects this measurement inaccuracy. Correction for the R-component of the fault impedance is not possible; but the resultant inaccuracy is not critical, since only the X-component is critical for the distance to fault indication.

Load compensation is effective for single-phase faults. Positive and zero phase sequence components of the symmetrical components are used in the compensation.

Load compensation can be switched on or off. Switching off is useful, for example, during relay testing in order to avoid influences caused by the test quantities.

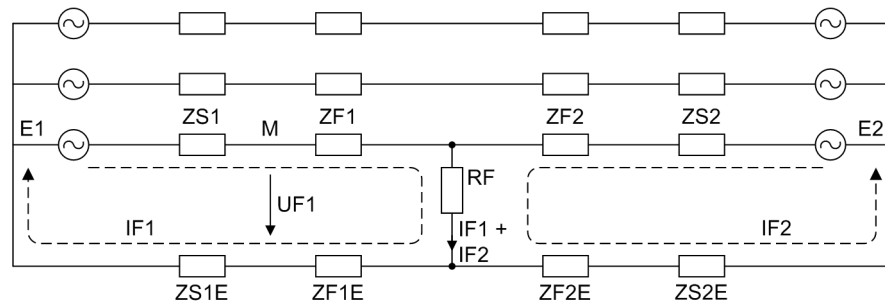


Figure 2-173 Fault currents and voltages on double-end fed lines

M	: Measuring point
E1, E2	: Source voltage (EMF)
IF1, IF2	: Partial fault currents
IF1 + IF2	: Total fault current
UF1	: Fault voltage at the measuring point
RF	: Common fault resistance
ZF1, ZF2	: Fault impedances
ZF1E, ZF2E	: Earth fault impedances
ZS1, ZS2	: Source impedances
ZS1E, ZS2E	: Earth source impedances

2.20.2 Setting Notes

General

The fault location function is only in service if it was selected to **Enabled** during the configuration of the device functions (Section 2.1.1.3, address 138).

In address 160 **L-sections FL** you can set the number of line sections. If you set the number to **2 Sections** or **3 Sections**, a number of additional tabs for setup will appear in DIGSI. The default setting of this address is **1 Section**, which means that the line parameters addresses 1116, 1117, 1120 and 1121 are also relevant (refer also to Section 2.1.4).

If the fault location calculation is to be started by the trip command of the protection, set address 3802 **START = TRIP**. In this case a fault location is only output if the device has also issued a trip. The fault location calculation can, however, also be started with each fault detection of the device (address 3802 **START = Pickup**). In this case the fault location is also calculated if, for example, a different protection device cleared the fault. If the fault is located outside the protected line, only the single-ended method is used for fault location.

To calculate the distance to fault in kilometers or miles, the device needs the reactance per unit length in Ω/km or Ω/mile , and in the case of double-ended fault location the capacitance per unit length in $\mu\text{F}/\text{km}$ or $\mu\text{F}/\text{mile}$. For correct indication of the fault location in % of line length, the correct line length has also to be entered. For the double-ended fault locator this information is mandatory. These setting parameters were already applied with the Power System Data 2 (Section 2.1.4.1 at „General Line Data“).

A prerequisite for the correct indication of the fault location is furthermore that the other parameters that influence the calculation of the distance to fault have also been set correctly.

If only one line section (address 160 = **1 Section**) is set, these parameters are:

- 1116 **RE/RL(Z1)**,
- 1117 **XE/XL(Z1)** or
- 1120 **K0 (Z1)**,
- 1121 **Angle K0(Z1)**.

If multiple line sections (address 160 = **2 Sections** or **3 Sections**) are set, you must set the following parameters.

For line section 1 set the addresses:

- 6009 **S1: XE/XL**,
- 6010 **S1: RE/RL** or
- 6011 **S1: K0**,
- 6012 **S1: angle K0**.

For line section 2 set the addresses:

- 6029 **S2: XE/XL**,
- 6030 **S2: RE/RL** or
- 6031 **S2: K0**,
- 6032 **S2: angle K0**.

For line section 3 set the addresses:

- 6049 **S3: XE/XL**,
- 6050 **S3: RE/RL** or
- 6051 **S3: K0**,
- 6052 **S3: angle K0**.



Note

Double-ended fault locating requires that the devices at the ends are configured with the same data, i.e., if there is more than one line section, the values configured for device B must mirror the data of device A. This means for two line types that line section 1 and 2 configured for device A must be line section 2 and 1 of device B.

If the devices are correctly configured, indication no. 1111 „FL active“ will be output as ON.

If address 160 is set to **2 Sections** or **3 Sections**, the line impedance angle of the first line section must be set at address 6001 **S1: Line angle**, the reactance per unit length at address 6002 **S1: x'**, and the capacitance per unit length at address 6003 **S1: c'**. The line section length is entered at address 6004 **S1: Line length**. All values refer to kilometer as distance measuring unit. If you want to use miles as reference values, the addresses relevant for you are 6002, 6003 and 6004.

The central phase of your transmission tower layout is specified at address 6008 **S1: center ph..** Setting 6008 = **unknown/sym.** assumes a symmetrical layout.

Line sections 2 (A2) and 3 (A3) are configured in the same way as described above. For setting values please refer to Table 2-16.

Table 2-16 Additional line section parameters

Addr.	Setting Title	C	Setting Options	Default Settings	Description
6001	S1: Line angle		30-89 °; without 0	85 °	A1: Line impedance angle
6002	S1: x'	1 A	0.0010-1.9000 Ω/km; without 0	0.0300 Ω/km	A1: Line reactance per unit length: x' in Ω/km
		5 A	0.0050-9.5000 Ω/km; without 0	0.1500 Ω/km	
		1 A	0.0010-3.0000 Ω/mi; without 0	0.0484 Ω/mi	A1: Line reactance per unit length: x' in Ω/mile
		5 A	0.0050-15.0000 Ω/mile; without 0	0.2420 Ω/mile	
6003	S1: c'	1 A	0.000-500.000 μF/km; 0	0.050 μF/km	A1: Capacitance per unit length C' in μF/km
		5 A	0.000-100.000 μF/km; 0	0.010 μF/km	
		1 A	0.000-800.000 μF/mi; 0	0.080 μF/mi	A1: Capacitance per unit length C' in μF/mile
		5 A	0.000-160.000 μF/mile; 0	0.016 μF/mile	
6004	S1: Line length		0.1-1000.0 km; without 0	100.0 km	A1: Line length in kilometers
			0.1-650.0 Miles; without 0	62.1 Miles	A1: Line length in miles
6008	S1: center ph.		unknown/sym. Phase 1 Phase 2 Phase 3	unknown/sym.	A1: Central phase
6021	S2: Line angle		30-89 °; without 0	85 °	A2: Line impedance angle
6022	S2: x'	1 A	0.0010-1.9000 Ω/km; without 0	0.0300 Ω/km	A2: Line reactance per unit length: x' in Ω/km
		5 A	0.0050-9.5000 Ω/km; without 0	0.1500 Ω/km	
		1 A	0.0010-3.0000 Ω/mi; without 0	0.0484 Ω/mi	A2: Line reactance per unit length: x' in Ω/mile
		5 A	0.0050-15.0000 Ω/mile; without 0	0.2420 Ω/mile	
6023	S2: c'	1 A	0.000-500.000 μF/km; 0	0.050 μF/km	A2: Capacitance per unit length C' in μF/km
		5 A	0.000-100.000 μF/km; 0	0.010 μF/km	
		1 A	0.000-800.000 μF/mi; 0	0.080 μF/mi	A2: Capacitance per unit length C' in μF/mile
		5 A	0.000-160.000 μF/mile; 0	0.016 μF/mile	
6024	S2: Line length		0.1-1000.0 km; without 0	100.0 km	A2: Line length in kilometers
			0.1-650.0 Miles; without 0	62.1 Miles	A2: Line length in miles
6028	S2: center ph.		unknown/sym. Phase 1 Phase 2 Phase 3	unknown/sym.	A2: Central phase
6041	S3: Line angle		30-89 °; without 0	85 °	A3: Line impedance angle
6042	S3: x'	1 A	0.0010-1.9000 Ω/km; without 0	0.0300 Ω/km	A3: Line reactance per unit length: x' in Ω/km
		5 A	0.0050-9.5000 Ω/km; without 0	0.1500 Ω/km	
		1 A	0.0010-3.0000 Ω/mi; without 0	0.0484 Ω/mi	A3: Line reactance per unit length: x' in Ω/mile
		5 A	0.0050-15.0000 Ω/mile; without 0	0.2420 Ω/mile	
6043	S3: c'	1 A	0.000-500.000 μF/km; 0	0.050 μF/km	A3: Capacitance per unit length C' in μF/km
		5 A	0.000-100.000 μF/km; 0	0.010 μF/km	
		1 A	0.000-800.000 μF/mi; 0	0.080 μF/mi	A3: Capacitance per unit length C' in μF/mile
		5 A	0.000-160.000 μF/mile; 0	0.016 μF/mile	

Addr.	Setting Title	C	Setting Options	Default Settings	Description
6044	S3: Line length		0.1-1000.0 km; without 0	100.0 km	A3: Line length in kilometers
			0.1-650.0 Miles; without 0	62.1 Miles	A3: Line length in miles
6048	S3: center ph.	unknown/sym. Phase 1 Phase 2 Phase 3		unknown/sym.	A3: Central phase

If the parallel line compensation is used, set address 3805 **Paral.Line Comp** to **YES** (presetting for devices with parallel line compensation). Further prerequisites are that

- the earth current of the parallel line has been connected to the fourth current input I_4 with the correct polarity and
- the current transformer ratio **I4/Iph CT** (address 221) in the Power System Data 1 has been set correctly (refer also to Section 2.1.2.1 under „Current Transformer Connection“) and
- the parameter for the fourth current input **I4 transformer** has been set to **In paral. line** (address 220) in the Power System Data 1 (Section 2.1.2.1 under „Current Transformer Connection“) and
- the mutual impedances **RM/RL ParalLine** and **XM/XL ParalLine** (addresses 1126 and 1127) have been set correctly in the general protection data (plant data 2, Section 2.1.4.1).

If load compensation is applied to single-phase faults in double-fed lines of an earthed system, set 3806 in address **Load Compensat. YES**. In case high fault resistances are expected for single-phase faults, e.g. at overhead lines without overhead earth wire or unfavourable footing of the towers, this will improve the accuracy of the distance calculation.

If double-ended fault locating is not desired, set address 3807 **two ended = OFF**. The default setting is **ON**.

If the fault location is required to be output as BCD-code, set the maximum time period the data should be available at the outputs using address 3811 **Tmax OUTPUT BCD**. If a new fault occurs, the data are terminated immediately even when it occurs before this time has expired. Allocate the corresponding output relays as stored if a longer time period is desired for the output. Once a fault occurred the data will be latched until the memory is reset or a new fault is registered.

2.20.3 Settings

Addr.	Parameter	Setting Options	Default Setting	Comments
3802	START	Pickup TRIP	Pickup	Start fault locator with
3805	Paral.Line Comp	NO YES	YES	Mutual coupling parall.line compensation
3806	Load Compensat.	NO YES	NO	Load Compensation
3807	two ended	ON OFF	ON	two ended fault location
3811	Tmax OUTPUT BCD	0.10 .. 180.00 sec	0.30 sec	Maximum output time via BCD

2.20.4 Information List

No.	Information	Type of Information	Comments
1111	FL active	OUT	Fault locator active
1114	Rpri =	VI	Flt Locator: primary RESISTANCE
1115	Xpri =	VI	Flt Locator: primary REACTANCE
1117	Rsec =	VI	Flt Locator: secondary RESISTANCE
1118	Xsec =	VI	Flt Locator: secondary REACTANCE
1119	dist =	VI	Flt Locator: Distance to fault
1120	d[%] =	VI	Flt Locator: Distance [%] to fault
1122	dist =	VI	Flt Locator: Distance to fault
1123	FL Loop L1E	OUT_Ev	Fault Locator Loop L1E
1124	FL Loop L2E	OUT_Ev	Fault Locator Loop L2E
1125	FL Loop L3E	OUT_Ev	Fault Locator Loop L3E
1126	FL Loop L1L2	OUT_Ev	Fault Locator Loop L1L2
1127	FL Loop L2L3	OUT_Ev	Fault Locator Loop L2L3
1128	FL Loop L3L1	OUT_Ev	Fault Locator Loop L3L1
1131	RFpri=	VI	Flt Locator: primary FAULT RESISTANCE
1132	Flt.Loc.invalid	OUT	Fault location invalid
1133	Flt.Loc.ErrorK0	OUT	Fault locator setting error K0,angle(K0)
1134	two ended FO	OUT_Ev	Two ended fault location
1143	BCD d[1%]	OUT	BCD Fault location [1%]
1144	BCD d[2%]	OUT	BCD Fault location [2%]
1145	BCD d[4%]	OUT	BCD Fault location [4%]
1146	BCD d[8%]	OUT	BCD Fault location [8%]
1147	BCD d[10%]	OUT	BCD Fault location [10%]
1148	BCD d[20%]	OUT	BCD Fault location [20%]
1149	BCD d[40%]	OUT	BCD Fault location [40%]
1150	BCD d[80%]	OUT	BCD Fault location [80%]
1151	BCD d[100%]	OUT	BCD Fault location [100%]
1152	BCD dist. VALID	OUT	BCD Fault location valid

2.21 Circuit Breaker Failure Protection

The circuit breaker failure protection provides rapid back-up fault clearance in the event that the circuit breaker fails to respond to a trip command from a protective function of the local circuit breaker.

2.21.1 Functional Description

General

Whenever e.g. a short-circuit protection relay of a feeder issues a trip command to the circuit breaker, this is repeated to the breaker failure protection (Figure 2-174). A timer T-BF in the breaker failure protection is started. The timer runs as long as a trip command is present and current continues to flow through the breaker poles.

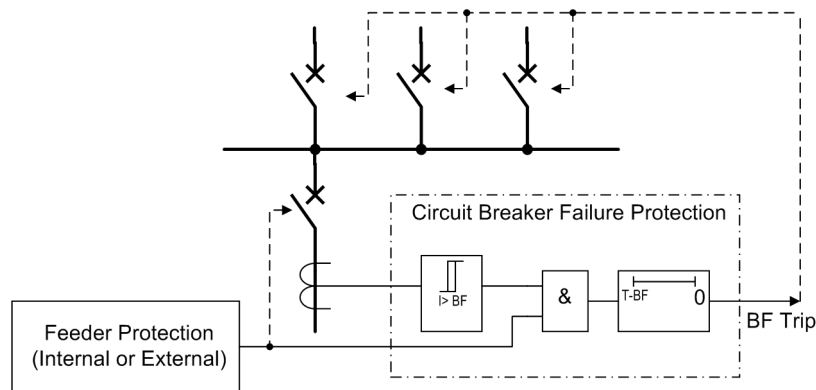


Figure 2-174 Simplified function diagram of circuit breaker failure protection with current flow monitoring

Normally, the breaker will open and interrupt the fault current. The current monitoring stage quickly resets (typical 10 ms) and stops the timer T-BF.

If the trip command is not carried out (breaker failure case), current continues to flow and the timer runs to its set limit. The breaker failure protection then issues a command to trip the back-up breakers and interrupt the fault current.

The reset time of the feeder protection is not relevant because the breaker failure protection itself recognizes the interruption of the current.

For protective functions where the tripping criteria are not dependent on current (e.g. Buchholz protection), current flow is not a reliable criterion for proper operation of the breaker. In such cases, the circuit breaker position can be derived from the auxiliary contacts of the breaker. Therefore, instead of monitoring the current, the position of the auxiliary contacts is monitored (see Figure 2-175). For this purpose, the outputs from the auxiliary contacts must be fed to binary inputs of the relay (refer also to Section 2.24.1).

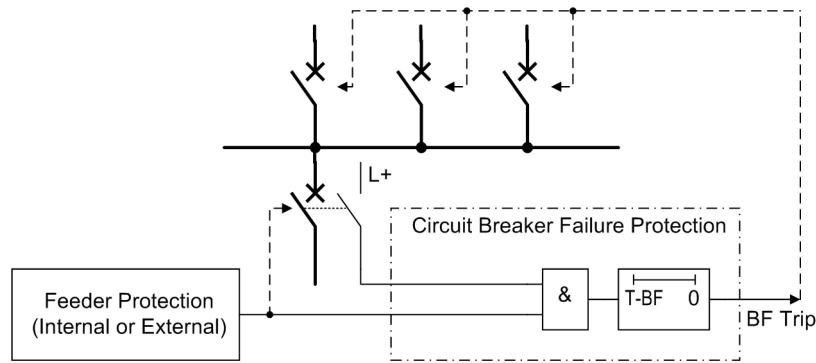


Figure 2-175 Simplified function diagram of circuit breaker failure protection controlled by circuit breaker auxiliary contact

Current flow monitoring

Each of the phase currents and an additional plausibility current (see below) are filtered by numerical filter algorithms so that only the fundamental component is used for further evaluation.

Special features recognize the instant of current interruption. In case of sinusoidal currents the current interruption is detected after approximately 10 ms. With aperiodic DC current components in the fault current and/or in the current transformer secondary circuit after interruption (e.g. current transformers with linearized core), or saturation of the current transformers caused by the DC component in the fault current, it can take one AC cycle before the interruption of the primary current is reliably detected.

The currents are monitored and compared with the set limit value. Besides the three phase currents, two further current thresholds are provided in order to allow a plausibility check. If configured correspondingly, a separate threshold value can be used for this plausibility check (see Figure 2-176).

As plausibility current, the earth current (residual current I_E ($3 \cdot I_0$)) is preferably used. If the residual current from the starpoint of the current transformer set is connected to the device it is used. If the residual current is not available, the device calculates it with the formula:

$$3 \cdot I_0 = I_{L1} + I_{L2} + I_{L3}$$

Additionally, the value calculated by 7SD5 of three times the negative sequence current $3 \cdot I_2$ is used for plausibility check. This is calculated according to the equation:

$$3 \cdot I_2 = I_{L1} + \underline{a}^2 \cdot I_{L2} + \underline{a} \cdot I_{L3}$$

where

$$\underline{a} = e^{j120^\circ}.$$

These plausibility currents do not have any direct influence on the basic functionality of the breaker failure protection but they allow a plausibility check in that at least two current thresholds must have been exceeded before any of the breaker failure delay times can be started, thus providing high security against false operation.

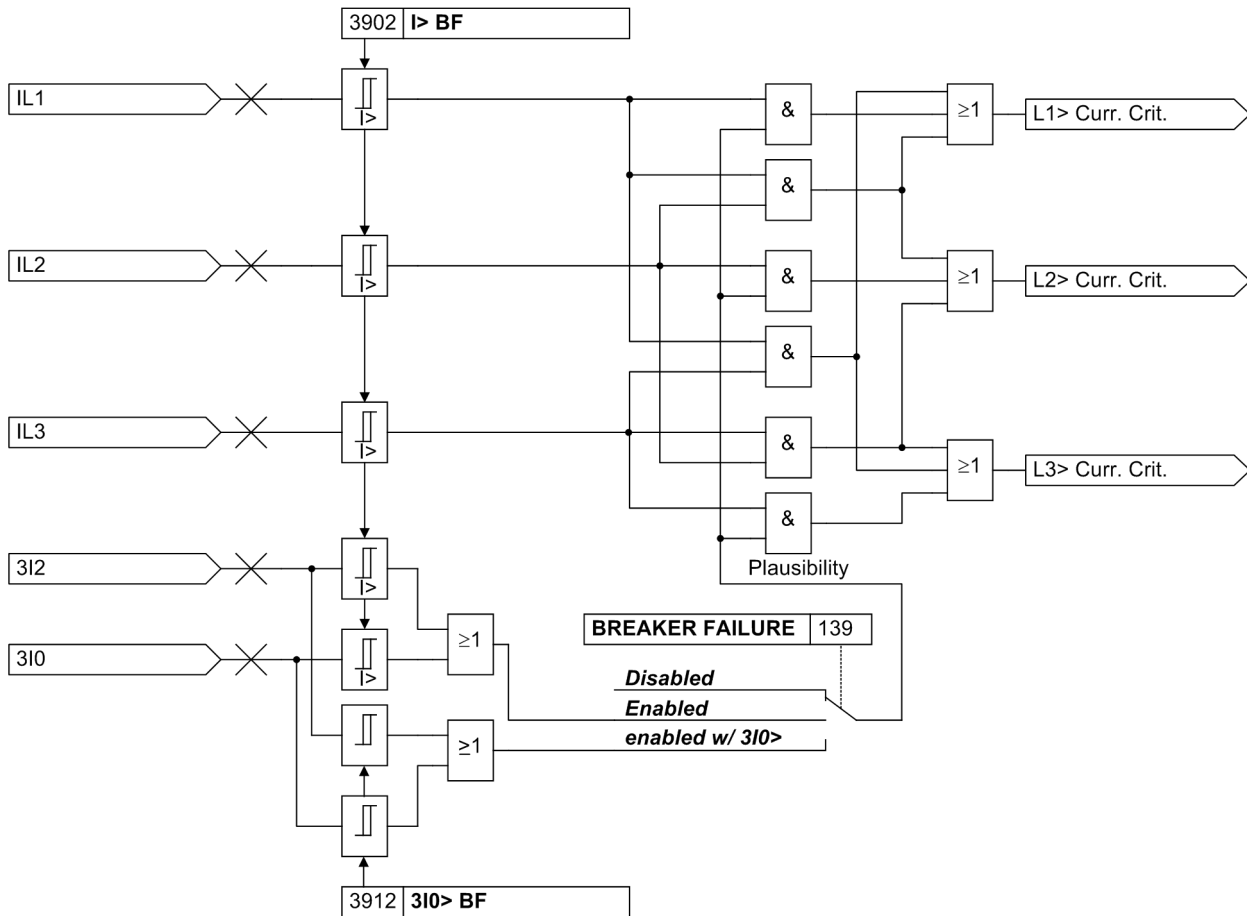


Figure 2-176 Current flow monitoring with plausibility currents $3 \cdot I_0$ and $3 \cdot I_2$

Monitoring the circuit breaker auxiliary contacts

It is the central function control of the device that informs the breaker failure protection on the position of the circuit breaker (refer also to Section 2.24.1). The evaluation of the breaker auxiliary contacts is carried out in the breaker failure protection function only when the current flow monitoring has not picked up. Once the current flow criterion has picked up during the trip signal from the feeder protection, the circuit breaker is assumed to be open as soon as the current disappears, even if the associated auxiliary contacts do not (yet) indicate that the circuit breaker has opened (Figure 2-177). This gives preference to the more reliable current criterion and avoids overfunctioning due to a defect e.g. in the auxiliary contact mechanism. This interlock feature is provided for each individual phase as well as for three-pole tripping.

It is possible to disable the auxiliary contact criterion. If you set the parameter switch **Chk BRK CONTACT** (Figure 2-179 top) to **NO**, the breaker failure protection can only be started when current flow is detected. The position of the auxiliary contacts is then not evaluated even if the auxiliary contacts are connected to the device.

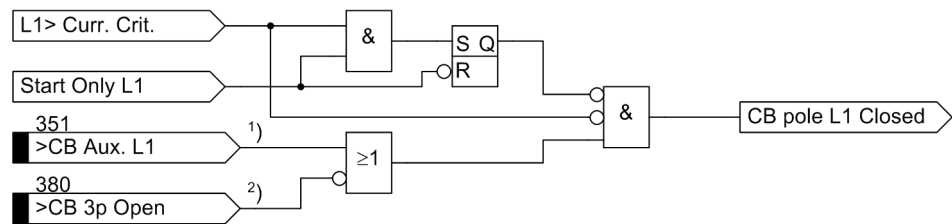


Figure 2-177 Interlock of the auxiliary contact criterion - example for phase L1

- 1) if phase-segregated auxiliary contacts are available
 2) if series-connected NC contacts are available

On the other hand, current flow is not a reliable criterion for proper operation of the circuit breaker for faults which do not cause detectable current flow (e.g. Buchholz protection). Information regarding the position of the circuit breaker auxiliary contacts is required in these cases to check the correct response of the circuit breaker. For this purpose, the binary input „>BF Start w/o I“ No. 1439 is provided (Figure 2-179 left). This input initiates the breaker failure protection even if no current flow is detected.

Common phase initiation

Common phase initiation is used, for example, in systems with only three-pole tripping, for transformer feeders, or if the busbar protection trips. This is the only available initiation mode if the actual 7SD5 model can only trip three-pole.


If the breaker failure protection is intended to be initiated by further external protection devices, it is recommended, for security reasons, to connect two binary inputs to the device. Besides the trip command of the external protection to the binary input „>BF Start 3pole“ no. 1415 it is recommended to connect also the general device pickup to binary input „>BF release“ no. 1432. For Buchholz protection it is recommended that both inputs are connected to the device by two separate wire pairs.

Nevertheless, it is possible to initiate the breaker failure protection in single-channel mode should a separate release criterion not be available. The binary input „>BF release“ (No. 1432) must then not be assigned to any physical input of the device during configuration.

Figure 2-179 shows the operating principle. When the trip signal appears from any internal or external feeder protection and at least one current flow criterion according to Figure 2-176 is present, the breaker failure protection is initiated and the corresponding delay time(s) is (are) started.

If the current criterion is not fulfilled for any of the phases, the position of the circuit breaker auxiliary contact can be queried as shown in Figure 2-178. If the circuit breaker poles have individual auxiliary contacts, the series connection of the three normally closed (NC) auxiliary contacts is used. After a three-pole trip command the circuit breaker has only operated correctly if current no longer flows over the poles or if all three NC auxiliary contacts are closed.

Figure 2-178 illustrates how the internal signal „CB pole ≥L1 closed“ is created (see Figure 2-179 left) if at least one circuit breaker pole is closed.

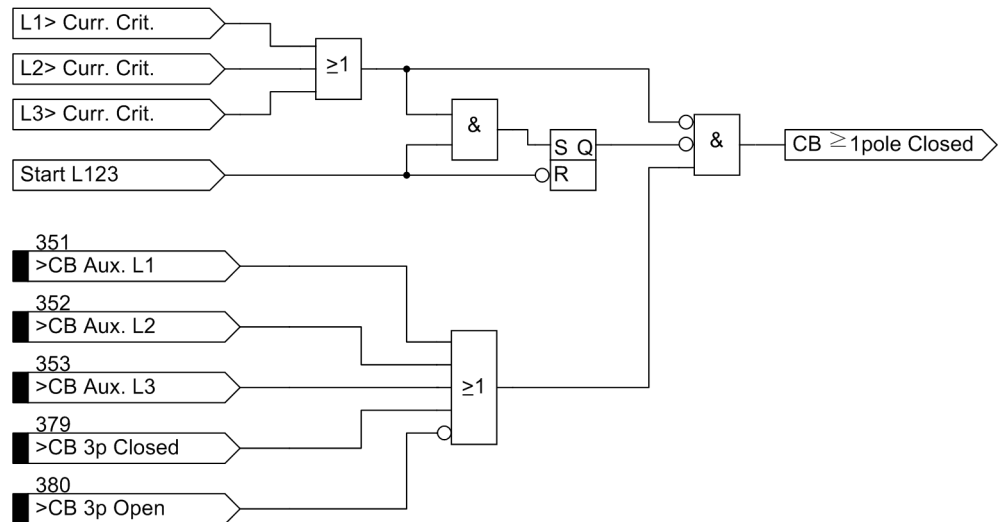Figure 2-178 Creation of signal "CB \geq any pole closed"

If an internal protection function or an external protection device trips without current flow, the breaker failure protection is initiated by the internal input „Start internal w/o I“, if the trip signal comes from the internal voltage protection or frequency protection, or by the external input „>BF Start w/o I“. In this case the start signal is maintained until the circuit breaker is reported to be open by the auxiliary contact criterion.

Initiation can be blocked via the binary input „>BLOCK BkrFail“ (e.g. during test of the feeder protection relay).

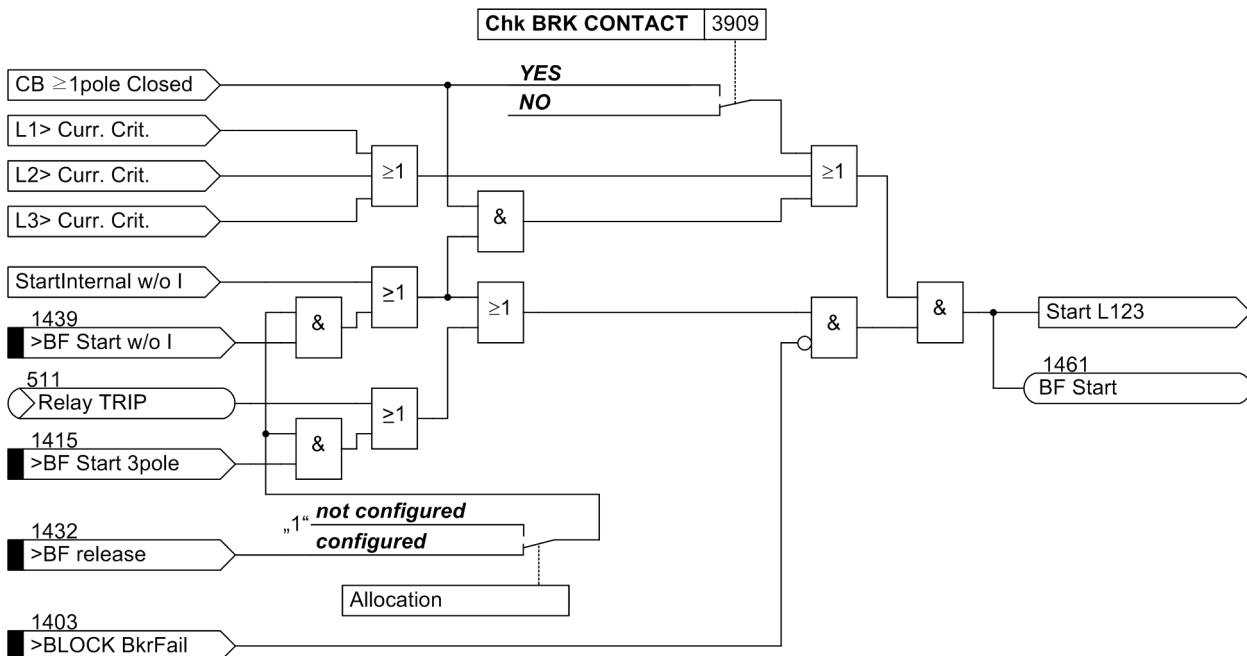


Figure 2-179 Breaker failure protection with common phase initiation

Phase-segregated initiation

Phase segregated initiation of the breaker failure protection is necessary if the circuit breaker poles are operated individually, e.g. if single-pole automatic reclosure is used. This is possible if the device is able to trip single-pole.

If the breaker failure protection is intended to be initiated by further external protection devices, it is recommended, for security reasons, to connect two binary inputs to the device. Besides the three trip commands of the external relay to the binary input „>BF Start L1“, „>BF Start L2“ and „>BF Start L3“ it is recommended to connect also, for example, the general device pickup to binary input „>BF release“. Figure 2-180 shows this connection.

Nevertheless, it is possible to initiate the breaker failure protection in single-channel mode should a separate release criterion not be available. The binary input „>BF release“ must then not be assigned to any physical input of the device during configuration.

If the external protection device does not provide a general fault detection signal, a general trip signal can be used instead. Alternatively, the parallel connection of a separate set of trip contacts can produce such a release signal as shown in Figure 2-181.

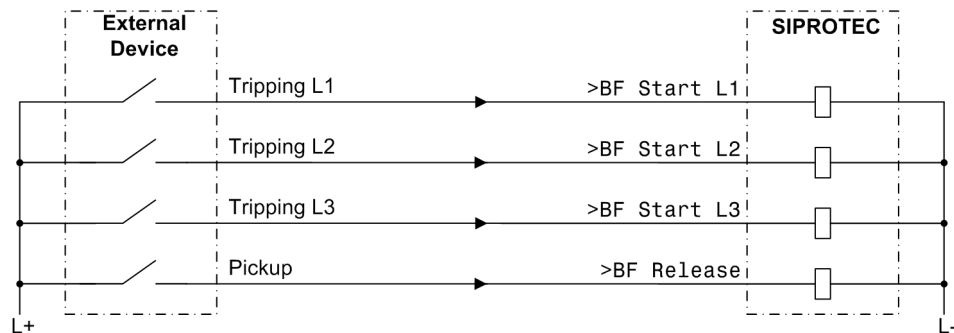


Figure 2-180 Breaker failure protection with phase segregated initiation — example for initiation by an external protection device with release by a fault detection signal

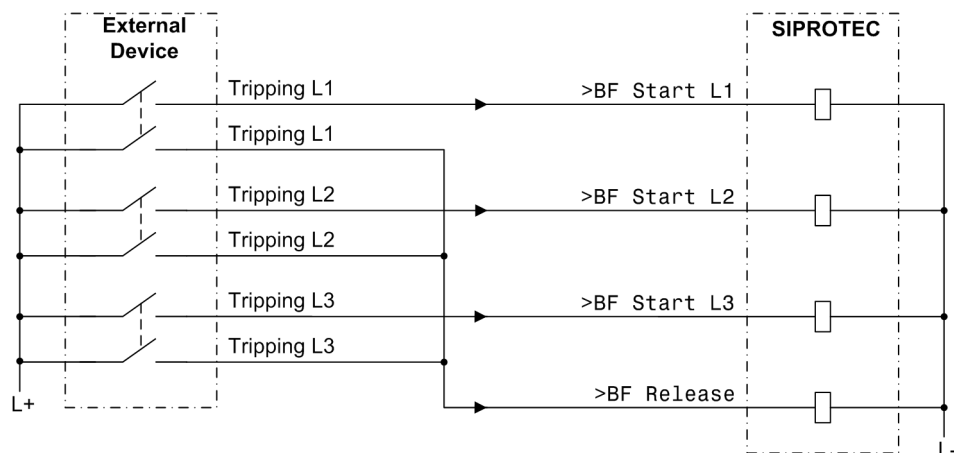


Figure 2-181 Breaker failure protection with phase segregated initiation — example for initiation by an external protection device with release by a separate set of trip contacts

The start condition logic for the delay time(s) is basically designed as in the common phase initiation, the difference is that this logic is designed separately for each phase

(Figure 2-182). Thus, current flow and initiation conditions are processed for each phase. In case of single-pole interruption before an automatic reclose cycle, current disappearance is reliably monitored for the tripped breaker pole only.

Initiation of an individual phase, e.g. „Start only L1“, is only valid if the starting signal (= tripping signal of the feeder protection) appears for exactly this phase and if the current criterion is met for at least this phase. If it is not met, the circuit breaker auxiliary contact can be interrogated according to Figure 2-177 – if parameterised (**Chk BRK CONTACT = YES**).

The auxiliary contact criterion is also processed for each individual breaker pole. If, however, the breaker auxiliary contacts are not available for each individual breaker pole, then a single-pole trip command is assumed to be executed only if the series connection of the normally open (NO) auxiliary contacts is interrupted. This information is provided to the breaker failure protection by the central function control of the device (refer to Section 2.24.1).

If there are starting signals of more than one phase, the common phase initiation „Start L123“ is used. Phase-segregated initiation is then blocked. The input "BF Start w/o I" (e.g. from Buchholz protection) operates only in three-phase mode. The function is the same as with common phase initiation.

The additional release-signal „>BF release“ (if assigned to a binary input) affects all initiation conditions. Initiation can be blocked via the binary input „>BLOCK BkrFail“ (e.g. during test of the feeder protection relay).

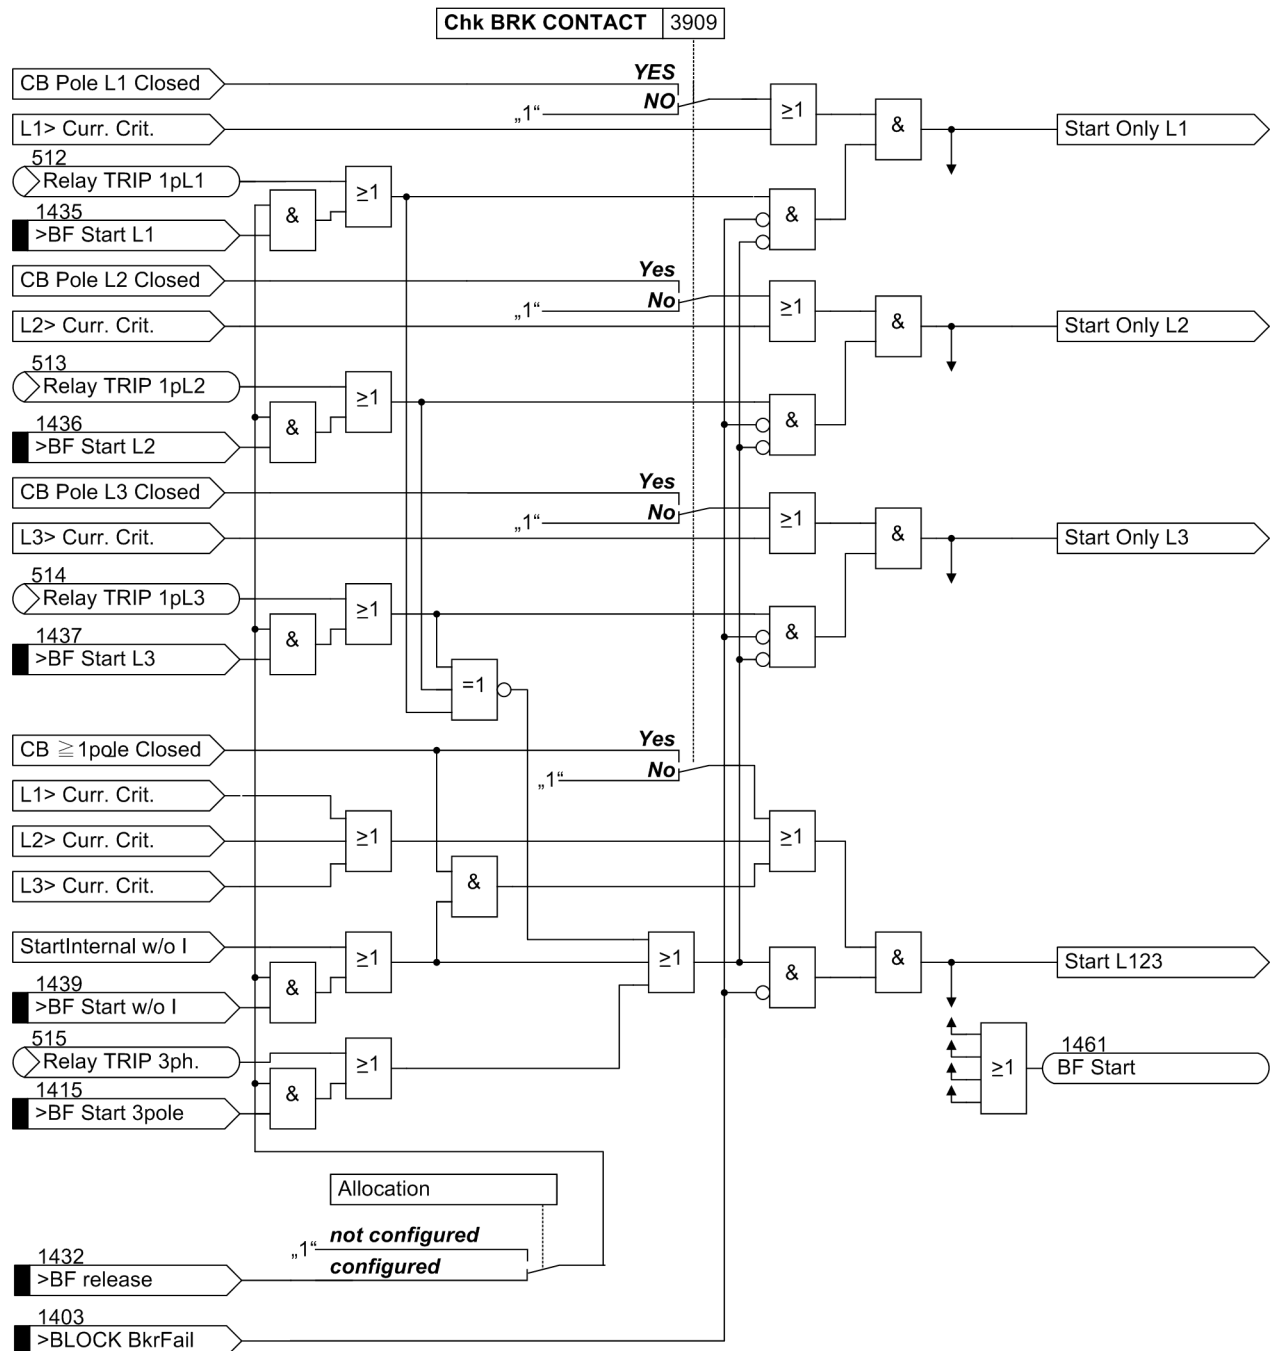


Figure 2-182 Initiation conditions for single-pole trip commands

Delay times

When the initiate conditions are fulfilled, the associated timers are started. The circuit breaker pole(s) must open before the associated time has elapsed.

Different delay times are possible for single-pole and three-pole initiation. An additional delay time can be used for two-stage breaker failure protection.

With single-stage breaker failure protection, the trip command is routed to the adjacent circuit breakers which then interrupt the fault current if the local feeder breaker fails (Figure 2-174 or Figure 2-175). Adjacent circuit breakers are the ones of the busbar or busbar section to which the considered feeder is connected. The possible initiation conditions for the breaker failure protection are those discussed above. Depending on

the application of the feeder protection, common phase or phase-segregated initiation conditions may occur. The tripping by the breaker failure protection is always three-pole.

The simplest solution is to start the delay timer **T2** (Figure 2-183). The phase-segregated initiation signals are omitted if the feeder protection always trips three-pole or if the circuit breaker is not capable of single-pole tripping.

If different delay times are to be achieved after a single-pole trip or three-pole trip, the delay times **T1-1pole** and **T1-3pole** are used according to Figure 2-184.

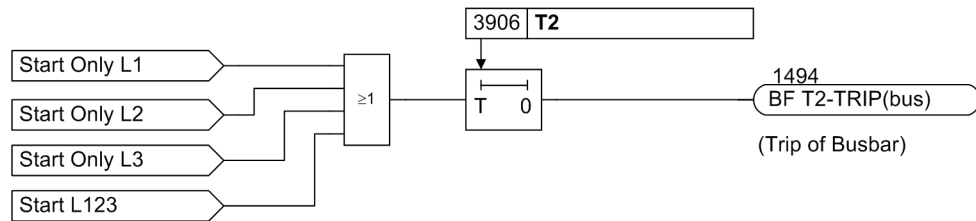


Figure 2-183 Single-stage breaker failure protection with common phase initiation

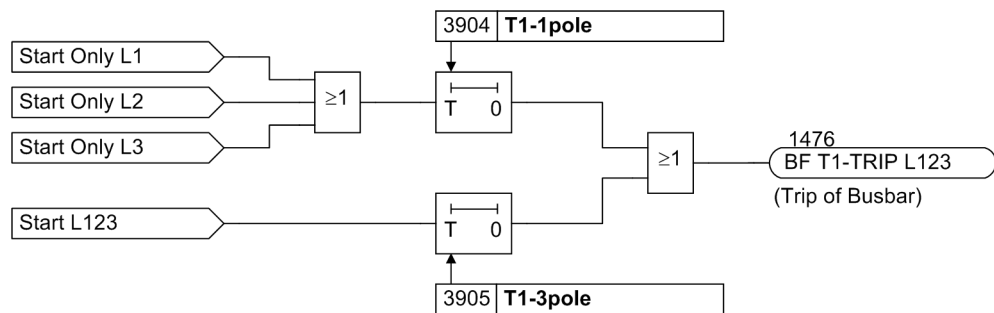


Figure 2-184 Single-stage breaker failure protection with different delay times

With two-stage breaker failure protection the trip command of the feeder protection is usually repeated, after a first time stage, to the feeder circuit breaker, often via a second trip coil or set of trip coils, if the breaker has not responded to the original trip command. A second time stage monitors the response to this repeated trip command and trips the breakers of the relevant busbar section if the fault has not yet been cleared after this second time.

For the first stage a different delay **T1-1pole** can be set for single-pole trip than for three-pole trip by the feeder protection. In addition, you can use this setting (parameter **1p-RETRIP (T1)**) to define whether this repeated trip should be single-pole or three-pole.

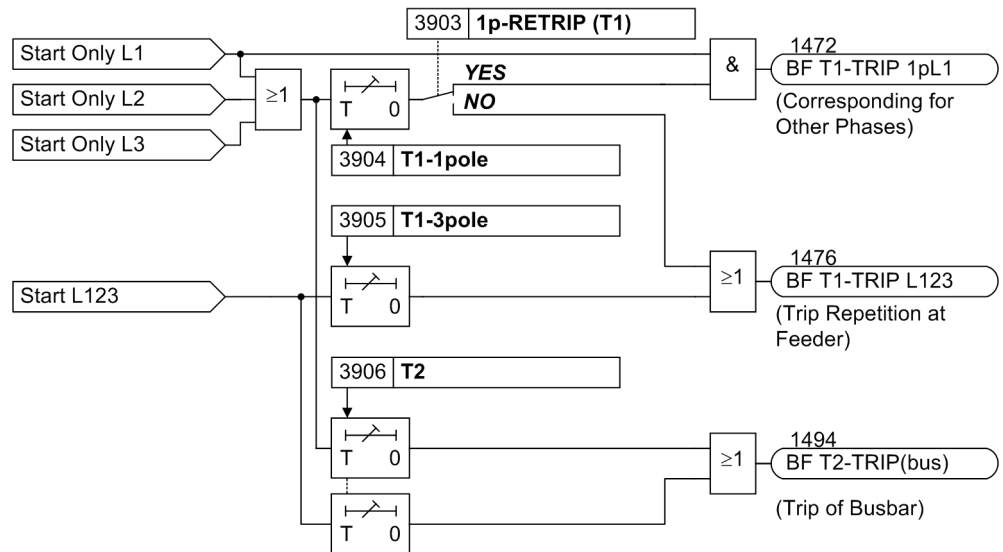


Figure 2-185 Two-stage breaker failure protection with phase segregated initiation

Circuit breaker not operational

There may be cases when it is already obvious that the circuit breaker associated with a feeder protection relay cannot clear a fault, e.g. when the tripping voltage or the tripping energy is not available.

In such a case it is not necessary to wait for the response of the feeder circuit breaker. If provision has been made for the detection of such a condition (e.g. control voltage monitor or air pressure monitor), the monitor alarm signal can be fed to the binary input „>CB faulty“ of the 7SD5. On occurrence of this alarm and a trip command by the feeder protection, a separate timer **T3-BkrDefective**, which is normally set to 0, is started (Figure 2-186). Thus, the adjacent circuit breakers (bus-bar) are tripped immediately in case the feeder circuit breaker is not operational.

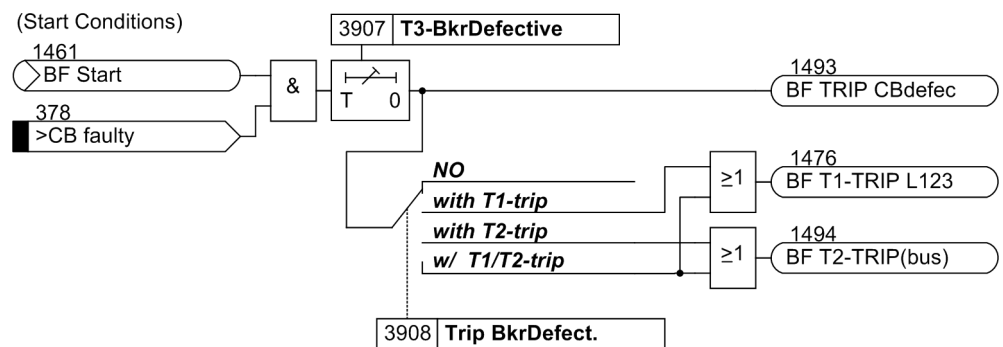


Figure 2-186 Circuit breaker not operational

Transfer trip to the remote end circuit breaker

The device has the facility to provide an additional intertrip signal to the circuit breaker at the remote line end in the event that the local feeder circuit breaker fails. This requires the transmission of the command.

In case of 7SD5 the corresponding command — usually the trip command which is intended to trip the adjacent breakers — is assigned to the input function for intertrip of the devices. This can be achieved by external wiring: The command output is connected to the binary input „>Intertrip 3p01“ (No. 3504) (see also Section 2.4).

An easier procedure is to combine the command output with the intertrip input via the user definable logic functions (CFC).

End fault protection An end fault is defined here as a short-circuit which has occurred at the end of a line or protected object, between the circuit breaker and the current transformer set.

Figure 2-187 shows the situation. The fault is located — as seen from the current transformer (= measurement location) — on the busbar side, it will thus not be regarded as a feeder fault by the feeder protection relay. It can only be detected by either a reverse stage of the feeder protection or by the busbar protection. However, a trip command given to the feeder circuit breaker does not clear the fault since the opposite end continues to feed the fault. Thus, the fault current does not stop flowing even though the feeder circuit breaker has properly responded to the trip command.

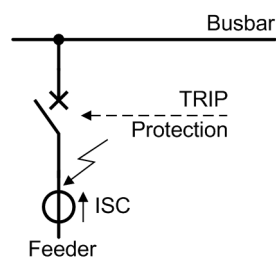


Figure 2-187 End fault between circuit breaker and current transformers

The end fault protection has the task to recognize this status and to transmit a trip signal to the remote end(s) of the protected object to clear the fault. For this purpose, the output command „BF EndF1t TRIP“ (No. 1495) is available to trigger the intertrip input of the differential protection — if applicable, together with other commands that need to be transferred. This can be achieved by external wiring or via CFC.

The end fault is recognized when the current continues flowing although the circuit breaker auxiliary contacts indicate that the breaker is open. An additional criterion is the presence of any breaker failure protection initiate signal. Figure 2-188 illustrates the functional principle. If the breaker failure protection is initiated and current flow is detected (current criteria „L*> current criterion“ according to Figure 2-176), but no circuit breaker pole is closed (auxiliary contact criterion „any pole closed“), then the timer **T-EndFault** is started. At the end of this time an intertrip signal is transmitted to the opposite end(s) of the protected object.

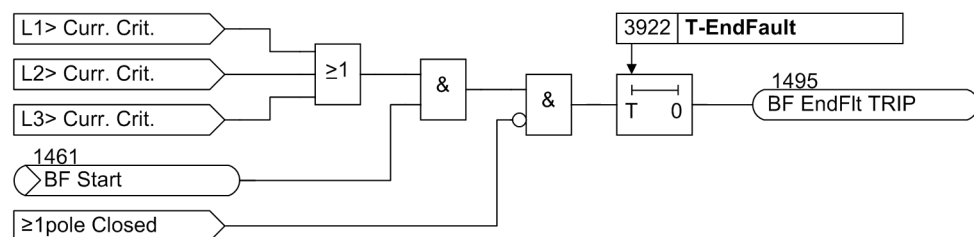


Figure 2-188 Operation scheme of end fault protection

Pole discrepancy supervision

The pole discrepancy supervision has the task to detect discrepancies in the position of the three circuit breaker poles. Under steady-state operating conditions, either all three poles of the breaker must be closed, or all three poles must be open. Discrep-

ancy is permitted only for a short time interval during a single-pole automatic reclose cycle.

The scheme functionality is shown in Figure 2-189. The signals which are processed here are the same as those used for the breaker failure protection. The pole discrepancy condition is established when at least one pole is closed („ \geq one pole closed“) and at the same time not all three poles are closed („ \geq one pole open“).

Additionally, the current criteria (from Figure 2-176) are processed. Pole discrepancy can only be detected when current is not flowing through all three poles, i.e. through only one or two poles. When current is flowing through all three poles, all three poles must be closed even if the breaker auxiliary contacts indicate a different status.

If pole discrepancy is detected, this is indicated by a fault detection signal. This signal identifies the pole which was open before the trip command of the pole discrepancy supervision occurred.

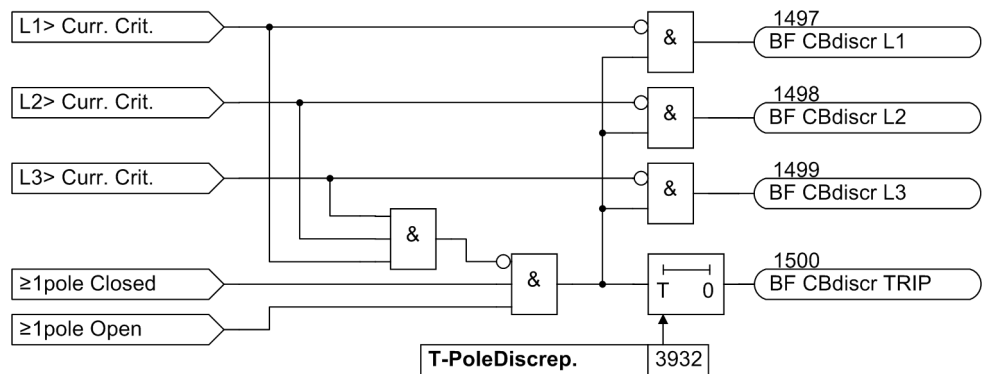


Figure 2-189 Function diagram of pole discrepancy supervision

2.21.2 Setting Notes

General

The circuit breaker failure protection and its ancillary functions (end fault protection, pole discrepancy supervision) can only operate if they were set during configuration of the scope of functions (address 139 **BREAKER FAILURE**, setting **Enabled** or **enabled w/ 3I0>**).

Breaker failure protection

The breaker failure protection is switched **ON** or **OFF** at address 3901 **FCT BreakerFail**.

The current threshold **I> BF** (address 3902) should be selected such that the protection will operate with the smallest expected short-circuit current. A setting of 10 % below the minimum fault current for which breaker failure protection must operate is recommended. On the other hand, the value should not be set lower than necessary.

If the breaker failure is configured with zero sequence current threshold (address 139 = **enabled w/ 3I0>**), the pickup threshold for the zero sequence current **3I0> BF** (address 3912) can be set independently of **I> BF**.

Normally, the breaker failure protection evaluates the current flow criterion as well as the position of the breaker auxiliary contact(s). If the auxiliary contact(s) status is not available in the device, this criterion cannot be processed. In this case, set address 3909 **Chk BRK CONTACT** to **NO**.

Two-stage breaker failure protection

With two-stage operation, the trip command is repeated after a time delay T1 to the local feeder breaker, normally to a different set of trip coils of this breaker. A choice can be made whether this trip repetition shall be single-pole or three-pole if the initial feeder protection trip was single-pole (provided that single-pole trip is possible). This choice is made in address 3903 **1p-RETRIP (T1)**. Set this parameter to **YES** if the first stage is to trip single-pole, otherwise set it to **NO**.

If the breaker does not respond to this trip repetition, the adjacent circuit breakers are tripped after T2, i.e. the circuit breakers of the busbar or of the concerned busbar section and, if necessary, also the circuit breaker at the remote end unless the fault has been cleared.

Separate delay times can be set

- for single- or three-pole trip repetition to the local feeder circuit breaker after a **1-pole** trip of the feeder protection **T1-1pole** at address 3904,
- for three-pole trip repetition to the local feeder circuit breaker after **3-pole** trip of the feeder protection **T1-3pole** (address 3905),
- for trip of the adjacent circuit breakers (busbar zone and remote end if applicable) **T2** at address 3906.



Note

If three-pole coupling is executed for a pending single-pole TRIP, the T2 delay is restarted with the three-pole coupling.

The delay times are set dependant on the maximum operating time of the feeder circuit breaker and the reset time of the current detectors of the breaker failure protection, plus a safety margin which allows for any tolerance of the delay timers. Figure 2-190 illustrates the timing of a typical breaker failure scenario. The dropout time for sinusoidal currents is ≤ 15 ms. If current transformer saturation is anticipated, the time should be set to 25 ms.



Note

If the breaker failure protection is to perform a single-pole TRIP repetition, the time set for the AR, address 3408 **T-Start MONITOR**, has to be longer than the time set for address 3903 **1p-RETRIP (T1)**.

To enable that the busbar is tripped by the breaker failure protection without preceding three-pole coupling of the trip command (by AR or BF), the time set for 3408 **T-Start MONITOR** also has to be longer than the time set for 3906 **T2**. In this case, the AR must be blocked by a signal from the BF to prevent the AR from reclosing after a busbar TRIP. It is recommended to connect the signal 1494 „BF T2 - TRIP (bus)“ to the AR input 2703 „>AR block“.

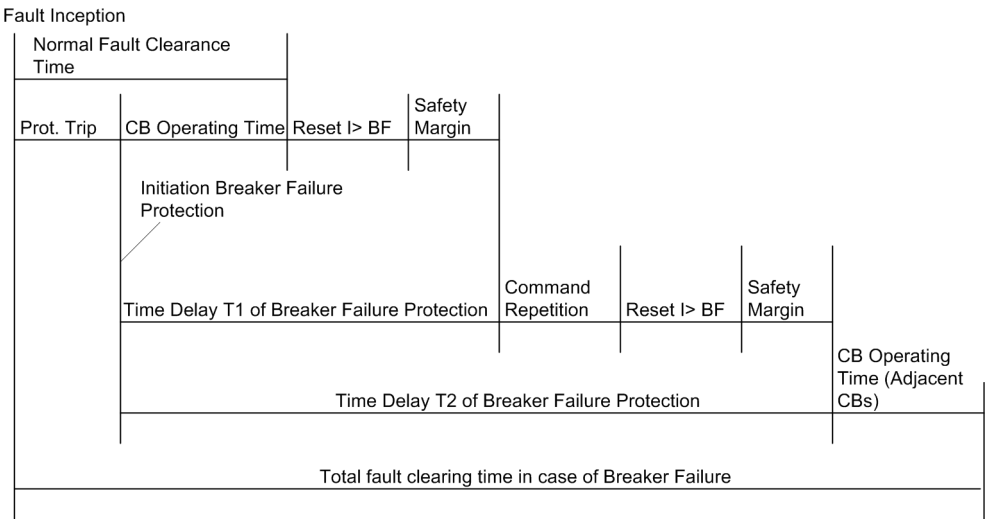


Figure 2-190 Time sequence example for normal clearance of a fault, and with circuit breaker failure, using two-stage breaker failure protection

**Single-stage
breaker failure
protection**

With single-stage operation, the adjacent circuit breakers (i.e. the breakers of the busbar zone and, if applicable, the breaker at the remote end) are tripped after a delay time **T2** (address 3906) following initiation, should the fault not have been cleared within this time.

The timers **T1-1pole** (address 3904) and **T1-3pole** (address 3905) are then set to ∞ since they are not needed.

But you may use the T1 timers for single-stage protection if you wish to utilise the facility of setting different delay times after single-pole trip and three-pole trip of the feeder protection. In this case set **T1-1pole** (address 3904) and **T1-3pole** (address 3905) separately, but address 3903 **1p-RETRIP (T1)** to **NO** to avoid a single-pole trip command to the busbar. Set **T2** (address 3906) to ∞ or equal to **T1-3pole** (address 3905). Be sure that the correct trip commands are assigned to the desired trip relay(s).

The delay time is determined from the maximum operating time of the feeder circuit breaker, the reset time of the current detectors of the breaker failure protection, plus a safety margin which allows for any tolerance of the delay timers. The time sequence is illustrated in Figure 2-191. The dropout time for sinusoidal currents is ≤ 15 ms. If current transformer saturation is anticipated, the time should be set to 25 ms.

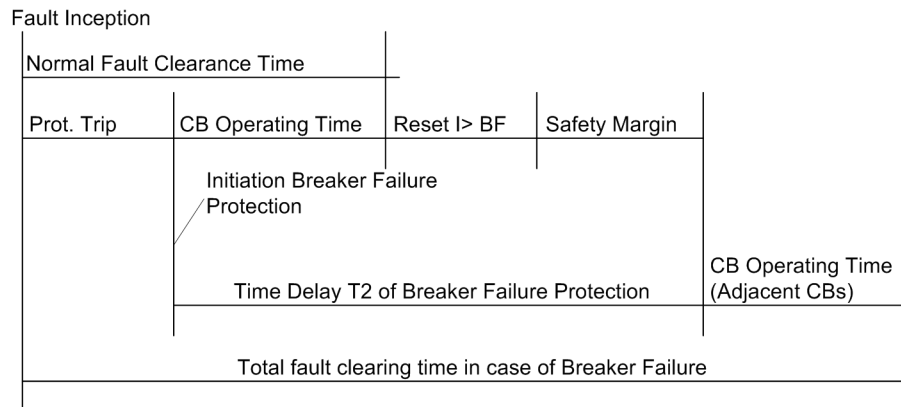


Figure 2-191 Time sequence example for normal clearance of a fault, and with circuit breaker failure, using single-stage breaker failure protection

Circuit breaker not operational

If the circuit breaker associated with the feeder is not operational (e.g. control voltage failure or air pressure failure), it is apparent that the local breaker cannot clear the fault. If the relay is informed about this disturbance (via the binary input „>CB faulty“), the adjacent circuit breakers (busbar and remote end if applicable) are tripped after the time **T3-BkrDefective** (address 3907) which is usually set to **0**.

Address 3908 **Trip BkrDefect** determines to which output the trip command is routed in the event that the breaker is not operational when a feeder protection trip occurs. Select that output which is used to trip the adjacent breakers (bus-bar trip).

End fault protection

The end fault protection can be switched separately **ON** or **OFF** in address 3921 **End Flt. stage**. An end fault is a short-circuit between the circuit breaker and the current transformer set of the feeder. The end fault protection presumes that the device is informed about the circuit breaker position via breaker auxiliary contacts connected to binary inputs.

If, during an end fault, the circuit breaker is tripped by a reverse stage of the feeder protection or by the busbar protection (the fault is a busbar fault as determined from the location of the current transformers), the fault current will continue to flow, because the fault is fed from the remote end of the feeder circuit.

The time **T-EndFault** (address 3922) is started when, during the time of pickup condition of the feeder protection, the circuit breaker auxiliary contacts indicate open poles and, at the same time, current flow is still detected (address 3902). The trip command of the end fault protection is intended for the transmission of an intertrip signal to the remote end circuit breaker.

Thus, the delay time must be set so that it can bridge out short transient apparent end fault conditions which may occur during switching of the breaker.

Pole discrepancy supervision

In address 3931 **PoleDiscrepancy** (pole discrepancy protection), the pole discrepancy supervision can be switched separately **ON** or **OFF**. It is only useful if the breaker poles can be operated individually. It avoids that only one or two poles of the local breaker are open continuously. It has to be provided that either the auxiliary contacts of each pole or the series connection of the NO auxiliary contacts and the series connection of the NC auxiliary contacts are connected to the device's binary inputs. If these conditions are not fulfilled, switch address 3931 **OFF**.

The delay time **T-PoleDiscrep** (address 3932) indicates how long a breaker pole discrepancy condition of the feeder circuit breaker, i.e. only one or two poles open,

may be present before the pole discrepancy supervision issues a three-pole trip command. This time must be clearly longer than the duration of a single-pole automatic reclose cycle. The time should be less than the permissible duration of an unbalanced load condition which is caused by the unsymmetrical position of the circuit breaker poles. Conventional values are 2 s to 5 s.

2.21.3 Settings

The table indicates region-specific presettings. Column C (configuration) indicates the corresponding secondary nominal current of the current transformer.

Addr.	Parameter	C	Setting Options	Default Setting	Comments
3901	FCT BreakerFail		ON OFF	ON	Breaker Failure Protection
3902	I> BF	1A	0.05 .. 20.00 A	0.10 A	Pick-up threshold I>
		5A	0.25 .. 100.00 A	0.50 A	
3903	1p-RETRIP (T1)		NO YES	YES	1pole retrip with stage T1 (local trip)
3904	T1-1pole		0.00 .. 30.00 sec; ∞	0.00 sec	T1, Delay after 1pole start (local trip)
3905	T1-3pole		0.00 .. 30.00 sec; ∞	0.00 sec	T1, Delay after 3pole start (local trip)
3906	T2		0.00 .. 30.00 sec; ∞	0.15 sec	T2, Delay of 2nd stage (busbar trip)
3907	T3-BkrDefective		0.00 .. 30.00 sec; ∞	0.00 sec	T3, Delay for start with defective bkr.
3908	Trip BkrDefect.		NO with T1-trip with T2-trip w/ T1/T2-trip	NO	Trip output selection with defective bkr
3909	Chk BRK CONTACT		NO YES	YES	Check Breaker contacts
3912	3I0> BF	1A	0.05 .. 20.00 A	0.10 A	Pick-up threshold 3I0>
		5A	0.25 .. 100.00 A	0.50 A	
3921	End Flt. stage		ON OFF	OFF	End fault protection
3922	T-EndFault		0.00 .. 30.00 sec; ∞	2.00 sec	Trip delay of end fault protection
3931	PoleDiscrepancy		ON OFF	OFF	Pole Discrepancy supervision
3932	T-PoleDiscrep.		0.00 .. 30.00 sec; ∞	2.00 sec	Trip delay with pole discrepancy

2.21.4 Information List

No.	Information	Type of Information	Comments
1401	>BF on	SP	>BF: Switch on breaker fail protection
1402	>BF off	SP	>BF: Switch off breaker fail protection
1403	>BLOCK BkrFail	SP	>BLOCK Breaker failure
1415	>BF Start 3pole	SP	>BF: External start 3pole
1432	>BF release	SP	>BF: External release
1435	>BF Start L1	SP	>BF: External start L1
1436	>BF Start L2	SP	>BF: External start L2
1437	>BF Start L3	SP	>BF: External start L3
1439	>BF Start w/o I	SP	>BF: External start 3pole (w/o current)
1440	BkrFailON/offBI	IntSP	Breaker failure prot. ON/OFF via BI
1451	BkrFail OFF	OUT	Breaker failure is switched OFF
1452	BkrFail BLOCK	OUT	Breaker failure is BLOCKED
1453	BkrFail ACTIVE	OUT	Breaker failure is ACTIVE
1461	BF Start	OUT	Breaker failure protection started
1472	BF T1-TRIP 1pL1	OUT	BF Trip T1 (local trip) - only phase L1
1473	BF T1-TRIP 1pL2	OUT	BF Trip T1 (local trip) - only phase L2
1474	BF T1-TRIP 1pL3	OUT	BF Trip T1 (local trip) - only phase L3
1476	BF T1-TRIP L123	OUT	BF Trip T1 (local trip) - 3pole
1493	BF TRIP CBdefec	OUT	BF Trip in case of defective CB
1494	BF T2-TRIP(bus)	OUT	BF Trip T2 (busbar trip)
1495	BF EndFlt TRIP	OUT	BF Trip End fault stage
1496	BF CBdiscrSTART	OUT	BF Pole discrepancy pickup
1497	BF CBdiscr L1	OUT	BF Pole discrepancy pickup L1
1498	BF CBdiscr L2	OUT	BF Pole discrepancy pickup L2
1499	BF CBdiscr L3	OUT	BF Pole discrepancy pickup L3
1500	BF CBdiscr TRIP	OUT	BF Pole discrepancy Trip

2.22 Thermal Overload Protection

The thermal overload protection prevents damage to the protected object caused by thermal overloading, particularly in case of transformers, rotating machines, power reactors and cables. It is in general not necessary for overhead lines, since no meaningful overtemperature can be calculated because of the great variations in the environmental conditions (temperature, wind). In this case, however, a current-dependent alarm stage can signal an imminent overload.

2.22.1 Method of Operation

The unit computes the overtemperature according to a thermal single-body model as per the following thermal differential equation

$$\frac{d\Theta}{dt} + \frac{1}{\tau_{th}} \cdot \Theta = \frac{1}{\tau_{th}} \cdot \left(\frac{I}{k \cdot I_N} \right)^2$$

with

- Θ – Current overtemperature in per cent of the final overtemperature at the maximum permissible phase current kI_N
- τ_{th} – Thermal time constant for the heating
- I – Present rms current
- k – k-factor indicating the maximum permissible constant current referred to the nominal current of the current transformers
- I_N – Rated current of the device

In steady-state operation the solution of this equation is an e-function whose asymptote represents the final overtemperature Θ_{End} . After reaching the first settable threshold of overtemperature Θ_{alarm} , which is below the final overtemperature, a warning indication is issued in order to allow e.g. a preventive load reduction. When the second overtemperature threshold, i.e. the final overtemperature (= tripping temperature), is reached, the protected object is disconnected from the network. It is also possible, however, to set the overload protection to **Alarm Only**. If this option is set, the device only outputs an indication even if the final temperature is reached.

The overtemperatures are calculated separately for each phase in a thermal replica from the square of the associated phase current. This guarantees a true RMS value measurement and also includes the effect of harmonic content. A choice can be made whether the maximum calculated overtemperature of the three phases, the average overtemperature, or the overtemperature calculated from the phase with maximum current should be decisive for evaluation of the thresholds.

The maximum permissible continuous thermal overload current I_{max} is described as a multiple of the nominal current I_N :

$$I_{max} = k \cdot I_N$$

In addition to the k-factor, the time constant τ_{th} as well as the alarm temperature Θ_{alarm} must be entered as settings of the protection.

In addition to the temperature warning stage, the overload protection also features a current warning element I_{alarm} . It reports an overload current prematurely, even if the calculated overtemperature has not yet attained the warning or tripping temperature levels.

The overload protection can be blocked via a binary input. In doing so, the thermal images are also reset to zero.

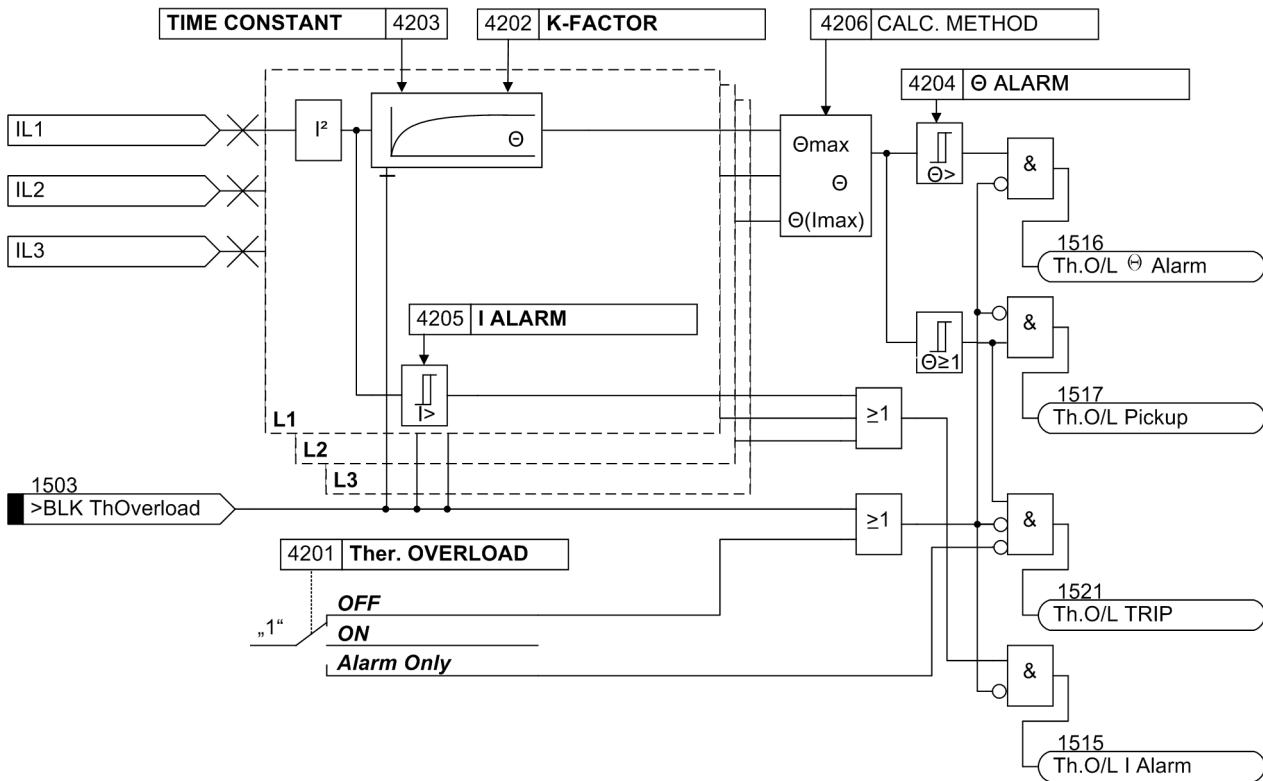


Figure 2-192 Logic diagram of the thermal overload protection

2.22.2 Setting Notes

General

A prerequisite for using the thermal overload protection is that during the configuration of the scope of functions at address 142 **Therm. Overload = Enabled** was applied. At address 4201 **Ther. OVERLOAD** the function can be turned **ON** or **OFF**. Furthermore, **Alarm Only** can be set. With the latter setting the protective function is active but only outputs the indication „Th.O/L Pickup“ (address 1517) when the tripping temperature is reached. The indication „Th.O/L TRIP“ (address 1521) is not generated.

k-factor

The nominal device current is taken as a basis for overload detection. The setting factor k is set under address 4202 **K-FACTOR**. It is determined by the relation between the permissible thermal continuous current and this nominal current:

$$k = \frac{I_{\max}}{I_N}$$

The permissible continuous current is at the same time the current at which the e-function of the overtemperature has its asymptote. It is not necessary to determine the tripping temperature since it results automatically from the final rise temperature at $k \cdot I_N$. Manufacturers of electrical machines usually state the permissible continuous current. If no data are available, k is set to 1.1 times the nominal current of the protected object. For cables, the permissible continuous current depends on the cross section, the in-

sulation material, the design and the way they are laid, and can be derived from the relevant tables.

Please note that the overload capability of electrical equipment relates to its primary current. This has to be considered if the primary current differs from the nominal current of the current transformers.

Example:

Belted cable 10 kV 150 mm²

Permissible continuous current $I_{\max} = 322 \text{ A}$

Current transformers 400 A / 5 A

$$k = \frac{322 \text{ A}}{400 \text{ A}} = 0.805$$

Setting value **K-FACTOR = 0.80**

Time constant τ

The thermal time constant τ_{th} is set at address 4203 **TIME CONSTANT**. This is also provided by the manufacturer. Please note that the time constant is set in minutes. Quite often other values for determining the time constant are stated which can be converted into the time constant as follows:

1-s current

$$\frac{\tau_{\text{th}}}{\text{min}} = \frac{1}{60} \cdot \left(\frac{\text{perm. 1-s current}}{\text{perm. contin.current}} \right)^2$$

Permissible current for application time other than 1 s, e.g. for 0.5 s

$$\frac{\tau_{\text{th}}}{\text{min}} = \frac{0.5}{60} \cdot \left(\frac{\text{perm. 0.5-s current}}{\text{perm. contin.current}} \right)^2$$

t_6 -time; this is the time in seconds for which a current of 6 times the nominal current of the protected object may flow

$$\frac{\tau_{\text{th}}}{\text{min}} = 0.6 \cdot t_6$$

Example:

Cable as above with

Permissible 1-s current 13.5 kA

$$\frac{\tau_{\text{th}}}{\text{min}} = \frac{1}{60} \cdot \left(\frac{13500 \text{ A}}{322 \text{ A}} \right)^2 = \frac{1}{60} \cdot 42^2 = 29.4$$

Setting value **TIME CONSTANT = 29.4 min**

Alarm levels

By setting a thermal alarm stage **ALARM** (address 4204) an alarm can be provided before the tripping temperature is reached, so that a trip can be avoided by preventive load reduction or by switching over. The percentage is referred to the tripping temperature rise.

The current overload alarm setpoint **I ALARM** (address 4205) is stated as a factor of the rated device current and should be set equal to or slightly below the permissible continuous current $k \cdot I_N$. It can also be used instead of the thermal alarm stage. In this case, the thermal alarm stage is set to 100 % and thus practically ineffective.

Calculating the overtemperature

The thermal replica is calculated individually for each phase. Address 4206 **CALC. METHOD** decides whether the highest of the three calculated temperatures (Θ_{max}) or their arithmetic average (**Average** Θ) or the temperature calculated from the phase with maximum current ($\Theta_{from I_{max}}$) should be decisive for the thermal alarm and tripping stage.

Since an overload usually occurs in a balanced way, this setting is of minor importance. If unbalanced overloads are to be expected, however, these options lead to different results.

Averaging should only be used if a rapid thermal equilibrium is possible in the protected object, e.g. with belted cables. If the three phases are, however, more or less thermally isolated (e.g. single conductor cables or overhead lines), one of the maximum settings should be chosen at any rate.

2.22.3 Settings

The table indicates region-specific presettings. Column C (configuration) indicates the corresponding secondary nominal current of the current transformer.

Addr.	Parameter	C	Setting Options	Default Setting	Comments
4201	Ther. OVERLOAD		OFF ON Alarm Only	OFF	Thermal overload protection
4202	K-FACTOR		0.10 .. 4.00	1.10	K-Factor
4203	TIME CONSTANT		1.0 .. 999.9 min	100.0 min	Time Constant
4204	Θ ALARM		50 .. 100 %	90 %	Thermal Alarm Stage
4205	I ALARM	1A	0.10 .. 4.00 A	1.00 A	Current Overload Alarm Setpoint
		5A	0.50 .. 20.00 A	5.00 A	
4206	CALC. METHOD		Θ_{max} Average Θ $\Theta_{from I_{max}}$	Θ_{max}	Method of Acquiring Temperature

2.22.4 Information List

No.	Information	Type of Information	Comments
1503	>BLK ThOverload	SP	>BLOCK Thermal Overload Protection
1511	Th.Overload OFF	OUT	Thermal Overload Protection OFF
1512	Th.Overload BLK	OUT	Thermal Overload Protection BLOCKED
1513	Th.O/L ACTIVE	OUT	Thermal Overload Protection ACTIVE
1515	Th.O/L I Alarm	OUT	Th. Overload: Current Alarm (I alarm)
1516	Th.O/L Θ Alarm	OUT	Th. Overload Alarm: Near Thermal Trip
1517	Th.O/L Pickup	OUT	Th. Overload Pickup before trip
1521	Th.O/L TRIP	OUT	Th. Overload TRIP command

2.23 Monitoring Functions

The device incorporates extensive monitoring functions of both the device hardware and software; the measured values are also continually checked to ensure their plausibility; the current and voltage transformer secondary circuits are thereby substantially covered by the monitoring function. It is also possible to implement trip circuit monitoring, using appropriate binary inputs as available.

2.23.1 Measurement Supervision

2.23.1.1 Hardware Monitoring

The device is monitored from the measuring inputs up to the command relays. Monitoring circuits and the processor check the hardware for faults and inadmissible states.

Auxiliary and Reference Voltages

The processor voltage is monitored by the hardware as the processor cannot operate if the voltage drops below the minimum value. In that case, the device is not operational. On recovery of the voltage the processor system is restarted.

If the supply voltage is removed or switched off, the device is taken out of service, and an indication is immediately generated by a normally closed contact. Brief voltage interruptions of up to 50 ms do not disturb the operational readiness of the device (see for the Technical Data).

The processor monitors the reference voltage of the ADC (analog-to-digital converter). The protection is suspended if the voltages deviate outside an allowable range, and persistent deviations are reported.

Back-up Battery

The buffer battery, which ensures the operation of the internal clock and the storage of counters and indications if the auxiliary voltage fails, is periodically checked for charge status. On its undershooting a minimum admissible voltage, the indication „Fail Battery“ (no. 177) is issued.

If the device is not supplied with auxiliary voltage for more than 1 or 2 days, the internal clock is switched off automatically, i.e. the time is not registered any more. The data in the event and fault buffers, however, remain stored.

Memory Components

The main memory (RAM) is tested when the system starts up. If a fault is detected during this process, the startup is aborted. Error LED and LED 1 light up and the remaining LEDs start flashing simultaneously. During operation the memory is checked by means of its checksum.

A checksum of the program memory (EPROM) is cyclically generated and compared with the stored program checksum.

A checksum for the parameter memory (FLASH-EPROM) is cyclically generated and compared with the checksum which is computed after each change of the stored parameters.

If a malfunction occurs, the processor system is restarted.

Sampling frequency

The sampling frequency and the synchronism between the ADC's (analog-to-digital converters) is continuously monitored. If deviations cannot be corrected by another synchronisation, the device blocks itself and the red „Blocked“ LED lights up; The Device OK relay drops off and signals the malfunction by its „life contact“.

Measurement value acquisition - currents

There are four measurement inputs in the current paths. If the three phase currents and the earth current from the current transformer starpoint or a separated earth current transformer of the line to be protected are connected to the device, their digitised sum must be zero. A fault in the current circuit is detected when

$$I_F = |I_{L1}| + |I_{L2}| + |I_{L3}| + k_I \cdot |I_E| > \Sigma I \text{ THRESHOLD} \cdot I_N + \Sigma I \text{ FACTOR} \cdot \Sigma |I|$$

Factor k_I (address 221 **I4/Iph CT**) takes into account a possible different ratio of a separate I_E transformer (e.g. cable core balance current transformer). **ΣI THRESHOLD** and **ΣI FACTOR** are setting parameters.

The component **ΣI FACTOR $\Sigma |I|$** takes into account permissible current proportional ratio errors of the input transformers which are particularly prevalent during large fault currents (Figure 2-193). $\Sigma |I|$ is the sum of all currents:

$$\Sigma |I| = |I_{L1}| + |I_{L2}| + |I_{L3}| + |k_I \cdot I_E|$$

As soon as the current summation supervision detects a fault in the current transformer circuits, the differential protection is blocked. This supervision is signalled as „Failure Σi “ (No. 289). In order to avoid a blocking due to transformation errors (saturation) in case of high fault currents, this monitoring function is not effective during a system fault.

**Note**

Current summation supervision can operate properly only when the ground current of the protected line is fed to the fourth current measuring input (I_4) of the relay. The I_4 transformer must have been configured with parameter **I4 transformer** (address 220) as **In prot. line**. Also, the fourth current measuring input must have the same rating of a the phase input I_4 transformer. With a sensitive input transformer type, current summation supervision is not activated.

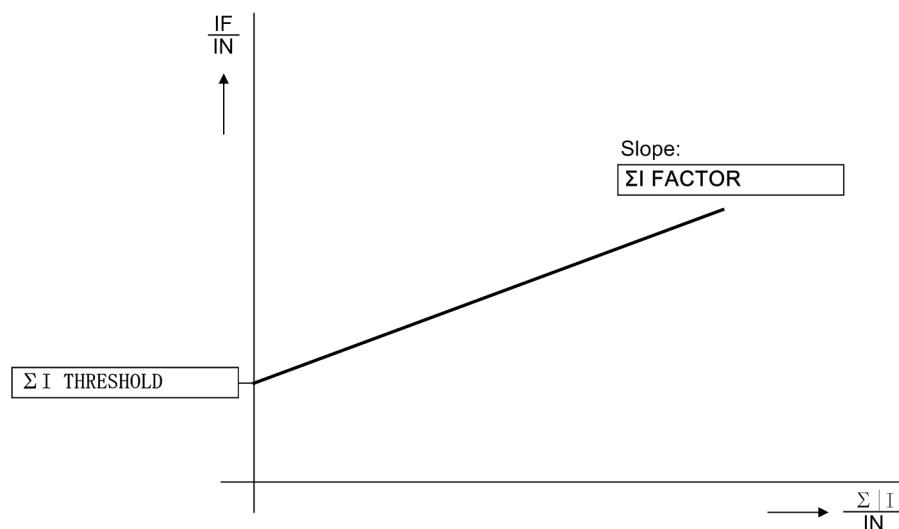


Figure 2-193 Current sum monitoring

Measured value acquisition voltages

Four measuring inputs are available in the voltage circuit: three for phase-to-earth voltages and one input for the displacement voltage (e-n voltage of open delta winding) or a busbar voltage. If the displacement voltage is connected to the device, the sum of the three digitized phase voltages must equal three times the zero sequence voltage. A fault in the voltage transformer circuits is detected when

$$U_F = |\underline{U}_{L1} + \underline{U}_{L2} + \underline{U}_{L3} + k_U \cdot \underline{U}_{EN}| > 25 \text{ V.}$$

The factor k_U allows for a difference of the transformation ratio between the displacement voltage input and the phase voltage inputs (address 211 **Uph** / **Udelta**).

This malfunction is signalled as „Fail Σ U Ph-E“ (no. 165).

**Note**

Voltage sum monitoring is only effective if an external displacement voltage is connected to the displacement voltage measuring input.

Voltage sum monitoring can operate properly only if the adaptation factor **Uph** / **Udelta** at address 211 has been correctly configured (see Subsection 2.1.2.1).

2.23.1.2 Software Monitoring**Watchdog**

For continuous monitoring of the program sequences, a time monitor is provided in the hardware (watchdog for hardware) that expires upon failure of the processor or an internal program, and causes a reset of the processor system with complete restart.

An additional software watchdog ensures that malfunctions during the processing of programs are discovered. This also initiates a restart of the processor system.

If a fault is not removed by the restart of the processors, a new restart is attempted. If the fault is still present after three restart attempts within 30 s, the protection system will take itself out of service, and the red LED „Blocked“ lights up. The Device OK relay drops off and signals the malfunction by its „life contact“.

2.23.1.3 Measurement Circuit Monitoring

Interruptions or short-circuits in the secondary circuits of the current and voltage transformers, as well as faults in the connections (important for commissioning!), are detected and reported by the device. To this end, the measured values are cyclically checked in the background as long as no fault detection is present.

Current Symmetry

In healthy network operation it can be expected that the currents will be approximately balanced. The monitoring of the measured values in the device checks this balance. The smallest phase current is compared with the largest. Non-symmetry is detected when

$$|I_{\min}| / |I_{\max}| < \text{BAL. FACTOR I} \text{ as long as } I_{\max} / I_N > \text{BALANCE I LIMIT} / I_N$$

I_{\max} is the highest, I_{\min} the lowest of the three phase currents. The symmetry factor **BAL. FACTOR I** (address 2905) represents the allowable asymmetry of the phase currents while the limit value **BALANCE I LIMIT** (address 2904) is the lower limit of the operating range of this monitoring (see Figure 2-194). The dropout ratio is about 97%.

After a settable time (5-100 s) this malfunction is signaled as „Fail I balance“ (no. 163).

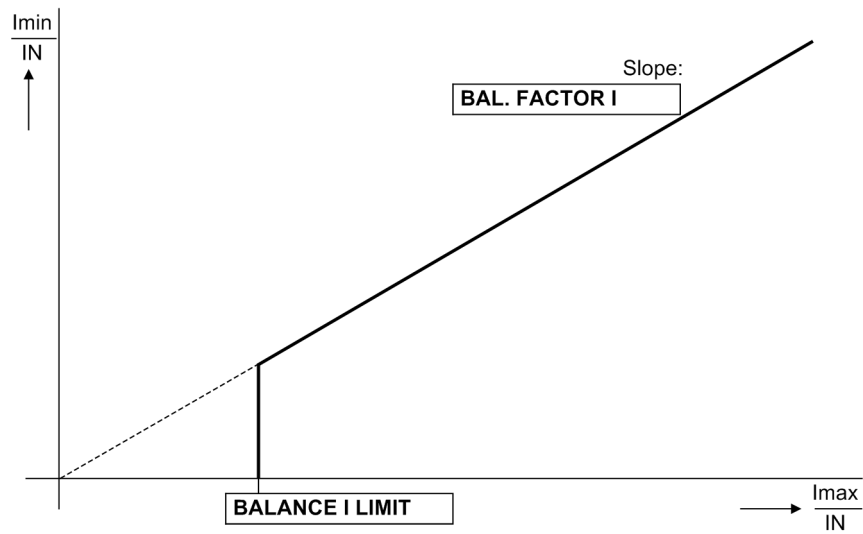


Figure 2-194 Current symmetry monitoring

Voltage Symmetry

In healthy network operation it can be expected that the voltages are nearly balanced. The monitoring of the measured values in the device checks this balance. The smallest phase voltage is compared to the largest. Non-symmetry is detected when

$$|U_{\min}| / |U_{\max}| < \text{BAL. FACTOR U} \text{ as long as } |U_{\max}| > \text{BALANCE U-LIMIT}$$

U_{\max} is the largest of the three phase-to-phase voltages and U_{\min} the smallest. The symmetry factor **BAL. FACTOR U** (address 2903) represents the allowable asymmetry of the voltages while the limit value **BALANCE U-LIMIT** (address 2902) is the lower limit of the operating range of this monitoring (see Figure 2-195). The dropout ratio is about 97%.

After a settable time, this malfunction is signaled as „Fail U balance“ (no. 167).

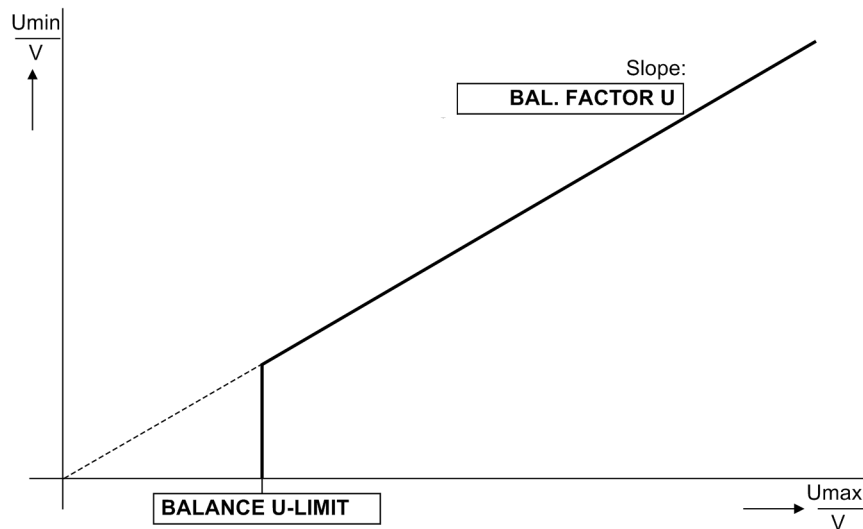


Figure 2-195 Voltage symmetry monitoring

Broken Wire Monitoring

During steady-state operation the broken wire monitoring registers interruptions in the secondary circuit of the current transformers. In addition to the hazardous potential caused by high voltages in the secondary circuit, this kind of interruptions simulates differential currents to the differential protection, such as those evoked by faults in the protected object.

The broken wire monitor scans the local currents of all three phases, as well as the differential and stabilization current values of the differential protection transferred from the devices to the other ends of the protected object. With these values, the device decides whether there is a broken wire or a network process.

The local wire break detection generates a „Suspected wire-break“ information for a phase when the current abruptly drops to zero during operation. This information continues to be used if currents and voltage (if connected) in the local device and the currents in the other devices do not change

In the local device, the „Wire break ILx“ (no. 290, 291, 292) message is generated and the differential protection is blocked. By transmitting the „Suspected wire-break“ information to the other devices, the differential protection is blocked also in these devices and the „Wire-break at the other end ILx“ (no. 297, 298, 299) message is generated.

If the communication between the devices is disturbed, the device operates in emergency operation. The differential protection is not active. The wire break detection then operates only with the locally available information. Multipole wire break is not indicated in emergency operation.

The blocking is cancelled as soon as the device is again supplied with current in the relevant phase. It is also suppressed when a high fault current is registered by any device at another end of the protected object.

It has to be observed that electronic test devices do not simulate the correct behaviour of broken wire so that pickup may occur.



Note

Broken wire monitoring can operate properly only when the fourth current input (I_4) of the relay is fed the residual current from a separate current transformer of the protected line, or no residual current at all.

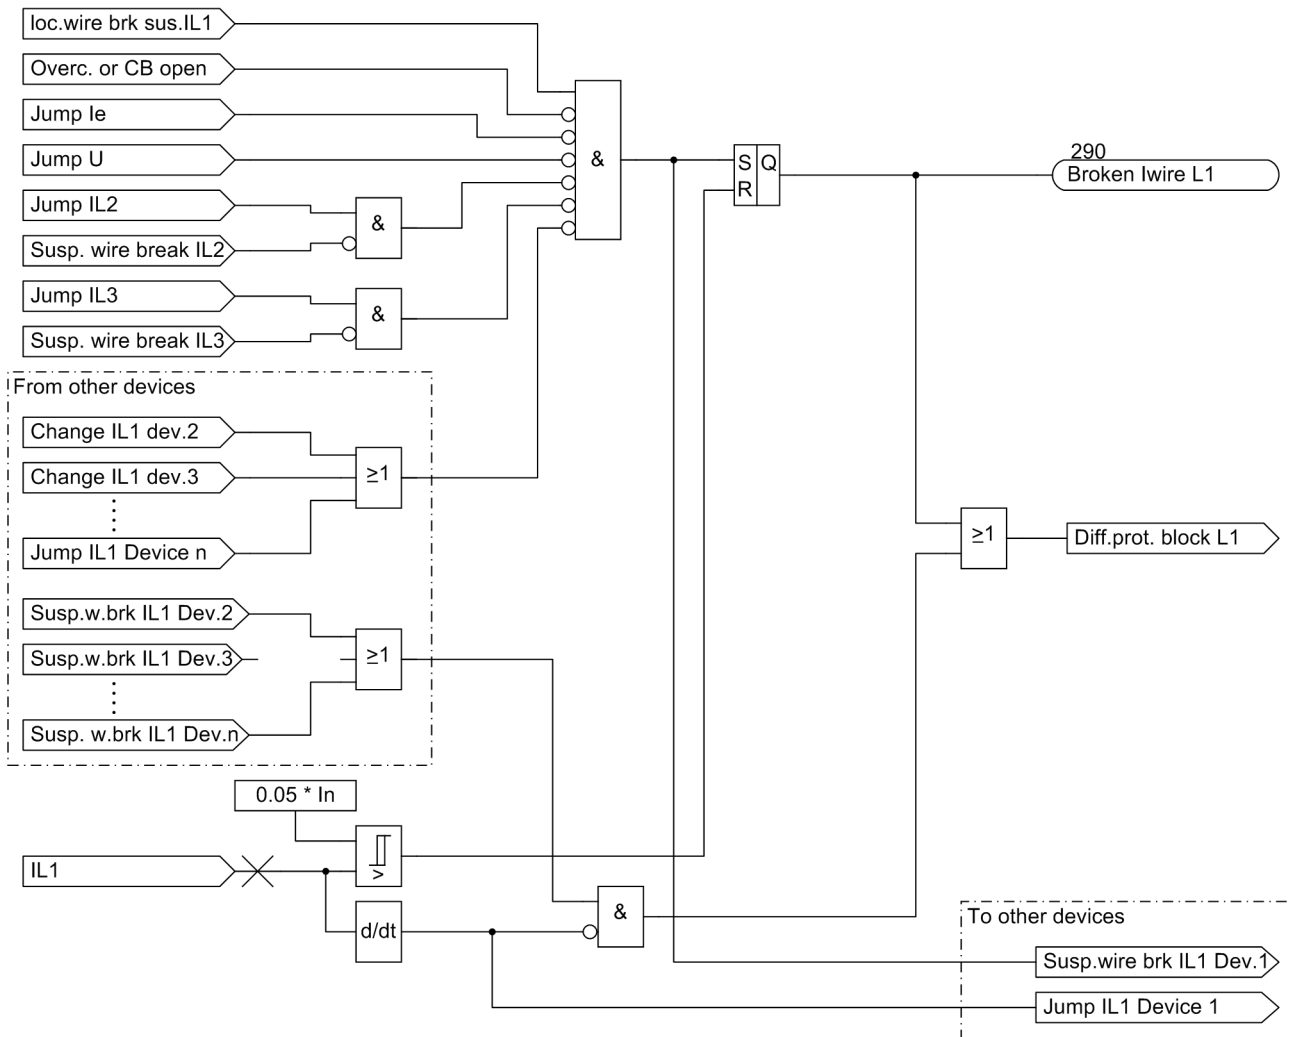


Figure 2-196 Broken-wire monitoring

Voltage Phase Sequence

Verification of the faulted phases, phase preference, direction measurement and polarisation with quadrature voltages usually require clockwise rotation of the measured values. The phase rotation of the measured voltages is checked by monitoring the voltage phase sequence

$$\underline{U}_{L1} \text{ before } \underline{U}_{L2} \text{ before } \underline{U}_{L3}$$

This check takes place if each measured voltage has a minimum magnitude of

$$|\underline{U}_{L1}|, |\underline{U}_{L2}|, |\underline{U}_{L3}| > 40 \text{ V}/\sqrt{3}$$

. In case of negative phase rotation, the indication „Fail Ph. Seq.“ (No. 171) is issued.

Asymmetrical Measuring Voltage Failure "Fuse Failure Monitor".

In the event of a measured voltage failure due to a short circuit fault or a broken conductor in the voltage transformer secondary circuit certain measuring loops may mistakenly see a voltage of zero. Simultaneously existing load currents may then cause a spurious pickup.

If fuses are used instead of a secondary miniature circuit breaker (VT mcb) with connected auxiliary contacts, then the („Fuse Failure Monitor“) can detect problems in the

voltage transformer secondary circuit. Of course, the miniature circuit breaker and the „Fuse Failure Monitor“ can be used at the same time.

The asymmetrical measured voltage failure is characterized by its voltage asymmetry with simultaneous current symmetry. Figure 2-197 shows the logic diagram of the „Fuse Failure Monitor“ during asymmetrical failure of the measured voltage.

If there is substantial voltage asymmetry of the measured values, without asymmetry of the currents being registered at the same time, this indicates the presence of an asymmetrical failure in the voltage transformer secondary circuit.

The asymmetry of the voltage is detected by the fact that either the zero sequence voltage or the negative sequence voltage exceed a settable value **FFM U>(min)**. The current is assumed to be sufficiently symmetrical if both the zero sequence as well as the negative sequence current are below the settable threshold **FFM I<(max)**.

In non-earthed systems, the zero-sequence system quantities are no reliable criterion since a considerable zero sequence voltage occurs also in case of a simple earth fault where a significant zero sequence current does not necessarily flow. Therefore, the zero sequence voltage is not evaluated in these systems but only the negative sequence voltage (address 207 **SystemStarpoint**).

As soon as this is detected, the distance protection and all functions that operate on the basis of undervoltage (e.g. also weak infeed tripping) are blocked. The „VT FuseFail“ (No. 170) message is output. The immediate blocking requires that current flows in at least one of the phases. The distance protection can be switched to differential protection and/or O/C emergency operation, provided that these functions are parameterized accordingly (refer also to Sections 2.3 and 2.15).

The immediate blocking must not occur as long as one phase is without voltage due to single-pole dead time condition as the asymmetry of the measured values arising in this state is due to the switching state of the line and not due to a failure in the secondary circuit. Accordingly, the immediate blocking is disabled when the line is tripped single-pole (internal information „1 pole open“ in the logic diagram).

If a zero sequence or negative sequence current is detected within approximately 10 s after recognition of this criterion, the protection assumes a short-circuit and removes the blocking by the „fuse failure monitor“ for the duration of the fault. If on the other hand the voltage failure criterion is present for longer than approx. 10 s, the blocking is permanently activated (latching of the voltage criterion after 10 s). Only 10 s after the voltage criterion has been removed by correction of the secondary circuit failure, will the blocking automatically reset, thereby releasing the blocked protection functions again.

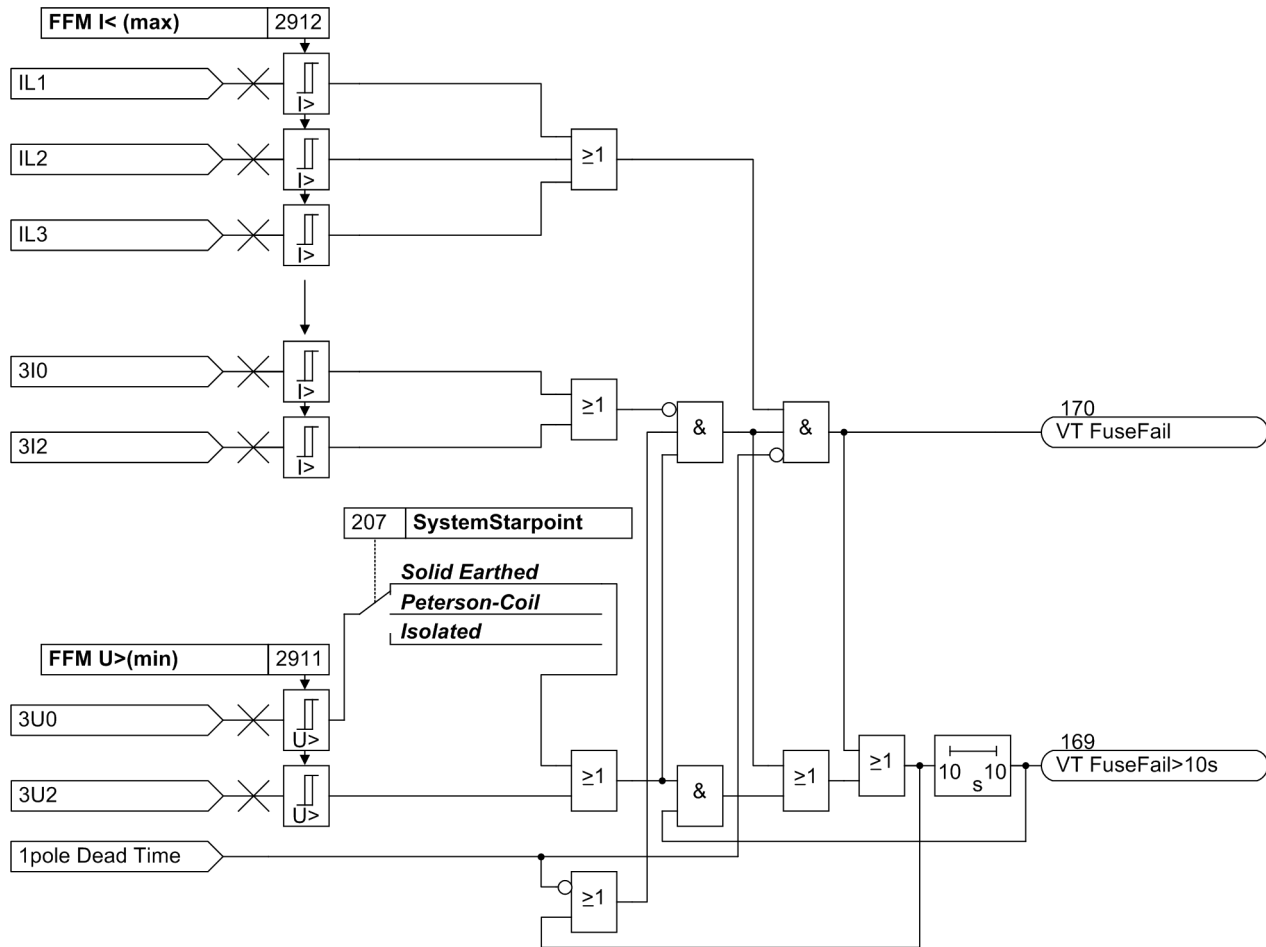


Figure 2-197 Logic diagram of the fuse failure monitor with zero and negative sequence system

Three-Phase Measuring Voltage Failure "Fuse Failure Monitor"

A three-phase failure of the secondary measured voltages can be distinguished from an actual system fault by the fact that the currents have no significant change in the event of a failure in the secondary measured voltage. For this reason, the current values are routed to a buffer so that the difference between present and stored current values can be analysed to recognise the magnitude of the current differential (current differential criterion). A three-pole measuring voltage failure is detected when

- All three phase-to-earth voltages are smaller than the threshold **FFM U<max (3ph)**,
- the current differential in all three phases is smaller than a threshold value **FFM Idelta (3p)** and
- all three phase current amplitudes are larger than the minimum current **Iph>** for the impedance measurement of the distance protection.

If no stored current values are present (yet), the current magnitude criterion is resorted to. Figure 2-198 shows the logic diagram of the 3-phase measured voltage failure monitoring. A three-pole measuring voltage failure is detected when

- All three phase-to-earth voltages are smaller than the threshold **FFM U<max (3ph)**,
- All three phase current amplitudes are smaller than the minimum current **Iph>** for impedance measurement by the distance protection, and
- All three phase current amplitudes are greater than a fixed set noise threshold (40 mA).



- All three phase-to-earth voltages are smaller than **FEM** U_{max} (3ph).

This time **T V-Supervision** is required to prevent that a voltage failure is detected before the protection picks up.

If a failure is detected by these criteria, the indication „Fail U absent“ (No. 168) is output, and the device switches to emergency operation (see Section 2.15).

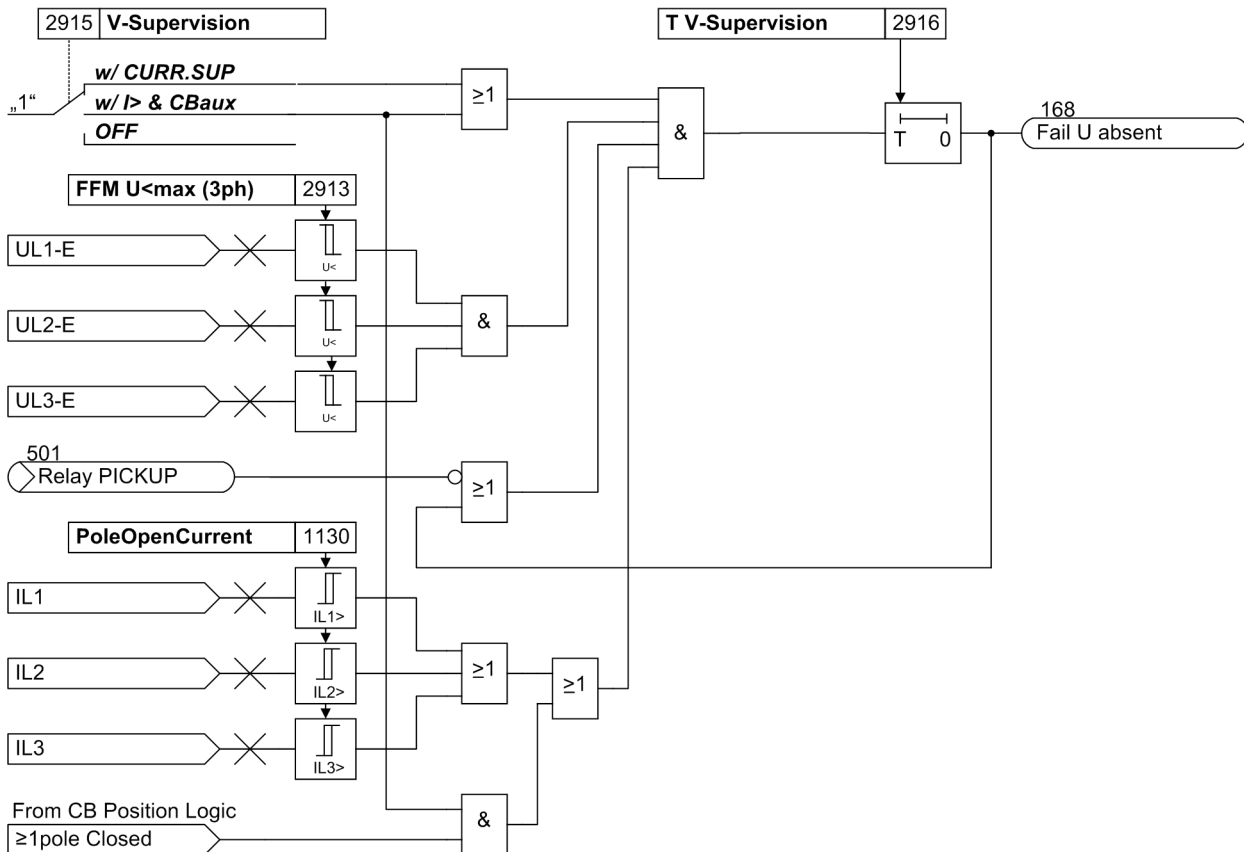


Figure 2-199 Logic diagram of the additional measured voltage failure monitoring

2.23.1.4 Monitoring the Phase Angle of the Positive Sequence Power

This monitoring function allows to determine the direction of power flow. You can monitor the phase angle of the complex power, and generate an indication when the power phasor is inside a settable segment.

One example of this application is the indication of capacitive reactive power. The monitoring indication can then be used to control the overvoltage protection function. For this purpose, two angles must be set, as shown in Figure 2-200. In this example, $\varphi A = 200^\circ$ and $\varphi B = 340^\circ$ has been set.

If the measured phase angle $\varphi(S_1)$ of the positive sequence power is within the area of the P-Q plane delimited by the angles φA and φB , the indication „ φ (PQ Pos. Seq.)“ (No. 130) is output. The angles φA and φB can be freely set in the range between 0° and 359° . The area starts at φA and extends in a mathematically positive sense as far as the angle φB . A hysteresis of 2° is provided to prevent erroneous indications which might emerge at the threshold limits.

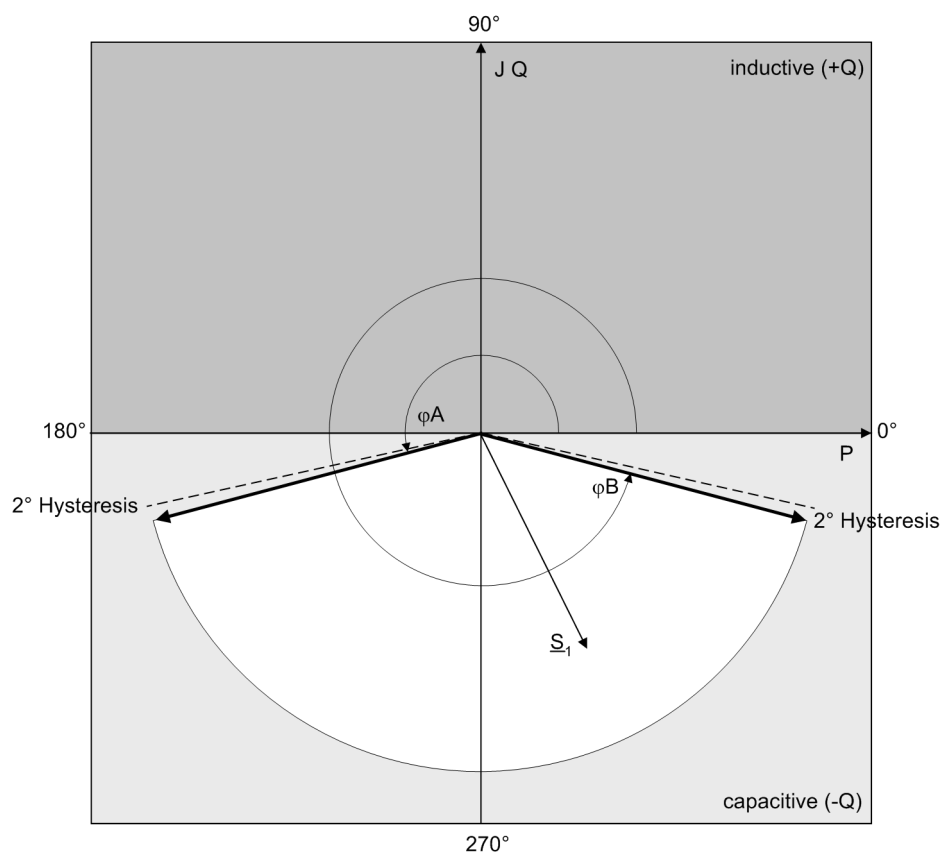


Figure 2-200 Characteristic of the Positive Sequence System Phase Angle Monitoring

The monitoring function can also be used for the display of negative active power. In this case the areas must be defined as shown in Figure 2-201.

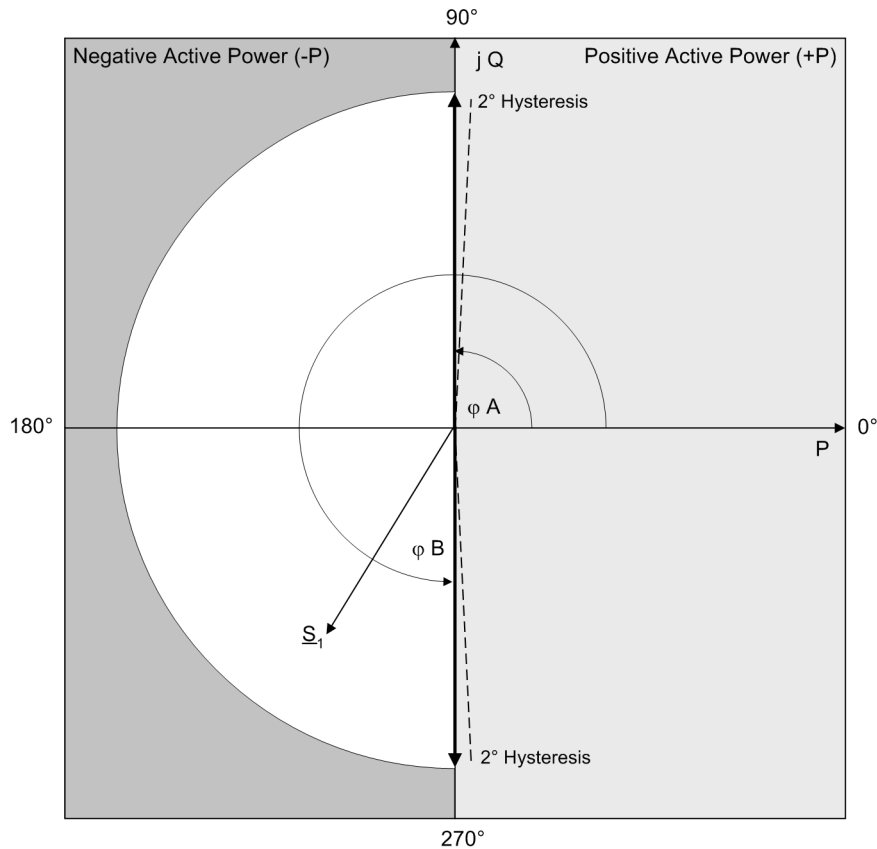


Figure 2-201 Phase Angle Monitoring for Negative Active Power

The two angles must be at least 3° apart; if this is not the case, monitoring is blocked and the indication „ φ Set wrong“ (No. 132) is output.

The following conditions must be fulfilled for measurement to be enabled:

- The positive sequence current I_1 is higher than the value set in parameter 2943 **I1>**.
- The positive sequence voltage U_1 is higher than the value set in parameter 2944 **U1>**.
- The angles set in address 2941 φA and 2942 φB must be at least 3° apart. Incorrect parameter settings cause the indication 132 „ φ Set wrong“ to be output.
- The „Fuse-Failure-Monitor“ and the measured voltage failure monitoring must not have responded, and binary input indication 361 „>FAIL:Feeder VT“ must not be present.

If monitoring is not active, this fact is signaled by the indication „ φ (PQ Pos) block“ (No. 131).

Figure 2-202 shows the logic of the positive sequence system phase angle monitoring.

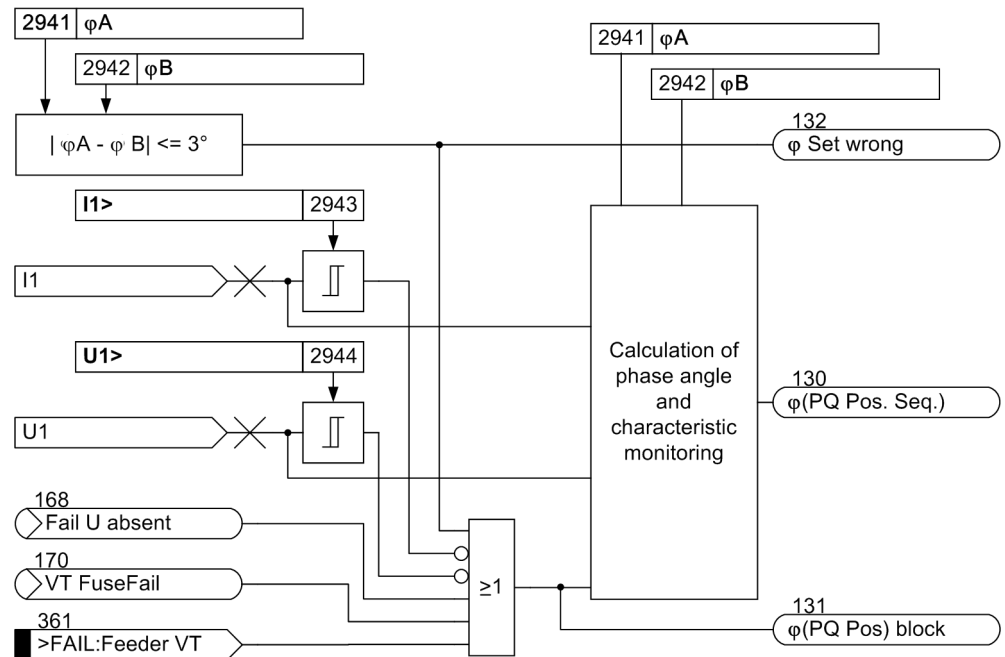


Figure 2-202 Logic of the Positive Sequence System Phase Angle Monitoring

2.23.1.5 Fault Reactions

Depending which kind of self supervision function is picked up, an alarm is given, the processor is restarted or the device is taken out of operation. If the fault is still present after three restart attempts, the device will take itself out of service and indicate this condition by dropout of the "Device OK" relay, thus indicating device failure. The red LED „ERROR" on the device front lights up, provided the auxiliary voltage is available, and the green LED „RUN" goes off. If the internal auxiliary voltage supply fails, all LEDs are dark. Table 2-17 shows a summary of the monitoring functions and the malfunction responses of the relay.

Table 2-17 Summary of self supervision functions and the responses of the device

Monitoring	Possible causes	Response to faulty condition	Indication (No.)	Device
Loss of aux. voltage loss	External (aux. voltage) internal (converter)	Device out of operation alarm, if possible	All LEDs dark „Error 5V“ (144)	DOK ²⁾ drops out
Measured value acquisition	Internal (converter or reference voltage)	Protection out of operation, alarm	LED „ERROR“ „Error A/D-conv.“ (181)	DOK ²⁾ drops out
Buffer battery	Internal (battery)	Indication	„Fail Battery“ (177)	As allocated
Hardware watchdog	Internal (processor failure)	Device not in operation	LED „ERROR“	DOK ²⁾ drops out
Software watchdog	Internal (program execution)	Restart attempt ¹⁾	LED „ERROR“	DOK ²⁾ drops out
Main memory	Internal (battery)	Restart attempt ¹⁾ , Restart abort Device not in operation	LED flashes	DOK ²⁾ drops out
Program memory	Internal (EPROM)	Restart attempt ¹⁾	LED „ERROR“	DOK ²⁾ drops out
Settings memory	internal (Flash-EPROM or RAM)	Restart attempt ¹⁾	LED „ERROR“	DOK ²⁾ drops out
Sampling frequency	Internal (clock generator)	Restart attempt ¹⁾	LED „ERROR“	DOK ²⁾ drops out
1 A/5 A setting	Jumper wrong 1/5 A	Indications: Protection out of operation	„Error1A/5Awrong“ (192), „Error A/D-conv.“ (181) LED „ERROR“	DOK ²⁾ drops out
Adjustment values	Internal (EEPROM or RAM)	Indication: Using default values	„Alarm adjustm.“ (193)	As allocated
Earth current transformer sensitive/insensitivity	I/O-BG does not comply with the order number (MLFB) of the device	Indications: Protection out of operation	„Error neutralCT“ (194), „Error A/D-conv.“ (181) LED „ERROR“	DOK ²⁾ drops out
Modules	Module does not comply with order number (MLFB)	Indications: Protection out of operation	„Error Board BG1...7“ (183 ... 189) and if applicable „Error A/D-conv.“ (181)	DOK ²⁾ drops out
Current sum	Internal (measured value acquisition)	Indication Total blocking of the differential protection	„Failure Σi “ (289)	As allocated
Current balance	External (power system or current transformer)	Indication	„Fail I balance“ (163)	As allocated
Broken wire	External (power system or current transformer)	Indication Phase-selective blocking of the differential protection	„Broken Iwire L1“ (290), „Broken Iwire L2“ (291), „Broken Iwire L3“ (292)	As allocated
Voltage sum	Internal (measured value acquisition)	Indication	„Fail $\Sigma U Ph-E$ “ (165)	As allocated
Voltage symmetry	External (power system or voltage transformer)	Indication	„Fail U balance“ (167)	As allocated
Voltage phase sequence	External (power system or connection)	Indication	„Fail Ph. Seq.“ (171)	As allocated

Monitoring	Possible causes	Response to faulty condition	Indication (No.)	Device
Voltage failure, 3-phase „Fuse Failure Monitor“	External (power system or connection)	Indication Distance protection is blocked, Undervoltage protection is blocked, Weak-infeed tripping is blocked, Frequency protection is blocked, and Direction determination of the earth fault protection is blocked	„VT FuseFail>10s“ (169), „VT FuseFail“ (170)	As allocated
Voltage failure, single and two-phase „Fuse-Failure-Monitor“	External (voltage transformers)	Indication Distance protection is blocked, Undervoltage protection is blocked, Weak-infeed tripping is blocked, Frequency protection is blocked, and Direction determination of the earth fault protection is blocked	„VT FuseFail>10s“ (169), „VT FuseFail“ (170)	As allocated
Voltage failure, 3-phase	External (power system or connection)	Indication Distance protection is blocked, Undervoltage protection is blocked, Weak-infeed tripping is blocked, Frequency protection is blocked, and Direction determination of the earth fault protection is blocked	„Fail U absent“ (168)	As allocated
Trip circuit supervision	External (trip circuit or control voltage)	Indication	„FAIL: Trip cir.“ (6865)	As allocated

1) After three unsuccessful restarts, the device is taken out of service.

2) DOK = „Device OK“ = Break contact of the readiness relay = Life contact

2.23.1.6 Setting Notes

General

The sensitivity of the measured value monitoring can be changed. Experiential values set ex works are adequate in most cases. If particularly high operational asymmetries of the currents and/or voltages are expected, or if one or more monitoring functions pick up sporadically during normal operation, the sensitivity setting(s) should be reduced.

The measurement supervision can be switched **ON** or **OFF** in address 2901 **MEASURE. SUPERV.**

Current balance supervision

Address 2902 **BALANCE U-LIMIT** determines the limit voltage (phase-to-phase), above which the voltage symmetry monitoring is effective. Address 2903 **BAL. FACTOR U** is the associated balance factor, i.e. the gradient of the balance characteristic. The indication „Fail U balance“ (no. 167) can be delayed at address 2908 **T BAL. U LIMIT**. These settings can only be changed using DIGSI at **Additional Settings**.

Address 2904 **BALANCE I LIMIT** determines the limit current above which the current symmetry monitoring is effective. Address 2905 **BAL. FACTOR I** is the associated balance factor, i.e. the gradient of the balance characteristic. The indication „Fail I balance“ (no. 163) can be delayed at address 2909 **T BAL. I LIMIT**. These settings can only be changed using DIGSI at **Additional Settings**.

Summated current supervision

Address 2906 **ΣI THRESHOLD** determines the limit current above which the current sum monitoring is activated (absolute portion, only relative to I_N). The relative portion (relative to the maximum phase current) for activating the current sum monitoring is set at address 2907 **ΣI FACTOR**. These settings can only be changed using DIGSI at **Additional Settings**.



Note

Current summation supervision can operate properly only when the ground current of the protected line is fed to the fourth current measuring input (I_4) of the relay. The I_4 transformer must have been configured with parameter **I4 transformer** (address 220) as **In prot. line**. Also, the fourth current measuring input must have the ratings of a normal I_4 transformer. With a sensitive transformer type, current summation supervision is not activated.

Asymmetrical measuring voltage failure "Fuse Failure Monitor"

The settings of the „Fuse Failure Monitor“ for asymmetrical measured voltage failure must be selected so that on the one hand reliable pickup of the monitoring is ensured in the case of loss of a phase voltage (address 2911 **FFM U>(min)**), while on the other hand a pickup due to earth faults in an earthed system is avoided. In accordance with this requirement, address 2912 **FFM I< (max)** must be set sufficiently sensitive (below the smallest fault current due to earth faults). These settings can only be changed using DIGSI at **Additional Settings**.

In address 2910 **FUSE FAIL MON.**, the „Fuse Failure Monitor“, e.g. during asymmetrical testing, can be switched **OFF**.

Three-phase measuring voltage failure "Fuse Failure Monitor"

In address 2913 **FFM U<max (3ph)** the minimum voltage threshold is set. If the measured voltage drops below this threshold and a simultaneous current jump which exceeds the limits according to address 2914 **FFM Idelta (3p)** is not detected while all three phase currents are greater than the minimum current required for the impedance measurement by the distance protection according to address 1502 **Minimum Iph>**, a three-phase measured voltage failure is recognized. These settings can only be changed via DIGSI at **Display Additional Settings**.

In address 2910 **FUSE FAIL MON.**, the „Fuse Failure Monitor“, e.g. during asymmetrical testing, can be switched **OFF**.

Measured voltage failure monitoring

In address 2915 **V-Supervision**, the measured voltage supervision can be switched to w/ **CURR. SUP**, w/ **I> & CBaux** or **OFF**. Address 2916 **T V-**

Supervision is used to set the waiting time of the voltage failure supervision. This setting can only be changed in DIGSI at **Display Additional Settings**.

Circuit Breaker for Voltage Transformers

If a circuit breaker for voltage transformers (VT mcb) is installed in the secondary circuit of the voltage transformers, the status is sent, via binary input, to the device informing it about the position of the VT mcb. If a short-circuit in the secondary side initiates the tripping of the VT mcb, the distance protection function has to be blocked immediately, since otherwise it would be spuriously tripped due to the lacking measured voltage during a load current. The blocking must be faster than the first stage of the distance protection. This requires an extremely short response time of the VT mcb (≤ 4 ms at 50 Hz nominal frequency). If this cannot be ensured, the reaction time is to be set in address 2921 **T mcb**; this, however, will delay the response of the protection function.

2.23.1.7 Settings

Addresses which have an appended "A" can only be changed with DIGSI, under Additional Settings.

The table indicates region-specific presettings. Column C (configuration) indicates the corresponding secondary nominal current of the current transformer.

Addr.	Parameter	C	Setting Options	Default Setting	Comments
2901	MEASURE. SUPERV		ON OFF	ON	Measurement Supervision
2902A	BALANCE U-LIMIT		10 .. 100 V	50 V	Voltage Threshold for Balance Monitoring
2903A	BAL. FACTOR U		0.58 .. 0.95	0.75	Balance Factor for Voltage Monitor
2904A	BALANCE I LIMIT	1A	0.10 .. 1.00 A	0.50 A	Current Balance Monitor
		5A	0.50 .. 5.00 A	2.50 A	
2905A	BAL. FACTOR I		0.10 .. 0.95	0.50	Balance Factor for Current Monitor
2906A	Σ I THRESHOLD	1A	0.10 .. 2.00 A	0.25 A	Summated Current Monitoring Threshold
		5A	0.50 .. 10.00 A	1.25 A	
2907A	Σ I FACTOR		0.00 .. 0.95	0.50	Summated Current Monitoring Factor
2908A	T BAL. U LIMIT		5 .. 100 sec	5 sec	T Balance Factor for Voltage Monitor
2909A	T BAL. I LIMIT		5 .. 100 sec	5 sec	T Current Balance Monitor
2910	FUSE FAIL MON.		ON OFF	ON	Fuse Failure Monitor
2911A	FFM U>(min)		10 .. 100 V	30 V	Minimum Voltage Threshold U>
2912A	FFM I<(max)	1A	0.10 .. 1.00 A	0.10 A	Maximum Current Threshold I<
		5A	0.50 .. 5.00 A	0.50 A	
2913A	FFM U<max (3ph)		2 .. 100 V	5 V	Maximum Voltage Threshold U< (3phase)

Addr.	Parameter	C	Setting Options	Default Setting	Comments
2914A	FFM Idelta (3p)	1A	0.05 .. 1.00 A	0.10 A	Delta Current Threshold (3phase)
		5A	0.25 .. 5.00 A	0.50 A	
2915	V-Supervision		w/ CURR.SUP w/ I> & CBaux OFF	w/ CURR.SUP	Voltage Failure Supervision
2916A	T V-Supervision		0.00 .. 30.00 sec	3.00 sec	Delay Voltage Failure Supervision
2921	T mcb		0 .. 30 ms	0 ms	VT mcb operating time
2931	BROKEN WIRE		ON OFF	OFF	Fast broken current-wire supervision
2933	FAST Σi SUPERV		ON OFF	ON	State of fast current summation supervis
2941	φA		0 .. 359 °	200 °	Limit setting PhiA
2942	φB		0 .. 359 °	340 °	Limit setting PhiB
2943	I1>	1A	0.05 .. 2.00 A	0.05 A	Minimum value I1>
		5A	0.25 .. 10.00 A	0.25 A	
2944	U1>		2 .. 70 V	20 V	Minimum value U1>

2.23.1.8 Information List

No.	Information	Type of Information	Comments
130	φ (PQ Pos. Seq.)	OUT	Load angle Phi(PQ Positive sequence)
131	φ (PQ Pos) block	OUT	Load angle Phi(PQ) blocked
132	φ Set wrong	OUT	Setting error: $ \text{PhiA} - \text{PhiB} < 3^\circ$
161	Fail I Superv.	OUT	Failure: General Current Supervision
163	Fail I balance	OUT	Failure: Current Balance
164	Fail U Superv.	OUT	Failure: General Voltage Supervision
165	Fail ΣU Ph-E	OUT	Failure: Voltage summation Phase-Earth
167	Fail U balance	OUT	Failure: Voltage Balance
168	Fail U absent	OUT	Failure: Voltage absent
169	VT FuseFail>10s	OUT	VT Fuse Failure (alarm >10s)
170	VT FuseFail	OUT	VT Fuse Failure (alarm instantaneous)
171	Fail Ph. Seq.	OUT	Failure: Phase Sequence
196	Fuse Fail M.OFF	OUT	Fuse Fail Monitor is switched OFF
197	MeasSup OFF	OUT	Measurement Supervision is switched OFF
289	Failure Σi	OUT	Alarm: Current summation supervision
290	Broken lwire L1	OUT	Alarm: Broken current-wire detected L1
291	Broken lwire L2	OUT	Alarm: Broken current-wire detected L2
292	Broken lwire L3	OUT	Alarm: Broken current-wire detected L3
295	Broken wire OFF	OUT	Broken wire supervision is switched OFF
296	Σi superv. OFF	OUT	Current summation superv is switched OFF
297	ext.Brk.Wire L1	OUT	Broken current-wire at other end L1

No.	Information	Type of Information	Comments
298	ext.Brk.Wire L2	OUT	Broken current-wire at other end L2
299	ext.Brk.Wire L3	OUT	Broken current-wire at other end L3

2.23.2 Trip Circuit Supervision

The line protection 7SD5 is equipped with an integrated trip circuit monitoring. Depending on the number of binary inputs with isolated control inputs that are still available, a choice can be made between monitoring with one or with two binary inputs. If the routing of the binary inputs required for this does not comply with the selected monitoring mode, an alarm is given („TripC1 ProgFAIL ...“, with identification of the non-compliant circuit). When using two binary inputs, malfunctions in the trip circuit can be detected under all circuit breaker conditions. When only one binary input is used, malfunctions in the circuit breaker itself cannot be detected. If single-pole tripping is possible, a separate trip circuit monitoring can be implemented for each circuit breaker pole provided that the required binary inputs are available.

2.23.2.1 Functional Description

Supervision with Two Binary Inputs

When using two binary inputs, these are connected according to Figure 2-203 parallel to the associated trip contact on one side, and parallel to the circuit breaker auxiliary contacts on the other.

A precondition for the use of the trip circuit monitoring is that the control voltage for the circuit breaker is higher than the total of the minimum voltages drops at the two binary inputs ($U_{Ctrl} > 2 \cdot U_{Bmin}$). Since at least 19 V are needed for each binary input, the monitoring function can only be used with a system control voltage of over 38 V.

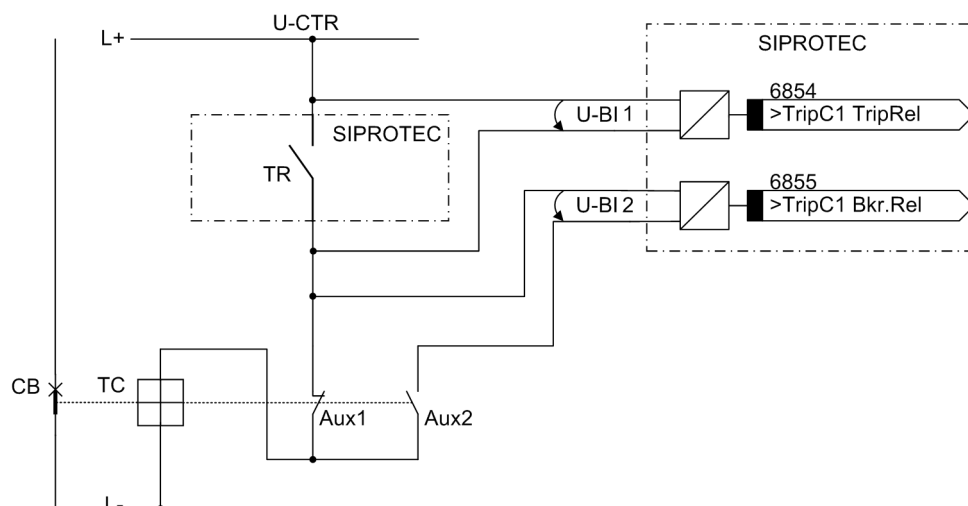


Figure 2-203 Principle of the trip circuit supervision with two binary inputs

TR	Trip relay contact
CB	Circuit breaker
TC	Circuit breaker trip coil
Aux1	Circuit breaker auxiliary contact (NC contact)
Aux2	Circuit breaker auxiliary contact (NO contact)
U-CTR	Control voltage (trip voltage)
U-BI1	Input voltage of 1st binary input
U-BI2	Input voltage of 2nd binary input

Monitoring with two binary inputs not only detects interruptions in the trip circuit and loss of control voltage, it also supervises the response of the circuit breaker using the position of the circuit breaker auxiliary contacts.

Depending on the conditions of the trip contact and the circuit breaker, the binary inputs are activated (logical condition „H“ in the following table), or short-circuited (logical condition „L“).

A state in which both binary inputs are not activated („L“) is only possible in intact trip circuits for a short transition period (trip relay contact closed but circuit breaker not yet open).

A continuous state of this condition is only possible when the trip circuit has been interrupted, a short-circuit exists in the trip circuit, a loss of battery voltage occurs, or malfunctions occur with the circuit breaker mechanism. Therefore, it is used as monitoring criterion.

Table 2-18 Condition table for binary inputs, depending on RTC and CB position

No	Trip Contact	Circuit Breaker	Aux 1	Aux 2	BI 1	BI 2	Dynamic State	Static State
1	Open	ON	Closed	Open	H	L	Normal operation with circuit breaker closed	
2	Open	OFF	Open	Closed	H	H	Normal operation with circuit breaker open	

No.	Trip Contact	Circuit Breaker	Aux 1	Aux 2	BI 1	BI 2	Dynamic State	Static State
3	Closed	ON	Closed	Open	L	L	Transition or malfunction	Malfunction
4	Closed	OFF	Open	Closed	L	H	TR has tripped successfully	

The conditions of the two binary inputs are checked periodically. A query takes place about every 500 ms. If three consecutive conditional checks detect an abnormality, a fault indication is output (see Figure 2-204). The repeated measurements determine the delay of the alarm message and avoid that an alarm is output during short transition periods. After clearance of the failure in the trip circuit, the failure alarm automatically resets with the same time delay.

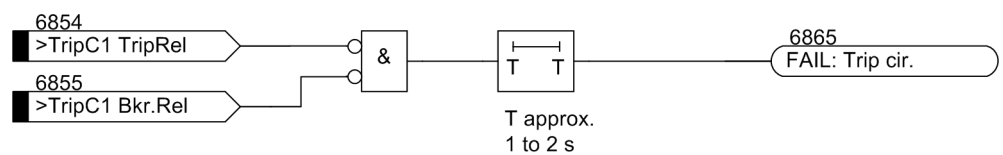


Figure 2-204 Logic diagram of the trip circuit monitoring with two binary inputs

Supervision with One Binary Input

According to Figure 2-205, the binary input is connected in parallel to the respective command relay contact of the protection device. The circuit breaker auxiliary contact is bridged with a high-resistance equivalent resistor R.

The control voltage for the circuit breaker should be at least twice as high as the minimum voltage drop at the binary input ($U_{Ctrl} > 2 \cdot U_{BImin}$). Since at least 19 V are needed for the binary input, the monitor can be used with a system control voltage of over 38 V.

A calculation example for the equivalent resistor R is shown in the configuration notes in Section „Mounting and Connections“, margin heading „Trip Circuit Supervision“.

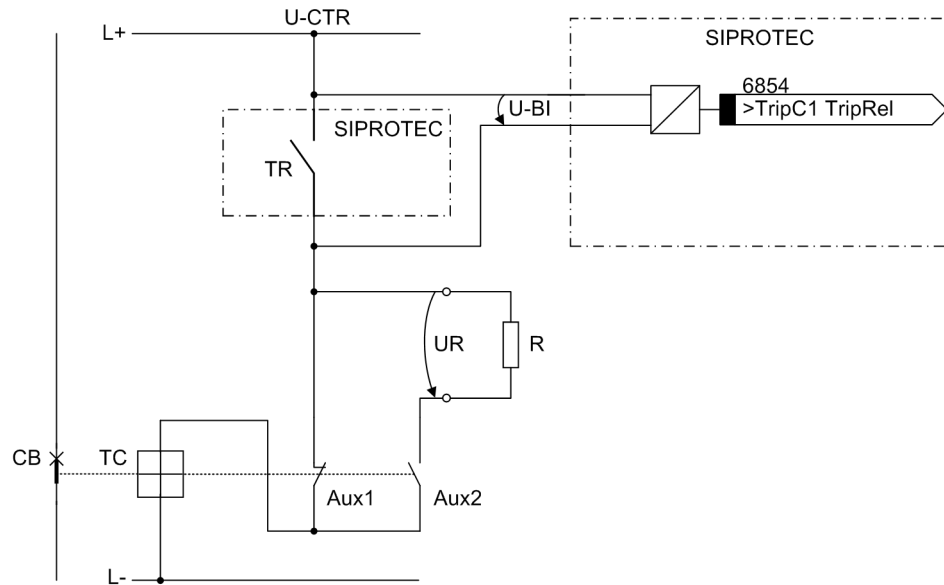


Figure 2-205 Principle of the trip circuit supervision with one binary input

TR	Trip relay contact
CB	Circuit breaker
TC	Circuit breaker trip coil
Aux1	Circuit breaker auxiliary contact (NC contact)
Aux2	Circuit breaker auxiliary contact (NO contact)
U-CTR	Control voltage for trip circuit
U-BI	Input voltage of binary input
R	Equivalent resistor
UR	Voltage across the equivalent resistor

During normal operation, the binary input is activated (logical condition „H“) when the trip contact is open and the trip circuit is intact, because the supervision circuit is closed either by the circuit breaker auxiliary contact (if the circuit breaker is closed) or through the equivalent resistor R. Only as long as the trip contact is closed, the binary input is short-circuited and thereby deactivated (logical condition „L“).

If the binary input is permanently deactivated during operation, an interruption in the trip circuit or a failure of the (trip) control voltage can be assumed.

The trip circuit monitoring does not operate during system faults. A momentary closed tripping contact does not lead to a fault indication. If, however, other trip relay contacts from different devices are connected in parallel in the trip circuit, the fault indication must be delayed by **Alarm Delay** (see also Figure 2-206). After clearance of the failure in the trip circuit, the fault message automatically resets with the same time delay.

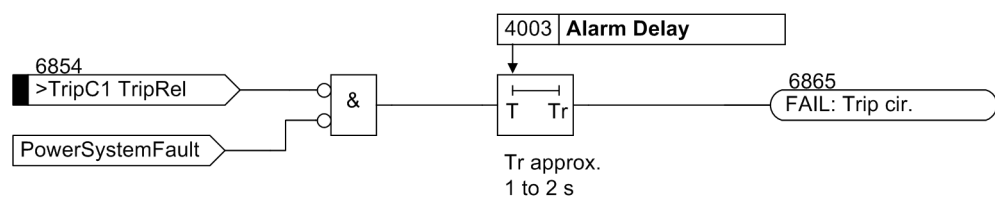


Figure 2-206 Logic diagram for trip circuit supervision with one binary input

2.23.2.2 Setting Notes

General

The number of circuits to be supervised was set during the configuration in address 140 **Trip Cir. Sup.** (Section 2.1.1.3). If the trip circuit supervision is not used at all, the setting **Disabled** must be applied there.

The trip circuit supervision can be switched **ON** or **OFF** in address 4001 **FCT TripSuperv..** The number of binary inputs that shall be used in each of the supervised circuits is set in address 4002 **No. of BI**. If the routing of the binary inputs required for this does not comply with the selected supervision mode, an alarm is given („TripC1 ProgFAIL ...“, with identification of the non-compliant circuit).

Monitoring with one binary input

The alarm for supervision with two binary inputs is always delayed by approx. 1 s to 2 s, whereas the delay time of the alarm for supervision with one binary input can be set in address 4003 **Alarm Delay**. 1 s to 2 s are sufficient if only the 7SD5 device is connected to the trip circuits as the trip circuit supervision does not operate during a system fault. If, however, trip contacts from other devices are connected in parallel in the trip circuit, the alarm must be delayed such that the longest trip command duration can be reliably bridged.

2.23.2.3 Settings

Addr.	Parameter	Setting Options	Default Setting	Comments
4001	FCT TripSuperv.	ON OFF	OFF	TRIP Circuit Supervision is
4002	No. of BI	1 .. 2	2	Number of Binary Inputs per trip circuit
4003	Alarm Delay	1 .. 30 sec	2 sec	Delay Time for alarm

2.23.2.4 Information List

No.	Information	Type of Information	Comments
6854	>TripC1 TripRel	SP	>Trip circuit superv. 1: Trip Relay
6855	>TripC1 Bkr.Rel	SP	>Trip circuit superv. 1: Breaker Relay
6856	>TripC2 TripRel	SP	>Trip circuit superv. 2: Trip Relay
6857	>TripC2 Bkr.Rel	SP	>Trip circuit superv. 2: Breaker Relay
6858	>TripC3 TripRel	SP	>Trip circuit superv. 3: Trip Relay
6859	>TripC3 Bkr.Rel	SP	>Trip circuit superv. 3: Breaker Relay
6861	TripC OFF	OUT	Trip circuit supervision OFF
6865	FAIL: Trip cir.	OUT	Failure Trip Circuit
6866	TripC1 ProgFAIL	OUT	TripC1 blocked: Binary input is not set
6867	TripC2 ProgFAIL	OUT	TripC2 blocked: Binary input is not set
6868	TripC3 ProgFAIL	OUT	TripC3 blocked: Binary input is not set

2.24 Function Control and Circuit Breaker Test

2.24.1 Function Control

The function control is the control centre of the device. It coordinates the sequence of the protection and ancillary functions, processes their decisions and the information coming from the power system.

Applications

- Line energization recognition,
- Processing of the circuit breaker position,
- Open Pole Detector,
- Fault detection logic,
- Tripping logic.

2.24.1.1 Line energisation recognition

During energization of the protected object, several measures may be required or desirable. Following a manual closure onto a short-circuit, immediate trip of the circuit breaker is usually desired. This is done, e.g. in the overcurrent protection, by bypassing the delay time of specific stages. For every short-circuit protection function which can be delayed, at least one stage can be selected that will operate instantaneously in the event of a closing, as mentioned in the relevant sections. Also see Section 2.1.4.1 at margin heading „Circuit breaker status“.

The manual closing command must be indicated to the device via a binary input. In order to be independent of the duration that the switch is closed, the command is set to a defined length in the device (adjustable with the address 1150 **SI Time Man.C1**). This setting can only be changed using DIGSI at **Additional Settings**. Figure 2-207 shows the logic diagram.

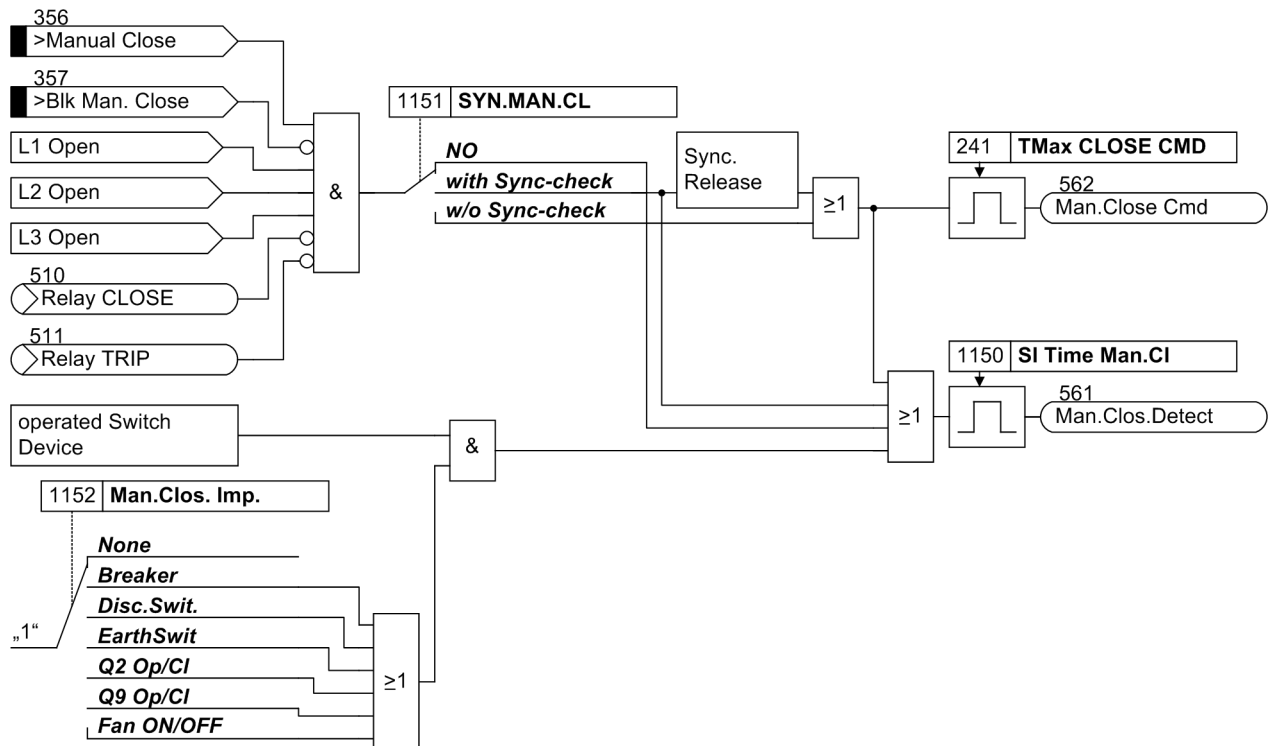


Figure 2-207 Logic diagram of the manual closing procedure

Reclosure via the integrated control functions - on-site control, control via DIGSI, control via serial interface - can have the same effect as manual reclosure, see parameter 1152 Chapter 2.1.4.1 at margin heading „Circuit Breaker Status“.

If the device has an integrated automatic reclosure, the integrated manual closure logic of the 7SD5 automatically distinguishes between an external control command via the binary input and an automatic reclosure by the internal automatic reclosure so that the binary input „>Manual Close“ can be connected directly to the control circuit of the close coil of the circuit breaker (Figure 2-208). Each reclosure that is not initiated by the internal automatic reclosure function is interpreted as a manual reclosure, even it has been initiated by a control command from the device.

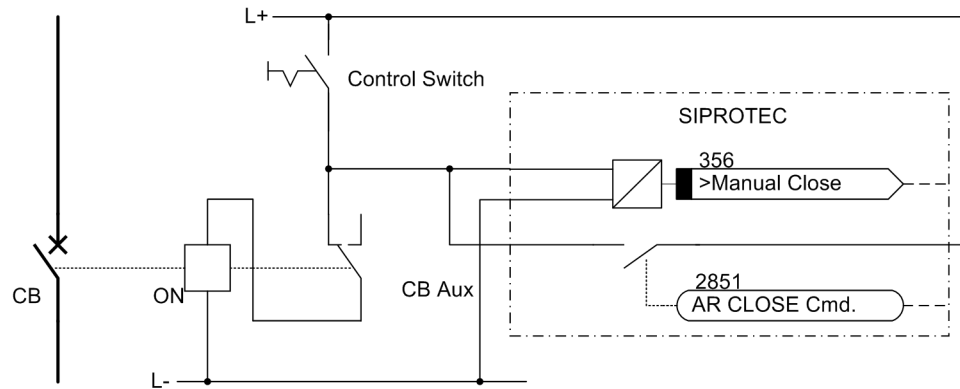


Figure 2-208 Manual closure with internal automatic reclosure

CB	Circuit breaker
ON	Circuit breaker close coil
CBaux	Circuit breaker auxiliary contact

If, however, external close commands which should not activate the manual close function are possible (e.g. external reclosure device), the binary input „>Manual Close“ must be triggered by a separate contact at the control discrepancy switch (Figure 2-209).

If in that latter case a manual close command can also be given by means of an internal control command from the device, such a command must be combined with the manual CLOSE function via parameter 1152 **Man.Clos. Imp.** (Figure 2-207).

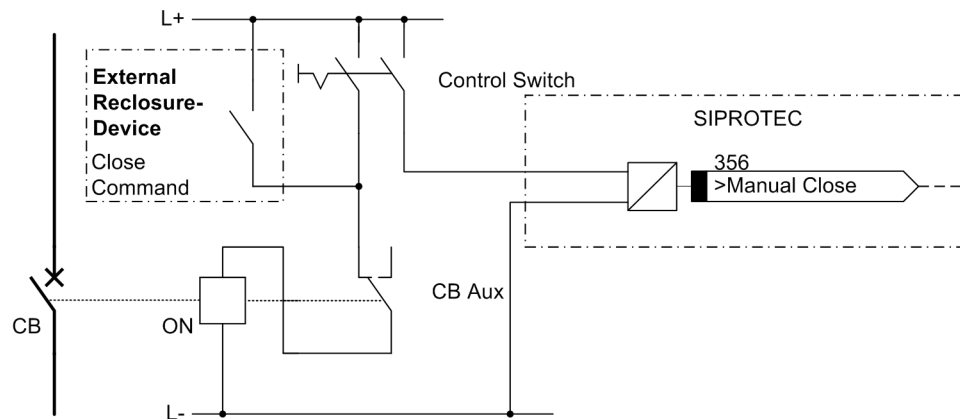


Figure 2-209 Manual closing with external automatic reclosure device

CB	Circuit breaker
ON	Circuit breaker close coil
CBaux	Circuit breaker auxiliary contact

Besides the manual CLOSE detection, the device records any energization of the line via the integrated line energization detection. This function processes a change-of-state of the measured quantities as well as the position of the breaker auxiliary contacts. The current status of the circuit breaker is detected, as described in the following Section at „Detection of the Circuit Breaker Position“. The criteria for the line energization detection change according to the local conditions of the measuring points and

the setting of the parameter address 1134 **Line Closure** (see Section 2.1.4 at margin heading „Circuit Breaker Status“).

The phase currents and the phase-to-earth voltages are available as measuring quantities. A flowing current excludes that the circuit breaker is open (exception: A fault between current transformer and circuit breaker). If the circuit breaker is closed, it may, however, still occur that no current is flowing. The voltages can only be used as a criterion for the de-energized line if the voltage transformers are installed on the feeder side. Therefore, the device only evaluates those measuring quantities that provide information on the status of the line according to address 1134.

But a change-of-state, such as a voltage jump from zero to a considerable value (address 1131 **PoleOpenVoltage**) or the occurrence of a considerable current (address 1130 **PoleOpenCurrent**), can be a reliable indicator for line energization as such changes can neither occur during normal operation nor in case of a fault. These settings can only be changed via DIGSI at **Display Additional Settings**.

The position of the auxiliary contacts of the circuit breakers directly indicate the position of the circuit breaker. If the circuit breaker is controlled single-pole, energization takes place if at least one contact changes from open to closed.

The detected energization is signalled through the message „Line closure“ (No. 590). The parameter 1132 **SI Time all Cl.** is used to set the signal to a defined length. These settings can only be changed via DIGSI at **Display Additional Settings**. Figure 2-210 shows the logic diagram.

In order to avoid that an energization is detected mistakenly, the state „line open“, which precedes any energization, must apply for a minimum time (settable with the address 1133 **T DELAY SOTF**). The default setting for this enable delay is 250 ms. This setting can only be changed using DIGSI at **Additional Settings**.

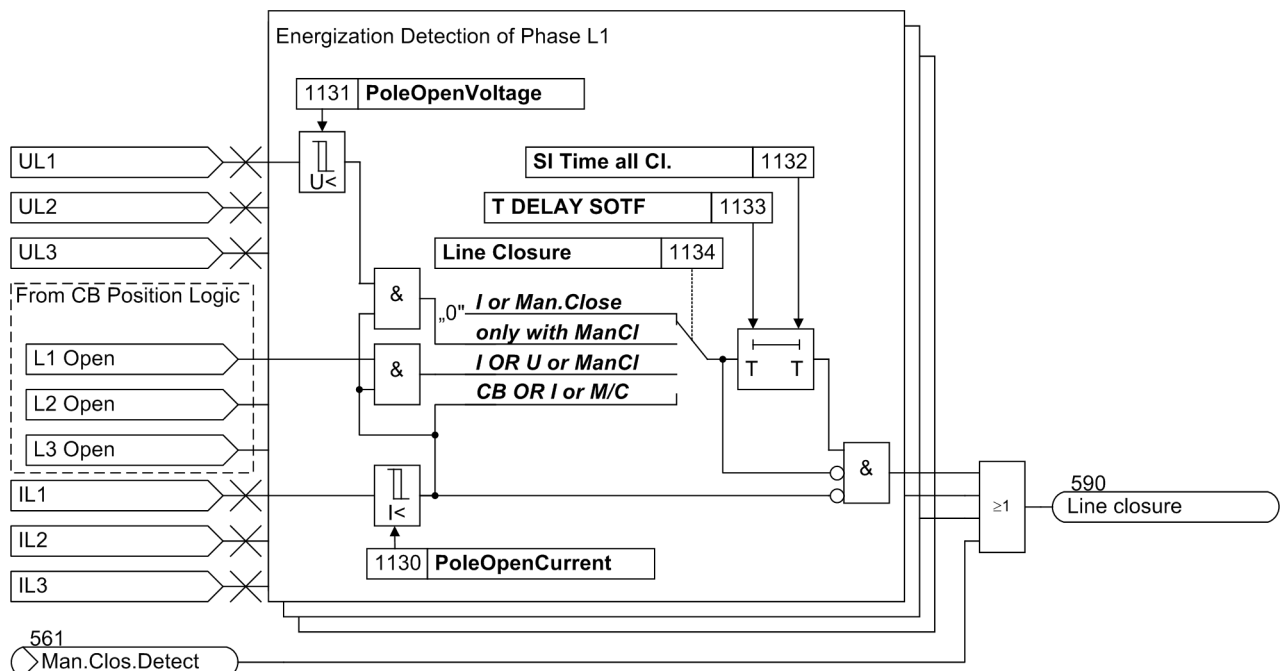


Figure 2-210 Generation of the energization signal

The line energization detection enables the distance protection, earth fault protection, time-overcurrent protection and high-current switch onto fault protection to trip without delay after energization of their line was detected.

Depending on the configuration of the distance protection, an undelayed trip command can be generated after energisation for each pickup or for pickup in zone Z1B. The stages of the earth fault protection and of the time overcurrent protection generate an undelayed TRIP command if this was provided for in the configuration. The switch onto fault protection is released phase-selectively and three-pole in case of manual closure after energisation detection. In order to generate a trip command as quickly as possible after an energisation, the fast switch onto fault protection is released selectively for each phase already when the line is open.

2.24.1.2 Detection of the Circuit Breaker Position

For Protection Purposes

Information regarding the circuit breaker position is required by various protective and supplementary functions to ensure their optimal functionality. This is, for example, of assistance for

- The echo function in conjunction with the distance protection with teleprotection (refer to Section 2.7),
- The echo function in conjunction with directional earth fault comparison scheme (refer to Section 2.9),
- Weak infeed tripping (refer to Section 2.11.2),
- The high-current instantaneous tripping (refer to Section 2.14),
- The circuit breaker failure protection (refer to Section 2.21),
- Verification of the dropout condition for the trip command (see Section „Terminating the Trip Signal“).

The device is equipped with a circuit breaker position logic (Figure 2-211) which offers different options depending on the type of auxiliary contacts provided by the circuit breaker and on how they are connected to the device.

In most cases it is sufficient to signal the position of the circuit breaker to the device with its auxiliary contact via a binary input. This always applies if the circuit breaker is only switched three-pole. Then the NO auxiliary contact of the circuit breaker is connected to a binary input which must be configured to the input function „>CB 3p Closed“ (No. 379). The other inputs are then not used and the logic is basically restricted to simply passing on this input information.

If the circuit breaker poles can be switched individually, and only a parallel connection of the NO individual pole auxiliary contacts is available, the relevant binary input (BI) is allocated to the function „>CB 3p Open“ (no. 380). The remaining inputs are not used in this case.

If the circuit breaker poles can be switched individually and if the individual auxiliary contacts are available, an individual binary input should be used for each auxiliary contact if this is possible and if the device can and is to trip single-pole. With this configuration, the device can process the maximum amount of information. Three binary inputs are used for this purpose:

- „>CB Aux. L1“ (No. 351) for the auxiliary contact of pole L1,
- „>CB Aux. L2“ (No. 352) for the auxiliary contact of pole L2,
- „>CB Aux. L3“ (No. 353) for the auxiliary contact of pole L3.

The inputs No. 379 and No. 380 are not used in this case.

If the circuit breaker can be switched individually, two binary inputs are sufficient if both the parallel as well as series connection of the auxiliary contacts of the three poles are available. In this case, the parallel connection of the auxiliary contacts is routed to the input function „>CB 3p Closed“ (No. 379) and the series connection is routed to the input function „>CB 3p Open“ (No. 380).

Please note that Figure 2-211 shows the complete logic for all connection alternatives. For each particular application, only a portion of the inputs is used as described above.

The eight output signals of the circuit breaker position logic can be processed by the individual protective and supplementary functions. The output signals are blocked if the signals transmitted from the circuit breaker are not plausible: for example, the circuit breaker cannot be open and closed at the same time. Furthermore, no current can flow over an open breaker contact.

The evaluation of the measuring quantities is according to the local conditions of the measuring points (see Section 2.1.4.1 at margin heading „Circuit Breaker Status“).

The phase currents are available as measuring quantities. A flowing current excludes that the circuit breaker is open (exception: A fault between current transformer and circuit breaker). If the circuit breaker is closed, it may, however, still occur that no current is flowing. The decisive setting for the evaluation of the measuring quantities is **PoleOpenCurrent** (address 1130) for the presence of the currents.

In 7SD5 the position of the circuit breaker poles detected by the device is also transmitted to the remote end device(s). This way the position of the circuit breaker poles is also recognized by at all other ends. The high-current switch-on-to-fault protection (see Section 2.14) makes use of this function.

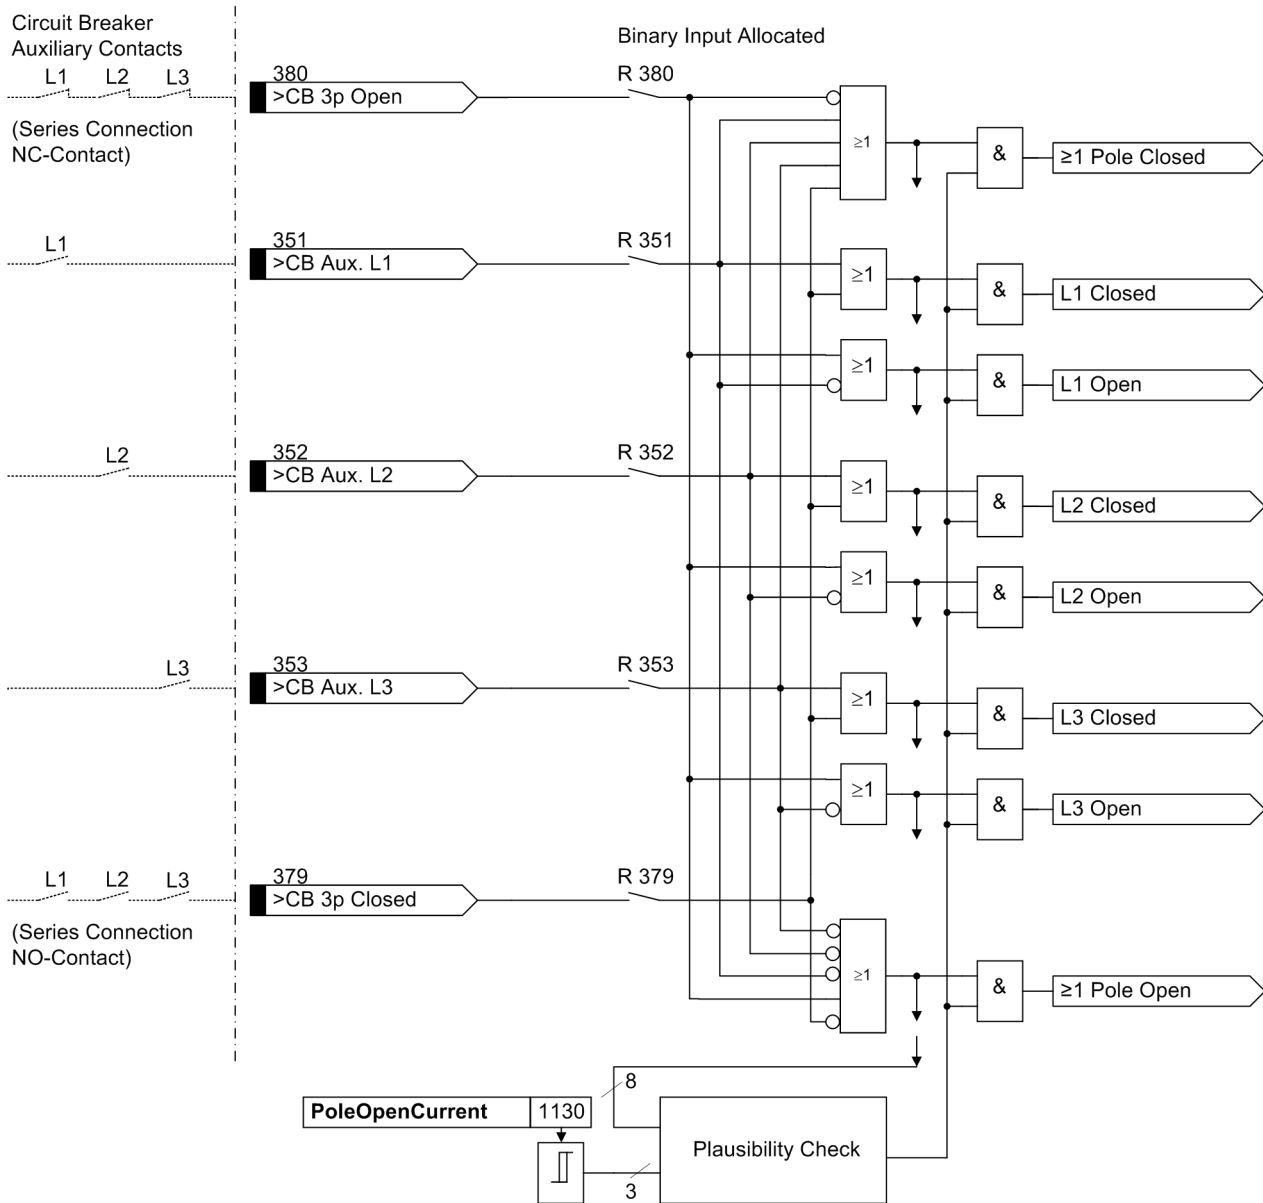


Figure 2-211 Circuit breaker position logic

For automatic re-closure and circuit breaker test

Separate binary inputs comprising information on the position of the circuit breaker are available for the automatic reclosure and the circuit breaker test. This is important for

- The plausibility check before automatic reclosure (refer to Section 2.16),
- The trip circuit check with the help of the TRIP-CLOSE-test cycle (refer to Section 2.24.2).

When using $1\frac{1}{2}$ or 2 circuit breakers in each feeder, the automatic reclosure function and the circuit breaker test refer to **one** circuit breaker. The feedback information of this circuit breaker can be connected separately to the device.

For this, separate binary inputs are available, which should be treated the same and configured additionally if necessary. These have a similar significance as the inputs described above for protection applications and are marked with „CB1 ...“ to distinguish them, i.e.:

- „>CB1 3p C1osed“ (No. 410) for the series connection of the NO auxiliary contacts of the CB,
- „>CB1 3p Open“ (No. 411) for the series connection of the NC auxiliary contacts of the CB,
- „>CB1 Pole L1“ (No. 366) for the auxiliary contact of pole L1,
- „>CB1 Pole L2“ (No. 367) for the auxiliary contact of pole L2,
- „>CB1 Pole L3“ (No. 368) for the auxiliary contact of pole L3.

2.24.1.3 Open Pole Detector

Single-pole dead times can be detected and reported via the Open Pole Detector. The corresponding protective and monitoring functions can respond. The following figure shows the logic structure of an Open Pole Detector.

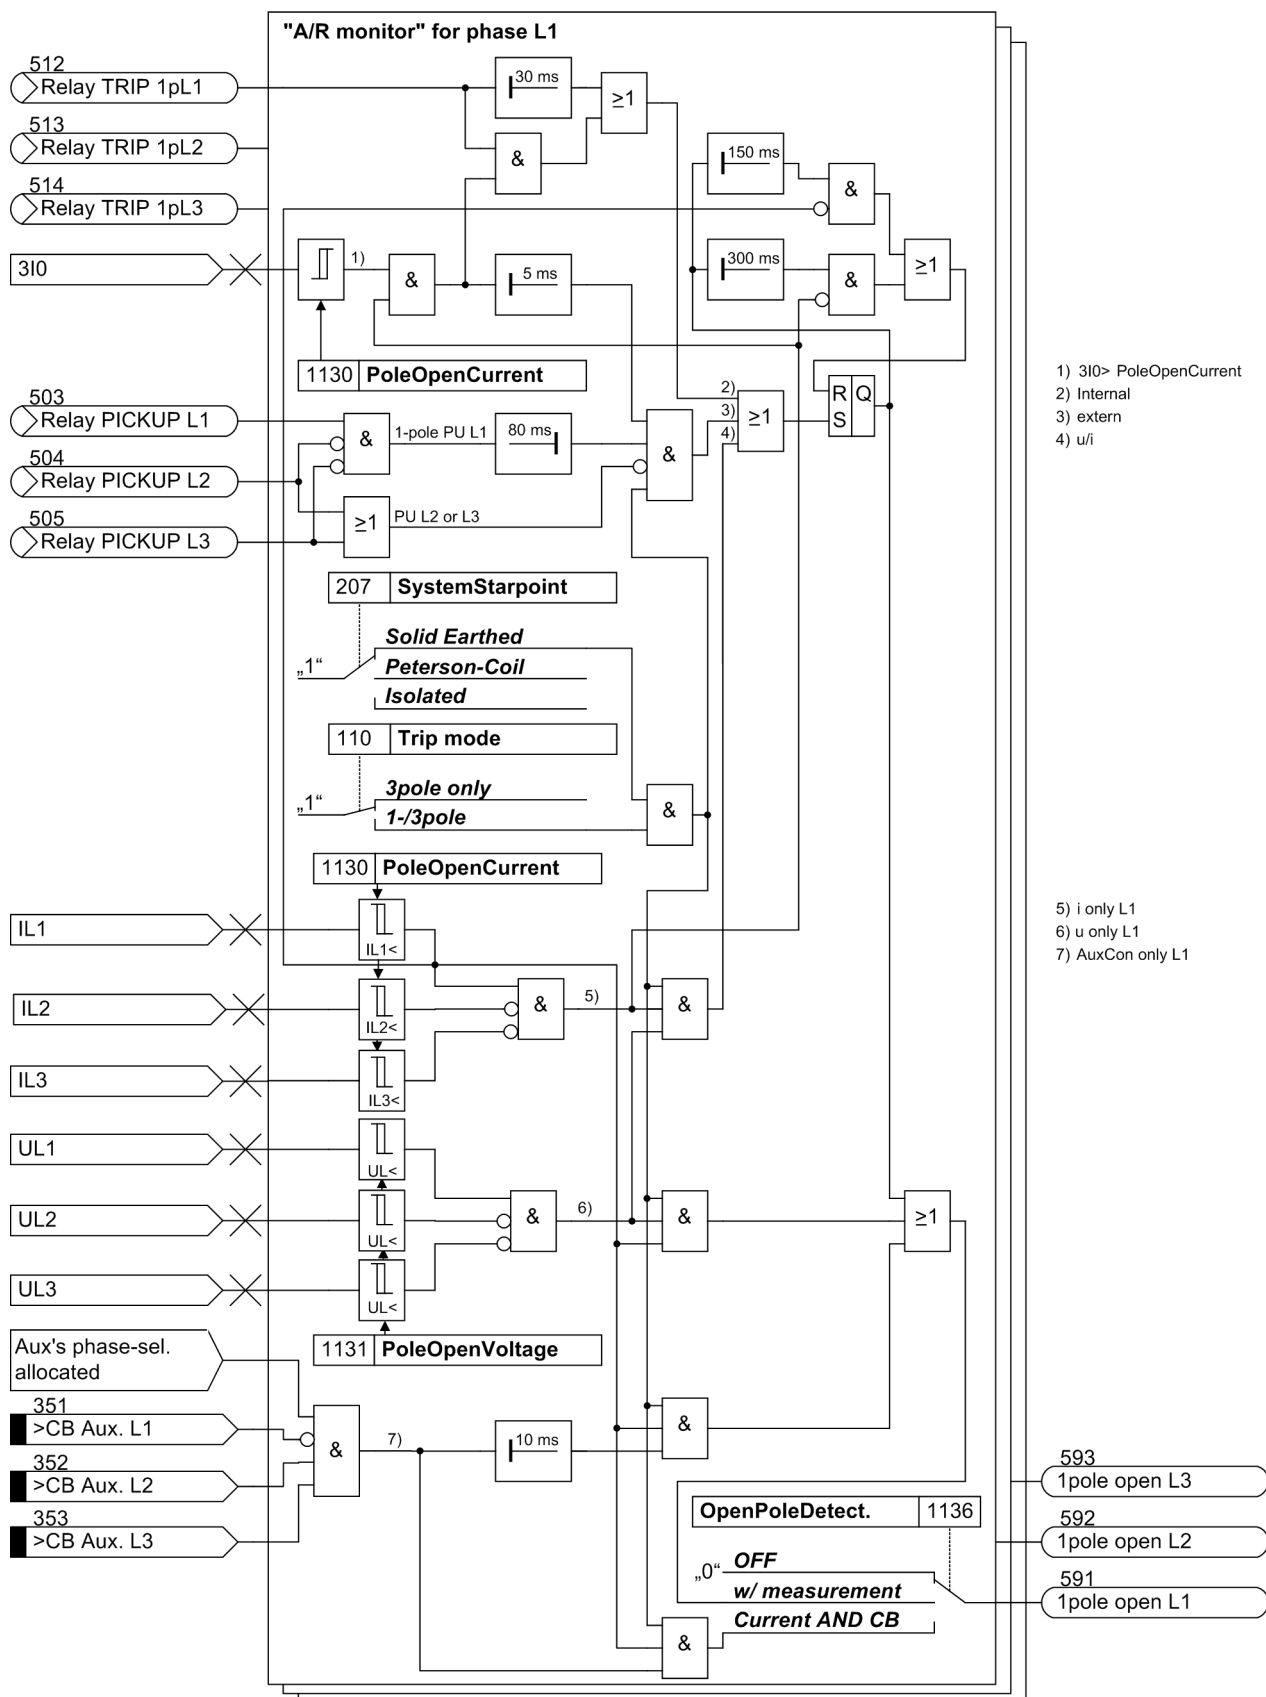


Figure 2-212 Open pole detector logic

1-pole dead time

During a 1-pole dead time, the load current flowing in the two healthy phases forces a current flow via earth which may cause undesired pickup. The developing zero sequence voltage may also prompt undesired responses of the protective functions.

The indications „1pole open L1“ (No. 591), „1pole open L2“ (No. 592) and „1pole open L3“ (No. 593) are additionally generated if the „Open Pole Detector“ detects that current and voltage are absent in one phase – however, it also detects that no current is flowing in the other phases. In this case, one of the indications will only be maintained while the condition is met. This enables a single-pole automatic reclosure to be detected on an unloaded line.

Specially for applications with busbar side voltage transformers the indication „1pole open Lx“ is additionally transmitted if the phase-selective CB auxiliary contacts clearly show a single-pole open circuit breaker, and the current of the affected phase falls below the parameter 1130 **PoleOpenCurrent**.

Depending on the setting of parameter 1136 **OpenPoleDetect.**, the Open Pole Detector evaluates all available measured values including the auxiliary contacts (default setting **w/ measurement**) or it processes only the information from the auxiliary contacts including the phase current values (setting **Current AND CB**). To disable the Open Pole Detector, set parameter 1136 to **OFF**.

2.24.1.4 Pickup Logic of the Entire Device**Phase Segregated Fault Detection**

The fault detection logic combines the fault detection (pickup) signals of all protection functions. In the case of those protection functions that allow for phase segregated pickup, the pickup is output in a phase segregated manner. If a protection function detects an earth fault, this is also output as a common device alarm. Thus, the alarms „Relay PICKUP L1“, „Relay PICKUP L2“, „Relay PICKUP L3“ and „Relay PICKUP E“ are available.

The above indications can be allocated to LEDs or output relays. For the local display of fault indications and for the transmission of the indications to a personal computer or a central control system, several protective functions provide the option to display the faulted phase information in a single message, e.g. „Diff Flt. L12E“ or „Dis.Pickup L12E“ for fault detection L1-L2-E; only one such indication appears, which represents the complete definition of the fault detection.

General Pickup

The pickup signals are combined with OR and lead to a general pickup of the device. It is signalled with „Relay PICKUP“. If no protective function of the device has picked up any longer, „Relay PICKUP“ disappears (indication „OFF“).

General device pickup is a precondition for a series of internal and external functions that occur subsequently. The following are among the internal functions controlled by general device pickup:

- Opening of fault case: from general device pickup to general device dropout, all fault indications are entered in the trip log.
- Initialization of fault storage: the storage and maintenance of fault values can also be made dependent on the occurrence of a trip command.
- Generation of spontaneous indications: Certain fault indications can be displayed as spontaneous indications (see margin heading „Spontaneous Indications“). In addition, this indication can be made dependent on the general device trip.
- Start action time of automatic reclosure (if available and used).

External functions may be controlled by this indication via an output contact. Examples are:

- Automatic reclose devices,
- Channel boost in conjunction with signal transmission by PLC.
- Further additional devices or similar.

Spontaneous indications

Spontaneous indications are fault indications which appear in the display automatically following a general fault detection or trip command of the device. For the 7SD5, these indications include:

„Relay PICKUP“:	protective function that picked up;
„S/E/F TRIP“:	protective function which tripped (only device with graphical display);
„PU Time“:	Operating time from the general pickup to the dropout of the device, in ms;
„TRIP Time“:	the operating time from general pickup to the first trip command of the device, in ms;
„dist =“:	Distance to fault in kilometers or miles derived by the distance to fault locator function (if possible).

2.24.1.5 Tripping Logic of the Entire Device

Three-pole tripping

In general, the device trips three-pole in the event of a fault. Depending on the version ordered (see Section A.1, „Ordering Information“), single-pole tripping is also possible. If, in general, single-pole tripping is not possible or desired, the output function „Relay TRIP“ is used for the trip command output to the circuit breaker. In these cases, the following sections regarding single-pole tripping are not of interest.

Single-pole tripping

Single-pole tripping only makes sense on overhead lines on which automatic reclosure is to be carried out and where the circuit breakers at both ends of the line are capable of single-pole tripping. Single-pole tripping with subsequent reclosure is then possible in the event of a single-phase fault in the faulted phase; three-pole tripping is generally performed in case of two-phase or three-phase faults with and without earth.

Device prerequisites for phase segregated tripping are:

- Phase segregated tripping is provided by the device (according to the ordering code);
- The tripping protective function is suitable for pole-segregated tripping (for example, not for frequency protection, overvoltage protection or overload protection),
- The binary input „>1p Trip Perm“ is configured and activated or the internal automatic reclosure function is ready for reclosure after single-pole tripping.

In all other cases tripping is always three-pole. The binary input „>1p Trip Perm“ is the logic inversion of a three-pole coupling and activated by an external auto-reclosure device as long as this is ready for a single-pole auto-reclosure cycle.

With the 7SD5, it is also possible to trip three-pole when only one phase is subjected to the trip conditions, but more than one phase indicates a fault detection. This can be the case, for instance, when two faults at different locations occur simultaneously, but only one of them is within the range of the differential protection or, in the case of distance protection, within the fast tripping zone (Z1 or Z1B). This is selected with the setting parameter **3pole coupling** (address 1155), which can be set to **with**

PICKUP (every multiple-phase fault detection causes three-pole trip) or **with TRIP** (in the event of multiple-phase trip conditions, the tripping is always three-pole).

The tripping logic combines the trip signals from all protective functions. The trip commands of those protective functions that allow single-pole tripping are phase segregated. The corresponding indications are named „Relay TRIP L1“, „Relay TRIP L2“ and „Relay TRIP L3“.

These indications can be allocated to LEDs or output relays. In the event of three-pole tripping all three indications are displayed. These alarms are also intended for the trip command output to the circuit breaker.

For the local display of fault indications and for the transmission of the indications to a personal computer or a central control system, the summarized image of the trip signals is also available to the protective functions - provided that single-pole tripping is possible - e.g. for single-pole tripping by differential protection „Diff TRIP 1p L1“, „Diff TRIP 1p L2“, „Diff TRIP 1p L3“ or by distance protection „Dis.Trip 1pL1“, „Dis.Trip 1pL2“, „Dis.Trip 1pL3“ and „Diff TRIP L123“ or „Dis.Trip 3p“ for three-pole tripping; only one of these indications is displayed at a time.

Single-pole tripping for two-phase faults

Single-pole tripping for two-phase faults is a special feature. If a phase-to-phase fault without earth occurs in an earthed system, this fault can be cleared by single-pole trip and automatic reclosure in one of the faulted phases as the short-circuit path is interrupted in this manner. The phase selected for tripping must be the same at both line ends (and should be the same for the entire system).

The setting parameter **Trip2phFlt** (address 1156) allows to select whether this tripping is to be **1pole leading Ø**, i.e. single-pole tripping in the leading phase or **1pole lagging Ø**, i.e. single-pole tripping in the lagging phase. Standard setting is **3pole** tripping in the event of two-phase faults (default setting).

Table 2-19 Single-pole and three-pole trip depending on fault type

Type of Fault (from Protection Function)				Parameter Trip2phFlt	Output signals for trip			
					TRIP 1p.L1	TRIP 1p.L2	TRIP 1p.L3	Relay TRIP 3ph.
L1				(any)	X			
	L2			(any)		X		
		L3		(any)			X	
L1			E	(any)	X			
	L2		E	(any)		X		
		L3	E	(any)			X	
L1	L2			3pole				X
L1	L2			1pole leading Ø	X			
L1	L2			1pole lagging Ø		X		
	L2	L3		3pole				X
	L2	L3		1pole leading Ø		X		
	L2	L3		1pole lagging Ø			X	
L1		L3		3pole				X
L1		L3		1pole leading Ø			X	
L1		L3		1pole lagging Ø	X			
L1	L2		E	(any)				X
	L2	L3	E	(any)				X

Type of Fault (from Protection Function)				Parameter Trip2phFlt	Output signals for trip			
					TRIP 1p.L1	TRIP 1p.L2	TRIP 1p.L3	Relay TRIP 3ph.
L1		L3	E	(any)				X
L1	L2	L3		(any)				X
L1	L2	L3	E	(any)				X
			E	(any)				X

General Trip

All trip signals for the protective functions are connected by OR and generate the message „Relay TRIP“. This can be allocated to LED or output relay.

Terminating the Trip Signal

Once a trip command is initiated, it is phase segregatedly latched (in the event of three-pole tripping for each of the three poles) (refer to Figure 2-213). At the same time, the minimum trip command duration **TMin TRIP CMD** is started. This ensures that the trip command is output to the circuit breaker for a sufficiently long time even if the tripping protective function resets very rapidly. The trip commands can only be reset after all tripping protective functions have dropped out and after the minimum trip command duration has elapsed.

A further condition for the reset of the trip command is that the circuit breaker has opened, in the event of single-pole tripping the relevant circuit breaker pole. In the function control of the device, this is checked by means of the circuit breaker position feedback (Section „Detection of the Circuit Breaker Position“) and the flow of current. In address 1130, the residual current **PoleOpenCurrent** is set which is certainly undershot when the circuit breaker pole is open. Address 1135 **Reset Trip CMD** determines under which conditions a trip command is reset. If **CurrentOpenPole** is set, the trip command is reset as soon as the current disappears. It is important that the value set in address 1130 **PoleOpenCurrent** (see above) is undershot. If **Current AND CB** is set, the circuit breaker auxiliary contact must send a message that the circuit breaker is open. It is a prerequisite for this setting that the position of the auxiliary contact is allocated via a binary input. If this additional condition is not required for resetting the trip command (e.g. if test sockets are used for protection testing), it can be switched off with the setting **Pickup Reset**.

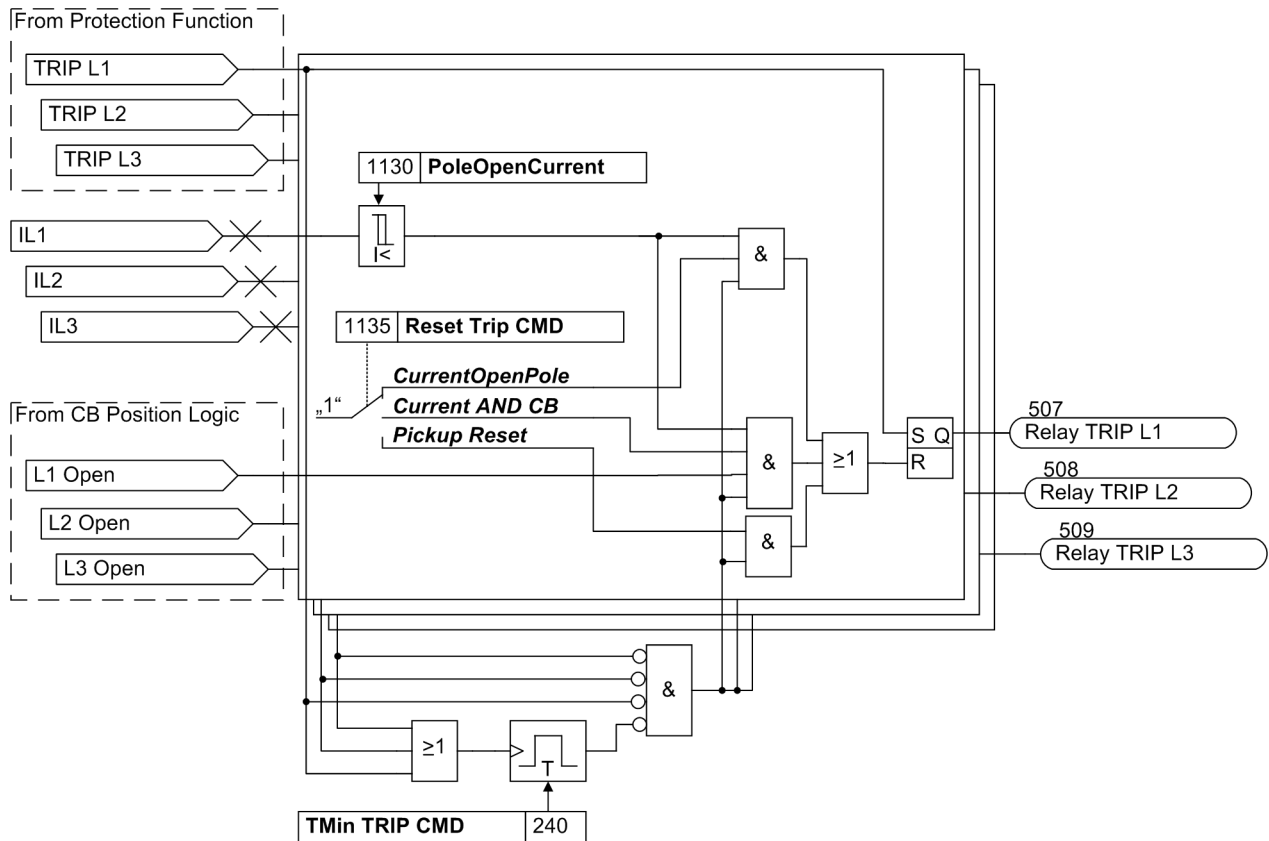


Figure 2-213 Storage and termination of the trip command

Reclosure Interlocking

When tripping the circuit breaker by a protection function the manual reclosure must often be blocked until the cause for the protection function operation is found. 7SD5 enables this via the integrated reclosure interlocking.

The interlocking state („LOCKOUT“) will be realized by an RS flipflop which is protected against auxiliary voltage failure (see Figure 2-214). The RS flipflop is set via binary input „>Lockout SET“ (no. 385). With the output alarm „LOCKOUT“ (no. 530), if interconnected correspondingly, a reclosure of the circuit breaker (e.g. for automatic reclosure, manual close signal, synchronization, closing via control) can be blocked. Only once the cause for the protection operation is known, should the interlocking be reset by a manual reset via binary input „>Lockout RESET“ (no. 386).

 


Figure 2-214 Reclosure Interlocking

Conditions which cause reclosure interlocking and control commands which have to be interlocked can be set individually. The two inputs and the output can be wired via the correspondingly allocated binary inputs and outputs or be linked via user-defined logic functions (CFC).

If, for example, each trip by the protection function has to cause a closing lockout, then combine the trip command „Relay TRIP“ (no. 511) with the interlocking input

„>Lockout SET“. If automatic reclosure is applied, only the final trip of the protection function should activate reclosing lockout. Please bear in mind that the message „Definitive TRIP“ (no. 536) applies only for 500 ms. Then combine the output indication „Definitive TRIP“ (no. 536) with the interlocking input „>Lockout SET“, so that the interlocking function is not established when an automatic reclosure is still expected to come.

In the most simple case, the output indication „LOCKOUT“ (No. 530) can be allocated to the output which trips the circuit breaker without creating further links. Then the trip command is maintained until the interlock is reset via the reset input. Naturally it has to be ensured in advance that the close coil at the circuit breaker — as is usually done — is blocked as long as a trip command is maintained.

The output indication „LOCKOUT“ can also be applied to interlock certain closing commands (externally or via CFC), e.g. by combining the output alarm with the binary input „>Blk Man. Close“ (no. 357) or by connecting the inverted alarm with the bay interlocking of the feeder.

The reset input „>Lockout RESET“ (no. 386) resets the interlocking state. This input is initiated by an external device which is protected against unauthorized or unintentional operation. The interlocking state can also be controlled by internal sources using CFC, e.g. a function key, operation of the device or using DIGSI on a PC.

For each case please make sure that the corresponding logical combinations, security measures, etc. are taken into account for the routing of the binary inputs and outputs and are also considered for the setting of user-defined logic functions, if necessary. See also the SIPROTEC 4 System Description.

Breaker Tripping Alarm Suppression

While on feeders without automatic reclosure every trip command by a protection function is final, it is desirable, when using automatic reclosure, to prevent the operation detector of the circuit breaker (transient contact on the breaker) from sending an alarm if the trip of the breaker is not final (Figure 2-215).

For this purpose, the signal from the circuit breaker is routed via a correspondingly allocated output contact of the 7SD5 (output indication „CB Alarm Supp“, no. 563). In the idle state and when the device is turned off, this contact is closed. Therefore an output contact with a normally closed contact (NC contact) has to be allocated. Which contact is to be allocated depends on the device version. Refer to the general views in the Appendix.

Prior to the command, with the internal automatic reclosure in the ready state, the contact opens so that no signal from the circuit breaker is forwarded. This is only the case if the device is equipped with internal automatic reclosure and if the latter was taken into consideration when configuring the protective functions (address 133).

Also when closing the breaker via the binary input „>Manual Close“ (No 356) or via the integrated automatic reclosure the contact is interrupted so that the breaker alarm is inhibited.

Further optional closing commands which are not sent via the device cannot be taken into consideration. Closing commands for control can be linked to the alarm suppression via the user-defined logic functions (CFC).

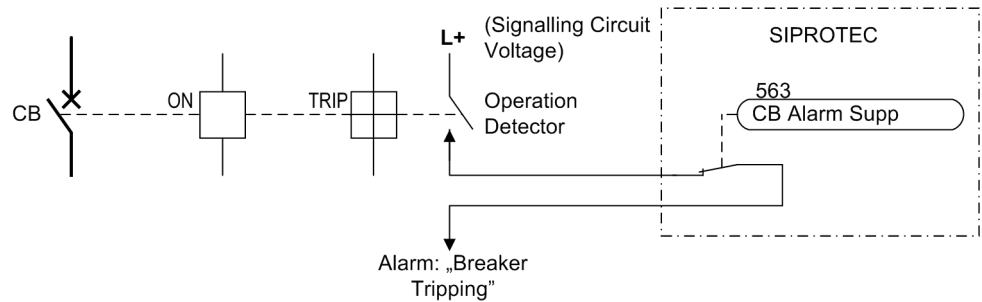


Figure 2-215 Breaker tripping alarm suppression

If the device issues a final trip command, the contact remains closed. This is the case, during the reclaim time of the automatic reclosure cycle, when the automatic reclosure is blocked or switched off or, due to other reasons is not ready for automatic reclosure (e.g. tripping only occurred after the action time expired).

Figure 2-216 shows time diagrams for manual trip and close as well as for short-circuit tripping with a single, failed automatic reclosure cycle.

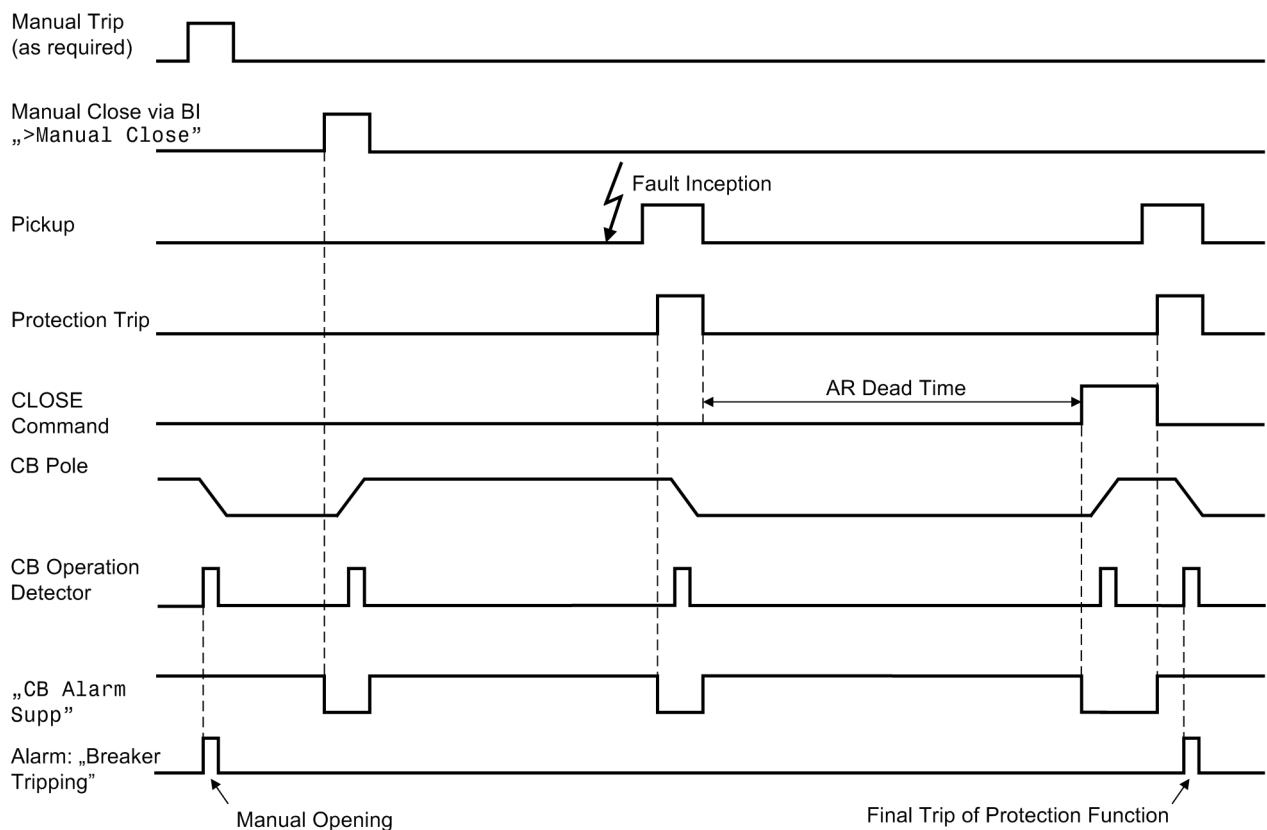


Figure 2-216 Breaker tripping alarm suppression — sequence examples

2.24.2 Circuit Breaker Test

The universal line protection 7SD5 allows an easy check of the trip circuits and the circuit breakers.

2.24.2.1 Functional Description

The test programs listed in Table 2-20 are available. The single-pole tests are naturally only available if the device at hand allows for single-pole tripping.

The output alarms mentioned must be allocated to the relevant command relays that are used for controlling the circuit breaker coils.

The test is started using the operator panel on the front of the device or using the PC with DIGSI. The procedure is described in detail in the SIPROTEC 4 System Description. Figure 2-217 shows the chronological sequence of one TRIP–CLOSE test cycle. The set times are those stated in Section 2.1.2.1 for „Trip Command Duration“ and „Circuit Breaker Test“.

Where the circuit breaker auxiliary contacts indicate the status of the circuit breaker or of its poles to the device via binary inputs, the test cycle can only be initiated if the circuit breaker is closed.

The information regarding the position of the circuit breakers is not automatically derived from the position logic according to the above section. For the circuit breaker test function (auto recloser) there are separate binary inputs for the switching status feedback of the circuit breaker position. These must be taken into consideration when allocating the binary inputs as mentioned in the previous section.

The alarms of the device show the respective state of the test sequence.

Table 2-20 Circuit breaker test programs

Serial No.	Test Programs	Circuit Breaker	Output Indications (No.)
1	1-pole TRIP/CLOSE-cycle phase L1	CB 1	CB1-TESTtrip L1 (7325)
2	1-pole TRIP/CLOSE-cycle phase L2		CB1-TESTtrip L2 (7326)
3	1-pole TRIP/CLOSE-cycle phase L3		CB1-TESTtrip L3 (7327)
4	3-pole TRIP/CLOSE-cycle		CB1-TESTtrip 123 (7328)
	Associated close command		CB1-TEST CLOSE (7329)

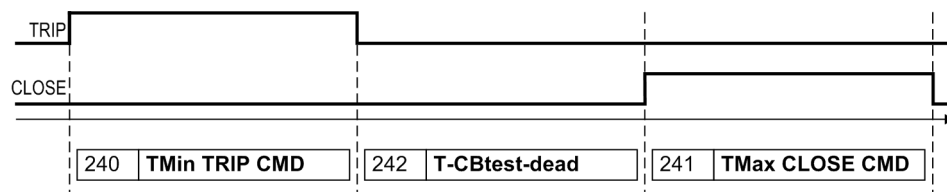


Figure 2-217 TRIP-CLOSE test cycle

2.24.2.2 Information List

No.	Information	Type of Information	Comments
-	CB1tst L1	-	CB1-TEST trip/close - Only L1
-	CB1tst L2	-	CB1-TEST trip/close - Only L2
-	CB1tst L3	-	CB1-TEST trip/close - Only L3
-	CB1tst 123	-	CB1-TEST trip/close Phases L123
7325	CB1-TESTtrip L1	OUT	CB1-TEST TRIP command - Only L1
7326	CB1-TESTtrip L2	OUT	CB1-TEST TRIP command - Only L2

No.	Information	Type of Information	Comments
7327	CB1-TESTtrip L3	OUT	CB1-TEST TRIP command - Only L3
7328	CB1-TESTtrip123	OUT	CB1-TEST TRIP command L123
7329	CB1-TEST close	OUT	CB1-TEST CLOSE command
7345	CB-TEST running	OUT	CB-TEST is in progress
7346	CB-TSTstop FLT.	OUT_Ev	CB-TEST canceled due to Power Sys. Fault
7347	CB-TSTstop OPEN	OUT_Ev	CB-TEST canceled due to CB already OPEN
7348	CB-TSTstop NOTr	OUT_Ev	CB-TEST canceled due to CB was NOT READY
7349	CB-TSTstop CLOS	OUT_Ev	CB-TEST canceled due to CB stayed CLOSED
7350	CB-TST .OK.	OUT_Ev	CB-TEST was successful

2.24.3 Device

The device requires some general information. This may be, for example, the type of indication to be issued in the event a power system fault occurs.

2.24.3.1 Trip-Dependent Indications

The storing of indications masked to local LEDs, and the maintenance of spontaneous indications, can be made dependent on whether the device has issued a trip signal. This information is then not output if one or more protection functions have picked up during a system disturbance, but no tripping by the 7SD5 resulted because the fault was cleared by a different device (e.g. on another line). These indications are then limited to faults on the line to be protected.

The figure below illustrates the generation of the reset command for stored indications. When the relay drops off, stationary conditions (fault display on every pickup/on trip only; trip/no trip) decide whether the new fault will be stored or reset.

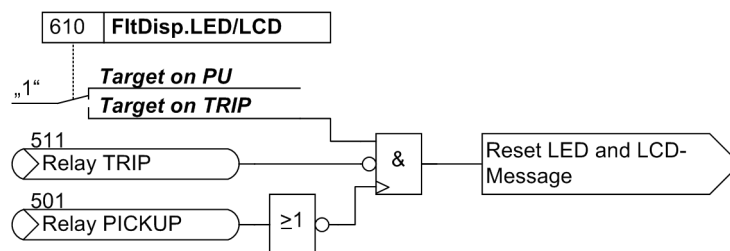


Figure 2-218 Creation of the reset command for the latched LED and LCD messages

2.24.3.2 Spontaneous Indications on the Display

You can select whether or not the most important data of a fault are displayed automatically after the fault has occurred (see also „Fault Indications“ in Section 2.25.2 „Processing of Messages“).

2.24.3.3 Switching Statistics

The number of trips initiated by the device 7SD523 is counted. If the device is capable of single-pole tripping, a separate counter for each circuit breaker pole is provided.

Furthermore, for each trip command the interrupted current for each pole is acquired, output in the trip log and accumulated in a memory. The maximum interrupted current is stored as well.

If the device is equipped with the integrated automatic reclosure, the automatic close commands are also counted, separately for reclosure after single-pole tripping, after three-pole tripping as well as separately for the first reclosure cycle and further reclosure cycles.

The counter and memory levels are secured against loss of auxiliary voltage. They can be set to zero or to any other initial value. For more details, please refer to the SIPROTEC 4 System Description.

2.24.3.4 Setting Notes

Fault Annunciations

Pickup of a new protective function generally turns off any previously lit LEDs, so that only the latest fault is displayed at any time. It can be selected whether the stored LED displays and the spontaneous indications on the display appear upon renewed pickup, or only after a renewed trip signal is issued. In order to enter the desired type of display, select the submenu Device in the SETTINGS menu. At address 610 **FltDisp.LED/LCD** the two alternatives **Target on PU** and **Target on TRIP** („No trip - no flag“) are offered.

For devices with graphical display use parameter 615 **Spont. FltDisp.** to specify whether a spontaneous fault indication is to appear automatically on the display (**YES**) or not (**NO**). For devices with text display such indications will appear after a system fault in any case.

After startup of a device featuring a 4-line display, measured values are displayed by default. Use the arrow keys on the device front to select the different representations of the measured values for the so-called default display. The start page of the default display, which is displayed by default after startup of the device, can be selected via parameter 640 **Start image DD**. The available representation types for the measured values are listed in the appendix .

2.24.3.5 Settings

Addr.	Parameter	Setting Options	Default Setting	Comments
610	FltDisp.LED/LCD	Target on PU Target on TRIP	Target on PU	Fault Display on LED / LCD
615	Spont. FltDisp.	NO YES	NO	Spontaneous display of flt.annunciations
640	Start image DD	image 1 image 2 image 3 image 4 image 5 image 6	image 1	Start image Default Display

2.24.3.6 Information List

No.	Information	Type of Information	Comments
-	Test mode	IntSP	Test mode
-	DataStop	IntSP	Stop data transmission
-	UnlockDT	IntSP	Unlock data transmission via BI
-	Reset LED	IntSP	Reset LED
-	SynchClock	IntSP_Ev	Clock Synchronization
-	>Light on	SP	>Back Light on
-	HWTestMod	IntSP	Hardware Test Mode
-	Error FMS1	OUT	Error FMS FO 1
-	Error FMS2	OUT	Error FMS FO 2
-	Distur.CFC	OUT	Disturbance CFC
-	Brk OPENED	IntSP	Breaker OPENED
-	FdrEARTHED	IntSP	Feeder EARTHED
3	>Time Synch	SP	>Synchronize Internal Real Time Clock
5	>Reset LED	SP	>Reset LED
11	>Annunc. 1	SP	>User defined annunciation 1
12	>Annunc. 2	SP	>User defined annunciation 2
13	>Annunc. 3	SP	>User defined annunciation 3
14	>Annunc. 4	SP	>User defined annunciation 4
15	>Test mode	SP	>Test mode
16	>DataStop	SP	>Stop data transmission
51	Device OK	OUT	Device is Operational and Protecting
52	ProtActive	IntSP	At Least 1 Protection Funct. is Active
55	Reset Device	OUT	Reset Device
56	Initial Start	OUT	Initial Start of Device
60	Reset LED	OUT_Ev	Reset LED
67	Resume	OUT	Resume
68	Clock SyncError	OUT	Clock Synchronization Error
69	DayLightSavTime	OUT	Daylight Saving Time
70	Settings Calc.	OUT	Setting calculation is running
71	Settings Check	OUT	Settings Check
72	Level-2 change	OUT	Level-2 change
73	Local change	OUT	Local setting change
110	Event Lost	OUT_Ev	Event lost
113	Flag Lost	OUT	Flag Lost
125	Chatter ON	OUT	Chatter ON
126	ProtON/OFF	IntSP	Protection ON/OFF (via system port)
128	TelepONoff	IntSP	Teleprot. ON/OFF (via system port)
140	Error Sum Alarm	OUT	Error with a summary alarm
144	Error 5V	OUT	Error 5V
160	Alarm Sum Event	OUT	Alarm Summary Event
177	Fail Battery	OUT	Failure: Battery empty
181	Error A/D-conv.	OUT	Error: A/D converter
183	Error Board 1	OUT	Error Board 1
184	Error Board 2	OUT	Error Board 2

No.	Information	Type of Information	Comments
185	Error Board 3	OUT	Error Board 3
186	Error Board 4	OUT	Error Board 4
187	Error Board 5	OUT	Error Board 5
188	Error Board 6	OUT	Error Board 6
189	Error Board 7	OUT	Error Board 7
190	Error Board 0	OUT	Error Board 0
191	Error Offset	OUT	Error: Offset
192	Error1A/5Awrong	OUT	Error:1A/5Ajumper different from setting
193	Alarm adjustm.	OUT	Alarm: Analog input adjustment invalid
194	Error neutralCT	OUT	Error: Neutral CT different from MLFB
320	Warn Mem. Data	OUT	Warn: Limit of Memory Data exceeded
321	Warn Mem. Para.	OUT	Warn: Limit of Memory Parameter exceeded
322	Warn Mem. Oper.	OUT	Warn: Limit of Memory Operation exceeded
323	Warn Mem. New	OUT	Warn: Limit of Memory New exceeded
2054	Emer. mode	OUT	Emergency mode
4051	Telep. ON	IntSP	Teleprotection is switched ON

2.24.4 EN100-Modul 1

2.24.4.1 Functional Description

The **EN100-Modul 1** allows to integrate the 7SD5 into 100 Mbit communication networks used by process control and automation systems and running IEC 61850 protocols. This standard enables integrated inter-relay communication without gateways or protocol converters. This allows open and interoperable use of SIPROTEC 4 devices even in heterogeneous environments. In parallel to the process control integration of the device, this interface can also be used for communication with DIGSI and for inter-relay communication via GOOSE.

2.24.4.2 Setting Notes

Interface Selection No settings are required for operation of the Ethernet system interface module (IEC 61850 **EN100-Modul 1**). If the device is equipped with such a module (see MLFB), the module is automatically configured to the interface available for it, namely **Port B**.

2.24.4.3 Information List

No.	Information	Type of Information	Comments
009.0100	Failure Modul	IntSP	Failure EN100 Modul
009.0101	Fail Ch1	IntSP	Failure EN100 Link Channel 1 (Ch1)
009.0102	Fail Ch2	IntSP	Failure EN100 Link Channel 2 (Ch2)

2.25 Additional Functions

The additional functions of the 7SD5 universal line protection include:

- Commissioning tools,
- Processing of messages,
- Processing of operational measured values,
- Storage of fault record data.

2.25.1 Commissioning Aid

2.25.1.1 Functional Description

There is a comprehensive commissioning and monitoring tool that checks the communication and the whole differential protection function. The WEB-Monitor is an integral part of the device. The respective online-help is available with DIGSI on CD-ROM or via the internet at www.siprotec.de.

To ensure a proper communication between the device and the PC browser, the transmission speed of both must be equal. Furthermore, the user must assign an IP address so that the browser can identify the device.

The WEB-Monitor also enables the user to operate the device with the PC. On the PC screen the front panel of the device is emulated, a function that can also be deactivated by the settings. The actual operation of the device can be now simulated with the mouse pointer. This possibility can be disabled.

If the device is equipped with an EN100 module, operation with DIGSI or the WEB-Monitor is also possible via Ethernet. All that has to be done is to set the IP configuration of the device accordingly. Parallel operation of DIGSI and WEB-Monitor via different interfaces is possible.

WEB-Monitor

The „WEB-Monitor“ is a comprehensive commissioning and monitoring tool which enables to clearly display the differential protection communication and the most important measured data using a PC with a web browser. Measured values and the values derived from them are graphically displayed as phasor diagrams. You can also view tripping diagrams, scalar values are shown in numerical form. For more details please refer to the online help for the „WEB-Monitor“.

This tool enables to graphically display, for instance, the currents, voltages (if connected to the system) and their phase angles for all devices of a differential protection system on a PC. In addition to phasor diagrams of the measured values, the numerical values as well as frequency and device addresses are indicated. Figure 2-219 shows an example.

Additionally the position of the differential and restraint values can be viewed in the tripping characteristic.

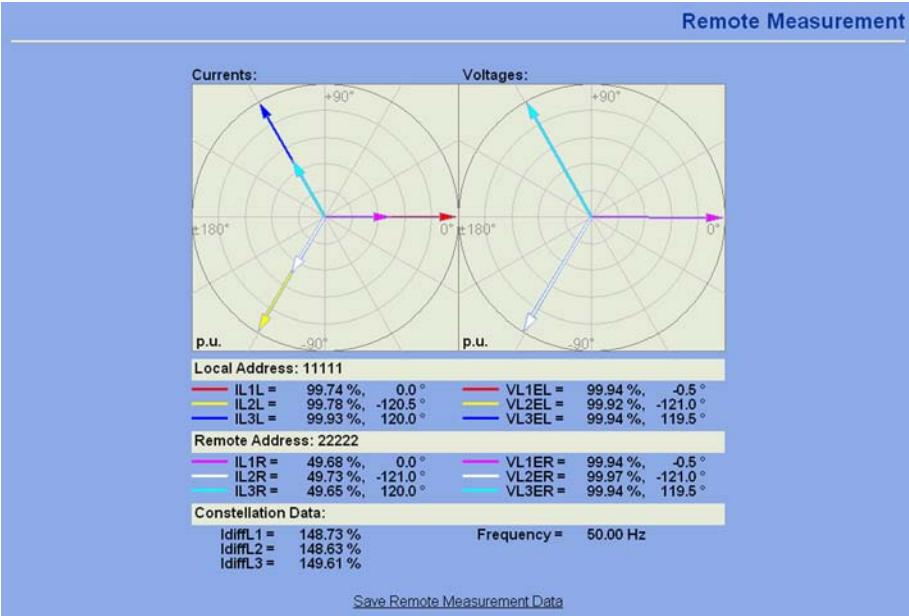


Figure 2-219 WEB-Monitor – Example of voltages and currents

Furthermore, the browser enables a comprehensive display of the most important measuring data and of the distance protection data required for the directional check. The measured values list can be selected from the navigation toolbar separately for the local device and remote devices. In each case a list with the desired information is displayed (see Figure 2-219 and 2-221).

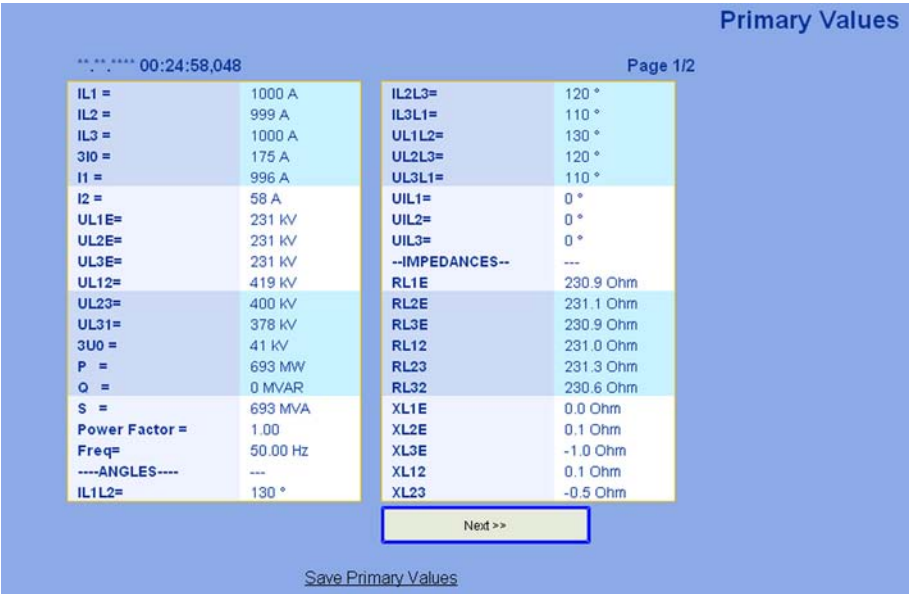


Figure 2-220 Local measured values in the WEB-Monitor — Examples for measured values

Percent Values

00:25:41,217 Page 1/3

IL1 =	100.0 %	-REMOTE VALUES-	---
IL2 =	99.9 %	Relay ID	11111
IL3 =	100.0 %	IL1_opN =	99.7 %
3I0 =	17.5 %	PHI_IL1 =	20 °
I1 =	99.6 %	IL2_opN =	99.6 %
I2 =	5.8 %	PHI_IL2 =	0 °
UL1E=	100.0 %	IL3_opN =	99.8 %
UL2E=	100.0 %	PHI_IL3 =	0 °
UL3E=	100.0 %	UL1_opN =	99.9 %
UL12=	104.6 %	PHI_UL1 =	0 °
UL23=	100.1 %	UL2_opN =	99.9 %
UL31=	94.4 %	PHI_UL2 =	0 °
3U0 =	17.6 %	UL3_opN =	99.9 %
IDiffL1	195.9 %	PHI_UL3 =	0 °
IDiffL2	198.6 %	Relay ID	22222
IDiffL3	198.7 %	IL1_opN =	99.9 %
IRestL1	65.4 %	PHI_IL1 =	0 °
IRestL2	65.4 %	IL2_opN =	99.7 %
IRestL3	65.6 %	PHI_IL2 =	0 °
Diff3I0	68.5 %	IL3_opN =	99.8 %

Next >>

[Save Percent Values](#)

Figure 2-221 List of measured percentage values with given angle differences – Example

The following types of indications can be retrieved and displayed with the WEB-Monitor

- Operational indications (buffer: event log)
- Fault indications (buffer: trip log)
- Spontaneous Indications

You can print these lists with the „Print event buffer“ button.

2.25.1.2 Setting Notes

The parameters of the WEB-Monitor can be set separately for the front operator interface and the service interface. The relevant IP address of the interface is the one that is used for communication with the PC and the WEB-Monitor.

Make sure that the 12-digit IP address valid for the browser is set correctly via DIGSI in the format ***.***.***.***.

2.25.2 Processing of Messages

After the occurrence of a system fault, data regarding the response of the protective relay and the measured quantities should be saved for future analysis. For this reason message processing is done in three ways:

2.25.2.1 Functional Description

Indicators and Binary Outputs (Output Relays)

Important events and states are displayed by LEDs on the front cover. The device also contains output relays for remote signaling. Most indications and displays can be configured differently from the delivery default settings (for information on the delivery

default setting see Appendix). The SIPROTEC 4 System Description gives a detailed description of the configuration procedure.

The output relays and the LEDs may be operated in a latched or unlatched mode (each may be individually set).

The latched conditions are protected against loss of the auxiliary voltage. They are reset

- On site by pressing the LED key on the relay,
- Remotely using a binary input configured for that purpose,
- Using one of the serial interfaces,
- Automatically at the beginning of a new pickup.

Status messages should not be latched. Also, they cannot be reset until the criterion to be reported is remedied. This applies to, e.g., indications from monitoring functions, or the like.

A green LED displays operational readiness of the relay („RUN“); it cannot be reset. It extinguishes if the self-check feature of the microprocessor detects an abnormal occurrence, or if the auxiliary voltage fails.

When auxiliary voltage is present but the relay has an internal malfunction, the red LED („ERROR“) lights up and the processor blocks the relay.

DIGSI enables you to selectively control each output relay and LED of the device and, in doing so, check the correct connection to the system. In a dialog box, you can, for instance, cause each output relay to pick up, and thus test the wiring between the 7SD5 and the system without having to create the indications masked to it.

Information via Display Panel or PC

Events and conditions can be read out on the display on the front panel of the relay. Using the front operator interface or the rear service interface, for instance, a personal computer can be connected, to which the information can be sent.

In the quiescent state, i.e. as long as no system fault is present, the LCD can display selectable operational information (overview of the operational measured values) (default display). In the event of a system fault, information regarding the fault, the spontaneous displays, are displayed instead. After the fault indications have been acknowledged, the quiescent data are shown again. Acknowledgement can be performed by pressing the LED buttons on the front panel (see above).

Figure 2-222 shows the default display in a 4-line display as preset. The default display can be configured in the graphic display. For more information see the SIPROTEC 4 System Description and the Display Editor manual.

Various default displays can be selected via the arrow keys. Parameter 640 can be set to change the default setting for the default display page shown in idle state. Two examples of possible default display selections are given below.

1	345A	12	121kV
2	341A	23	118kV
3	346A	31	119kV
E	4.7A	U0	2kV

Example:

IL1	= 345 A	UL1-L2	= 121 kV
IL2	= 341 A	UL2-L3	= 118 kV
IL3	= 346 A	UL3-L1	= 119 kV
IE (3I0)	= 4.7 A	U0	= 2 kV

Figure 2-222 Operational measured values in the default display

Default display 3 shows the measured power values and the measured values U_{L1-L2} and I_{L2} .

<div style="border: 1px solid black; padding: 5px;"> S: 227MVA U: 400kV P: 71MW I: 401A Q: 268MVAR f: 50.00Hz cosφ: 0.25 </div>	Example: S = 227 MVA UL1-L2 = 400 kV P = 71 MW IL2 = 401 A Q = 268 MVAR f = 50.00 Hz cos φ = 0.25
--	--

Figure 2-223 Operational measured values in the default display

Moreover, the device has several event buffers for operational indications, fault indications, switching statistics, etc., which are protected against loss of auxiliary supply by means of a backup battery. These indications can be displayed on the LCD at any time by selection using the keypad or transferred to a personal computer via the serial service or operator interface. Reading out indications during operation is described in detail in the SIPROTEC 4 System Description.

After a fault on the system, for example, important information about the progression of the fault can be retrieved, such as the pickup of a protective element or the initiation of a trip signal. The start of the fault is time stamped with the absolute time of the internal system clock. The progress of the fault is output with a relative time referred to the instant of fault detection, so that the duration of a fault until tripping and up to reset of the trip command can be ascertained. The resolution of the time information is 1 ms.

With a PC and the DIGSI protection data processing software it is also possible to retrieve and display the events with the convenience of visualisation on a monitor and a menu-guided dialog. The data may either be printed or stored for evaluation at a later time and place.

Information to a Control Centre

If the device has a serial system interface, stored information may additionally be transferred via this interface to a centralized control and storage device. Several communication protocols are available for the transfer of this information.

You may test whether the indications are transmitted correctly with DIGSI.

Also the information transmitted to the control centre can be influenced during operation or tests. The IEC 60870-5-103 protocol allows to identify all indications and measured values transferred to the central control system with an added indication „test mode“ while the device is being tested on site (test mode). This identification prevents the indications from being incorrectly interpreted as resulting from an actual power system disturbance or event. Alternatively, you may disable the transmission of indications to the system interface during tests („Transmission Block“).

To influence information at the system interface during test mode („test mode“ and „transmission block“), a CFC logic is required. Default settings already include this logic (see Appendix).

The SIPROTEC 4 System Description describes in detail how to activate and deactivate test mode and blocked data transmission.

Classification of Indications

Indications are classified as follows:

- Operational indications: messages generated while the device is in operation: They include information about the status of device functions, measurement data, system data, and similar information.
- Fault indications: messages from the last eight system faults that were processed by the device..
- Indications on Statistics: they include counters for the switching actions of the circuit breakers initiated by the device, maybe reclose commands as well as values of interrupted currents and accumulated fault currents.

A complete list of all message and output functions that can be generated by the device, with the associated information number (no), can be found in the Appendix. There it is also indicated to which destination the indication can be reported. If functions are not present in the specific version of the **Disabled**, or if they are set to disable, then the associated indications cannot appear.

Operational Indications

Operational indications contain information that the device generates during operation and about operational conditions.

Up to 200 operational indications are stored in chronological order in the device. Newly generated indications are added to those already there. When the maximum capacity of the memory is exhausted, the oldest indication is lost.

Operational indications arrive automatically and can be read out from the device display or a personal computer at any time. Faults in the power system are indicated with „Network Fault“ and the present fault number. The fault indications contain detailed information on the behaviour of the system faults.

Fault Indications

Following a system fault, it is possible for example to retrieve important information regarding its progress, such as pickup and trip. The start of the fault is time stamped with the absolute time of the internal system clock. The progress of the fault is output with a relative time referred to the instant of fault detection, so that the duration of a fault until tripping and up to reset of the trip command can be ascertained. The resolution of the time information is 1 ms.

A system fault starts with the recognition of a fault by the fault detection, i.e. first pickup of any protection function, and ends with the reset of the fault detection, i.e. dropout of the last protection function. Where a fault causes several protective functions to pick up, the fault is considered to include all that occurred between pickup of the first protective function and dropout of the last protective function.

If automatic reclosure is performed, the network fault ends after the last blocking time has expired, thus after a successful or unsuccessful reclosure. Therefore the entire clearing process, including the reclosure cycle shot (or all reclosure cycles), occupies only one fault log. Within a network fault, several faults can occur (from the first pickup of a protective function to the last dropout of a protective function). Without automatic reclosure each fault represents a network fault.

Spontaneous Indications

After a fault, automatically and without operator action, the most important fault data from the general device pickup appear on the display in the sequence shown in the following figure.

<div style="border: 1px solid black; padding: 5px;"> S/E/F PICKUP PU - Time TRIP Time Fault Locator </div>	Protective Function that Picked up First; Operating Time from General Pickup to Dropout; Operating Time from General Pickup to the First Trip Command;
---	--

Figure 2-224 Spontaneous fault indication display

Fault Location Options	<p>Apart from the displays on the device and in DIGSI, additional display options are available depending on the device version, configuration and allocation:</p> <ul style="list-style-type: none"> • If the device features the BCD output for the fault location, the transmitted figures mean the following: <ul style="list-style-type: none"> 0 to 195: the calculated fault location in % (if greater than 100%, the error lies outside the protected line in a forward direction); 197: negative fault location (fault in reverse direction); 199: overflow.
Retrievable Indications	<p>The indications of the last eight system faults can be retrieved and read out. A total of 600 indications can be stored. The oldest indications are erased for the newest fault indications when the buffer is full.</p>
Spontaneous Indications	<p>Spontaneous indications contain information that new indications have arrived. Each new incoming indication appears immediately, i.e. the user does not have to wait for an update or initiate one. This can be a useful help during operation, testing and commissioning.</p> <p>Spontaneous indications can be read out via DIGSI. For more information see the SIPROTEC 4 System Description.</p>
General Interrogation	<p>The present condition of the SIPROTEC 4 device can be retrieved via DIGSI by viewing the contents of the General Interrogation. It shows all indications that are subject to general interrogation with their current value.</p>

2.25.3 Statistics

Counting includes the number of trips initiated by 7SD5, the accumulated breaking currents resulting from trips initiated by protection functions, the number of close commands initiated by the auto-reclosure function.

2.25.3.1 Function Description

Counters and memories	<p>The counters and memories of the statistics are saved by the device. Therefore, the information will not get lost in case the auxiliary voltage supply fails. The counters, however, can be reset to zero or to any value within the setting range.</p> <p>Switching statistics can be viewed on the LCD of the device, or on a PC running DIGSI and connected to the operating or service interface.</p> <p>A password is not required to read switching statistics; however, a password is required to change or delete the statistics. For more information see the SIPROTEC 4 System Description.</p>
Number of trips	<p>The number of trips initiated by the device 7SD5 is counted. If the device is capable of single-pole tripping, a separate counter for each circuit breaker pole is provided.</p>
Number of automatic reclosing commands	<p>If the device is equipped with the integrated automatic reclosure, the automatic close commands are also counted, separately for reclosure after single-pole tripping, after</p>

three-pole tripping as well as separately for the first reclosure cycle and other reclosure cycles.

Interrupted currents

Furthermore, for each trip command the interrupted current for each pole is acquired, output in the trip log and accumulated in a memory. The maximum interrupted current is stored as well. The indicated measured values are indicated in primary values.

Transmission statistics

In 7SD5 the protection communication is registered in statistics. The delay times of the information between the devices via interfaces (run and return) are measured steadily. The values are kept stored in the Statistics folder. The availability of the transmission media is also reported. The availability is indicated in % / min and % / h. This enables an evaluation of the transmission quality.

If GPS synchronization is configured, the transmission times for each direction and each protection data interface are regularly measured and indicated as long as GPS synchronization is intact.

2.25.3.2 Information List

No.	Information	Type of Information	Comments
1000	# TRIPs=	VI	Number of breaker TRIP commands
1001	TripNo L1=	VI	Number of breaker TRIP commands L1
1002	TripNo L2=	VI	Number of breaker TRIP commands L2
1003	TripNo L3=	VI	Number of breaker TRIP commands L3
1027	Σ IL1 =	VI	Accumulation of interrupted current L1
1028	Σ IL2 =	VI	Accumulation of interrupted current L2
1029	Σ IL3 =	VI	Accumulation of interrupted current L3
1030	Max IL1 =	VI	Max. fault current Phase L1
1031	Max IL2 =	VI	Max. fault current Phase L2
1032	Max IL3 =	VI	Max. fault current Phase L3
2895	AR #Close1./1p=	VI	No. of 1st AR-cycle CLOSE commands,1pole
2896	AR #Close1./3p=	VI	No. of 1st AR-cycle CLOSE commands,3pole
2897	AR #Close2./1p=	VI	No. of higher AR-cycle CLOSE commands,1p
2898	AR #Close2./3p=	VI	No. of higher AR-cycle CLOSE commands,3p
7751	PI1 TD	MV	Prot.Interface 1:Transmission delay
7752	PI2 TD	MV	Prot.Interface 2:Transmission delay
7753	PI1A/m	MV	Prot.Interface 1: Availability per min.
7754	PI1A/h	MV	Prot.Interface 1: Availability per hour
7755	PI2A/m	MV	Prot.Interface 2: Availability per min.
7756	PI2A/h	MV	Prot.Interface 2: Availability per hour
7875	PI1 TD R	MV	Prot.Interface 1:Transmission delay rec.
7876	PI1 TD S	MV	Prot.Interface 1:Transmission delay send
7877	PI2 TD R	MV	Prot.Interface 2:Transmission delay rec.
7878	PI2 TD S	MV	Prot.Interface 2:Transmission delay send

2.25.4 Measurement During Operation

2.25.4.1 Functional Description

A series of measured values and the values derived from them are available for on-site retrieval or for data transfer.

A precondition for the correct display of primary and percentage values is the complete and correct entry of the nominal values of the instrument transformers and the power system as well as the transformation ratio of the current and voltage transformers in the earth paths.

Display and Transmission of Measured Values

Operational measured values and metered values are determined in the background by the processor system. They can be called up on the front of the device, read out via the operator interface using a PC with DIGSI, or transferred to a control centre via the system interface.

Depending on ordering code, connection of the device and configured protective functions, only some of the operational measured values listed in Table 2-21 may be available. Of the current values I_{EE} , I_Y and I_P only the one which is connected to current measuring input I_4 can apply. Phase-to-earth voltages can only be measured if the phase-to-earth voltage inputs are connected. The displacement voltage $3U_0$ is e-n-voltage multiplied by $\sqrt{3}$ — if U_{en} is connected — or calculated from the phase-to-earth voltages $3U_0 = |\underline{U}_{L1} + \underline{U}_{L2} + \underline{U}_{L3}|$. All three voltage inputs must be phase-earth connected for this.

The zero sequence voltage U_0 indicates the voltage between the delta centre and earth.

If multiple devices are connected via their protection data interfaces, a common frequency value is calculated via the constellation (constellation frequency). This value is displayed as the operational measured value „Frequency“. It allows to display a frequency even in devices in which local frequency measurement is not possible. The constellation frequency is also used by the differential protection for synchronizing the measured values. Locally operating functions such as frequency protection always use the locally measured frequency.

If the device is in „Log out device“ ON mode, in differential protection test mode or if there is no protection data interface connection, the locally measured frequency is displayed.

For the thermal overload protection, the calculated overtemperatures are indicated in relation to the trip overtemperature. Overload measured values can appear only if the overload protection was configured **Enabled**.

If the device features synchronism and voltage check and if, when configuring the functions (address 135), these functions were set as **Enabled** and the parameter **U4 transformer** (address 210) to **Usy2 transf.**, you can read out the characteristic values (voltages, frequencies, differences).

The power and operating values upon delivery are set such that power in line direction is positive. Active components in line direction and inductive reactive components in line direction are also positive. The same applies for the power factor $\cos\varphi$.

It is occasionally desired to define the power drawn from the line (e.g. as seen from the consumer) positively. Using parameter 1107 **P,Q sign** the signs for these components can be inverted.

The operational measured values are also calculated in the event of a running fault in intervals of approximately 0.5 s.

Table 2-21 Operational measured values of the local device

Measured Values		Primary	Secondary	% Referred to
I_{L1}, I_{L2}, I_{L3}	Phase currents	A	A	Nominal operational current ¹⁾
I_{EE}	Sensitive earth current	A	mA	Nominal operational current ³⁾¹⁾
$3I_0$	Earth current	A	A	Nominal operational current ¹⁾
$\varphi(I_{L1}-I_{L2}), \varphi(I_{L2}-I_{L3}), \varphi(I_{L3}-I_{L1})$	Phase angle of the phase currents towards each other	°	—	—
I_1, I_2	Positive and negative sequence component of currents	A	A	Nominal operational current ¹⁾
I_Y, I_P	Transformer starpoint current or earth current of the parallel line	A	A	Nominal operational current ³⁾¹⁾
$U_{L1-L2}, U_{L2-L3}, U_{L3-L1}$	Phase-to-phase voltages	kV	V	Nominal operational voltage ²⁾
$U_{L1-E}, U_{L2-E}, U_{L3-E}$	Phase-earth voltage	kV	V	Nominal operational voltage / $\sqrt{3}$ ²⁾
$3U_0$	Displacement voltage	kV	V	Nominal operational voltage / $\sqrt{3}$ ²⁾
$\varphi(U_{L1}-U_{L2}), \varphi(U_{L2}-U_{L3}), \varphi(U_{L3}-U_{L1})$	Phase angle of the phase voltages towards each other	°	—	—
$\varphi(U_{L1}-I_{L1}), \varphi(U_{L2}-I_{L2}), \varphi(U_{L3}-I_{L3})$	Phase angle of the phase voltages towards the phase currents	°	—	—
U_1, U_2	Positive and negative sequence component of the voltages	kV	V	Nominal operational voltage / $\sqrt{3}$ ²⁾
$U_X; U_{EN}$	Voltage at measuring input U_4	—	V	—
U_{sy2}	Voltage at measuring input U_4	kV	V	Operational rated voltage or Operational rated voltage / $\sqrt{3}$ ²⁾⁴⁾⁵⁾
$U_{1\text{compound}}$	Positive sequence component of voltages at the remote end (if compounding is active in voltage protection)	kV	V	Operational rated voltage / $\sqrt{3}$ ²⁾
$R_{L1-E}, R_{L2-E}, R_{L3-E}, R_{L1-L2}, R_{L1-L3}, R_{L2-L3}$	Operational resistance of all loops	Ω	Ω	—
$X_{L1-E}, X_{L2-E}, X_{L3-E}, X_{L1-L2}, X_{L1-L3}, X_{L2-L3}$	Operational reactance of all loops	Ω	Ω	—
S, P, Q	Apparent, active and reactive power	MVA, MW, MVAR	—	$\sqrt{3} \cdot U_N \cdot I_N$ Nominal operational quantities ¹⁾²⁾
$\cos \varphi$	Power factor	(abs)	(abs)	—
f	Frequency (constellation frequency)	Hz	Hz	Nominal frequency
$\Theta_{L1}/\Theta_{TRIP}, \Theta_{L2}/\Theta_{TRIP}, \Theta_{L3}/\Theta_{TRIP}$	Thermal value of each phase, referred to the tripping value	%	—	Trip overtemperature
Θ/Θ_{TRIP}	Resulting thermal value, referred to the tripping value, calculated according to the set method	%	—	Trip overtemperature
$U_{sy1}, U_{sy2}, U_{diff}$	Measured voltage values (for synchronism check)	kV	—	—
$f_{sy1}, f_{sy2}, f_{diff}$	Measured frequency values (for synchronism check)	Hz	—	—
Φ_{Diff}	Amount of phase angle difference between line and busbar (for synchronism check)	°	—	—

¹⁾ according to address 1104

²⁾ according to address 1103

- 3) considering factor 221 I4/Iph CT
4) according to address 212 Usy2 connection
5) considering factor 215 Usy1/Usy2 ratio

2.25.4.2 Information List

No.	Information	Type of Information	Comments
601	IL1 =	MV	I L1
602	IL2 =	MV	I L2
603	IL3 =	MV	I L3
610	3I0 =	MV	3I0 (zero sequence)
611	3I0sen=	MV	3I0sen (sensitive zero sequence)
612	IY =	MV	IY (star point of transformer)
613	3I0par=	MV	3I0par (parallel line neutral)
619	I1 =	MV	I1 (positive sequence)
620	I2 =	MV	I2 (negative sequence)
621	UL1E=	MV	U L1-E
622	UL2E=	MV	U L2-E
623	UL3E=	MV	U L3-E
624	UL12=	MV	U L12
625	UL23=	MV	U L23
626	UL31=	MV	U L31
627	Uen =	MV	Uen
631	3U0 =	MV	3U0 (zero sequence)
632	Usy2=	MV	Measured value Usy2
633	Ux =	MV	Ux (separate VT)
634	U1 =	MV	U1 (positive sequence)
635	U2 =	MV	U2 (negative sequence)
636	Udiff =	MV	Measured value U-diff (Usy1- Usy2)
637	Usy1=	MV	Measured value Usy1
638	Usy2=	MV	Measured value Usy2
641	P =	MV	P (active power)
642	Q =	MV	Q (reactive power)
643	PF =	MV	Power Factor
644	Freq=	MV	Frequency
645	S =	MV	S (apparent power)
646	F-sy2 =	MV	Frequency fsy2
647	F-diff=	MV	Frequency (difference line-bus)
648	φ-diff=	MV	Angle difference
649	F-sy1 =	MV	Frequency fsy1
679	U1co=	MV	U1co (positive sequence, compounding)
684	U0 =	MV	U0 (zero sequence)
801	Θ/Θtrip =	MV	Temperat. rise for warning and trip
802	Θ/ΘtripL1=	MV	Temperature rise for phase L1
803	Θ/ΘtripL2=	MV	Temperature rise for phase L2
804	Θ/ΘtripL3=	MV	Temperature rise for phase L3

No.	Information	Type of Information	Comments
966	R L1E=	MV	R L1E
967	R L2E=	MV	R L2E
970	R L3E=	MV	R L3E
971	R L12=	MV	R L12
972	R L23=	MV	R L23
973	R L31=	MV	R L31
974	X L1E=	MV	X L1E
975	X L2E=	MV	X L2E
976	X L3E=	MV	X L3E
977	X L12=	MV	X L12
978	X L23=	MV	X L23
979	X L31=	MV	X L31
7731	Φ IL1L2=	MV	PHI IL1L2 (local)
7732	Φ IL2L3=	MV	PHI IL2L3 (local)
7733	Φ IL3L1=	MV	PHI IL3L1 (local)
7734	Φ UL1L2=	MV	PHI UL1L2 (local)
7735	Φ UL2L3=	MV	PHI UL2L3 (local)
7736	Φ UL3L1=	MV	PHI UL3L1 (local)
7737	Φ UIL1=	MV	PHI UIL1 (local)
7738	Φ UIL2=	MV	PHI UIL2 (local)
7739	Φ UIL3=	MV	PHI UIL3 (local)

2.25.5 Differential Protection Values

2.25.5.1 Measured Values of the Differential Protection

The differential, restraint and charging current values of the differential protection which are listed in the following table can be called up at the front of the device, read out via the operating interface using a PC with DIGSI or transferred to a control centre via the system interface.

Table 2-22 Measured values of the differential protection

Measured Values		% Referred to
IDiff _{L1} , IDiff _{L2} , IDiff _{L3}	Calculated differential currents of the three phases	Nominal operational current ¹⁾
IRest _{L1} , IRest _{L2} , IRest _{L3}	Calculated restraint currents of the three phases	Nominal operational current ¹⁾
IDiff _{3I0}	Calculated differential current of the zero sequence system	Nominal operational current ¹⁾
IC _{L1} , IC _{L2} , IC _{L3}	Measured charging currents of the three phases	Nominal operational current

¹⁾ for lines according to address (see Section 2.1.4), for transformers calculated from address (see Section 2.1.4)
 $I_N = S_N / (\sqrt{3} \cdot U_N)$

2.25.5.2 Information List

No.	Information	Type of Information	Comments
7742	IDiffL1=	MV	IDiffL1(% Operational nominal current)
7743	IDiffL2=	MV	IDiffL2(% Operational nominal current)
7744	IDiffL3=	MV	IDiffL3(% Operational nominal current)
7745	IRestL1=	MV	IRestL1(% Operational nominal current)
7746	IRestL2=	MV	IRestL2(% Operational nominal current)
7747	IRestL3=	MV	IRestL3(% Operational nominal current)
7748	Diff3I0=	MV	Diff3I0 (Differential current 3I0)
7880	Ic L1 =	MV	Measured value charging current L1
7881	Ic L2 =	MV	Measured value charging current L2
7882	Ic L3 =	MV	Measured value charging current L3
30654	IdiffREF=	MV	Idiff REF(% Operational nominal current)
30655	IrestREF=	MV	Irest REF(% Operational nominal current)

2.25.6 Remote Measured Values

2.25.6.1 Functional Description

During communication via the protection data interface, the data of the other ends of the protected object can also be read out. For each of the devices, the currents and voltages involved as well as phase shifts between the local and remote measured quantities can be displayed. This is especially helpful for checking the correct and coherent phase allocation and polarity at the different line ends. Furthermore, the device addresses of the other devices are transmitted so that all important data of all ends are available in a substation. All possible data are listed in Table 2-23.

Table 2-23 Operational measured values transmitted from the other ends and compared with the local values

Data		Primary value
Device ADR	Device address of the remote device	(absolute)
I_{L1}, I_{L2}, I_{L3} remote	Phase currents of the remote device	A
I_{L1}, I_{L2}, I_{L3} local	Phase currents of the local device	A
$\varphi(I_{L1}), \varphi(I_{L2}), \varphi(I_{L3})$ remote	Phase angles between the remote and the local phase currents	°
U_{L1}, U_{L2}, U_{L3} remote	Voltages of the remote device	kV
U_{L1}, U_{L2}, U_{L3} local	Voltages of the local device	kV
$\varphi(U_{L1}), \varphi(U_{L2}), \varphi(U_{L3})$ remote	Phase angles between the remote and the local voltages	°

The information overviews below show you which information is available for each device.

2.25.7 Measured Values Constellation

2.25.7.1 Functional Description

The measured values constellation of the possible devices 1 to 6 is shown here using the example of device 1 (see Table 2-24). Information for further devices is given in the Appendix.

The computation of this measured values constellation is also performed during an existing system fault at an interval of approx. 2 s.

Table 2-24 Measured values constellation for device 1

No.	Information	Type of Information	Description
7761	„Relay ID“	MW	Device address of the device
7762	„IL1_opN=“	MW	IL1 (% of operational rated current)
7763	„ΦI L1=“	MW	Angle IL1_remote <-> IL1_local
7764	„IL2_opN=“	MW	IL2 (% of operational rated current)
7765	„ΦI L2=“	MW	Angle IL2_remote <-> IL2_local
7766	„IL3_opN=“	MW	IL3 (% of operational rated current)
7767	„ΦI L3=“	MW	Angle IL3_remote <-> IL3_local
7769	„UL1_opN=“	MW	UL1 (% of operational rated voltage)
7770	„ΦU L1=“	MW	Angle UL1_remote <-> UL1_local
7771	„UL2_opN=“	MW	UL2 (% of operational rated voltage)
7772	„ΦU L2=“	MW	Angle UL2_remote <-> UL2_local
7773	„UL3_opN=“	MW	UL3 (% of operational rated voltage)
7774	„ΦU L3=“	MW	Angle UL3_remote <-> UL3_local

2.25.8 Oscillographic Fault Records

2.25.8.1 Functional Description

The general line protection 7SD5 is equipped with a fault recording function. The instantaneous values of measured values

i_{L1} , i_{L2} , i_{L3} , $3i_0$, u_{L1} , u_{L2} , u_{L3} , $3u_0$ or U_{en} or U_{sy2} or U_x and I_{diffL1} , I_{diffL2} , I_{diffL3} , I_{stabL1} , I_{stabL2} , I_{stabL3}

(voltages depending on the connection) are sampled at intervals of 1 ms (for 50 Hz) and stored in a circulating buffer (20 samples per cycle). For a fault, the data are stored for an adjustable period of time, but no more than 5 seconds per fault. A total of 8 faults can be saved during a total time of 15s. The fault record memory is automatically updated with every new fault, so that no acknowledgment is required. The storage of fault values can be started by pickup of a protective function, as well as via binary input and via the serial interface.

For the differential protection system of a protected object all fault records of all ends are synchronized by time management features. This ensures that all fault records operate with exactly the same time basis. Therefore equal measured values are coincident at all ends.

The data can be retrieved via the serial interfaces by means of a personal computer and evaluated with the protection data processing program DIGSI and the graphic analysis software SIGRA 4. The latter graphically represents the data recorded during the system fault and calculates additional information such as the impedance and r.m.s. values from the measured values. A selection may be made as to whether the measured quantities are represented as primary or secondary values. Binary signal traces (marks) of particular events, e.g. „fault detection“, „tripping“ are also represented.

If the device has a serial system interface, the fault recording data can be passed on to a central device via this interface. The data is evaluated by applicable programs in the central device. The measured quantities are referred to their maximum values, scaled to their rated values and prepared for graphic representation. Binary signal traces (marks) of particular events, e.g. „fault detection“, „tripping“ are also represented.

Where transfer to a central device is possible, the request for data transfer can be executed automatically. It can be selected to take place after each fault detection by the protection, or only after a trip.

2.25.8.2 Setting Notes

General

Other settings pertaining to fault recording (waveform capture) are found in the submenu **Oscillographic Fault Records** submenu of the **Settings** menu. Waveform capture makes a distinction between the trigger instant for an oscillographic record and the criterion to save the record (address 402 **WAVEFORMTRIGGER**). This parameter can only be altered using DIGSI at **Additional Settings**. Normally the trigger instant is the device pickup, i.e. the pickup of an arbitrary protective function is assigned the time. The criterion for saving may be both the device pickup (**Save w. Pickup**) or the device trip (**Save w. TRIP**). A trip command issued by the device can also be used as trigger instant (**Start w. TRIP**), in this case it is also the saving criterion.

An oscillographic fault record includes data recorded prior to the time of trigger, and data after the dropout of the recording criterion. Usually this is also the extent of a fault recording (address 403 **WAVEFORM DATA = Fault event**). If automatic reclosure is implemented, the entire system disturbance — possibly with several reclose attempts — up to the ultimate fault clearance can be stored (address 403 **WAVEFORM DATA = Pow. Sys. Flt.**). This facilitates the representation of the entire system fault history, but also consumes storage capacity during the auto reclosure dead time(s). This parameter can only be altered with DIGSI under **Additional Settings**.

The actual storage time begins at the pre-fault time **PRE. TRIG. TIME** (address 411) ahead of the reference instant, and ends at the post-fault time **POST REC. TIME** (address 412) after the storage criterion has reset. The maximum recording duration to each fault **MAX. LENGTH** is set at address 410.

The fault recording can also be triggered via a binary input, via the keypad on the front of the device or with a PC via the operation or service interface. The storage is then dynamically triggered. The length of the fault recording is set in address 415 **BinIn CAPT. TIME** (maximum length however is **MAX. LENGTH**, address 410). Pre-fault and post-fault times will be included. If the binary input time is set for ∞ , then the length of the record equals the time that the binary input is activated (static), or the **MAX. LENGTH** setting in address 410, whichever is shorter.

2.25.8.3 Settings

Addresses which have an appended "A" can only be changed with DIGSI, under Additional Settings.

Addr.	Parameter	Setting Options	Default Setting	Comments
402A	WAVEFORMTRIGGER	Save w. Pickup Save w. TRIP Start w. TRIP	Save w. Pickup	Waveform Capture
403A	WAVEFORM DATA	Fault event Pow.Sys.Flt.	Fault event	Scope of Waveform Data
410	MAX. LENGTH	0.30 .. 5.00 sec	2.00 sec	Max. length of a Waveform Capture Record
411	PRE. TRIG. TIME	0.05 .. 0.50 sec	0.25 sec	Captured Waveform Prior to Trigger
412	POST REC. TIME	0.05 .. 0.50 sec	0.10 sec	Captured Waveform after Event
415	BinIn CAPT.TIME	0.10 .. 5.00 sec; ∞	0.50 sec	Capture Time via Binary Input

2.25.8.4 Information List

No.	Information	Type of Information	Comments
-	FltRecSta	IntSP	Fault Recording Start
4	>Trig.Wave.Cap.	SP	>Trigger Waveform Capture
30053	Fault rec. run.	OUT	Fault recording is running

2.25.9 Demand Measurement Setup

Long-term average values are calculated by 7SD5 and can be read out with the point of time (date and time of the last update).

2.25.9.1 Long-Term Average Values

The long-term average values of the three phase currents I_{Lx} , the positive sequence component I_1 of the three phase currents, and the real power P, reactive power Q, and apparent power S are calculated within a set period of time and indicated in primary values.

For the long-term average values mentioned above, the length of the time window for averaging and the frequency with which it is updated can be set. The corresponding min/max values can be reset via binary inputs, via the integrated control panel or using the DIGSI software.

2.25.9.2 Setting Notes

Mean values

The time interval for measured value averaging is set at address 2801 **DMD Interval**. The first number specifies the averaging time window in minutes while the second number gives the frequency of updates within the time window. **15 Min.**,

3 Subs, for example, means that time averaging occurs for all measured values that arrive within 15 minutes. The output is updated every $15/3 = 5$ minutes.

At address 2802 **DMD Sync.Time** you can determine whether the averaging time, selected under address 2801, begins on the hour (**full hour**) or is to be synchronized with another point in time (**a quarter past, half hour or a quarter to**).

If the settings for averaging are changed, then the measured values stored in the buffer are deleted, and new results for the average calculation are only available after the set time period has passed.

2.25.9.3 Settings

Addr.	Parameter	Setting Options	Default Setting	Comments
2801	DMD Interval	15 Min., 1 Sub 15 Min., 3 Subs 15 Min., 15 Subs 30 Min., 1 Sub 60 Min., 1 Sub	60 Min., 1 Sub	Demand Calculation Intervals
2802	DMD Sync.Time	On The Hour 15 After Hour 30 After Hour 45 After Hour	On The Hour	Demand Synchronization Time

2.25.9.4 Information List

No.	Information	Type of Information	Comments
833	I1dmd =	MV	I1 (positive sequence) Demand
834	Pdmd =	MV	Active Power Demand
835	Qdmd =	MV	Reactive Power Demand
836	Sdmd =	MV	Apparent Power Demand
963	IL1dmd=	MV	I L1 demand
964	IL2dmd=	MV	I L2 demand
965	IL3dmd=	MV	I L3 demand
1052	Pdmd Forw=	MV	Active Power Demand Forward
1053	Pdmd Rev =	MV	Active Power Demand Reverse
1054	Qdmd Forw=	MV	Reactive Power Demand Forward
1055	Qdmd Rev =	MV	Reactive Power Demand Reverse

2.25.10 Min/Max Measurement Setup

Minimum and maximum values are calculated by the 7SD5 and can be read out with the point of time (date and time of the last update).

2.25.10.1 Reset

The minimum and maximum values can be reset, using binary inputs or by using the integrated control panel or the DIGSI software. Additionally, the reset can be carried out cyclically, beginning with a preset point of time.

2.25.10.2 Setting Notes

The tracking of minimum and maximum values can be reset automatically at a pre-defined point in time. To select this feature, address 2811 **MinMax cycRESET** is set to **YES** (default setting).

The point in time when reset is to take place (the minute of the day in which reset will take place) is set at address 2812 **MiMa RESET TIME**. The reset cycle in days is entered at address 2813 **MiMa RESETCYCLE**, and the beginning date of the cyclical process, from the time of the setting procedure (in days), is entered at address 2814 **MinMaxRES.START**.

2.25.10.3 Settings

Addr.	Parameter	Setting Options	Default Setting	Comments
2811	MinMax cycRESET	NO YES	YES	Automatic Cyclic Reset Function
2812	MiMa RESET TIME	0 .. 1439 min	0 min	MinMax Reset Timer
2813	MiMa RESETCYCLE	1 .. 365 Days	7 Days	MinMax Reset Cycle Period
2814	MinMaxRES.START	1 .. 365 Days	1 Days	MinMax Start Reset Cycle in

2.25.10.4 Information List

No.	Information	Type of Information	Comments
-	ResMinMax	IntSP_Ev	Reset Minimum and Maximum counter
395	>I MinMax Reset	SP	>I MIN/MAX Buffer Reset
396	>I1 MiMaReset	SP	>I1 MIN/MAX Buffer Reset
397	>U MiMaReset	SP	>U MIN/MAX Buffer Reset
398	>UphphMiMaRes	SP	>Uphph MIN/MAX Buffer Reset
399	>U1 MiMa Reset	SP	>U1 MIN/MAX Buffer Reset
400	>P MiMa Reset	SP	>P MIN/MAX Buffer Reset
401	>S MiMa Reset	SP	>S MIN/MAX Buffer Reset
402	>Q MiMa Reset	SP	>Q MIN/MAX Buffer Reset
403	>Idmd MiMaReset	SP	>Idmd MIN/MAX Buffer Reset
404	>Pdmd MiMaReset	SP	>Pdmd MIN/MAX Buffer Reset
405	>Qdmd MiMaReset	SP	>Qdmd MIN/MAX Buffer Reset
406	>Sdmd MiMaReset	SP	>Sdmd MIN/MAX Buffer Reset
407	>Frq MiMa Reset	SP	>Frq. MIN/MAX Buffer Reset
408	>PF MiMaReset	SP	>Power Factor MIN/MAX Buffer Reset
837	IL1d Min	MVT	I L1 Demand Minimum

No.	Information	Type of Information	Comments
838	IL1d Max	MVT	I L1 Demand Maximum
839	IL2d Min	MVT	I L2 Demand Minimum
840	IL2d Max	MVT	I L2 Demand Maximum
841	IL3d Min	MVT	I L3 Demand Minimum
842	IL3d Max	MVT	I L3 Demand Maximum
843	I1dmdMin	MVT	I1 (positive sequence) Demand Minimum
844	I1dmdMax	MVT	I1 (positive sequence) Demand Maximum
845	PdMin=	MVT	Active Power Demand Minimum
846	PdMax=	MVT	Active Power Demand Maximum
847	QdMin=	MVT	Reactive Power Demand Minimum
848	QdMax=	MVT	Reactive Power Demand Maximum
849	SdMin=	MVT	Apparent Power Demand Minimum
850	SdMax=	MVT	Apparent Power Demand Maximum
851	IL1Min=	MVT	I L1 Minimum
852	IL1Max=	MVT	I L1 Maximum
853	IL2Min=	MVT	I L2 Minimum
854	IL2Max=	MVT	I L2 Maximum
855	IL3Min=	MVT	I L3 Minimum
856	IL3Max=	MVT	I L3 Maximum
857	I1 Min=	MVT	Positive Sequence Minimum
858	I1 Max=	MVT	Positive Sequence Maximum
859	UL1EMin=	MVT	U L1E Minimum
860	UL1EMax=	MVT	U L1E Maximum
861	UL2EMin=	MVT	U L2E Minimum
862	UL2EMax=	MVT	U L2E Maximum
863	UL3EMin=	MVT	U L3E Minimum
864	UL3EMax=	MVT	U L3E Maximum
865	UL12Min=	MVT	U L12 Minimum
867	UL12Max=	MVT	U L12 Maximum
868	UL23Min=	MVT	U L23 Minimum
869	UL23Max=	MVT	U L23 Maximum
870	UL31Min=	MVT	U L31 Minimum
871	UL31Max=	MVT	U L31 Maximum
874	U1 Min =	MVT	U1 (positive sequence) Voltage Minimum
875	U1 Max =	MVT	U1 (positive sequence) Voltage Maximum
880	SMin=	MVT	Apparent Power Minimum
881	SMax=	MVT	Apparent Power Maximum
882	fMin=	MVT	Frequency Minimum
883	fMax=	MVT	Frequency Maximum
1040	Pmin Forw=	MVT	Active Power Minimum Forward
1041	Pmax Forw=	MVT	Active Power Maximum Forward
1042	Pmin Rev =	MVT	Active Power Minimum Reverse
1043	Pmax Rev =	MVT	Active Power Maximum Reverse
1044	Qmin Forw=	MVT	Reactive Power Minimum Forward
1045	Qmax Forw=	MVT	Reactive Power Maximum Forward
1046	Qmin Rev =	MVT	Reactive Power Minimum Reverse

No.	Information	Type of Information	Comments
838	IL1d Max	MVT	I L1 Demand Maximum
839	IL2d Min	MVT	I L2 Demand Minimum
840	IL2d Max	MVT	I L2 Demand Maximum
841	IL3d Min	MVT	I L3 Demand Minimum
842	IL3d Max	MVT	I L3 Demand Maximum
843	I1dmdMin	MVT	I1 (positive sequence) Demand Minimum
844	I1dmdMax	MVT	I1 (positive sequence) Demand Maximum
845	PdMin=	MVT	Active Power Demand Minimum
846	PdMax=	MVT	Active Power Demand Maximum
847	QdMin=	MVT	Reactive Power Demand Minimum
848	QdMax=	MVT	Reactive Power Demand Maximum
849	SdMin=	MVT	Apparent Power Demand Minimum
850	SdMax=	MVT	Apparent Power Demand Maximum
851	IL1Min=	MVT	I L1 Minimum
852	IL1Max=	MVT	I L1 Maximum
853	IL2Min=	MVT	I L2 Minimum
854	IL2Max=	MVT	I L2 Maximum
855	IL3Min=	MVT	I L3 Minimum
856	IL3Max=	MVT	I L3 Maximum
857	I1 Min=	MVT	Positive Sequence Minimum
858	I1 Max=	MVT	Positive Sequence Maximum
859	UL1EMin=	MVT	U L1E Minimum
860	UL1EMax=	MVT	U L1E Maximum
861	UL2EMin=	MVT	U L2E Minimum
862	UL2EMax=	MVT	U L2E Maximum
863	UL3EMin=	MVT	U L3E Minimum
864	UL3EMax=	MVT	U L3E Maximum
865	UL12Min=	MVT	U L12 Minimum
867	UL12Max=	MVT	U L12 Maximum
868	UL23Min=	MVT	U L23 Minimum
869	UL23Max=	MVT	U L23 Maximum
870	UL31Min=	MVT	U L31 Minimum
871	UL31Max=	MVT	U L31 Maximum
874	U1 Min =	MVT	U1 (positive sequence) Voltage Minimum
875	U1 Max =	MVT	U1 (positive sequence) Voltage Maximum
880	SMin=	MVT	Apparent Power Minimum
881	SMax=	MVT	Apparent Power Maximum
882	fMin=	MVT	Frequency Minimum
883	fMax=	MVT	Frequency Maximum
1040	Pmin Forw=	MVT	Active Power Minimum Forward
1041	Pmax Forw=	MVT	Active Power Maximum Forward
1042	Pmin Rev =	MVT	Active Power Minimum Reverse
1043	Pmax Rev =	MVT	Active Power Maximum Reverse
1044	Qmin Forw=	MVT	Reactive Power Minimum Forward
1045	Qmax Forw=	MVT	Reactive Power Maximum Forward
1046	Qmin Rev =	MVT	Reactive Power Minimum Reverse

No.	Information	Type of Information	Comments
1047	Qmax Rev =	MVT	Reactive Power Maximum Reverse
1048	PFminForw=	MVT	Power Factor Minimum Forward
1049	PFmaxForw=	MVT	Power Factor Maximum Forward
1050	PFmin Rev=	MVT	Power Factor Minimum Reverse
1051	PFmax Rev=	MVT	Power Factor Maximum Reverse
10102	3U0min =	MVT	Min. Zero Sequence Voltage 3U0
10103	3U0max =	MVT	Max. Zero Sequence Voltage 3U0

2.25.11 Set Points (Measured Values)

SIPROTEC 4 devices allow thresholds (set points) to be set for some measured and metered values. If one of these set points is reached or is exceeded positively or negatively during operation, the device generates an alarm which is displayed as an operational indication. This can be configured to LEDs and/or binary outputs, transferred via the interfaces and interconnected in DIGSI CFC. In addition you can use DIGSI CFC to configure set points for further measured and metered values and configure these via the DIGSI device matrix.

In contrast to the actual protective functions the limit value monitoring function operates in the background; therefore it may not pick up if measured values are changed spontaneously in the event of a fault and if protective functions are picked up. Furthermore, since an indication is only issued when the set point limit is repeatedly exceeded, the limit value monitoring functions do not react as fast as protective functions trip signals.

2.25.11.1 Limit value monitoring

Set points can be set for the following measured and metered values:

- IL1dmd>: Exceeding a preset maximum average value in Phase L1.
- IL2dmd>: Exceeding a preset maximum average value in Phase L2.
- IL3dmd>: Exceeding a preset maximum average value in Phase L3.
- I1dmd>: Exceeding a preset maximum average value of the positive sequence system currents.
- |Pdmd|> : Exceeding a preset maximum average active power.
- |Qdmd|>: Exceeding a preset maximum average reactive power.
- |Sdmd|> : Exceeding a preset maximum average value of the apparent power.
- $|\cos\phi| <$ falling below a preset power factor.

2.25.11.2 Setting Notes

Set Points for Measured Values

The settings are entered under **MEASUREMENT** in the sub-menu **SET POINTS (MV) (MV)** by overwriting the existing values.

2.25.11.3 Information List

No.	Information	Type of Information	Comments
-	IL1dmd>	LV	Upper setting limit for IL1dmd
-	IL2dmd>	LV	Upper setting limit for IL2dmd
-	IL3dmd>	LV	Upper setting limit for IL3dmd
-	I1dmd>	LV	Upper setting limit for I1dmd
-	Pdmd >	LV	Upper setting limit for Pdmd
-	Qdmd >	LV	Upper setting limit for Qdmd
-	Sdmd>	LV	Upper setting limit for Sdmd
-	PF<	LV	Lower setting limit for Power Factor
273	SP. IL1 dmd>	OUT	Set Point Phase L1 dmd>
274	SP. IL2 dmd>	OUT	Set Point Phase L2 dmd>
275	SP. IL3 dmd>	OUT	Set Point Phase L3 dmd>
276	SP. I1dmd>	OUT	Set Point positive sequence I1dmd>
277	SP. Pdmd >	OUT	Set Point Pdmd >
278	SP. Qdmd >	OUT	Set Point Qdmd >
279	SP. Sdmd >	OUT	Set Point Sdmd >
285	cosφ alarm	OUT	Power factor alarm

2.25.12 Energy

Metered values for active and reactive power are determined in the background by the processor system. They can be called up at the front of the device, read out via the operating interface using a PC with DIGSI, or transferred to a central master station via the system interface.

2.25.12.1 Energy Metering

7SD5 integrates the calculated power which is then made available with the measured values. The components as listed in table 2-25 can be read out. The signs of the operating values depend on the setting at address 1107 **P,Q sign** (see Section 2.25.4 under margin heading „Display of Measured Values“).

Please consider that 7SD5 is primarily a protection device. The accuracy of the metered values depends on the instrument transformers (normally protection core) and the device tolerances. The metering is therefore not suited for billing metering.

The counters can be reset to zero or any initial value (see also SIPROTEC 4 System Description).

Table 2-25 Operational metered values

Measured values		Primary
W_p+	Active power, output	kWh, MWh, GWh
W_p-	Active power, input	kWh, MWh, GWh
W_q+	Reactive power, output	kVARh, MVARh, GVARh
W_q-	Reactive power, input	kVARh, MVARh, GVARh

2.25.12.2 Setting Notes

Retrieving parameters

The SIPROTEC® System Description describes in detail how to read out the statistical counters via the device front panel or DIGSI. The values are added up in direction of the protected object, provided the direction was set as „forward“ (address 201).

2.25.12.3 Information List

No.	Information	Type of Information	Comments
-	Meter res	IntSP_Ev	Reset meter
888	Wp(puls)	PMV	Pulsed Energy Wp (active)
889	Wq(puls)	PMV	Pulsed Energy Wq (reactive)
916	WpΔ=	-	Increment of active energy
917	WqΔ=	-	Increment of reactive energy
924	Wp+=	MVMV	Wp Forward
925	Wq+=	MVMV	Wq Forward
928	Wp-=	MVMV	Wp Reverse
929	Wq-=	MVMV	Wq Reverse

2.26 Command Processing

The SIPROTEC 4 7SD5 includes a command editing for initiating switching operations in the system. Control can originate from four command sources:

- Local operation using the keypad on the local user interface of the device,
- Operation using DIGSI,
- Remote operation using a substation automation and control system (e.g. SICAM),
- Automatic functions (e.g. using binary inputs, CFC).

The number of switchgear devices that can be controlled is solely limited by the number of available and required binary inputs and outputs. For the output of control commands it has to be ensured that all the required binary inputs and outputs are configured and provided with the correct properties.

If specific interlocking conditions are needed for the execution of commands, the user can program the device with bay interlocking by means of the user-defined logic functions (CFC). The interlocking conditions of the system can be injected via the system interface and must be allocated accordingly.

The procedure for switching resources is described in the SIPROTEC 4 System Description under Control of Switchgear.

2.26.1 Control Authorization

2.26.1.1 Type of Commands

Commands to the Process

This type of commands are directly output to the switchgear to change their process state:

- Commands for the operation of circuit breakers (asynchronous; or synchronized through integration of the synchronism check and closing control function) as well as commands for the control of isolators and earth switches.
- Step commands, e.g. for raising and lowering transformer taps,
- Setpoint commands with configurable time settings, e.g. to control Petersen coils.

Device-internal Commands

These commands do not directly operate binary outputs. They serve for initiating internal functions, communicating the detection of status changes to the device or for acknowledging them.

- Manual override commands for „manual update“ of information on process-dependent objects such as annunciations and switching states, e.g. if the communication with the process is interrupted. Manually overridden objects are marked as such in the information status and can be displayed accordingly.
- Flagging commands (for „setting“) the data value of internal objects, e.g. switching authority (remote/local), parameter switchovers, transmission blockages and deletion and presetting of metered values.

- Acknowledgment and resetting commands for setting and resetting internal buffers or data stocks.
- Information status commands to set/delete the additional „Information Status“ item of a process object, such as
 - Acquisition blocking,
 - Output blocking.

2.26.1.2 Sequence in the Command Path

Safety mechanisms in the command sequence ensure that a command can only be released after a thorough check of preset criteria has been successfully concluded. Additionally, user-defined interlocking conditions can be configured separately for each device. The actual execution of the command is also monitored after its release. The entire sequence of a command is described briefly in the following.

Checking a Command Path

Please observe the following:

- Command entry, e.g. using the keypad on the local user interface of the device
 - Check password → access rights;
 - Check switching mode (interlocking activated/deactivated) → selection of deactivated interlocking status.
- User configurable interlocking checks:
 - Switching authority;
 - Device position check (set vs. actual comparison);
 - Zone controlled / bay interlocking (logic using CFC);
 - System interlocking (centrally via SICAM);
 - Double operation (interlocking against parallel switching operation);
 - Protection blocking (blocking of switching operations by protection functions);
 - Checking the synchronism before a close command.
- Fixed commands:
 - Internal process time (software watch dog which checks the time for processing the control action between initiation of the control and final close of the relay contact);
 - Configuration in process (if setting modification is in process, commands are rejected or delayed);
 - Equipment present as output;
 - Output block (if an output block has been programmed for the circuit breaker, and is active at the moment the command is processed, then the command is rejected);
 - Component hardware malfunction;

- Command in progress (only one command can be processed at a time for each circuit breaker or switch);
- 1-of-n check (for multiple allocations such as common contact relays or multiple protection commands configured to the same contact it is checked if a command procedure was already initiated for the output relays concerned or if a protection command is present. Superimposed commands in the same switching direction are tolerated).

Command Execution Monitoring

The following is monitored:

- Interruption of a command because of a cancel command,
- Running time monitor (feedback monitoring time).

2.26.1.3 Interlocking

Interlocking can be executed by the user-defined logic (CFC). Switchgear interlocking checks in a SICAM/SIPROTEC 4 system are normally divided in the following groups:

- System interlocking checked by a central control system (for interbay interlocking),
- Zone controlled / bay interlocking checked in the bay device (for the feeder).
- Cross-bay interlocking via GOOSE messages directly between bay controllers and protection relays (with rollout of IEC 61850; inter-relay communication by GOOSE is performed via the EN100 module)

System interlocking is based on the process image in the central device. Zone controlled / bay interlocking relies on the object database (feedback information) of the bay unit (here the SIPROTEC 4 relay) as was determined during configuration (see SIPROTEC 4 System Description).

The extent of the interlocking checks is determined by the configuration and interlocking logic of the relay. For more information on GOOSE, please refer to the SIPROTEC 4 System Description.

Switching objects that require system interlocking in a central control system are marked by a specific parameter inside the bay unit (via configuration matrix).

For all commands, operation with interlocking (normal mode) or without interlocking (test mode) can be selected:

- For local commands by reprogramming the settings with password check,
- For automatic commands, via command processing by CFC and Deactivated Interlocking Recognition,
- For local / remote commands, using an additional interlocking disable command via PROFIBUS.

Interlocked/non-interlocked Switching

The configurable command checks in the SIPROTEC 4 devices are also called „standard interlocking“. These checks can be activated via DIGSI (interlocked switching/tagging) or deactivated (non-interlocked).

De-interlocked or non-interlocked switching means that the configured interlock conditions are not tested.

Interlocked switching means that all configured interlocking conditions are checked within the command processing. If a condition could not be fulfilled, the command will be rejected by an indication with a minus added to it, e.g. „CO–“, followed by an operation response information. The command is rejected if a synchronism check is carried out before closing and the conditions for synchronism are not fulfilled. Table 2-

26 shows some types of commands and indications. The indications marked with *) are displayed only in the event logs on the device display; for DIGSI they appear in spontaneous indications.

Table 2-26 Command types and corresponding indications

Type of Command	Control	Cause	Indication
Control issued	Switching	CO	CO+/-
Manual tagging (positive / negative)	Manual tagging	MT	MT+/-
Information state command, Input blocking	Input blocking	ST	ST+/- *)
Information state command, Output blocking	Output blocking	ST	ST+/- *)
Cancel command	Cancel	CA	CA+/-

The plus sign indicated in the message is a confirmation of the command execution: The command output has a positive result, as expected. A minus sign means a negative, i.e. an unexpected result; the command was rejected. Figure 2-225 shows an example in the operational indications command and feedback of a positively run switching action of the circuit breaker.

The check of interlocking can be programmed separately for all switching devices and tags that were set with a tagging command. Other internal commands such as overriding or abort are not tested, i.e. are executed independently of the interlockings.

EVENT LOG	
19.06.01 11:52:05,625	Q0 CO+ Close
19.06.01 11:52:06,134	Q0 FB+ Close

Figure 2-225 Example of an operational indication for switching circuit breaker 52

Standard Interlocking

The standard interlocking includes the checks for each switchgear which were set during the configuration of inputs and outputs, see SIPROTEC 4 System Description.

An overview for processing the interlocking conditions in the relay is shown in Figure 2-226.

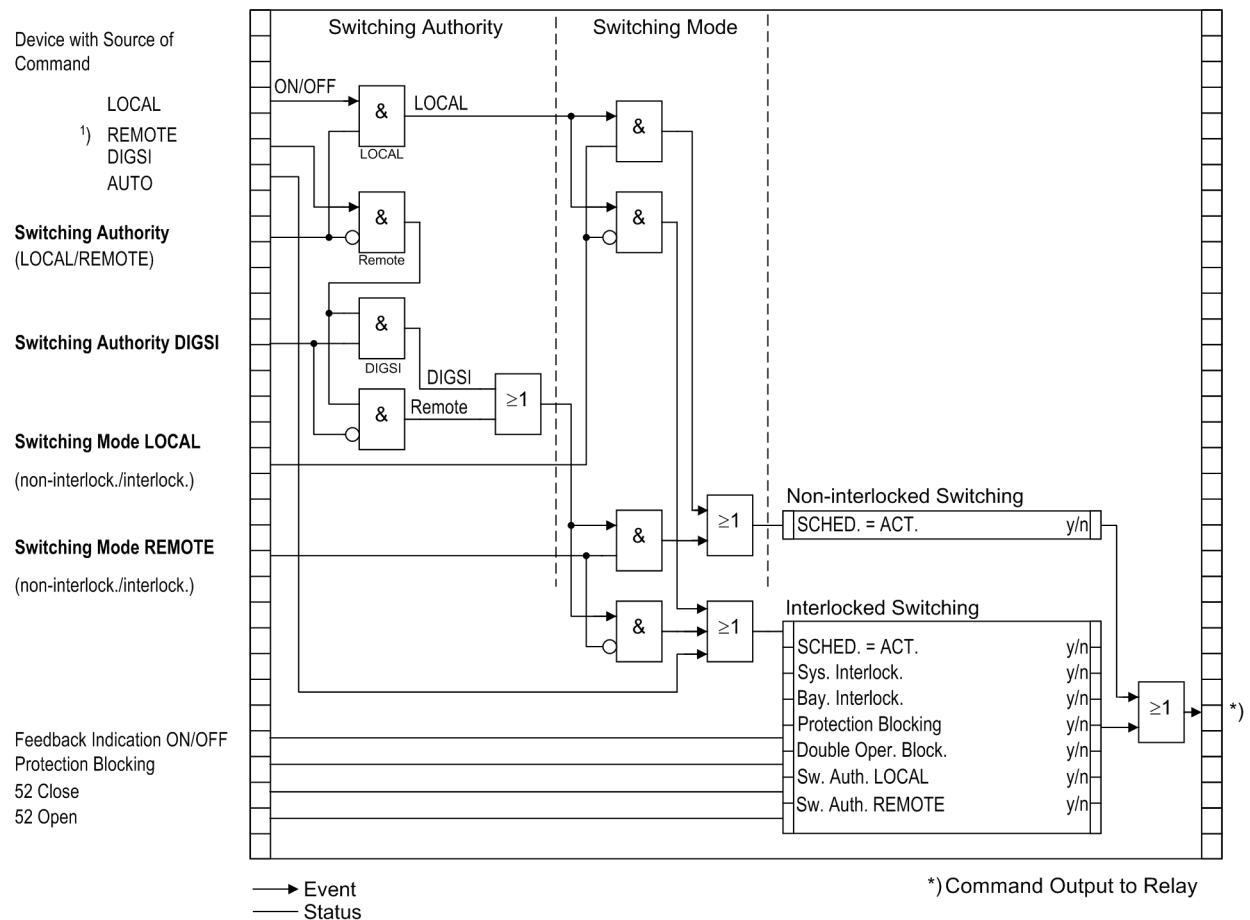


Figure 2-226 Standard interlockings

1) Source of Command REMOTE includes LOCAL.

LOCAL Command using substation controller

REMOTE Command via telecontrol station to power system management and from power system management to the device)

The display shows the configured interlocking reasons. The are marked by letters as explained in Table 2-27.

Table 2-27 Interlocking Commands

Interlocking Commands	Command	Display
Switching Authority	L	L
System Interlocking	S	S
Bay Interlocking	Z	Z
SET = ACTUAL (switch direction check)	P	P
Protection Blockage	B	B

Figure 2-227 shows all interlocking conditions (which usually appear in the display of the device) for three switchgear items with the relevant abbreviations explained in Table 2-27. All parameterised interlocking conditions are indicated.

Interlocking	01/03

Q0 Close/Open S - Z P B	
Q1 Close/Open S - Z P B	
Q8 Close/Open S - Z P B	

Figure 2-227 Example of configured interlocking conditions

Control Logic via CFC

For the bay interlocking, an enabling logic can be structured using the CFC. Via specific release conditions the information „released“ or „bay interlocked“ are available, e.g. object „52 Close“ and „52 Open“ with the data values: ON/OFF).

2.26.1.4 Information List

No.	Information	Type of Information	Comments
-	ModeREMOTE	IntSP	Controlmode REMOTE
-	Cntrl Auth	IntSP	Control Authority
-	ModeLOCAL	IntSP	Controlmode LOCAL

2.26.2 Control Device

2.26.2.1 Information List

No.	Information	Type of Information	Comments
-	Breaker	CF_D12	Breaker
-	Breaker	DP	Breaker
-	Disc.Swit.	CF_D2	Disconnect Switch
-	Disc.Swit.	DP	Disconnect Switch
-	EarthSwit	CF_D2	Earth Switch
-	EarthSwit	DP	Earth Switch
-	Brk Open	IntSP	Interlocking: Breaker Open
-	Brk Close	IntSP	Interlocking: Breaker Close
-	Disc.Open	IntSP	Interlocking: Disconnect switch Open
-	Disc.Close	IntSP	Interlocking: Disconnect switch Close
-	E Sw Open	IntSP	Interlocking: Earth switch Open
-	E Sw Cl.	IntSP	Interlocking: Earth switch Close
-	Q2 Op/Cl	CF_D2	Q2 Open/Close
-	Q2 Op/Cl	DP	Q2 Open/Close
-	Q9 Op/Cl	CF_D2	Q9 Open/Close
-	Q9 Op/Cl	DP	Q9 Open/Close
-	Fan ON/OFF	CF_D2	Fan ON/OFF
-	Fan ON/OFF	DP	Fan ON/OFF
31000	Q0 OpCnt=	VI	Q0 operationcounter=
31001	Q1 OpCnt=	VI	Q1 operationcounter=
31002	Q2 OpCnt=	VI	Q2 operationcounter=

No.	Information	Type of Information	Comments
31008	Q8 OpCnt=	VI	Q8 operationcounter=
31009	Q9 OpCnt=	VI	Q9 operationcounter=

2.26.3 Process Data

During the processing of commands, independently of the further allocation and processing of indications, command and process feedbacks are sent to the indication processing. These indications contain information on the cause. With the corresponding allocation (configuration) these indications are entered in the event log, thus serving as a report.

A listing of possible operational indications and their meaning, as well as the command types needed for tripping and closing the switchgear or for raising and lowering transformer taps and detailed information are described in the SIPROTEC 4 System Description.

2.26.3.1 Method of Operation

Acknowledgement of Commands to the Device Front

All indications with the source of command LOCAL are transformed into a corresponding response and shown in the display of the device.

Acknowledgement of commands to local/remote/DIGSI

The acknowledgement of indications which relate to commands with the origin "Command Issued = Local/ Remote/DIGSI" are sent back to the initiating point independent of the routing (configuration on the serial digital interface).

The acknowledgement of commands is therefore not executed by a response indication as it is done with the local command but by ordinary command and feedback information recording.

Feedback monitoring

Command processing time monitors all commands with feedback. Parallel to the command, a monitoring time period (command runtime monitoring) is started which checks whether the switchgear has achieved the desired final state within this period. The monitoring time is stopped as soon as the feedback information arrives. If no feedback information arrives, a response „Time Limit Expired“ appears and the process is terminated.

Commands and their feedbacks are also recorded as operational indications. Normally the execution of a command is terminated as soon as the feedback information (FB+) of the relevant switchgear arrives or, in case of commands without process feedback information, the command output resets.

In the feedback, the plus sign means that a command has been positively completed. The command was as expected, in other words positive. The "minus" is a negative confirmation and means that the command was not executed as expected.

Command output/switching relays

The command types needed for tripping and closing of the switchgear or for raising and lowering transformer taps have been defined during the configuration, see also SIPROTEC 4 System Description.

2.26.3.2 Information List

No.	Information	Type of Information	Comments
-	>Door open	SP	>Cabinet door open
-	>CB wait	SP	>CB waiting for Spring charged
-	>Err Mot U	SP	>Error Motor Voltage
-	>ErrCntrlU	SP	>Error Control Voltage
-	>SF6-Loss	SP	>SF6-Loss
-	>Err Meter	SP	>Error Meter
-	>Tx Temp.	SP	>Transformer Temperature
-	>Tx Danger	SP	>Transformer Danger

2.26.4 Protocol**2.26.4.1 Information List**

No.	Information	Type of Information	Comments
-	SysIntErr.	IntSP	Error Systeminterface



Mounting and Commissioning

3

This chapter is primarily intended for experienced commissioning engineers. The commissioning engineer must be familiar with the commissioning of protection and control systems, with the management of power systems and with the relevant safety rules and guidelines. Under certain circumstances adaptations of the hardware to the particular power system data may be necessary. The primary tests require the protected object (line, transformer etc.) to carry load.

3.1	Mounting and Connections	486
3.2	Checking Connections	515
3.3	Commissioning	521
3.4	Final Preparation of the Device	559

3.1 Mounting and Connections

General



WARNING!

Warning of improper transport, storage, installation, and application of the device.

Non-observance can result in death, personal injury or substantial property damage.

Trouble free and safe use of this device depends on proper transport, storage, installation, and application of the device according to the warnings in this instruction manual.

Of particular importance are the general installation and safety regulations for work in a high-voltage environment (for example, VDE, IEC, EN, DIN, or other national and international regulations). These regulations must be observed.

3.1.1 Configuration Information

Prerequisites

For installation and connections the following conditions must be met:

The rated device data has been tested as recommended in the SIPROTEC 4 System Description and their compliance with the Power System Data is verified.

Connection Variants

General Diagrams are shown in Appendix A.2. Connection examples for current transformer and voltage transformer circuits are provided in Appendix A.3. It must be checked that the setting of the **P.System Data 1**, Section 2.1.2.1 2.1.2.1, was made in accordance to the device connections.

Currents

In Appendix A.3 examples for the possibilities of the current transformer connections in dependence on network conditions are displayed.

For normal connection, address 220 **I4 transformer = In prot. line** must be set and furthermore, address 221 **I4/Iph CT = 1.000**.

When using separate earth current transformers, address 220 **I4 transformer = In prot. line** must be set. The settings value of the address 221 **I4/Iph CT** may deviated from **1**. For information on the calculation, please refer to section 2.1.2.1.

Furthermore, examples for the connection of the earth current of a parallel line (for parallel line compensation) are shown. Address 220 **I4 transformer** must be set **In paral. line** here. The settings value address 221 **I4/Iph CT** may deviate from **1**. For information on the calculation hints, please refer to Section 2.1.2.1 under „Connection of the Currents“.

The other figures show examples for the connection of the earth current of a source transformer. The address 220 **I4 transformer** must be set **IY starpoint** here. Hints regarding the factor 221 **I4/Iph CT** can also be found in Section 2.1.2.1.

Voltages

Connection examples for current and voltage transformer circuits are provided in Appendix A.3.

For the normal connection the 4th voltage measuring input is not used; correspondingly the address must be set to 210 **U4 transformer = Not connected**. The address 211 **Uph / Udelta** does not have any effect on the pickup values of the protective function, but it is used for displaying U_{en} measured values and U_{en} fault record track.

For an additional connection of an e-n-winding of a set of voltage transformers, the address 210 **U4 transformer = Udelta transf.** must be set. The setting value of the address 211 **Uph / Udelta** depends on the transformation ratio of the e-n-winding. For additional hints, please refer to Section 2.1.2.1 under "Transformation Ratio".

In further connection examples also the e-n winding of a set of voltage transformers is connected, in this case, however of a central set of transformers at a busbar. For more information refer to the previous paragraph.

Further figures show examples for the additional connection of a different voltage, in this case the busbar voltage (e.g. for voltage protection or synchronism check). For the voltage protection the address 210 **U4 transformer = Ux transformer** has to be set, **U4 transformer = U_{sy2} transf.** for the synchronism check. The address 215 **U_{sy1}/U_{sy2} ratio** is only then not equal to 1 when feeder transformer and busbar transformer have a different transformation ratio. .

If there is a power transformer between the set of busbar transformers and the set of feeder transformers, the phase displacement of the voltages for the synchronism check (if used) caused by the transformer has to be taken into consideration. In this case also check the addresses 212 **U_{sy2} connection**, 214 ϕ **U_{sy2}-U_{sy1}** and 215 **U_{sy1}/U_{sy2} ratio**. You will find detailed notes and an example in Section 2.1.2.1 under „Voltage connection“.

Binary Inputs and Outputs

The connections to the power plant depend on the possible allocation of the binary inputs and outputs, i.e. how they are assigned to the power equipment. The preset allocation can be found in the tables in Section A.4 of the Appendix. Check also whether the labelling corresponds to the allocated indication functions.

It is also very important that the feedback components (auxiliary contacts) of the circuit breaker monitored are connected to the correct binary inputs which are assigned for this purpose (if used).

Changing Setting Group

If binary inputs are used to change setting groups, please observe the following:

- To enable the control of 4 possible setting groups 2 binary inputs have to be available. One binary input must be set for „>Set Group Bit0“, the other input for „>Set Group Bit1“.
- To control two setting groups, one binary input set for „>Set Group Bit0“ is sufficient since the binary input „>Set Group Bit1“, which is not assigned, is considered to be not controlled.
- The status of the signals controlling the binary inputs to activate a particular setting group must remain constant as long as that particular group is to remain active.

The following Table shows the relationship between binary inputs and the setting groups A to D. Principal connection diagrams for the two binary inputs are illustrated in the following Figure 3-1. The Figure illustrates an example in which both Set Group Bits 0 and 1 are configured to be controlled (actuated) when the associated binary input is energized (high).

Table 3-1 Changing setting groups with binary inputs

Binary Input		Active settings group
>Set Group Bit 0	>Set Group Bit 1	
Not energized	Not energized	Group A
Energized	Not energized	Group B
Not energized	Energized	Group C
Energized	Energized	Group D

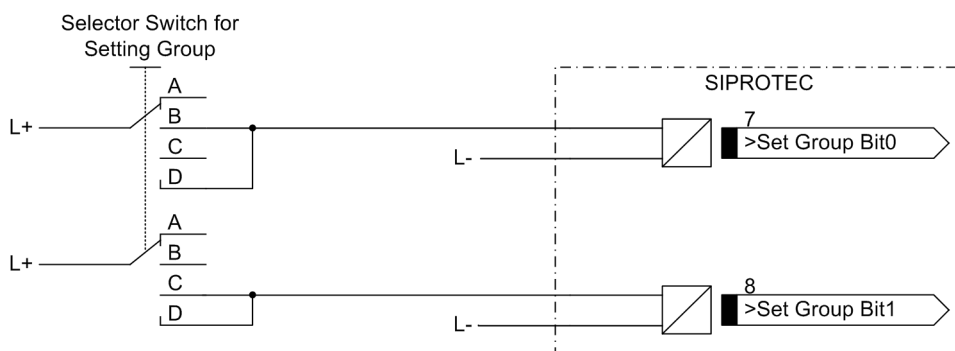


Figure 3-1 Connection diagram (example) for setting group switching with binary inputs

Trip Circuit Monitoring

It must be noted that two binary inputs or one binary input and one substitute resistor R must be connected in series. The pickup threshold of the binary inputs must therefore be substantially below half the rated control DC voltage.

If two binary inputs are used for the trip circuit supervision, these binary inputs must be isolated, i.o.w. not be communed with each other or with another binary input.

If one binary input is used, a bypass resistor R must be used (refer to Figure 2-205). The resistor R is inserted into the circuit of the second circuit breaker auxiliary contact (Aux2), to facilitate the detection of a malfunction also when the first circuit breaker auxiliary contact (Aux1) is open and the trip contact has dropped out. The value of this resistor must be such that in the circuit breaker open condition (therefore Aux1 is open and Aux2 is closed) the circuit breaker trip coil (TC) is no longer picked up and binary input (BI1) is still picked up if the command relay contact is open.#

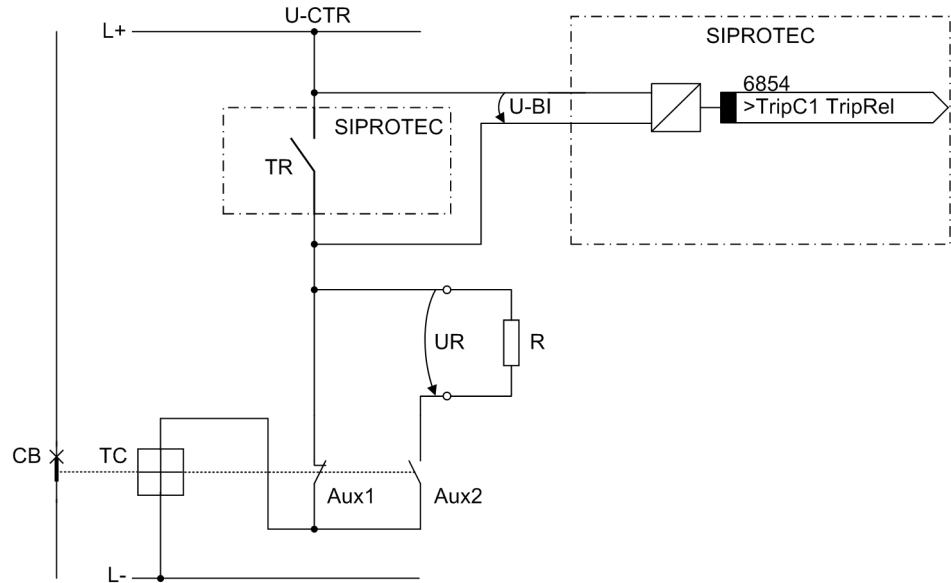


Figure 3-2 Principle of the trip circuit supervision with one binary input

TR	Trip relay contact
CB	Circuit breaker
TC	Circuit breaker trip coil
Aux1	Circuit breaker auxiliary contact (NC contact)
Aux2	Circuit breaker auxiliary contact (NO contact)
U-CTR	Control voltage for trip circuit
U-BI	Input voltage of binary input
R	Equivalent resistor
UR	Voltage across the equivalent resistor

This results in an upper limit for the resistance dimension, R_{\max} , and a lower limit R_{\min} , from which the optimal value of the arithmetic mean R should be selected:

$$R = \frac{R_{\max} + R_{\min}}{2}$$

In order that the minimum voltage for controlling the binary input is ensured, R_{\max} is derived as:

$$R_{\max} = \left(\frac{U_{\text{CTR}} - U_{\text{BI min}}}{I_{\text{BI (High)}}} \right) - R_{\text{TC}}$$

To keep the circuit breaker trip coil not energized in the above case, R_{\min} is derived as:

$$R_{\min} = R_{\text{TC}} \cdot \left(\frac{U_{\text{CTR}} - U_{\text{TC (LOW)}}}{U_{\text{TC (LOW)}}} \right)$$

$I_{\text{BI (HIGH)}}$	Constant current with activated BI (= 1.8 mA)
$U_{\text{BI min}}$	Minimum control voltage for BI 17 V for delivery setting for nominal voltages of 24/48/60 V; 73 V for delivery setting for nominal voltages of 110/125/220/250 V; 154 V for delivery setting for nominal voltages of 220/250 V
U_{CTR}	Control voltage for trip circuit

R_{TC}	DC resistance of circuit breaker trip coil
$U_{CBTC (LOW)}$	Maximum voltage on the circuit breaker trip coil that does not lead to tripping

If the calculation results that $R_{max} < R_{min}$, then the calculation must be repeated, with the next lowest switching threshold $U_{BI min}$, and this threshold must be implemented in the relay using plug-in jumpers (see Section „Hardware Modifications“).

For the power consumption of the resistance the following applies:

$$P_R = I^2 \cdot R = \left(\frac{U_{CTR}}{R + R_{CBTC}} \right)^2 \cdot R$$

Example:

$I_{BI (HIGH)}$	1.8 mA (SIPROTEC 4 7SD5)
$U_{BI min}$	17 V for delivery setting for nominal voltages of 24/48/60 V (from the device 7SD5); 73 V for delivery setting for nominal voltages 110/125/220/250 V (from the device 7SD5); 154 V for delivery setting for nominal voltages 220/250 V (from the device 7SD5)
U_{ST}	110 V (system / trip circuit)
R_{CBTC}	500 Ω (system / trip circuit)
$U_{CBTC (LOW)}$	2 V (system / trip circuit)

$$R_{max} = \left(\frac{110 \text{ V} - 17 \text{ V}}{1.8 \text{ mA}} \right) - 500 \text{ } \Omega = 51.17 \text{ } \Omega$$

$$R_{min} = 500 \text{ } \Omega \cdot \left(\frac{110 \text{ V} - 2 \text{ V}}{2 \text{ V}} \right) = 27 \text{ k}\Omega$$

$$R = \frac{R_{max} + R_{min}}{2} = 39.1 \text{ k}\Omega$$

The closest standard value of 39 k Ω is selected; the power is:

$$P_R = \left(\frac{110 \text{ V}}{39 \text{ k}\Omega + 0.5 \text{ k}\Omega} \right)^2 \cdot 39 \text{ k}\Omega \geq 0.3 \text{ W}$$

Pilot Wires for Protection

If the distance protection is supplemented with the transmission scheme **Teleprot. Dist. = Pilot wire comp** (address 121), it has to be secured that the quiescent state loop is supplied with enough auxiliary voltage. The function itself is described in section 2.7.

Please take note that both binary inputs are interconnected and connected in series with the resistor of the pilot wires. Therefore the loop voltage must not be too low or the pickup voltage of the binary inputs must not be too high. In general, the lowest threshold (17 V) must be selected for auxiliary voltages of 24 V to 60 V, the threshold of 73 V has to be selected for voltages of 110 V to 125 V and the threshold of 154 V for voltages of 220 V to 250 V.

Due to the low current consumption of the binary inputs it may be necessary to additionally burden the pilot wire loop with an external shunt connected resistor so that the binary inputs are not blocked by the wire capacitance after an interruption of the loop. Alternatively, auxiliary relay combinations can be connected.

Pilot wires used as cable connections between stations must always be checked on the impact due to high voltage. The wires of the pilot cables must stand external strains.

The worst electrical fault that may occur to the pilot cables is generated in the pilot wire system by an earth fault. The short-circuit current induces a longitudinal voltage into the pilot wires lying parallel to the high voltage line. The induced voltage can be reduced by well-conductive cable jackets and by armouring (low reduction factor, for both high voltage cable and pilot cables).

The induced voltage can be calculated with the following formula:

$$U_i = 2 \pi f \cdot M \cdot I_{k1} \cdot l \cdot r_1 \cdot r_2$$

with

U_i = induced longitudinal voltage in V,

f = nominal frequency in Hz,

M = mutual inductance between power line and pilot wires in mH/km,

I_{k1} = maximum earth fault current via power line in kA,

l = distance of the energy line with parallel pilot wires in km,

r_1 = reduction factor of power cable ($r_1 = 1$ for overhead lines),

r_2 = reduction factor of pilot wire cable.

The calculated induced voltage should neither exceed 60% of the test voltage of the pilot wires nor of the device connections (binary inputs and outputs). Since the latter were produced for a test voltage of 2kV, only a maximum induced longitudinal voltage of 1.2kV is allowed.

3.1.2 Hardware Modifications

3.1.2.1 General

A subsequent adaptation of hardware to the power system conditions can be necessary for example with regard to the control voltage for binary inputs or termination of bus-capable interfaces. Follow the procedure described in this section, whenever hardware modifications are carried out.

Auxiliary voltage

There are different input voltage ranges for the auxiliary voltage (refer to the Ordering Information in Appendix A.1). The power supplies of the variants for 60/110/125 VDC and 110/125/220/250 VDC, 115 VAC are largely interchangeable by modifying the position of the jumpers. The assignment of these jumpers to the nominal voltage ranges and the spatial layout on the PCB are described further below at „Input/Output Module C-I/O-1“ and „Input/Output Module C-I/O-10“. On delivery of the device, all jumpers are correctly arranged according to the indications on the rating plate and do not need to be changed.

Life contact

The life contact of the device is a changeover contact from which either the NC contact or the NO contact can be connected to the device terminals via a plug-in jumper (X40). The assignment of the jumper to the contact type and the arrangement of the jumper are described in the following section under the margin heading „Input/output module C-I/O-10“.

Nominal currents

The input transformers of the device are set to a nominal current of 1 A or 5 A by burden switching. The jumpers are factory set according to the name-plate sticker. The assignment of the jumpers to the nominal current and the spatial arrangement of the jumpers are described in the following section under the margin heading „Input/output module C-I/O-2“. All jumpers must be set for one nominal current, i.e. one jumper (X61 to X64) for each input transformer and additionally the common jumper X60.



Note

If nominal current ratings are changed exceptionally, then the new ratings must be registered in address 206 **CT SECONDARY** in the power system data (see Section 2.1.2.1).

Control Voltage for Binary Inputs

When the device is delivered the binary inputs are set to operate with a voltage that corresponds to the nominal voltage of the power supply. If the nominal values differ from the power system control voltage, it may be necessary to change the switching threshold of the binary inputs.

A jumper position has to be changed to adjust the switching threshold of a binary input. The assignment of the jumpers to the binary inputs and the spatial arrangement of the jumpers are described in the following section under the margin heading „Input/output module C-I/O-1“.



Note

If binary inputs are used for trip circuit supervision, note that two binary inputs (or a binary input and a substitute resistor) are connected in series. The switching threshold must lie clearly below half of the nominal control voltage.

Type of Contact for Output Relays

Input/output boards can have relays that are equipped with changeover contacts. For this it is necessary to alter a jumper. The following sections at „Switching Elements on Printed Circuit Boards“ explain for which relays on which boards this applies.

Exchanging Interfaces

Only serial interfaces of devices for panel and cubicle mounting as well as of mounting devices with detached operator panel are replaceable. The following section under margin heading „Replacing Interface Modules“ describes which interfaces can be exchanged, and how this is done.

Terminating interfaces with bus capability

If the device is equipped with a serial RS485 interface or Profibus, they must be terminated with resistors at the last device on the bus to ensure reliable data transmission. For this purpose, terminating resistors are provided on the interface board that can be connected with jumpers. The spatial arrangement of the jumpers on the interface modules is described in the following sections under the margin settings „RS485 Interface“ and „Profibus Interface“. Both jumpers must always have the same setting.

The termination resistors are disabled on delivery.

Spare parts

The backup battery receives the data stored in the battery-backed RAM in the event that the voltage supply fails. Their spatial arrangement is shown in the figure of the processor board (Figure 3-10). The miniature fuse of the internal power supply is located on the board C-I/O-1 (Figure 3-5). The ratings of the fuse are printed on the board next to the fuse. When replacing the fuse, please observe the guidelines given in the SIPROTEC 4 System Description in the chapter „Maintenance“ and „Repair“.

3.1.2.2 Disassembly**Work on the printed circuit boards****Note**

It is assumed for the following steps that the device is not operative.

**Caution!****Caution when changing jumper settings that affect nominal values of the device:**

As a consequence, the ordering number (MLFB) and the ratings on the name plate no longer match the actual device properties.

Where such changes are necessary in exceptional cases, they **MUST** be marked clearly and visibly on the device. Self-adhesive stickers are available that can be used as supplementary name plate.

To perform work on the printed circuit boards, such as checking or moving switching elements or exchanging modules, proceed as follows:

- Prepare your workplace: prepare a suitable underlay for electrostatically sensitive devices (ESD). Also the following tools are required:
 - screwdriver with a 5 to 6 mm wide tip,
 - a crosstip screwdriver for Pz size 1,
 - a 5 mm socket wrench.
- Unfasten the screw-posts of the D-subminiature connectors on the back panel at location „A“. This activity does not apply if the device is for surface mounting.
- If the device has more communication interfaces on the rear beside the interface at location „A“, the screws located diagonally to the interfaces must be removed. This activity does not apply if the device is designed for surface mounting.
- Remove the covers on the front panel and loosen the screws which can then be accessed.
- Remove the front panel and tilt it to the side.

Work on the plug connectors



Caution!

Mind electrostatic discharges:

Non-observance can result in minor personal injury or property damage.

In order to avoid electrotrastic discharges when handling with plug connectors first touch an earthed metal surface .

Do not plug or unplug interface connectors under voltage!

The allocation of the boards for housing size $1/2$ is shown in Figure 3-3 and for housing size $1/1$ in Figure 3-4.

- Disconnect the plug connector of the ribbon cable between the front cover and the processor board C-CPU-1 (No. 1) at the front cover side. For this purpose push apart the top and bottom latches at the plug connector so that the ribbon cable connector is pressed out.
- Disconnect the plug connector of the ribbon cable between processor board C-CPU-1 (No. 1 in Figure 3-3 or 3-4) and the I/O input/output modules (depending on order variant No. 2 to No. 3 in Figure 3-3 or No. 2 to 4 in Figure 3-4).
- Remove the boards and place them on a surface suitable for electrostatically sensitive devices (ESD). In the case of the device variant for panel surface mounting, please be aware of the fact a certain amount of force is required in order to remove the C-CPU-1 module due to the existing plug connectors.
- Check the jumpers according to Figures 3-5 to 3-13 and the following information. Change or remove the jumpers if necessary.

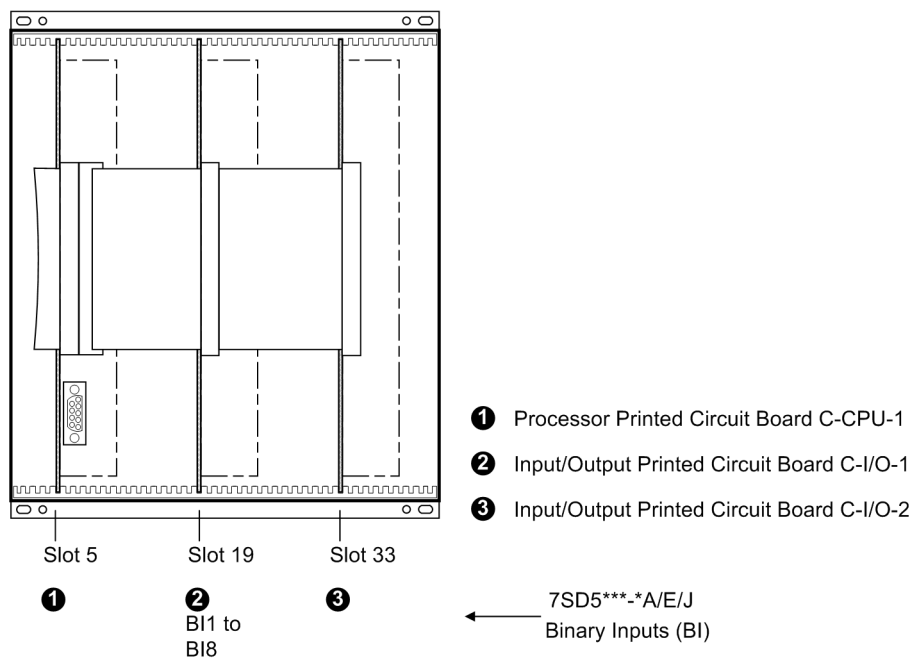


Figure 3-3 Front view with housing size $1/2$ after removal of the front cover (simplified and scaled down)

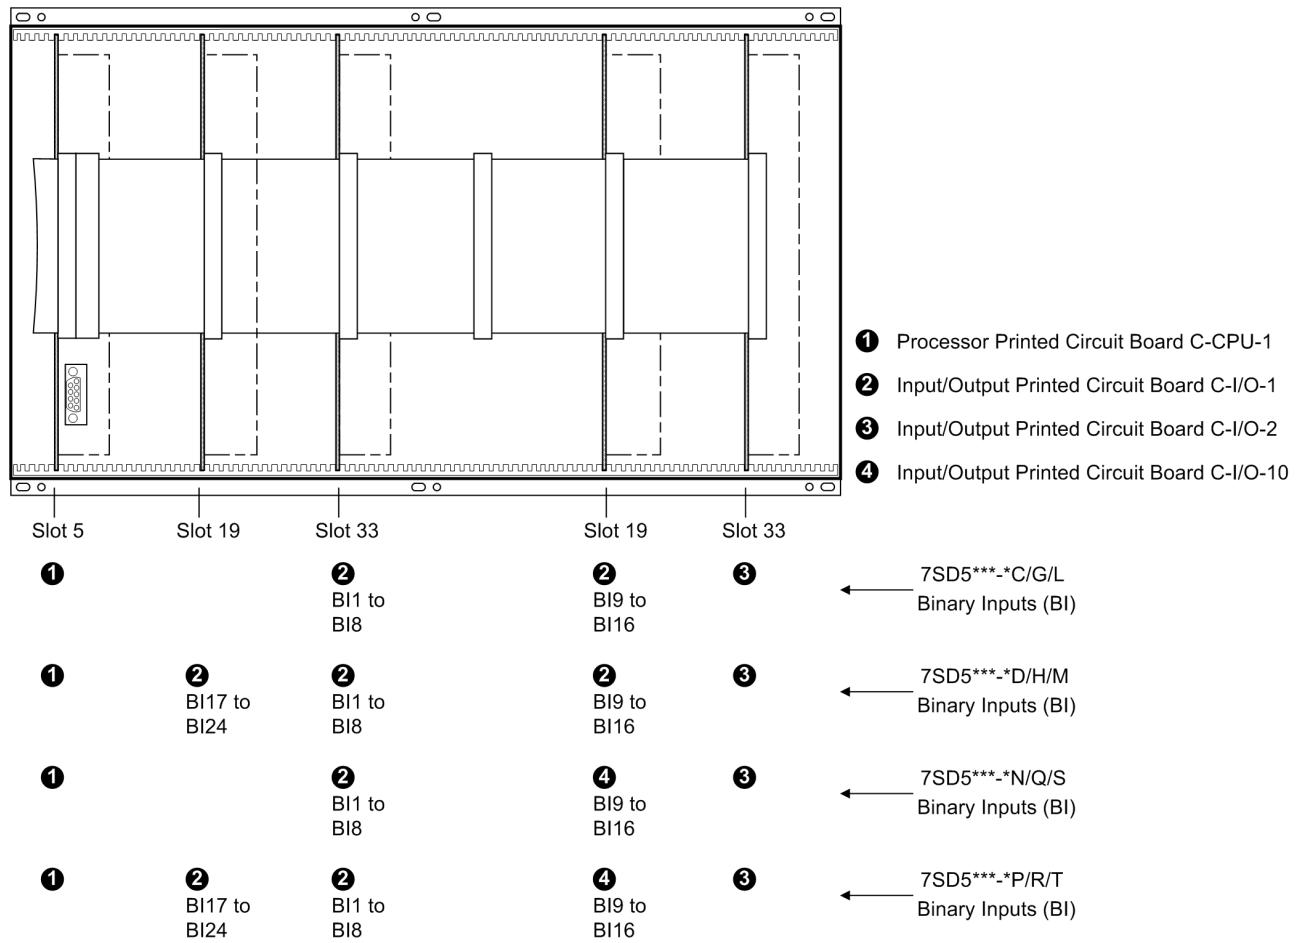


Figure 3-4 Front view with housing size $\frac{1}{4}$ after removal of the front cover (simplified and scaled down)

3.1.2.3 Switching Elements on Printed Circuit Boards

Input/output
module C-I/O-1

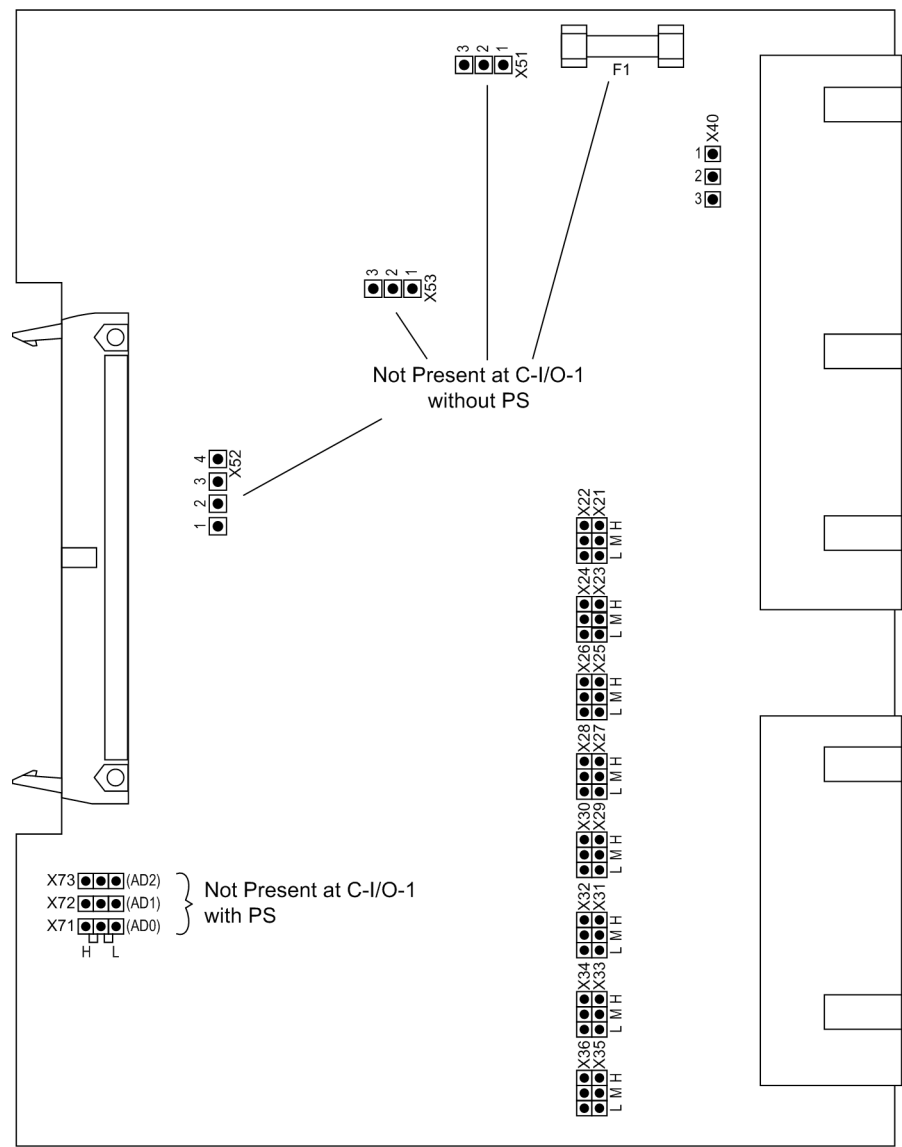


Figure 3-5 Input/output module C-I/O-1 with representation of the jumpers required for checking the setting

The power supply is situated

- On the input/output board C-I/O-1 (No. 2 in Figure 3-3, slot 19) for housing size $\frac{1}{2}$,
- On the input/output board C-I/O-1 (No. 2 in Figure 3-4, slot 33 left) for housing size $\frac{1}{1}$,

The preset nominal voltage of the integrated power supply is checked according to Table 3-2, the quiescent state of the life contact is checked according to Table 3-3.

Table 3-2 Jumper setting for the nominal voltage of the integrated **Power Supply** on the input/output board C-I/O-1

Jumper	Nominal Voltage		
	60/110/125 VDC	110/125/220/250 VDC 115 VAC	24/48 VDC
X51	1-2	2-3	Jumpers X51 to X53 are not used
X52	1-2 and 3-4	2-3	
X53	1-2	2-3	
Fuse	T2H250V		T4H250V

Table 3-3 Jumper settings of the **Life Contact** on the input/output board C-I/O-1

Jumper	Open in Quiescent State (NO)	Closed in Quiescent State (NC)	Factory Setting
X40	1-2	2-3	2-3

Depending on the device version the contacts of some binary outputs can be changed from normally open to normally closed (see Appendix, under Section A.2).

- In versions 7SD5***-**D/H/M** (housing size $\frac{1}{1}$ with 32 binary outputs) this is valid for the binary outputs BO16 and BO24 (Figure 3-4, slot 19 left and right);
- In versions 7SD5***-**C/G/L** (housing size $\frac{1}{1}$ with 24 binary outputs) this is valid for the binary output BO16 (Figure 3-4, slot 19 right);
- In versions 7SD5***-**P/R/T** (housing size $\frac{1}{1}$ with 32 binary outputs and command acceleration) this is valid for the binary output BO24 (Figure 3-4, slot 19 left).

Table 3-4 shows the jumper settings for the contact mode.

Table 3-4 Jumper settings for contact mode of the binary outputs BO16 and BO24 on the input/output board C-I/O-1

Device 7SD5***-*	Printed Circuit Board	For	Jumper	Open in Quiescent State (NO)	Closed in Quiescent State (NC)	Factory Setting
D/H/M	Slot 19 left side	BO 16	X40	1-2	2-3	1-2
	Slot 19 right side	BO 24	X40	1-2	2-3	1-2
C/G/L	Slot 19 right side	BO 16	X40	1-2	2-3	1-2
P/R/T	Slot 19 left side	BO 24	X40	1-2	2-3	1-2

Checking the control voltages of the binary inputs:

BI1 to BI8 (with housing size $\frac{1}{2}$) according to Table 3-5,

BI1 to BI24 (with housing size $\frac{1}{1}$ depending on version) according to Table 3-7, under margin heading „Input/output module C-I/O-10 up to release /EE “

Table 3-5 Jumper settings of the **control voltages** of the binary inputs BI1 to BI8 on the input/output module C-I/O-1 with housing size $1\frac{1}{2}$

Binary inputs slot 19	Jumper	Threshold 17 V ¹⁾	Threshold 73 V ²⁾	Threshold 154 V ³⁾
BI1	X21/X22	L	M	H
BI2	X23/X24	L	M	H
BI3	X25/X26	L	M	H
BI4	X27/X28	L	M	H
BI5	X29/X30	L	M	H
BI6	X31/X32	L	M	H
BI7	X33/X34	L	M	H
BI8	X35/X36	L	M	H

¹⁾ Factory settings for devices with rated supply voltages of 24 VDC to 125 VDC

²⁾ Factory settings for devices with rated supply voltages of 110 VDC to 250 VDC and 115 VAC

³⁾ Factory settings for devices with rated supply voltages of 220 VDC to 250 VDC and 115 VAC

Table 3-6 Jumper setting of the **control voltages** of the binary inputs BI1 to BI24 on the input/output module C-I/O-1 or C-I/O-10 up to release 7SD52/53 .../EE with housing size $1\frac{1}{4}$

Binary inputs			Jumper	Threshold 17 V ¹⁾	Threshold 73 V ²⁾	Threshold 154 V ³⁾
Slot 33 left side	Slot 19 right side	Slot 19 left side				
BE1	BE9	BE17	X21/X22	L	M	H
BE2	BE10	BE18	X23/X24	L	M	H
BE3	BE11	BE19	X25/X26	L	M	H
BE4	BE12	BE20	X27/X28	L	M	H
BE5	BE13	BE21	X29/X30	L	M	H
BE6	BE14	BE22	X31/X32	L	M	H
BE7	BE15	BE23	X33/X34	L	M	H
BE8	BE16	BE24	X35/X36	L	M	H

¹⁾ Factory settings for devices with rated supply voltages of 24 VDC to 125 VDC

²⁾ Factory settings for devices with rated supply voltages of 110 VDC to 250 VDC and 115 VAC

³⁾ Factory settings for devices with rated supply voltages of 220 VDC to 250 VDC and 115 VAC

Two different releases of the input/output module CI/O-10 are available. Figure 3-6 shows the layout of the printed circuit board for devices up to release 7SD5 .../EE, figure 3-7 depicts the printed circuit board layout for devices 7SD5 .../FF.

**Input/output
module C-I/O-10 up
to release /EE**

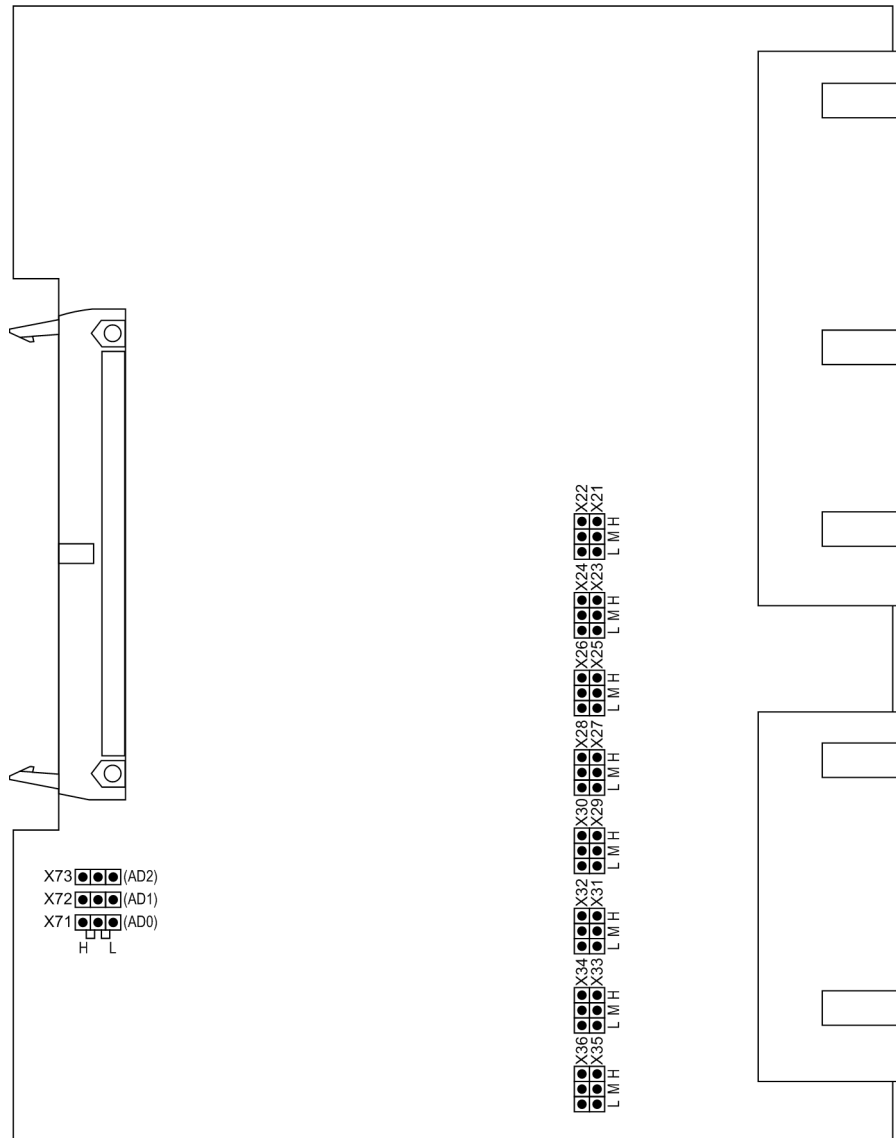


Figure 3-6 Input/output board C-I/O-10 up to release 7SD5.../EE, with representation of jumper settings required for checking configuration settings

Table 3-7 Jumper setting of the **control voltages** of the binary inputs BI1 to BI24 on the input/output module C-I/O-1 or C-I/O-10 up to release 7SD5 .../EE with housing size $1\frac{1}{1}$

Binary inputs			Jumper	Threshold 17 V ¹⁾	Threshold 73 V ²⁾	Threshold 154 V ³⁾
Slot 33 left side	Slot 19 right side	Slot 19 left side				
BI1	BI9	BI17	X21/X22	L	M	H
BI2	BI10	BI18	X23/X24	L	M	H
BI3	BI11	BI19	X25/X26	L	M	H
BI4	BI12	BI20	X27/X28	L	M	H
BI5	BI13	BI21	X29/X30	L	M	H
BI6	BI14	BI22	X31/X32	L	M	H
BI7	BI15	BI23	X33/X34	L	M	H
BI8	BI16	BI24	X35/X36	L	M	H

¹⁾ Factory settings for devices with rated supply voltages of 24 VDC to 125 VDC

²⁾ Factory settings for devices with rated supply voltages of 110 VDC to 250 VDC and 115 VAC

³⁾ Factory settings for devices with rated supply voltages of 220 VDC to 250 VDC and 115 VAC

Table 3-8 Jumper settings of the **module address** of the input/output module C-I/O-1 or C-I/O-10 up to release 7SD5 .../EE with housing size $1\frac{1}{1}$

Jumper	Mounting location	
	Slot 19 left side	Slot 19 right side
X71	H	L
X72	L	L
X73	H	H

**Input/output
module C-I/O-10
release /FF and
higher**

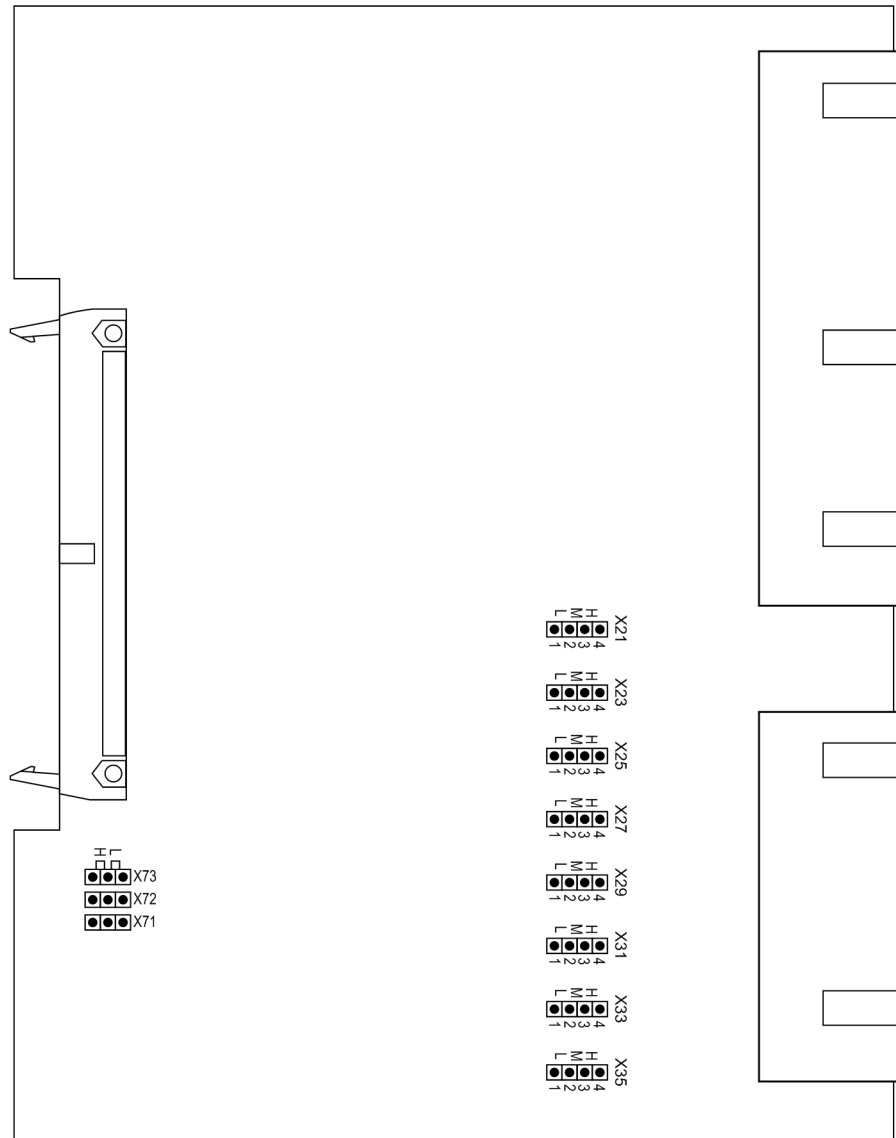


Figure 3-7 Input/output board C-I/O-10 release 7SD5.../FF or higher, with representation of jumper settings required for checking configuration settings

Table 3-9 Jumper setting of the **control voltages** of the binary inputs BI1 to BI24 on the input/output module C-I/O-10 for release 7SD5 .../FF and higher with housing size $1\frac{1}{4}$

Binary inputs Slot 19 right side	Jumper	Threshold 17 V ¹⁾	Threshold 73 V ²⁾	Threshold 154 V ³⁾
BI9	X21	L	M	H
BI10	X23	L	M	H
BI11	X25	L	M	H
BI12	X27	L	M	H
BI13	X29	L	M	H
BI14	X31	L	M	H
BI15	X33	L	M	H
BI16	X35	L	M	H

¹⁾ Factory settings for devices with rated supply voltages of 24 VDC to 125 VDC

²⁾ Factory settings for devices with rated supply voltages of 110 VDC to 250 VDC and 115 VAC

³⁾ Factory settings for devices with rated supply voltages of 220 VDC to 250 VDC and 115 VAC

Table 3-10 Jumper setting of the **module address** of the input/output module C-I/O-10 for release 7SD5 .../FF and higher with housing size $1\frac{1}{4}$

Jumper	Mounting location	
	Slot 19 left side	Slot 19 right side
X71	H	L
X72	L	L
X73	H	H

Input/Output Module C-I/O-2 Release 7SD5 .../EE

Two different releases of the input output module C-I/O-2 are available. For devices up to release 7SD5.../EE the layout of the printed circuit board is shown in Figure 3-8, for devices of release 7SD5.../FF and higher it is shown in Figure 3-9.

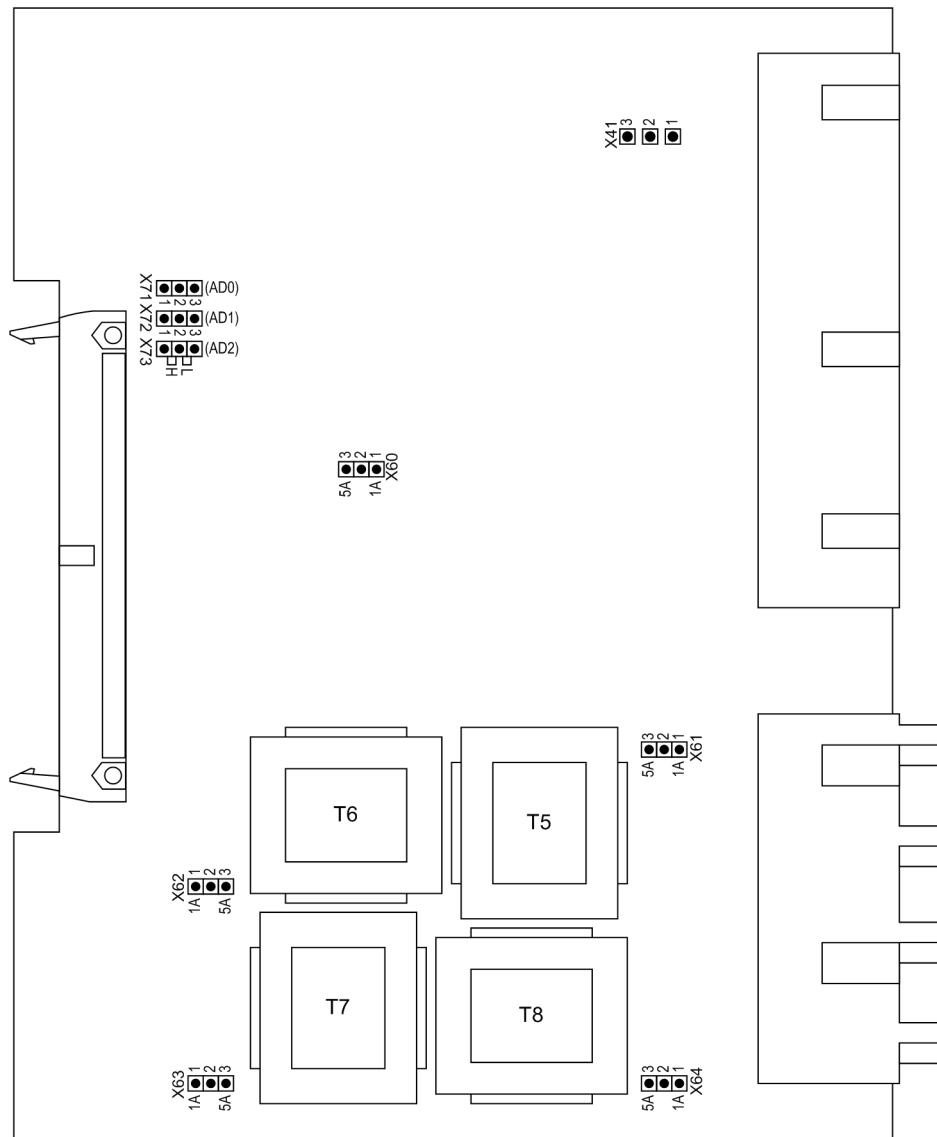


Figure 3-8 Input/output module C-I/O-2 up to release 7SD5.../EE, with representation of the jumper settings required for checking the configuration settings

The contact of the relay for the binary output BO13 can be configured as NO or NC contact (see also General Diagrams in Appendix A, Section A.2):

with housing size $\frac{1}{2}$: No. 3 in Figure 3-3, slot 33,

with housing size $\frac{1}{4}$: No. 3 in Figure 3-4, slot 33 right.

Table 3-11 Jumper setting for contact type of binary output BO13

Jumper	Open in Quiescent State (NO)	Closed in Quiescent State (NC)	Factory Setting
X41	1-2	2-3	1-2

The set nominal current of the current input transformers are checked on the input/output board C-I/O-2. All jumpers must be set for one nominal current, i.e. one jumper (X61 to X64) for each input transformer and additionally the common jumper X60. **But:**

In the version with sensitive earth fault current input (input transformer T8) there is no jumper X64.

Jumpers X71, X72 and X73 on the input/output board C-I/O-2 are used to set the bus address and must not be changed. The following table lists the jumper presets.

Mounting location:

with housing size $\frac{1}{2}$: No. 3 in Figure 3-3, slot 33,

with housing size $\frac{1}{1}$: No. 3 in Figure 3-4, slot 33 right.

Table 3-12 Jumper settings of **Board Address** of the input/output board C-I/O-2

Jumper	Factory Setting
X71	1-2 (H)
X72	1-2 (H)
X73	2-3 (L)

**Input/output
module C-I/O-2
release 7SD5 .../FF
or higher**

This module is available in two configuration variants:

- Variant with normal earth fault detection, PCB number C53207-A324-B50-*
- Variant with sensitive earth fault detection, PCB number C53207-A324-B60-*

A table imprinted on the printed-circuit board indicates the respective PCB number.

The nominal current or measuring range settings are checked on the input/output module C-I/O-2.

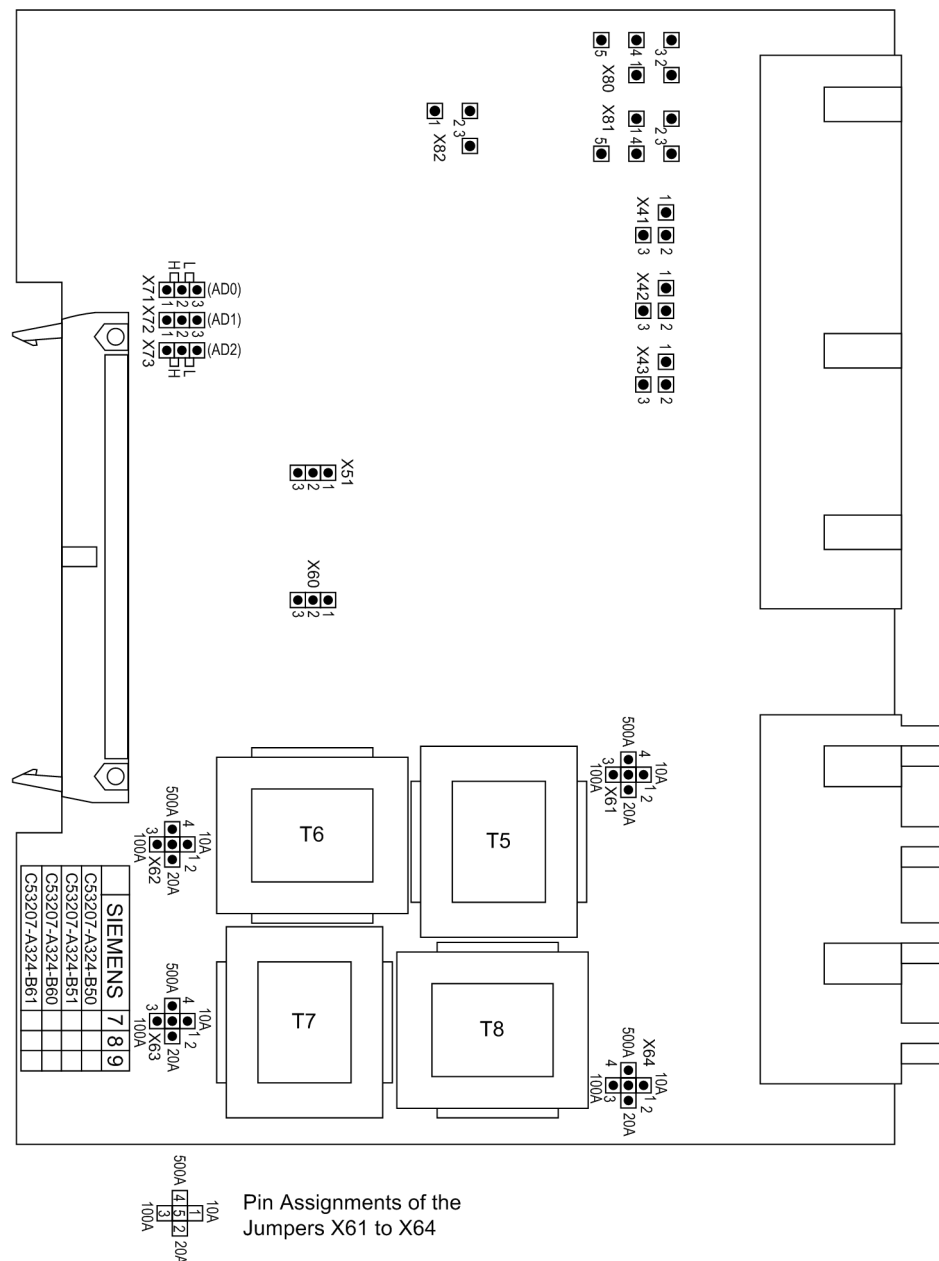


Figure 3-9 C-I/O-2 input/output board release 7SD5** .../FF or higher, with representation of jumper settings required for checking configuration settings

Table 3-13 Jumper setting for **nominal current** or **measuring range**

Jumper	Nominal current 1 A Measuring range 100 A	Nominal current 5 A Measuring range 500 A
X51	1-2	1-2
X60	1-2	2-3
X61	3-5	4-5
X62	3-5	4-5
X63	3-5	4-5
X64 ¹⁾	3-5	4-5

¹⁾ Not for variant with sensitive earth fault detection

Contacts of relays for binary outputs BO13, BO14 and BO15 can be configured as normally open or normally closed contacts (see also General Diagrams in the Appendix).

Table 3-14 Jumper setting for the **contact type** of the relay for BO13, BO14 and BO15

For	Jumper	Open in quiescent state (NO) ¹⁾	Closed in quiescent state (NC)
BO13	X41	1-2	2-3
BO14	X42	1-2	2-3
BO15	X43	1-2	2-3

¹⁾ As-supplied state

The relays for the binary outputs BO8 to BO12 can be connected to common potential, or configured individually for BO8, BO11 and BO12 (BO9 and BO10 are without function in this context) (see also General Diagrams in the Appendix).

Table 3-15 Jumper settings for the configuration of the **common potential** from BO8 to BO11 or for the setting of BO8, BO11 and BO12 as **single relays**

Jumper	BO8 to BO12 connected to common potential ¹⁾	BO8, BO11, BO12 configured as single relays (BO9, BO10 without function)
X80	1-2, 3-4	2-3, 4-5
X81	1-2, 3-4	2-3, 4-5
X82	2-3	1-2

¹⁾ As-supplied state

The jumpers X71, X72 through X73 serve for setting the bus address. Their position may not be changed. The following table shows the preset jumper positions.

Table 3-16 Jumper settings of **module addresses** of the input/output module C-I/O-2

Jumper	Factory setting
X71	1-2 (H)
X72	1-2 (H)
X73	2-3 (L)

3.1.2.4 Interface Modules

Replacing interface modules

The interface modules are located on the processor board C-CPU-1 (No. 1 in Figure 3-3 and 3-4).

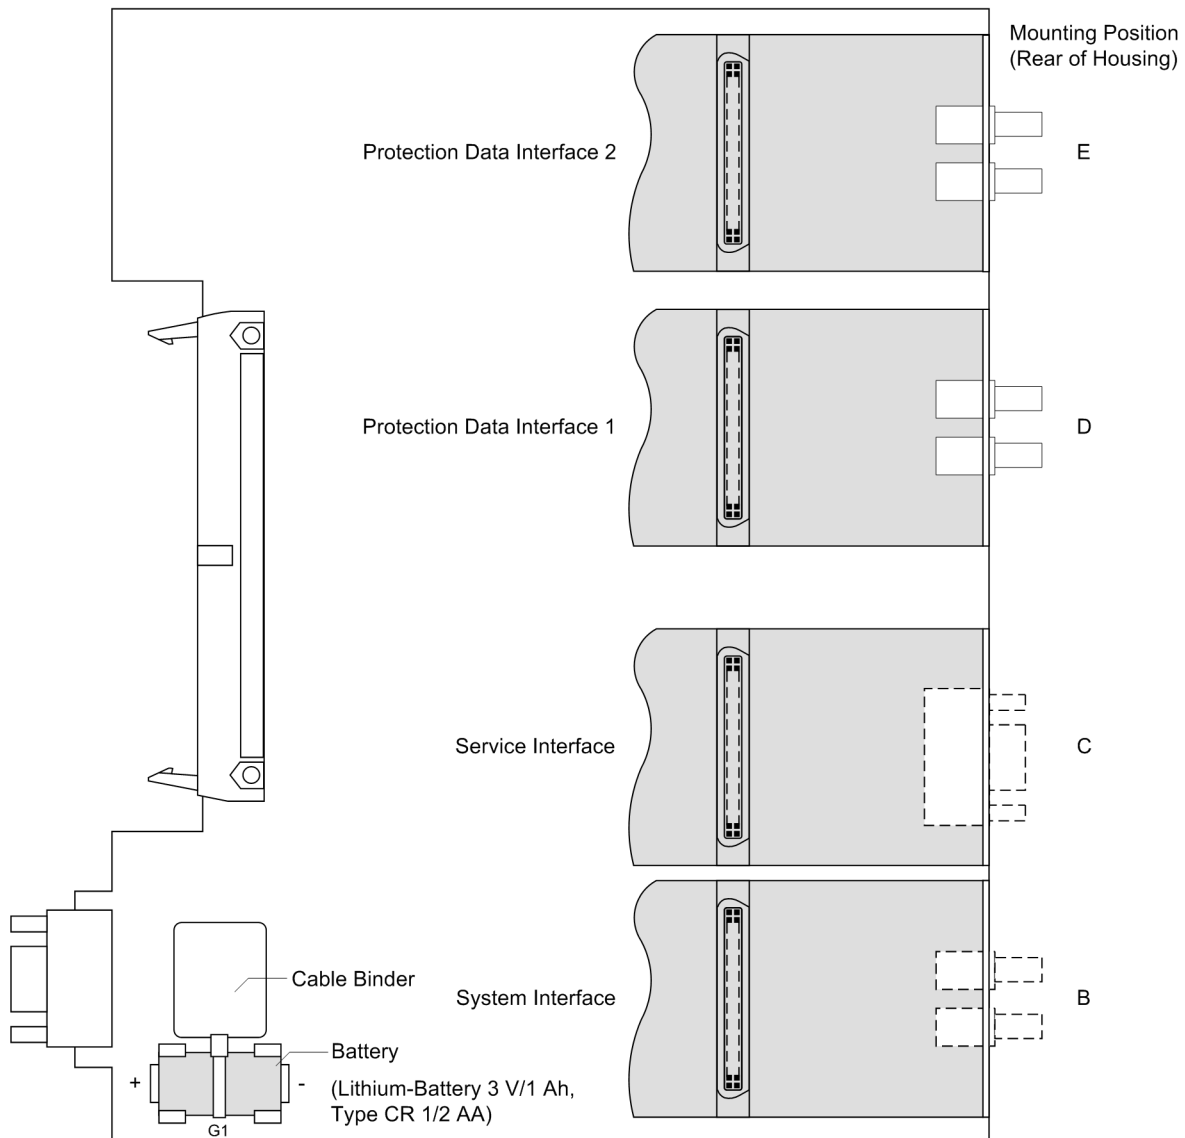


Figure 3-10 Processor board C-CPU-1 with interface modules (maximum configuration)



Note

Surface-mounted devices with fibre optics connection have their fibre optics module fitted in the inclined housing on the case bottom. Instead, the CPU module has an RS232 interface module which communicates electrically with the fibre optics module in the inclined housing.

Please note the following:

- The interface modules can only be replaced in devices in flush mounting housing. Interface modules of devices with surface mounting housing can only be replaced in our manufacturing centre.
- Use only interface modules that can be ordered ex-factory via the ordering code (see also Appendix, Section A.1).
- You may have to ensure the termination of the interfaces featuring bus capability according to the margin heading „RS485 Interface“.

Table 3-17 Exchangeable interface modules

Interface	Mounting Location / Port	Exchange Module
System interface	B	Only interface modules that can be ordered in our facilities via the ordering code (see also Appendix, Section A.1).
Service interface	C	RS232
		RS485
		FO 820 nm
Protection data interface 1	D	FO5, FO6; FO17 to FO19
Protection data interface 2	E	FO5, FO6; FO17 to FO19

The ordering numbers of the exchange modules are listed in Appendix A.1).

RS232 interface

Interface RS232 can be modified to interface RS485 and vice versa (see Figures 3-11 and 3-12).

Figure 3-11 shows the location of the jumpers of the RS232 interface on the interface module.

Surface-mounted devices with fibre optics connection have their fibre optics module fitted in the console housing on the case bottom. The fibre optics module is controlled via an RS232 interface module at the associated CPU interface slot. For this application type the jumpers X12 and X13 on the RS232 module are plugged in position 2-3.

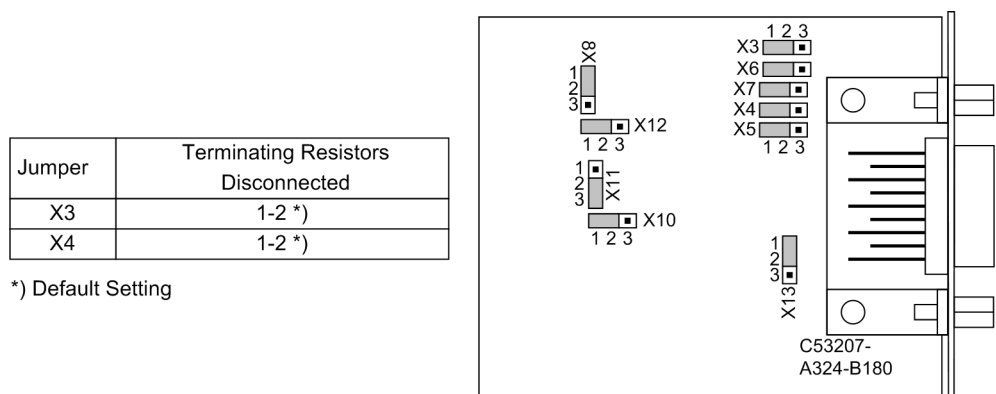


Figure 3-11 Location of the jumpers for configuration of RS232

Terminating resistors are not required for RS232. They are disconnected.

Jumper X11 is used to activate the flow control which is important for the modem communication.

Table 3-18 Jumper setting for **CTS** (Clear To Send, flow control) on the interface module

Jumper	/CTS from Interface RS232	/CTS controlled by /RTS
X11	1-2	2-3 ¹⁾

¹⁾ Default Setting

Jumper setting 2-3: The connection to the modem is usually established with a star coupler or fibre-optic converter. Therefore the modem control signals according to RS232 standard DIN 66020 are not available. Modem signals are not required since the connection to the SIPROTEC 4 devices is always operated in the half-duplex mode. Please use the connection cable with order number 7XV5100-4.

Jumper setting 1-2: This setting makes the modem signals available, i. e. for a direct RS232-connection between the SIPROTEC 4 device and the modem this setting can be selected optionally. We recommend to use a standard RS232 modem connection cable (converter 9-pin to 25-pin).



Note

For a direct connection to DIGSI with interface RS232 jumper X11 must be plugged in position 2-3.

RS485 interface

Figure 3-12 shows the location of the jumpers of the RS485 interface on the interface module.

Interface RS485 can be modified to interface RS232 and vice versa, according to Figure 3-11.

Jumper	Terminating Resistors	
	Connected	Disconnected
X3	2-3	1-2 *)
X4	2-3	1-2 *)

*) Default Setting

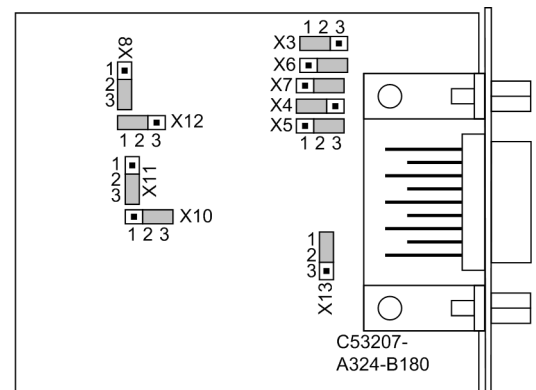


Figure 3-12 Position of terminating resistors and the plug-in jumpers for configuration of the RS485 interface

Profibus/DNP
Interface



Figure 3-13 Location of the jumpers for configuring the terminating resistors of the active electrical module (PROFIBUS and DNP 3.0 interface)

EN100 Ethernet
Module (IEC 61850)

The Ethernet interface module has no jumpers. No hardware modifications are required to use it.

Termination

For bus-capable interfaces a termination is necessary at the bus for each last device, i.e. terminating resistors must be connected. On the 7SD5 device, this concerns the variants with RS485 or PROFIBUS7/DNP interfaces.

The terminating resistors are on the interface module which is located on the processor board C-CPU-1 (No. 1 in Figure 3-3 and 3-4).

The interface modules are displayed in Figure 3-12 and in Figure3-13.

For the configuration of the terminating resistors both jumpers have to be plugged in the same way.

On delivery the jumpers are set so that the terminating resistors are disconnected.

The terminating resistors can also be connected externally (e.g. to the connection module), see Figure 3-14. In this case, the terminating resistors located on the interface module must be switched off.

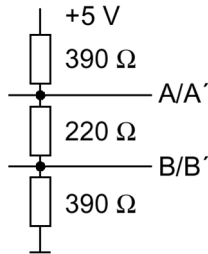


Figure 3-14 Termination of the RS485 interface (external)

3.1.2.5 Reassembly

The reassembly of the device is carried out in the following steps:

- Insert the boards carefully into the housing. The mounting locations of the boards are shown in Figures 3-3 and 3-4. For the model of the device designed for surface mounting, use the metal lever to insert the processor board C-CPU-1. Installation is easier with the lever.
- First plug in the plug connectors of the ribbon cable onto the input/output boards I/O and then onto the processor board C-CPU-1. Be careful not to bend connecting pins! Don't use force!
- Connect the plug connectors of the ribbon cable between the processor board C-CPU-1 and the front panel to the front panel plug connector.
- Press plug connector interlocks together.
- Put on the front cover and screw it onto the housing.
- Put the covers back on.
- Re-fasten the interfaces on the rear of the device housing. This activity is not necessary if the device is designed for surface mounting.

3.1.3 Mounting

3.1.3.1 Panel Flush Mounting

Depending on the version, the device housing can be $\frac{1}{2}$ or $\frac{1}{1}$. With housing size $\frac{1}{2}$, there are four covers and four holes, as shown in Figure 3-15. There are six covers and six holes for the full housing size $\frac{1}{1}$, as indicated in Figure 3-16.

- Remove the 4 covers at the corners of the front cover, for housing size $\frac{1}{1}$ the two covers located centrally at the top and bottom also have to be removed. The 4 or 6 elongated holes in the mounting bracket are revealed and can be accessed.
- Insert the device into the panel cut-out and fasten it with four or six screws. For dimensions refer to Section 4.26.
- Mount the four or six covers.
- Connect the earth on the rear plate of the device to the protective earth of the panel. Use at least one M4 screw for the device earth. The cross-sectional area of the earth wire must be equal to the cross-sectional area of any other control conductor connected to the device. The cross-section of the earth wire must be at least 2.5 mm^2 .
- Connections are realized via the plug terminals or screw terminals on the rear side of the device according to the circuit diagram.

For screw connections with forked lugs or direct connection, before inserting wires the screws must be tightened so that the screw heads are flush with the outer edge of the connection block.

A ring lug must be centred in the connection chamber, in such a way that the screw thread fits in the hole of the lug.

The SIPROTEC 4 System Description has pertinent information regarding wire size, lugs, bending radii, etc. Installation notes are also given in the brief reference booklet attached to the device.

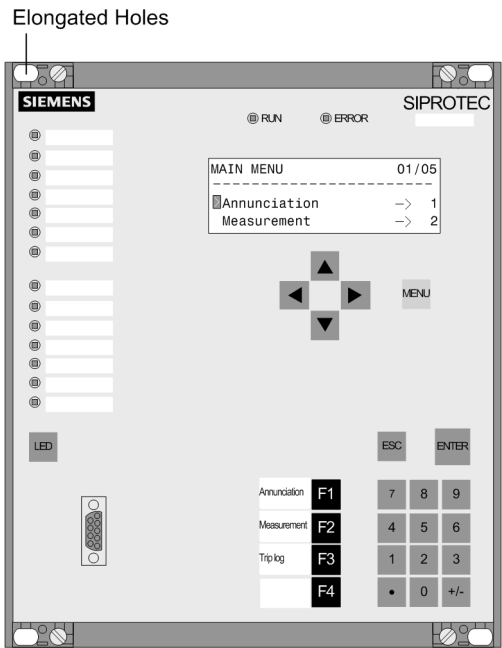


Figure 3-15 Example of panel flush mounting of a device (housing size $\frac{1}{2}$)

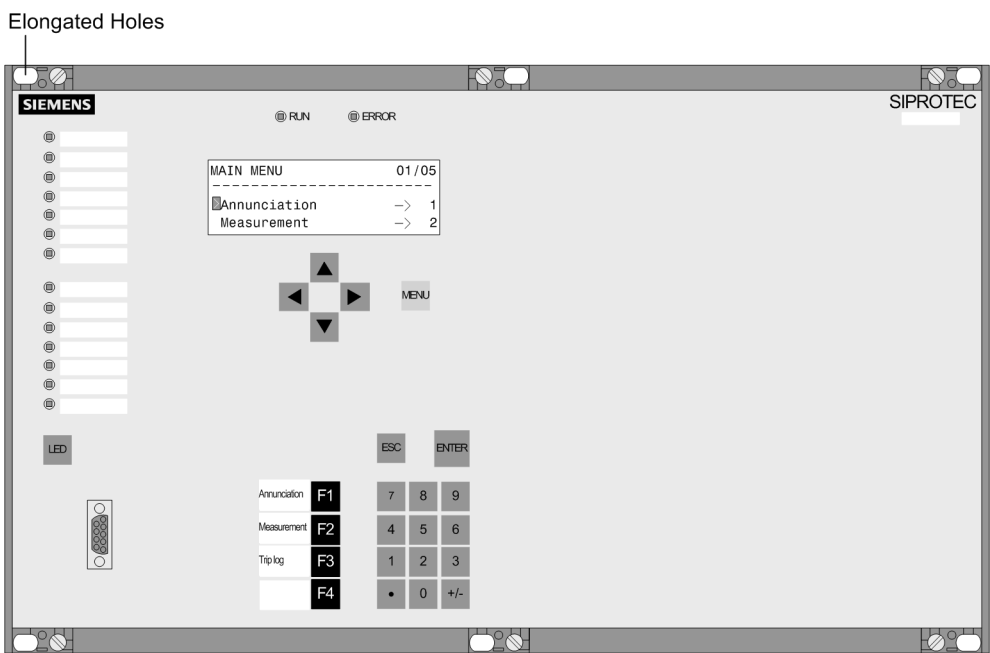


Figure 3-16 Example of panel flush mounting of a device (housing size $\frac{1}{1}$)

3.1.3.2 Rack Mounting and Cubicle Mounting

To install the device in a rack or cubicle, a pair of mounting rails; one for top, one for bottom are required. The ordering codes are stated in Appendix, Section A.1

For the $\frac{1}{2}$ housing size (Figure 3-17), there are four covers and four holes. For the $\frac{1}{4}$ housing size (Figure 3-18) there are six covers and six holes.

- Screw on loosely the two angle brackets in the rack or cabinet, each with four screws.
- Remove the 4 covers at the corners of the front cover, for housing size $\frac{1}{4}$ the two covers located centrally at the top and bottom also have to be removed. The 4 or 6 elongated holes in the mounting bracket are revealed and can be accessed.
- Fasten the device to the mounting brackets with four or six screws.
- Mount the four or six covers.
- Tighten fast the eight screws of the angle brackets in the rack or cabinet.
- Screw down a robust low-ohmic protective earth or station earth to the rear of the device using at least an M4 screw. The cross-sectional area of the earth wire must be equal to the cross-sectional area of any other conductor connected to the device. The cross-section of the earth wire must be at least 2.5 mm².
- Connections use the plug terminals or screw terminals on the rear side of the device in accordance the wiring diagram.

For screw connections with forked lugs or direct connection, before inserting wires the screws must be tightened so that the screw heads are flush with the outer edge of the connection block.

A ring lug must be centred in the connection chamber so that the screw thread fits in the hole of the lug.

The SIPROTEC 4 System Description has pertinent information regarding wire size, lugs, bending radii, etc. Installation notes are also given in the brief reference booklet attached to the device.

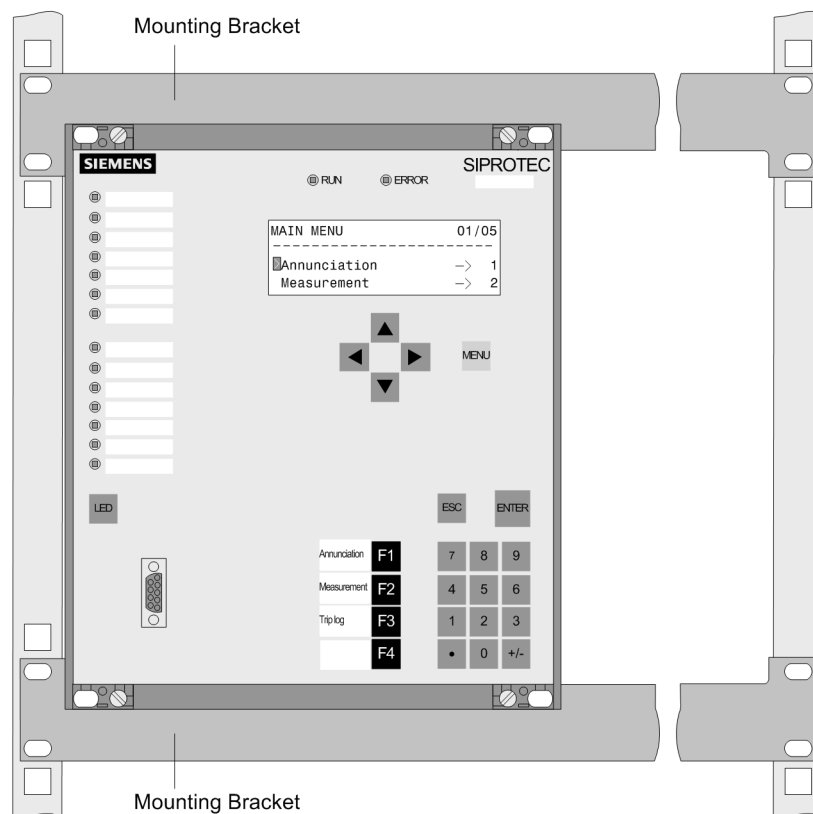


Figure 3-17 Example of rack or cubicle mounting of a device (housing size $\frac{1}{2}$)

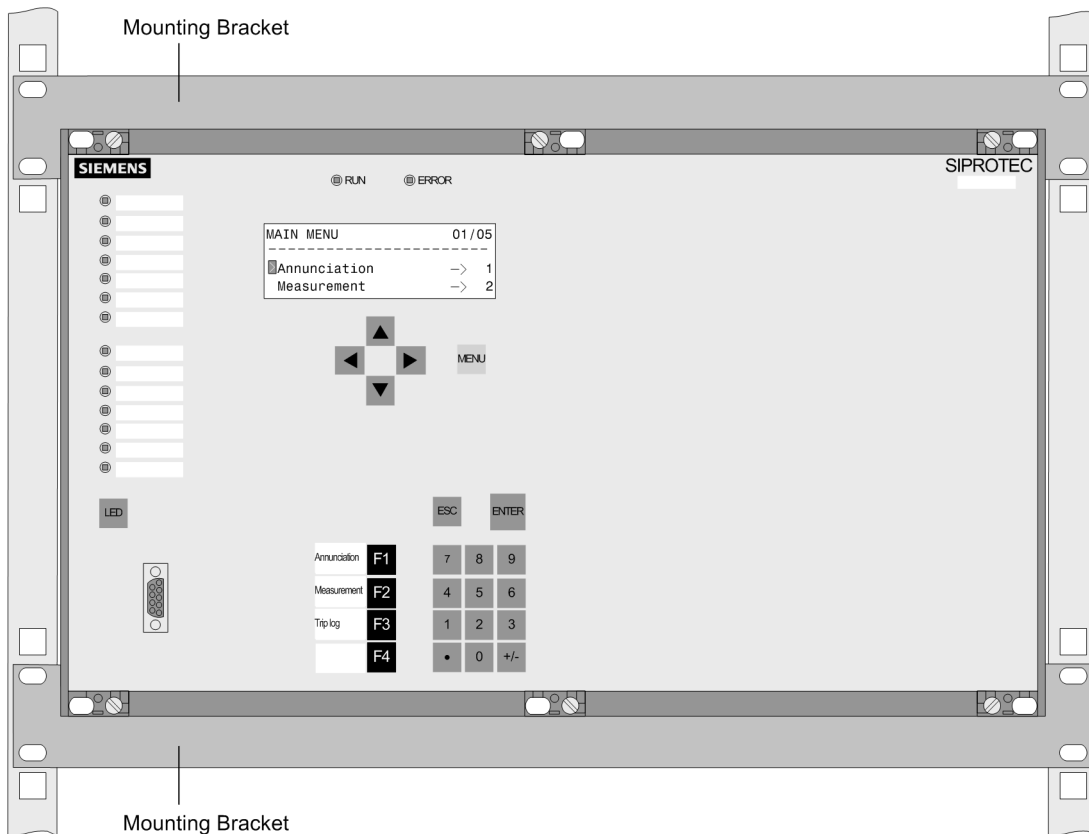


Figure 3-18 Example of rack or cubicle mounting of a device (housing size 1₁)

3.1.3.3 Panel Mounting

For mounting proceed as follows:

- Secure the device to the panel with four screws. For dimensions see the Technical Data in Section 4.26.
- Connect the low-resistance operational and protective earth to the ground terminal of the device. The cross-sectional area of the ground wire must be equal to the cross-sectional area of any other control conductor connected to the device. It must thus be at least 2.5 mm².
- Alternatively, there is the possibility to connect the aforementioned earthing to the lateral grounding surface with at least one M4 screw.
- Connections according to the circuit diagram via screw terminals, connections for optical fibres and electrical communication modules via the console housing. The SIPROTEC 4 System Description has pertinent information regarding wire size, lugs, bending radii, etc. Installation notes are also given in the brief reference booklet attached to the device.

3.2 Checking Connections

3.2.1 Checking the data connection of the serial interfaces

The tables of the following margin headings list the pin assignments for the different serial interfaces, the time synchronization interface and the Ethernet interface of the device. The position of the connections can be seen in the following figures.

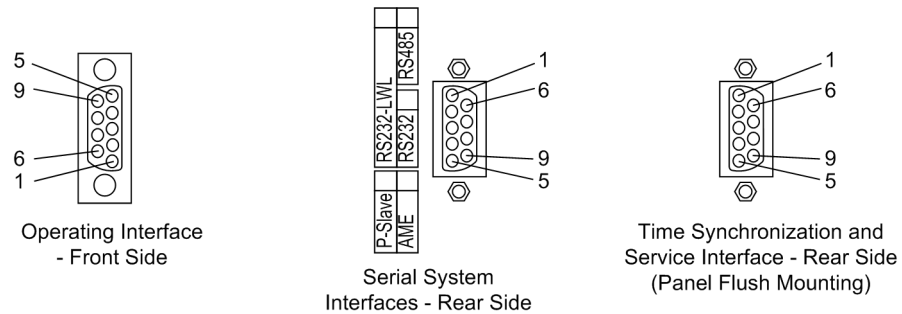


Figure 3-19 9-pin D-subminiature female connectors

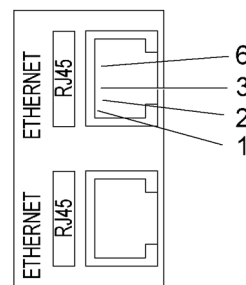


Figure 3-20 Ethernet connector

Operator Interface

When the recommended communication cable is used, correct connection between the SIPROTEC 4 device and the PC is automatically ensured. See the Appendix A.1 for an ordering description of the cable.

Service interface

Check the data connection if the service interface (Interface C) for communicating with the device is via fix wiring or a modem.

System interface

For versions equipped with a serial interface to a control center, the user must check the data connection. The visual check of the assignment of the transmission and reception channels is of particular importance. With RS232 and fibre optic interfaces, each connection is dedicated to one transmission direction. Therefore the output of one device must be connected to the input of the other device and vice versa.

With data cables, the connections are designated according to DIN 66020 and ISO 2110:

- TxD = Data Transmit
- RxD = Data Receive

- $\overline{\text{RTS}}$ = Request to Send
- $\overline{\text{CTS}}$ = Clear to Send
- GND = Signal / Chassis Ground

The cable shield is to be earthed at **both** line ends. For extremely EMC-prone environments, the earth may be connected via a separate individually shielded wire pair to improve immunity to interference.

Table 3-19 The assignments of the D-subminiature and RJ45 connector for the various interfaces

Pin No.	Operator interface	RS232	RS485	PROFIBUS FMS Slave, RS485	DNP3.0 RS485	Ethernet EN100
				PROFIBUS DP Slave, RS485		
1	Shield (with shield ends electrically connected)					Tx+
2	RxD	RxD	-	-	-	Tx-
3	TxD	TxD	A/A' (RxD/TxD-N)	B/B' (RxD/TxD-P)	A	Rx+
4	-	-	-	CNTR-A (TTL)	RTS (TTL level)	-
5	GND	GND	C/C' (GND)	C/C' (GND)	GND1	-
6	-	-	-	+5 V (max. load 100 mA)	VCC1	Rx-
7	RTS	RTS	- ¹⁾	-	-	-
8	CTS	CTS	B/B' (RxD/TxD-P)	A/A' (RxD/TxD-N)	B	-
9	-	-	-	-	-	Disabled

¹⁾ Pin 7 also carries the RTS signal with RS232 level when operated as RS485 Interface. Pin 7 must therefore not be connected!

RS485 Termination

The RS485 interface is bus-capable for half-duplex service with the signals A/A' and B/B' with a common relative potential C/C' (GND). It is necessary to check that the terminating resistors are connected to the bus only at the last unit, and not at other devices on the bus. The jumpers for the terminating resistors are located on the interface module RS485 (see Figure 3-12) or on the PROFIBUS module RS485 or DNP 3.0 RS485 module (see Figure 3-13). Terminating resistors can also be implemented outside the device (e.g. on the connection module as shown in Figure 3-14). In this case, the terminating resistors located on the module must be disabled.

If the bus is extended, make sure again that only terminating resistors at the last device to the bus are switched in.

Time synchronisation interface

It is optionally possible to process 5 V, 12 V or 24 V time synchronization signals, provided that these are connected to the inputs named in the following table.

Table 3-20 D-subminiature connector assignment of the time synchronization interface

Pin No.	Designation	Signal Significance
1	P24_TSIG	Input 24 V
2	P5_TSIG	Input 5 V
3	M_TSIG	Return line
4	M_TSYNC ¹⁾	Return line ¹⁾
5	SHIELD	Shield potential
6	-	-
7	P12_TSIG	Input 12 V
8	P_TSYNC ¹⁾	Input 24 V ¹⁾
9	SHIELD	Shield potential

¹⁾ only for PPS signal (GPS)

Optical Fibres



WARNING!

Do not look directly into the fibre-optic elements, not even with optical devices! Laser class 1 according to EN 60825-1.

For the protection data communication, refer to the following section.

The transmission via fiber optics is particularly insensitive to electromagnetic interference and thus ensures galvanic isolation of the connection. Transmit and receive connections are shown with the symbols $\blacksquare \rightarrow$ for transmit and $\rightarrow \bullet$ for receive.

The character idle state for the optical fibre interface is „Light off“. If the character idle state is to be changed, use the operating program DIGSI, as described in the SIPROTEC 4 System Description.

3.2.2 Checking the Protection Data Communication

The protection data communication is conducted either directly from device to device via optical fibres or via communication converters and a communication network or a dedicated transmission medium.

Optical fibres, directly



WARNING!

Do not look directly into the fibre-optic elements, not even with optical devices! Laser class 1 according to EN 60825-1.

The direct optical fibre connection is visually inspected by means of an optical fibre connector. There is one connection for each direction. The data output of one device must be connected to the data input of the other device and vice versa. Transmission and receiving connections are identified with the symbols \dashrightarrow for transmit and \dashleftarrow for receive. The visual check of the assignment of the transmission and reception channels is important.

For short distances, laser class 1 is fulfilled if FO5 modules and the recommended fibres are used. In other cases, the laser output may be higher.

If using more than one device, the connections of all protection data interfaces are checked according to the topology selected.

Communication converter

Optical fibres are usually used for the connections between the devices and communication converters. The optical fibres are checked in the same manner as the optical fibre direct connection which means for every protection data interface.

Verify in address 4502 **CONNEC. 1 OVER** and/or 4602 **CONNEC. 2 OVER** (see also Section 2.2.3.1) that the right connection type is parameterized.

Further Connections

For further connections a visual inspection is sufficient for the time being. Electrical and functional controls are performed during commissioning (see the following main section).

3.2.3 Checking the System Connections



WARNING!

Warning of dangerous voltages

Non-observance of the following measures can result in death, personal injury or substantial property damage.

Therefore, only qualified people who are familiar with and adhere to the safety procedures and precautionary measures shall perform the inspection steps.



Caution!

Be careful when operating the device on a battery charger without a battery

Non-observance of the following measure can lead to unusually high voltages and consequently, the destruction of the device.

Do not operate the device on a battery charger without a connected battery. (For limit values see also Technical Data, Section 4.1).

Before the device is energized for the first time, it should be in the final operating environment for at least 2 hours to equalize the temperature, to minimize humidity and avoid condensation. Connections are checked with the device at its final location. The plant must first be switched off and earthed.

Connection examples for current transformer connections are provided in the Appendix A.3. Please observe the plant diagrams, too.

Proceed as follows in order to check the system connections:

- Protective switches for the power supply and the measured voltages must be opened.
- Check the continuity of all current and voltage transformer connections against the system and connection diagrams:
 - Are the current transformers earthed correctly?
 - Are the polarities of the current transformers the same?
 - Is the phase relationship of the current transformers correct?
 - Are the voltage transformers earthed correctly (if used)?
 - Are the polarities of the voltage transformers correct (if used)?
 - Is the phase relationship of the voltage transformers correct (if used)?
 - Is the polarity for current input I_4 correct (if used)?
 - Is the polarity for voltage input U_4 correct (if used, e.g. with open delta winding or busbar voltage)?
- Check the functions of all test switches that are installed for the purposes of secondary testing and isolation of the device. Of particular importance are test switches in current transformer circuits. Be sure these switches short-circuit the current transformers when they are in the „test mode“.
- The short-circuit feature of the current circuits of the device is to be checked. This may be performed with secondary test equipment or other test equipment for checking continuity. Make sure that terminal continuity is not wrongly simulated in reverse direction via current transformers or their short circuit links.
 - Remove the front cover of the device (see also Figure 3-3 and 3-4).
 - Remove the ribbon cable connected to the C-I/O-2 board and pull the board out until there is no contact between the board and the rear connections of the device.
 - At the terminals of the device, check continuity for each pair of terminals that receives current from the CTs.
 - Firmly re-insert the I/O module. Carefully connect the ribbon cable. Be careful not to bend connecting pins! Do not apply force!
 - At the terminals of the device, again check continuity for each pair of terminals that receives current from the CTs.
 - Attach the front panel and tighten the screws.
- Connect an ammeter in the supply circuit of the power supply. A range of about 2.5 A to 5 A for the meter is appropriate.
- Switch on mcb for auxiliary voltage (supply protection), check the voltage level and, if applicable, the polarity of the voltage at the device terminals or at the connection modules.
- The measured steady-state current should correspond to the quiescent power consumption of the device. Transient movement of the ammeter merely indicates the charging current of capacitors.
- Remove the voltage from the power supply by opening the mcb.
- Disconnect the measuring equipment; restore the normal power supply connections.
- Apply voltage to the power supply.
- Close the mcb for the voltage transformers.

- Verify that the voltage phase rotation at the device terminals is correct.
- Open the mcb's for the transformer voltage (VT mcb) and the power supply.
- Check the trip circuits to the power system circuit breakers.
- Check the close circuits to the power system circuit breakers.
- Verify that the control wiring to and from other devices is correct.
- Check the signalling connections.
- Close mcb.
- If communication converters are used: check the auxiliary voltages for the communication converters.
- If the communication converter is connected to the communication network, its device-ready relay (DOK = „Device Ok“) picks up. This also signalizes that the clock pulse of the communication network is recognized.
Further checks are performed according to Section „Checking the Protection Data Topology“.
- Please also observe carefully the documentation on the communication converters.

3.3 Commissioning



WARNING!

Warning of dangerous voltages when operating an electrical device

Non-observance of the following measures can result in death, personal injury or substantial property damage.

Only qualified people shall work on and around this device. They must be thoroughly familiar with all warnings and safety notices in this instruction manual as well as with the applicable safety steps, safety regulations, and precautionary measures.

Before making any connections, the device must be earthed at the protective conductor terminal.

Hazardous voltages can exist in the power supply and at the connections to current transformers, voltage transformers, and test circuits.

Hazardous voltages can be present in the device even after the power supply voltage has been removed (capacitors can still be charged).

After removing voltage from the power supply, wait a minimum of 10 seconds before re-energizing the power supply. This wait allows the initial conditions to be firmly established before the device is re-energized.

The limit values given in Technical Data must not be exceeded, neither during testing nor during commissioning.

For tests with a secondary test equipment ensure that no other measurement voltages are connected and the trip and close commands to the circuit breakers are blocked, unless otherwise specified.



DANGER!

Hazardous voltages during interruptions in secondary circuits of current transformers

Non-observance of the following measure will result in death, severe personal injury or substantial property damage.

Short-circuit the current transformer secondary circuits before current connections to the device are opened.

During the commissioning procedure, switching operations must be carried out. The tests described require that they can be done without danger. They are accordingly not meant for operational checks.



WARNING!

Warning of dangers evolving from improper primary tests

Non-observance of the following measure can result in death, personal injury or substantial property damage.

Primary tests may only be carried out by qualified persons who are familiar with commissioning protection systems, with managing power systems and the relevant safety rules and guidelines (switching, earthing etc.).

3.3.1 Test Mode / Transmission Block

Activation and Deactivation

If the device is connected to a central control system or a server via the SCADA interface, then the information that is transmitted can be modified with some of the protocols available (see Table „Protocol-dependent functions“ in the Appendix A.5).

If **Test mode** is set ON, then a message sent by a SIPROTEC 4 device to the main system has an additional test bit. This bit allows the message to be recognized as resulting from testing and not an actual fault or power system event. Furthermore it can be determined by activating the **Transmission block** that no indications at all are transmitted via the system interface during test mode.

The SIPROTEC 4 System Description describes how to activate and deactivate test mode and blocked data transmission. Note that when DIGSI is being used, the program must be in the **Online** operating mode for the test features to be used.

3.3.2 Checking Time Synchronisation Interface

If external time synchronization sources are used, the data of the time source (antenna system, time generator) are checked (see Section 4 under „Time Synchronization“). A correct function (IRIG B, DCF77) is recognized in such a way that 3 minutes after the startup of the device the clock status is displayed as „synchronized“, accompanied by the indication „Alarm Clock OFF“. For further information please refer to the SIPROTEC System Description.

Table 3-21 Time status

No.	Status text	Status
1	-- -- -- --	synchronized
2	-- -- -- ST	
3	-- -- ER --	not synchronized
4	-- -- ER ST	
5	-- NS ER --	
6	-- NS -- --	
Legend: -- NS -- -- -- -- ER -- -- -- -- ST		time invalid time fault summertime

Additionally, if GPS synchronization is used, check that the GPS signal is received: approximately 3 seconds after startup of the processor system, the message „>GPS failure“ „OFF“ appears.

3.3.3 Testing the System Interface

Prefacing Remarks

If the device features a system interface and uses it to communicate with the control centre, the DIGSI device operation can be used to test if messages are transmitted correctly. This test option should however definitely „not“ be used while the device is in service on a live system.



DANGER!

The sending or receiving of indications via the system interface by means of the test function is a real information exchange between the SIPROTEC 4 device and the control centre. Connected operating equipment such as circuit breakers or disconnectors can be switched in this way!

Non-observance of the following measure will result in death, severe personal injury or substantial property damage.

Equipment used to allow switching such as circuit breakers or disconnectors is to be checked only during commissioning. Do not under any circumstances check them by means of the testing mode during „real“ operation performing transmission and reception of messages via the system interface.



Note

After termination of the hardware test, the device will reboot. Thereby, all annunciation buffers are erased. If required, these buffers should be extracted with DIGSI prior to the test.

The interface test is carried out using DIGSI in the Online operating mode:

- Open the **Online** directory by double-clicking; the operating functions for the device appear.
- Click on **Test**; the function selection appears in the right half of the window.
- Double-click on **Testing Messages for System Interface** shown in the list view. The dialog box **Generate Indications** is opened (see Figure 3-21).

Structure of the Dialog Box

In the column **Indication**, all message texts that were configured for the system interface in the matrix will then appear. In the column **Setpoint** you determine a value for the indications that shall be tested. Depending on the type of message different entering fields are available (e.g. **message ON / message OFF**). By clicking on one of the buttons you can select the desired value from the pull-down menu.

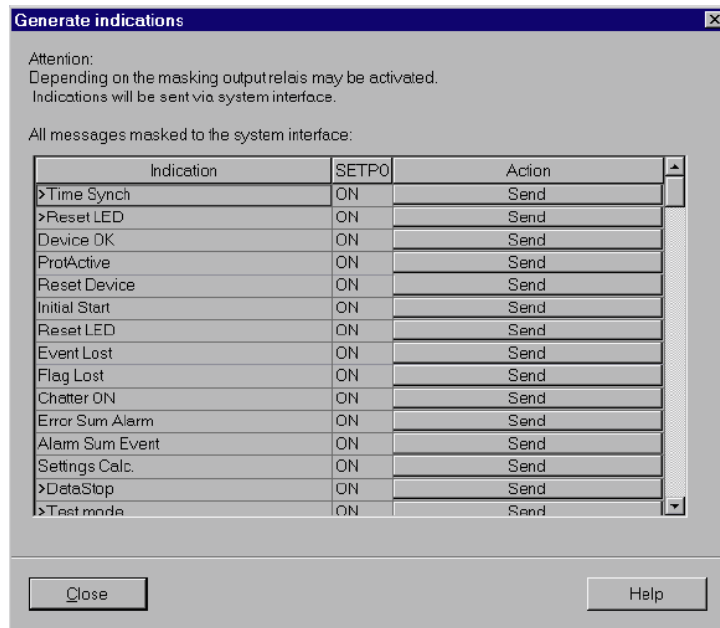


Figure 3-21 System interface test with dialog box: Generating indications – Example

Changing the Operating State

On clicking one of the buttons in the column **Action** you will be prompted for the password No. 6 (for hardware test menus). After correct entry of the password, individual annunciations can be initiated. To do so, click on the button **Send** in the corresponding line. The corresponding message is issued and can be read out either from the event log of the SIPROTEC 4 device or from the substation control center.

Further tests remain enabled until the dialog box is closed.

Test in Indication Direction

For all information that is transmitted to the central station, test in **Setpoint** the desired options in the list which appears:

- Make sure that each checking process is carried out carefully without causing any danger (see above and refer to DANGER!)
- Click on Send and check whether the transmitted information reaches the control centre and shows the desired reaction. Data which are normally linked via binary inputs (first character „>“) are likewise indicated to the control centre with this procedure. The function of the actual binary inputs is tested separately.

Exiting the Test Mode

To end the System Interface Test, click on **Close**. The dialog box closes. The processor system is restarted, then the device is ready for operation.

Test in Command Direction

Data which are normally linked via binary inputs (first character „>“) are likewise checked with this procedure. The information transmitted in command direction must be indicated by the central station. Check whether the reaction is correct.

3.3.4 Checking the switching states of the binary Inputs/Outputs

Prefacing Remarks

The binary inputs, outputs, and LEDs of a SIPROTEC 4 device can be individually and precisely controlled in DIGSI. This feature is used to verify control wiring from the device to plant equipment (operational checks) during commissioning. This test option should however definitely „not“ be used while the device is in service on a live system.



DANGER!

A changing of switching states by means of the test function causes a real change of the operating state at the SIPROTEC 4 device. Connected operating equipment such as circuit breakers or disconnectors will be switched in this way!

Non-observance of the following measure will result in death, severe personal injury or substantial property damage.

Equipment used to allow switching such as circuit breakers or disconnectors is to be checked only during commissioning. Do not under any circumstances check them by means of the testing mode during „real“ operation performing transmission and reception of messages via the system interface.



Note

After termination of the hardware test the device will reboot. Thereby, all annunciation buffers are erased. If required, these buffers should be extracted with DIGSI prior to the test.

The hardware test can be carried out using DIGSI in the Online operating mode:

- Open the **Online** directory by double-clicking; the operating functions for the device appear.
- Click on **Test**; the function selection appears in the right half of the window.
- Double-click in the list view on **Device inputs and outputs**. The dialog box with this name is opened (see Figure 3-22).

Structure of the Dialog Box

The dialog box is divided into three groups: **BI** for binary inputs, **BO** for binary outputs and **LED** for LEDs. An accordingly labelled button is on the left of each group. By double-clicking a button, information regarding the associated group can be shown or hidden.

In the column **Status** the present (physical) state of the hardware component is displayed. Indication is displayed symbolically. The physical actual states of the binary inputs and outputs are indicated by an open or closed switch symbol, the LEDs by switched on or switched off symbol.

The opposite state of each element is displayed in the column **Scheduled**. The display is in plain text.

The right-most column indicates the commands or messages that are configured (masked) to the hardware components.

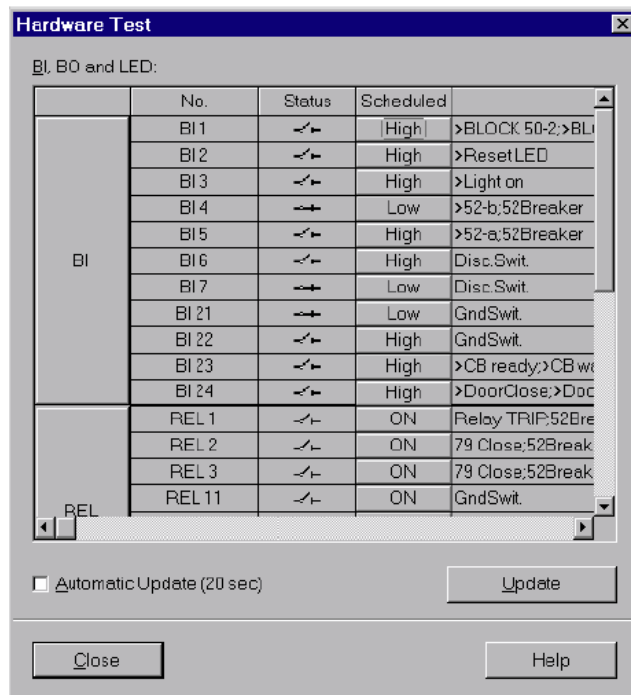


Figure 3-22 Test of the Binary Inputs and Outputs — Example

Changing the operating state

To change the operating state of a hardware component, click on the associated switching field in the **Scheduled** column.

Before executing the first change of the operating state the password No. 6 will be requested (if activated during configuration). After entry of the correct password a condition change will be executed. Further state changes remain enabled until the dialog box is closed.

Test of the Output Relays

Each individual output relay can be energized allowing a check of the wiring between the output relay of the 7SD5 and the plant, without having to generate the message that is assigned to the relay. As soon as the first change of state for any of the output relays is initiated, all output relays are separated from the internal device functions, and can only be operated by the hardware test function. This means, that e.g. a TRIP command coming from a protection function or a control command from the operator panel to an output relay cannot be executed.

Proceed as follows in order to check the output relay:

- Make sure that the switching operations caused by the output relays can be executed without any danger (see above under DANGER!).
- Each output relay must be tested via the corresponding **Scheduled** field of the dialog box.
- Finish the testing (see margin heading below „Exiting the Procedure“), so that during further testings no unwanted switchings are initiated.

Test of the Binary Inputs

To test the wiring between the plant and the binary inputs of the 7SD5 the condition in the system which initiates the binary input must be generated and the response of the device checked.

To do so, open the dialog box **Hardware Test** again to view the physical position of the binary input. The password is not yet required.

Proceed as follows in order to check the binary inputs:

- Each state in the system which causes a binary input to pick up must be generated.
- Check the reaction in the **Status** column of the dialog box. To do this, the dialog box must be updated. The options may be found below under the margin heading „Updating the Display“.
- Finish the test sequence (see margin heading below „Exiting the Procedure“).

If, however, the effect of a binary input must be checked without carrying out any switching in the system, it is possible to trigger individual binary inputs with the hardware test function. As soon as the first state change of any binary input is triggered and the password No. 6 has been entered, all binary inputs are separated from the system and can only be activated via the hardware test function.

Test of the LEDs

The light-emitting diodes (LEDs) may be tested in a similar manner to the other input/output components. As soon as the first state change of any LED has been triggered, all LEDs are separated from the internal device functionality and can only be controlled via the hardware test function. This means e.g. that no LED is illuminated anymore by a protective function or by pressing the LED reset button.

Updating the Display

When the dialog box **Hardware Test** is opened, the present conditions of the hardware components at that moment are read in and displayed.

An update is made:

- For the particular hardware component, if a command for change to another state was successful,
- For all hardware components if the **Update** button is clicked,
- For all hardware components with cyclical updating (cycle time is 20 sec) if the **Automatic Update (20 sec)** field is marked.

Exiting the Procedure

To end the hardware test, click on **Close**. The dialog box closes. Thus, all the hardware components are set back to the operating state specified by the plant states. The processor system is restarted, then the device is ready for operation.

3.3.5 Checking the Protection Data Topology

General

The communication topology can either be checked from the PC using DIGSI or with a „WEB-Monitor“. If you choose to work with the „WEB-Monitor“, please note the Help files referring to the „WEB-Monitor“.

You can either connect the PC to the device locally using the operator interface at the front, or the service interface on the rear of the PC (example Figure 3-23). Or you can log into the device using a modem via the service interface (example Figure 3-24)

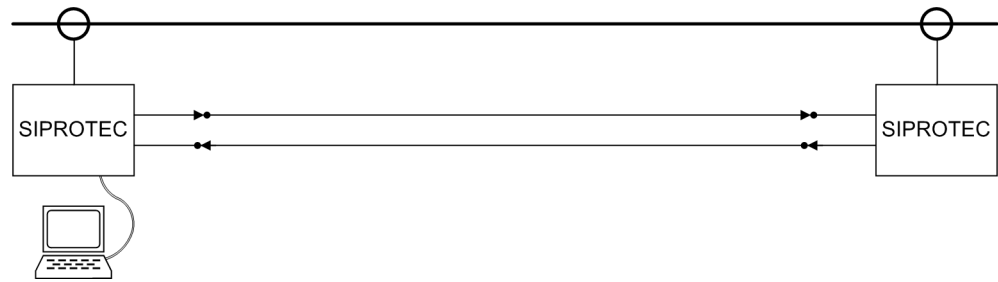


Figure 3-23 PC interfacing directly to one device — schematic example

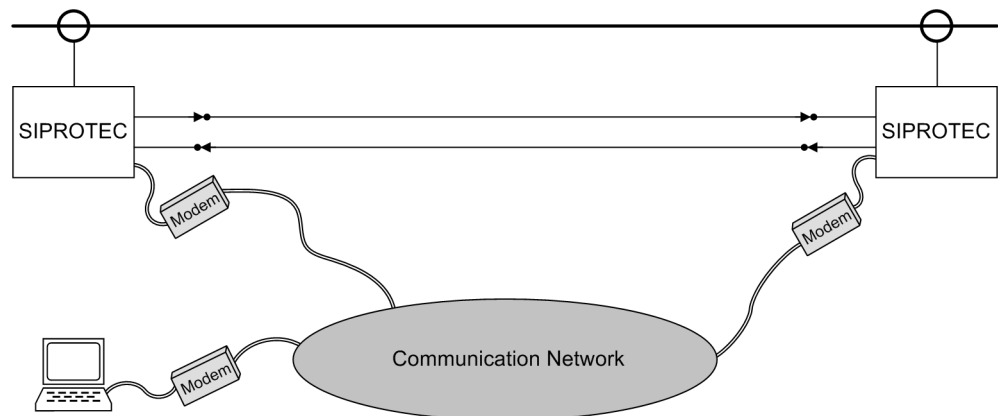


Figure 3-24 PC interfacing via modem — schematic example

Checking a connection using direct link

For two devices linked with fibre optical cables (as in Figure 3-23 or 3-24), this connection is checked as follows. If two or more devices are linked, or if two devices have been (double-) linked with a ring topology, first check only one link.

- Both devices at the link ends have to be switched on.
- Check in the operating indications or in the spontaneous indications:
 - If the indication „PI1 with“ (protection data interface 1 connected with no. 3243) is provided with the device index of the other device, a link has been established and one device has detected the other.
 - If the protection data interface 2 has also been connected, a corresponding message will appear (No. 3244).
 - The device also indicates the device index of the device which communicates correctly (e.g. annunciation „Re12 Login“, No. 3492, when relay 2 has been contacted).
- In case of an incorrect communication link, the message „PI1 Data fault“ (No. 3229) or „PI2 Data fault“ (No. 3231) will appear. In this case, recheck the fibre optical cable link.
 - Have the devices been linked correctly and no cables been mixed up?
 - Are the cables free from mechanical damage, intact and the connectors locked?
 - Otherwise repeat check.

Continue with the margin heading „Consistency of Topology and Parameterization“.

Checking a connection with communication converter

If a communication converter is used, please note the instructions enclosed with the device. The communication converter has a test setting where its outputs are looped back to the inputs.

Links via the communication converter are tested by means of local loop-back (Figure 3-25, left).

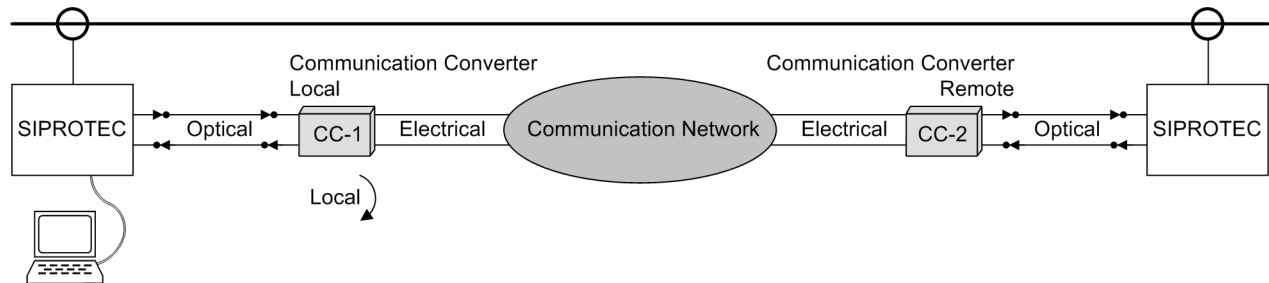


Figure 3-25 Protection data communication via communication converter and communication network — schematic example



DANGER!

Opening the Communication Converter

There is danger to life by energized parts.

Before opening the communication converter, it is absolutely necessary to isolate it from the auxiliary supply voltage at all poles!

- Both devices at the link ends have to be switched on.
- First configure the communication converter CC-1:
 - Disconnect the auxiliary supply voltage from both poles.
 - Open the communication converter.
 - Set the jumpers to the matching position for the correct interface type and transmission rate; they must be identical with the parameterization of the 7SD5 (address 4502 **CONN. 1 OVER** for protection data interface 1 and, if required, 4602 **CONN. 2 OVER**, see also Section 2.2.3.1).
 - Move the communication converter into test position (jumper X32 in position 2-3).
 - Close the communication converter housing.
- Reconnect the supply voltage of the communication converter.
- The communication network (X.21 or G.703.1) must be active and connected to the communication converter. Check this by means of the "device ready" contact of the communication converter (continuity at the NO contact).
 - If the "device ready" contact of the communication converter does not close, check the connection between the communication converter and the network (communication device). The communication device must emit the correct transmitter clock to the communication converter.

- Change the interface parameters at the 7SD5 (at the device front or with DIGSI):
 - Address 4502 **CONNEC. 1 OVER = F.optic direct** when you are testing protection data interface 1,
 - Address 4602 **CONNEC. 2 OVER = F.optic direct** if you are testing protection data interface 2.
- Check the Event Log or spontaneous annunciations:
 - Message 3217 „PI1 Data refl ec“ (Protection interface 1 data reflection ON) when you test protection data interface 1,
 - Indication 3218 „PI2 Data refl ec“ (Protection data interface 2 data reflection ON) if you are testing protection data interface 2.
 - When working with both interfaces, note that the correct interface of the 7SD5 is connected to its associated communication converter.
 - If the message is not transmitted check for the following:
 - Has the 7SD5 fibre optical transmitting terminal output been correctly linked with the fibre optical receiving terminal input of the communication converter and vice versa (no erroneous interchanging)?
 - Does the 7SD5 device have the correct interface module and is it working correctly?
 - Are the fibre optic cables intact?
 - Are the parameter settings for interface type and transmission rate at the communication converter correct (see above; note the DANGER instruction!)?
 - Repeat the check after correction, if necessary.
- Reset the interface parameters at the 7SD5 correctly:
 - Address 4502 **CONNEC. 1 OVER** = required setting, if you are testing the protection data interface 1,
 - Address 4602 **CONNEC. 2 OVER** = required setting, if are testing the protection data interface 2.
- Disconnect the auxiliary supply voltage of the communication converter at both poles. Note the above DANGER instruction!
- Reset the communication converter to normal position (X32 in position 1-2) and close the housing again.
- Reconnect the supply voltage of the communication converter.

Perform the above check at the other end with the device being connected there and its corresponding communication converter.

Continue with the margin heading „Consistency of Topology and Parameterization“.

Consistency of topology and parameterisation

Having performed the above checks, the linking of a device pair, including their communication converters, has been completely tested and connected to the auxiliary supply voltage. Now the devices communicate by themselves.

- Check now the Event Log or in the spontaneous annunciations of the device where you are working:
 - Message No. 3243 „PI1 with“ (protection data interface 1 linked with) followed by the device index of the other device, if interface 1 is applying.
 - Message No. 3244 „PI2 with“ (protection data interface 2 linked with) followed by the device index of the other device, if interface 2 is applying.

- If the devices are at least connected once, the message No. 3458 „Chaintopology“ will appear.
- If no other devices are involved in the topology as an entity, the message No. 3464 „Topo1 complete“ will then be displayed, too.
- And if the device parameterisation is also consistent, i.e., the prerequisites for setting the functional scope (Section 2.1.1), of system data 1 (2.1.2.1), system data 2 (2.1.4.1), the topology and protection data interface parameters (Section 2.2.3.1) have been considered, the fault message, i.e. no. 3229 „PI1 Data fault“ or 3231 „PI2 Data fault“, for the checked interface will disappear. The communication and consistency check has now been completed.
- If the fault message of the interface being checked does not disappear, however, the fault must be found and eliminated. Table 3-22 lists indications that indicate such faults.

Table 3-22 Indications on inconsistencies

No.	Short Text	State	Meaning / Measures
3233	„DT inconsistent“	ON	„Device table inconsistent“: the indexing of the devices is inconsistent (missing numbers or one number used twice, see Section 2.2.3.1)
3234	„DT unequal“	ON	„Device table unequal“: the ID-numbers of the devices are unequal (see Section 2.2.3.1)
3235	„Par. different“	ON	„Parameterization inconsistent“: different functional parameters were set for the devices. They have to be equal at both ends: Differential protection exists or not (see section 2.1.1) Transformer in protected range or not (see section 2.1.1) Nominal frequency (see Section 2.1.2) Operational power or current (see Section 2.1.4)
3487	„Equal IDs“	ON	„Same device address“: The parameter 4710 LOCAL RELAY has been set for several devices.

Finally, there should not be any more fault messages of the protection data interfaces.

Availability of the protection data interfaces

The quality of protection data transmission depends on the availability of the protection data interfaces and the transmission. Therefore, check the statistic information of the device.

Check the following information:

- Indication No. 7753 „PI1A/m“ (availability per minute) and indication No. 7754 „PI1A/h“ (availability per hour) indicate the availability of protection data interface 1. The value of No. 7753 „PI1A/m“ should attain a minimum per-minute-availability of 99.85% after two minutes of operation. The value for No. 7754 „PI1A/h“ should attain a minimum per-hour-availability of 99.85 % after one hour of operation.
- For protection data interface 2 indication No. 7755 „PI2A/m“ and No. 7756 „PI2A/h“ is most relevant, the same limits as for protection data interface 1 apply.

If these values are not attained, the protection communication should be checked.

If GPS synchronisation is used, the transmission times can be retrieved separately for each direction:

- Concerning protection data interface 1, indication No. 7876 „PI1 TD S“ indicates the transmission time in sending direction, No. 7875 „PI1 TD R“ in receiving direction.
- For protection data interface 2 the indications No. 7878 „PI2 TD S“ and No. 7877 „PI2 TD R“ are displayed corresponding to protection data interface 1.

In all other cases, the mean value for both directions will be indicated:

- Indication No. 7751 „PI1 TD“ indicates the transmission time for protection data interface 1.
- Indication No. 7752 „PI2 TD“ indicates the transmission time for protection data interface 2.

Checking further links

If more than two devices have been linked, that is if the object to be protected has more than two ends, or, if two devices have been linked via both protection data interfaces to create redundancy, repeat all checks for every possible link as described above including the consistency check.

If all devices involved in the topology communicate properly and all parameters are consistent, the message No. 3464 „Topo1 complete“ appears.

If there is a ring topology, the message No. 3457 „Ringtopology“ must also appear after closing the ring.

However, if you've got a ring topology which, instead of the indication „Chaintopology“, only issues the indication „Ringtopology“ (no. 3458), the protection data communication is functional but the ring has not yet been closed. Check the missing links as described above including the consistency check until all links to the ring have been made.

Finally, there should be no more fault messages concerning the protection data interfaces.

WEB-Monitor

The topology and the statistics of the protection data interfaces can be graphically displayed on the screen using the WEB-Monitor. This requires a personal computer with web browser. Figure 3-26 shows the general information of the communication topology.

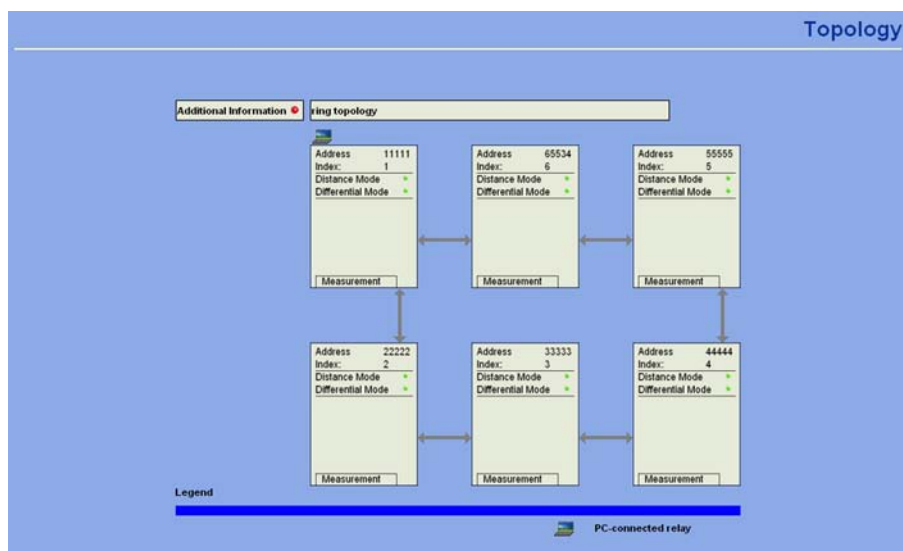


Figure 3-26 Communication topology – Limited representation

The „Additional Information“ button extends the representation by the following information:

The timing master is indicated by a clock icon in the communication topology display.

In the event of an incorrect parameterisation or faulty wiring, the indications „Communication topology not complete“ (topol complete OFF), „Communication topology invalid“ and „Protection topology invalid“ (neither ring topology ON nor chain topology ON) are displayed in a red bar.

The display of the circuit breaker positions is integrated into the topology display. Closed circuit breakers are displayed in green, opened circuit breakers are displayed in red and circuit breakers in an undefined state are displayed in grey.

An LED is used to select whether the communication topology or the protection topology is to be displayed for the participating device. The display of the connections changes correspondingly.

To get an overview of the quality of the individual communication paths, a connection status is displayed for each connection. The statuses can be „OK“, „asynchronous connection“, „high fault rate“.

The status is displayed directly in the communication path display, i.e. in the display of the arrows symbolising the connection. The colour of the connection indicates its status, a legend at the lower screen edge explains the colouration. If a connection fails completely, the connection is no longer displayed.

Table 3-23 Connection status

Status	Colour of the connection display	Remark
OK	green	The connection is OK.
failed	is not displayed	
asynchronous	red	The connection cannot be used for protective functions.
unknown	grey	

In Figure 3-27, the adjacent channel of a ring topology is designated as additional information. This is done by the thinner connection arrows.

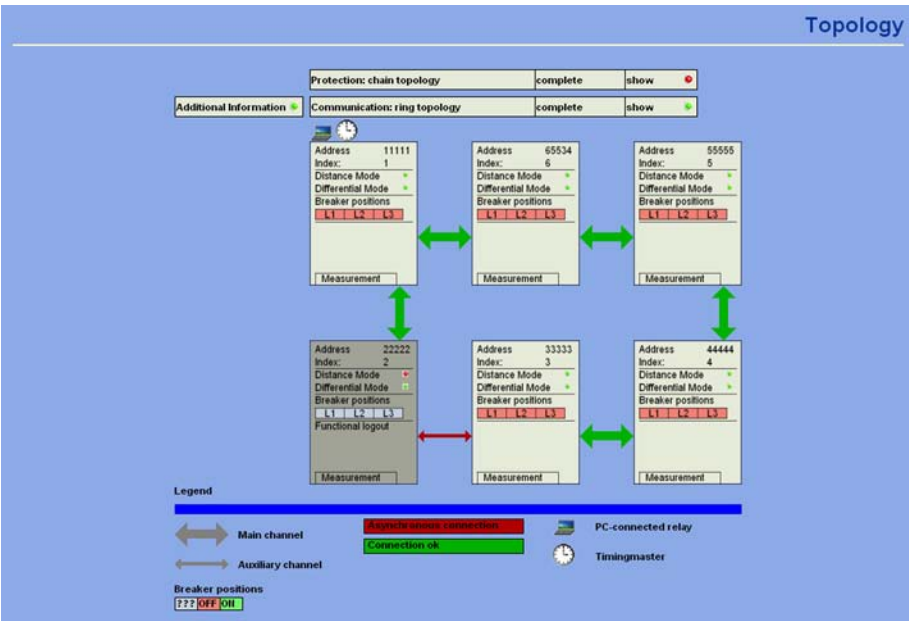


Figure 3-27 Topology – Additional representation

Figure 3-28 shows an example of the protection data interface statistics with 2 protection data interfaces. The values for the transfer times and the availability are displayed. Both RX and TX direction of the transmission delay times are displayed, symmetric conditions are assumed if there is no GPS synchronisation. In this case, the values displayed for the transfer time are identical.

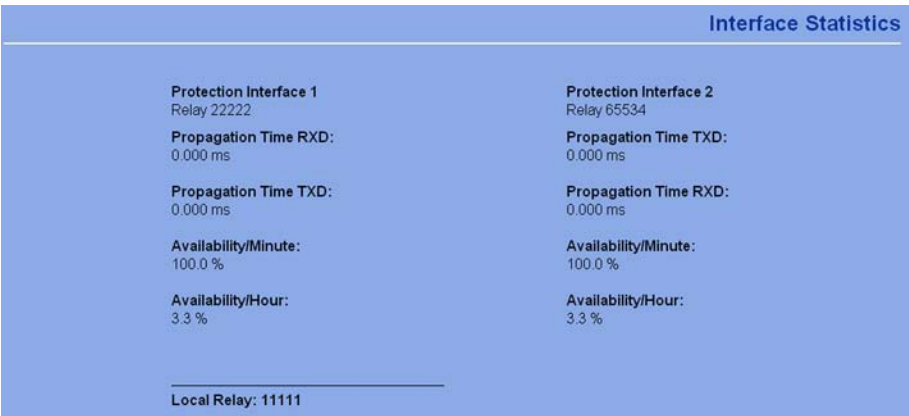


Figure 3-28 Example of viewing the transmission times and availability of the protection data interface

3.3.6 Checking for Breaker Failure Protection

General

If the device is equipped with the breaker failure protection and this function is used, the integration of this protection function into the system must be tested under practical conditions.

Because of the manifold applications and various configuration possibilities of the plant it is not possible to give a detailed description of the necessary test steps. It is important to consider the local conditions and the protection and plant drawings.

Before starting the circuit tests it is recommended to isolate the circuit breaker of the feeder to be tested at both ends, i.e. line disconnectors and busbar disconnectors should be open so that the breaker can be operated without risk.



Caution!

Also for tests on the local circuit breaker of the feeder a trip command to the surrounding circuit breakers can be issued for the busbar.

Non-observance of the following measure can result in minor personal injury or property damage.

Therefore, primarily it is recommended to interrupt the tripping commands to the adjacent (busbar) breakers, e.g. by interrupting the corresponding pickup voltage supply.

Before the breaker is closed again for normal operation the trip command of the feeder protection routed to the circuit breaker must be disconnected so that the trip command can only be initiated by the breaker failure protection.

Although the following list does not claim to be complete, it may also contain points which are to be ignored in the current application.

Auxiliary Contacts of the CB

The circuit breaker auxiliary contact(s) form an essential part of the breaker failure protection system in case they have been connected to the device. Make sure the correct assignment has been checked.

External Initiation Conditions

If the breaker failure protection can also be started by external protection devices, the external start conditions are checked. Depending on the device version and the setting of the breaker failure protection, single-pole or three-pole trip are possible. The pole discrepancy check of the device or the actual breaker may lead to three-pole tripping after single-pole tripping. Therefore check first how the parameters of the breaker failure protection are set. See also Section 2.21.2, addresses 3901 onwards.

In order for the breaker failure protection to be started, a current must flow at least through the monitored phase and the earth. This may be a secondary injected current.

After every start the indication „BF Start“ (no. 1461) must appear in the spontaneous or fault indications.

If only single-pole initiation is possible:

- Start by single-pole trip command of the external protection L1:
Binary input functions „>BF Start L1“ and, if necessary, „>BF release“ (in spontaneous or fault indications). Trip command (depending on settings).
- Start by single-pole trip command of the external protection L2:
Binary input functions „>BF Start L2“ and, if necessary, „>BF release“ (in spontaneous or fault indications). Trip command (depending on settings).
- Start by single-pole trip command of the external protection L3:
Binary input functions „>BF Start L3“ and, if necessary, „>BF release“ (in spontaneous or fault indications). Trip command (dependent on settings).
- Start by three-pole trip command of the external protection via all three binary inputs L1, L2 and L3:
Binary input functions „>BF Start L1“, „>BF Start L2“ and „>BF Start L3“ and, if necessary, „>BF release“ (in spontaneous or fault indications).
Three-pole trip command.

For three-pole initiation:

- Start by three-pole trip command of the external protection :
Binary input functions „>BF Start 3pole“ and, if necessary, „>BF release“ (in spontaneous or fault indications). Trip command (dependent on settings).

Switch off test current.

If start is possible without current flow:

- Starting by trip command of the external protection without current flow:
Binary input functions „>BF Start w/o I“ and, if necessary, „>BF release“ (in spontaneous or fault indications). Trip command (dependent on settings).

Busbar Tripping

The most important thing is the check of the correct distribution of the trip commands to the adjacent circuit breakers in case of breaker failure.

The adjacent circuit breakers are those of all feeders which must be tripped in order to ensure interruption of the fault current should the local breaker fail. These are therefore the circuit breakers of all feeders which feed the busbar or busbar section to which the feeder with the fault is connected.

A general detailed test guide cannot be specified because the layout of the adjacent circuit breakers largely depends on the system topology.

In particular with multiple busbars the trip distribution logic for the surrounding circuit breakers must be checked. Here check for every busbar section that all circuit breakers which are connected to the same busbar section as the feeder circuit breaker under observation are tripped, and no other breakers.

Tripping of the Remote End

If the trip command of the circuit breaker failure protection must also trip the circuit breaker at the remote end of the feeder under observation, the transmission channel for this remote trip must also be checked. This is done together with transmission of other signals according to Sections „Testing of the Teleprotection Scheme with ...“ further below.

Termination of the Checks

All temporary measures taken for testing must be undone, e.g. especially switching states, interrupted trip commands, changes to setting values or individually switched off protection functions.

3.3.7 Checking the Instrument Transformer Connections of One Line End

If secondary test equipment is connected to the device, it is to be removed or, if applying, test switches should be in normal operation position.



Note

It must be taken into consideration that tripping can occur even at the opposite ends of the protected object if connections were made wrong.

Before energising the protected object at any end, short-circuit protection must be ensured at least at the feeding ends. If a separate backup protection (e.g. time over-current protection) is available, this has to be put into operation and switched to alert first.

Voltage and phase rotation check

If the device has been connected to voltage transformers, these connections are checked using primary values. For devices without voltage transformer connection the rest of this margin heading may be skipped.

The voltage transformer connections are individually checked at each end of the protected object. At the other end(s) the circuit breaker(s) remain open first.

- Having closed the circuit breaker, none of the measurement monitoring functions in the device must respond.
 - If there was a fault indication, however, the Event Log or spontaneous indications could be checked to investigate the reason for it.
 - At the indication of symmetry monitoring there might actually be asymmetries of the primary system. If they are part of normal operation, the corresponding monitoring function is set less sensitive (see Section 2.23.1 under margin heading „Symmetry Monitoring“).

The voltages can be read as primary and secondary values on the display at the front, or called up in the PC via the operator or service interface, and compared with the actual measured quantities. Besides the magnitudes of the phase-to-earth and the phase-to-phase voltages, the phase differences of the voltages are also displayed so that the correct phase sequence and polarity of individual transformers can also be seen. The voltages can also be read with the „WEB-Monitor“ (see below, „Current test“).

- The voltages have to be almost equal. All three angles $\varphi (U_{Lx}-U_{Ly})$ must be approximately 120° .
 - If the measured quantities are not plausible, the connections must be checked and corrected after switching off the line. If the phase difference between two voltages is 60° instead of 120° , one voltage must be polarity-reversed. The same applies if there are phase-to-phase voltages which are almost equal to the phase-to-earth voltages instead of having a value that is $\sqrt{3}$ larger. The measurements are to be repeated after correcting the connections.
 - In general, the phase rotation is a clockwise phase rotation. If the system has an anti-clockwise phase rotation, this must be identical at all ends of the protected object. The phase assignment of the measured quantities has to be checked and, if required, corrected after the line has been isolated. Subsequently the measurement has to be repeated.

- Open the circuit breaker for voltage transformers of the feeder. The measured voltages in the operational measured values appear with a value close to zero (small measured voltages are of no consequence).
 - Check the Event Log and the spontaneous indications to make sure that the VT mcb trip was noticed (indication „>FAIL : Feeder VT“ „ON“, No. 361). This requires that the position of the circuit breaker for voltage transformers is connected to the device via a binary input.
- Close the circuit breaker for voltage transformers: The above indication is displayed in the spontaneous indications as „OFF“, i.e. „>FAIL : Feeder VT“ „OFF“.
 - If one of the indications does not appear, the connection and allocation of these signals must be checked.
 - If „ON“ state and „OFF“ state are swapped, the contact type (H-active or L-active) must be checked and corrected.
- The protected object is switched off.
- The check must be carried out for all ends.

3.3.8 Checking the Instrument Transformer Connections of Two Line Ends

Current test

The connections of the current transformers are tested with primary values. A load current of at least 5% of the rated operational current is required. Any direction is possible.

This test cannot replace the visual inspection of the correct current transformer connections. Therefore, the inspection according to Section „Checking the System Connections“ is a prerequisite.

- The current transformer connections are tested at each end of the protected object. The current flows through the protected object. For more than two ends, one current path (i.e. two ends) is tested first.
- After closing the circuit breakers, none of the measured value monitoring functions in the 7SD5 must respond. If there was a fault indication, however, the Event Log or spontaneous indications can be checked to investigate the reason for it.
 - If current summation errors occur, check the matching factors (see Section 2.1.2 under margin heading „Connection of the currents“).
 - Indications from the symmetry monitoring could occur because there actually are asymmetrical conditions in the primary system. If they are part of normal operation, the corresponding monitoring function is set less sensitive (see Section 2.23.1 under margin heading „Symmetry Monitoring“).

The currents can be read as primary and secondary values on the display at the front, or called up in the PC via the operator or service interface, and compared with the actual measured quantities. The phase differences of the currents are indicated in addition to the absolute values so that the correct phase sequence and polarity of individual transformers can also be seen.

The „WEB-Monitor“ allows convenient readout of all measured values with visualization by means of phasor diagrams (Figure 3-29).

- The current amplitudes must be approximately the same. All three angles φ ($I_{Lx}-I_{Ly}$) must be approximately 120° .
 - If the measured values are not plausible, the connections must be checked and corrected after switching off the protected object and short-circuiting the current transformers. If, for example, the phase difference between two currents is 60° instead of 120° , one of the currents must have a reversed polarity. The same applies if a substantial earth current $3 I_0$ occurs:
 - $3 I_0 \approx$ phase current \rightarrow one or two phase currents are missing;
 - $3 I_0 \approx$ twice the phase current \rightarrow one or two phase currents have a reversed polarity.
- The measurements are to be repeated after correcting the connections.
- The above described tests of the measured quantities also have to be performed at the other end of the tested current path. The current value of the other end can also be read out locally as percentage values as well as the phase angles.

In the „WEB-Monitor“ the local and remote measured values can be displayed graphically. The following figures show an example.

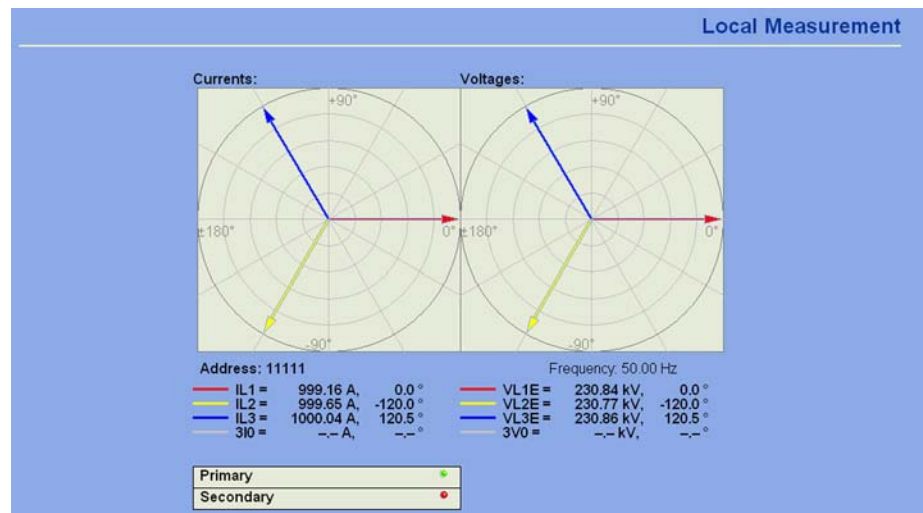


Figure 3-29 Local measured values in the WEB-Monitor - Examples of plausible measured values

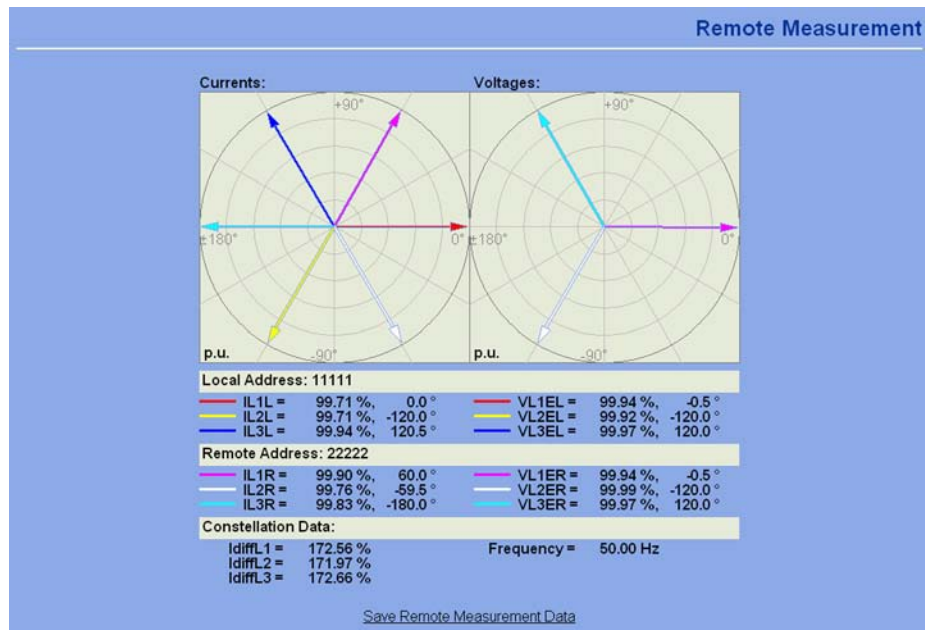


Figure 3-30 Remote measured values in the WEB-Monitor - Examples of plausible measured values

Polarity check

If the device is connected to voltage transformers, the local measured values already allow a polarity check.

For more than two ends, one current path is still tested first. A load current of at least 5% of the rated operational current is still required. Any direction is possible but it must be known.

- With closed circuit breakers, the power values are viewed as primary and secondary values on the front display panel or via the operator or service interface with a personal computer.

Here, again, the „WEB-Monitor“ is a convenient help since the vector diagrams also show the allocation between the currents and voltages (Figure 3-30). Cyclically and acyclically swapped phases can easily be detected.

- The measured power values on the actual device or in DIGSI enable you to verify that they correspond to the load direction (Figure 3-31):

P positive if active power flows into the protected object,

P negative if active power flows toward the busbar,

Q positive if reactive power flows into the protected object,

Q negative if reactive power flows toward the busbar.

Therefore, the power results and their components must have opposite signs at both ends.

It must be taken into consideration that high charging currents, which might occur with long overhead lines or with cables, are capacitive, i.e. correspond to a negative reactive power into the line. In spite of a resistive-inductive load, this may lead to a slightly negative reactive power at the feeding end whereas the other end shows an increased negative reactive power. The lower the load current for the test, the higher the significance of this influence. In order to obtain unambiguous results, you should increase the load current if necessary.

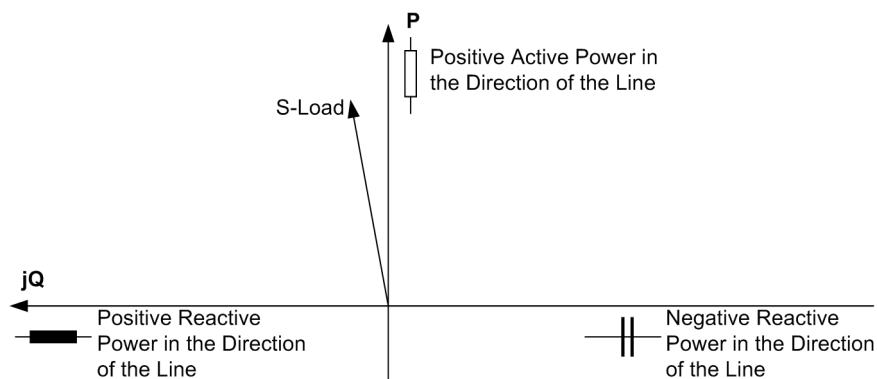


Figure 3-31 Apparent load power

- The power measurement provides an initial indication as to whether the measured values of one end have the correct polarity.
 - If the direction of the reactive power is correct but the sign of the active power is incorrect, cyclic phase swapping of the currents (right) or of the voltages (left) might be the cause;
 - If the direction of the active power is correct but the reactive power has an incorrect sign, cyclic phase swapping of the currents (left) or of the voltages (right) might be the cause;
 - if the signs of both active and reactive power are incorrect, the polarity in address 201 **CT Starpoint** has to be checked and corrected.

The phase angles between currents and voltages must also be conclusive. All three phase angles φ ($U_{Lx}-I_{Lx}$) must be approximately the same and represent the operating status. In the event of power in the direction of the protected object, they correspond to the current phase displacement ($\cos \varphi$ positive); in the event of power in the direction of the busbar they are higher by 180° ($\cos \varphi$ negative). However, charging currents might have to be considered (see above).

- The measurements may have to be repeated after correcting the connections.
- The above described tests of the measured quantities also have to be performed at the other end of the tested current path. The current and voltage values as well as the phase angles of the other end can also be read out locally as percentage values. Please observe that currents flowing through the object (without charging currents) ideally have opposite signs at both ends, i.e. they are turned by 180° . In the „WEB-Monitor“, the local and remote measured values can be shown graphically. An example is shown in Figure 3-30.
- The protected object is now switched off, i.e. the circuit breakers are opened.

Polarity check for voltage input U_4

Depending on the application of the voltage measuring input U_4 , a polarity check may be necessary. If no measuring voltage is connected to this input, this section is irrelevant.

If input U_4 is used for measuring a voltage for overvoltage protection (**P.System Data 1** address 210 **U4 transformer = Ux transformer**), no polarity check is necessary because the polarity is irrelevant here. The voltage magnitude was checked before.

If input U_4 is used for the measurement of the displacement voltage U_{en} (**P.System Data 1** address 210 **U4 transformer = Udelta transf.**), the polarity is checked together with the current test (see below).

If input U_4 is used for measuring a busbar voltage for synchronism check (**P.System Data 1** address 210 **U4 transformer = U_{sy2} transf.**), the polarity must be checked as follows using the synchronism check function:

Only for Synchronism Check

The device must be equipped with the synchronism and voltage check function which must be configured under address 135 **Enabled** (see section 2.1.1.3).

The synchronisation voltage U_{sy2} must be entered correctly at address 212 **U_{sy2} connection** (see Section 2.1.2.1).

If there is no transformer between the two measuring points, address 214 φ **U_{sy2}-U_{sy1}** must be set to **0°** (see Section 2.1.2.1).

If the measurement is made across a transformer, this angle setting must correspond to the phase rotation resulting from the vector group of the transformer (see also the example in section 2.1.2.1).

If necessary, different transformation ratios of the transformers may have to be considered from both measuring points U_{sy1} and U_{sy2} at address 215 **U_{sy1}/U_{sy2} ratio**.

The synchronism and voltage check must be switched **ON** under address 3501 **FCT Synchronism**.

An additional help for the connection control are the messages 2947 „Sync. Udifff>“ and 2949 „Sync. φ -diff>“ in the spontaneous annunciations.

- Circuit breaker is open. The feeder is isolated (zero voltage). The VTmcb's of both voltage transformer circuits must be closed.
- For the synchronism check the program **AR OVERRIDE = YES** (address 3519) is set; the other programs (addresses 3515 to 3518) are set to **NO**.
- Via binary input (No. 2906 „>Sync. Start AR“) initiate the measuring request. The synchronism check must release closing (message „Sync. release“, No. 2951). If not, check all relevant parameters again (synchrocheck configured and enabled correctly, see Sections 2.1.1.3, 2.1.2.1 and 2.17.2).
- Address 3519 **AR OVERRIDE** must be set to **NO**.
- Then the circuit breaker is closed while the line isolator is open (see Figure 3-32). Both voltage transformers therefore measure the same voltage.
- The program **AR SYNC-CHECK = YES** (address 3515) is set for synchronism check.
- Via binary input (No. 2906 „>Sync. Start AR“) initiate the measuring request. The synchronism check must release closing (message „Sync. release“, No. 2951).

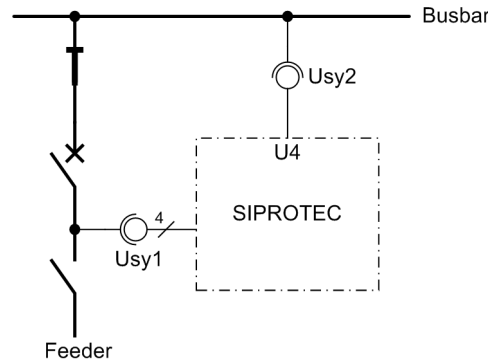


Figure 3-32 Measuring voltages for the synchrocheck — example

- If not, first check whether one of the before named messages 2947 „Sync. Udifff>“ or 2949 „Sync. ϕ -difff>“ is available in the spontaneous messages. The indication „Sync. Udifff>“ indicates that the magnitude (ratio) adaptation is incorrect. Check address 215 **Usy1/Usy2 ratio** and recalculate the adaptation factor, if necessary.
The indication „Sync. ϕ -difff>“ indicates that the phase relation, in this example of the busbar voltage, does not match the setting at address 212 **Usy2 connection** (see Section 2.1.2.1). When measuring across a transformer, address 214 ϕ **Usy2-Usy1** must also be checked; this must adapt the vector group (see Section 2.1.2.1). If these are correct, there is probably a reverse polarity of the voltage transformer terminals for U_{sy2} .
- The program **AR Usy1>Usy2<= YES** (address 3517) and **AR SYNC-CHECK = YES** (address 3515) is set for synchronism check.
- Open the VT mcb of the measuring point U_{sy2} (No. 362 „>FAIL:Usy2 VT“).
- Via binary input (no. 2906 „>Sync. Start AR“) a measuring request is entered. There is no close release. If there is, the VT mcb for the measuring point U_{sy2} is not allocated. Check whether this is the required state, alternatively check the binary input „>FAIL:Usy2 VT“ (no. 362).
- Reclose the VT mcb of the measuring point U_{sy2} .
- Open the circuit breaker.
- The program **AR Usy1<Usy2> = YES** (address 3516) and **AR Usy1>Usy2<= NO** (address 3517) is set for synchronism check.
- Via binary input (No. 2906 „>Sync. Start AR“) initiate the measuring request. The synchronism check must release closing (message „Sync. release“, No. 2951). If not, check all voltage connections and the corresponding parameters again carefully as described in Section 2.1.2.1.
- Open the VT mcb of the measuring point U_{sy1} (No. 361 „>FAIL:Feeder VT“).
- Via binary input (No. 2906 „>Sync. Start AR“) initiate the measuring request. No close release is given.
- Reclose the VT mcb of the measuring point U_{sy1} .

Addresses 3515 to 3519 must be restored as they were changed for the test. If the allocation of the LEDs or signal relays was changed for the test, this must also be restored.

Polarity check for current input I_4

If the standard connection of the device is used whereby current input I_4 is connected in the starpoint of the set of current transformers (refer also to the connection circuit diagram in the Appendix A.3), then the correct polarity of the earth current path in general automatically results.

If, however, the current I_4 is derived from a separate summation CT an additional direction check with this current is necessary.

If the device features the sensitive current input for I_4 and if it is used in an isolated or resonant-earthed system, the polarity check for I_4 was already carried out with the earth fault check according to the previous section. Then this section can be ignored.

Otherwise the test is carried out with a disconnected trip circuit and primary load current. It must be noted that during all simulations that do not exactly correspond with situations that may occur in practice, the non-symmetry of measured values may cause the measured value monitoring to pickup. This must therefore be ignored during such tests.



DANGER!

Hazardous voltages during interruptions in secondary circuits of current transformers

Non-observance of the following measure will result in death, severe personal injury or substantial property damage.

Short-circuit the current transformer secondary circuits before current connections to the device are opened.

I_4 from Own Line

To generate a displacement voltage, the e–n winding of one phase in the voltage transformer set (e.g. L1) is bypassed (see Figure 3-33). If no connection on the e–n windings of the voltage transformer is available, the corresponding phase is open circuited on the secondary side. Via the current path only the current from the current transformer in the phase from which the voltage in the voltage path is missing is connected; the other CTs are short-circuited. If the line carries resistive-inductive load, the protection is basically subjected to the same conditions that exist during an earth fault in the direction of the line.

At least one stage of the earth fault protection must be set to be directional (address 31x0 of the earth fault protection). The pickup threshold of this stage must be below the load current flowing on the line; if necessary the pickup threshold must be reduced. Note down the parameters that you have changed.

After switching the line on and off again, the direction indication must be checked: in the fault log the messages „EF Pickup“ and „EF forward“ must at least be present. If the directional pickup is not present, either the earth current connection or the displacement voltage connection is incorrect. If the wrong direction is indicated, either the direction of load flow is from the line toward the busbar or the earth current path has a swapped polarity. In the latter case, the connection must be rectified after the line has been isolated and the current transformers short-circuited.

The voltages can be read on the display at the front, or called up in the PC via the operator or service interface, and compared with the actual measured quantities as primary or secondary values. The absolute values as well as the phase differences of the voltages are indicated so that the correct phase sequence and polarity of individual

transformers can also be seen. The voltages can also be read out with the Web-Monitor.

In the event that the pickup alarms were not even generated, the measured earth (residual) current may be too small.

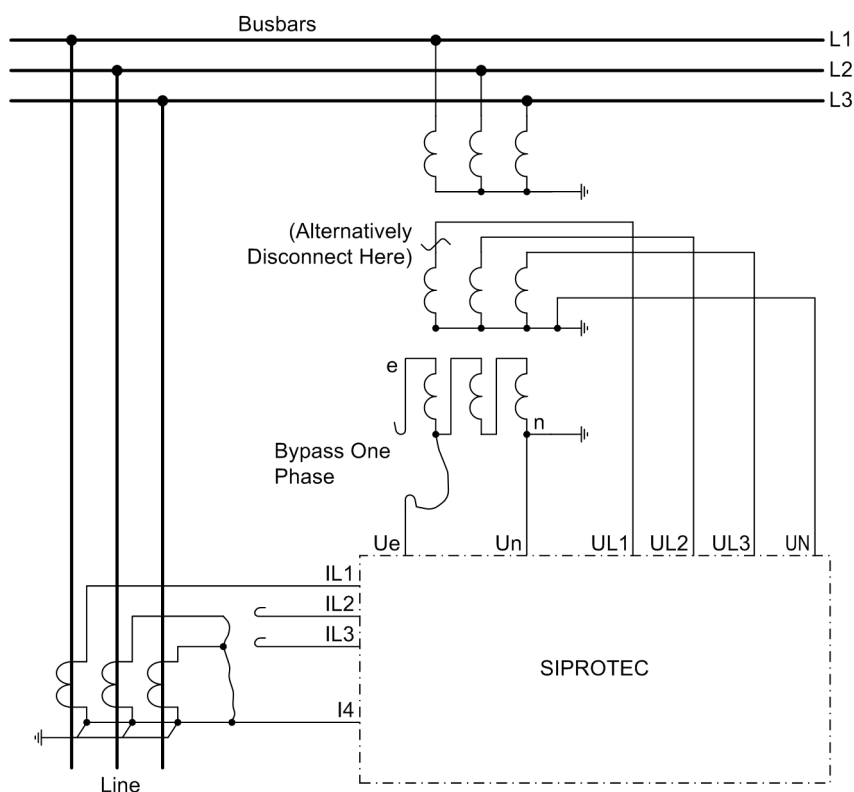


Figure 3-33 Polarity check for I_4 , example with current transformer configured in a Holmgreen connection



Note

If parameters were changed for this test, they must be returned to their original state after completion of the test!

I_4 from Parallel Line

If I_4 is the current measured on a parallel line, the above procedure is done with the set of current transformers of the parallel line (Figure 3-34). The same method as above is used here, except that a single phase current from the parallel feeder is measured. The parallel line must carry load while the protected line should carry load. The line remains switched on for the duration of the measurement.

If the polarity of the parallel line earth current measurement is correct, the impedance measured in the tested loop (in the example of Figure 3-34 this is L1-E) should be reduced by the influence of the parallel line. The impedance can be read out as primary or secondary quantity in the list of operational measured values.

If, on the other hand, the measured impedance increases when compared to the value without parallel line compensation, the current measuring input I_4 has a swapped polarity. After isolation of both lines and short-circuiting of the current transformer sec-

ondary circuits, the connections must be checked and rectified. Subsequently the measurement must be repeated.

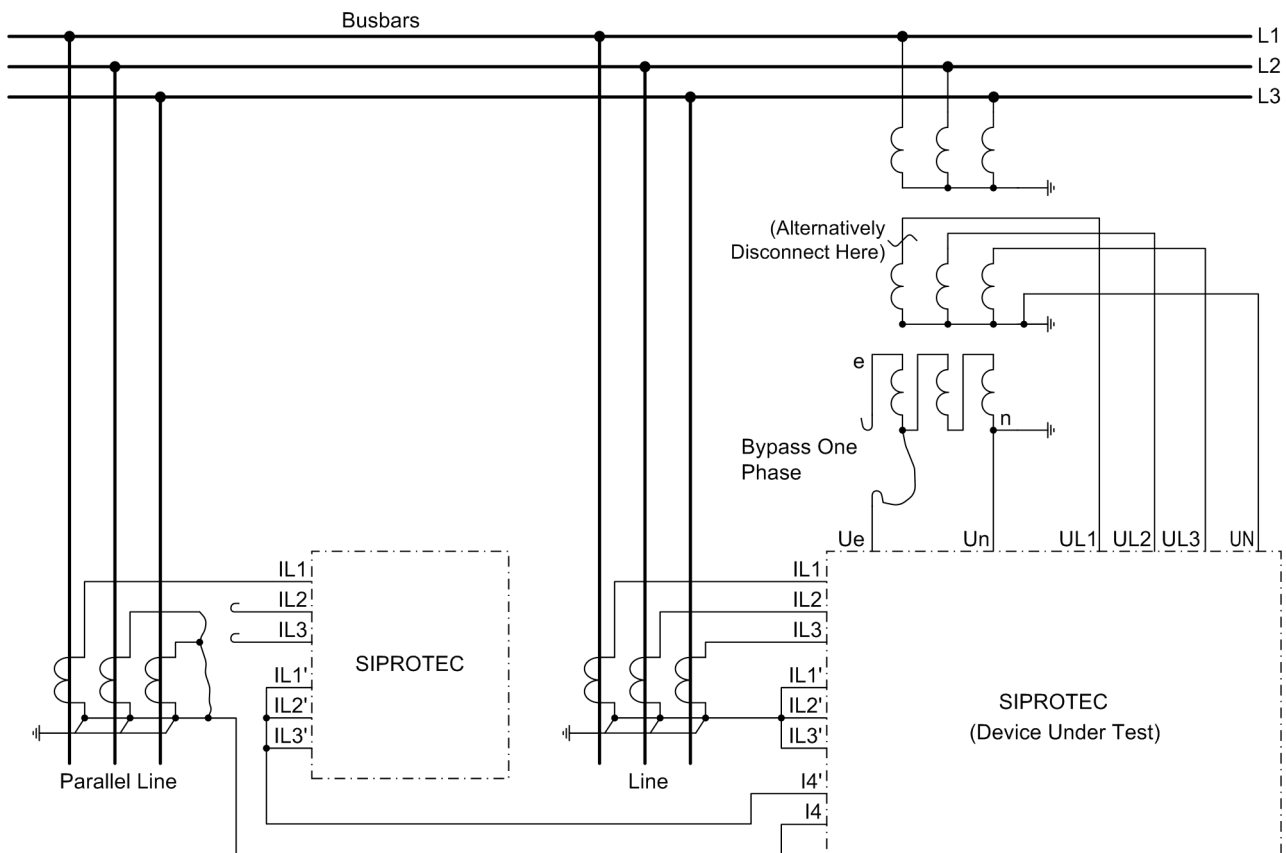


Figure 3-34 Polarity check of I_4 , example with earth current of a parallel line

I_4 from a Power Transformer Starpoint

If I_4 is the earth current measured in the star-point of a power transformer and intended for the earth fault protection direction determination (for earthed networks), then the polarity check can only be carried out with zero sequence current flowing through the transformer. A test voltage source is required for this purpose (single-phase low voltage source).



Caution!

Feeding of zero sequence currents via a transformer without broken delta winding.

Inadmissible heating of the transformer is possible!

Zero sequence current should only be routed via a transformer if it has a delta winding, therefore e.g. Yd, Dy or Yy with a compensating winding.



DANGER!

Energized equipment of the power system! Capacitive coupled voltages at disconnected equipment of the power system !

Non-observance of the following measure will result in death, severe personal injury or substantial property damage.

Primary measurements must only be carried out on disconnected and earthed equipment of the power system!

The configuration shown in Figure 3-35 corresponds to an earth current flowing through the line, in other words an earth fault in the forward direction.

At least one stage of the earth fault protection must be set to be directional (address 31xx of the earth fault protection). The pickup threshold of this stage must be below the load current flowing on the line; if necessary the pickup threshold must be reduced. The parameters that have been changed, must be noted.

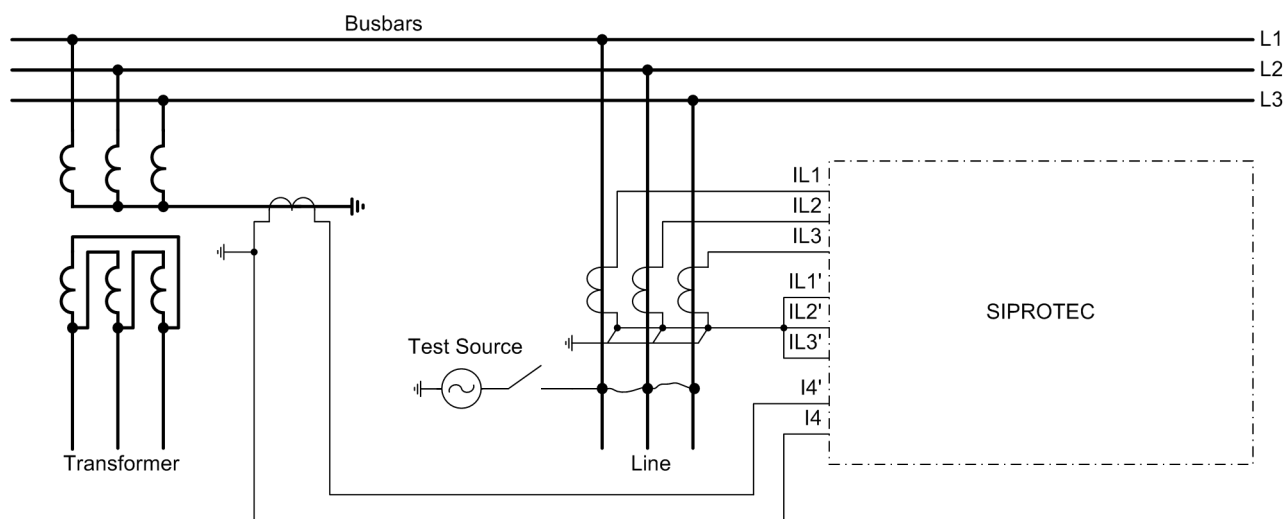


Figure 3-35 Polarity check of I_4 , example with earth current from a power transformer star point

After switching the test source on and off again, the direction indication must be checked: In the fault log the messages „EF Pickup“ and „EF forward“ must at least be present. If the directional pickup alarm is missing, a connection error of the earth current connection I_4 is present. If the wrong direction is indicated, the earth current connection I_4 has a swapped polarity. In the previous case the connection must be rectified after the test source has been switched off. The measurements must then be repeated.

If the pickup alarm is missing altogether, this may be due to the fact that the test current is too small.



Note

If parameters were changed for this test, they must be returned to their original state after completion of the test !

Measuring the differential and restraint currents

The test for two ends is terminated with the reading of the differential, restraint and load currents. It is simultaneously checked that the current transformer connections have been correctly restored after the I_4 test (if performed).

- Read out the differential, restraint and load currents. They are available for every phase on the device display or in DIGSI in the measured values.
 - The differential currents must be low, at least one scale less than the currents flowing through. If high charging currents are to be expected in long overhead lines or cables, these are additionally included in the differential currents.
 - The maximum values of the read measured values for the charging current (3 values) are converted to Ampere and entered in **I - DIFF>**. The recommended setting for the pickup threshold is $1 \cdot I_{cN}$.
 - The restraint currents result from the pickup value **I - DIFF>** (address 1210, see Section 2.3.2) plus the sum of the fault currents to be tolerated: Such as the locally permissible current transformer errors according to address 253 **E% ALF / ALF_N** (see Section 2.1.2), the permissible current transformer errors at the other ends according to the respective setting, as well as the internal estimation of the system errors (frequency, synchronisation and delay time difference errors). With the default values for **I - DIFF>** ($0.3 I_N$) and **E% ALF / ALF_N** ($5.0 \% = 0.05$) the following ensues:

$$\frac{I_{Rest}}{I_{NB}} = \underbrace{0.3 \cdot \frac{I_{N1}}{I_{NB}}}_{\substack{\text{Setting Value} \\ \text{IDIFF>}}} + \underbrace{0.05 \cdot \frac{I}{I_{N1}}}_{\substack{\text{Adm. Local} \\ \text{Transformer} \\ \text{Error}}} + \underbrace{0.05 \cdot \frac{I}{I_{N2}}}_{\substack{\text{Adm. Remote} \\ \text{Transformer} \\ \text{Error}}} + \text{System Error}$$

With

- I the actually flowing current,
- I_{NB} the rated operational current (as parameterised),
- I_{N1} the primary nominal current of the local current transformers,
- I_{N2} the primary nominal current of the current transformers of the remote end.

In the „WEB-Monitor“ the differential and restraint currents are graphically displayed in a characteristics diagram. An example is shown in Figure 3-36.

- If there is a differential current in the size of twice the through-flowing current, you may assume a polarity reversal of the current transformer(s) at one line end. Again check the polarity and set it right after short-circuiting all the three current transformers. If you have modified these current transformers, also perform a power or angle test.
- Finally, open the circuit breaker again.
- If parameter settings have been changed for the tests, reset them to the values necessary for operation.

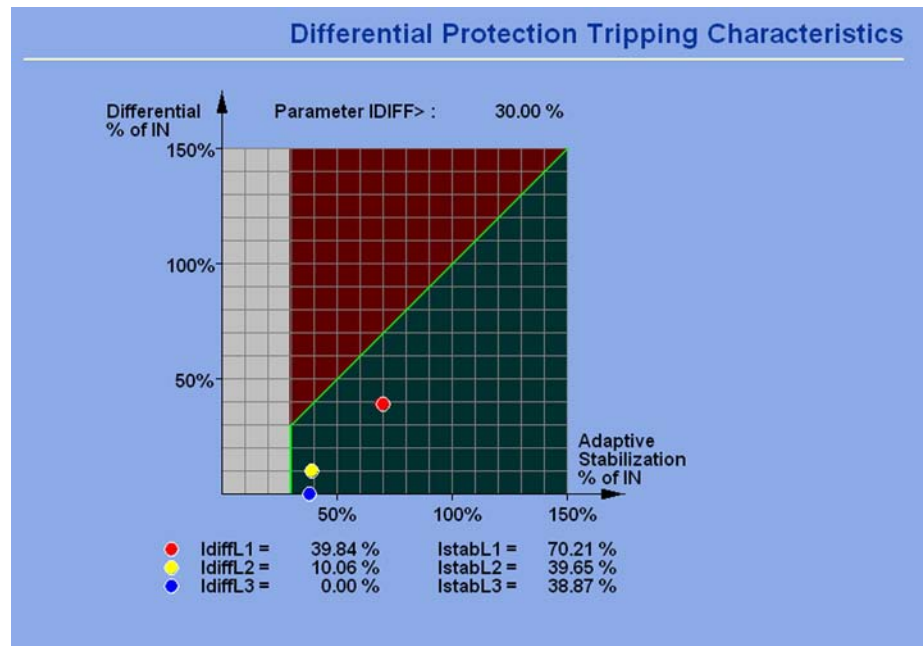


Figure 3-36 Differential and restraint currents - Example of plausible measurements

3.3.9 Checking the Instrument Transformer Connections for More than Two Ends

If there are more than two ends, all tests according to the above Section „Checking the Instrument Transformer Connections for More than Two Ends“ - as far as they are applicable in this case - have to be repeated for the other current paths in such a way that all ends of the protected object have been included in the current flow test at least once. It is not necessary to test every possible current path.

At the ends not involved in the test the circuit breakers remain open. Also pay attention to all safety notes — especially the DANGER warning in the above Section „Checking the Instrument Transformer Connections for More than Two Ends“.

The circuit breakers are reopened after the last test.

In the event that parameters were modified for the tests, they finally have to be set to the values necessary for operation.

3.3.10 Measuring the Operating Time of the Circuit Breaker

Only for Synchronism Check

If the device is equipped with the function for synchronism and voltage check and it is applied, it is necessary - under asynchronous system conditions - that the operating time of the circuit breaker is measured and set correctly when closing. If the synchronism check function is not used or only for closing under synchronous system conditions, this section is irrelevant.

For measuring the operating time a setup as shown in Figure 3-37 is recommended. The timer is set to a range of 1 s and a graduation of 1 ms.

The circuit breaker is closed manually. At the same time the timer is started. After closing the circuit breaker poles the voltage U_{sy1} or U_{sy2} appears and the timer is stopped. The time displayed by the timer is the real circuit breaker closing time.

If the timer is not stopped due to an unfavourable closing moment, the attempt will be repeated.

It is particularly favourable to calculate the mean value from several (3 to 5) successful switching attempts.

Set the calculated time under address 239 as **T-CB close** (under **P.System Data 1**). Select the next lower settable value.



Note

The operating time of the accelerated output relays for command tripping is taken into consideration by the device itself. The trip command is to be allocated to such a relay. If this is not the case, then add 3 ms to the measured circuit breaker operating time for achieving a greater response time of the „normal“ output relay. If high-speed relays are used, on the other hand, you must deduct 4 ms from the measured circuit breaker operating time.

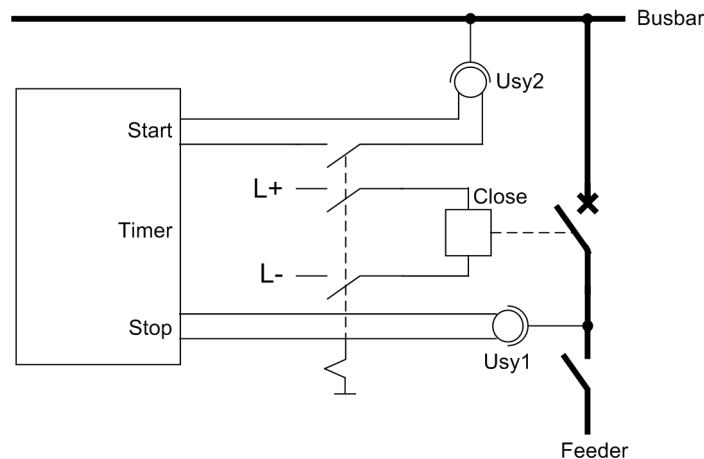


Figure 3-37 Measuring the circuit breaker closing time

3.3.11 Checking the Teleprotection System with Distance Protection



Note

If the device is intended to operate with teleprotection, all devices used for the transmission of the signals must initially be commissioned according to the corresponding instructions.

The following section applies only for the conventional transmission procedures. It is not relevant for usage with protection data interfaces.

For the functional check of the signal transmission, the earth fault protection should be disabled, to avoid signals from this protection influencing the tests: address 3101 **FCT EarthF1t0/C = OFF**.

Check for Pilot Wire Comparison

The operating mode pilot wire comparison differs considerably from other teleprotection systems as far as the type of transmission (DC closed circuit-loop) is concerned. The examination is described in the following. If a different transmission scheme is applied, this part can be skipped.

Detailed information on the function of the pilot-wire comparison is available in Subsection 2.7.

For **Teleprot. Dist.** in address 121 **Pilot wire comp** must be configured and the **FCT Telep. Dis.** must be switched under address 2101 **ON**. The protection relays at both line ends must be operating. First, the quiescent current loop of the pilot wire comparison is not supplied with auxiliary voltage.

A fault is simulated outside of zone Z1, but within zone Z1B. Since stage Z1B is blocked, the distance protection is only tripped in a higher-leveled zone (usually with T2). This check must be carried out at both line ends.

The direct voltage for the quiescent current loop of the pilot wire comparison is switched to the line. The loop is then fed with quiescent current.

At one line end a fault is simulated outside the first zone, but within overreach zone Z1B. The command is tripped to T1B. This check must be carried out at both line ends.

Since the quiescent current loop is part of the nature of the pilot wire comparison, these tests also check if the transmission process is performed correctly. All other tests which are described in this Section can be passed over. However, please observe the last margin heading „Important for All Schemes“!

Checking of Reverse Interlocking

The checking of the reverse interlocking is described below. If a different transmission scheme is applied, this part can be skipped.

For more detailed information about the reverse interlocking see Section 2.7.

For **Teleprot. Dist.** in address 121 **Rev. Interlock** must be configured and the **FCT Telep. Dis.** at address 2101 must be switched **ON**. The distance protection of the infeed and protection devices of all outgoing feeders must operate. At the beginning no auxiliary voltage is fed to the line for the reverse interlocking.

The following paragraphs describe the testing in a blocked state, i.e. the pickup signals of the outgoing devices are connected in parallel and block the tested device of the infeed. In case of release (the NC contacts of the outgoing devices are connected in series) the tests have to be reinterpreted respectively.

A fault is simulated within zone Z1 and overreaching zone Z1B. As a result of the missing blocking signal, the distance protection trips after time delay T1B (slightly delayed).

The direct voltage for reverse interlocking is now switched to the line. The precedent test is repeated, the result will be the same.

At each of the protection devices of the outgoing circuits, a pickup is simulated. Meanwhile, another short-circuit is simulated as described before for the distance protection of the infeed. Now, the distance protection trips after time T1, which has a longer setting.

These tests also check the proper functioning of the transmission path. All other tests which are described in this Section can be passed over. However, please observe the last margin heading „Important for all schemes“!

Checking for permissive release

Requirements: **Teleprot. Dist.** is configured in address 121 to one of the comparison schemes using permissive signal, i.e. **POTT** or **Dir.Comp.Pickup** or

UNBLOCKING. Furthermore, at address 2101 **FCT Telep. Dis. ON** is switched. The corresponding send and receive signals must be assigned to the corresponding binary output and input. For the echo function, the echo signal must be separately assigned to the transmit output!

Detailed information on the function of permissive scheme is available in Section 2.7.

A simple check of the signal transmission path from one line end is possible via the echo function if these permissive schemes are used. The echo function must be activated at both line ends, i.e. address 2501 **FCT Weak Infeed = ECHO only**; with the setting **ECHO and TRIP** a trip command may result at the remote end of the check!

A short-circuit is simulated outside Z1, with **POTT** or **UNBLOCKING** inside Z1B, with **Dir.Comp.Pickup** somewhere in forward direction. This may be done with secondary injection test equipment. As the device at the opposite line end does not pick up, the echo function comes into effect there, and consequently a trip command is issued at the line end being tested.

If no trip command appears, the signal transmission path must be checked again, especially also the assignment of the echo signals to the transmit outputs.

In case of a phase-segregated transmission the above-mentioned checks are carried out for each phase. The correct phase allocation is also to be checked.

This test must be performed at both line ends, in the case of three terminal lines at each end for each signal transmission path.

The functioning of the echo delay time and the derivation of the circuit breaker switching status should also be tested at this time (the functioning of the protection at the opposite line end is tested):

The circuit breaker of the protected feeder must be opened. The circuit breaker at the opposite line end also must be opened. As described above, a fault is again simulated. A receive signal impulse delayed by somewhat more than twice the signal transmission time appears via the echo function at the opposite line end, and the device generates a trip command.

The circuit breaker at the opposite line end is now closed (while the isolators remain open). After simulation of the same fault, the receive and trip command appear again. In this case however, they are additionally delayed by the echo delay time of the device at the opposite line end (0.04 s presetting, address 2502 **Trip/Echo DELAY**).

If the response of the echo delay is opposite to the sequence described here, the operating mode of the corresponding binary input (H-active/L-active) at the opposite line end must be rectified.

The circuit breaker must be opened again.

These tests must be performed at both line ends, on a three terminal line at each line end for each transmission path. However, please finally observe the last margin heading, „Important for all procedures“!

Checking in Blocking Scheme

Requirements: **Teleprot. Dist.** is configured in address 121 to the comparison schemes using blocking signal, i.e. **BLOCKING**; in addition, at address 2101 **FCT Telep. Dis. ON** is switched. Naturally the corresponding send and receive signals must also be assigned to the corresponding binary output and input.

For more details about the function of the blocking scheme refer to Subsection 2.7. In the case of the blocking scheme, communication between the line ends is necessary.

On the transmitting end, a fault in the reverse direction is simulated, while at the receiving end a fault in Z1B but beyond Z1 is simulated. This can be achieved with a set of secondary injection test equipment at each end of the line. As long as the transmitting end is transmitting, the receiving end may not generate a trip signal, unless this results from a higher distance stage. After the simulated fault at the transmitting line end has been cleared, the receiving line end remains blocked for the duration of the transmit prolongation time of the transmitting line end (**Send Prolong.**, address 2103). If applicable, the transient blocking time of the receiving line end (**TrBlk BlockTime**, address 2110) appears additionally if a finite delay time **TrBlk Wait Time** (address 2109) has been set and exceeded.

In case of a phase-segregated transmission the above-mentioned checks are carried out for each phase. The correct phase allocation is also to be checked.

This test must be performed at both line ends, on a three terminal line at each line end for each transmission path. However, please finally observe the last margin heading „Important for all schemes“!

Checking with Permissive Underreach Transfer Trip

Requirements: **Teleprot. Dist.** is configured in address 121 to a permissive underreach transfer trip scheme, i.e. **PUTT (Z1B)** or **PUTT (Pickup)**. Furthermore, in address 2101 **FCT Telep. Dis. ON** is switched. Naturally the corresponding send and receive signals must also be assigned to the corresponding binary output and input.

Detailed information on the function of permissive underreach transfer is available in Subsection 2.7. Communication between the line ends is necessary.

On the transmitting end, a fault in zone Z1 must be simulated. This may be done with secondary injection test equipment.

Subsequently, on the receiving end, at **PUTT (Z1B)** a fault inside Z1B, but outside Z1 is simulated, at **PUTT (Pickup)** any fault is simulated. Tripping takes place immediately, (or in T1B), without signal transmission only in a higher distance stage. In case of direct transfer trip an immediate trip is always executed at the receiving end.

In case of a phase-segregated transmission the above-mentioned checks are carried out for each phase. The correct phase allocation is also to be checked.

This test must be performed at both line ends, on a three terminal line at each line end for each transmission path. However, please finally observe the last margin heading „Important for all schemes“!

Important for all Schemes

If the earth fault protection was disabled for the signal transmission tests, it may be re-enabled now. If setting parameters were changed for the test (e.g. mode of the echo function or timers for unambiguous observation of sequences), these must now be reset to the prescribed values.

3.3.12 Testing of the Teleprotection System with Earth-fault Protection

This section is only relevant if the device is connected to an earthed system and earth fault protection is applied. The device must therefore be provided with the earth fault protection according to its ordering code (16th MLFB position = 4 or 5 or 6 or 7). Which group of characteristics is to be available must have been preset during configuration to **Earth Fault 0/C** (address 131). Furthermore, the teleprotection must be used for the earth fault protection (address 132 **Teleprot. E/F** configured to one of the possible methods). In all other cases this section does not apply.

If the signal transmission path for the earth fault protection is the same path that was already tested in conjunction with the distance protection according to the previous Section, then this Section is of no consequence and may be skipped.

For the functional check of the earth fault protection signal transmission, the distance protection should be disabled, to avoid interference of the tests by signals from the distance protection: address 1501 **FCT Distance = OFF**.

Checking with Permissive Schemes

Requirements: **Teleprot. E/F** is configured in address 132 to one of the comparison schemes using permissive signal, i.e. **Dir.Comp.Pickup** or **UNBLOCKING**; in addition, at address 3201 **FCT Telep. E/F ON** is switched. The corresponding send and receive signals must be assigned to the corresponding binary output and input. For the echo function, the echo signal must be separately assigned to the transmit output.

Detailed information on the function of permissive scheme is available in Section 2.9.

A simple check of the signal transmission path from one line end is possible via the echo circuit if these release techniques are used. The echo function must be activated at both line ends, i.e. address 2501 **FCT Weak Infeed = ECHO only**; with the setting **ECHO and TRIP** at the remote end of the check a trip command may result!

An earth fault is simulated in the direction of the line. This may be done with secondary test equipment. As the device at the opposite line end does not pick up, the echo function comes into effect there, and consequently a trip command is generated at the line end being tested.

If no trip command appears, the signal transmission path must be checked again, especially also the assignment of the echo signals to the transmit outputs.

This test must be carried out at both line ends, in the case of three terminal lines at each end for each signal transmission path.

The functioning of the echo delay time and monitoring of the circuit breaker switching status must also be tested at this time if this has not already been done in the previous section (the operation of the protection at the opposite line end is checked):

The circuit breaker on the protected feeder must be opened, as must be the circuit breaker at the opposite line end. A fault is again simulated as before. A receive signal impulse delayed by somewhat more than twice the signal transmission time appears via the echo function at the opposite line end, and the device generates a trip command.

The circuit breaker at the opposite line end is now closed (while the isolators remain open). After simulation of the same fault, the receive and trip command appear again. In this case however, they are additionally delayed by the echo delay time of the device at the opposite line end (0.04 s presetting, address 2502 **Trip/Echo DELAY**).

If the response of the echo delay is opposite to the sequence described here, the operating mode of the corresponding binary input (H-active/L-active) at the opposite line end must be rectified.

The circuit breaker must be opened again.

This test must also be carried out at both line ends, in the case of three terminal lines at each line end and for each signal transmission path. Finally, please observe the last margin heading „Important for All Schemes“!

Checking in Blocking Scheme

Requirements: **Teleprot. E/F** is configured in address 132 to the comparison schemes using blocking signal, i.e. **BLOCKING**; in addition, at address 3201 **FCT**

Telep. E/F ON is switched. The corresponding send and receive signals must be assigned to the corresponding binary output and input.

For more details about the function of the blocking scheme refer to Section 2.9. In the case of the blocking scheme, communication between the line ends is necessary.

An earth fault in reverse direction is simulated at the transmitting line end. Subsequently, a fault at the receiving end in the direction of the line is simulated. This can be achieved with a set of secondary injection test equipment at each end of the line. As long as the transmitting end is transmitting, the receiving end may not generate a trip signal, unless this results from a higher distance stage. After the simulated fault at the transmitting line end is switched off, the receiving line end remains blocked for the duration of the transmit prolongation time of the transmitting line end (**Send Prolong.**, address 3203). If applicable, the transient blocking time of the receiving line end (**TrBlk BlockTime**, address 3210) is added if a finite delay time **TrBlk Wait Time** (address 3209) has been set and exceeded.

This test must be performed at both line ends, on a three terminal line at each line end for each transmission path. However, please finally observe the last margin heading „Important for All Schemes“!

Important for all Schemes

If the distance protection was switched off for the signal transmission tests, it may be switched on now. If setting parameters were changed for the test (e.g. mode of the echo function or timers for unambiguous observation of sequences), these must now be re-set to the prescribed values.

3.3.13 Check of the Signal Transmission for Breaker Failure Protection and/or End Fault Protection

If the transfer trip command for breaker failure protection or stub fault protection is to be transmitted to the remote end, this transmission must also be checked.

To check the transmission the breaker failure protection function is initiated by a test current (secondary) with the circuit breaker in the open position. Make sure that the correct circuit breaker reaction takes place at the remote end.

Each transmission path must be checked on lines with more than two ends.

3.3.14 Check of the Signal Transmission for Internal and External Remote Tripping

The 7SD5 provides the possibility to transmit a remote trip signal to the opposite line end if a signal transmission path is available for this purpose. This remote trip signal may be derived from both an internally generated trip signal as well as from any signal coming from an external protection or control device.

If an internal signal is used, the initiation of the transmitter must be checked. If the signal transmission path is the same and has already been checked as part of the previous sections, it need not be checked again here. Otherwise the initiating event is simulated and the response of the circuit breaker at the opposite line end is verified.

In the case of the distance protection, the permissive underreach scheme may be used to trip the remote line end. The procedure is then the same as was the case for permissive underreach (under „Checking with Permissive Underreach Transfer Trip“); however the received signal causes a direct trip.

For the remote transmission, the external command input is employed on the receiving line end; it is therefore a prerequisite that: **DTT Direct Trip** is set in address 122 **Enabled** and **FCT Direct Trip** is set in address 2201 **ON**. If the signal transmission path is the same and has already been checked as part of the previous sections, it need not be checked again here. A function check is sufficient, whereby the externally derived command is executed. For this purpose the external tripping event is simulated and the response of the circuit breaker at the opposite line end is verified.

3.3.15 Testing User-defined Functions

The device has a vast capability for allowing functions to be defined by the user, especially with the CFC logic. Any special function or logic added to the device must be checked.

A general procedure cannot in the nature of things be specified. Configuration of these functions and the set value conditions must be actually known beforehand and tested. Especially, possible interlocking conditions of the switching devices (circuit breakers, isolators, grounding electrodes) must be observed and checked.

3.3.16 Trip and Close Test with the Circuit Breaker

The circuit breaker and tripping circuits can be conveniently tested by the device 7SD5.

The procedure is described in detail in the SIPROTEC 4 System Description.

If the test does not produce the expected results, the cause may be established from the text on the display of the device or the PC. If necessary, the connections of the circuit breaker auxiliary contacts must be checked.

It must be noted that the binary inputs used for the circuit breaker auxiliary contacts must be assigned separately for the CB test. This means it is not sufficient that the auxiliary contacts are allocated to the binary inputs No. 351 to 353, 379 and 380 (according to the possibilities of the auxiliary contacts); additionally, the corresponding No. 366 to 368 or 410 and/or 411 must be allocated (according to the possibilities of the auxiliary contacts). In the CB test only the latter ones are analyzed. See also Section 2.24.1. Furthermore, the ready state of the circuit breaker for the CB test must be indicated to the binary input with No. 371.

3.3.17 Switching Test of the Configured Operating Equipment

Switching by Local Command

If the configured operating devices were not switched sufficiently in the hardware test already described, all configured switching devices must be switched on and off from the device via the integrated control element. The feedback information of the CB position injected via binary inputs should be read out and compared with the actual breaker position. For devices with graphic display this is easy to do with the control display.

The switching procedure is described in the SIPROTEC 4 System Description. The switching authority must be set in correspondence with the source of commands used. With the switching mode, you can choose between locked and unlocked switching. In this case, you must be aware that unlocked switching is a safety risk.

Switching from a Remote Control Centre

If the device is connected to a remote substation via a system (SCADA) interface, the corresponding switching tests may also be checked from the substation. Please also take into consideration that the switching authority is set in correspondence with the source of commands used.

3.3.18 Triggering Oscillographic Recording for Test

In order to be able to test the stability of the protection during switchon procedures also, switchon trials can also be carried out at the end. Oscillographic records obtain the maximum information about the behaviour of the protection.

Prerequisite

Along with the capability of storing fault recordings via pickup of the protection function, the 7SD5 also has the capability of capturing the same data when commands are given to the device via the service program DIGSI, the serial interface, or a binary input. For the latter, event „>Trig.Wave.Cap.“ must be allocated to a binary input. Triggering of the recording then occurs, for example, via the binary input when the protection object is energized.

An oscillographic recording that is externally triggered (that is, without a protective element pickup or device trip) is processed by the device as a normal oscillographic recording, and has a number for establishing a sequence. However, these recordings are not displayed in the fault indication buffer, as they are not fault events.

Start Test Measurement Recording

To trigger test measurement recording with DIGSI, click on **Test** in the left part of the window. Double click in the list view the **Test fault recording** entry (see Figure 3-38).

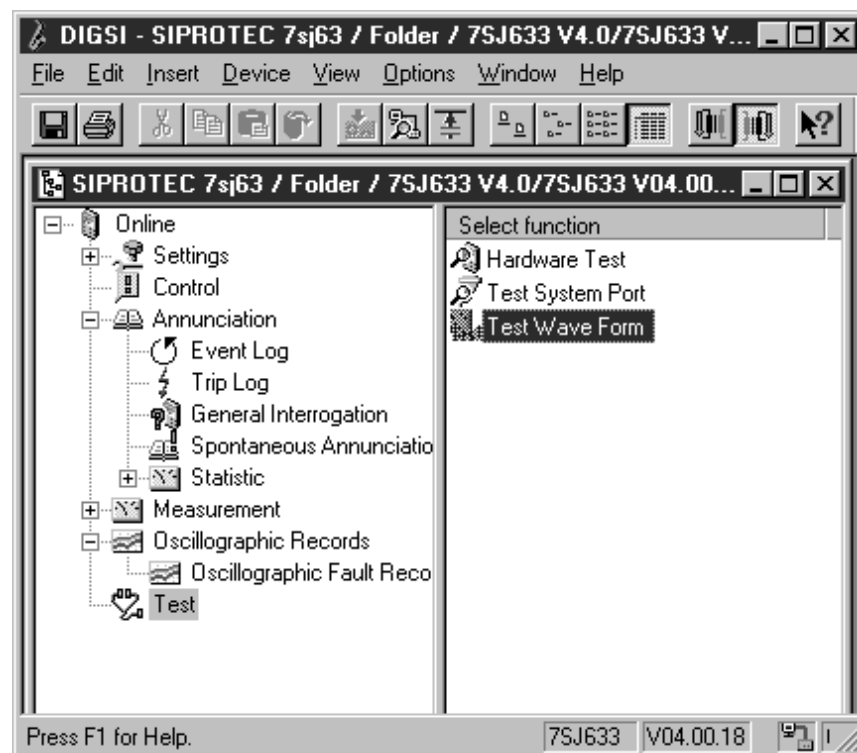


Figure 3-38 Triggering oscillographic recording with DIGSI — example

Oscillographic recording is immediately started. During the recording, an annunciation is output in the left area of the status line. Bar segments additionally indicate the progress of the procedure.

The SIGRA or the Comtrade Viewer program is required to view and analyse the oscillographic data.

3.4 Final Preparation of the Device

The used terminal screws must be tightened, including those that are not used. All the plug connectors must be correctly inserted.



Caution!

Do not apply force!

The tightening torques must not be exceeded as the threads and terminal chambers may otherwise be damaged!

The setting values should be checked again if they were changed during the tests. Check if protection, control and auxiliary functions to be found with the configuration parameters are set correctly (Section 2.1.1, Functional Scope). All desired functions must be switched **ON**. Ensure that a copy of the setting values is stored on the PC.

Check the internal clock of the device. If necessary, set the clock or synchronize the clock if the element is not automatically synchronized. Further details on this subject are described in /1/.

The indication buffers are deleted under **Main Menu → Annunciation → Set / Reset**, so that in the future they only contain information on actual events and states. The numbers in the switching statistics should be reset to the values that were existing prior to the testing.

The counters of the operational measured values (e.g. operation counter, if available) are reset under **Main Menu → Measurement → Reset**.

Press the ESC key, several times if necessary, to return to the default display.

Clear the LEDs on the front panel by pressing the LED key, so that they only show real events and states. In this context, saved output relays are reset, too. Pressing the LED key also serves as a test for the LEDs on the front panel because they should all light when the button is pressed. If the LEDs display states relevant by that moment, these LEDs, of course, stay lit.

The green „RUN“ LED must light up, whereas the red „ERROR“ must not light up.

Close the protective switches. If test switches are available, then these must be in the operating position.

The device is now ready for operation.



This chapter lists the technical data of the SIPROTEC 4 device 7SD5 and its individual functions, including the limit values that must not be exceeded under any circumstances. The electrical and functional data of fully equipped devices are followed by the mechanical data, with dimensional drawings.

4.1	General	563
4.2	Protection Data Interfaces and differential protection topology	576
4.3	Differential Protection	578
4.4	Restricted Earth Fault Protection	580
4.5	Breaker Intertrip and Remote Tripping- Direct Local Trip	581
4.6	Distance Protection (optional)	582
4.7	Power Swing Detection (with impedance pickup) (optional)	585
4.8	Teleprotection for Distance Protection (optional)	586
4.9	Earth Fault Protection in Earthed Systems (optional)	587
4.10	Teleprotection for Earth Fault Protection (optional)	596
4.11	Weak Infeed Tripping (classical/optional)	597
4.12	Weak Infeed Tripping (French Specification/optional)	598
4.13	Direct Remote Trip and Transmission of Binary Information	599
4.14	Instantaneous High-Current Switch-onto-Fault Protection (SOTF)	600
4.15	Backup Time Overcurrent Protection	601
4.16	Automatic Reclosure Function (optional)	604
4.17	Synchronism and Voltage Check (optional)	605
4.18	Undervoltage and Overvoltage Protection (optional)	607
4.19	Frequency Protection (optional)	610
4.20	Fault Locator	611
4.21	Circuit Breaker Failure Protection	612
4.22	Thermal Overload Protection	613
4.23	Monitoring Functions	615
4.24	User-defined Functions (CFC)	617

4.25	Additional Functions	621
4.26	Dimensions	624

4.1 General

4.1.1 Analog Inputs

Nominal frequency	f_N	50 Hz or 60 Hz (adjustable)
-------------------	-------	-----------------------------

Current Inputs

Nominal current	I_{Nom}	1 A or 5 A
Power Consumption per Phase and Earth Path		
- at $I_N = 1$ A		Approx. 0.05 VA
- at $I_N = 5$ A		Approx. 0.3 VA
- for sensitive earth fault detection at 1A		Approx. 0.05 VA
Current Overload Capability per Current Input		
- thermal (rms)		$100 \cdot I_N$ for 1 s $30 \cdot I_N$ for 10 s $4 \cdot I_N$ continuous
- dynamic (pulse current)		$250 \cdot I_N$ (half-cycle)
Current Overload Capability for Sensitive Earth Current Input		
- thermal (rms)		300 A for 1 s 100 A for 10 s 15 A continuous
- dynamic (pulse current)		750 A (half-cycle)

Current transformer requirements

1st condition: For a maximum fault current the current transformers must not be saturated under <u>steady-state</u> conditions	$n' \geq \frac{I_{kd \max}}{I_{N \text{ prim}}}$
2nd condition: The operational accuracy limit factor n' must be at least 30 or a non-saturated period t'_{AL} of at least $1/4$ AC cycle after fault inception must be ensured	$n' \geq 30$ or $t'_{AL} \geq 1/4 \text{ cycle}$
3 rd Condition: Maximum ratio between primary currents of current transformers at the ends of the protected object	$\frac{I_{\text{prim max}}}{I_{\text{prim min}}} \leq 8$

Voltage inputs

Nominal voltage U _N		80 V to 125 V (adjustable)
Measuring range		0 V to 218.5 V (rms)
Power consumption per phase	At 100 V	≤ 0.1 VA
Voltage overload capability per phase		
- thermal (rms)		230 V continuous

4.1.2 Auxiliary Voltage

Direct voltage

Voltage supply via integrated converter				
Nominal auxiliary voltage DC U _{AUX}	24/48 VDC	60/110/125 V DC	110/125/220/250 VDC	220/250 VDC
Admissible voltage ranges	19 to 58 VDC	48 to 150 VDC	88 to 300 VDC	176 to 300 VDC
Permissible AC ripple voltage, Peak to peak, IEC 60255-11	≤15 % of the nominal auxiliary voltage			
Power input				
- Quiescent			Approx. 5 W	
- Energized	7SD5***-A/E/J		Approx. 12 W	
	7SD5***-C/G/L/N/Q/S		Approx. 15 W	
	7SD5***-D/H/M/P/R/T		Approx. 18 W	
Plus approx. 1.5 W per interface module				
Bridging time for failure/short-circuit of the power supply, IEC 60255-11	≥ 50 ms at U _{Aux} = 48 V and U _{Aux} ≥ 110 V			
	≥ 20 ms at U _{Aux} = 24 V and U _{Aux} ≥ 60 V			

Alternating voltage

Voltage supply via integrated converter		
Nominal auxiliary voltage AC U_{AUX}	115 VAC	230 V~ (ab Entwicklungsstand /CC) ¹⁾
Admissible voltage ranges	92 to 132 VAC	184 bis 265 V~
Power input		
- Quiescent		Approx. 7 VA
- Energized	7SD5***-A/E/J	Approx. 17 VA
	7SD5***-C/G/L/N/Q/S	Approx. 20 VA
	7SD5***-D/H/M/P/R/T	Approx. 23 VA
plus approx. 1.5 VA per interface module		
Bridging time for failure/short circuit of alternating auxiliary voltage	≥ 50 ms	

¹⁾ Max. permissible ambient temperature +55 °C when in operation with 230 V~

4.1.3 Binary Inputs and Outputs

Binary inputs

Variants	Number	
7SD5***-A/E/J	8 (configurable)	
7SD5***-C/G/L/N/Q/S	16 (configurable)	
7SD5***-D/H/M/P/R/T	24 (configurable)	
Nominal voltage range	24 VDC to 250 VDC, in 3 ranges, bipolar	
Pickup threshold	Adjustable with jumpers	
- For nominal voltages	24/48 VDC 60/110/125 VDC	$U_{\text{high}} \geq 19 \text{ VDC (pu = pickup)}$ $U_{\text{low}} \leq 10 \text{ VDC}$
- For nominal voltages	110/125/220/250 VDC	$U_{\text{high}} \geq 88 \text{ VDC (pu = pickup)}$ $U_{\text{low}} \leq 44 \text{ VDC}$
- For nominal voltages	220/250 VDC	$U_{\text{high}} \geq 176 \text{ VDC (pu = pickup)}$ $U_{\text{low}} \leq 88 \text{ VDC}$
Current consumption, energized	ca. Approx. 1.8 mA, independent of control voltage	
Maximum permissible voltage	300 VDC	
Impulse filter on input	220 nF coupling capacitance at 220 V with recovery time > 60 ms	

Binary outputs

Signalling/trip relays (see also terminal assignments in Appendix A)					
Quantity and data		According to the order variant (allocatable)			
Order variant	UL listed	NO contact (normal) (normal) ¹⁾	NO contact (normal) (fast) ¹⁾	NO/NC (switch selectable) ¹⁾	NO contact (high-speed) ¹⁾
7SD5***-A/E/J	X	7	7	1	–
7SD5***-C/G/L	X	14	7	2	–
7SD5***-N/Q/S	X	7	10	1	5
7SD5***-D/H/M	X	21	7	3	–
7SD5***-P/R/T	X	14	10	2	5
Switching capability	MAKE	1000 W/VA			1000 W/VA
	OPEN	30 VA 40 W resistive 25 W/VA at L/R ≤ 50 ms			1000 W/VA
Switching voltage					
DC		250 V			
AC		250 V			200 V (max.)
Permissible current per contact (continuous)		5 A			
Permissible current per contact (close and hold) / pulse current		30 A for 0.5 s (NO contact)			
Permissible total current on common path contacts		5 A continuous 30 A for 0.5 s			
Operating time, approx.		8 ms	5 ms	8 ms	1 ms
Alarm relay ¹⁾		With 1 NC contact or 1 NO contact (switchable)			
Switching capability	MAKE	1000 W/VA			
	BREAK	30 VA 40 W resistive 25 W at L/R ≤ 50 ms			
Switching voltage		250 V			
Permissible current per contact		5 A continuous 30 A for 0.5 s			
UL listed with the following rated data:					
		120 VAC		Pilot duty, B300	
		240 VAC		Pilot duty, B300	
		240 VAC		5 A General Purpose	
		24 VDC		5 A General Purpose	
		48 VDC		0.8 A General Purpose	
		240 VDC		0.1 A General Purpose	
		120 VAC		1/6 hp (4.4 FLA)	
		240 VAC		1/2 hp (4.9 FLA)	

¹⁾ UL listed

4.1.4 Communications Interfaces

Protection data interfaces

See Section 4.2 „Protection Data Interfaces and Communication Topology“

Operator Interface

Connection	Front side, non-isolated, RS232, 9-pin D-subminiature female connector for connection of a PC
Operation	With DIGSI
Transmission speed	Min. 4800 Baud; max. 115200 Baud; Factory Setting: 38400 Baud; Parity: 8E1
Transmission distance	15 m / 50 feet

Service/modem interface (optional)

RS232/RS485	RS232/RS485/FO Acc. to ordered variant	Isolated interface for data transfer
	Operation	with DIGSI
		RS232/RS485 according to the ordering variant
	Connection for panel flush mounting housing	Rear panel, mounting location „C“, 9-pole D-subminiature female connector Shielded data cable
	Connection for panel surface mounting housing	Shielded data cable
	Up to release .../BB	At the two-tier terminal on the case bottom
	Release .../CC and higher	In the console housing on the case bottom; 9-pole D-subminiature female connector
	Test voltage	500 V; 50 Hz
RS232		
	Transmission distance	15 m (50 ft.)
RS485		
	Transmission distance	1.000 m. (3280 ft.)
Fibre optic cable (FO)		
	FO connector type	ST connector
	Connection for flush mounting housing	Rear panel, slot „C“
	Connection for panel surface mounting housing	In console housing at device bottom
	Optical wavelength	$\lambda = 820 \text{ nm}$
	Laser class 1 according to EN 60825-1/-2	Using glass fibre 50/125 μm or Using glass fibre 62.5/125 μm
	Permissible optical signal attenuation	Max. 8 dB, with glass fibre 62.5/125 μm
	Transmission distance	Max. 1.5 km (0.93 miles)
	Character idle state	Selectable, factory setting „Light off“

System interface (optional)

RS232/RS485/FO Profibus FMS RS485/Profibus FMS FO Profibus DP RS485/Profibus DP FO DNP 3.0 RS 485 DNP 3.0 FO Ethernet EN100 Acc. to ordered variant		Isolated for data transfer to a control centre
RS232		
	Connection for panel flush mounting housing	Rear panel, slot „B“, 9-pole D-subminiature female connector
	Connection for panel surface mounting housing	
	Up to .../BB	At two-tier terminal on the housing bottom
	.../CC and higher	In the console housing on the case bottom; 9-pole D-subminiature female connector
	Test voltage	500 V; 50 Hz
	Transmission speed	Min. 4800 Baud; max. 38400 Baud Factory setting 19200 Baud
	Transmission distance	Max. 15 m (0.93 miles)
RS485		
	Connection for panel flush mounting housing	Rear panel, slot „B“, 9-pole D-subminiature female connector
	Connection for panel surface mounting housing	
	Up to .../BB	At the two-tier terminal on the case bottom
	.../CC and higher	In the console housing on the case bottom; 9-pole D-subminiature female connector
	Test voltage	500 V; 50 Hz
	Transmission speed	Min. 4800 Bd, max. 38400 Bd Factory setting 19200 Bd
	Transmission distance	Max. 1 km (0.93 miles)
Fibre optic cable (FO)		
	FO connector type	ST connector
	Connection for panel flush mounting housing	Rear panel, mounting location „B“
	Connection for panel surface mounting housing	In console housing at device bottom
	Optical wavelength	$\lambda = 820 \text{ nm}$
	Laser class 1 according to EN 60825-1/-2	Using glass fibre 50/125 μm or Using glass fibre 62.5/125 μm
	Permissible optical signal attenuation	Max. 8 dB, with glass fibre 62.5/125 μm
	Transmission distance	Max. 1.5 km (0.93 miles)
	Character idle state	Selectable, factory setting „Light off“

Profibus RS 485 (FMS and DP) In console housing on bottom 9-pole D-subminiature female connector		
	Connection for panel flush mounting housing	Rear panel, slot „B“, 9-pole D-subminiature female connector
	Connection for panel surface mounting housing	
	Test voltage	500 V; 50 Hz
	Transmission speed	Up to 12 MBaud
	Transmission distance	1.000 m (1640 ft.) at ≤ 93.75 kBd 500 m (1640 ft.) at ≤ 187.5 kBd 200 m (328 ft.) at ≤ 1.5 MBaud 100 m (328 ft.) at ≤ 12 MBaud
Profibus FO (FMS and DP)		
	FO connector type	ST connector single ring/double ring depending on order for FMS; for DP only double ring available
	Connection for panel flush mounting housing	Rear panel, mounting location „B“
	Connection for panel surface mounting housing	Please use version with Profibus RS485 in the console housing at the housing bottom as well as separate electrical/optical con- verter
	Transmission speed	Conversion by external OLM up to 1.5 MBaud ≥ 500 kBaud for normal version ≤ 57600 Baud with detached operator panel
	Recommended speed:	> 500 kBaud
	Optical wavelength	$\lambda = 820 \text{ nm}$
	Laser class 1 according to EN 60825-1/-2	Using glass fibre 50/125 μm or Using glass fibre 62.5/125 μm
	Permissible optical signal attenuation	Max. 8 dB, with glass fiber 62.5/125 μm
	Transmission distance between two modules with redundant optical ring topol- ogy and optical fibre 62.5/125 m	2 m (6.6 ft.) with plastic fibre 500 kB/s max. 1.6 km (1 mile) 1500 kB/s 530 m (1738 ft.)
	Neutral light position (status for "No character")	Light OFF
	Max. number of modules in optical rings with 500 kB/s or 1500 kB/s	41
DNP 3.0 RS 485		
	Connection for panel flush mounting housing	Rear panel; slot „B“, 9-pole D-subminiature female connector
	Connection for panel surface mounting housing	In console housing on bottom 9-pole D-subminiature female connector
	Test voltage	500 V; 50 Hz
	Transmission speed	Up to 19200 Baud
	Transmission distance	Max. 1 km (0.93 miles)

DNP 3.0 FO		
	FO connector type	ST connector receiver/transmitter
	Connection for panel flush mounting housing	Rear panel, mounting location „B“
	Connection for panel surface mounting housing	Please use version with DNP3.0 RS485 in the console housing at the housing bottom as well as separate electrical/optical converter
	Transmission speed	Up to 19200 Baud
	Optical wavelength	$\lambda = 820 \text{ nm}$
	Laser Class 1 according to EN60825-1/-2	Using glass fibre 50/125 μm or Using glass fibre 62.5/125 μm
	Permissible optical signal attenuation	Max. 8 dB, with glass fibre 62.5/125 μm
	Transmission distance	Max. 1.5 km (0.93 miles)
Ethernet electrical (EN 100) for IEC 61850 and DIGSI		
	Connection for flush mounting housing	Rear panel, mounting location „B“ 2 x RJ45 female connector 100BaseT according to IEEE802.3
	Connection for surface mounting housing	In console housing on bottom
	Test voltage (female connector)	500 V; 50 Hz
	Transmission speed	100 Mbits/s
	Bridgeable distance	20 m
Ethernet electrical (EN 100) for IEC 61850 and DIGSI		
	FO connector type	ST-connector receiver / transmitter
	Connection for panel flush-mounted housing	Rear panel, slot „B“
	Connection for panel surface-mounted housing	Not deliverable
	Optical wavelength	$\lambda = 1350 \text{ nm}$
	Transmission speed	100 Mbit/s
	Laser class 1 according to EN 60825-1/-2	Using glass fibre 50/125 μm or Using glass fibre 62,5/125 μm
	Permissible optical signal attenuation	Max. 5 dB, with glass fibre 62,5/125 μm
	Bridgeable distance	Max. 800 m
The OLM converter requires an operating voltage of 24 VDC. If the operating voltage is > 24 VDC the additional power supply 7XV5810-0BA00 is required.		

Time synchronisation interface

Time synchronisation	DCF 77/IRIG B-Signal (Telegramm-Format IRIG-B000)/GPS
Connection for panel flush mounting housing	Rear panel, slot „A“ 9-pole D-subminiature female connector
For panel surface mounting housing	At two-tier terminals on housing bottom
Nominal signal voltages DCF77/IRIG B	Selectable 5 V, 12 V or 24 V
Nominal signal voltages GPS	24 V
Test voltage	500 V; 50 Hz
Signal levels and burdens DCF77/IRIG-B:	

	Nominal signal input voltage		
	5 V	12 V	24 V
U _{IHigh}	6.0 V	15.8 V	31 V
U _{ILow}	1.0 V at I _{ILow} = 0.25 mA	1.4 V at I _{ILow} = 0.25 mA	1.9 V at I _{ILow} = 0.25 mA
I _{IHigh}	4.5 mA to 9.4 mA	4.5 mA to 9.3 mA	4.5 mA to 8.7 mA
R _I	890 Ω at U _I = 4 V	1930 Ω at U _I = 8.7 V	3780 Ω at U _I = 17 V
	640 Ω at U _I = 6 V	1700 Ω at U _I = 15.8 V	3560 Ω at U _I = 31 V
PPS Signal for GPS			
ON/OFF pulse duty factor		1/999 to 1/1	
max. rise/fall time deviation of all receivers		±3 μs	
For GPS receiver, antenna and power supply unit please refer to Appendix A1.2, Accessories.			

4.1.5 Electrical Tests

Specifications

Standards:	IEC 60255 (product standards) IEEE Std C37.90.0/1/2 UL 508 VDE 0435 For more standards see also individual functions
------------	--

Insulation Test

Standards:	IEC 60255-5 and IEC 60870-2-1
High voltage test (routine test) All circuits except power supply, Binary Inputs, High Speed Outputs, Communication Interface and Time Synchronization Interfaces	2.5 kV (rms), 50 Hz
High voltage test (routine test) Auxiliary voltage, binary inputs and high speed outputs	3.5 kVDC
High voltage test (routine test) only isolated communication and time synchronization interfaces	500 V (rms), 50 Hz
Impulse voltage test (type test) All Circuits Except Communication and Time Synchronization Interfaces, Class III	5 kV (peak), 1.2/50 μ s, 0.5 Ws, 3 positive and 3 negative impulses in intervals of 5 s

EMC Tests for Immunity (type tests)

Standards:	IEC 60255-6 and -22, (product standards) EN 61000-6-2 (generic standard) VDE 0435 part 301DIN VDE 0435-110
High frequency test IEC 60255-22-1, Class III and VDE 0435 Section 303, Class III	2,5 kV (peak); 1 MHz; $\tau = 15$ μ s; 400 surges per s; test duration 2 s; $R_i = 200$ Ω
Electrostatic discharge IEC 60255-22-2, Class IV and IEC 61000-4-2, Class IV	8 kV contact discharge; 15 kV air discharge, both polarities; 150 pF; $R_i = 330$ Ω
Irradiation with HF field, frequency sweep IEC 60255-22-3, Class III IEC 61000-4-3, Class III IEEE Std C37.90.2-2004	10 V/m and 20 V/m; 80 MHz to 1000 MHz; 80 % AM; 1 kHz 10 V/m; 800 MHz to 960 MHz; 80 % AM; 1 kHz 20 V/m; 1,4 GHz to 2,0 GHz; 80 % AM; 1 kHz

Irradiation with HF field, single frequencies IEC 60255-22-3, IEC 61000-4-3, Class III, IEEE Std C37.90.2 –amplitude-modulated –pulse-modulated	20 V/m; 80; 160; 450; 900 MHz; 80 % AM; 1kHz; duty cycle > 10 s 35 V/m; 900 MHz; 50 % PM, repetition frequency 200 Hz
Fast transient disturbances/ Burst IEC 60255-22-4 and IEC 61000-4-4, Class IV	4 kV; 5/50 ns; 5 kHz; burst length = 15 ms; repetition rate 300 ms; both polarities: $R_i = 50 \Omega$; test duration 1 min
High energy surge voltages (SURGE), IEC 61000-4-5 installation Class 3 - Auxiliary voltage - Analog measuring inputs, binary inputs, relay outputs	Impulse: 1,2/50 μ s Common mode: 2 kV; 12 Ω ; 9 μ F Diff. mode: 1 kV; 2 Ω ; 18 μ F Common mode: 2 kV; 42 Ω ; 0,5 μ F Diff. mode: 1 kV; 42 Ω ; 0,5 μ F
Line conducted HF, amplitude modulated IEC 61000-4-6, Class III	10 V; 150 kHz to 80 MHz; 80 % AM; 1 kHz
Power system frequency magnetic field IEC 60255-6 IEC 61000-4-8, Class IV	0,5 mT; 50 Hz, 30 A/m continuous; 300 A/m for 3 s; 50 Hz
Oscillatory Surge Withstand Capability IEEE Std C37.90.1	2,5 kV (peak); 1 MHz; $\tau = 15 \mu$ s; 400 surges per s; test duration 2 s; $R_i = 200 \Omega$
Fast Transient Surge Withstand Cap. IEEE Std C37.90.1	4 kV; 5/50 ns; 5 kHz; burst length = 15 ms; repetition rate 300 ms; both polarities; $R_i = 50 \Omega$; test duration 1 min
Radiated Electromagnetic Interference IEEE Std C37.90.2-2004	35 V/m; 80 MHz to 1000 MHz; Keying test
Damped oscillations IEC 60694, IEC 61000-4-18	2,5 kV (peak value), polarity alternating 100 kHz, 1 MHz, $R_i = 200 \Omega$

EMC Tests for Interference Emission (Type Test)

Standard:	EN 61000-6-3 (generic standard)
Radio noise voltage to lines, only auxiliary voltage IEC-CISPR 22	150 kHz to 30 MHz Limit class B
Interference field strength IEC-CISPR 22	30 MHz to 1000 MHz Limit class B
Harmonic currents on the network lead at 230 VAC IEC 61000-3-2	Class A limits are observed.
Voltage fluctuations and flicker on the network incoming feeder at 230 V AC IEC 61000-3-3	Limits are observed

4.1.6 Mechanical Tests

Vibration and Shock Resistance during Stationary Operation

Standards:	IEC 60255-21 and IEC 60068
Oscillation IEC 60255-21-1, Class 2 IEC 60068-2-6	Sinusoidal 10 Hz to 60 Hz: ± 0.075 mm amplitude; 60 Hz to 150 Hz: 1 g acceleration Frequency sweep 1 octave/min 20 cycles in 3 orthogonal axes
Shock IEC 60255-21-2, Class 1 IEC 60068-2-27	Semi-sinusoidal 5 g acceleration, duration 11 ms, each 3 shocks (in both directions of the 3 axes)
Seismic vibration IEC 60255-21-3, Class 1 IEC 60068-3-3	Sinusoidal 1 Hz to 8 Hz: ± 3.5 mm amplitude (horizontal axis) 1 Hz to 8 Hz: ± 1.5 mm amplitude (vertical axis) 8 Hz to 35 Hz: 1 g acceleration (horizontal axis) 8 Hz to 35 Hz: 0.5 g acceleration (vertical axis) Frequency sweep 1 octave/min 1 cycle in 3 orthogonal axes

Vibration and Shock Resistance during Transport

Standards:	IEC 60255-21 and IEC 60068
Oscillation IEC 60255-21-1, Class 2 IEC 60068-2-6	Sinusoidal 5 Hz to 8 Hz: ± 7.5 mm Amplitude; 8 Hz to 150 Hz: 2 g acceleration frequency sweep 1 octave/min 20 cycles in 3 orthogonal axes
Shock IEC 60255-21-2, Class 1 IEC 60068-2-27	Semi-sinusoidal 15 g acceleration, duration 11 ms, each 3 shocks (in both directions of the 3 axes)
Continuous shock IEC 60255-21-2, Class 1 IEC 60068-2-29	Semi-sinusoidal 10 g acceleration, duration 16 ms, 1000 shocks each in both directions of the 3 axes

4.1.7 Climatic Stress Tests

Temperatures

Standards:	IEC 60255-6
Type tested (acc. IEC 60086-2-1 and -2, Test Bd,	–25 °C to +85 °C
Admissible temporary operating temperature (tested for 96 h)	–20 °C to +70 °C or –4 °F to +158 °F (legibility of display may be restricted from +55 °C or 131 °F)
Recommended for permanent operation (according to IEC 60255-6)	–5 °C to +55 °C or 23 °F to +131 °F If max. half of the inputs and outputs are subjected to the max. permissible values
Limit temperatures for storage	–25 °C to +55 °C or –13 °F to +131 °F
Limit temperatures during transport	–25 °C to +70 °C or –13 °F to +158 °F
Storage and transport of the device with factory packaging!	
¹⁾ Limit temperatures for normal operation (i.e. output relays not energized)	–20 °C to +70 °C or –4 °F to +158 °F
¹⁾ Limit temperatures under maximum load (max. cont. admissible input and output values)	–5 °C to +40 °C for 1/2 and 1/1 housing size

¹⁾ UL-certified according to Standard 508 (Industrial Control Equipment)

Humidity

Admissible humidity	Annual average $\leq 75\%$ relative humidity; On 56 days of the year up to 93% relative humidity. Condensation must be avoided in operation!
It is recommended that all devices be installed so that they are not exposed to direct sunlight nor subject to large fluctuations in temperature that may cause condensation to occur.	

4.1.8 Deployment Conditions

<p>The protection device is designed for installation in normal relay rooms and plants, so that electromagnetic immunity is ensured if installation is done properly.</p> <p>In addition the following is recommended:</p> <ul style="list-style-type: none"> • Contacts and relays operating within the same cabinet or on the same relay board with digital protection equipment, should be in principle provided with suitable surge suppression components. • For substations with operating voltages of 100 kV and above, all external cables shall be shielded with a conductive shield earthed at both ends. For substations with lower operating voltages, no special measures are normally required. • For substations with lower operating voltages, no special measures are normally required. When removed, many components are electrostatically endangered; when handling the EEC standards (standards for Electrostatically Endangered Components) must be observed. The modules, boards, and device are not endangered when the device is completely assembled.

4.1.9 Certifications

UL listed		UL recognition	
7SD5***-A***-****	Models with threaded terminals	7SD5***-J***-****	Models with plug-in terminals
7SD5***-C***-****		7SD5***-L***-****	
7SD5***-D***-****		7SD5***-M***-****	

4.1.10 Mechanical Design

Housing	7XP20
Dimensions	See dimensional drawings, Section 4.26

Device (for maximum number of components)	Size	Weight
In flush mounting housing	$\frac{1}{2}$	6 kg (13.23 lb)
	$\frac{1}{1}$	10 kg (22.04 lb)
In panel surface mounting housing	$\frac{1}{2}$	11 kg (24.24 lb)
	$\frac{1}{1}$	19 kg (41.88 lb)

Degree of protection according to IEC 60529		
For equipment in surface mounting housing		IP 51
For equipment in flush mounting housing		
	Front	IP 51
	Back	IP 50
For human safety		IP 2x with cover cap
UL-certification conditions		Type 1 for front panel mounting Surrounding air temperature: tsurr: max 70 °C, normal operation

4.2 Protection Data Interfaces and differential protection topology

Differential Protection Topology

Number of devices for a protected object (=number of ends of the protected zone limited by CTs)	2 to 6 for 7SD5*2/7SD5*3 ^{1) 2) 3)}
--	--

- 1) 7SD5*2 as device with one protection data interface for true two-end operation or for chain operation at the ends of a multi-end configuration
- 2) 7SD5*2 as device with two data protection interfaces for redundant two-end operation
- 3) 7SD5*3 as device with two data protection interfaces for chain and ring operation of a multi-end configuration

Protection Data Interfaces

Number	1 or 2
Connection optical fibre	Mounting location „D“ for one connection or „D“ and „E“ for two connections
For flush mounting housing	On the rear side
For panel surface mounting housing	In console housing at device bottom
Connection modules for protection data interface, depending on the ordering version:	

Module in the device	Connector type	Fibre type	Optical wavelength	Perm. path attenuation	Distance, maximum
FO5 ¹⁾	ST	Multimode 62.5/125µm	820 nm	8 dB	1.5 km (0.93 miles)
FO6 ¹⁾	ST	Multimode 62.5/125µm	820 nm	16 dB	3.5 km (2.2 miles)
FO17 ²⁾	LC	Monomode 9/125 µm	1300 nm	13 dB	24 km (14.9 miles)
FO18 ²⁾	LC	Monomode 9/125 µm	1300 nm	29 dB	60 km (37.5 miles)
FO19 ²⁾	LC	Monomode 9/125 µm	1550 nm	29 dB	100 km (62.5 miles)

- 1) Laser class 1 acc. to EN 60825-1/-2 using glass fibre 62.5/125 µm
- 2) Laser class 1 acc. to EN 60825-1/-2 when using glass fibre 9/125 µm

Protection Data Communication

Direct connection:	
Transmission rate	512 kbit/s
Fibre type	see Table above
Optical wavelength	
Permissible optical signal attenuation	
Bridgeable distance	
Connection via communication networks:	
Communication converter	see Appendix A.1, Section Accessories

Supported network interfaces	G703.1 with 64 kbit/s G703-T1 with 1.455 Mbit/s G703-E1 with 2.048 Mbit/s	
	X.21 with 64 or 128 or 512 kbit/s	
	Pilot wires with 128 kbit/s;	
Connection to communication converter	see Table above under module FO5	
Transmission rate	64 kbit/s with G703.1 1.455 Mbit/s for G703-T1 2.048 Mbit/s for G703-E1	
	512 kbit/s or 128 kbit/s or 64 kbit/s with X.21	
	128 kbit/s with pilot wires	
Max. transmission delay	0.1 ms to 30 ms	Increments 0.1 ms
Max. transmission delay difference	0.000 ms to 3.000 ms	Increments 0.001 ms

4.3 Differential Protection

Pickup Values

Differential current, I-DIFF>	$I_N = 1 \text{ A}$	0.10 to 20.00 A	Increments 0.01 A
	$I_N = 5 \text{ A}$	0.50 to 100.00 A	
Differential current when switching onto a fault; I-DIF>SWITCH ON	$I_N = 1 \text{ A}$	0.10 to 20.00 A	Increments 0.01 A
	$I_N = 5 \text{ A}$	0.50 to 100.00 A	
Differential current, high set differential current I-DIFF>>	$I_N = 1 \text{ A}$	0.8 to 100.0 A or ∞ (stage disabled)	Increments 0.01 A
	$I_N = 5 \text{ A}$	4.0 to 500.00 A or ∞ (stage disabled)	
Differential current, high set differential current when switching onto a fault; I-DIF>>SWITCHON	$I_N = 1 \text{ A}$	0.8 to 100.0 A or ∞ (stage inactive)	Increments 0.01 A
	$I_N = 5 \text{ A}$	4.0 to 500.00 A or ∞ (stage inactive)	
Tolerances			
For 2 or 3 ends		5 % of setting value or 1% I_N per end	
For 6 ends		10 % of setting value or 1% I_N per end	

Intertrippings

The operating times depend on the number of ends and the communication speed. The following data require a transfer rate of 512 kbit/s and the output of commands via high-speed output relays (7SD5***-N/P/Q/R/S/T).		
Pickup / tripping times of the I-DIFF>> stages at 50 or 60 Hz approx.		
for 2 ends	minimum	9 ms
	typical	12 ms
for 3 ends	minimum	9 ms
	typical	12 ms
for 6 ends	minimum	14 ms
	typical	20 ms
Dropout times of the I-DIFF>> stages approx.		
or all ends	typical	35 ms bis 50 ms
Pickup / tripping times of the I-DIFF> stages approx.		
for 2 ends	minimum (50/60 Hz)	27/24 ms
	typical (50/60 Hz)	29/26 ms
for 3 ends	minimum (50/60 Hz)	27/24 ms
	typical (50/60 Hz)	31/28 ms
for 6 ends	minimum (50/60 Hz)	32/28 ms
	typical (50/60 Hz)	38/35 ms
Dropout times of the I-DIFF> stages approx.		
for all ends	typical	35 ms bis 50 ms

Delay times

Delay of I-DIFF stage	T-DELAY I-DIFF>	0.00 s to 60.00 s or ∞ (no trip)	Increments 0.01 s
Delay of I-DIFF stage for 1-phase pickup in isolated / compensated networks	T3I0 1PHAS	0.00 s to 0.50 s or ∞ (stage disabled for 1-phase pickup)	Increments 0.01 s
Expiry tolerances		1 % of set value or 10 ms	
The set times are pure delay times.			

Self-restraint

Current transformer error at each end of the protected object		
Ratio between operating accuracy limit factor and nominal accuracy limit factor n'/n	1 to 10.00	Increments 0.01
Transformer error at n'/n	0.5 % to 50.0 %	Increments 0.1 %
Transformer error at $n \cdot I_N$ (class)	0.5 % to 50.0 %	Increments 0.1 %
Further restraint quantities (adaptive self-restraint)	Frequency deviations, delay time differences, harmonics, synchronous quality, jitter	

Inrush restraint

Restraint ratio 2nd harmonics to the fundamental I_{2fN}/I_{fN}		0 % to 45 %	Increments 1 %
Max. current for restraint	$I_N = 1$ A	1.1 A to 25.0 A	Increments 0.1 A
	$I_N = 5$ A	5.5 A to 125.0 A	
Crossblock Function		can be switched on/off	
Max. action time for crossblock CROSSB 2HM		0.00 s to 60.00 s or 0 (crossblock dis- abled) or ∞ (active until dropout)	Increments 0.01 s

Conditioning for transformers (optional)

Vector group matching	0 to 11 (x 30°)	Increments 1
Star-point conditioning	earthed or non-earthed (for each winding)	

Emergency operation

In the event of a communication failure, with distance protection out of service	See Section „Time Overcurrent Protection“
--	---

Frequency operating range

Frequency	$0.8 \leq f/f_N \leq 1.2$ stable when starting machine
-----------	--

Standard precision of operational measured values

The standard precision of the operational measured values of the differential protection from $\pm 0.5\%$ of the rated operational current is ensured up to a transformer error adjustment of 2:1.
--

4.4 Restricted Earth Fault Protection

Setting ranges

Differential Current $I_{EDS}>$	for $I_N = 1\text{ A}$	0.05 A to 2.00 A	Increment 0.01
	for $I_N = 5\text{ A}$	0.25 A to 10.00 A	
Threshold angle φ_{EDS}		100° (fixed)	
Trip characteristic		see Figure	
Pick-up tolerance for $\varphi(3I_{I0}'', 3I_{I0}') < 90^\circ$ and address 221 I4/Iph CT = 1.000 and address 4113 SLOPE = 0.00		5 % plus $\pm 0.01 \cdot I_N$	
Delay time T_{EDS}		0.00 s to 60.00 s or ∞ (no trip)	Increments 0.01 s
Expiry tolerances		1 % of set value or 10 ms	
The set times are pure delay times			

Operating Time

Pickup time at frequency		50 Hz	60 Hz
at $1.5 \cdot \text{set value } I_{REF}>$ approx.	high-speed relays	35 ms	34 ms
	high-speed relays	30 ms	29 ms
at $2.5 \cdot \text{set value } I_{REF}>$ approx.	high-speed relays	35 ms	34 ms
	high-speed relays	30 ms	29 ms
Dropout time, approx.		30 ms	30 ms
Dropout ratio		approx. 0.7	

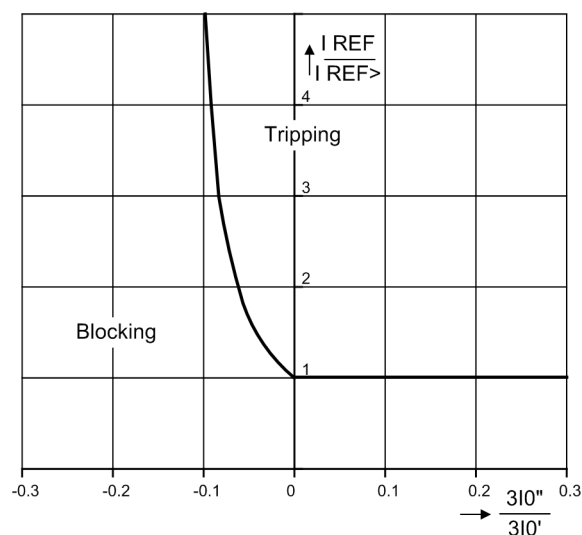


Figure 4-1 Tripping characteristic of the restricted earth fault protection depending on the earth current ratio $3I_0''/3I_0'$ (both currents in phase + or counter-phase -); $I_{REF}>$ = setting; I_{Trip} = tripping current

4.5 Breaker Intertrip and Remote Tripping- Direct Local Trip

Breaker Intertrip and Remote Tripping

Intertripping of all opposite ends when single-end tripping	Can be switched on/off
---	------------------------

External Direct Local Tripping

Operating time, total	approx. 6 ms	
Trip Time Trip Time DELAY	0,00 s to 30,00 s or ∞ (ineffective)	Steps 0,01 s
Expiry tolerance	1 % of setting value or 10 ms	
The set times are pure delay times The operating times refer to the output of commands via high-speed output relays (7SD5***-N/P/Q/R/S/T)		

Remote Tripping

Tripping of remote ends by a command that is coupled into a binary input			
The operating times depend on the number of ends and the communication speed. The following data require a transfer rate of 512 kbit/s and the output of commands via high-speed output relays (7SD5***-N/P/Q/R/S/T)			
Operating time, total approx.			
for 2 ends	minimum	7 ms	
	typical	12 ms	
for 3 ends	minimum	9 ms	
	typical	13 ms	
for 6ends	minimum	13 ms	
	typical	18 ms	
Dropout times, total approx.			
for 2 ends	typical	19 ms	
for 3 ends	typical	20 ms	
for 6 ends	typical	26 ms	
Tripping delay	T-ITRIP BI	0,00 s to 30,00 s	steps 0,01 s
Trip time prolongation	T-ITRIP PROL BI	0,00 s to 30,00 s	steps 0,01 s
Expiry tolerance		1 % of setting value or 10 ms	
The set times are pure delay times			

4.6 Distance Protection (optional)

Earth impedance ratio

R_E/R_L	-0.33 to 10.00	Increments 0.01
X_E/X_L	-0.33 to 10.00	Increments 0.01
	separate for first and higher zones	
K_0	0.000 to 4.000	Increments 0.001
$\text{PHI} (K_0)$	-180.00° to +180.00°	
	separate for first and higher zones	
The matching factors for earth impedance also apply to fault locating.		

Mutual Impedance Ratio

R_M/R_L	0.00 to 8.00	Increments 0.01
X_M/X_L	0.00 to 8.00	Increments 0.01
The matching factors for the mutual impedance ratio are valid also for fault locating.		

Phase preference

For double earth fault in earthed net	Block leading phase-earth Block lagging phase-earth Release all associated loops Release only phase-to-earth loops Release of phase-to-phase loops
For double earth fault in isolated or resonant-earthed systems	L3(L1) acyclic L1(L3) acyclic L2(L1) acyclic L1(L2) acyclic L3(L2) acyclic L2(L3) acyclic L3(L1) acyclic L1(L3) acyclic All associated loops

Earth fault detection

Earth current $3I_{0>}$	for $I_N = 1$ A	0.05 A to 4.00 A	Increments 0.01 A
	for $I_N = 5$ A	0.25 A to 20.00 A	
Earth voltage $3U_{0>}$		1 V to 100 V; ∞	Increments 1 V
Dropout to pickup ratio		Approx. 0.95	
Measuring tolerances for sinusoidal measured values		± 5 %	

Pickup (optional)

<u>Overcurrent Pickup</u>			
Overcurrent Iph>>	for I _N = 1 A	0.25 A to 10.00 A	Increments 0.01 A
	for I _N = 5 A	1.25 A to 50.00 A	
Dropout to pickup ratio		Approx. 0.95	
Measuring tolerances for sinusoidal measured values		± 5 %	
Voltage and angle-dependent current pickup (U/I/φ) (selectable)			

Characteristic		Different stages with settable inclinations	
Minimum current Iph>	for I _N = 1 A	0.10 A to 4.00 A	Increments 0.01 A
	for I _N = 5 A	0.50 A to 20.00 A	
Current in fault angle range Iφ	for I _N = 1 A	0.10 A to 8.00 A	Increments 0.01 A
	for I _N = 5 A	0.50 A to 40.00 A	
Undervoltage phase-earth Uphe (segregated for Iph>, Iφ> and Iph>>)		20 V to 70 V	Increments 1 V
Undervoltage phase-phase Uphph (segregated for Iph>, Iφ> and Iph>>)		40 V to 130 V	Increments 1 V
Lower threshold angle φ>		30° to 60°	In increments of 1°
Upper threshold angle φ<		90° to 120°	In increments of 1°
Dropout to pickup ratio			
Iph>, If>		Approx. 0.95	
Uphe, Uphph		Approx. 1.05	
Measuring tolerances for sinusoidal measured values			
Values of U, I		± 5 %	
Angle φ		± 3°	
<u>Impedance starting (selectable)</u>			
Minimum current Iph>	for I _N = 1 A	0.05 A to 4.00 A	Increments 0.01 A
	for I _N = 5 A	0.25 A to 20.00 A	
The thresholds of the zone set to the highest level are relevant taking into consideration the corresponding direction			
Dropout/pickup ratio		Approx. 1.05	

Distance measurement

Characteristic		Polygonal or MHO characteristic (depending on ordered variant); 5 independent zones and 1 controlled zone	
Setting ranges of polygon:			
$I_{Ph}> = \text{min. current phases}$	for $I_N = 1 \text{ A}$	0.05 A to 4.00 A	Increments 0.01 A
	for $I_N = 5 \text{ A}$	0.25 A to 20.00 A	
$X = \text{reactance reach}$	for $I_N = 1 \text{ A}$	$0.050 \, \Omega$ to 600,000 Ω	Increments 0.001 Ω
	for $I_N = 5 \text{ A}$	$0.010 \, \Omega$ to 120,000 Ω	
$R = \text{resistance tolerance phase-phase}$	for $I_N = 1 \text{ A}$	$0.050 \, \Omega$ to 600,000 Ω	Increments 0.001 Ω
	for $I_N = 5 \text{ A}$	$0.010 \, \Omega$ to 120,000 Ω	
$RE = \text{resistance tolerance phase-earth}$	for $I_N = 1 \text{ A}$	$0.050 \, \Omega$ to 600,000 Ω	Increments 0.001 Ω
	for $I_N = 5 \text{ A}$	$0.010 \, \Omega$ to 120,000 Ω	
$\varphi_{Line} = \text{line angle}$		10° to 89°	Increments 1°
$\varphi_{Dist} = \text{angle of distance protection characteristic}$		30° to 90°	Increments 1°
$\alpha_{Pol} = \text{tilt angle for 1st zone}$		0° to 30°	Increments 1°
Direction determination for polygonal characteristic:			
For all types of faults		With phase-true, memorized or cross-polarized voltages	
Directional sensitivity		Dynamically unlimited Stationary approx. 1V	
Each zone can be set to operate in forward or reverse direction, non-directional or ineffective.			
Setting ranges of the MHO characteristic:			
$I_{PH}> = \text{min. current, phases}$	for $I_N = 1 \text{ A}$	0.05 A to 4.00 A	Increments 0.01 A
	for $I_N = 5 \text{ A}$	0.25 A to 20.00 A	
$Z_r = \text{impedance reach}$	for $I_N = 1 \text{ A}$	$0.050 \, \Omega$ to 200,000 Ω	Increments 0.001 Ω
	for $I_N = 5 \text{ A}$	$0.010 \, \Omega$ to 40,000 Ω	

φ_{Line} = line angle		10° to 89°	Increments 1°
φ_{Dist} = angle of distance protection characteristic		30° to 90°	Increments 1°
Polarization		With memorized or cross-polarized voltages	
Each zone can be set to operate in forward or reverse direction or ineffective.			
Load trapezoid:			
R_{Load} = minimum load resistance	for $I_N = 1 \text{ A}$	0.050 Ω to 600,000 Ω ; ∞	Increments 0.001 Ω
	for $I_N = 5 \text{ A}$	0.010 Ω to 120,000 Ω ; ∞	
φ_{Load} = maximum load angle		20° to 60°	Increments 1°
Dropout ratio			
– Currents		Approx. 0.95	
– Impedances		Approx. 1.06	
Measured value correction		Mutual impedance matching for parallel lines (order option)	
Measuring tolerances for sinusoidal measured values		$\left \frac{\Delta X}{X} \right \leq 5 \%$ for $30^\circ \leq \varphi_k \leq 90^\circ$ $\left \frac{\Delta R}{R} \right \leq 5 \%$ for $0^\circ \leq \varphi_k \leq 60^\circ$ $\left \frac{\Delta Z}{Z} \right \leq 5 \%$ for $-30^\circ \leq \varphi_k - \varphi_{\text{Line}} \leq 30^\circ$	

Times

Shortest trip time	Approx. 17 ms (50 Hz) /15 ms (60 Hz) with fast relay and approx. 12 ms (50 Hz) /10 ms (60 Hz) with high-speed relay	
Dropout time	Approx. 30 ms	
Stage timers	0.00 s to 30.00 s; ∞ for all zones; separate time setting possibilities for single-phase and multi-phase faults for the zones Z1, Z2, and Z1B	Increments 0.01 s
Time expiry tolerances	1 % of setting value or 10 ms	
The set times are pure delay times.		

Emergency operation

If the differential protection and the distance protection operate in parallel in the protective relay, emergency operation will not be activated unless both protection functions have become ineffective.
In case of measured voltage failure, e.g. voltage transformer mcb trip see Section 4.15 „Time Overcurrent Protection“

4.7 Power Swing Detection (with impedance pickup) (optional)

Power swing detection	Rate of change of the impedance phasor and observation of the path curve	
Maximum power swing frequency	Approx. 7 Hz	
Power swing blocking programs	Block 1st zone only	
	Block higher zones	
	Block 1st and 2nd zone	
	Block all zones	
Power swing trip	Trip following instable power swings (out-of-step)	
Trip time delay after power swing block	0.08 to 5.00 s	Increments 0.01 s

4.8 Teleprotection for Distance Protection (optional)

Mode

For two line ends	With one channel for each direction or with three channels for each direction for phase segregated transmission
For three line ends	With one channel for each direction or connection

Underreach scheme

Method	Transfer trip with overreaching zone Z1B PUTT (Pickup) Direct transfer trip	
Send signal prolongation	0.00 s to 30.00 s	Increments 0.01 s

Overreach schemes

Method	Permissive Overreach Transfer Trip (POTT) (with overreaching zone Z1B) Directional comparison Unblocking (with overreaching zone Z1B) Blocking (with overreaching zone Z1B) Pilot wire comparison Reverse interlock (with pilot wires)	
Send signal prolongation	0.00 s to 30.00 s	Increments 0.01 s
Release delay	0.000 s to 30.000 s	Increments 0.001 s
Transient blocking time	0.00 s to 30.00 s	Increments 0.01 s
Waiting time for transient blocking	0.00 s to 30.00 s; ∞	Increments 0.01 s
Expiry tolerances	1 % of set value or 10 ms	
The set times are pure delay times		

4.9 Earth Fault Protection in Earthed Systems (optional)

Characteristics

Definite time stages	$3I_{0>>>}$, $3I_{0>>}$, $3I_{0>}$
Inverse time stage (IDMT)	$3I_{0P}$ one of the characteristics according to Figure 4-2 to Figure 4-5 can be selected
Voltage-dependent stage (U_0 inverse)	Characteristics according to Figure 4-6
Zero-sequence power protection	Characteristics according to Figure 4-7

Very high set current stage

High current pickup $3I_0>>>$	for $I_N = 1 \text{ A}$	0.05 A to 25.00 A	Increments 0.01 A
	for $I_N = 5 \text{ A}$	0.25 A to 125.00 A	
Delay $T_{3I_0>>>}$		0.00 s to 30.00 s or ∞ (ineffective)	Increments 0.01 s
Dropout ratio		Approx. 0.95 for $I/I_N \geq 0.5$	
Pickup time (fast relays/high-speed relays)		Approx. 30/25 ms	
Dropout time		Approx. 30 ms	
Tolerances	Current	3 % of setting value or 1 % nominal current	
	Time	1 % of setting value or 10 ms	
The set times are pure delay times			

High set current stage

Pickup value $3I_{0>>}$	for $I_N = 1 \text{ A}$	0.05 A to 25.00 A	Increments 0.01 A
	for $I_N = 5 \text{ A}$	0.25 A to 125.00 A	
Delay $T_{3I_{0>>}}$		0.00 s to 30.00 s or ∞ (ineffective)	Increments 0.01 s
Dropout ratio		Approx. 0.95 for $I/I_N \geq 0.5$	
Pickup time (fast relays/high-speed relays)		Approx. 30/25 ms	
Dropout time		Approx. 30 ms	
Tolerances	Current	3 % of setting value or 1 % nominal current	
	Time	1 % of setting value or 10 ms	
The set times are pure delay times			

Overcurrent stage

Pickup value $3I_0>$	for $I_N = 1\text{ A}$	0.05 A to 25.00 A or 0.003 A to 25.000 A	Increments 0.01 A Increments 0.001 A
	for $I_N = 5\text{ A}$	0.25 A to 125.00 A or 0.015 A to 125.000 A	Increments 0.01 A Increments 0.001 A
Delay $T_{3I0>}$		0.00 s to 30.00 s or ∞ (ineffective)	Increments 0.01 s
Dropout ratio		Approx. 0.95 for $I/I_N \geq 0.5$	
Pickup time (fast relays/high-speed relays) (1.5 set value) (2.5 set value)		Approx. 40/35 ms Approx. 30/25 ms	
Dropout time		Approx. 30 ms	
Tolerances	Current	3 % of setting value or 1 % nominal current	
	Time	1 % of setting value or 10 ms	
The set times are pure delay times			

Inverse Current Stage (IEC)

Pickup value $3I_{0P}$	for $I_N = 1\text{ A}$	0.05 A to 25.00 A or 0.003 A to 25.000 A	Increments 0.01 A Increments 0.001 A
	for $I_N = 5\text{ A}$	0.25 A to 125.00 A or 0.015 A to 125.000 A	Increments 0.01 A Increments 0.001 A
Time factor T_{3I0P}		0.05 s to 3.00 s or ∞ (ineffective)	Increments 0.01 s
Additional time delay $T_{3I0P\text{ add}}$		0.00 s to 30.00 s or ∞ (ineffective)	Increments 0.01 s
Characteristics		See Figure 4-2	
Tolerances	Current	Pickup at $1.05 \leq I/3I_{0P} \leq 1.15$	
	Time	5 % \pm 15 ms for $2 \leq I/3I_{0P} \leq 20$ and $0.1 \leq T_{3I0P}/s \leq 2$	

Inverse Current Stage (ANSI)

Pickup value $3I_{0P}$	for $I_N = 1\text{ A}$	0.05 A to 25.00 A or 0.003 A to 25.000 A	Increments 0.01 A Increments 0.001 A
	for $I_N = 5\text{ A}$	0.25 A to 125.00 A or 0.015 A to 125.000 A	Increments 0.01 A Increments 0.001 A
Time factor D_{3I0P}		0.50 s to 15.00 s or ∞ (ineffective)	Increments 0.01 s
Additional time delay $T_{3I0P\text{ add}}$		0.00 s to 30.00 s or ∞ (ineffective)	Increments 0.01 s
Characteristics		See Figure 4-3 and 4-4	
Tolerances	Current	Pickup at $1.05 \leq I/3I_{0P} \leq 1.15$	
	Time	5 % \pm 15 ms for $2 \leq I/3I_{0P} \leq 20$ and $D_{3I0P}/s \geq 1$	

Inverse Current Stage (logarithmic inverse)

Pickup value $3I_{0P}$	for $I_N = 1 \text{ A}$	0.05 A to 25.00 A or 0.003 A to 25.000 A	Increments 0.01 A Increments 0.001 A
	for $I_N = 5 \text{ A}$	0.25 A to 125.00 A or 0.015 A to 125.000 A	Increments 0.01 A Increments 0.001 A
Start current factor $3I_{0P} \text{ FACTOR}$		1.0 to 4.0	Increments 0.1
Time factor T_{3I0P}		0.05 s to 15.00 s; ∞	Increments 0.01 s
Maximum time $T_{3I0P \text{ max}}$		0.00 s to 30.00 s	Increments 0.01 s
Minimum time $T_{3I0P \text{ min}}$		0.00 s to 30.00 s	Increments 0.01 s
Additional time delay $T_{3I0P \text{ add}}$		0.00 s to 30.00 s or ∞ (ineffective)	Increments 0.01 s
Characteristics		See Figure 4-5	
Tolerances Times	inv.	$5\% \pm 15 \text{ ms}$ for $2 \leq I/3I_{0P} \leq 20$ and $T_{3I0P}/s \geq 1$	
	def.	1 % of setting value or 10 ms	

Zero sequence voltage stage

Pickup value $3I_{0P}$	for $I_N = 1 \text{ A}$	0.05 A to 25.00 A or 0.003 A to 25.000 A	Increments 0.01 A Increments 0.001 A
	for $I_N = 5 \text{ A}$	0.25 A to 125.00 A or 0.015 A to 125.000 A	Increments 0.01 A Increments 0.001 A
Pickup value $3U_0 >$		1.0 V to 10.0 V	Increments 0.1 V
Voltage factor $U_{0 \text{ inv. minimal}}$		0.1 V to 5.0 V	Increments 0.1 V
Additional time delay	$T_{\text{directional}}$	0.00 s to 32.00 s	Increments 0.01 s
	$T_{\text{non-directional}}$	0.00 s to 32.00 s	Increments 0.01 s
Characteristics		See Figure 4-6	
Tolerances times		1 % of setting value or 10 ms	
Dropout ratio	Current	Approx. 0.95 for $I/I_N \geq 0.5$	
	Voltage	Approx 0.95 for $3U_0 \geq 1 \text{ V}$	

Zero sequence output stage

Pickup value $3I_{0P}$	for $I_N = 1 \text{ A}$	0.05 A to 25.00 A or 0.003 A to 25.000 A	Increments 0.01 A Increments 0.001 A
	for $I_N = 5 \text{ A}$	0.25 A to 125.00 A or 0.015 A to 125.000 A	Increments 0.01 A Increments 0.001 A
Pickup value S FORWARD	for $I_N = 1 \text{ A}$	0.1 VA to 10.0 VA	Increments 0.1 VA
	for $I_N = 5 \text{ A}$	0.5 VA to 50.0 VA	
Additional time delay $T_{3I0P \text{ add}}$		0.00 s to 30.00 s; ∞	Steps 0.01 s
Characteristics		(see Figure 4-7)	
Tolerances pickup values		1 % of set value at sensitive earth current transformer	
Tolerances times		5 % of set value or 15 ms at sensitive earth current transformer 6 % of set value or 15 ms at normal earth current transformer / without earth current transformer	

Inrush restraint

Second harmonic content for inrush		10 % to 45 %	Increments 1 %
		Referred to fundamental wave	
Inrush blocking is cancelled above	for $I_N = 1$ A	0.50 A to 25.00 A	Increments 0.01 A
	for $I_N = 5$ A	2.50 A to 125.00 A	
Inrush restraint may be switched effective or ineffective for each individual stage.			

Determination of direction

Each zone can be set to operate in forward or reverse direction, non-directional or ineffective.			
Direction measurement		With $I_E (= 3 I_0)$ and 3 U_0 and I_Y or I_2 and U_2	
		with $I_E (= 3 I_0)$ and 3 U_0 and I_Y	
		With $I_E (= 3 I_0)$ and I_Y (starpoint current of a power transformer)	
		With I_2 and U_2 (negative sequence quantities)	
		With zero-sequence power	
Limit values			
Displacement voltage $3U_{0>}$		0.5 V to 10.0 V	Increments 0.1 V
Starpoint current of a power transformer $I_Y>$	for $I_N = 1$ A	0.05 A to 1.00 A	Increments 0.01 A
	for $I_N = 5$ A	0.25 A to 5.00 A	
Negative sequence current $3I_{2>}$	for $I_N = 1$ A	0.05 A to 1.00 A	Increments 0.01 A
	for $I_N = 5$ A	0.25 A to 5.00 A	
Negative sequence voltage $3U_{2>}$		0.5 V to 10.0 V	Increments 0.1 V
"Forward" angle			
Capacitive alpha		0° to 360°	Increments 1°
Inductive beta		0° to 360°	Increments 1°
Tolerances pickup values		10 % of set value or 5 % of nominal current or 0.5 V	
Tolerance forward angle		5°	
Re-orientation time after direction change		Approx. 30 ms	



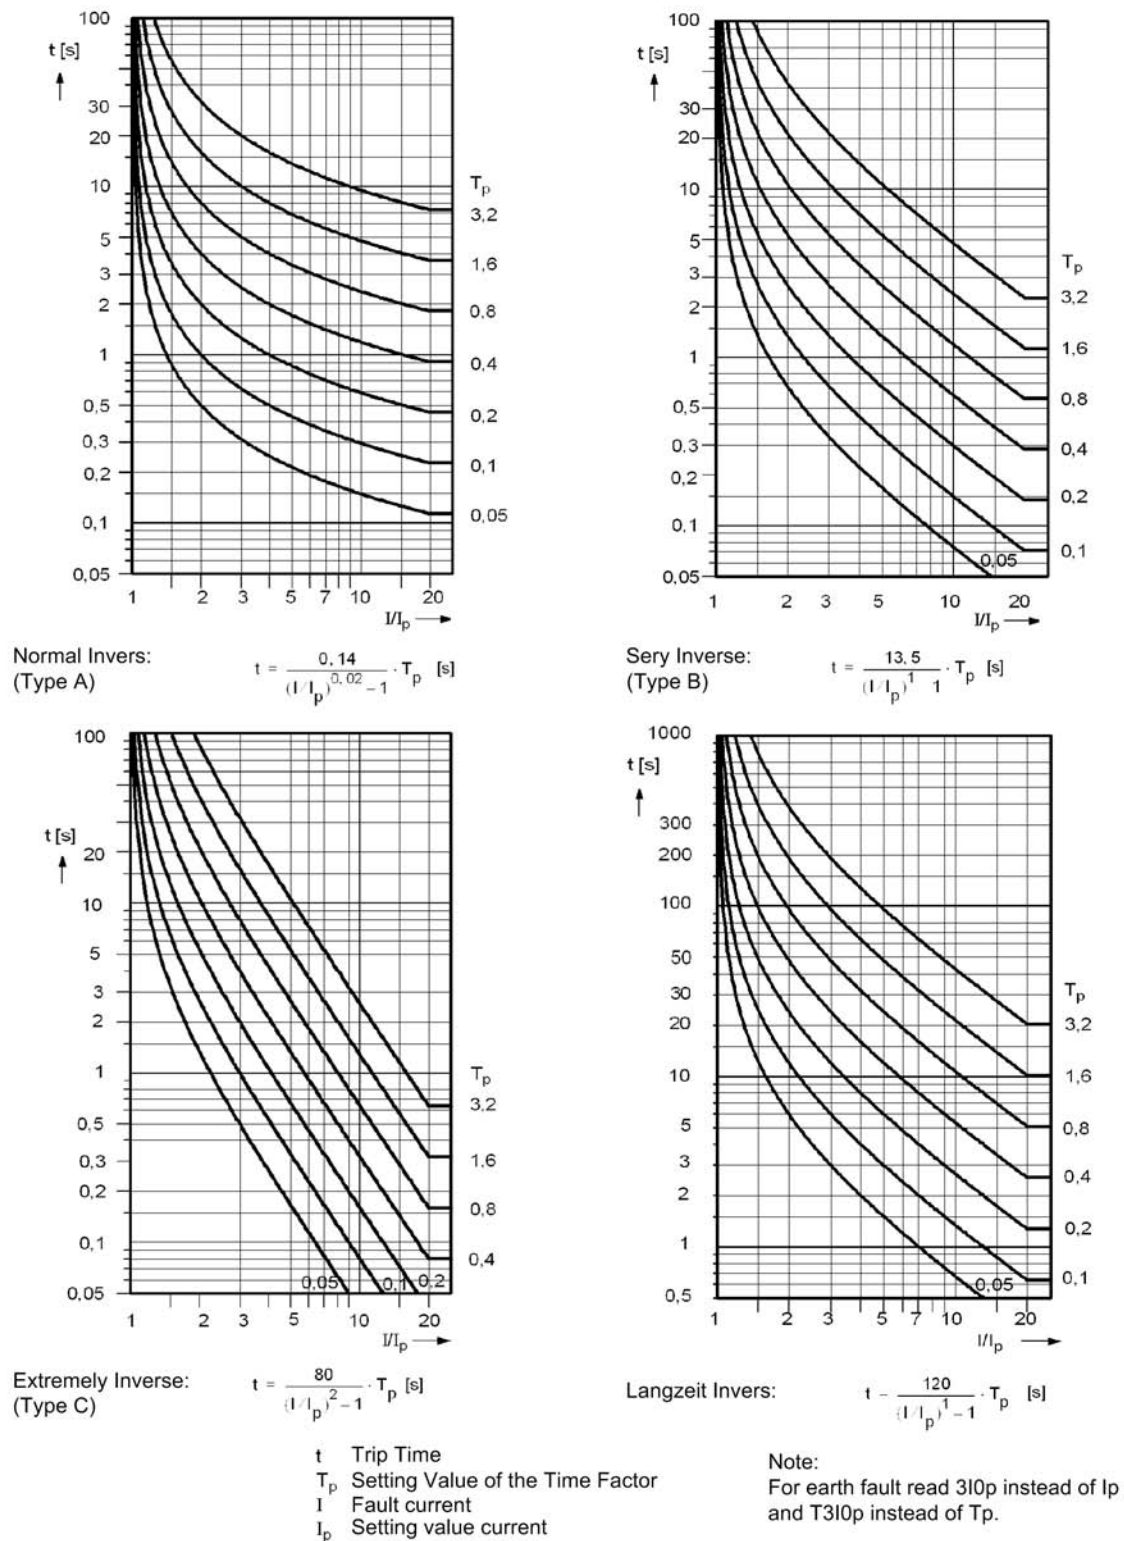



Figure 4-2 Trip time characteristics of inverse time overcurrent stage, acc. IEC (phases and earth)

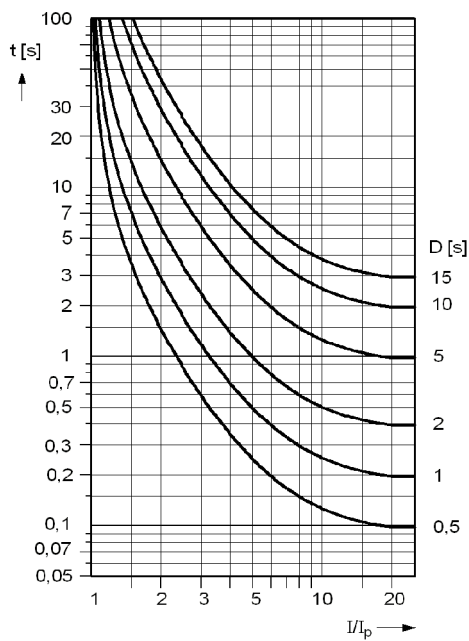


INVERSE
$$t = \left(\frac{8,9341}{(I/I_p)^{2,0938}} + 0,17966 \right) \cdot D [s]$$

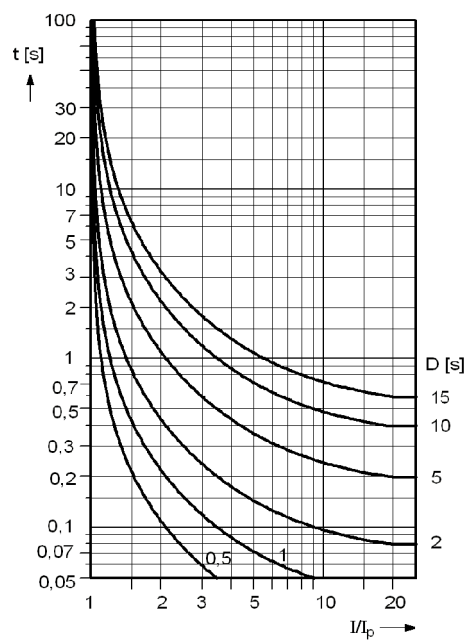

SHORT INVERSE
$$t = \left(\frac{0,2663}{(I/I_p)^{1,2669}} + 0,03393 \right) \cdot D [s]$$

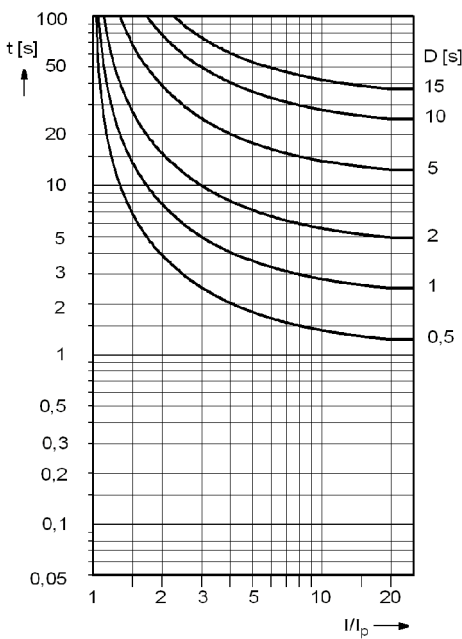


LONG INVERSE
$$t = \left(\frac{5,6143}{(I/I_p)^{-1}} + 2,18592 \right) \cdot D [s]$$

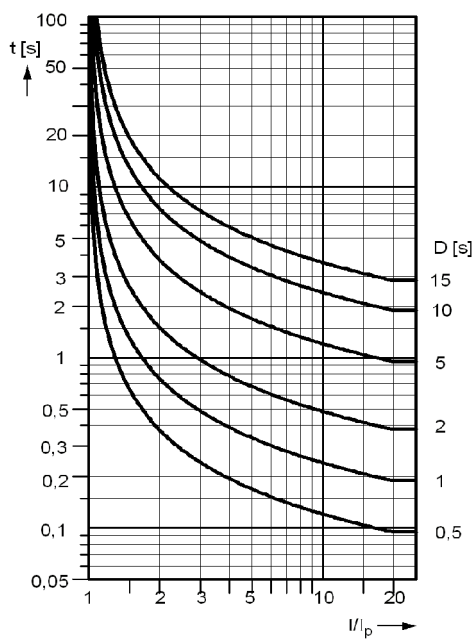


MODERATELY INVERSE
$$t = \left(\frac{0,0103}{(I/I_p)^{0,02}} + 0,0228 \right) \cdot D [s]$$

Figure 4-3 Trip time characteristics of inverse time overcurrent stage, acc. ANSI/IEEE (phases and earth)

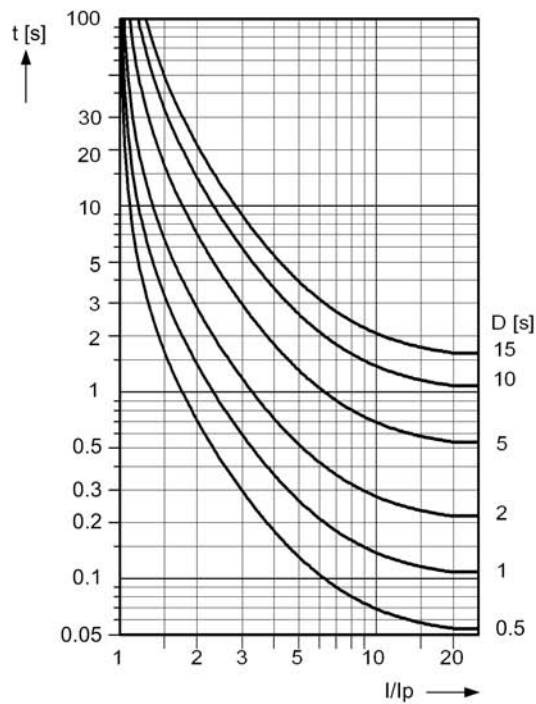


VERY INVERSE:

$$t = \left(\frac{3,922}{(I/I_p)^2 - 1} + 0,0982 \right) \cdot D[s]$$

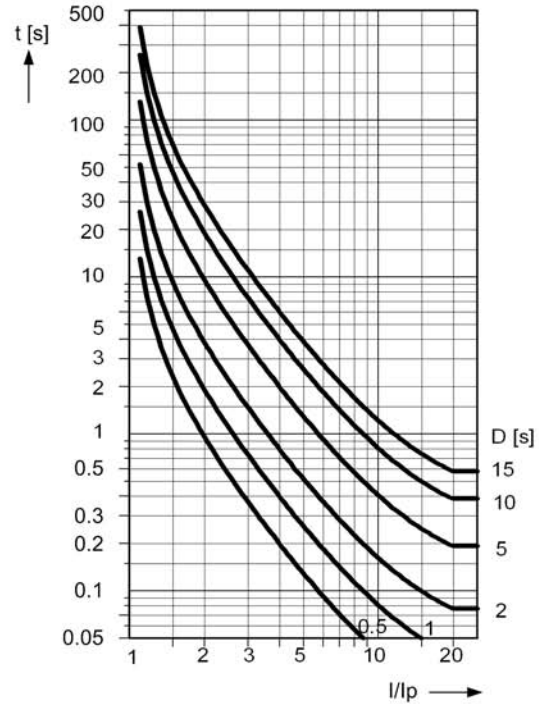

EXTREMELY INVERSE:

$$t = \left(\frac{5,64}{(I/I_p)^2 - 1} + 0,02434 \right) \cdot D[s]$$

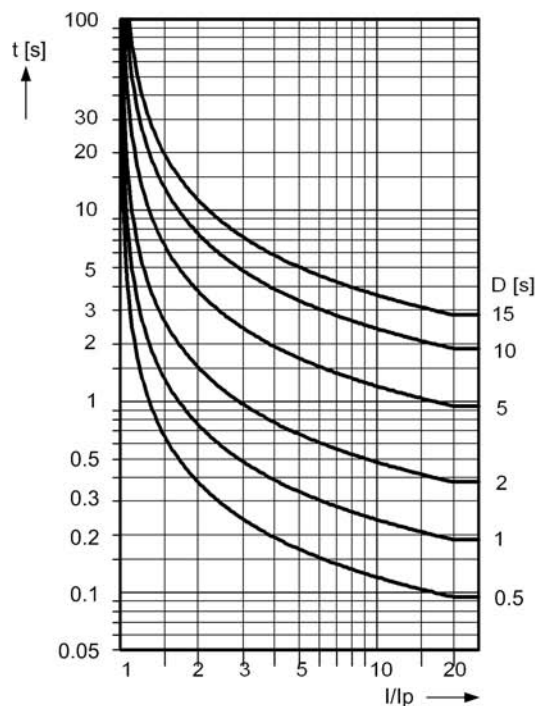

DEFINITE INVERSE:

$$t = \left(\frac{0,4797}{(I/I_p)^{1,5625} - 1} + 0,21359 \right) \cdot D[s]$$

t Trip Time
D Setting value time multiplier
I Fault current
Ip Setting value current

Note:
For earth fault read 3I0p instead
of Ip and D3I0p instead of D.

Figure 4-4 Trip time characteristics of inverse time overcurrent stage, acc. ANSI/IEEE (phases and earth)

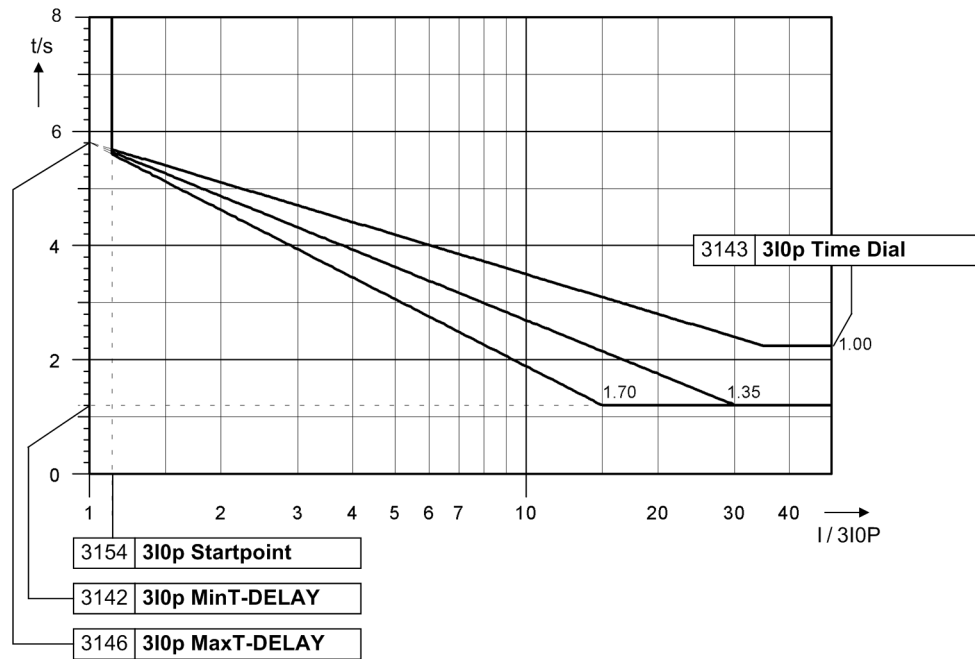


Figure 4-5 Trip time characteristic of the inverse time overcurrent stage with logarithmic-inverse characteristic

Logarithmic inverse $t = T_{3I0Pmax} - T_{3I0P} \cdot \ln(I/3I0P)$

Note: For $I/3I0P > 35$, the time for $I/3I0P = 35$ applies

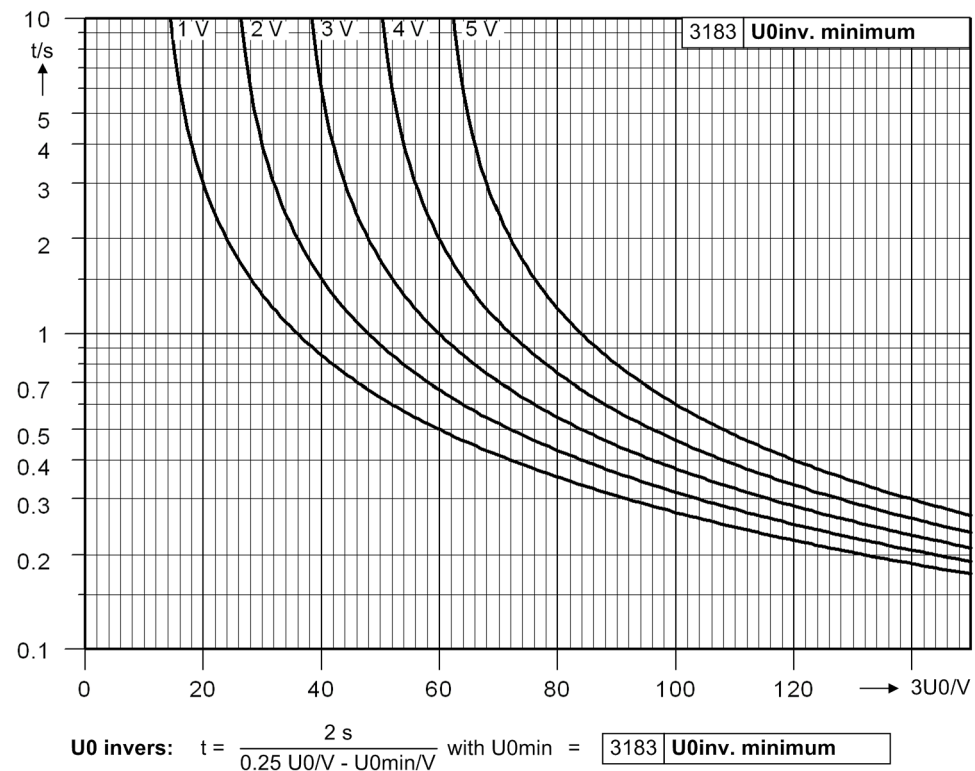


Figure 4-6 Trip time characteristics of the zero sequence voltage protection $U_{0\text{ inverse}}$

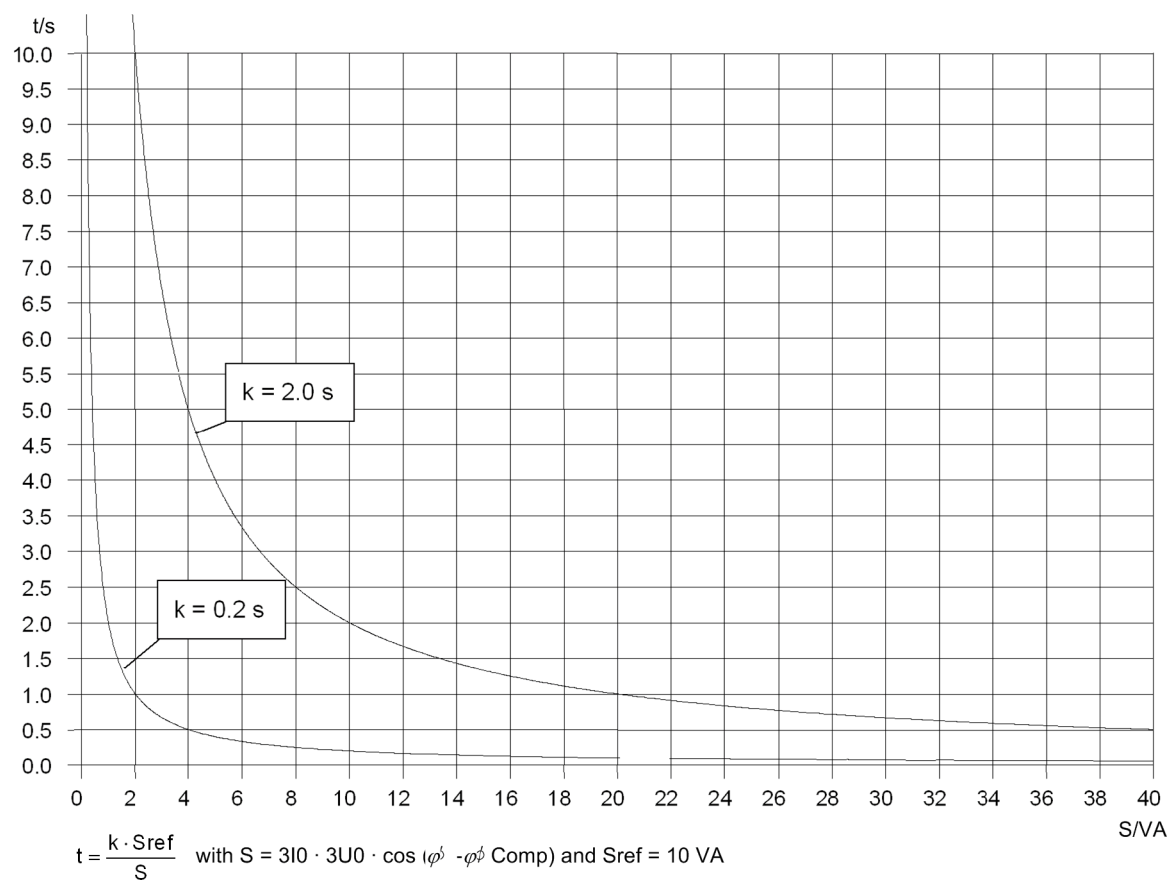


Figure 4-7 Tripping characteristics of the zero-sequence power protection

This characteristic applies for: $S_{ref} = 10 \text{ VA}$ and $T_{3IOPAdd.T_DELAY} = 0 \text{ s}$.

4.10 Teleprotection for Earth Fault Protection (optional)

Mode

For two line ends	One channel for each direction or three channels each direction for phase-segregated transmission
For three line ends	With one channel for each direction or connection

Overreach schemes

Method	Dir. comp. pickup	
	Directional unblocking scheme	
	Directional blocking scheme	
Send signal prolongation	0.00 s to 30.00 s	Increments 0.01 s
Enable delay	0.000 s to 30.000 s	Increments 0.001 s
Transient blocking time	0.00 s to 30.00 s	Increments 0.01 s
Wait time for transient blocking	0.00 s to 30.00 s; ∞	Increments 0.01 s
Time expiry tolerances	1 % of setting value or 10 ms	
The set times are pure delay times		

4.11 Weak Infeed Tripping (classical/optional)

Operating Mode

Phase segregated undervoltage detection after reception of a carrier signal from the remote end

Undervoltage

Setting value U_{PhE}	2 V to 70 V	Increments 1 V
Dropout to pickup ratio	Approx. 1.1	
Pickup tolerance	$\leq 5\%$ of setting value, or 0.5 V	

Times

Echo delay/release delay	0.00 s to 30.00 s	Increments 0.01 s
Echo impulse duration/release prolongation	0.00 s to 30.00 s	Increments 0.01 s
Echo blocking duration after echo	0.00 s to 30.00 s	Increments 0.01 s
Pickup tolerance	1 % of setting value or 10 ms	

4.12 Weak Infeed Tripping (French Specification/optional)

Operating Mode

Phase segregated undervoltage detection after reception of a carrier signal from the remote end

Undervoltage

Setting value U_{PhE}	0.10 to 1.00	Increments 0.01
Dropout/pickup ratio	Approx. 1.1	
Pickup tolerance	$\leq 5\%$	

Times

Receive prolongation	0.00 s to 30.00 s	Increments 0.01 s
Extension time $3I_0$	0.00 s to 30.00 s	Increments 0.01 s
Alarm time $3I_0$	0.00 s to 30.00 s	Increments 0.01 s
Delay (single-pole)	0.00 s to 30.00 s	Increments 0.01 s
Delay (multi-pole)	0.00 s to 30.00 s	Increments 0.01 s
Time constant τ	1 s to 60 s	Increments 1 s
Pickup tolerance	1 % of setting value or 10 ms	

4.13 Direct Remote Trip and Transmission of Binary Information

Remote Commands

Number of possible remote commands		4
The operating times depend on the number of ends and the communication speed. The following data require a transfer rate of 512 kbit/s and the output of commands via high-speed output relays (7SD5***-N/P/Q/R/S/T). The operating times refer to the entire signal path from the reception of external trip commands via binary inputs to the output of commands via output relays.		
Operating times, total approx.		
for 2 ends	minimum	8 ms
	typical	12 ms
for 3 ends	minimum	10 ms
	typical	14 ms
for 6 ends	minimum	15 ms
	typical	18 ms
Dropout times, total approx.		
for 2 ends	typical	19 ms
for 3 ends	typical	20 ms
for 6 ends	typical	26 ms

Remote Indications

Number of possible remote indications		24
The operating times depend on the number of ends and the communication speed. The following data require a transfer rate of 512 kbit/s and the output of commands via high-speed output relays (7SD5***-N/P/Q/R/S/T). The operating times refer to the entire signal path from the reception of external trip commands via binary inputs to the output of commands via output relays.		
Operating times, total approx.		
for 2 ends	minimum	9 ms
	typical	16 ms
for 3 ends	minimum	12 ms
	typical	18 ms
for 6 ends	minimum	17 ms
	typical	23 ms
Dropout times, total approx.		
for 2 ends	typical	24 ms
for 3 ends	typical	25 ms
for 6 ends	typical	32 ms

4.14 Instantaneous High-Current Switch-onto-Fault Protection (SOTF)

Pickup

High current pickup I>>>	for I _N = 1 A	0.10 A to 15.00 A or ∞ (disabled)	Increments 0.01 A
	for I _N = 5 A	0.50 A to 75.00 A or ∞ (disabled)	
High current pickup I>>>>	for I _N = 1 A	1.00 A to 25.00 A or ∞ (disabled)	Increments 0.01 A
	for I _N = 5 A	5.00 A to 125.00 A or ∞ (disabled)	
Dropout to pickup ratio		Approx. 90 %	
Pickup tolerance		3 % of setting value or 1 % of I _N	

Times

Shortest trip time (fast relays/high-speed relays)	Approx. 10/5 ms
---	-----------------

4.15 Backup Time Overcurrent Protection

Operating Modes

As emergency overcurrent protection or back-up overcurrent protection	
Emergency time overcurrent protection with differential and distance protection	Effective when the differential protection system is blocked (e.g. because of a failure of the device communication) <u>and</u> the distance protection system is additionally blocked, e.g. because of a trip of the voltage transformer mcb (via binary input), a measuring voltage failure or a pickup of the fuse failure monitor
Emergency overcurrent protection with differential protection (distance protection not configured)	Effective when the differential protection system is blocked (e.g. because of a failure of the device communication)
Emergency time overcurrent protection with distance protection (differential protection not configured)	Effective when the distance protection system is blocked, e.g. because of a trip of the voltage transformer mcb (via binary input), a measuring voltage failure or a pickup of the fuse failure monitor
Back-up overcurrent protection	operates independent of any events

Characteristics

Definite time stages (definite)	$I_{ph}>>>, 3I_{0}>>>, I_{ph}>>, 3I_{0}>>, I_{ph}>, 3I_{0}>$
Inverse time stages (IDMT)	$I_p, 3I_{0p}$; one of the characteristics according to Figure 4-2 to 4-4 (see Technical Data Section „Earth Fault Protection“) can be selected

High set current stages

Pickup value $I_{ph}>>$ (phases)	for $I_N = 1$ A	0.10 A to 25.00 A or ∞ (ineffective)	Increments 0.01 A
	for $I_N = 5$ A	0.50 A to 125.00 A or ∞ (ineffective)	
Pickup value $3I_0>>$ (earth)	for $I_N = 1$ A	0.05 A to 25.00 A or ∞ (ineffective)	Increments 0.01 A
	for $I_N = 5$ A	0.25 A to 125.00 A or ∞ (ineffective)	
Pickup value $I_{ph}>>$ (phases)		0.00 s to 30.00 s or ∞ (ineffective)	Increments 0.01 s
Delay $T_{3I0}>>$ (earth)		0.00 s to 30.00 s or ∞ (ineffective)	Increments 0.01 s
Dropout ratio		Approx. 0.95 for $I/I_N \geq 0.5$	
Pickup times (fast relays/high-speed relays)		Approx. 25/20 ms	
Dropout times		Approx. 30 ms	
Tolerances	Currents	3 % of setting value or 1 % nominal current	
	Times	1 % of setting value or 10 ms	
The set times are pure delay times			

Overcurrent stages

Pickup value $I_{Ph}>$ (phases)	for $I_N = 1$ A	0.10 A to 25.00 A or ∞ (ineffective)	Increments 0.01 A
	for $I_N = 5$ A	0.50 A to 125.00 A or ∞ (ineffective)	
Pickup value $3I_0>$ (earth)	for $I_N = 1$ A	0.05 A to 25.00 A or ∞ (ineffective)	Increments 0.01 A
	for $I_N = 5$ A	0.25 A to 125.00 A or ∞ (ineffective)	
Delay $T_{IPh}>$ (phases)		0.00 s to 30.00 s or ∞ (ineffective)	Increments 0.01 s
Delay $T_{3I0}>$ (earth)		0.00 s to 30.00 s or ∞ (ineffective)	Increments 0.01 s
Dropout ratio		Approx. 0.95 for $I/I_N \geq 0.5$	
Pickup times (fast relays/high-speed relays)		Approx. 25/20 ms	
Dropout times		Approx. 30 ms	
Tolerances	Currents	3 % of setting value or 1 % nominal current	
	Times	1 % of setting value or 10 ms	
The set times are pure delay times			

Inverse Current Stage (IEC)

Pickup value I_P (phases)	for $I_N = 1$ A	0.10 A to 4.00 A or ∞ (ineffective)	Increments 0.01 A
	for $I_N = 5$ A	0.50 A to 20.00 A or ∞ (ineffective)	
Pickup value $3I_{0P}$ (earth)	for $I_N = 1$ A	0.05 A to 4.00 A or ∞ (ineffective)	Increments 0.01 A
	for $I_N = 5$ A	0.25 A to 20.00 A or ∞ (ineffective)	
Time factors	T_{IP} (phases)	0.05 s to 3.00 s or ∞ (ineffective)	Increments 0.01 s
	T_{3I0P} (earth)	0.05 s to 3.00 s or ∞ (ineffective)	Increments 0.01 s
Additional time delays	$T_{IP \text{ delayed}}$ (phases)	0.00 s to 30.00 s	Increments 0.01 s
	$T_{3I0P \text{ delayed}}$ (earth)	0.00 s to 30.00 s	Increments 0.01 s
Characteristics		See Figure 4-2	
Tolerances currents		Pickup values at $1.05 \leq I/I_P \leq 1.15$ or $1.05 \leq I/3I_{0P} \leq 1.15$	
Tolerances times		5 % \pm 15 ms for $2 \leq I/I_P \leq 20$ and $0.1 \leq T_{IP}/s \leq 2$ or $2 \leq I/3I_{0P} \leq 20$ and $0.1 \leq T_{3I0P}/s \leq 2$	
Defined times		1 % of setting value or 10 ms	

Inverse Current Stage (ANSI)

Pickup value I_p (phases)	for $I_N = 1$ A	0.10 A to 4.00 A or ∞ (ineffective)	Increments 0.01 A
	for $I_N = 5$ A	0.50 A to 20.00 A or ∞ (ineffective)	
Pickup value $3I_{0P}$ (earth)	for $I_N = 1$ A	0.05 A to 4.00 A or ∞ (ineffective)	Increments 0.01 A
	for $I_N = 5$ A	0.25 A to 20.00 A or ∞ (ineffective)	
Time factors	D_{IP} (phases)	0.50 s to 15.00 s or ∞ (ineffective)	Increments 0.01 s
	D_{3I0P} (earth)	0.50 s to 15.00 s or ∞ (ineffective)	Increments 0.01 s
Additional time delays	$T_{IP \text{ delayed}}$ (phases)	0.00 s to 30.00 s	Increments 0.01 s
	$T_{3I0P \text{ delayed}}$ (earth)	0.00 s to 30.00 s	Increments 0.01 s
Characteristics		See Figure 4-3 and 4-4	
Tolerances currents		Pickup values at $1.05 \leq I/I_p \leq 1.15$ or $1.05 \leq I/3I_{0P} \leq 1.15$	
Tolerances times		5 % \pm 15 ms for $2 \leq I/I_p \leq 20$ and $D_{IP}/s \geq 1$ or $2 \leq I/3I_{0P} \leq 20$ and $D_{3I0P}/s \geq 1$	
Defined times		1 % of setting value or 10 ms	

Further Definite Stage

Pickup value $I_{ph}>>>$ (phases)	for $I_N = 1$ A	0.10 A to 25.00 A or ∞ (ineffective)	Increments 0.01 A
	for $I_N = 5$ A	0.50 A to 125.00 A or ∞ (ineffective)	
Pickup value $3I_0>>>$ (earth)	for $I_N = 1$ A	0.05 A to 25.00 A or ∞ (ineffective)	Increments 0.01 A
	for $I_N = 5$ A	0.25 A to 125.00 A or ∞ (ineffective)	
Delays	$T_{Iph}>>>$	0.00 s to 30.00 s or ∞ (ineffective)	Increments 0.01 s
	$T_{3I0}>>>$	0.00 s to 30.00 s or ∞ (ineffective)	Increments 0.01 s
Dropout to pickup ratio		Approx. 0.95 for $I/I_N \geq 0.5$	
Pickup times (fast relays/high-speed relays)		Approx. 25/20 ms	
Dropout times		Approx. 30 ms	
Tolerances currents	Currents	3 % of setting value or 1 % nominal current	
	Times	1 % of setting value or 10 ms	
The set times are pure delay times.			

4.16 Automatic Reclosure Function (optional)

Automatic Reclosures

Number of reclosures	Max. 8, first 4 with individual settings	
Type (depending on ordered version)	1-pole, 3-pole or 1-/3-pole	
Control	With pickup or trip command	
Action times Initiation possible without pickup and action time	0.01 s to 300.00 s; ∞	Increments 0.01 s
Different dead times before reclosure can be set for all operating modes and cycles	0.01 s to 1800.00 s; ∞	Increments 0.01 s
Dead times after evolving fault recognition	0.01 s to 1800.00 s	Increments 0.01 s
Reclaim time after reclosure	0.50 s to 300.00 s	Increments 0.01 s
Blocking time after dynamic blocking	0.5 s	
Blocking time after manual closing	0.50 s to 300.00 s; 0	Increments 0.01 s
Start signal monitoring time	0.01 s to 300.00 s	Increments 0.01 s
Circuit breaker monitoring time	0.01 s to 300.00 s	Increments 0.01 s

Adaptive Dead Time / Dead Line Check

Adaptive dead time	With voltage measurement or with close command transmission	
Action times Initiation possible without pickup and action time	0.01 s to 300.00 s; ∞	Increments 0.01 s
Maximum dead time	0.50 s to 3000.00 s	Increments 0.01 s
Voltage measurement dead line or bus	2 V to 70 V (Ph-E)	Increments 1 V
Voltage measurement live or bus	30 V to 90 V (Ph-E)	Increments 1 V
Voltage measuring time	0.10 s to 30.00 s	Increments 0.01 s
Time delay for close command transmission	0.00 s to 300.00 s; ∞	Increments 0.01 s

4.17 Synchronism and Voltage Check (optional)

Operating modes

Operating modes with automatic reclosure	Synchronism check
	Live bus - dead line
	Dead bus - live line
	Dead bus and dead line
	Bypassing
	Or combination of the above
Synchronism	Closing the circuit breaker under asynchronous power conditions possible (with circuit breaker action time)
Operating modes for manual closure	As for automatic reclosure, independently selectable

Voltages

Maximum operating voltage	20 V to 140 V (phase-to-phase)	Increments 1 V
U< for dead status	1 V to 60 V (phase-to-phase)	Increments 1 V
U> for live status	20 V to 125 V (phase-to-phase)	Increments 1 V
Tolerances	2 % of pickup value or 1 V	
Dropout to pickup ratio	Approx. 0.9 (U>) or 1.1 (U<)	

ΔU Measurement

Voltage difference	1.0 V to 60.0 V (phase-to-phase)	Increments 0.1 V
Tolerance	1 V	
Dropout to pickup ratio	Approx. 1.05	

Synchronous power conditions

$\Delta\phi$ -measurement	2° to 80°	Increments 1°
Tolerance	2°	
Δf -measurement	0.03 Hz to 2.00 Hz	Increments 0.01 Hz
Tolerance	15 mHz	
Enable delay	0.00 s to 30.00 s	Increments 0.01 s

Asynchronous power conditions

Δf -measurement	0.03 Hz to 2.00 Hz	Increments 0.01 Hz
Tolerance	15 mHz	
Max. angle error	5° for $\Delta f \leq 1$ Hz 10° for $\Delta f > 1$ Hz	
Synchronous/asynchronous limits	0.01 Hz	
Circuit breaker operating time	0.01 s to 0.60 s	Increments 0.01 s

Times

Minimum measuring time	Approx. 80 ms	
Maximum measuring time	0.01 s to 600.00 s; ∞	Increments 0.01 s
Tolerance of all timers	1 % of setting value or 10 ms	

4.18 Undervoltage and Overvoltage Protection (optional)

Phase-earth overvoltages

Overvoltage $U_{Ph>>}$	1.0 V to 170.0 V; ∞	Increments 0.1 V
Delay $T_{UPh>>}$	0.00 s to 100.00 s; ∞	Increments 0.01 s
Overvoltage $U_{Ph>}$	1.0 V to 170.0 V; ∞	Increments 0.1 V
Delay $T_{UPh>}$	0.00 s to 100.00 s; ∞	Increments 0.01 s
Dropout ratio	0.30 to 0.99	Increments 0.01
Pick-up times	approx. 35 ms	
Dropout time	approx. 30 ms	
Tolerances	Voltages	3 % of setting value or 1 V
	Times	1 % of setting value or 10 ms

Phase-phase overvoltages

Overvoltage $U_{PhPh>>}$	2.0 V to 220.0 V; ∞	Increments 0.1 V
Delay $T_{UPhPh>>}$	0.00 s to 100.00 s; ∞	Increments 0.01 s
Overvoltage $U_{PhPh>}$	2.0 V to 220.0 V; ∞	Increments 0.1 V
Delay $T_{UPhPh>}$	0.00 s to 100.00 s; ∞	Increments 0.01 s
Dropout ratio	0.30 to 0.99	Increments 0.01
Pick-up times	approx. 35 ms	
Dropout time	approx. 30 ms	
Tolerances	Voltages	3 % of setting value or 1 V
	Times	1 % of setting value or 10 ms

Overvoltage positive sequence system U_1

Overvoltage $U_{1>>}$	2.0 V to 220.0 V; ∞	Increments 0.1 V
Delay $T_{U1>>}$	0.00 s to 100.00 s; ∞	Increments 0.01 s
Overvoltage $U_{1>}$	2.0 V to 220.0 V; ∞	Increments 0.1 V
Delay $T_{U1>}$	0.00 s to 100.00 s; ∞	Increments 0.01 s
Dropout ratio	0.30 to 0.99	Increments 0.01
Compounding	Can be switched on/off	
Pick-up times	approx. 35 ms	
Dropout time	approx. 30 ms	
Tolerances	Voltages	3 % of setting value or 1 V
	Times	1 % of setting value or 10 ms

Overvoltage negative sequence system U_2

Overvoltage $U_{2>>}$	2.0 V to 220.0 V; ∞	Increments 0.1 V
Delay $T_{U2>>}$	0.00 s to 100.00 s; ∞	Increments 0.01 s
Overvoltage $U_{2>}$	2.0 V to 220.0 V; ∞	Increments 0.1 V
Delay $T_{U2>}$	0.00 s to 100.00 s; ∞	Increments 0.01 s
Dropout ratio	0.30 to 0.99	Increments 0.01
Pick-up times	approx. 35 ms	
Dropout time	approx. 30 ms	

Tolerances	Voltages	3 % of setting value or 1 V
	Times	1 % of setting value or 10 ms

Overvoltage zero sequence system $3U_0$ or any single-phase voltage U_x

Overvoltage $3U_{0>>}$	1.0 V to 220.0 V; ∞	Increments 0.1 V
Delay $T_{3U_{0>>}}$	0.00 s to 100.00 s; ∞	Increments 0.01 s
Overvoltage $3U_{0>}$	1.0 V to 220.0 V; ∞	Increments 0.1 V
Delay $T_{3U_{0>}}$	0.00 s to 100.00 s; ∞	Increments 0.01 s
Dropout ratio	0.30 to 0.99	Increments 0.01
Pick-up times		
With repeated measurement		approx. 75 ms
Without repeated measurement		approx. 35 ms
Dropout time		
With repeated measurement		approx. 75 ms
Without repeated measurement		approx. 30 ms
Tolerances	Voltages	3 % of setting value or 1 V
	Times	1 % of setting value or 10 ms

Phase-earth undervoltages

Undervoltage $U_{Ph<<}$	1.0 V to 100.0 V	Increments 0.1 V
Delay $T_{UPh<<}$	0.00 s to 100.00 s; ∞	Increments 0.01 s
Undervoltage $U_{Ph<}$	1.0 V to 100.0 V	Increments 0.1 V
Delay $T_{UPh<}$	0.00 s to 100.00 s; ∞	Increments 0.01 s
Dropout ratio	1,01 – 1,20	
Current criterion	Can be switched on/off	
Pick-up times	approx. 35 ms	
Dropout time	approx. 30 ms	
Tolerances	Voltages	3 % of setting value or 1 V
	Times	1 % of setting value or 10 ms

Phase-phase undervoltages

Undervoltage $U_{PhPh<<}$	1.0 V to 175.0 V	Increments 0.1 V
Delay $T_{UPhPh<<}$	0.00 s to 100.00 s; ∞	Increments 0.01 s
Undervoltage $U_{PhPh<}$	1.0 V to 175.0 V	Increments 0.1 V
Delay $T_{UPhPh<}$	0.00 s to 100.00 s; ∞	Increments 0.01 s
Dropout ratio	1,01 – 1,20	
Current criterion	Can be switched on/off	
Pick-up times	approx. 35 ms	
Dropout time	approx. 30 ms	
Tolerances	Voltages	3 % of setting value or 1 V
	Times	1 % of setting value or 10 ms

Undervoltage Positive Sequence System U_1

Undervoltage $U_{1<<}$		1.0 V to 100.0 V	Increments 0.1 V
Delay $T_{U_{1<<}}$		0.00 s to 100.00 s; ∞	Increments 0.01 s
Undervoltage $U_{1<}$		1.0 V to 100.0 V	Increments 0.1 V
Delay $T_{U_{1<}}$		0.00 s to 100.00 s; ∞	Increments 0.01 s
Dropout ratio		1,01 – 1,20	
Current criterion		Can be switched on/off	
Pick-up times		approx. 35 ms	
Dropout time		approx. 30 ms	
Tolerances	Voltages	3 % of setting value or 1 V	
	Times	1 % of setting value or 10 ms	

4.19 Frequency Protection (optional)

Frequency Elements

Quantity	4, depending on setting effective on f< or f>
----------	---

Pick-up Values

f> or f< adjustable for each element		
For $f_N = 50 \text{ Hz}$	45.50 Hz to 54.50 Hz	Increments 0.01 Hz
For $f_N = 60 \text{ Hz}$	55.50 Hz to 64.50 Hz	Increments 0.01 Hz

Times

Pickup times f>, f<	Approx. 85 ms	
Dropout times f>, f<	Approx. 30 ms	
Delay times T	0.00 s to 600.00 s	Increments 0.01 s
The set times are pure delay times. Note on dropout times: Dropout was enforced by current = 0 A and voltage = 0 V. Enforcing the dropout by means of a frequency change below the dropout threshold extends the dropout times.		

Dropout Frequency

$\Delta f = \text{pickup value} - \text{dropout value} $	Approx. 20 mHz
---	----------------

Operating Range

In voltage range	approx. $0.65 \cdot U_N$ up to 230 V (phase-phase)
In frequency range	25 Hz to 70 Hz

Tolerances

Frequencies f>, f< in specific range ($f_N \pm 10 \%$)	15 mHz in range U_{LL} : 50 V to 230 V
Time delays T(f<, f>)	1 % of setting value or 10 ms

4.20 Fault Locator

Start		With trip command or dropout	
Reactance Setting (secondary) in Ω/km or Ω/mile	for $I_N = 1 \text{ A}$	0.0050 Ω/km to 9.5000 Ω/km	Increments 0.001 /km
	for $I_N = 5 \text{ A}$	0.0010 Ω/km to 1.9000 Ω/km	
	for $I_N = 1 \text{ A}$	0.0050 Ω/mile to 15.0000 Ω/mile	Increments 0.001 Ω/mile
	for $I_N = 5 \text{ A}$	0.0010 Ω/mile to 3.0000 Ω/mile	
The other settings can be found in the Power System Data 2.			
When configuring mixed lines, the reactance per unit length must be set for each line section (A1 to A3)			
Parallel line compensation (optional)		Can be switched on/off The setting values are the same as for distance protection (see Section 4.6)	
Taking into consideration the load current in case of single-phase earth faults		Correction of the X-value (can be enabled and disabled)	
Output of the fault distance		In Ω primary and Ω secondary, in km or miles line length ¹⁾ in % of the line length ¹⁾	
Double-ended fault locating		Can be switched on/off	
Measuring tolerances with sinusoidal quantities		2.5 % of the line length at $30^\circ \leq \varphi_k \leq 90^\circ$ and $U_k/U_N \geq 0.1$	
Quality index (double-ended fault location)		0 to 10 (= maximum accuracy)	
Other output options (depending on order variant)		as BCD-code: 4 bit units + 4 bit tens + 1 bit hundreds + data valid bit	
- BCD output time		0.01 s to 180.00 s; ∞	Increments 0.01 s

¹⁾ Output of the fault distance in km, miles, and % requires homogeneous lines or correctly configured line sections

4.21 Circuit Breaker Failure Protection

Circuit breaker monitoring

Current flow monitoring	for I _N = 1 A	0.05 A to 20.00 A	Increments 0.01 A
	for I _N = 5 A	0.25 A to 100.00 A	
Zero sequence current monitoring	for I _N = 1 A	0.05 A to 20.00 A	Increments 0.01 A
	for I _N = 5 A	0.25 A to 100.00 A	
Dropout to pickup ratio		Approx. 0.95	
Tolerance		5 % of setting value or 1 % of nominal current	
Monitoring of circuit breaker auxiliary contact position			
- for three-pole tripping		Binary input for circuit breaker auxiliary contact	
- for single-pole tripping		1 binary input for auxiliary contact per pole or 1 binary input for series connection NO contact and NC contact	
Note: The circuit breaker failure protection can also operate without the indicated circuit breaker auxiliary contacts, but the function range is then reduced. Auxiliary contacts are necessary for the circuit breaker failure protection for tripping without or with a very low current flow (e.g. Buchholz protection) and for end fault protection and circuit breaker pole discrepancy supervision.			

Initiation conditions

For circuit breaker failure protection	Internal or external single-pole trip ¹⁾ Internal or external three-pole trip ¹⁾ Internal or external three-pole trip without current ¹⁾
--	---

¹⁾ Via binary inputs

Times

Pickup time	Approx. 5 ms with measured quantities present Approx. 20 ms after switch-on of measured quantities	
Dropout time, internal (overshoot time)	≤ 15 ms at sinusoidal measured values, ≤ 25 ms maximal	
Delay times for all stages	0.00 s to 30.00 s; ∞	Increments 0.01 s
Tolerance	1 % of setting value or 10 ms	

End fault protection

With signal transmission to the opposite line end		
Time delay	0.00 s to 30.00 s; ∞	Increments 0.01 s
Tolerance	1 % of setting value or 10 ms	

Pole discrepancy supervision

Initiation criterion	Not all poles are closed or open	
Monitoring time	0.00 s to 30.00 s; ∞	Increments 0.01 s
Tolerance	1 % of setting value or 10 ms	

4.22 Thermal Overload Protection

Setting Ranges

Factor k according to IEC 60255-8	0.10 to 4.00	Increments 0.01
Time Constant τ_{th}	1.0 min to 999.9 min	Increments 0.1 min
Thermal Alarm $\Theta_{Alarm}/\Theta_{Trip}$	50 % to 100 % of the trip over-temperature	Increments 1 %
Current Overload I_{Alarm}	for $I_N = 1$ A	0.10 A to 4.00 A
	for $I_N = 5$ A	0.50 A to 20.00 A
		Increments 0.01 A

Calculation Method

Calculation method temperature rise	Maximum temperature rise of 3 phases Average of temperature rise of 3 phases Temperature rise from maximum current
-------------------------------------	--

Tripping Characteristic


Tripping characteristic for $(I/k \cdot I_N) \leq 8$	$t = \tau \cdot \ln \frac{\left(\frac{I}{k \cdot I_N}\right)^2 - \left(\frac{I_{pre}}{k \cdot I_N}\right)^2}{\left(\frac{I}{k \cdot I_N}\right)^2 - 1}$
Meaning of abbreviations:	<p> t Tripping time τ Temperature rise time factor I Load current I_{pre} Previous load current k Setting factor according to IEC 60255-8 I_N Rated current of protected object </p>

Dropout to Pickup Ratio

Θ/Θ_{Trip} Θ/Θ_{Alarm} I/I_{Alarm}	Drops out with Θ_{Alarm} Approx. 0.99 Approx. 0.97
--	---


Tolerances

Referring to $k \cdot I_N$	2 % or 1 % of nominal current; Class 2 % according to IEC 60255-8
Referring to tripping time	3 % or 1 s for $I/(k \cdot I_N) > 1.25$; class 3 % per IEC 60255-8

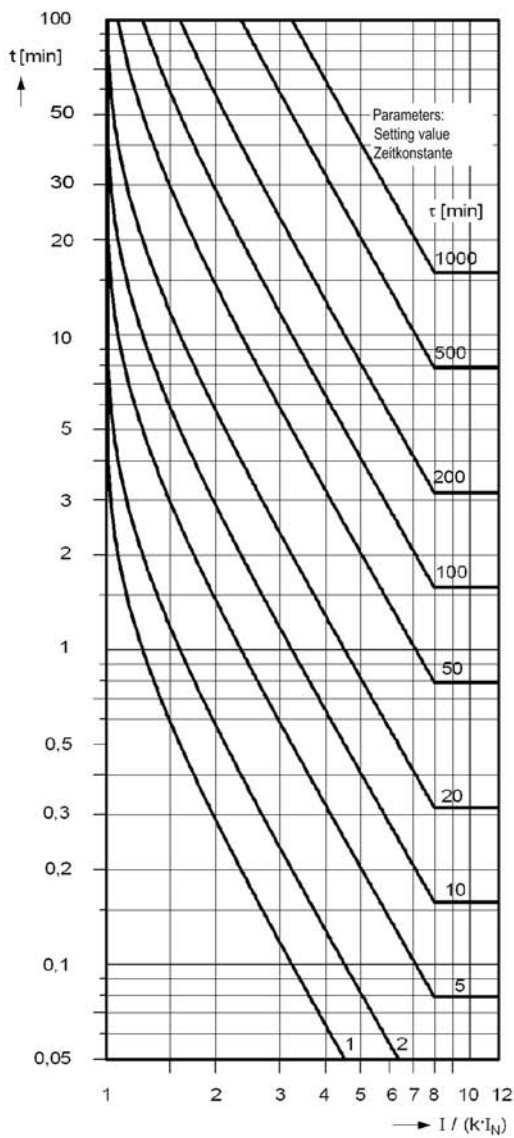

without pre-load:

$$t = \tau \cdot \ln \frac{\left(\frac{I}{k \cdot I_N}\right)^2}{\left(\frac{I}{k \cdot I_N}\right)^2 - 1} \quad [\text{min}]$$

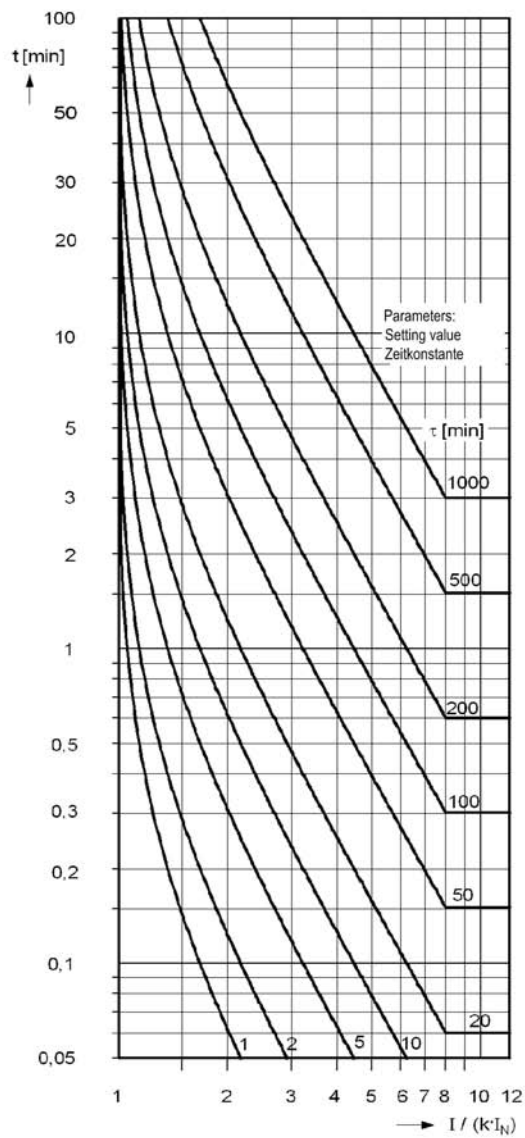

with 90 % pre-load:

$$t = \tau \cdot \ln \frac{\left(\frac{I}{k \cdot I_N}\right)^2 - \left(\frac{I_{vor}}{k \cdot I_N}\right)^2}{\left(\frac{I}{k \cdot I_N}\right)^2 - 1} \quad [\text{min}]$$

Figure 4-8 Trip time characteristics of the overload protection

4.23 Monitoring Functions

Measured values

Current sum		$I_F = \underline{I}_{L1} + \underline{I}_{L2} + \underline{I}_{L3} + k_I \cdot \underline{I}_E > \text{SUM.I THRESHOLD} \cdot I_N + \text{SUM.I FACTOR} \cdot \Sigma I $	
- SUM.I THRESHOLD	for $I_N = 1 \text{ A}$	0.10 A to 2.00 A	Increments 0.01 A
	for $I_N = 5 \text{ A}$	0.50 A to 10.00 A	Increments 0.01 A
- SUM.I FACTOR		0.00 to 0.95	Increments 0.01
Voltage sum		$U_F = \underline{U}_{L1} + \underline{U}_{L2} + \underline{U}_{L3} + k_U \cdot \underline{U}_{EN} > 25 \text{ V}$	
Current symmetry		$ I_{\min} / I_{\max} < \text{BAL.FACTORI}$ while $I_{\max} / I_N > \text{BAL.ILIMIT} / I_N$	
- BAL. FACTORI		0.10 to 0.95	Increments 0.01
- BAL.ILIMIT	for $I_N = 1 \text{ A}$	0.10 A to 1.00 A	Increments 0.01 A
	for $I_N = 5 \text{ A}$	0.50 A to 5.00 A	Increments 0.01 A
- T BAL.ILIMIT		5 s to 100 s	Increments 1 s
Broken conductor		One conductor without current, others with current (monitoring of the current transformer circuits on current step change without earth current)	
Voltage symmetry		$ U_{\min} / U_{\max} < \text{BAL.FACTORU}$ while $ U_{\max} > \text{BAL.ULIMIT}$	
- BAL.FACTORU		0.58 to 0.95	Increments 0.01
- BAL.ULIMIT		10 V to 100 V	Increments 1 V
- T BAL.ULIMIT		5 s to 100 s	Increments 1 s
Voltage phase sequence		\underline{U}_{L1} before \underline{U}_{L2} before \underline{U}_{L3} while $ \underline{U}_{L1} , \underline{U}_{L2} , \underline{U}_{L3} > 40 \text{ V} / \sqrt{3}$	
Asymmetrical measuring voltage failure (Fuse Failure Monitor)		$3 \cdot U_0 > \text{FFM } U>$ OR $3 \cdot U_2 > \text{FFM } U>$ AND simultaneously $3 \cdot I_0 < \text{FFM } I<$ AND $3 \cdot I_2 < \text{FFM } I<$	
- FFM $U>$		10 V to 100 V	Increments 1 V
- FFM $I<$	for $I_N = 1 \text{ A}$	0.10 A to 1.00 A	Increments 0.01 A
	for $I_N = 5 \text{ A}$	0.50 A to 5.00 A	Increments 0.01 A
Three-phase measuring voltage failure (Fuse Failure Monitor)		all $U_{Ph-E} < \text{FFM } U_{MEAS} <$ AND simultaneously all $\Delta I_{Ph} < \text{FFM } I_{\Delta}$ AND all $I_{Ph} > (I_{Ph})_{(Dist.)}$ OR all $U_{Ph-E} < \text{FFM } U_{MEAS} <$ AND simultaneously all $I_{Ph} < (I_{Ph})_{(Dist.)}$ AND all $I_{Ph} > 40 \text{ mA}$	
- FFM $U_{MEAS} <$		2 V to 100 V	Increments 1 V
- FFM I_{Δ}	for $I_N = 1 \text{ A}$	0.05 A to 1.00 A	Increments 0.01 A
	for $I_N = 5 \text{ A}$	0.25 A to 5.00 A	Increments 0.01 A
- T U Monitoring (waiting time for additional measured voltage failure monitoring)		0.00 s to 30.00 s	Increments 0.01 s
- T U mcb		0 ms to 30 ms	Increments 1 ms

Trip circuit monitoring

Number of monitored circuits	1 to 3	
Operation per circuit	With 1 binary input or with 2 binary inputs	
Pickup and dropout time	Approx. 1 to 2 s	
Settable delay time for operation with 1 binary input	1 s to 30 s	Increments 1 s

4.24 User-defined Functions (CFC)

Function Blocks and their Possible Allocation to the Priority Classes

Function Module	Explanation	Task Level			
		MW_BEARB	PLC1_BEARB	PLC_BEARB	SFS_BEARB
ABSVALUE	Magnitude Calculation	X	–	–	–
ADD	Addition	X	X	X	X
ALARM	Alarm clock	X	X	X	X
AND	AND - Gate	X	X	X	X
BLINK	Flash block	X	X	X	X
BOOL_TO_CO	Boolean to Control (conversion)	–	X	X	–
BOOL_TO_DI	Boolean to Double Point (conversion)	–	X	X	X
BOOL_TO_IC	Bool to Internal SI, Conversion	–	X	X	X
BUILD_DI	Create Double Point Annunciation	–	X	X	X
CMD_CANCEL	Cancel command	X	X	X	X
CMD_CHAIN	Switching Sequence	–	X	X	–
CMD_INF	Command Information	–	–	–	X
COMPARE	Measured value comparison	X	X	X	X
CONNECT	Connection	–	X	X	X
COUNTER	Counter	X	X	X	X
CV_GET_STATUS	Information status of the metered value, decoder	X	X	X	X
D_FF	D- Flipflop	–	X	X	X
D_FF_MEMO	Status Memory for Restart	X	X	X	X
DI_GET_STATUS	Information status double point indication, decoder	X	X	X	X
DI_SET_STATUS	Double point indication with status, encoder	X	X	X	X
DI_TO_BOOL	Double Point to Boolean (conversion)	–	X	X	X
DINT_TO_REAL	DoubleInt after real, adapter	X	X	X	X
DIST_DECODE	Double point indication with status, decoder	X	X	X	X
DIV	Division	X	X	X	X
DM_DECODE	Decode Double Point	X	X	X	X
DYN_OR	Dynamic OR	X	X	X	X
LIVE_ZERO	Live zero monitoring, nonlinear characteristic	X	–	–	–
LONG_TIMER	Timer (max.1193h)	X	X	X	X
LOOP	Feedback Loop	X	X	X	X
LOWER_SETPOINT	Lower Limit	X	–	–	–
MUL	Multiplication	X	X	X	X
MV_GET_STATUS	Information status measured value, decoder	X	X	X	X

MV_SET_STATUS	Measured value with status, encoder	X	X	X	X
NAND	NAND - Gate	X	X	X	X
NEG	Negator	X	X	X	X
NOR	NOR - Gate	X	X	X	X
OR	OR - Gate	X	X	X	X
REAL_TO_DINT	Real after DoubleInt, adapter	X	X	X	X
REAL_TO_UINT	Real after U-Int, adapter	X	X	X	X
RISE_DETECT	Rising edge detector	X	X	X	X
RS_FF	RS- Flipflop	–	X	X	X
RS_FF_MEMO	Status memory for restart	X	X	X	X
SI_GET_STATUS	Information status single point indication, decoder	X	X	X	X
SI_SET_STATUS	Single point indication with status, encoder	X	X	X	X
SQUARE_ROOT	Root Extractor	X	X	X	X
SR_FF	SR- Flipflop	–	X	X	X
SR_FF_MEMO	Status memory for restart	X	X	X	X
ST_AND	AND gate with status	X	X	X	X
ST_NOT	Negator with status	X	X	X	X
ST_OR	OR gate with status	X	X	X	X
SUB	Substraction	X	X	X	X
TIMER	Timer	–	X	X	–
TIMER_SHORT	Simple timer	–	X	X	–
UINT_TO_REAL	U-Int to real, adapter	X	X	X	X
UPPER_SETPOINT	Upper Limit	X	–	–	–
X_OR	XOR - Gate	X	X	X	X
ZERO_POINT	Zero Supression	X	–	–	–

General limits

Description	Limit	Comments
Maximum number of all CFC charts considering all task levels	32	When the limit is exceeded, an error message is output by the device. Consequently, the device is put into monitoring mode. The red ERROR-LED lights up.
Maximum number of all CFC charts considering one task level	16	Only error message (evolving error in processing procedure)
Maximum number of all CFC inputs considering all charts	400	When the limit is exceeded, an error message is output by the device. Consequently, the device starts monitoring. The red ERROR-LED lights up.
Maximum number of inputs of one chart for each task level (number of unequal information items of the left border per task level)	400	Only error message; here the number of elements of the left border per task level is counted. Since the same information is indicated at the border several times, only unequal information is to be counted.
Maximum number of reset-resistant flipflops D_FF_MEMO, RS_FF_MEMO, SR_FF_MEMO	350	When the limit is exceeded, an error indication is output by the device. Consequently, the device is put into monitoring mode. The red ERROR-LED lights up.

Device-specific Limits

Description	Limit	Comments
Maximum number of concurrent changes to planned inputs per task level	50	When the limit is exceeded, an error message is output by the device. Consequently, the device is put into monitoring mode. The red ERROR-LED lights up.
Maximum number of chart outputs per task level	150	

Additional Limits

Additional limits ¹⁾ for the following 4 CFC blocks:				
Task Level				
	TIMER ^{2) 3)}	TIMER_SHORT ^{2) 3)}	CMD_CHAIN	D_FF_MEMO
MW_BEARB	15	30	20	350
PLC1_BEARB				
PLC_BEARB				
SFS_BEARB				

- ¹⁾ When the limit is exceeded, an error indication is output by the device. Consequently, the device starts monitoring. The red ERROR-LED lights up.
- ²⁾ TIMER and TIMER_SHORT share the available timer resources. The relation is $\text{TIMER} = 2 \cdot \text{system timer}$ and $\text{TIMER_SHORT} = 1 \cdot \text{system timer}$. For the maximum used timer number the following side conditions are valid: $(2 \cdot \text{number of TIMERS} + \text{number of TIMER_SHORTs}) < 20$. The LONG_TIMER is not subject to this condition.
- ³⁾ The time values for the blocks TIMER and TIMER_SHORT must not be smaller than the time resolution of the device, i.e. 5 ms, otherwise the blocks will not start with the starting impulse issued.

Maximum Number of TICKS in the Task Levels

Task Level	Limit in TICKS ¹⁾
MW_BEARB (Measured Value Processing)	10 000
PLC1_BEARB (Slow PLC Processing)	1 900
PLC_BEARB (Fast PLC Processing)	200
SFS_BEARB (switchgear interlocking)	10 000

- ¹⁾ When the sum of TICKS of all blocks exceeds the limits before-mentioned, an error message is output by CFC.

Processing Times in TICKS required by the Individual Elements

Individual Element		Number of TICKS
Block, basic requirement		5
Each input more than 3 inputs for generic modules		1
Connection to an input signal		6
Connection to an output signal		7
Additional for each chart		1
Operating sequence module	CMD_CHAIN	34
Flipflop	D_FF_MEMO	6
Loop module	LOOP	8
Decoder	DM_DECODE	8
Dynamic OR	DYN_OR	6
Addition	ADD	26
Subtraction	SUB	26

Individual Element		Number of TICKS
Multiplication	MUL	26
Division	DIV	54
Square root	SQUARE_ROOT	83
Timer	TIMER_SHORT	8
Timer	LONG_TIMER	11
Blinker lamp	BLINK	11
Counter	COUNTER	6
Adaptor	REAL_TO_DINT	10
Adaptor	REAL_TO_UINT	10
Alarm clock	ALARM	21
Comparison	COMPARE	12
Decoder	DIST_DECODE	8

4.25 Additional Functions

Measured values

Operational measured values for currents	$I_{L1}; I_{L2}; I_{L3}; 3I_0; I_1; I_2; I_V; I_P; I_{EE}$ in A primary and secondary and in % $I_{NOperation}$
Tolerance	0.5 % of measured value or 0.5 % of I_N
Phase angles of currents	$\varphi(I_{L1}-I_{L2}); \varphi(I_{L2}-I_{L3}); \varphi(I_{L3}-I_{L1})$ in °
Tolerance	1° at nominal current
Operational measured values for voltages	$U_{L1-E}, U_{L2-E}, U_{L3-E}; 3U_0; U_0; U_1; U_2; U_{1K0}$ in kV primary, in V secondary or in % $U_{NOP}/\sqrt{3}$
Tolerance	0,5 % of measured value or 0,5 % of U_N
Operational measured values for voltages	$U_{EN}; U_X$ in V secondary
Tolerance	0.5 % of measured value, or 0.5 % of U_N
Operational measured values for voltages	$U_{L1-L2}, U_{L2-L3}, U_{L3-L1}$ in kV primary, in V secondary or in % U_{NOP}
Tolerance	0.5 % of measured value or 0.5 % of U_N
Phase angle of voltages	$\varphi(U_{L1}-U_{L2}); \varphi(U_{L2}-U_{L3}); \varphi(U_{L3}-U_{L1})$ in °
Tolerance	1 ° at nominal voltage
Phase angle for voltages and currents	$\varphi(U_{L1}-I_{L1}); \varphi(U_{L2}-I_{L2}); \varphi(U_{L3}-I_{L3})$ in °
Tolerance	1° at nominal voltage and nominal current
Operational measured values of impedances	$R_{L1-L2}, R_{L2-L3}, R_{L3-L1}, R_{L1-E}, R_{L2-E}, R_{L3-E},$ $X_{L1-L2}, X_{L2-L3}, X_{L3-L1}, X_{L1-E}, X_{L2-E}, X_{L3-E}$ in Ω primary and secondary
Operational measured values for power	S; P; Q (apparent, active and reactive power) in MVA; MW; Mvar primary and % S_N (operational nominal power) = $\sqrt{3} \cdot U_{NOP} \cdot I_{NOP}$
Tolerance for S	1 % of S_N at I/I_N and U/U_N in range 50 to 120 %
Tolerance for P	1 % of P_N at I/I_N and U/U_N in the range 50 to 120 % and
Tolerance for Q	ABS(cos φ) in the range ≥ 0.7 1 % of Q_N at I/I_N and U/U_N in the range 50 to 120 % and ABS(cos φ) in the range ≤ 0.7
Operating measured value for power factor	cos φ
Tolerance	0.02
Counter values for energy	$W_{p+}, W_{q+}; W_{p-}; W_{q-}$ (active and reactive energy) in kWh (MWh or GWh) and in kVARh (MVARh or GVARh)
Tolerance at nominal frequency	5 % for $I > 0.5 I_N$, $U > 0.5 U_N$ and $ \cos \varphi \geq 0.707$
Operational measured values for frequency	f in Hz and % f_N
Range	10 Hz to 75 Hz
Tolerance	20 mHz in range $f_N \pm 10$ % at nominal values
Measured values of the differential protection	$I_{DIFFL1}; I_{DIFFL2}; I_{DIFFL3};$ $I_{RETL1}; I_{RETL2}; I_{RETL3};$ $I_{CL1}; I_{CL2}; I_{CL3};$ $I_{DIFF3I0}$ in % $I_{NOperation}$
Thermal measured values	$\Theta_{L1}/\Theta_{AUS}; \Theta_{L2}/\Theta_{AUS}; \Theta_{L3}/\Theta_{AUS}; \Theta/\Theta_{AUS}$ related to tripping temperature rise
Operational measured values of synchro check	$U_{sy1}; U_{sy2}; U_{diff}$ in kV primary $f_{sy1}; f_{sy2}; f_{diff}$ in Hz; φ_{diff} in °

Long-term mean value	I_{L1dmd} ; I_{L2dmd} ; I_{L3dmd} ; I_{1dmd} ; P_{dmd} ; $P_{dmd Forw}$; $P_{dmd Rev}$; Q_{dmd} ; $Q_{dmd Forw}$; $Q_{dmd Rev}$; S_{dmd} in primary values
Minimum and maximum values	I_{L1} ; I_{L2} ; I_{L3} ; I_1 ; I_{L1d} ; I_{L2d} ; I_{L3d} ; I_1d ; U_{L1-E} ; U_{L2-E} ; U_{L3-E} ; U_1 ; U_{L1-L2} ; U_{L2-L3} ; U_{L3-L1} ; $3U_0$; $P Forw$; $P Rev$; $Q Forw$; $Q Rev$; S ; Pd ; Qd ; Sd ; $\cos \varphi Pos$; $\cos \varphi Neg$; f in primary values
Remote measured values for currents	I_{L1} ; I_{L2} ; I_{L3} of remote end in % $I_{NOperation}$ $\varphi(I_{L1})$; $\varphi(I_{L2})$; $\varphi(I_{L3})$ (remote against local) in °
Remote measured values for currents	U_{L1} ; U_{L2} ; U_{L3} of remote end in % $U_{NOperation}/\sqrt{3}$ $\varphi(U_{L1})$; $\varphi(U_{L2})$; $\varphi(U_{L3})$ (remote against local) in °

Telegram

Capacity	200 records
----------	-------------

Fault Logging

Capacity	8 faults with a total of max. 600 messages
----------	--

Fault Recording

Number of stored fault records	Max. 8
Storage time	Max. 5 s for each fault Approx. 15 s in total
Sampling rate at $f_N = 50$ Hz	1 ms
Sampling rate at $f_N = 60$ Hz	0.83 ms

Statistics (serial protection data interface)

Availability of transmission for applications with protection data interface	Availability in %/min and %/h
Delay time of transmission	Resolution 0.01 ms

Switching statistics

Number of trip events caused by the device	Separately for each breaker pole (if single-pole tripping is possible)
Number of automatic reclosures initiated by the device	Separate for 1-pole and 3-pole AR; Separately for 1st AR cycle and for all further cycles
Total of interrupted currents	Pole segregated
Maximum interrupted current	Pole segregated

Real Time Clock and Buffer Battery

Resolution for operational messages	1 ms
Resolution for fault messages	1 ms
Back-up battery	Type: 3 V/1 Ah, Type CR 1/2 AA Self-discharging time approx. 10 years

Commissioning aids

Operational Measured Values Switching device test
--

Clock

Time Synchronization		DCF 77/IRIG-B-Signal (telegram format IRIG-B000) Binary Input Communication
Operating modes of the clock management		
No.	Operating mode	Explanations
1	Internal	Internal synchronization via RTC (default)
2	IEC 60870-5-103	External via system interface (IEC 60870-5-103)
3	GPS synchronization	External synchronisation via GPS signal
4	Time signal IRIG -B	External synchronisation via IRIG B (telegram format IRIG-B000)
5	Time signal DCF 77	External synchronization via DCF 77
6	Time signal synchro-box	External synchronisation using SIMEAS Sync. box
7	Pulse via binary input	External synchronization with pulse via binary input

4.26 Dimensions

4.26.1 Panel Flush Mounting and Cubicle Mounting (Housing Size 1/2)

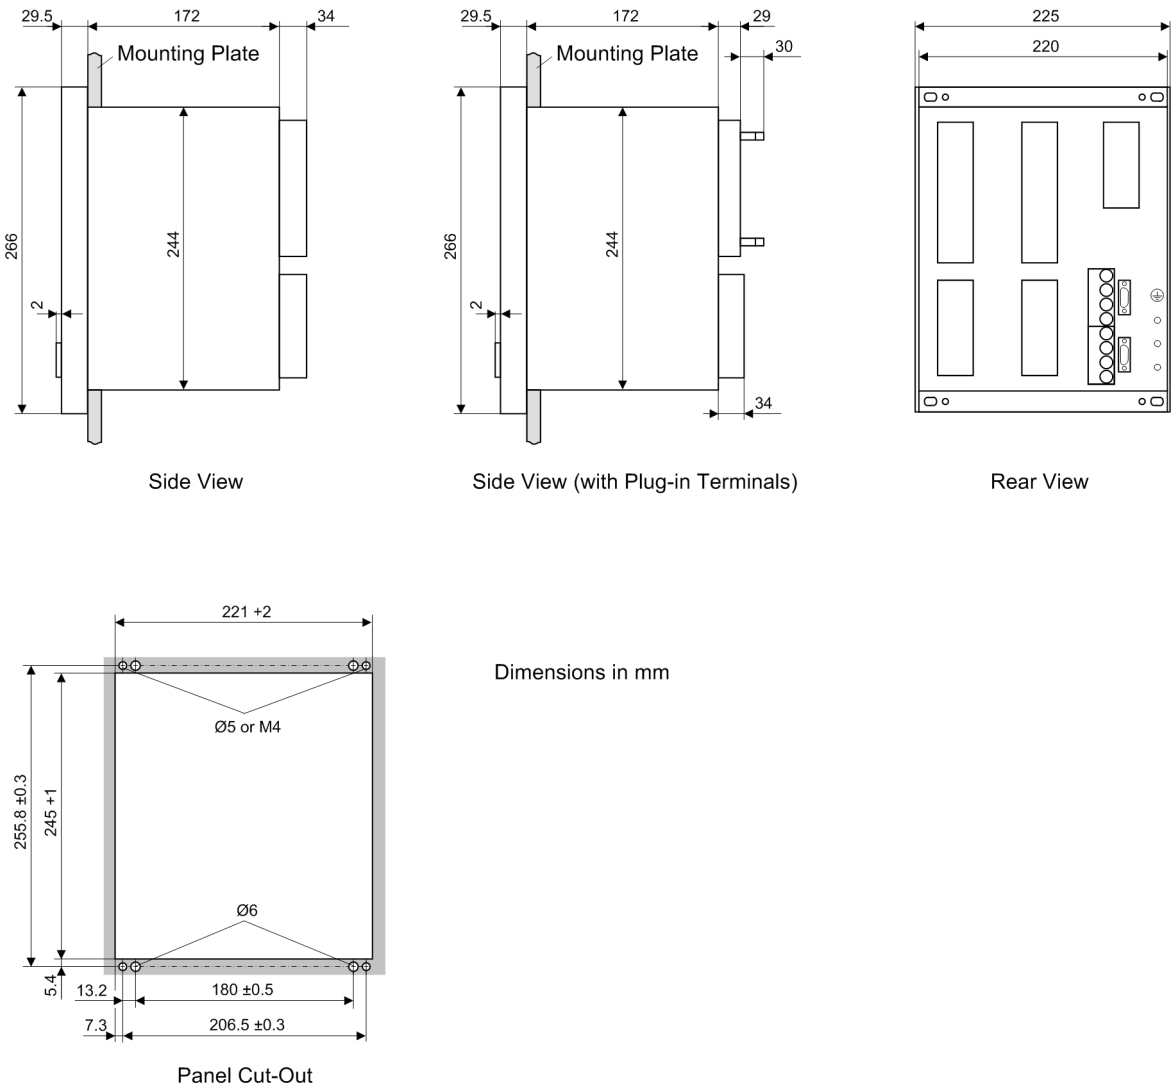


Figure 4-9 Dimensions of a device for panel flush or cubicle mounting (size 1/2)

4.26.2 Panel Flush Mounting and Cubicle Mounting (Housing Size $1\frac{1}{1}$)

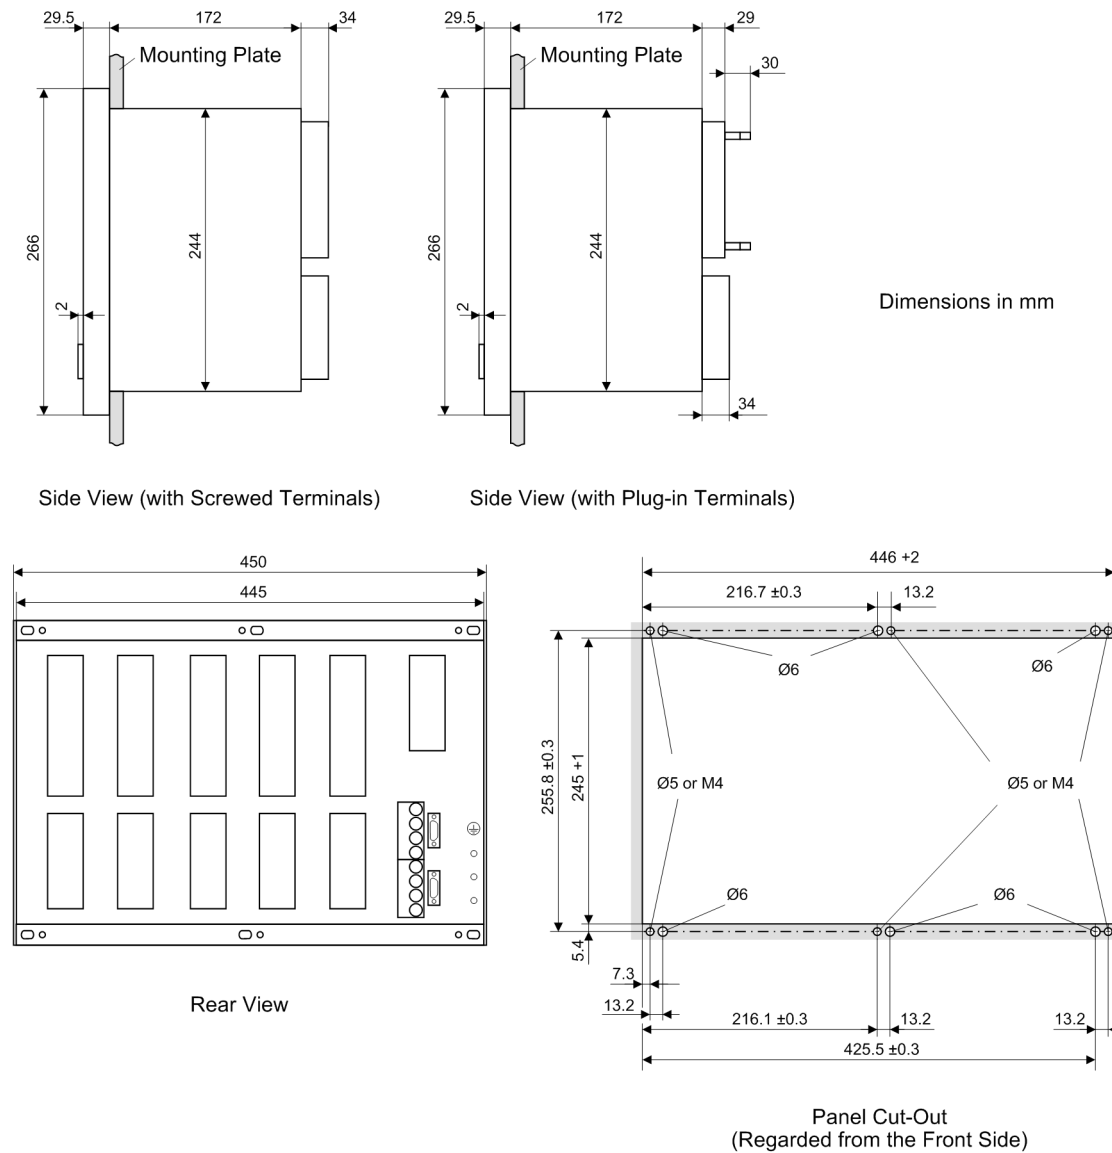


Figure 4-10 Dimensions of a device for panel flush or cubicle mounting (size $1\frac{1}{1}$)

4.26.3 Panel Surface Mounting (Housing Size 1/2)

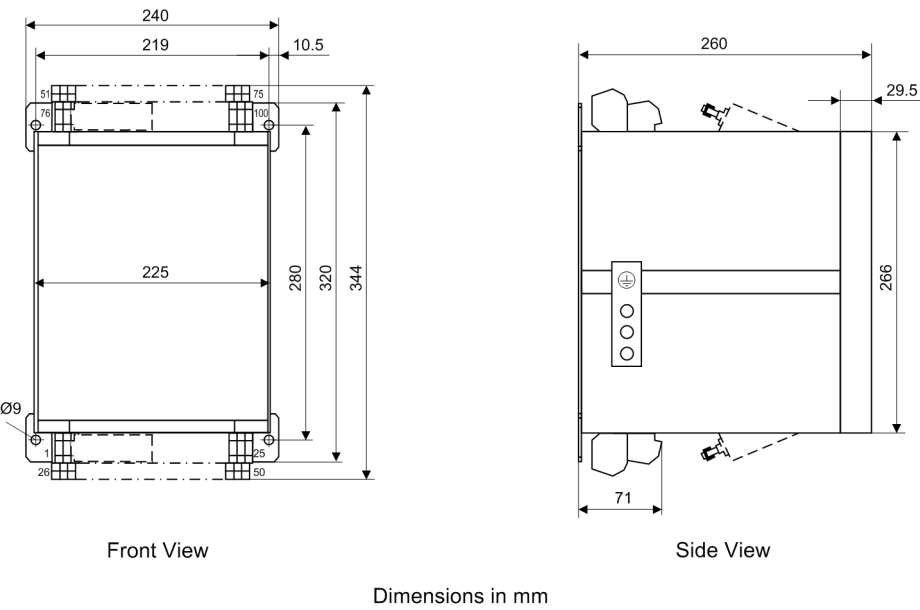


Figure 4-11 Dimensions of a device for panel surface mounting (size 1/2)

4.26.4 Panel Surface Mounting (Housing Size 1/1)

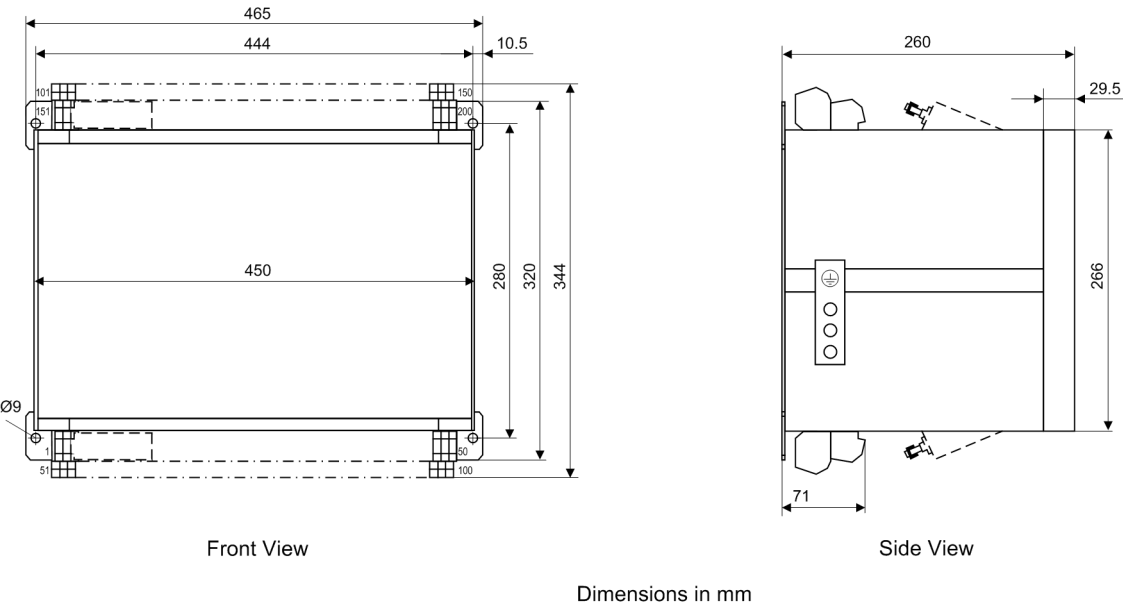


Figure 4-12 Dimensions of a device for panel surface mounting (size 1/1)



Appendix

A

This appendix is primarily a reference for the experienced user. This section provides ordering information for the models of this device. Connection diagrams for indicating the terminal connections of the models of this device are included. Following the general diagrams are diagrams that show the proper connections of the devices to primary equipment in many typical power system configurations. Tables with all settings and all information available in this device equipped with all options are provided. Default settings are also given.

A.1	Ordering Information and Accessories	628
A.2	Terminal Assignments	636
A.3	Connection Examples	648
A.4	Default Settings	656
A.5	Protocol-dependent Functions	662
A.6	Functional Scope	663
A.7	Settings	666
A.8	Information List	686
A.9	Group Alarms	725
A.10	Measured Values	726

A.1 Ordering Information and Accessories

A.1.1 Ordering Information

A.1.1.1 Ordering Code (MLFB)

Line Differential Protection					5	6	7		8	9	10	11	12		13	14	15	16	
With Distance Protection	7	S	D	5				—						—				+	L/M/N

Function Package/Version	Pos. 5
Line differential protection with 4-line display	2
Line differential protection with graphical display	3

Device Type	Pos. 6
Line differential protection for two-end operation ¹⁾	2
Line differential protection for multi-end operation ²⁾	3

¹⁾ Device with 1 protection data interface for genuine two-end operation OR device with 1 protection data interface for multi-end operation at the ends of a chain topology OR device with 2 protection data interfaces for redundant two-end operation

²⁾ Device with 2 protection data interfaces for multi-end operation

Measured Current Input	Pos. 7
$I_{Ph} = 1 \text{ A}$, $I_E = 1 \text{ A}$	1
$I_{Ph} = 1 \text{ A}$, $I_E = \text{sensitive (min. = 0.005 A)}$	2
$I_{Ph} = 5 \text{ A}$, $I_E = 5 \text{ A}$	5
$I_{Ph} = 5 \text{ A}$, $I_E = \text{sensitive (min. = 0.005 A)}$	6

Auxiliary Voltage (Power Supply, Pickup Threshold of Binary Inputs)	Pos. 8
24 to 48 VDC, Binary Input Threshold 17 V ²⁾	2
60 to 125 VDC ¹⁾ , Binary Input Threshold 17 V ²⁾	4
110 to 250 VDC ¹⁾ , 115 VAC, Binary Input Threshold 73 V ²⁾	5
220 to 250 VDC, 115 VAC, Binary Input Threshold 154 V ²⁾	6

¹⁾ with plug-in jumper one of the 2 voltage ranges can be selected

²⁾ for each binary input one of 3 pickup threshold ranges can be selected with plug-in jumper

Mechanical Design: Housing, Number of Binary Inputs and Outputs	Pos. 9
BI: Binary Inputs, BO: Output Relays	
Flush mounting housing with screw terminals, $\frac{1}{2}$ x 19", 8 BI, 16 BO	A
Flush mounting housing with screw terminals, $\frac{1}{1}$ x 19", 16 BI, 24 BO	C
Flush mounting housing with screw terminals, $\frac{1}{1}$ x 19", 24 BI, 32 BO	D
Surface mounting housing with two-tier terminals, $\frac{1}{2}$ x 19", 8 BI, 16 BO	E
Surface mounting housing with two-tier terminals, $\frac{1}{1}$ x 19", 16 BI, 24 BO	G

Mechanical Design: Housing, Number of Binary Inputs and Outputs	Pos. 9
BI: Binary Inputs, BO: Output Relays	
Surface mounting housing with two-tier terminals, $\frac{1}{4}$ x 19", 24 BI, 32 BO	H
Flush mounting housing with plug-in terminals, $\frac{1}{2}$ x 19", 8 BI, 16 BO	J
Flush mounting housing with plug-in terminals, $\frac{1}{4}$ x 19", 16 BI, 24 BO	L
Flush mounting housing with plug-in terminals, $\frac{1}{4}$ x 19", 24 BI, 32 BO	M
Flush mounting housing with screw terminals, $\frac{1}{4}$ x 19", 16 BI, 24 BO With „high-speed relay“, trip command acceleration by 5 ms	N
Flush mounting housing with screw terminals, $\frac{1}{4}$ x 19", 24 BI, 32 BO With „high-speed relay“, trip command acceleration by 5 ms	P
Surface mounting housing with two-tier terminals, $\frac{1}{4}$ x 19", 16 BI, 24 BO With „high-speed relay“, trip command acceleration by 5 ms	Q
Surface mounting housing with two-tier terminals, $\frac{1}{4}$ x 19", 24 BI, 32 BO With „high-speed relay“, trip command acceleration by 5 ms	R
Flush mounting housing with plug-in terminals, $\frac{1}{4}$ x 19", 16 BI, 24 BO With „high-speed relay“, trip command acceleration by 5 ms	S
Flush mounting housing with plug-in terminals, $\frac{1}{4}$ x 19", 24 BI, 32 BO With „high-speed relay“, trip command acceleration by 5 ms	T

Region-specific Default / Language Settings and Function Versions	Pos. 10
Region DE, 50 Hz, IEC, language German (language can be changed)	A
Region World, 50/60 Hz, IEC/ANSI, language English (language can be changed)	B
Region USA, 60/50 Hz, ANSI, language American English (language can be changed)	C
Region World, 50/60 Hz, IEC/ANSI, language French (language can be changed)	D
Region World, 50/60 Hz, IEC/ANSI, language Spanish (language can be changed)	E

Line Differential Protection					5	6	7				8	9	10	11	12				13	14	15	16
With Distance Protection	7	S	D	5				—							—						+	L

System Interfaces (Port B)	Pos. 11
No system interface	0
IEC 60870-5-103 protocol, electrical RS232	1
IEC 60870-5-103 protocol, electrical RS485	2
IEC 60870-5-103 protocol, optical 820 nm, ST connector	3
Profibus FMS Slave, electrical RS485	4
Profibus FMS Slave, optical, 820 nm, double ring, ST connector ¹⁾	6
For more interface options see Additional Specification L	9

Additional Specification L for Further System Interfaces (Port B) (only if Pos. 11 = 9)	Pos. 21	Pos. 22
Profibus DP Slave, electrical RS485	0	A
Profibus DP Slave, optical, 820 nm, double ring, ST connector ¹⁾	0	B
DNP 3.0, electrical RS485	0	G
DNP 3.0, optical, 820 nm, double ring, ST connector ¹⁾	0	H
IEC 61850, 100 Mbit Ethernet, double electrical, RJ45 connector	0	R
IEC 61850, 100 Mbit Ethernet, double optical, ST connector ²⁾	0	S

¹⁾ Not possible for surface mounting housing (pos. 9 = E/G/H/Q/R). For the surface mounted version, please order a device with the appropriate electrical RS485 interface and accessories as stated in Appendix A.1.2 „External converters“.

²⁾ Not possible for surface mounting housing (pos. 9 = E/G/H/Q/R).

Line Differential Protection					5	6	7		8	9	10	11	12		13	14	15	16	
With Distance Protection	7	S	D	5				—						—				+	M

Function Interface (Port C and D)	Pos. 12
see Additional Specification M	9

Additional Specification M for DIGSI/modem interface and protection data interface 1 (device rear port C and D) (only if Pos. 12 = 9)	Pos. 23	Pos. 24
No DIGSI/modem interface (device rear)	0	
Port C: DIGSI / Modem / Browser, electrical RS232	1	
Port C: DIGSI / Modem / Browser, electrical RS485	2	
Port C: DIGSI / Modem / Browser, optical, 820 nm, ST connector	3	
Port D: optical, 820 nm, 2 ST connectors, length of optical fibre up to 1.5 km, for direct connection or communication networks using multimode fibre		A
Port D: optical, 820 nm, 2 ST connectors, length of optical fibre up to 3.5 km, for direct connection using multimode fibre		B
Port D: optical, 1300 nm, LC duplex connector, length of optical fibre up to 24 km, for direct connection using monomode fibre ¹⁾		G
Port D: optical, 1300 nm, LC duplex connector, length of optical fibre up to 60 km, for direct connection using monomode fibre ¹⁾		H
Port D: optical, 1550 nm, LC duplex connector, length of optical fibre up to 100 km, for direct connection using monomode fibre ¹⁾		J

¹⁾ for surface-mounted case, delivery with external repeater

Line Differential Protection				5	6	7		8	9	10	11	12		13	14	15	16			
With Distance Protection	7	S	D	5				—						—				+		N

Functions 1 and Port E: Protection Data Interface 2	Pos. 13
Three-pole tripping, without automatic reclosure, without synchronism check	0
Three-pole tripping, with automatic reclosure, without synchronism check	1
Single-/three-pole tripping, without automatic reclosure, without synchronism check	2

Functions 1 and Port E: Protection Data Interface 2		Pos. 13
Single-/three-pole tripping, with automatic reclosure, without synchronism check		3
Three-pole tripping, without automatic reclosure, with synchronism check		4
Three-pole tripping, with automatic reclosure, with synchronism check		5
Single-/three-pole tripping, without automatic reclosure, with synchronism check		6
Single-/three-pole tripping, with automatic reclosure, with synchronism check		7
With protection data interface 2, see Additional Specification N		9

Additional Specification N for functions and protection data interface 2	Pos. 25	Pos. 26
(Port E) (only if Pos. 13 = 9)		
Three-pole tripping, without automatic reclosure, without synchronism check	0	
Three-pole tripping, with automatic reclosure, without synchronism check	1	
Single-/three-pole tripping, without automatic reclosure, without synchronism check	2	
Single-/three-pole tripping, with automatic reclosure, without synchronism check	3	
Three-pole tripping, without automatic reclosure, with synchronism check	4	
Three-pole tripping, with automatic reclosure, with synchronism check	5	
Single-/three-pole tripping, without automatic reclosure, with synchronism check	6	
Single-/three-pole tripping, with automatic reclosure, with synchronism check	7	
Port E: optical, 820 nm, 2 ST connectors, length of optical fibre up to 1.5 km, for direct connection or communication networks using multimode fibre		A
Port E: optical, 820 nm, 2 ST connectors, length of optical fibre up to 3.5 km, for direct connection using multimode fibre		B
Port E: optical, 1300 nm, LC duplex connector, length of optical fibre up to 24 km, for direct connection using monomode fibre ¹⁾		G
Port E: optical, 1300 nm, LC duplex connector, length of optical fibre up to 60 km, for direct connection using monomode fibre ¹⁾		H
Port E: optical, 1550 nm, LC duplex connector, length of optical fibre up to 100 km, for direct connection using monomode fibre ¹⁾		J

¹⁾ for surface-mounted case, delivery with external repeater

Function 2				Pos. 14
Overcurrent Protection/ Breaker Failure Protection	Earth Fault Protection	Distance Protection (pickup $Z<$, polygon, parallel line compensation ¹⁾), power swing option with		
		MHO	$I>$, $U/I/\varphi$ pickup	
with	without	without	without	C
with	without	without	with	D
with	without	with	without	E
with	with	without	without	F
with	with	without	with	G
with	with	with	without	H

¹⁾ Parallel line compensation only possible if MLFB position 7 = 1 or 5

Function 3					Pos. 15
Remote Indications	Transformer inside protection zone	Multi-end fault locator ¹⁾	Voltage/frequency protection	Restricted earth fault protection	
with	without	without	without	without	J
with	without	without	with	without	K
with	without	with	without	without	L
with	without	with	with	without	M
with	with	without	without	without	N
with	with	without	with	without	P
with	with	with	without	without	Q
with	with	with	with	without	R
with	with	without	without	with	S
with	with	without	with	with	T
with	with	with	without	with	U
with	with	with	with	with	V

¹⁾ The single-ended fault locator is included in the standard scope of functions of all variants.

Function 4			Pos. 16
Expanded Measured Values (Min, Max, Mean)	External GPS Synchronization of the Differential Protection	Charging Current Compensation	
without	without	without	0
without	with	without	1
with	without	without	2
with	with	without	3
without	without	with	4
without	with	with	5
with	without	with	6
with	with	with	7

A.1.2 Accessories

Communication Converter

Converter for the serial connection of the 7SD5 line protection system to synchronous communication interfaces X.21 G703.1 (64 kbit/s), G703-T1 (1.1455 Mbit/s), G703-E1 (2.048 Mbit/s) or symmetrical communication cables.

Designation	Order number
Optical-electrical communication converter CC-X/G with synchronous interface (X.21 / G703.1)	7XV5662-0AA00
Optical-electrical communication converter CC-CU with synchronous interface	7XV5662-0AC00
Optical-electrical communication converter CC-2M with synchronous interface (G703-E1, G703-T1)	7XV5662-0AD00

Optical Repeater	Fibre optical repeater for long-distance transmission of serial signals (up to 100 km / 62.5 miles)	
	Name	Order Number
	Wide-area fibre optical repeater (24 km / 15 miles)	7XV5461-0BG00
	Wide-area fibre optical repeater (60 km / 37.5 miles)	7XV5461-0BH00
	Wide-area fibre optical repeater (100 km / 62.5 miles)	7XV5461-0BJ00
Isolating Transformers	Isolating transformers are needed on copper lines if the longitudinal voltage induced in the pilot wires can result in more than 60 % of the test voltage at the communication converter (i.e. 3 kV for CC-CU). They are connected between the communication converter and the communication line.	
	Name	Order Number
	Isolation transformer, test voltage 20 kV	7XR9516
GPS	Name	Order No.
	GPS receiver with antenna and cable	7XV5664-0AA00
	Power supply	7XV5810-0BA00
Voltage Transformer Miniature Circuit Breaker	Nominal Values	Order No.
	Thermal 1.6 A; magnetic 6 A	3RV1611-1AG14
External Converters	Optical interfaces for Profibus and DNP 3.0 are not possible with <u>surface mounted</u> housings. Please order in this case a device with the appropriate electrical RS485 interface, and the additional OLM converters listed below . Note: The OLM converter 6GK1502-3CB10 requires an operating voltage of 24 VDC. If the operating voltage is > 24 V DC the additional power supply 7XV5810-0BA00 is required.	
	Interface used	Order device with additional module/OLM converter
	Profibus DP/FMS double ring	Profibus DP/FMS RS485/ 6GK1502-3CB01
	DNP 3.0 820 nm	DNP 3.0 RS485/ 7XV5650-0BA00

Exchangeable Interface Modules

Name	Order Number
RS232	C53207-A351-D641-1
RS485	C73207-A351-D642-1
FO 820 nm	C53207-A351-D643-1
Profibus DP RS485	C53207-A351-D611-1
Profibus DP double ring	C53207-A351-D613-1
Profibus FMS RS485	C53207-A351-D603-1
Profibus FMS double ring	C53207-A351-D606-1
DNP 3.0 RS485	C53207-A351-D631-3
DNP 3.0 820 nm	C53207-A351-D633-3
FO5 with ST connector; 820 nm; multimode optical fibre - maximum length: 1.5 km (0.94 miles) ¹⁾	C53207-A351-D651-1
FO5 with ST connector; 820 nm; multimode optical fibre - maximum length: 1.5 km; for surface mounting housing ¹⁾	C53207-A406-D49-1
FO6 with ST-connector; 820 nm; multimode optical fibre - maximum length: 3.5 km (2.2 miles)	C53207-A351-D652-1
FO6 with ST connector; 820 nm; multimode optical fibre - maximum length: 3.5 km; for surface mounting housing	C53207-A406-D50-1
FO17 with LC duplex connector; 1300 nm; monomode optical fibre - maximum length: 24 km (15 miles)	C53207-A351-D655-1
FO18 with LC duplex connector; 1300 nm; monomode optical fibre - maximum length: 60 km (37.5 miles)	C53207-A351-D656-1
FO19 with LC duplex connector; 1550 nm; monomode optical fibre - maximum length: 100 km (62.5 miles)	C53207-A351-D657-1
Ethernet electrical (EN100)	C53207-A351-D675-2
Ethernet optical (EN100)	C53207-A351-D676-1

¹⁾ also used for connection to the optical-electrical communication converter

Terminal Block Covering Caps

Terminal Block Covering Cap for Block Type	Order No.
18 terminal voltage, 12 terminal current block	C73334-A1-C31-1
12 terminal voltage, 8 terminal current block	C73334-A1-C32-1

Short-Circuit Links

Short-circuit Links as Jumper Kit	Order No.
3 pcs for current terminals + 6 pcs for voltage terminals	C73334-A1-C40-1

Plug-in Connector	Plug-in Connector	Order No.
	2-pin	C73334-A1-C35-1
	3-pin	C73334-A1-C36-1
Mounting Brackets for 19" Racks	Name	Order No.
	a pair of mounting rails; one for top, one for bottom	C73165-A63-D200-1
Battery	Lithium battery 3 V/1 Ah, type CR 1/2 AA	Order No.
	VARTA	6127 101 501
Interface Cable	An interface cable and the DIGSI operating software are required for the communication between the SIPROTEC 4 device and a PC or laptop: The PC or laptop must run MS-WINDOWS 95, MS-WINDOWS 98, MS-WINDOWS NT 4, MS-WINDOWS 2000, MS-WINDOWS ME or MS-WINDOWS XP PRO	
	Name	Order No.
	Interface cable between PC and SIPROTEC, Cable with 9-pin male/female connectors	7XV5100-4
DIGSI operating software	DIGSI protection operation and configuration software	Order No.
	DIGSI, basic version with licenses for 10 computers	7XS5400-0AA00
	DIGSI, complete version with all option packages	7XS5402-0AA00
Graphical Analysis Program SIGRA	Software for graphical visualization, analysis, and evaluation of fault data. Option package of the complete version of DIGSI	
	Name	Order No.
	SIGRA; Full version with license for 10 computers	7XS5410-0AA00
DIGSI REMOTE 4	Name	Order No.
	Software for remotely operating protective devices via a modem (and possibly a star connector) using DIGSI (option package of the complete version of DIGSI)	7XS5440-0AA00

A.2 Terminal Assignments

A.2.1 Panel Flush Mounting or Cubicle Mounting

7SD5***-A/J

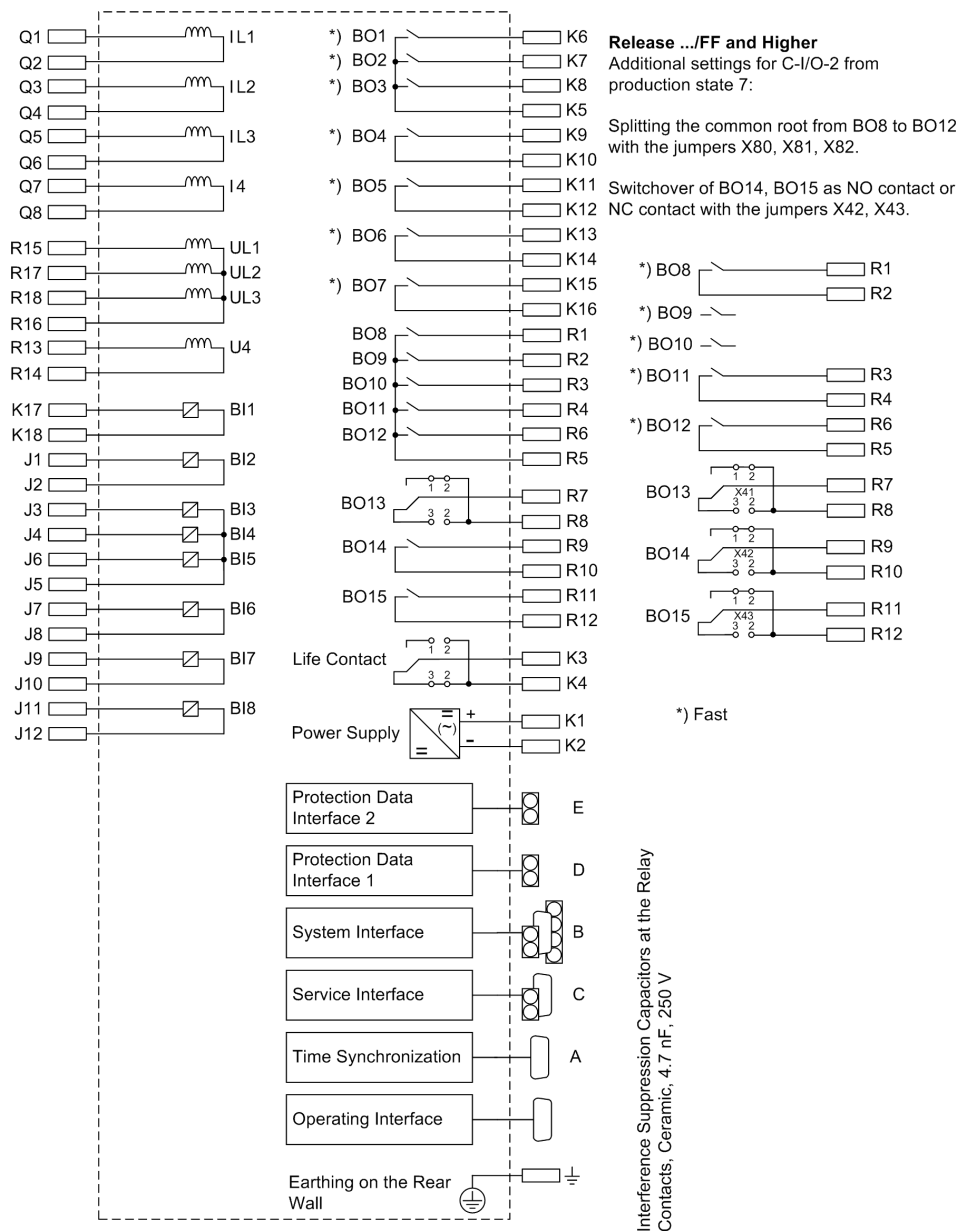


Figure A-1 General diagram 7SD5***-A/J (panel flush mounting or cubicle mounting; size^{1/2})

7SD5***-C/L

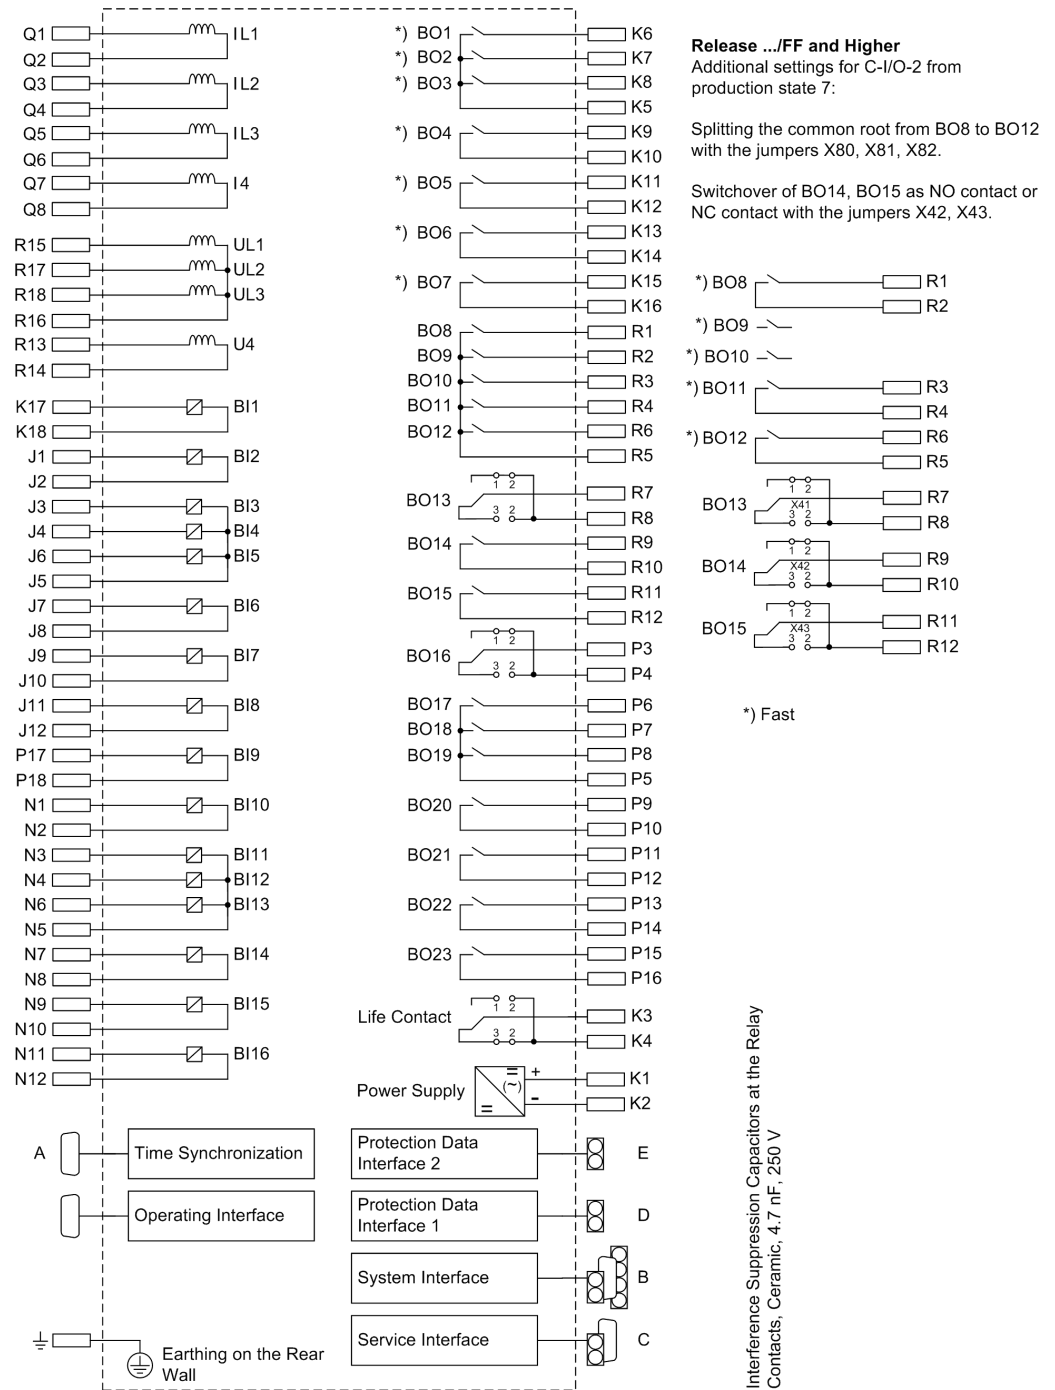


Figure A-2 General diagram 7SD5***-C/L (panel flush mounting or cubicle mounting; size^{1/1})

7SD5***-N/S

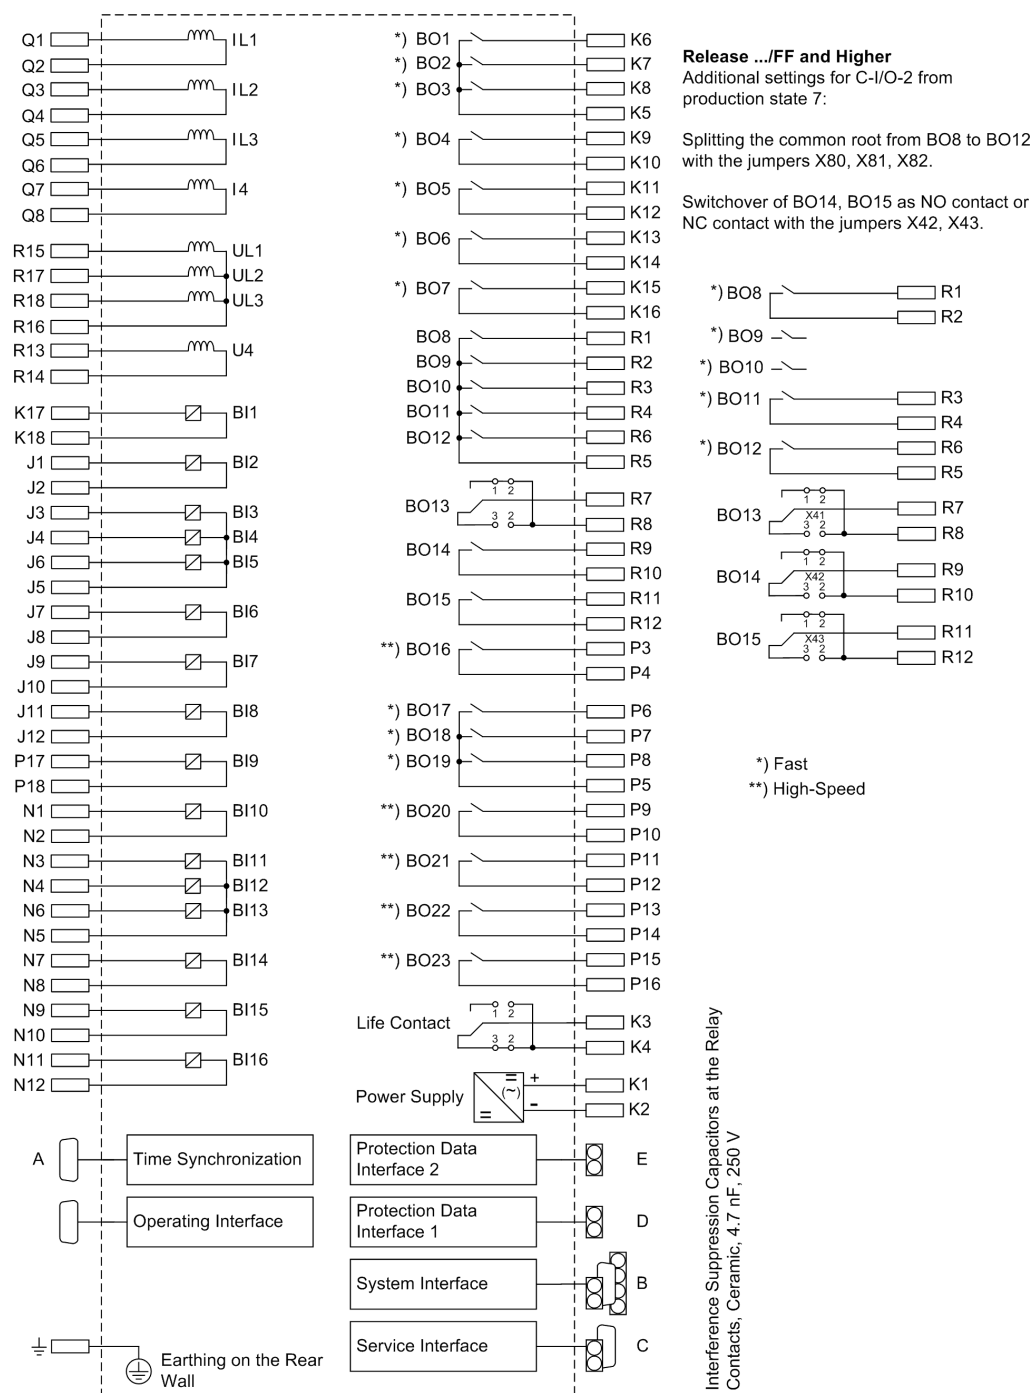


Figure A-3 General diagram 7SD5***-N/S (panel flush mounting or cubicle mounting; size¹/₁)

7SD5***-D/M

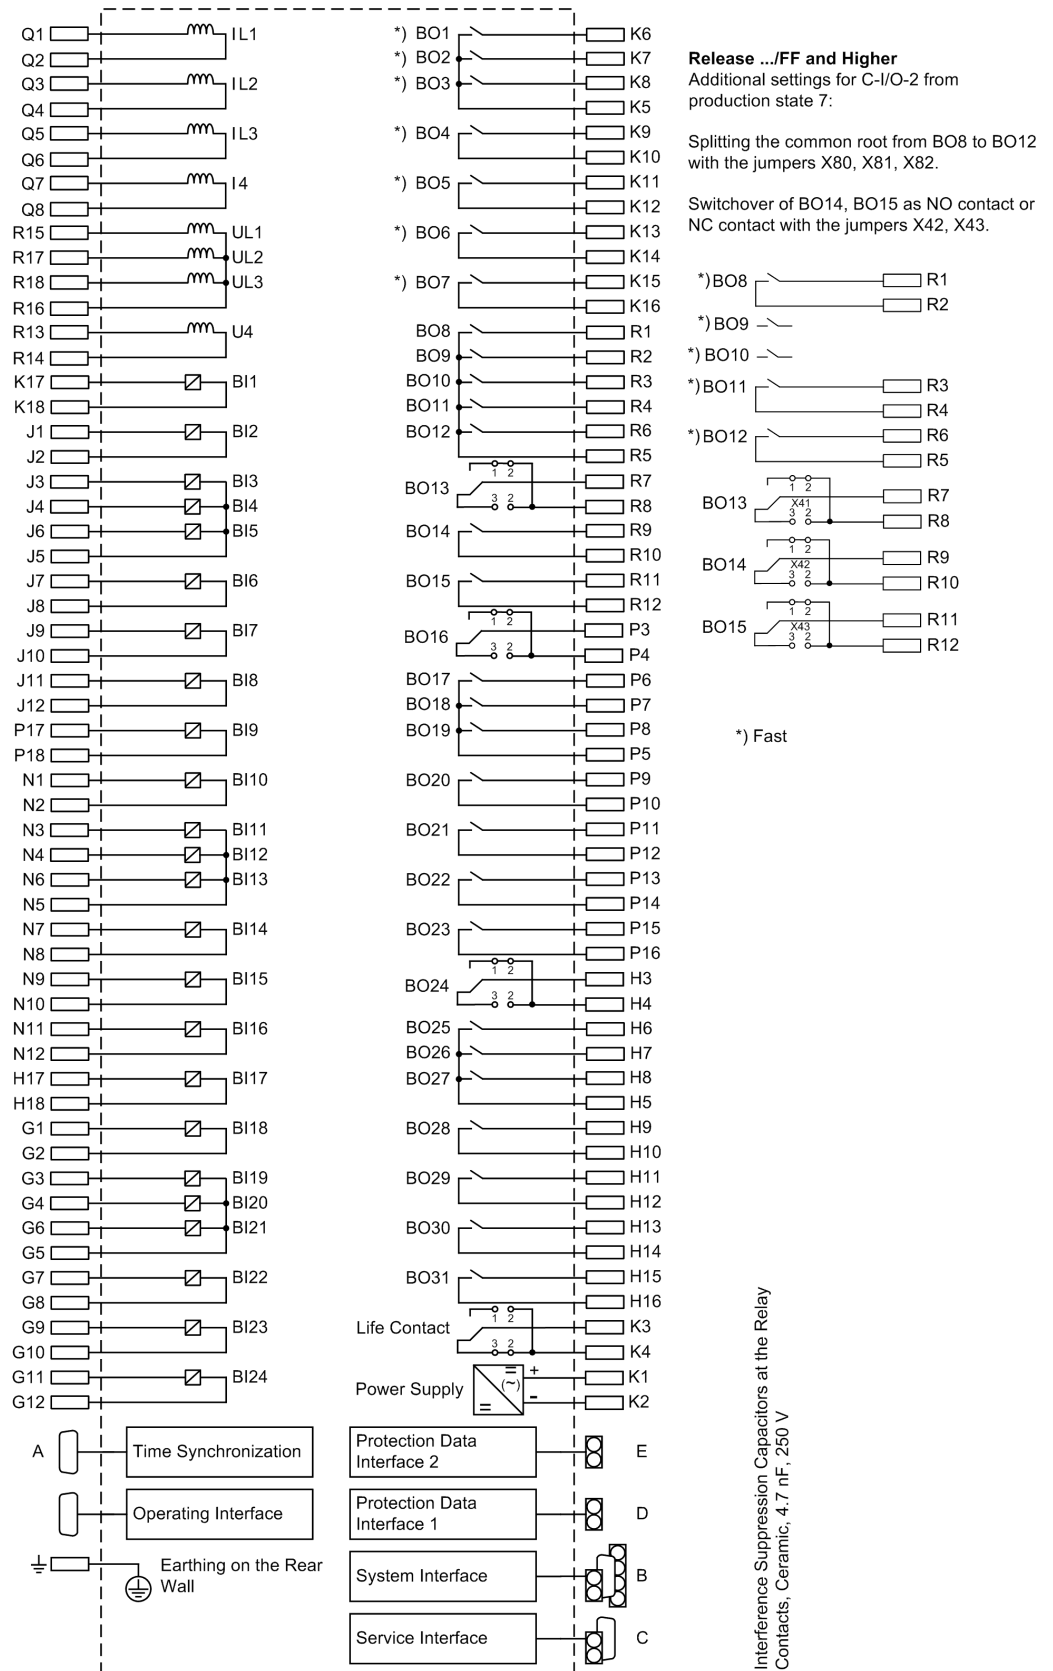


Figure A-4 General diagram 7SD5***-D/M (panel flush mounting or cubicle mounting; size^{1/1})

7SD5***-P/T

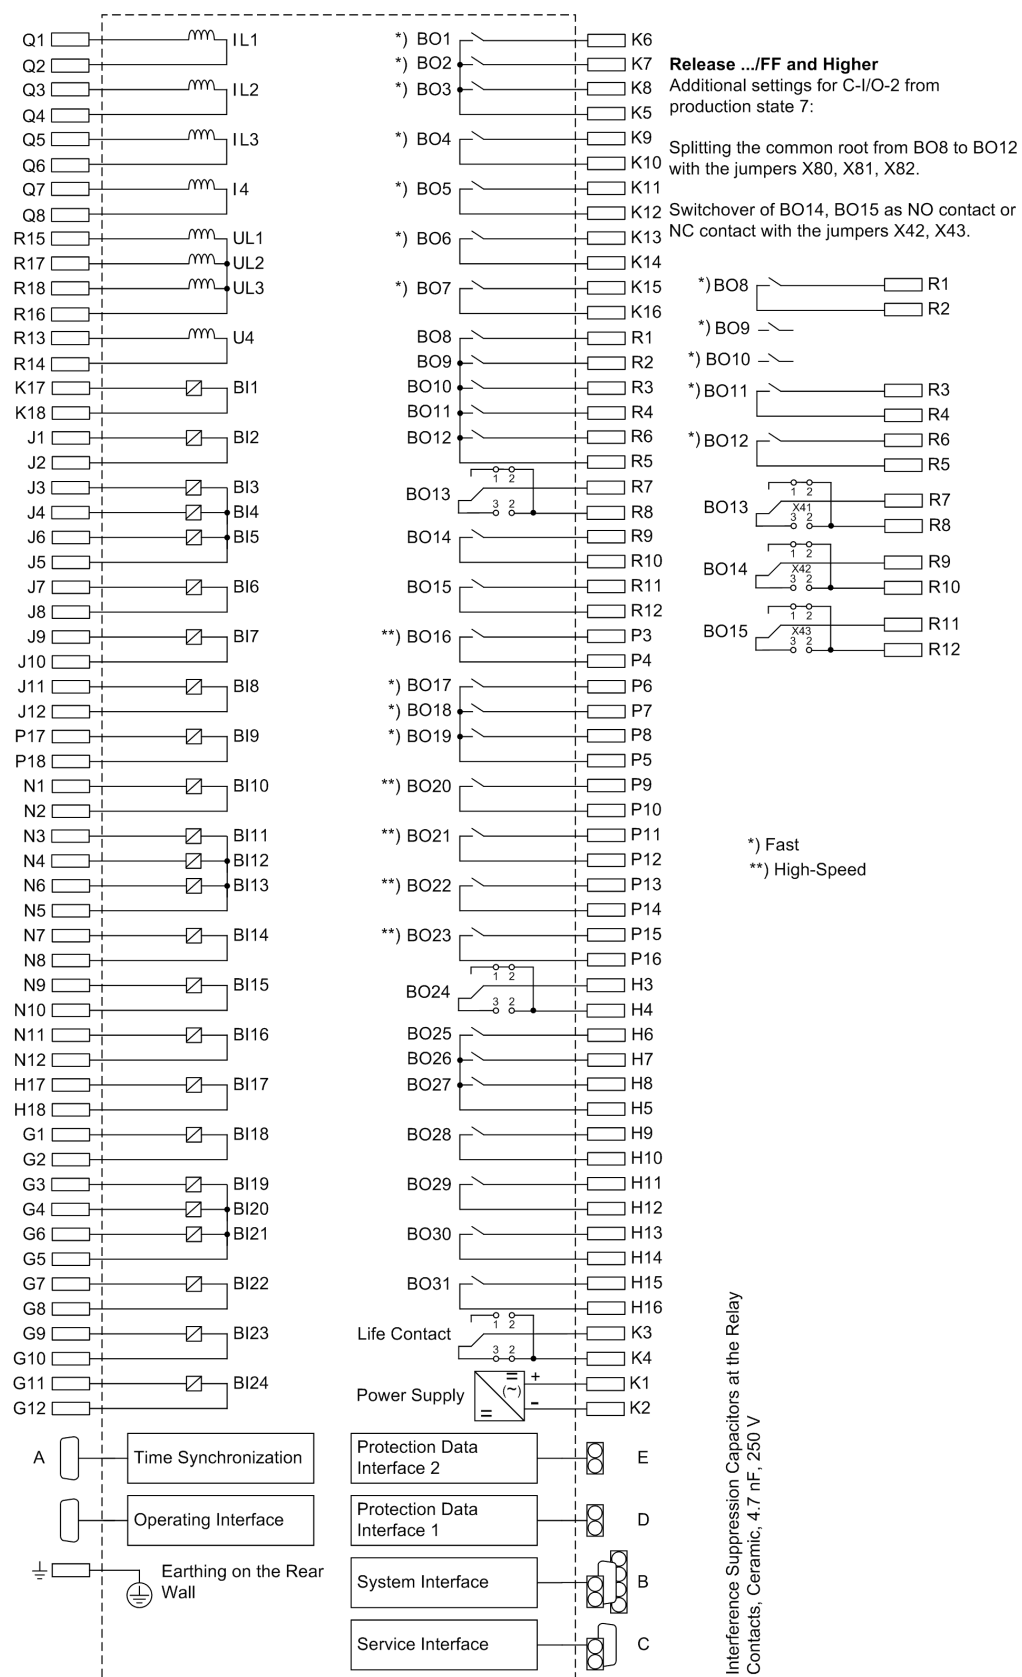
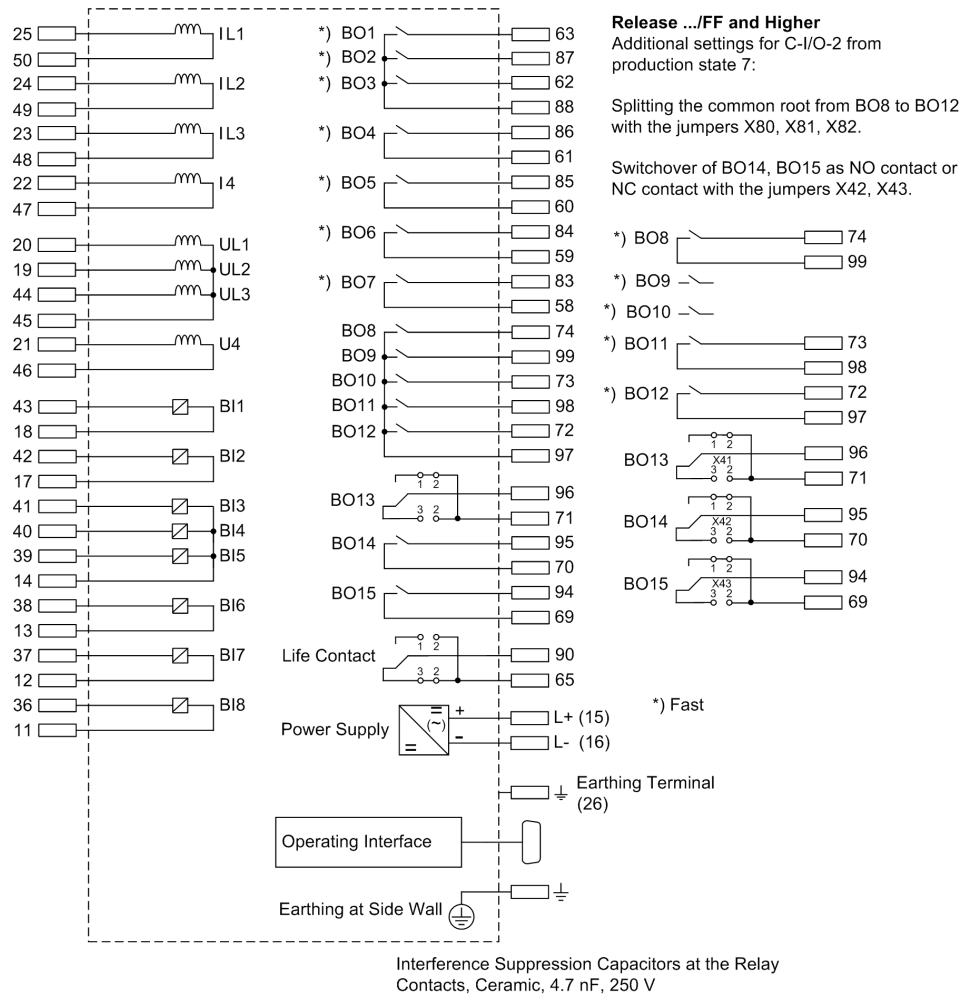


Figure A-5 General diagram 7SD5***-P/T (panel flush mounting or cubicle mounting; size¹/₁)

A.2.2 Panel Surface Mounting

7SD5***-*E

Figure A-6 General diagram 7SD5***-*E (panel surface mounting; size^{1/2})

7SD5***-E (ab Entwicklungsstand /CC)

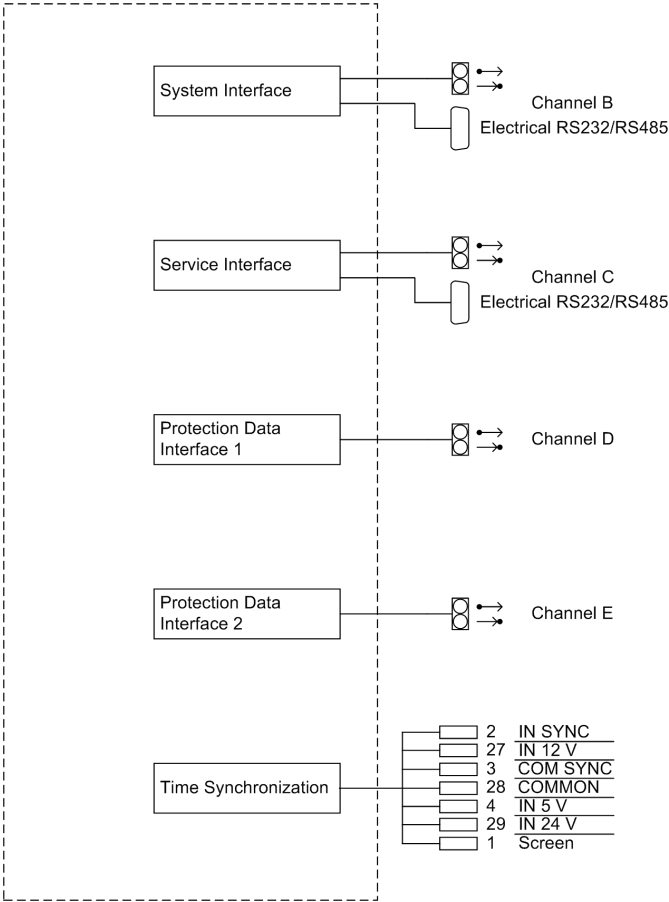
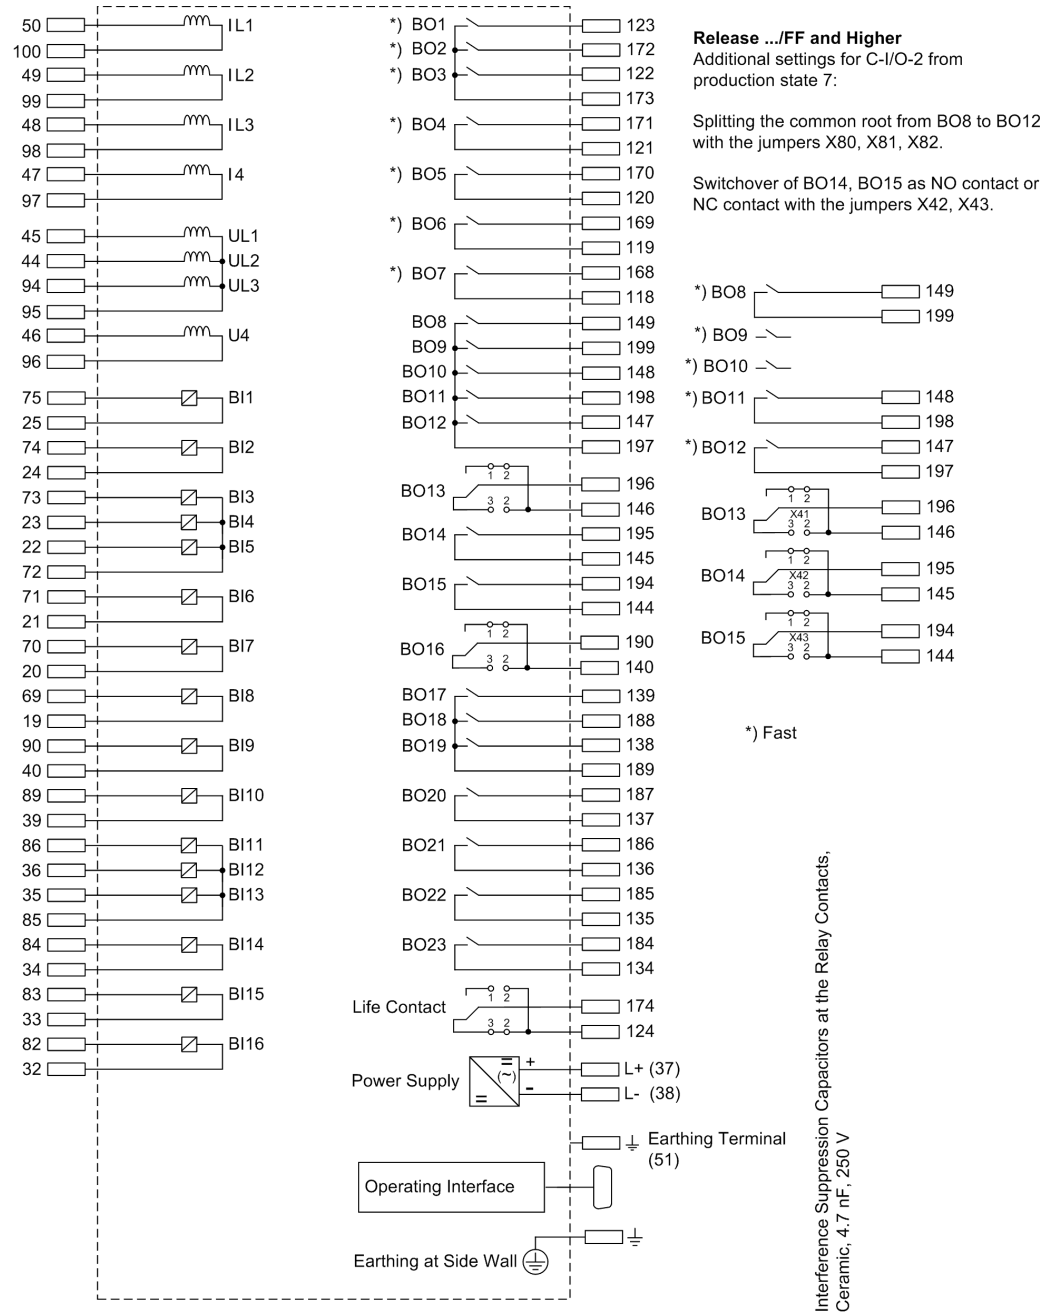


Figure A-7 General diagram 7SD5***-E release /CC and higher (panel surface mounting; size¹/₂)

7SD5***-*G

Figure A-8 General diagram 7SD5***-*G (panel surface mounting; size^{1/1})

7SD5***-Q



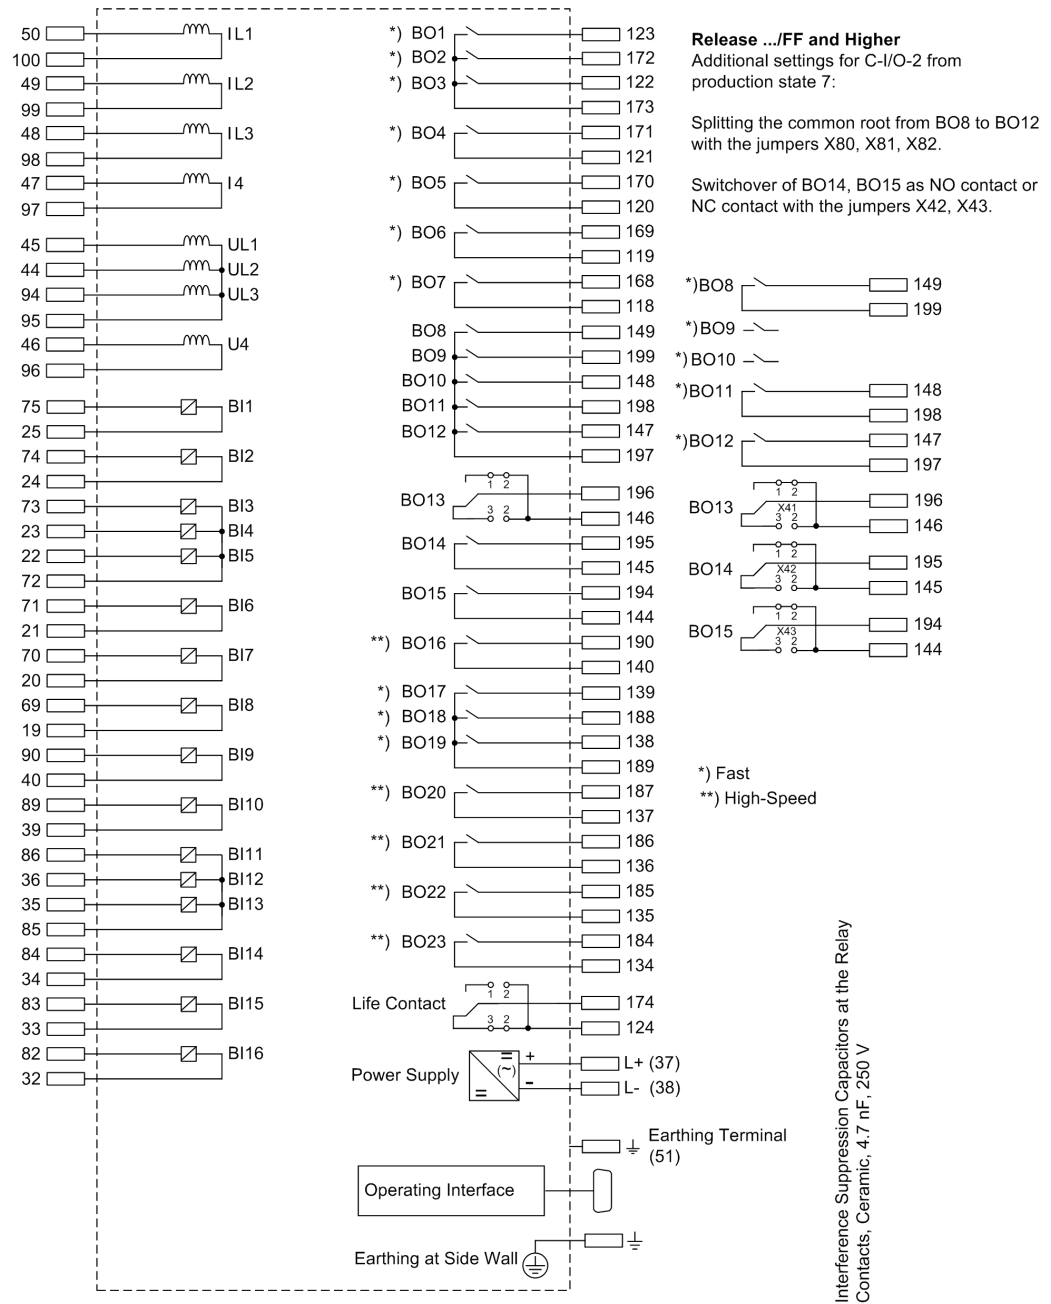


Figure A-9 General diagram 7SD5***-Q (panel surface mounting; size¹/₁)

7SD5***-*H


Figure A-10 General diagram 7SD5***-*H (panel surface mounting; size^{1/4})

7SD5***-R

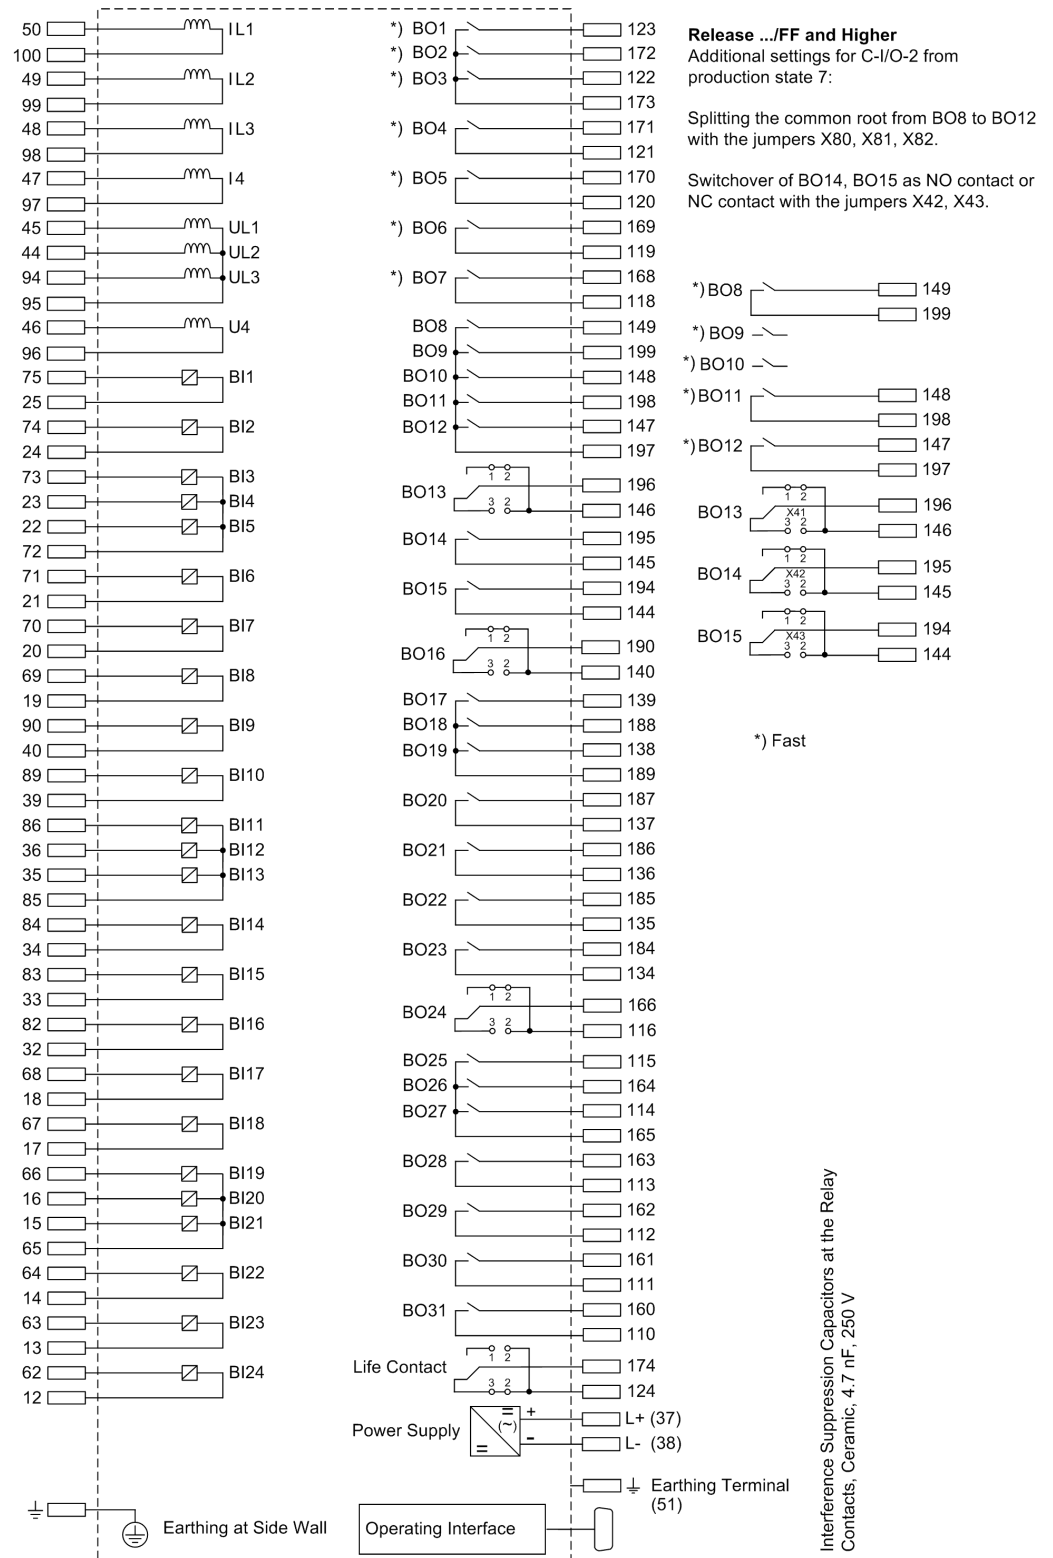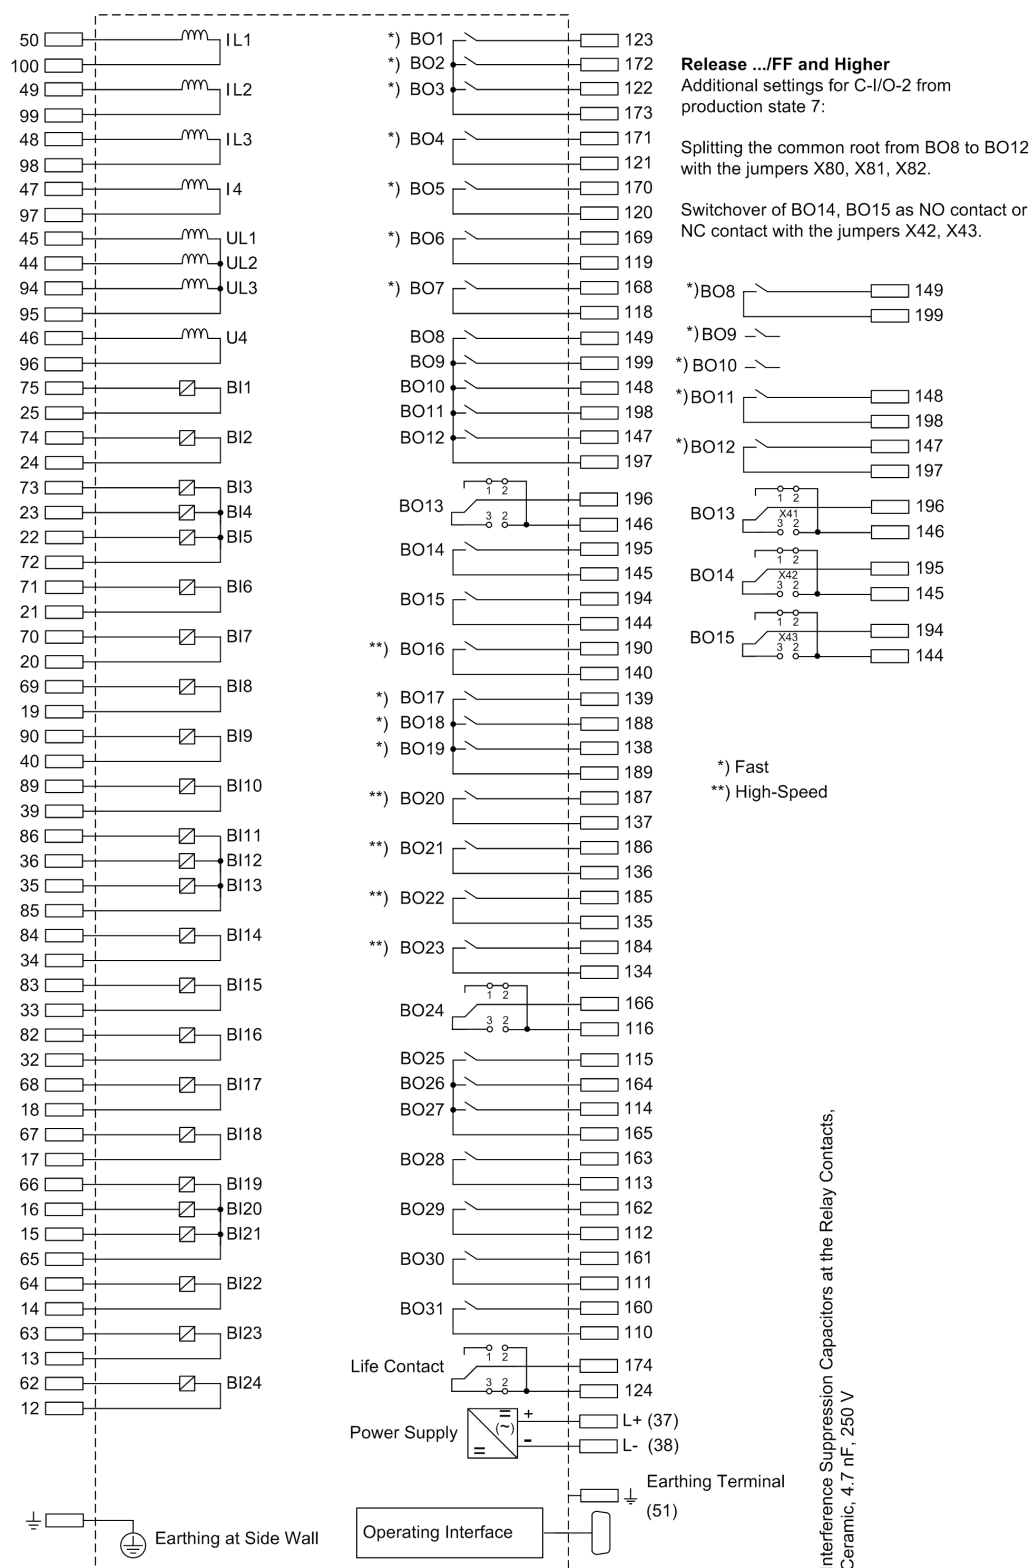

7SD5*-*G/H/Q/R**
(ab Entwicklungs-
stand /CC)

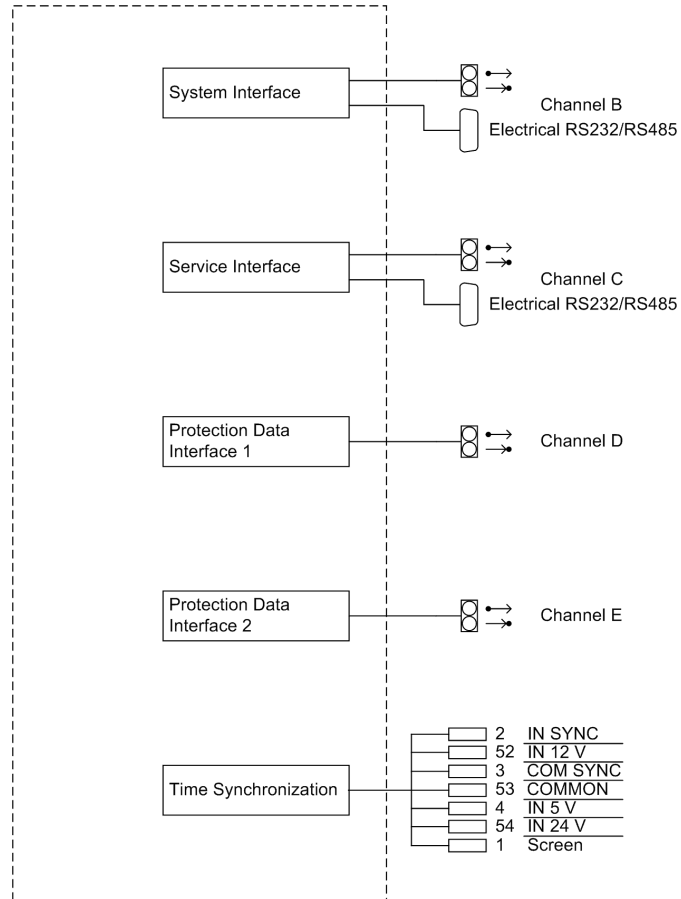


Figure A-12 General diagram 7SD5***-*G/H/Q/R release /CC and higher (panel surface mounting; size 1/1)

A.3 Connection Examples

A.3.1 Current Transformer Connection Examples



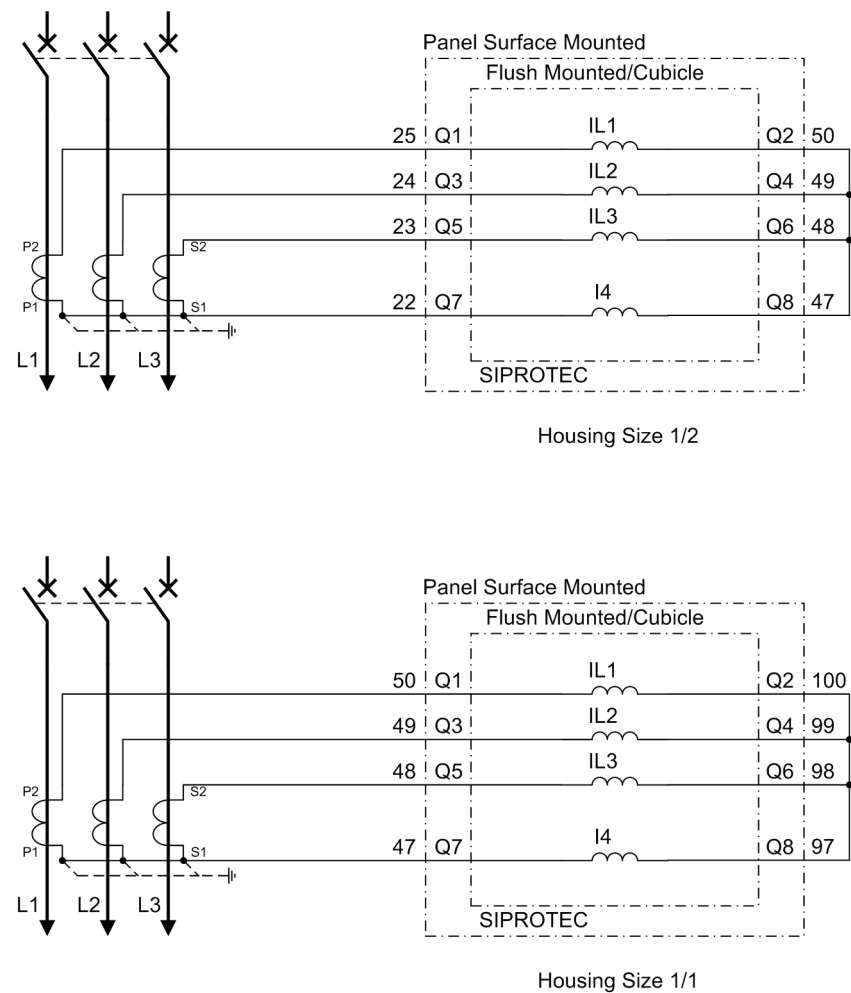


Figure A-13 Current connections to three current transformers and starpoint current (normal circuit layout)

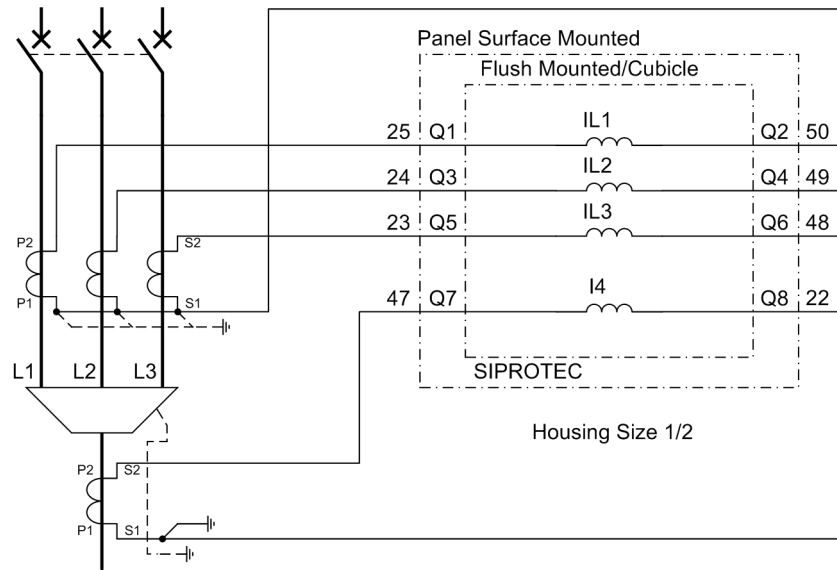

Important! Cable Shield Grounding must be done on the Cable Side!


Note: Change of Address 0201 Setting Change Polarity of I4 Current Input!

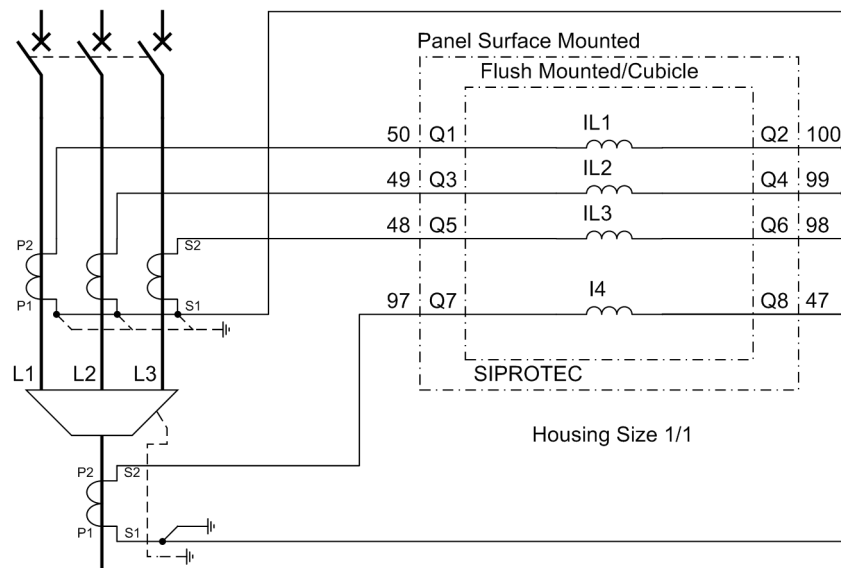


Important! Cable Shield Grounding must be done on the Cable Side!

Note: Change of Address 0201 Setting Change Polarity of I4 Current Input!

Figure A-14 Current connections to 3 current transformers with separate earth current transformer (summation current transformer) preferred for solidly or low-resistive earthed systems.

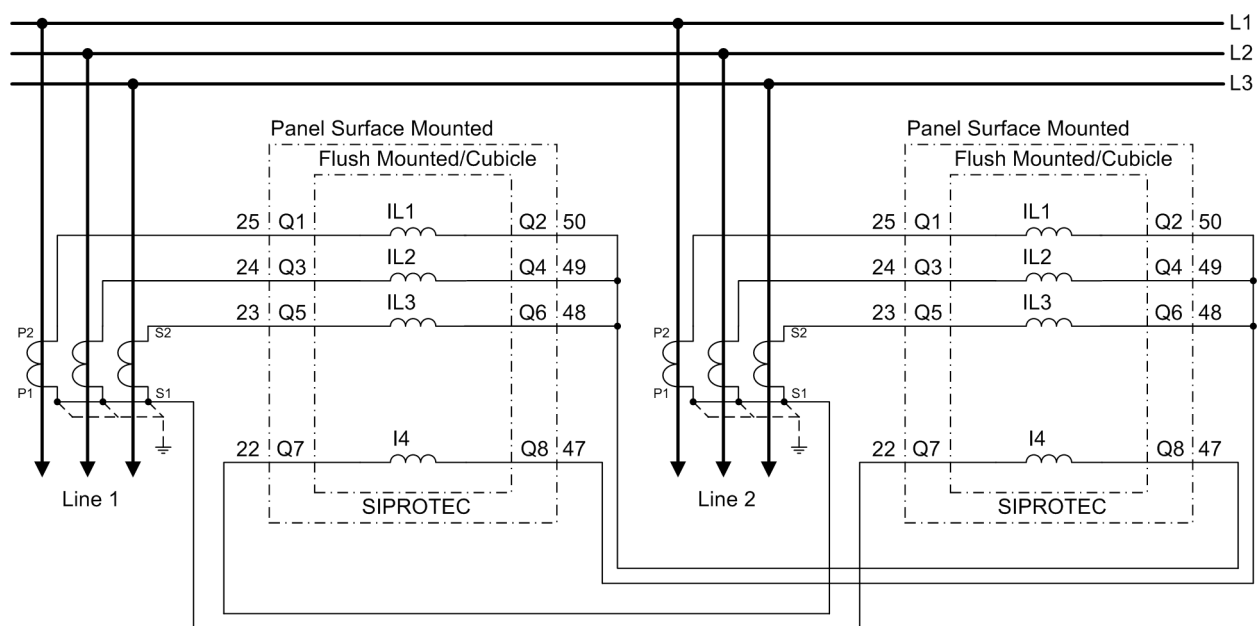


Housing Size 1/2

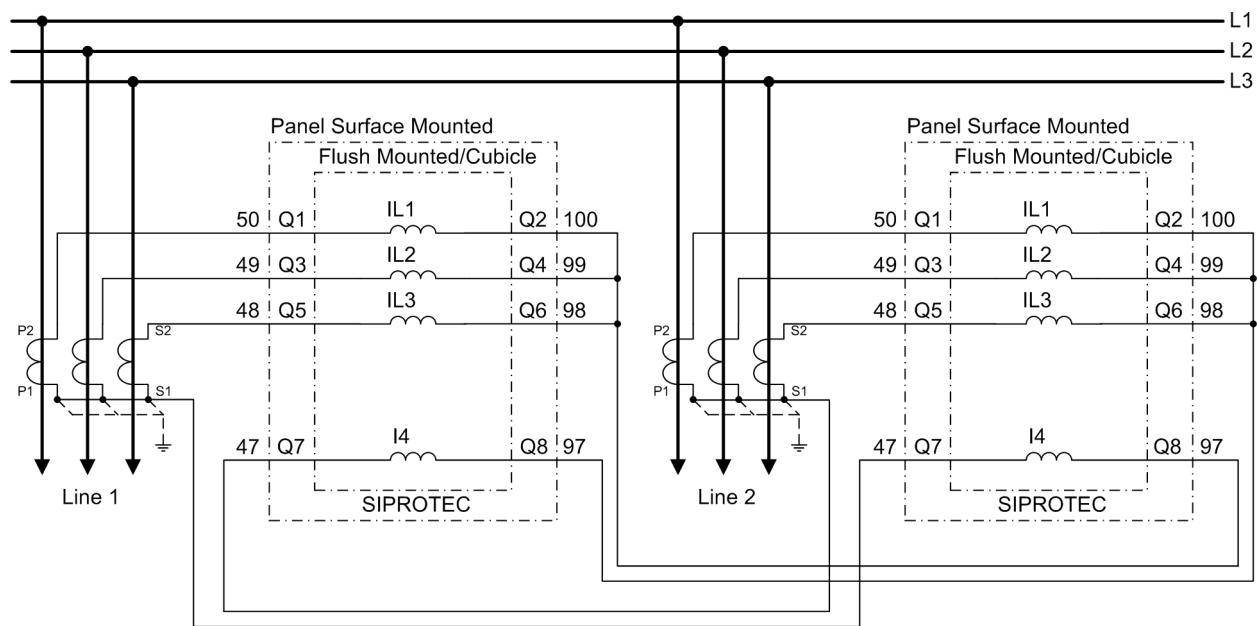


Housing Size 1/1

Figure A-15 Current connections to three current transformers and earth current from the star-point connection of a parallel line (for parallel line compensation)

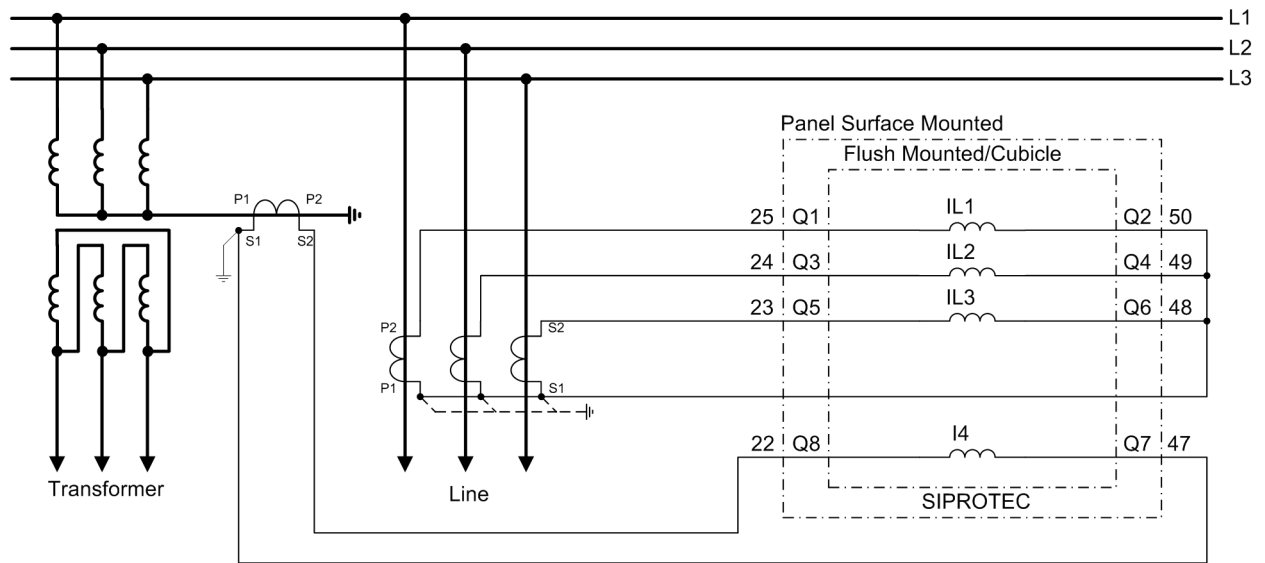

Housing Size 1/2

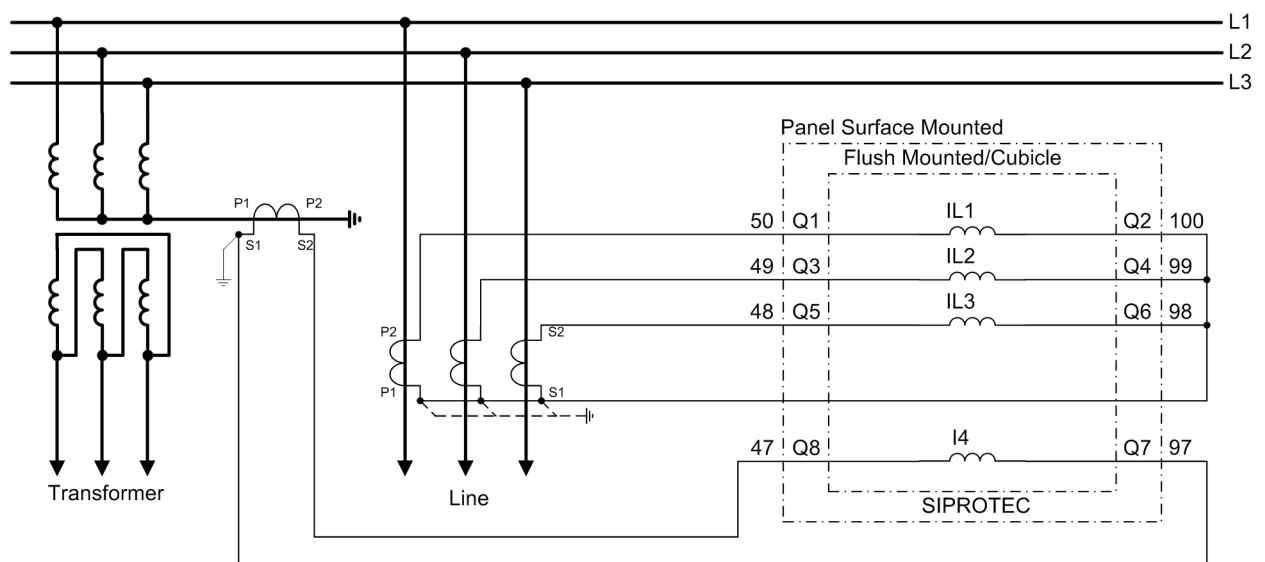

Housing Size 1/1

Figure A-16 Current connections to three current transformers and earth current from the star-point current of an earthed power transformer (for directional earth fault protection)

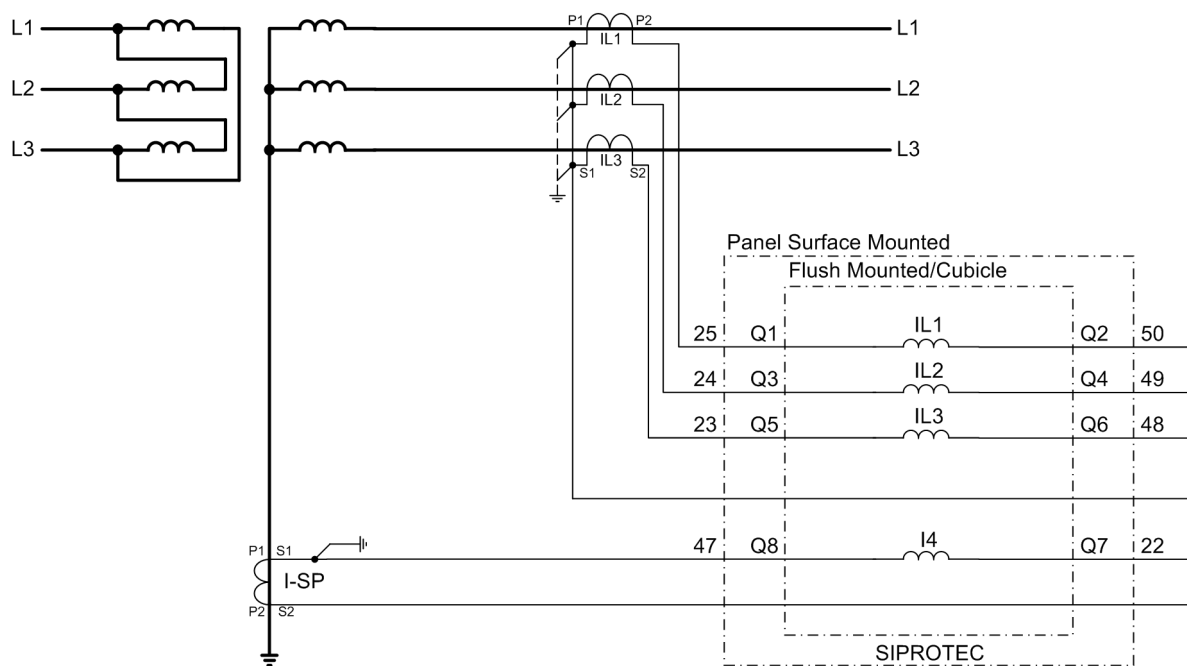


Figure A-17 Restricted earth fault protection on an earthed transformer winding

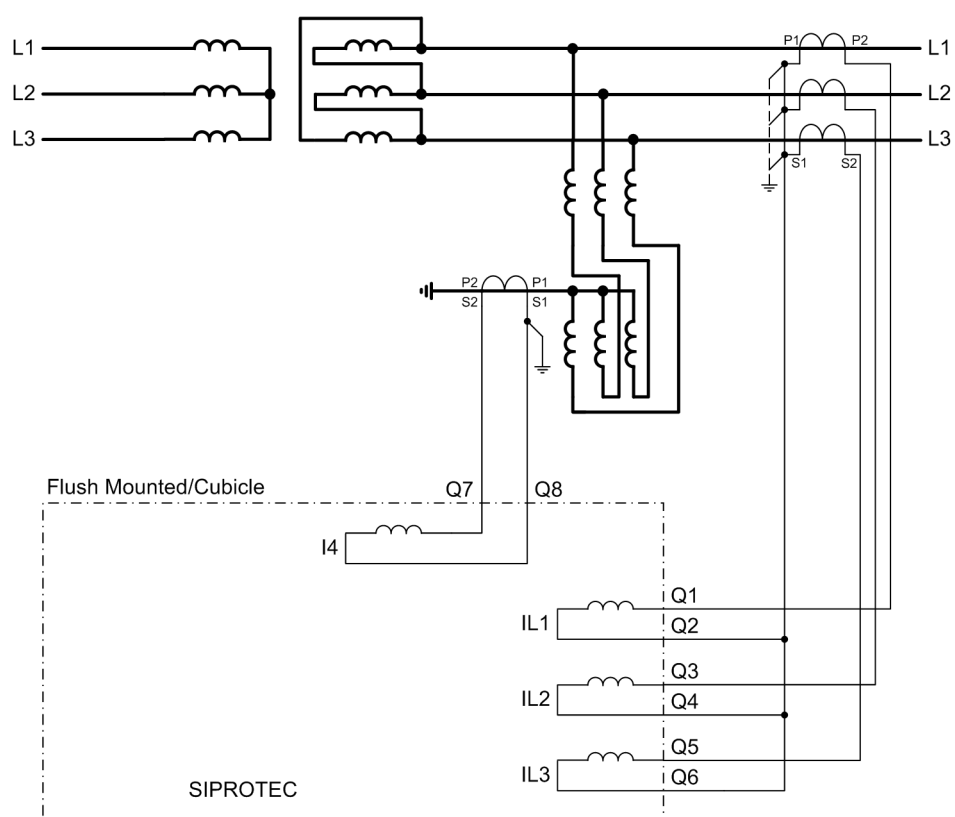


Figure A-18 Restricted earth fault protection on a non-earthed transformer winding with neutral reactor

A.3.2 Voltage Transformer Connection Examples

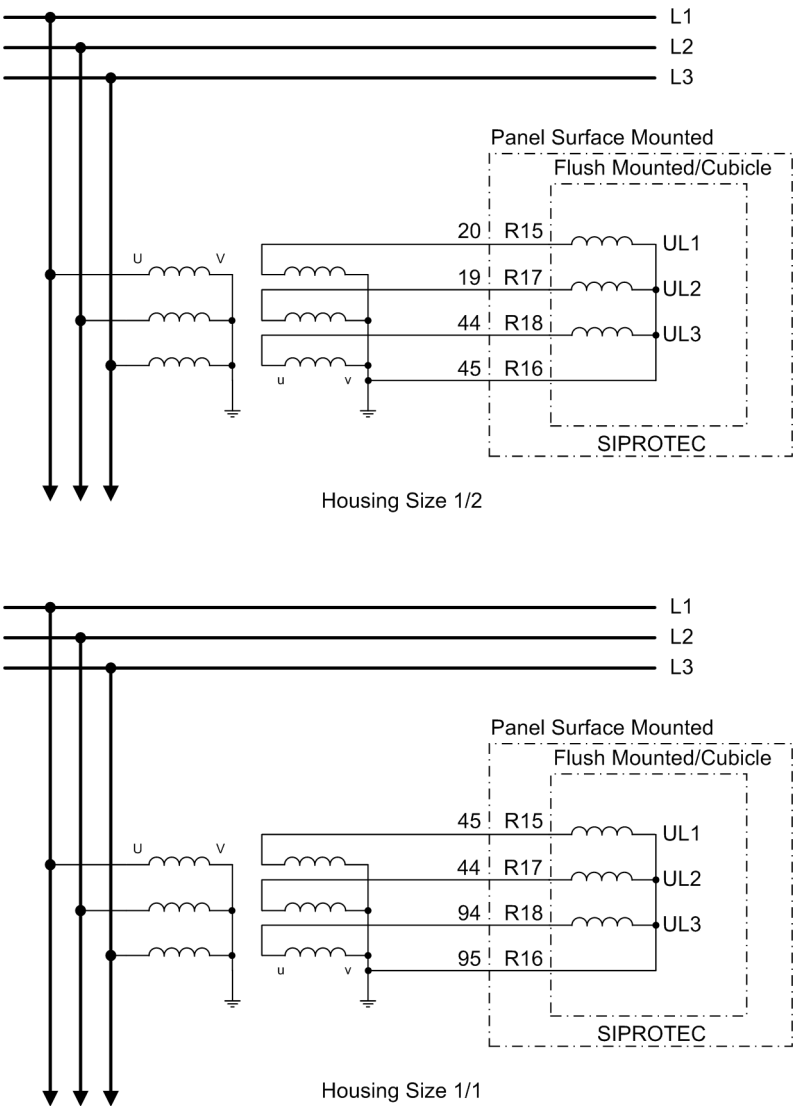


Figure A-19 Voltage connections to three wye-connected voltage transformers (normal circuit layout)

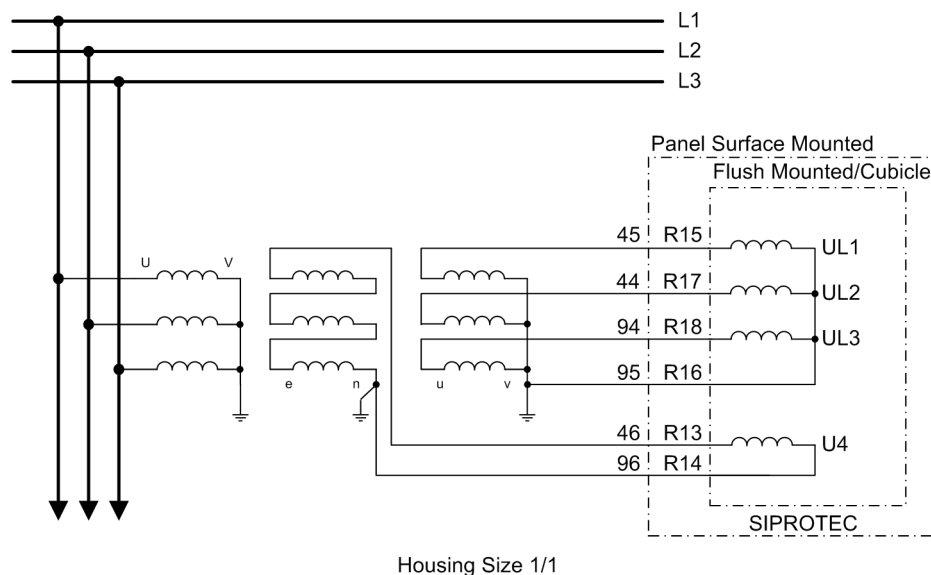
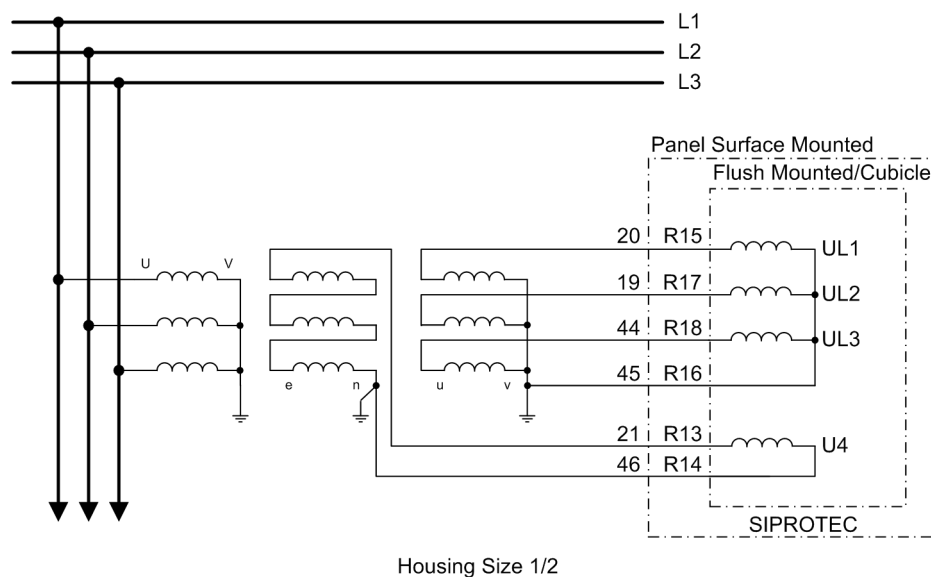


Figure A-20 Voltage connections to three wye-connected voltage transformers with additional open-delta windings (e-n-winding)

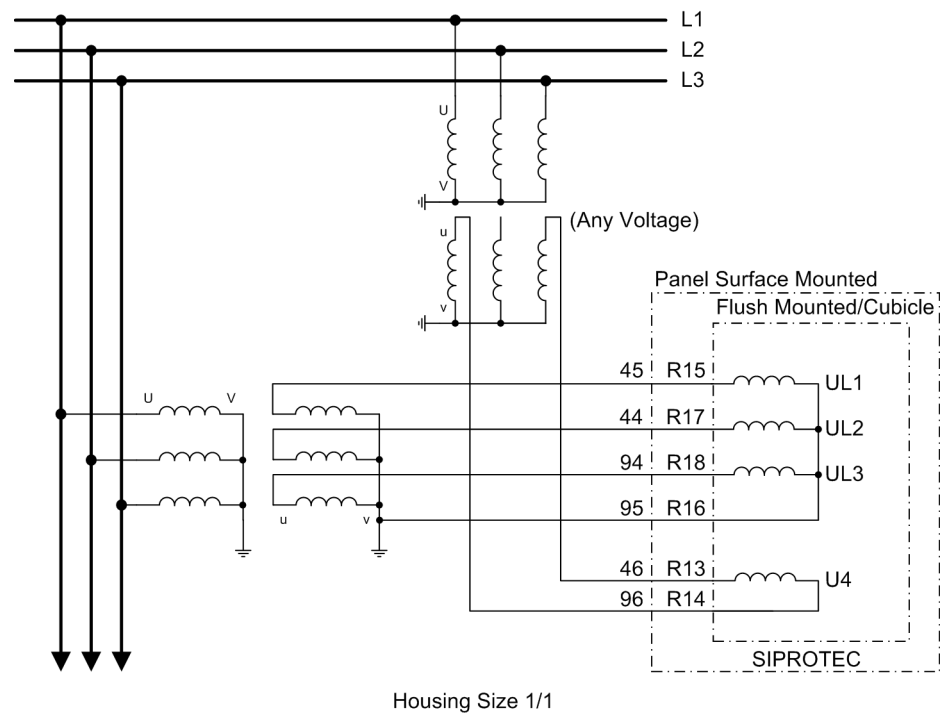
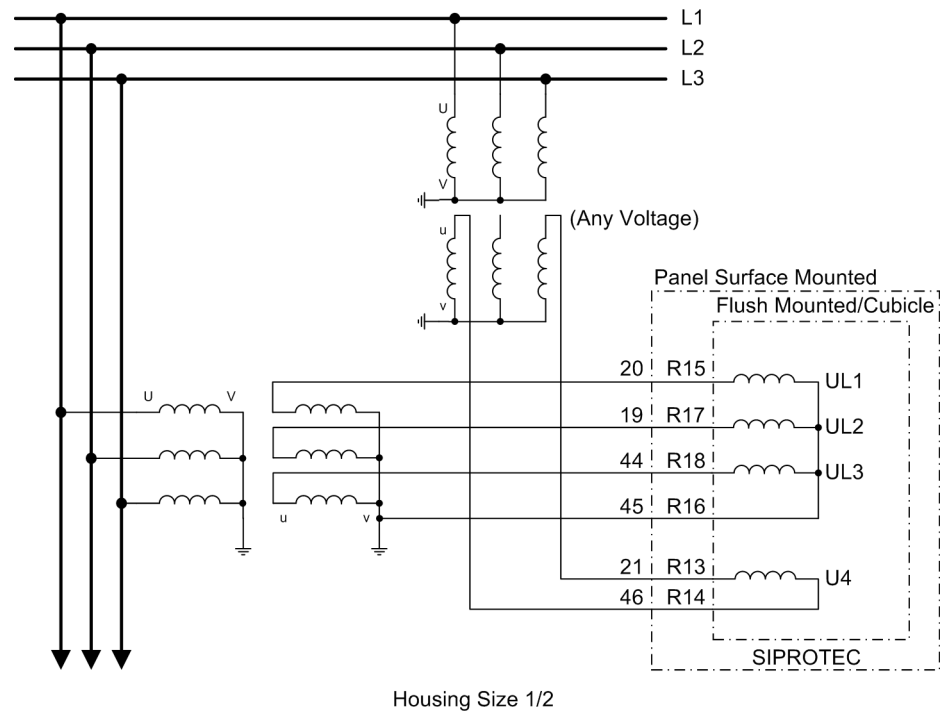


Figure A-21 Voltage connections to three wye-connected voltage transformers and additionally to a busbar voltage (for overvoltage protection or synchronism check)

A.4 Default Settings

A.4.1 LEDs

Table A-1 LED Indication Presettings

LEDs	Allocated Function	Function No.	Description
LED1	Relay PICKUP L1	503	Relay PICKUP Phase L1
LED2	Relay PICKUP L2	504	Relay PICKUP Phase L2
LED3	Relay PICKUP L3	505	Relay PICKUP Phase L3
LED4	Relay PICKUP E	506	Relay PICKUP Earth
LED5	DT inconsistent	3233	Device table has inconsistent numbers
	DT unequal	3234	Device tables are unequal
	Par. different	3235	Differences between common parameters
	Equal IDs	3487	Equal IDs in constellation
LED6	Relay TRIP	511	Relay GENERAL TRIP command ¹⁾
	Relay TRIP 3ph.	515	Relay TRIP command Phases L123 ²⁾
LED7	no presetting	-	- ¹⁾
	Relay TRIP 1pL1	512	Relay TRIP command - Only Phase L1 ²⁾
	Relay TRIP 1pL2	513	Relay TRIP command - Only Phase L2 ²⁾
	Relay TRIP 1pL3	514	Relay TRIP command - Only Phase L3 ²⁾
LED8	Test Diff.	3190	Diff: Set Teststate of Diff. protection
	TestDiff.remote	3192	Diff: Remote relay in Teststate
LED9	PI1 Data fault	3229	Prot Int 1: Reception of faulty data
LED10	PI2 Data fault	3231	Prot Int 2: Reception of faulty data ³⁾
LED11	Diff block	3148	Diff: Differential protection is blocked
LED12	AR not ready	2784	AR: Auto-reclose is not ready ⁴⁾
LED13	Emer. mode	2054	Emergency mode
LED14	Alarm Sum Event	160	Alarm Summary Event

1) only devices with three-pole tripping

2) only devices with single-pole and three-pole tripping

3) only devices with 2 protection data interfaces

4) only devices with automatic reclosure function

A.4.2 Binary Input

Table A-2 Binary input presettings for all devices and ordering variants

Binary Input	Allocated Function	Function No.	Description
BI1	>Reset LED	5	>Reset LED
BI2	>Manual Close	356	>Manual close signal
BI3	no presetting	-	-

Binary Input	Allocated Function	Function No.	Description
BI4	>BLOCK O/C I>>	7104	>BLOCK Backup OverCurrent I>>
	>BLOCK O/C I>	7105	>BLOCK Backup OverCurrent I>
	>BLOCK O/C Ip	7106	>BLOCK Backup OverCurrent Ip
	>BLOCK O/C Ie>>	7107	>BLOCK Backup OverCurrent Ie>>
	>BLOCK O/C Ie>	7108	>BLOCK Backup OverCurrent Ie>
	>BLOCK O/C Iep	7109	>BLOCK Backup OverCurrent Iep
	>BLOCK I-STUB	7130	>BLOCK I-STUB
	>BLOCK O/C Ie>>>	7132	>BLOCK Backup OverCurrent Ie>>>
BI5	no presetting	-	-
BI6	>CB1 Ready	371	>CB1 READY (for AR,CB-Test)
BI7	>Remote Trip1	3541	>Remote Trip 1 signal input

A.4.3 Binary Output

Table A-3 Output relay presettings for all devices and ordering variants

Binary Output	Allocated Function	Function No.	Description
BO1	Relay PICKUP	501	Relay PICKUP
BO2	PI1 Data fault	3229	Prot Int 1: Reception of faulty data
BO3	PI2 Data fault	3231	Prot Int 2: Reception of faulty data ¹⁾
BO4	Relay TRIP	511	Relay GENERAL TRIP command ²⁾
	Relay TRIP 1pL1	512	Relay TRIP command - Only Phase L1 ³⁾
	Relay TRIP 3ph.	515	Relay TRIP command Phases L123 ³⁾
BO5	Relay TRIP	511	Relay GENERAL TRIP command ²⁾
	Relay TRIP 1pL2	513	Relay TRIP command - Only Phase L2 ³⁾
	Relay TRIP 3ph.	515	Relay TRIP command Phases L123 ³⁾
BO6	no presetting	-	.. ²⁾
	Relay TRIP 1pL3	514	Relay TRIP command - Only Phase L3 ³⁾
	Relay TRIP 3ph.	515	Relay TRIP command Phases L123 ³⁾
BO7	AR CLOSE Cmd.	2851	AR: Close command ⁴⁾
BO8	Diff block	3148	Diff: Differential protection is blocked
BO9	AR not ready	2784	AR: Auto-reclose is not ready ⁴⁾
BO10	Test Diff.	3190	Diff: Set Teststate of Diff. protection
	TestDiff.remote	3192	Diff: Remote relay in Teststate
BO11	Emer. mode	2054	Emergency mode
BO12	Alarm Sum Event	160	Alarm Summary Event
BO13	Relay TRIP	511	Relay GENERAL TRIP command ²⁾
	Relay TRIP 1pL1	512	Relay TRIP command - Only Phase L1 ³⁾
	Relay TRIP 3ph.	515	Relay TRIP command Phases L123 ³⁾
BO14	Relay TRIP	511	Relay GENERAL TRIP command ²⁾
	Relay TRIP 1pL2	513	Relay TRIP command - Only Phase L2 ³⁾
	Relay TRIP 3ph.	515	Relay TRIP command Phases L123 ³⁾
BO15	no presetting	-	.. ²⁾
	Relay TRIP 1pL3	514	Relay TRIP command - Only Phase L3 ³⁾
	Relay TRIP 3ph.	515	Relay TRIP command Phases L123 ³⁾

1) only devices with 2 protection data interfaces

2) only devices with three-pole tripping

3) only devices with single-pole and three-pole tripping

4) only devices with automatic reclosure function

A.4.4 Function Keys

Table A-4 Applies to all devices and ordered variants

Function Keys	Predefined Function
F1	Display of the operational indications
F2	Display of the operational values
F3	An overview of the last 8 network faults
F4	none


A.4.5 Default Display

4-line Display

Table A-5 This selection is available as start page which may be configured.

Page 1	<div> 1■ 1000A 12■ 400kV 2■ 999A 23■ 400kV 3■ 1000A 31■ 400kV E■ 0A U0■ 0kV </div>
Page 2	<div> % IL ULE ULL L1■ 78.4 99.6 99.5 L2■ 78.1 99.4 99.3 L3■ 78.9 99.8 99.7 </div>
Page 3	<div> S: 0.0MVA U: 0kV P: 0.0MW I: 0A Q: 0.0MVAR f: --- PF: --- </div>
Page 4	<div> Diff Rest L1■ 0.0% 31.6% L2■ 0.0% 31.6% L3■ 0.0% 31.6% </div>
Page 5	<div> L1■ 78.4A MAX 81.2A L2■ 78.1A MAX 81.0A L3■ 78.9A MAX 81.9A E ■ 0.0A </div>
Page 6	<div> L1■ 78.4A L2■ 78.1A L3■ 78.9A E ■ 0.0A </div>

Graphic Display

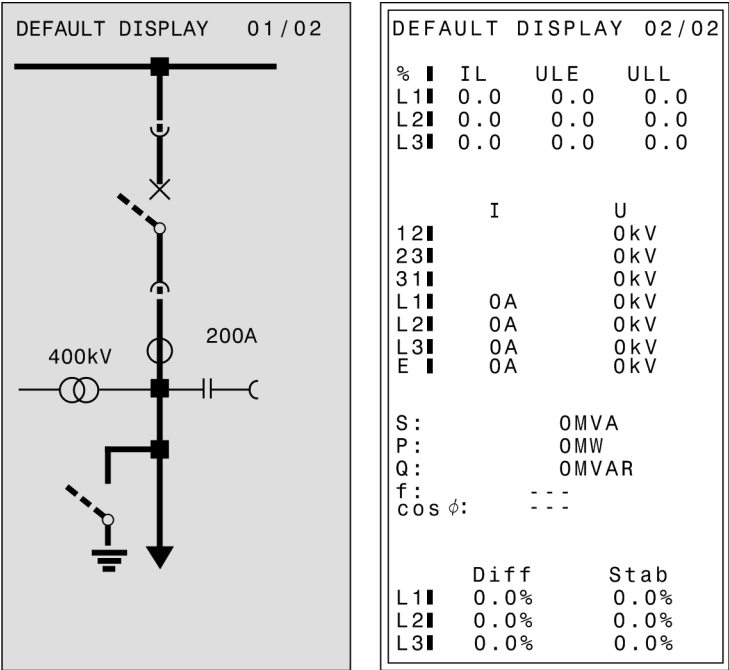

Spontaneous Fault Indication of the 4-Line Display

The spontaneous annunciations on devices with 4-line display serve to display the most important data about a fault. They appear automatically in the display after pick-up of the device, in the sequence shown below.

Relay PICKUP:	A message indicating the protective function that last picked up
PU Time=:	Elapsed time from pick-up until drop-off
Trip time=:	Elapsed time from pick-up until the first trip command of a protection function
Fault locator	Fault distance d in km or miles

Spontaneous Fault Annunciations of the Graphic Display

All devices featuring a graphic display allow you to select whether or not to view automatically the most important fault data on the display after a general interrogation.

The information is shown in the display in the following order:

Relay PICKUP	A message indicating the protective function that first picked up
S/E/F TRIP	A message indicating the protective function that last initiated a trip signal
PU Time	Runtime from general pickup until dropout
Trip time	Elapsed time from pick-up until trip command
Fault location	Fault distance d in km or miles

Default Display in the Graphic Editor

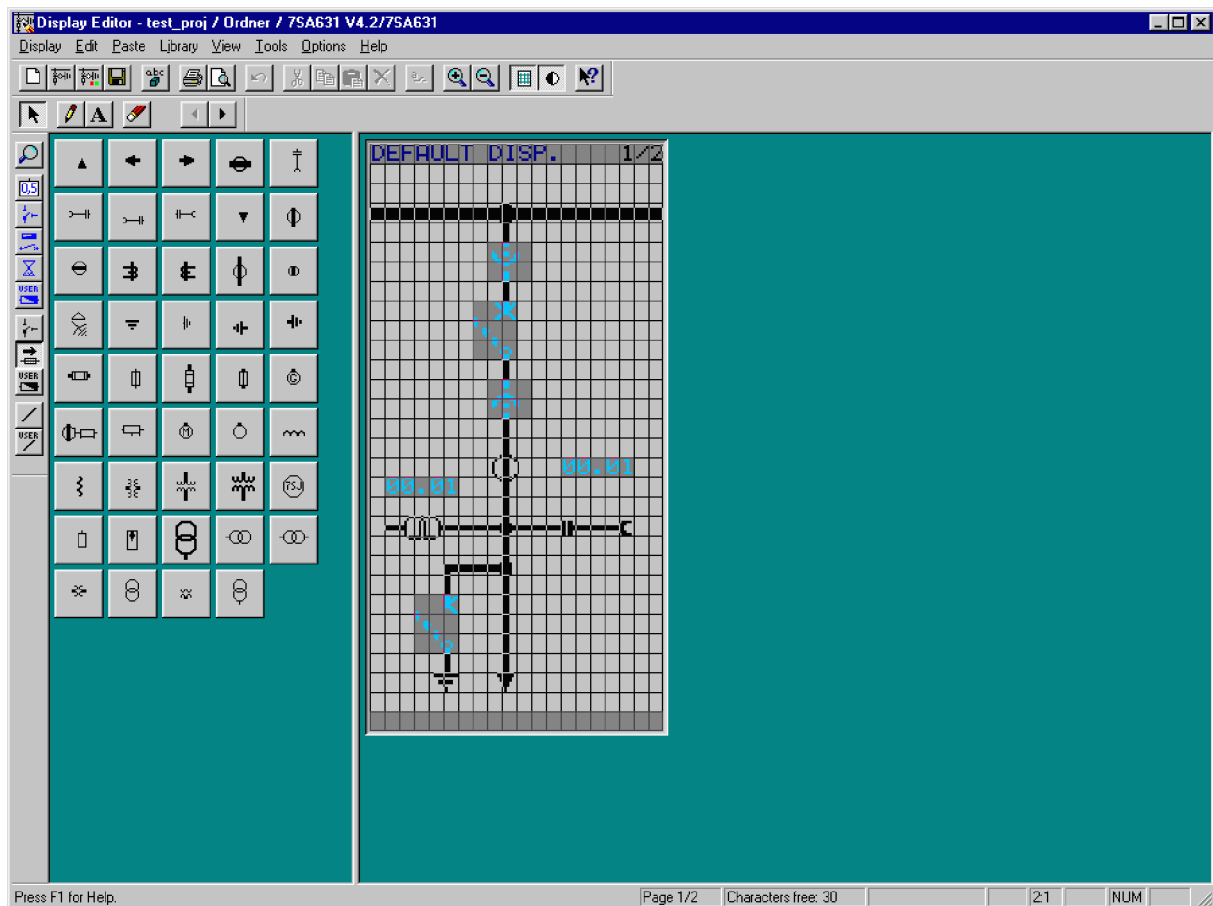


Figure A-22 Standard default display after starting the Display Editor - example

A.4.6 Pre-defined CFC Charts

Device and System Logic

A negator block of the slow logic (PLC1-BEARB) is created from the binary input „>MMSperr“ into the internal single point indication „EntrMMSp“.

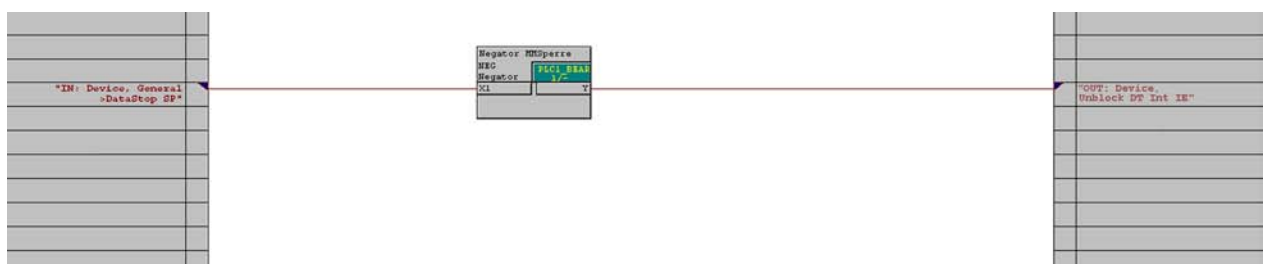


Figure A-23 Logical Link between Input and Output

A.5 Protocol-dependent Functions

Protocol → Function ↓	IEC 60870-5-103	IEC 61850 Ethernet (EN100)	PROFIBUS FMS	Profibus DP	DNP 3.0
Operational Measured Values	Yes	Yes	Yes	Yes	Yes
Metered Values	Yes	Yes	Yes	Yes	Yes
Fault Recording	Yes	Yes	Yes	No, only via additional service interface	No, only via additional service interface
Remote Relay Setting	No, only via additional service interface	Yes, with DIGSI via Ethernet	Yes, with DIGSI via PROFIBUS	No, only via additional service interface	No, only via additional service interface
User-defined Alarms and Switching Objects	Yes	Yes	Yes	Predefined „User-defined Alarms“ in CFC	Predefined „User-defined Alarms“ in CFC
Time Synchronization	Via protocol; DCF77/IRIG B/GPS; Interface; Binary input	Via protocol (NTPT); DCF77/IRIG B; Interface; Binary input	Via protocol; DCF77/IRIG B/GPS; Interface; Binary Input	Via DCF77/IRIG B/GPS; Interface; Binary Input	Via protocol; DCF77/IRIG B/GPS; Interface; Binary Input
Messages with time stamp	Yes	Yes	Yes	YES	Yes
Commissioning tools					
Alarm and Measured Value Transmission Blocking	Yes	Yes	Yes	No	No
Generate test alarms	Yes	Yes	Yes	No	No
Physical Mode	Asynchronous	Synchronous	Asynchronous	Asynchronous	Asynchronous
Transmission Mode	Cyclic/Event	Cyclical/Event	Cyclic/Event	Cyclic	Cyclic/Event
Baud Rate	4800 to 38400	up to 100 Mbaud	up to 1.5 Mbaud	up to 1.5 Mbaud	2400 to 19200
Type	RS232/RS485 Fibre-optic cables	Ethernet TP	RS485 Fibre-optic cables Double ring	RS485 Fibre-optic cables Double ring	RS485 Fibre-optic cables

A.6 Functional Scope

Addr.	Parameter	Setting Options	Default Setting	Comments
103	Grp Chge OPTION	Disabled Enabled	Disabled	Setting Group Change Option
110	Trip mode	3pole only 1-/3pole	3pole only	Trip mode
112	DIFF.PROTECTION	Enabled Disabled	Enabled	Differential protection
115	Phase Distance	Quadrilateral MHO Disabled	Quadrilateral	Phase Distance
116	Earth Distance	Quadrilateral MHO Disabled	Quadrilateral	Earth Distance
117	Dis. PICKUP	Z< (quadrilat.) I> (overcurr.) U/I U/I/φ Disabled	Z< (quadrilat.)	Distance protection pickup program
120	Power Swing	Disabled Enabled	Disabled	Power Swing detection
121	Teleprot. Dist.	PUTT (Z1B) PUTT (Pickup) POTT Dir.Comp.Pickup UNBLOCKING BLOCKING Rev. Interlock Pilot wire comp Disabled	Disabled	Teleprotection for Distance prot.
122	DTT Direct Trip	Disabled Enabled	Disabled	DTT Direct Transfer Trip
124	HS/SOTF-O/C	Disabled Enabled	Disabled	Instantaneous HighSpeed/SOTF Overcurrent
125	Weak Infeed	Disabled Enabled Logic no. 2	Disabled	Weak Infeed (Trip and/or Echo)
126	Back-Up O/C	Disabled TOC IEC TOC ANSI	TOC IEC	Backup overcurrent
131	Earth Fault O/C	Disabled TOC IEC TOC ANSI TOC Logarithm. Definite Time U0 inverse Sr inverse	Disabled	Earth fault overcurrent
132	Teleprot. E/F	Dir.Comp.Pickup UNBLOCKING BLOCKING Disabled	Disabled	Teleprotection for Earth fault overcurr.

Addr.	Parameter	Setting Options	Default Setting	Comments
133	Auto Reclose	1 AR-cycle 2 AR-cycles 3 AR-cycles 4 AR-cycles 5 AR-cycles 6 AR-cycles 7 AR-cycles 8 AR-cycles ADT Disabled	Disabled	Auto-Reclose Function
134	AR control mode	Pickup w/ Tact Pickup w/o Tact Trip w/ Tact Trip w/o Tact	Trip w/o Tact	Auto-Reclose control mode
135	Synchro-Check	Disabled Enabled	Disabled	Synchronism and Voltage Check
136	FREQUENCY Prot.	Disabled Enabled	Disabled	Over / Underfrequency Protection
137	U/O VOLTAGE	Disabled Enabled Enabl. w. comp.	Disabled	Under / Overvoltage Protection
138	Fault Locator	Disabled Enabled with BCD-output	Disabled	Fault Locator
139	BREAKER FAILURE	Disabled Enabled enabled w/ 3I0>	Disabled	Breaker Failure Protection
140	Trip Cir. Sup.	Disabled 1 trip circuit 2 trip circuits 3 trip circuits	Disabled	Trip Circuit Supervision
141	REF PROT.	Disabled Enabled	Disabled	Restricted earth fault protection
142	Therm.Overload	Disabled Enabled	Disabled	Thermal Overload Protection
143	TRANSFORMER	NO YES	NO	Transformer inside protection zone
144	V-TRANSFORMER	Not connected connected	connected	Voltage transformers
145	P. INTERFACE 1	Enabled Disabled	Enabled	Protection Interface 1 (Port D)
146	P. INTERFACE 2	Disabled Enabled	Disabled	Protection Interface 2 (Port E)
147	NUMBER OF RELAY	2 relays 3 relays 4 relays 5 relays 6 relays	2 relays	Number of relays
148	GPS-SYNC.	Enabled Disabled	Disabled	GPS synchronization

Addr.	Parameter	Setting Options	Default Setting	Comments
149	charge I comp.	Enabled Disabled	Disabled	charging current compensation
160	L-sections FL	1 Section 2 Sections 3 Sections	1 Section	Line sections for fault locator

A.7 Settings

Addresses which have an appended "A" can only be changed with DIGSI, under Additional Settings.

The table indicates region-specific presettings. Column C (configuration) indicates the corresponding secondary nominal current of the current transformer.

Addr.	Parameter	Function	C	Setting Options	Default Setting	Comments
201	CT Starpoint	P.System Data 1		towards Line towards Busbar	towards Line	CT Starpoint
203	Unom PRIMARY	P.System Data 1		0.4 .. 1200.0 kV	400.0 kV	Rated Primary Voltage
204	Unom SECONDARY	P.System Data 1		80 .. 125 V	100 V	Rated Secondary Voltage (Ph-Ph)
205	CT PRIMARY	P.System Data 1		10 .. 10000 A	1000 A	CT Rated Primary Current
206	CT SECONDARY	P.System Data 1		1A 5A	1A	CT Rated Secondary Current
207	SystemStarpoint	P.System Data 1		Solid Earthed Peterson-Coil Isolated	Solid Earthed	System Starpoint is
210	U4 transformer	P.System Data 1		Not connected Udelta transf. Usy2 transf. Ux transformer	Not connected	U4 voltage transformer is
211	Uph / Udelta	P.System Data 1		0.10 .. 9.99	1.73	Matching ratio Phase-VT To Open-Delta-VT
212	Usy2 connection	P.System Data 1		L1-E L2-E L3-E L1-L2 L2-L3 L3-L1	L1-E	VT connection for Usy2
214A	φ Usy2-Usy1	P.System Data 1		0 .. 360 °	0 °	Angle adjustment Usy2-Usy1
215	Usy1/Usy2 ratio	P.System Data 1		0.50 .. 2.00	1.00	Matching ratio Usy1 / Usy2
220	I4 transformer	P.System Data 1		Not connected In prot. line In paral. line IY starpoint	In prot. line	I4 current transformer is
221	I4/Iph CT	P.System Data 1		0.010 .. 5.000	1.000	Matching ratio I4/Iph for CT's
230	Rated Frequency	P.System Data 1		50 Hz 60 Hz	50 Hz	Rated Frequency
236	Distance Unit	P.System Data 1		km Miles	km	Distance measurement unit
237	Format Z0/Z1	P.System Data 1		RE/RL, XE/XL K0	RE/RL, XE/XL	Setting format for zero seq.comp. format
238A	EarthFltO/C 1p	P.System Data 1		stages together stages separat.	stages together	Earth Fault O/C: setting for 1pole AR
239	T-CB close	P.System Data 1		0.01 .. 0.60 sec	0.06 sec	Closing (operating) time of CB
240A	TMin TRIP CMD	P.System Data 1		0.02 .. 30.00 sec	0.10 sec	Minimum TRIP Command Duration
241A	TMax CLOSE CMD	P.System Data 1		0.01 .. 30.00 sec	1.00 sec	Maximum Close Command Duration
242	T-CBtest-dead	P.System Data 1		0.00 .. 30.00 sec	0.10 sec	Dead Time for CB test-autoreclosure
251	K_ALF/K_ALF_N	P.System Data 1		1.00 .. 10.00	1.00	k_alf/k_alf nominal
253	E% ALF/ALF_N	P.System Data 1		0.5 .. 50.0 %	5.0 %	CT Error in % at k_alf/k_alf nominal
254	E% K_ALF_N	P.System Data 1		0.5 .. 50.0 %	15.0 %	CT Error in % at k_alf nominal
301	ACTIVE GROUP	Change Group		Group A Group B Group C Group D	Group A	Active Setting Group is

Addr.	Parameter	Function	C	Setting Options	Default Setting	Comments
302	CHANGE	Change Group		Group A Group B Group C Group D Binary Input Protocol	Group A	Change to Another Setting Group
402A	WAVEFORMTRIGGER	Osc. Fault Rec.		Save w. Pickup Save w. TRIP Start w. TRIP	Save w. Pickup	Waveform Capture
403A	WAVEFORM DATA	Osc. Fault Rec.		Fault event Pow.Sys.Flt.	Fault event	Scope of Waveform Data
410	MAX. LENGTH	Osc. Fault Rec.		0.30 .. 5.00 sec	2.00 sec	Max. length of a Waveform Capture Record
411	PRE. TRIG. TIME	Osc. Fault Rec.		0.05 .. 0.50 sec	0.25 sec	Captured Waveform Prior to Trigger
412	POST REC. TIME	Osc. Fault Rec.		0.05 .. 0.50 sec	0.10 sec	Captured Waveform after Event
415	BinIn CAPT.TIME	Osc. Fault Rec.		0.10 .. 5.00 sec; ∞	0.50 sec	Capture Time via Binary Input
610	FltDisp.LED/LCD	Device		Target on PU Target on TRIP	Target on PU	Fault Display on LED / LCD
615	Spont. FltDisp.	Device		NO YES	NO	Spontaneous display of flt.an-nunciations
640	Start image DD	Device		image 1 image 2 image 3 image 4 image 5 image 6	image 1	Start image Default Display
1103	FullScaleVolt.	P.System Data 2		0.4 .. 1200.0 kV	400.0 kV	Measurement: Full Scale Voltage (100%)
1104	FullScaleCurr.	P.System Data 2		10 .. 10000 A	1000 A	Measurement: Full Scale Current (100%)
1105	Line Angle	P.System Data 2		10 .. 89 °	85 °	Line Angle
1106	OPERATION POWER	P.System Data 2		0.2 .. 5000.0 MVA	692.8 MVA	Operational power of protection zone
1107	P,Q sign	P.System Data 2		not reversed reversed	not reversed	P,Q operational measured values sign
1111	x'	P.System Data 2	1A	0.0050 .. 9.5000 Ω/km	0.1500 Ω/km	x' - Line Reactance per length unit
			5A	0.0010 .. 1.9000 Ω/km	0.0300 Ω/km	
1111	x'	P.System Data 2	1A	0.0050 .. 15.0000 Ω/mi	0.2420 Ω/mi	x' - Line Reactance per length unit
			5A	0.0010 .. 3.0000 Ω/mi	0.0484 Ω/mi	
1112	c'	P.System Data 2	1A	0.000 .. 100.000 μF/km	0.010 μF/km	c' - capacit. per unit line len. μF/km
			5A	0.000 .. 500.000 μF/km	0.050 μF/km	
1112	c'	P.System Data 2	1A	0.000 .. 160.000 μF/mi	0.016 μF/mi	c' - capacit. per unit line len. μF/mile
			5A	0.000 .. 800.000 μF/mi	0.080 μF/mi	
1113	Line Length	P.System Data 2		0.1 .. 1000.0 km	100.0 km	Line Length
1113	Line Length	P.System Data 2		0.1 .. 650.0 Miles	62.1 Miles	Line Length
1114	Tot.Line Length	P.System Data 2		0.1 .. 1000.0 km	100.0 km	Total Line Length
1114	Tot.Line Length	P.System Data 2		0.1 .. 650.0 Miles	62.1 Miles	Total Line Length
1116	RE/RL(Z1)	P.System Data 2		-0.33 .. 10.00	1.00	Zero seq. comp. factor RE/RL for Z1
1117	XE/XL(Z1)	P.System Data 2		-0.33 .. 10.00	1.00	Zero seq. comp. factor XE/XL for Z1
1118	RE/RL(Z1B...Z5)	P.System Data 2		-0.33 .. 10.00	1.00	Zero seq. comp.factor RE/RL for Z1B...Z5
1119	XE/XL(Z1B...Z5)	P.System Data 2		-0.33 .. 10.00	1.00	Zero seq. comp.factor XE/XL for Z1B...Z5
1120	K0 (Z1)	P.System Data 2		0.000 .. 4.000	1.000	Zero seq. comp. factor K0 for zone Z1
1121	Angle K0(Z1)	P.System Data 2		-180.00 .. 180.00 °	0.00 °	Zero seq. comp. angle for zone Z1
1122	K0 (> Z1)	P.System Data 2		0.000 .. 4.000	1.000	Zero seq.comp.factor K0,higher zones >Z1
1123	Angle K0(> Z1)	P.System Data 2		-180.00 .. 180.00 °	0.00 °	Zero seq. comp. angle, higher zones >Z1

Addr.	Parameter	Function	C	Setting Options	Default Setting	Comments
1124	center phase	P.System Data 2		unknown/sym. Phase 1 Phase 2 Phase 3	unknown/sym.	center phase of feeder
1125	C0/C1	P.System Data 2		0.01 .. 10.00	0.75	Compensation factor C0/C1
1126	RM/RL ParalLine	P.System Data 2		0.00 .. 8.00	0.00	Mutual Parallel Line comp. ratio RM/RL
1127	XM/XL ParalLine	P.System Data 2		0.00 .. 8.00	0.00	Mutual Parallel Line comp. ratio XM/XL
1128	RATIO Par. Comp	P.System Data 2		50 .. 95 %	85 %	Neutral current RATIO Parallel Line Comp
1130A	PoleOpenCurrent	P.System Data 2	1A	0.05 .. 1.00 A	0.10 A	Pole Open Current Threshold
			5A	0.25 .. 5.00 A	0.50 A	
1131A	PoleOpenVoltage	P.System Data 2		2 .. 70 V	30 V	Pole Open Voltage Threshold
1132A	SI Time all Cl.	P.System Data 2		0.01 .. 30.00 sec	0.10 sec	Seal-in Time after ALL closures
1133A	T DELAY SOTF	P.System Data 2		0.05 .. 30.00 sec	0.25 sec	minimal time for line open before SOTF
1134	Line Closure	P.System Data 2		only with ManCl I OR U or ManCl CB OR I or M/C I or Man.Close	I or Man.Close	Recognition of Line Closures with
1135	Reset Trip CMD	P.System Data 2		CurrentOpenPole Current AND CB Pickup Reset	CurrentOpenPole	RESET of Trip Command
1136	OpenPoleDetect.	P.System Data 2		OFF Current AND CB w/ measurement	w/ measurement	open pole detector
1140A	I-CTsat. Thres.	P.System Data 2	1A	0.2 .. 50.0 A; ∞	20.0 A	CT Saturation Threshold
			5A	1.0 .. 250.0 A; ∞	100.0 A	
1150A	SI Time Man.Cl	P.System Data 2		0.01 .. 30.00 sec	0.30 sec	Seal-in Time after MANUAL closures
1151	SYN.MAN.CL	P.System Data 2		with Sync-check w/o Sync-check NO	NO	Manual CLOSE COMMAND generation
1152	Man.Clos. Imp.	P.System Data 2		(Setting options depend on configuration)	None	MANUAL Closure Impulse after CONTROL
1155	3pole coupling	P.System Data 2		with PICKUP with TRIP	with TRIP	3 pole coupling
1156A	Trip2phFit	P.System Data 2		3pole 1pole leading Ø 1pole lagging Ø	3pole	Trip type with 2phase faults
1161	VECTOR GROUP U	P.System Data 2		0 .. 11	0	Vector group numeral for voltage
1162	VECTOR GROUP I	P.System Data 2		0 .. 11	0	Vector group numeral for current
1163	TRANS STP IS	P.System Data 2		Solid Earthed Not Earthed	Solid Earthed	Transformer starpoint is
1201	STATE OF DIFF.	Diff. Prot		OFF ON	ON	State of differential protection
1210	I-DIFF>	Diff. Prot	1A	0.10 .. 20.00 A	0.30 A	I-DIFF>: Pickup value
			5A	0.50 .. 100.00 A	1.50 A	
1213	I-DIF>SWITCH ON	Diff. Prot	1A	0.10 .. 20.00 A	0.30 A	I-DIFF>: Value under switch on condition
			5A	0.50 .. 100.00 A	1.50 A	
1217A	T-DELAY I-DIFF>	Diff. Prot		0.00 .. 60.00 sec; ∞	0.00 sec	I-DIFF>: Trip time delay
1218	T3I0 1PHAS	Diff. Prot Dis. General		0.00 .. 0.50 sec; ∞	0.04 sec	Delay 1ph-faults (comp/isol. star-point)
1219A	I> RELEASE DIFF	Diff. Prot	1A	0.10 .. 20.00 A; 0	0.00 A	Min. local current to release DIFF-Trip
			5A	0.50 .. 100.00 A; 0	0.00 A	
1221	Ic-comp.	Diff. Prot		OFF ON	OFF	Charging current compensation
1224	IcSTAB/IcN	Diff. Prot		2.0 .. 4.0	2.5	Ic Stabilising / Ic Nominal
1233	I-DIFF>>	Diff. Prot	1A	0.8 .. 100.0 A; ∞	1.2 A	I-DIFF>>: Pickup value
			5A	4.0 .. 500.0 A; ∞	6.0 A	
1235	I-DIF>>SWITCHON	Diff. Prot	1A	0.8 .. 100.0 A; ∞	1.2 A	I-DIFF>>: Value under switch on cond.
			5A	4.0 .. 500.0 A; ∞	6.0 A	

Addr.	Parameter	Function	C	Setting Options	Default Setting	Comments
1301	I-TRIP SEND	Intertrip		YES NO	NO	State of transmit. the intertrip command
1302	I-TRIP RECEIVE	Intertrip		Alarm only Trip	Trip	Reaction if intertrip command is receiv.
1303	T-ITRIP BI	Intertrip		0.00 .. 30.00 sec	0.02 sec	Delay for intertrip via binary input
1304	T-ITRIP PROL BI	Intertrip		0.00 .. 30.00 sec	0.00 sec	Prolongation for intertrip via bin.input
1501	FCT Distance	Dis. General		ON OFF	ON	Distance protection
1502	Minimum Iph>	Dis. General	1A	0.05 .. 4.00 A	0.10 A	Phase Current threshold for dist. meas.
			5A	0.25 .. 20.00 A	0.50 A	
1503	3I0> Threshold	Dis. General	1A	0.05 .. 4.00 A	0.10 A	3I0 threshold for neutral current pickup
			5A	0.25 .. 20.00 A	0.50 A	
1504	3U0> Threshold	Dis. General		1 .. 100 V; ∞	5 V	3U0 threshold zero seq. voltage pickup
1505	3U0> COMP/ISOL.	Dis. General		10 .. 200 V; ∞	40 V	3U0> pickup (comp/ isol. star-point)
1507A	3I0>/ Iphmax	Dis. General		0.05 .. 0.30	0.10	3I0>-pickup-stabilisation (3I0>/Iphmax)
1508	SER-COMP.	Dis. General		NO YES	NO	Series compensated line
1509A	E/F recognition	Dis. General		3I0> OR 3U0> 3I0> AND 3U0>	3I0> OR 3U0>	criterion of earth fault recognition
1510	Start Timers	Dis. General		on Dis. Pickup on Zone Pickup	on Dis. Pickup	Condition for zone timer start
1511	Distance Angle	P.System Data 2 Dis. General		30 .. 90 °	85 °	Angle of inclination, distance charact.
1515	Paral.Line Comp	Dis. General		NO YES	YES	Mutual coupling parall.line compensation
1520	PHASE PREF.2phe	Dis. General		L3 (L1) ACYCLIC L1 (L3) ACYCLIC L2 (L1) ACYCLIC L1 (L2) ACYCLIC L3 (L2) ACYCLIC L2 (L3) ACYCLIC L3 (L1) CYCLIC L1 (L3) CYCLIC All loops	L3 (L1) ACYCLIC	Phase preference for 2ph-e faults
1521A	2Ph-E faults	Dis. General		Block leading Ø Block lagging Ø All loops Ø-Ø loops only Ø-E loops only	Block leading Ø	Loop selection with 2Ph-E faults
1523	Uph-ph unbal.	Dis. General		5 .. 50 %	25 %	Max Uph-ph unbal. for 1ph Flt. detection
1532	SOTF zone	Dis. General		PICKUP Zone Z1B Inactive Z1B undirect.	Inactive	Instantaneous trip after Switch-OnToFault
1533	Z1 blkd by diff	Dis. General		YES NO	YES	Zone Z1 blocked by diff. active
1541	R load (Ø-E)	Dis. General	1A	0.100 .. 600.000 Ω; ∞	∞ Ω	R load, minimum Load Impedance (ph-e)
			5A	0.020 .. 120.000 Ω; ∞	∞ Ω	
1542	φ load (Ø-E)	Dis. General		20 .. 60 °	45 °	PHI load, maximum Load Angle (ph-e)
1543	R load (Ø-Ø)	Dis. General	1A	0.100 .. 600.000 Ω; ∞	∞ Ω	R load, minimum Load Impedance (ph-ph)
			5A	0.020 .. 120.000 Ω; ∞	∞ Ω	
1544	φ load (Ø-Ø)	Dis. General		20 .. 60 °	45 °	PHI load, maximum Load Angle (ph-ph)
1601	Op. mode Z1	Dis. Quadril.		Forward Reverse Non-Directional Inactive	Forward	Operating mode Z1
1602	R(Z1) Ø-Ø	Dis. Quadril.	1A	0.050 .. 600.000 Ω	1.250 Ω	R(Z1), Resistance for ph-ph-faults
			5A	0.010 .. 120.000 Ω	0.250 Ω	

Addr.	Parameter	Function	C	Setting Options	Default Setting	Comments
1603	X(Z1)	Dis. Quadril.	1A	0.050 .. 600.000 Ω	2.500 Ω	X(Z1), Reactance
			5A	0.010 .. 120.000 Ω	0.500 Ω	
1604	RE(Z1) \emptyset -E	Dis. Quadril.	1A	0.050 .. 600.000 Ω	2.500 Ω	RE(Z1), Resistance for ph-e faults
			5A	0.010 .. 120.000 Ω	0.500 Ω	
1605	T1-1phase	Dis. General Dis. Quadril. Dis. MHO		0.00 .. 30.00 sec; ∞	0.00 sec	T1-1phase, delay for single phase faults
1606	T1-multi-phase	Dis. General Dis. Quadril. Dis. MHO		0.00 .. 30.00 sec; ∞	0.00 sec	T1multi-ph, delay for multi phase faults
1607	Zone Reduction	Dis. Quadril.		0 .. 45 °	0 °	Zone Reduction Angle (load compensation)
1611	Op. mode Z2	Dis. Quadril.		Forward Reverse Non-Directional Inactive	Forward	Operating mode Z2
1612	R(Z2) \emptyset - \emptyset	Dis. Quadril.	1A	0.050 .. 600.000 Ω	2.500 Ω	R(Z2), Resistance for ph-ph faults
			5A	0.010 .. 120.000 Ω	0.500 Ω	
1613	X(Z2)	Dis. Quadril.	1A	0.050 .. 600.000 Ω	5.000 Ω	X(Z2), Reactance
			5A	0.010 .. 120.000 Ω	1.000 Ω	
1614	RE(Z2) \emptyset -E	Dis. Quadril.	1A	0.050 .. 600.000 Ω	5.000 Ω	RE(Z2), Resistance for ph-e faults
			5A	0.010 .. 120.000 Ω	1.000 Ω	
1615	T2-1phase	Dis. General Dis. Quadril. Dis. MHO		0.00 .. 30.00 sec; ∞	0.30 sec	T2-1phase, delay for single phase faults
1616	T2-multi-phase	Dis. General Dis. Quadril. Dis. MHO		0.00 .. 30.00 sec; ∞	0.30 sec	T2multi-ph, delay for multi phase faults
1617A	Trip 1pole Z2	Dis. General Dis. Quadril. Dis. MHO		NO YES	NO	Single pole trip for faults in Z2
1621	Op. mode Z3	Dis. Quadril.		Forward Reverse Non-Directional Inactive	Reverse	Operating mode Z3
1622	R(Z3) \emptyset - \emptyset	Dis. Quadril.	1A	0.050 .. 600.000 Ω	5.000 Ω	R(Z3), Resistance for ph-ph faults
			5A	0.010 .. 120.000 Ω	1.000 Ω	
1623	X(Z3)	Dis. Quadril.	1A	0.050 .. 600.000 Ω	10.000 Ω	X(Z3), Reactance
			5A	0.010 .. 120.000 Ω	2.000 Ω	
1624	RE(Z3) \emptyset -E	Dis. Quadril.	1A	0.050 .. 600.000 Ω	10.000 Ω	RE(Z3), Resistance for ph-e faults
			5A	0.010 .. 120.000 Ω	2.000 Ω	
1625	T3 DELAY	Dis. General Dis. Quadril. Dis. MHO		0.00 .. 30.00 sec; ∞	0.60 sec	T3 delay
1631	Op. mode Z4	Dis. Quadril.		Forward Reverse Non-Directional Inactive	Non-Directional	Operating mode Z4
1632	R(Z4) \emptyset - \emptyset	Dis. Quadril.	1A	0.050 .. 600.000 Ω	12.000 Ω	R(Z4), Resistance for ph-ph faults
			5A	0.010 .. 120.000 Ω	2.400 Ω	
1633	X(Z4)	Dis. Quadril.	1A	0.050 .. 600.000 Ω	12.000 Ω	X(Z4), Reactance
			5A	0.010 .. 120.000 Ω	2.400 Ω	
1634	RE(Z4) \emptyset -E	Dis. Quadril.	1A	0.050 .. 250.000 Ω	12.000 Ω	RE(Z4), Resistance for ph-e faults
			5A	0.010 .. 50.000 Ω	2.400 Ω	
1635	T4 DELAY	Dis. General Dis. Quadril. Dis. MHO		0.00 .. 30.00 sec; ∞	0.90 sec	T4 delay
1641	Op. mode Z5	Dis. Quadril.		Forward Reverse Non-Directional Inactive	Inactive	Operating mode Z5
1642	R(Z5) \emptyset - \emptyset	Dis. Quadril.	1A	0.050 .. 600.000 Ω	12.000 Ω	R(Z5), Resistance for ph-ph faults
			5A	0.010 .. 120.000 Ω	2.400 Ω	

Addr.	Parameter	Function	C	Setting Options	Default Setting	Comments
1643	X(Z5)+	Dis. Quadril.	1A	0.050 .. 600.000 Ω	12.000 Ω	X(Z5)+, Reactance for Forward direction
			5A	0.010 .. 120.000 Ω	2.400 Ω	
1644	RE(Z5) \emptyset -E	Dis. Quadril.	1A	0.050 .. 600.000 Ω	12.000 Ω	RE(Z5), Resistance for ph-e faults
			5A	0.010 .. 120.000 Ω	2.400 Ω	
1645	T5 DELAY	Dis. General Dis. Quadril. Dis. MHO		0.00 .. 30.00 sec; ∞	0.90 sec	T5 delay
1646	X(Z5)-	Dis. Quadril.	1A	0.050 .. 600.000 Ω	4.000 Ω	X(Z5)-, Reactance for Reverse direction
			5A	0.010 .. 120.000 Ω	0.800 Ω	
1651	Op. mode Z1B	Dis. Quadril.		Forward Reverse Non-Directional Inactive	Forward	Operating mode Z1B (overreach zone)
1652	R(Z1B) \emptyset - \emptyset	Dis. Quadril.	1A	0.050 .. 600.000 Ω	1.500 Ω	R(Z1B), Resistance for ph-ph faults
			5A	0.010 .. 120.000 Ω	0.300 Ω	
1653	X(Z1B)	Dis. Quadril.	1A	0.050 .. 600.000 Ω	3.000 Ω	X(Z1B), Reactance
			5A	0.010 .. 120.000 Ω	0.600 Ω	
1654	RE(Z1B) \emptyset -E	Dis. Quadril.	1A	0.050 .. 600.000 Ω	3.000 Ω	RE(Z1B), Resistance for ph-e faults
			5A	0.010 .. 120.000 Ω	0.600 Ω	
1655	T1B-1phase	Dis. General Dis. Quadril. Dis. MHO		0.00 .. 30.00 sec; ∞	0.00 sec	T1B-1phase, delay for single ph. faults
1656	T1B-multi-phase	Dis. General Dis. Quadril. Dis. MHO		0.00 .. 30.00 sec; ∞	0.00 sec	T1B-multi-ph, delay for multi ph. faults
1657	1st AR -> Z1B	Dis. General Dis. Quadril. Dis. MHO		NO YES	NO	Z1B enabled before 1st AR (int. or ext.)
1701	Op. mode Z1	Dis. MHO		Forward Reverse Inactive	Forward	Operating mode Z1
1702	ZR(Z1)	Dis. MHO	1A	0.050 .. 200.000 Ω	2.500 Ω	ZR(Z1), Impedance Reach
			5A	0.010 .. 40.000 Ω	0.500 Ω	
1711	Op. mode Z2	Dis. MHO		Forward Reverse Inactive	Forward	Operating mode Z2
1712	ZR(Z2)	Dis. MHO	1A	0.050 .. 200.000 Ω	5.000 Ω	ZR(Z2), Impedance Reach
			5A	0.010 .. 40.000 Ω	1.000 Ω	
1721	Op. mode Z3	Dis. MHO		Forward Reverse Inactive	Reverse	Operating mode Z3
1722	ZR(Z3)	Dis. MHO	1A	0.050 .. 200.000 Ω	5.000 Ω	ZR(Z3), Impedance Reach
			5A	0.010 .. 40.000 Ω	1.000 Ω	
1731	Op. mode Z4	Dis. MHO		Forward Reverse Inactive	Forward	Operating mode Z4
1732	ZR(Z4)	Dis. MHO	1A	0.050 .. 200.000 Ω	10.000 Ω	ZR(Z4), Impedance Reach
			5A	0.010 .. 40.000 Ω	2.000 Ω	
1741	Op. mode Z5	Dis. MHO		Forward Reverse Inactive	Inactive	Operating mode Z5
1742	ZR(Z5)	Dis. MHO	1A	0.050 .. 200.000 Ω	10.000 Ω	ZR(Z5), Impedance Reach
			5A	0.010 .. 40.000 Ω	2.000 Ω	
1751	Op. mode Z1B	Dis. MHO		Forward Reverse Inactive	Forward	Operating mode Z1B (extended zone)
1752	ZR(Z1B)	Dis. MHO	1A	0.050 .. 200.000 Ω	3.000 Ω	ZR(Z1B), Impedance Reach
			5A	0.010 .. 40.000 Ω	0.600 Ω	
1771A	Mem.Polariz.PhE	Dis. MHO		0.0 .. 100.0 %	15.0 %	Voltage Memory polarization (phase-e)
1772A	CrossPolarizPhE	Dis. MHO		0.0 .. 100.0 %	15.0 %	Cross polarization (phase-e)
1773A	Mem.Polariz.P-P	Dis. MHO		0.0 .. 100.0 %	15.0 %	Voltage Memory polarization (ph-ph)

Addr.	Parameter	Function	C	Setting Options	Default Setting	Comments
1774A	CrossPolarizP-P	Dis. MHO		0.0 .. 100.0 %	15.0 %	Cross polarization (phase-phase)
1901	PROGAM U/I	Dis. General		LE:Uphe/LL:Uphp LE:Uphe/LL:Uphp LE:Uphe/LL:Uphp LE:Uphe/LL:I>>	LE:Uphe/LL:Uphp	Pickup program U/I
1902	DELAY FORW. PU	Dis. General Dis. General		0.00 .. 30.00 sec; ∞	1.20 sec	Trip delay for Forward-PICKUP
1903	DEL. NON-DIR PU	Dis. General Dis. General		0.00 .. 30.00 sec; ∞	1.20 sec	Trip delay for non-directional PICKUP
1910	Iph>>	Dis. General	1A 5A	0.25 .. 10.00 A 1.25 .. 50.00 A	1.80 A 9.00 A	Iph>> Pickup (overcurrent)
1911	Iph>	Dis. General	1A 5A	0.10 .. 4.00 A 0.50 .. 20.00 A	0.20 A 1.00 A	Iph> Pickup (minimum current)
1912	Uph-e (I>>)	Dis. General		20 .. 70 V	48 V	Undervoltage (ph-e) at Iph>>
1913	Uph-e (I>)	Dis. General		20 .. 70 V	48 V	Undervoltage (ph-e) at Iph>
1914	Uph-ph (I>>)	Dis. General		40 .. 130 V	80 V	Undervoltage (ph-ph) at Iph>>
1915	Uph-ph (I>)	Dis. General		40 .. 130 V	80 V	Undervoltage (ph-ph) at Iph>
1916	Iphi>	Dis. General	1A 5A	0.10 .. 8.00 A 0.50 .. 40.00 A	0.50 A 2.50 A	Iphi> Pickup (minimum current at phi>)
1917	Uph-e (Iphi>)	Dis. General		20 .. 70 V	48 V	Undervoltage (ph-e) at Iphi>
1918	Uph-ph (Iphi>)	Dis. General		40 .. 130 V	80 V	Undervoltage (ph-ph) at Iphi>
1919A	EFFECT φ	Dis. General		forward&reverse Forward	forward&reverse	Effective direction of phi-pickup
1920	φ>	Dis. General		30 .. 60 °	50 °	PHI> pickup (lower setpoint)
1921	φ<	Dis. General		90 .. 120 °	110 °	PHI< pickup (upper setpoint)
1930A	1ph FAULTS	Dis. General		PHASE-EARTH PHASE-PHASEONLY	PHASE-EARTH	1ph-pickup loop selection (PU w/o earth)
2002	P/S Op. mode	Power Swing		All zones block Z1/Z1B block Z2 to Z5 block Z1,Z1B,Z2 block	All zones block	Power Swing Operating mode
2006	PowerSwing trip	Power Swing		NO YES	NO	Power swing trip
2007	Trip DELAY P/S	Power Swing		0.08 .. 5.00 sec; 0	0.08 sec	Trip delay after Power Swing Blocking
2101	FCT Telep. Dis.	Teleprot. Dist.		ON OFF	ON	Teleprotection for Distance protection
2102	Type of Line	Teleprot. Dist.		Two Terminals Three terminals	Two Terminals	Type of Line
2103A	Send Prolong.	Teleprot. Dist.		0.00 .. 30.00 sec	0.05 sec	Time for send signal prolongation
2107A	Delay for alarm	Teleprot. Dist.		0.00 .. 30.00 sec	10.00 sec	Time Delay for Alarm
2108	Release Delay	Teleprot. Dist.		0.000 .. 30.000 sec	0.000 sec	Time Delay for release after pickup
2109A	TrBlk Wait Time	Teleprot. Dist.		0.00 .. 30.00 sec; ∞	0.04 sec	Transient Block.: Duration external ft.
2110A	TrBlk BlockTime	Teleprot. Dist.		0.00 .. 30.00 sec	0.05 sec	Transient Block.: Blk.T. after ext. ft.
2201	FCT Direct Trip	DTT Direct Trip		ON OFF	OFF	Direct Transfer Trip (DTT)
2202	Trip Time DELAY	DTT Direct Trip		0.00 .. 30.00 sec; ∞	0.01 sec	Trip Time Delay
2301	INRUSH REST.	Diff. Prot		OFF ON	OFF	Inrush Restraint
2302	2nd HARMONIC	Diff. Prot		10 .. 45 %	15 %	2nd. harmonic in % of fundamental
2303	CROSS BLOCK	Diff. Prot		NO YES	NO	Cross Block
2305	MAX INRUSH PEAK	Diff. Prot	1A 5A	1.1 .. 25.0 A 5.5 .. 125.0 A	15.0 A 75.0 A	Maximum inrush-peak value
2310	CROSSB 2HM	Diff. Prot		0.00 .. 60.00 sec; ∞	0.00 sec	Time for Crossblock with 2nd harmonic

Addr.	Parameter	Function	C	Setting Options	Default Setting	Comments
2401	FCT HS/SOTF-O/C	SOTF Overcurr.		ON OFF	ON	Inst. High Speed/SOTF-O/C is
2404	I>>>	SOTF Overcurr.	1A	0.10 .. 15.00 A; ∞	1.50 A	I>>> Pickup
			5A	0.50 .. 75.00 A; ∞	7.50 A	
2405A	I>>>>	SOTF Overcurr.	1A	1.00 .. 25.00 A; ∞	∞ A	I>>>> Pickup
			5A	5.00 .. 125.00 A; ∞	∞ A	
2501	FCT Weak Infeed	Weak Infeed		OFF ECHO only ECHO and TRIP	ECHO only	Weak Infeed function
2502A	Trip/Echo DELAY	Weak Infeed		0.00 .. 30.00 sec	0.04 sec	Trip / Echo Delay after carrier receipt
2503A	Trip EXTENSION	Weak Infeed		0.00 .. 30.00 sec	0.05 sec	Trip Extension / Echo Impulse time
2504A	Echo BLOCK Time	Weak Infeed		0.00 .. 30.00 sec	0.05 sec	Echo Block Time
2505	UNDERVOLTAGE	Weak Infeed		2 .. 70 V	25 V	Undervoltage (ph-e)
2509	Echo:1channel	Weak Infeed		NO YES	NO	Echo logic: Dis and EF on common channel
2510	Uphe< Factor	Weak Infeed		0.10 .. 1.00	0.70	Factor for undervoltage Uphe<
2511	Time const. τ	Weak Infeed		1 .. 60 sec	5 sec	Time constant Tau
2512A	Rec. Ext.	Weak Infeed		0.00 .. 30.00 sec	0.65 sec	Reception extension
2513A	T 3I0> Ext.	Weak Infeed		0.00 .. 30.00 sec	0.60 sec	3I0> exceeded extension
2514	3I0> Threshold	Weak Infeed	1A	0.05 .. 1.00 A	0.50 A	3I0 threshold for neutral current pickup
			5A	0.25 .. 5.00 A	2.50 A	
2515	TM	Weak Infeed		0.00 .. 30.00 sec	0.40 sec	WI delay single pole
2516	TT	Weak Infeed		0.00 .. 30.00 sec	1.00 sec	WI delay multi pole
2517	1pol. Trip	Weak Infeed		ON OFF	ON	Single pole WI trip allowed
2518	1pol. with 3I0	Weak Infeed		ON OFF	ON	Single pole WI trip with 3I0
2519	3pol. Trip	Weak Infeed		ON OFF	ON	Three pole WI trip allowed
2520	T 3I0> alarm	Weak Infeed		0.00 .. 30.00 sec	10.00 sec	3I0> exceeded delay for alarm
2530	WI non delayed	Weak Infeed		ON OFF	ON	WI non delayed
2531	WI delayed	Weak Infeed		ON by receive fail OFF	by receive fail	WI delayed
2601	Operating Mode	Back-Up O/C		ON Only Emer. prot OFF	ON	Operating mode
2602	SOTF Time DELAY	Back-Up O/C		0.00 .. 30.00 sec	0.00 sec	Trip time delay after SOTF
2610	Iph>>	Back-Up O/C	1A	0.10 .. 25.00 A; ∞	2.00 A	Iph>> Pickup
			5A	0.50 .. 125.00 A; ∞	10.00 A	
2611	T Iph>>	Back-Up O/C		0.00 .. 30.00 sec; ∞	0.30 sec	T Iph>> Time delay
2612	3I0>> PICKUP	Back-Up O/C	1A	0.05 .. 25.00 A; ∞	0.50 A	3I0>> Pickup
			5A	0.25 .. 125.00 A; ∞	2.50 A	
2613	T 3I0>>	Back-Up O/C		0.00 .. 30.00 sec; ∞	2.00 sec	T 3I0>> Time delay
2614	I>> Telep/BI	Back-Up O/C		NO YES	YES	Instantaneous trip via Tele-prot./BI
2615	I>> SOTF	Back-Up O/C		NO YES	NO	Instantaneous trip after Switch-OnToFault
2620	Iph>	Back-Up O/C	1A	0.10 .. 25.00 A; ∞	1.50 A	Iph> Pickup
			5A	0.50 .. 125.00 A; ∞	7.50 A	
2621	T Iph>	Back-Up O/C		0.00 .. 30.00 sec; ∞	0.50 sec	T Iph> Time delay
2622	3I0>	Back-Up O/C	1A	0.05 .. 25.00 A; ∞	0.20 A	3I0> Pickup
			5A	0.25 .. 125.00 A; ∞	1.00 A	
2623	T 3I0>	Back-Up O/C		0.00 .. 30.00 sec; ∞	2.00 sec	T 3I0> Time delay
2624	I> Telep/BI	Back-Up O/C		NO YES	NO	Instantaneous trip via Tele-prot./BI

Addr.	Parameter	Function	C	Setting Options	Default Setting	Comments
2625	I> SOTF	Back-Up O/C		NO YES	NO	Instantaneous trip after Switch-OnToFault
2630	Iph> STUB	Back-Up O/C	1A	0.10 .. 25.00 A; ∞	1.50 A	Iph> STUB Pickup
			5A	0.50 .. 125.00 A; ∞	7.50 A	
2631	T Iph STUB	Back-Up O/C		0.00 .. 30.00 sec; ∞	0.30 sec	T Iph STUB Time delay
2632	3I0> STUB	Back-Up O/C	1A	0.05 .. 25.00 A; ∞	0.20 A	3I0> STUB Pickup
			5A	0.25 .. 125.00 A; ∞	1.00 A	
2633	T 3I0 STUB	Back-Up O/C		0.00 .. 30.00 sec; ∞	2.00 sec	T 3I0 STUB Time delay
2634	I-STUB Telep/BI	Back-Up O/C		NO YES	NO	Instantaneous trip via Tele-prot./BI
2635	I-STUB SOTF	Back-Up O/C		NO YES	NO	Instantaneous trip after Switch-OnToFault
2640	Ip>	Back-Up O/C	1A	0.10 .. 4.00 A; ∞	∞ A	Ip> Pickup
			5A	0.50 .. 20.00 A; ∞	∞ A	
2642	T Ip Time Dial	Back-Up O/C		0.05 .. 3.00 sec; ∞	0.50 sec	T Ip Time Dial
2643	Time Dial TD Ip	Back-Up O/C		0.50 .. 15.00 ; ∞	5.00	Time Dial TD Ip
2646	T Ip Add	Back-Up O/C		0.00 .. 30.00 sec	0.00 sec	T Ip Additional Time Delay
2650	3I0p PICKUP	Back-Up O/C	1A	0.05 .. 4.00 A; ∞	∞ A	3I0p Pickup
			5A	0.25 .. 20.00 A; ∞	∞ A	
2652	T 3I0p TimeDial	Back-Up O/C		0.05 .. 3.00 sec; ∞	0.50 sec	T 3I0p Time Dial
2653	TimeDial TD3I0p	Back-Up O/C		0.50 .. 15.00 ; ∞	5.00	Time Dial TD 3I0p
2656	T 3I0p Add	Back-Up O/C		0.00 .. 30.00 sec	0.00 sec	T 3I0p Additional Time Delay
2660	IEC Curve	Back-Up O/C Back-Up O/C		Normal Inverse Very Inverse Extremely Inv. LongTimeInverse	Normal Inverse	IEC Curve
2661	ANSI Curve	Back-Up O/C Back-Up O/C		Inverse Short Inverse Long Inverse Moderately Inv. Very Inverse Extremely Inv. Definite Inv.	Inverse	ANSI Curve
2670	I(3I0)p Tele/BI	Back-Up O/C		NO YES	NO	Instantaneous trip via Tele-prot./BI
2671	I(3I0)p SOTF	Back-Up O/C		NO YES	NO	Instantaneous trip after Switch-OnToFault
2801	DMD Interval	Demand meter		15 Min., 1 Sub 15 Min., 3 Subs 15 Min., 15 Subs 30 Min., 1 Sub 60 Min., 1 Sub	60 Min., 1 Sub	Demand Calculation Intervals
2802	DMD Sync.Time	Demand meter		On The Hour 15 After Hour 30 After Hour 45 After Hour	On The Hour	Demand Synchronization Time
2811	MinMax cycRESET	Min/Max meter		NO YES	YES	Automatic Cyclic Reset Function
2812	MiMa RESET TIME	Min/Max meter		0 .. 1439 min	0 min	MinMax Reset Timer
2813	MiMa RESETCYCLE	Min/Max meter		1 .. 365 Days	7 Days	MinMax Reset Cycle Period
2814	MinMaxRES.START	Min/Max meter		1 .. 365 Days	1 Days	MinMax Start Reset Cycle in
2901	MEASURE. SUPERV	Measurem.Superv		ON OFF	ON	Measurement Supervision
2902A	BALANCE U-LIMIT	Measurem.Superv		10 .. 100 V	50 V	Voltage Threshold for Balance Monitoring
2903A	BAL. FACTOR U	Measurem.Superv		0.58 .. 0.95	0.75	Balance Factor for Voltage Monitor
2904A	BALANCE I LIMIT	Measurem.Superv	1A	0.10 .. 1.00 A	0.50 A	Current Balance Monitor
			5A	0.50 .. 5.00 A	2.50 A	
2905A	BAL. FACTOR I	Measurem.Superv		0.10 .. 0.95	0.50	Balance Factor for Current Monitor
2906A	ΣI THRESHOLD	Measurem.Superv	1A	0.10 .. 2.00 A	0.25 A	Summated Current Monitoring Threshold
			5A	0.50 .. 10.00 A	1.25 A	

Addr.	Parameter	Function	C	Setting Options	Default Setting	Comments
2907A	ΣI FACTOR	Measurem.Superv		0.00 .. 0.95	0.50	Summated Current Monitoring Factor
2908A	T BAL. U LIMIT	Measurem.Superv		5 .. 100 sec	5 sec	T Balance Factor for Voltage Monitor
2909A	T BAL. I LIMIT	Measurem.Superv		5 .. 100 sec	5 sec	T Current Balance Monitor
2910	FUSE FAIL MON.	Measurem.Superv		ON OFF	ON	Fuse Failure Monitor
2911A	FFM U>(min)	Measurem.Superv		10 .. 100 V	30 V	Minimum Voltage Threshold U>
2912A	FFM I< (max)	Measurem.Superv	1A	0.10 .. 1.00 A	0.10 A	Maximum Current Threshold I<
			5A	0.50 .. 5.00 A	0.50 A	
2913A	FFM U<max (3ph)	Measurem.Superv		2 .. 100 V	5 V	Maximum Voltage Threshold U< (3phase)
2914A	FFM I Δ (3p)	Measurem.Superv	1A	0.05 .. 1.00 A	0.10 A	Delta Current Threshold (3phase)
			5A	0.25 .. 5.00 A	0.50 A	
2915	V-Supervision	Measurem.Superv		w/ CURR.SUP w/ I> & CBaux OFF	w/ CURR.SUP	Voltage Failure Supervision
2916A	T V-Supervision	Measurem.Superv		0.00 .. 30.00 sec	3.00 sec	Delay Voltage Failure Supervision
2921	T mcb	Measurem.Superv		0 .. 30 ms	0 ms	VT mcb operating time
2931	BROKEN WIRE	Measurem.Superv		ON OFF	OFF	Fast broken current-wire supervision
2933	FAST Σi SUPERV	Measurem.Superv		ON OFF	ON	State of fast current summation supervis
2941	ϕA	Measurem.Superv		0 .. 359 °	200 °	Limit setting PhiA
2942	ϕB	Measurem.Superv		0 .. 359 °	340 °	Limit setting PhiB
2943	I1>	Measurem.Superv	1A	0.05 .. 2.00 A	0.05 A	Minimum value I1>
			5A	0.25 .. 10.00 A	0.25 A	
2944	U1>	Measurem.Superv		2 .. 70 V	20 V	Minimum value U1>
3101	FCT EarthFltO/C	Earth Fault O/C		ON OFF	ON	Earth Fault overcurrent function
3102	BLOCK for Dist.	Earth Fault O/C		every PICKUP 1phase PICKUP multiph. PICKUP NO	every PICKUP	Block E/F for Distance protection
3103	BLOCK 1pDeadTim	Earth Fault O/C		YES NO	YES	Block E/F for 1pole Dead time
3104A	Iph-STAB. Slope	Earth Fault O/C		0 .. 30 %	10 %	Stabilisation Slope with Iphase
3105	3IoMin Teleprot	Earth Fault O/C	1A	0.01 .. 1.00 A	0.50 A	3Io-Min threshold for Teleprot. schemes
			5A	0.05 .. 5.00 A	2.50 A	
3105	3IoMin Teleprot	Earth Fault O/C	1A	0.003 .. 1.000 A	0.500 A	3Io-Min threshold for Teleprot. schemes
			5A	0.015 .. 5.000 A	2.500 A	
3109	Trip 1pole E/F	Earth Fault O/C		YES NO	YES	Single pole trip with earth flt.prot.
3110	Op. mode 3Io>>>	Earth Fault O/C		Forward Reverse Non-Directional Inactive	Inactive	Operating mode
3111	3Io>>>	Earth Fault O/C	1A	0.05 .. 25.00 A	4.00 A	3Io>>> Pickup
			5A	0.25 .. 125.00 A	20.00 A	
3112	T 3Io>>>	Earth Fault O/C		0.00 .. 30.00 sec; ∞	0.30 sec	T 3Io>>> Time delay
3113	3Io>>> Telep/BI	Earth Fault O/C		NO YES	NO	Instantaneous trip via Teleprot./BI
3114	3Io>>>SOTF-Trip	Earth Fault O/C		NO YES	NO	Instantaneous trip after Switch-OnToFault
3115	3Io>>>InrushBlk	Earth Fault O/C		NO YES	NO	Inrush Blocking
3116	BLK /1p 3Io>>>	Earth Fault O/C		YES No (non-dir.)	YES	Block 3Io>>> during 1pole dead time
3117	Trip 1p 3Io>>>	Earth Fault O/C		YES NO	YES	Single pole trip with 3Io>>>

Addr.	Parameter	Function	C	Setting Options	Default Setting	Comments
3120	Op. mode 3I0>>	Earth Fault O/C		Forward Reverse Non-Directional Inactive	Inactive	Operating mode
3121	3I0>>	Earth Fault O/C	1A	0.05 .. 25.00 A	2.00 A	3I0>> Pickup
			5A	0.25 .. 125.00 A	10.00 A	
3122	T 3I0>>	Earth Fault O/C		0.00 .. 30.00 sec; ∞	0.60 sec	T 3I0>> Time Delay
3123	3I0>> Telep/BI	Earth Fault O/C		NO YES	NO	Instantaneous trip via Tele-prot./BI
3124	3I0>> SOTF-Trip	Earth Fault O/C		NO YES	NO	Instantaneous trip after Switch-OnToFault
3125	3I0>> InrushBlk	Earth Fault O/C		NO YES	NO	Inrush Blocking
3126	BLK /1p 3I0>>	Earth Fault O/C		YES No (non-dir.)	YES	Block 3I0>> during 1pole dead time
3127	Trip 1p 3I0>>	Earth Fault O/C		YES NO	YES	Single pole trip with 3I0>>
3130	Op. mode 3I0>	Earth Fault O/C		Forward Reverse Non-Directional Inactive	Inactive	Operating mode
3131	3I0>	Earth Fault O/C	1A	0.05 .. 25.00 A	1.00 A	3I0> Pickup
			5A	0.25 .. 125.00 A	5.00 A	
3131	3I0>	Earth Fault O/C	1A	0.003 .. 25.000 A	1.000 A	3I0> Pickup
			5A	0.015 .. 125.000 A	5.000 A	
3132	T 3I0>	Earth Fault O/C		0.00 .. 30.00 sec; ∞	0.90 sec	T 3I0> Time Delay
3133	3I0> Telep/BI	Earth Fault O/C		NO YES	NO	Instantaneous trip via Tele-prot./BI
3134	3I0> SOTF-Trip	Earth Fault O/C		NO YES	NO	Instantaneous trip after Switch-OnToFault
3135	3I0> InrushBlk	Earth Fault O/C		NO YES	NO	Inrush Blocking
3136	BLK /1p 3I0>	Earth Fault O/C		YES No (non-dir.)	YES	Block 3I0> during 1pole dead time
3137	Trip 1p 3I0>	Earth Fault O/C		YES NO	YES	Single pole trip with 3I0>
3140	Op. mode 3I0p	Earth Fault O/C Earth Fault O/C Earth Fault O/C Earth Fault O/C		Forward Reverse Non-Directional Inactive	Inactive	Operating mode
3141	3I0p PICKUP	Earth Fault O/C Earth Fault O/C Earth Fault O/C Earth Fault O/C	1A	0.05 .. 25.00 A	1.00 A	3I0p Pickup
			5A	0.25 .. 125.00 A	5.00 A	
3141	3I0p PICKUP	Earth Fault O/C Earth Fault O/C Earth Fault O/C Earth Fault O/C	1A	0.003 .. 25.000 A	1.000 A	3I0p Pickup
			5A	0.015 .. 125.000 A	5.000 A	
3142	3I0p MinT-DELAY	Earth Fault O/C		0.00 .. 30.00 sec	1.20 sec	3I0p Minimum Time Delay
3143	3I0p Time Dial	Earth Fault O/C		0.05 .. 3.00 sec; ∞	0.50 sec	3I0p Time Dial
3144	3I0p Time Dial	Earth Fault O/C		0.50 .. 15.00 ; ∞	5.00	3I0p Time Dial
3145	3I0p Time Dial	Earth Fault O/C		0.05 .. 15.00 sec; ∞	1.35 sec	3I0p Time Dial
3146	3I0p MaxT-DELAY	Earth Fault O/C		0.00 .. 30.00 sec	5.80 sec	3I0p Maximum Time Delay
3147	Add.T-DELAY	Earth Fault O/C Earth Fault O/C Earth Fault O/C Earth Fault O/C		0.00 .. 30.00 sec; ∞	1.20 sec	Additional Time Delay
3148	3I0p Telep/BI	Earth Fault O/C Earth Fault O/C Earth Fault O/C Earth Fault O/C		NO YES	NO	Instantaneous trip via Tele-prot./BI
3149	3I0p SOTF-Trip	Earth Fault O/C Earth Fault O/C Earth Fault O/C Earth Fault O/C		NO YES	NO	Instantaneous trip after Switch-OnToFault

Addr.	Parameter	Function	C	Setting Options	Default Setting	Comments
3150	3I0p InrushBlk	Earth Fault O/C Earth Fault O/C Earth Fault O/C Earth Fault O/C		NO YES	NO	Inrush Blocking
3151	IEC Curve	Earth Fault O/C		Normal Inverse Very Inverse Extremely Inv. LongTimeInverse	Normal Inverse	IEC Curve
3152	ANSI Curve	Earth Fault O/C		Inverse Short Inverse Long Inverse Moderately Inv. Very Inverse Extremely Inv. Definite Inv.	Inverse	ANSI Curve
3153	LOG Curve	Earth Fault O/C		Log. inverse	Log. inverse	LOGARITHMIC Curve
3154	3I0p Startpoint	Earth Fault O/C		1.0 .. 4.0	1.1	Start point of inverse characteristic
3155	k	Earth Fault O/C		0.00 .. 3.00 sec	0.50 sec	k-factor for Sr-characteristic
3156	S ref	Earth Fault O/C	1A	1 .. 100 VA	10 VA	S ref for Sr-characteristic
			5A	5 .. 500 VA	50 VA	
3157	BLK /1p 3I0p	Earth Fault O/C Earth Fault O/C Earth Fault O/C Earth Fault O/C		YES No (non-dir.)	YES	Block 3I0p during 1pole dead time
3158	Trip 1p 3I0p	Earth Fault O/C Earth Fault O/C Earth Fault O/C Earth Fault O/C		YES NO	YES	Single pole trip with 3I0p
3160	POLARIZATION	Earth Fault O/C		U0 + IY or U2 U0 + IY with IY only with U2 and I2 zero seq. power	U0 + IY or U2	Polarization
3162A	Dir. ALPHA	Earth Fault O/C		0 .. 360 °	338 °	ALPHA, lower angle for forward direction
3163A	Dir. BETA	Earth Fault O/C		0 .. 360 °	122 °	BETA, upper angle for forward direction
3164	3U0>	Earth Fault O/C		0.5 .. 10.0 V	0.5 V	Min. zero seq.voltage 3U0 for polarizing
3165	IY>	Earth Fault O/C	1A	0.05 .. 1.00 A	0.05 A	Min. earth current IY for polarizing
			5A	0.25 .. 5.00 A	0.25 A	
3166	3U2>	Earth Fault O/C		0.5 .. 10.0 V	0.5 V	Min. neg. seq. polarizing voltage 3U2
3167	3I2>	Earth Fault O/C	1A	0.05 .. 1.00 A	0.05 A	Min. neg. seq. polarizing current 3I2
			5A	0.25 .. 5.00 A	0.25 A	
3168	PHI comp	Earth Fault O/C		0 .. 360 °	255 °	Compensation angle PHI comp. for Sr
3169	S forward	Earth Fault O/C	1A	0.1 .. 10.0 VA	0.3 VA	Forward direction power threshold
			5A	0.5 .. 50.0 VA	1.5 VA	
3170	2nd InrushRest	Earth Fault O/C		10 .. 45 %	15 %	2nd harmonic ratio for inrush restraint
3171	Imax InrushRest	Earth Fault O/C	1A	0.50 .. 25.00 A	7.50 A	Max.Current, overriding inrush restraint
			5A	2.50 .. 125.00 A	37.50 A	
3172	SOTF Op. Mode	Earth Fault O/C		PICKUP PICKUP+DIRECT.	PICKUP+DIRECT.	Instantaneous mode after SwitchOnToFault
3173	SOTF Time DELAY	Earth Fault O/C		0.00 .. 30.00 sec	0.00 sec	Trip time delay after SOTF
3174	BLK for DisZone	Earth Fault O/C		in zone Z1 in zone Z1/Z1B in each zone	in each zone	Block E/F for Distance Protection Pickup
3175	EF BLK Dif.PU	Earth Fault O/C		YES NO	YES	Block E/F for Differential Prot. Pickup
3182	3U0>(U0 inv)	Earth Fault O/C		1.0 .. 10.0 V	5.0 V	3U0> setpoint
3183	U0inv. minimum	Earth Fault O/C		0.1 .. 5.0 V	0.2 V	Minimum voltage U0min for T->oo
3184	T forw. (U0inv)	Earth Fault O/C		0.00 .. 32.00 sec	0.90 sec	T-forward Time delay (U0inv)

Addr.	Parameter	Function	C	Setting Options	Default Setting	Comments
3185	T rev. (U0inv)	Earth Fault O/C		0.00 .. 32.00 sec	1.20 sec	T-reverse Time delay (U0inv)
3201	FCT Telep. E/F	Teleprot. E/F		ON OFF	ON	Teleprotection for Earth Fault O/C
3202	Line Config.	Teleprot. E/F		Two Terminals Three terminals	Two Terminals	Line Configuration
3203A	Send Prolong.	Teleprot. E/F		0.00 .. 30.00 sec	0.05 sec	Time for send signal prolongation
3207A	Delay for alarm	Teleprot. E/F		0.00 .. 30.00 sec	10.00 sec	Unblocking: Time Delay for Alarm
3208	Release Delay	Teleprot. E/F		0.000 .. 30.000 sec	0.000 sec	Time Delay for release after pickup
3209A	TrBlk Wait Time	Teleprot. E/F		0.00 .. 30.00 sec; ∞	0.04 sec	Transient Block.: Duration external flt.
3210A	TrBlk BlockTime	Teleprot. E/F		0.00 .. 30.00 sec	0.05 sec	Transient Block.: Blk.T. after ext. flt.
3401	AUTO RECLOSE	Auto Reclose		OFF ON	ON	Auto-Reclose Function
3402	CB? 1.TRIP	Auto Reclose		YES NO	NO	CB ready interrogation at 1st trip
3403	T-RECLAIM	Auto Reclose		0.50 .. 300.00 sec	3.00 sec	Reclaim time after successful AR cycle
3403	T-RECLAIM	Auto Reclose		0.50 .. 300.00 sec; 0	3.00 sec	Reclaim time after successful AR cycle
3404	T-BLOCK MC	Auto Reclose		0.50 .. 300.00 sec; 0	1.00 sec	AR blocking duration after manual close
3406	EV. FLT. RECOG.	Auto Reclose		with PICKUP with TRIP	with TRIP	Evolving fault recognition
3407	EV. FLT. MODE	Auto Reclose		Stops AutoRecl starts 3p AR	starts 3p AR	Evolving fault (during the dead time)
3408	T-Start MONITOR	Auto Reclose		0.01 .. 300.00 sec	0.50 sec	AR start-signal monitoring time
3409	CB TIME OUT	Auto Reclose		0.01 .. 300.00 sec	3.00 sec	Circuit Breaker (CB) Supervision Time
3410	T RemoteClose	Auto Reclose		0.00 .. 300.00 sec; ∞	0.20 sec	Send delay for remote close command
3411A	T-DEAD EXT.	Auto Reclose		0.50 .. 300.00 sec; ∞	∞ sec	Maximum dead time extension
3420	AR WITH DIFF	Auto Reclose		YES NO	YES	AR with differential protection ?
3421	AR w/ SOTF-O/C	Auto Reclose		YES NO	YES	AR with switch-onto-fault overcurrent ?
3422	AR w/ DIST.	Auto Reclose		YES NO	YES	AR with distance protection ?
3423	AR WITH I.TRIP	Auto Reclose		YES NO	YES	AR with intertrip ?
3424	AR w/ DTT	Auto Reclose		YES NO	YES	AR with direct transfer trip ?
3425	AR w/ BackUpO/C	Auto Reclose		YES NO	YES	AR with back-up overcurrent ?
3426	AR w/ W/I	Auto Reclose		YES NO	YES	AR with weak infeed tripping ?
3427	AR w/ EF-O/C	Auto Reclose		YES NO	YES	AR with earth fault overcurrent prot. ?
3430	AR TRIP 3pole	Auto Reclose		YES NO	YES	3pole TRIP by AR
3431	DLC / RDT	Auto Reclose		WITHOUT DLC	WITHOUT	Dead Line Check / Reduced Dead Time
3433	T-ACTION ADT	Auto Reclose		0.01 .. 300.00 sec; ∞	0.20 sec	Action time
3434	T-MAX ADT	Auto Reclose		0.50 .. 3000.00 sec	5.00 sec	Maximum dead time
3435	ADT 1p allowed	Auto Reclose		YES NO	NO	1pole TRIP allowed
3436	ADT CB? CLOSE	Auto Reclose		YES NO	NO	CB ready interrogation before reclosing
3437	ADT SynRequest	Auto Reclose		YES NO	NO	Request for synchro-check after 3pole AR
3438	T U-stable	Auto Reclose		0.10 .. 30.00 sec	0.10 sec	Supervision time for dead/live voltage

Addr.	Parameter	Function	C	Setting Options	Default Setting	Comments
3440	U-live>	Auto Reclose		30 .. 90 V	48 V	Voltage threshold for live line or bus
3441	U-dead<	Auto Reclose		2 .. 70 V	30 V	Voltage threshold for dead line or bus
3450	1.AR: START	Auto Reclose		YES NO	YES	Start of AR allowed in this cycle
3451	1.AR: T-ACTION	Auto Reclose		0.01 .. 300.00 sec; ∞	0.20 sec	Action time
3453	1.AR Tdead 1Fit	Auto Reclose		0.01 .. 1800.00 sec; ∞	1.20 sec	Dead time after 1phase faults
3454	1.AR Tdead 2Fit	Auto Reclose		0.01 .. 1800.00 sec; ∞	1.20 sec	Dead time after 2phase faults
3455	1.AR Tdead 3Fit	Auto Reclose		0.01 .. 1800.00 sec; ∞	0.50 sec	Dead time after 3phase faults
3456	1.AR Tdead1Trip	Auto Reclose		0.01 .. 1800.00 sec; ∞	1.20 sec	Dead time after 1pole trip
3457	1.AR Tdead3Trip	Auto Reclose		0.01 .. 1800.00 sec; ∞	0.50 sec	Dead time after 3pole trip
3458	1.AR: Tdead EV.	Auto Reclose		0.01 .. 1800.00 sec	1.20 sec	Dead time after evolving fault
3459	1.AR: CB? CLOSE	Auto Reclose		YES NO	NO	CB ready interrogation before re-closing
3460	1.AR SynRequest	Auto Reclose		YES NO	NO	Request for synchro-check after 3pole AR
3461	2.AR: START	Auto Reclose		YES NO	NO	AR start allowed in this cycle
3462	2.AR: T-ACTION	Auto Reclose		0.01 .. 300.00 sec; ∞	0.20 sec	Action time
3464	2.AR Tdead 1Fit	Auto Reclose		0.01 .. 1800.00 sec; ∞	1.20 sec	Dead time after 1phase faults
3465	2.AR Tdead 2Fit	Auto Reclose		0.01 .. 1800.00 sec; ∞	1.20 sec	Dead time after 2phase faults
3466	2.AR Tdead 3Fit	Auto Reclose		0.01 .. 1800.00 sec; ∞	0.50 sec	Dead time after 3phase faults
3467	2.AR Tdead1Trip	Auto Reclose		0.01 .. 1800.00 sec; ∞	∞ sec	Dead time after 1pole trip
3468	2.AR Tdead3Trip	Auto Reclose		0.01 .. 1800.00 sec; ∞	0.50 sec	Dead time after 3pole trip
3469	2.AR: Tdead EV.	Auto Reclose		0.01 .. 1800.00 sec	1.20 sec	Dead time after evolving fault
3470	2.AR: CB? CLOSE	Auto Reclose		YES NO	NO	CB ready interrogation before re-closing
3471	2.AR SynRequest	Auto Reclose		YES NO	NO	Request for synchro-check after 3pole AR
3472	3.AR: START	Auto Reclose		YES NO	NO	AR start allowed in this cycle
3473	3.AR: T-ACTION	Auto Reclose		0.01 .. 300.00 sec; ∞	0.20 sec	Action time
3475	3.AR Tdead 1Fit	Auto Reclose		0.01 .. 1800.00 sec; ∞	1.20 sec	Dead time after 1phase faults
3476	3.AR Tdead 2Fit	Auto Reclose		0.01 .. 1800.00 sec; ∞	1.20 sec	Dead time after 2phase faults
3477	3.AR Tdead 3Fit	Auto Reclose		0.01 .. 1800.00 sec; ∞	0.50 sec	Dead time after 3phase faults
3478	3.AR Tdead1Trip	Auto Reclose		0.01 .. 1800.00 sec; ∞	∞ sec	Dead time after 1pole trip
3479	3.AR Tdead3Trip	Auto Reclose		0.01 .. 1800.00 sec; ∞	0.50 sec	Dead time after 3pole trip
3480	3.AR: Tdead EV.	Auto Reclose		0.01 .. 1800.00 sec	1.20 sec	Dead time after evolving fault
3481	3.AR: CB? CLOSE	Auto Reclose		YES NO	NO	CB ready interrogation before re-closing
3482	3.AR SynRequest	Auto Reclose		YES NO	NO	Request for synchro-check after 3pole AR
3483	4.AR: START	Auto Reclose		YES NO	NO	AR start allowed in this cycle
3484	4.AR: T-ACTION	Auto Reclose		0.01 .. 300.00 sec; ∞	0.20 sec	Action time
3486	4.AR Tdead 1Fit	Auto Reclose		0.01 .. 1800.00 sec; ∞	1.20 sec	Dead time after 1phase faults
3487	4.AR Tdead 2Fit	Auto Reclose		0.01 .. 1800.00 sec; ∞	1.20 sec	Dead time after 2phase faults
3488	4.AR Tdead 3Fit	Auto Reclose		0.01 .. 1800.00 sec; ∞	0.50 sec	Dead time after 3phase faults
3489	4.AR Tdead1Trip	Auto Reclose		0.01 .. 1800.00 sec; ∞	∞ sec	Dead time after 1pole trip
3490	4.AR Tdead3Trip	Auto Reclose		0.01 .. 1800.00 sec; ∞	0.50 sec	Dead time after 3pole trip
3491	4.AR: Tdead EV.	Auto Reclose		0.01 .. 1800.00 sec	1.20 sec	Dead time after evolving fault
3492	4.AR: CB? CLOSE	Auto Reclose		YES NO	NO	CB ready interrogation before re-closing
3493	4.AR SynRequest	Auto Reclose		YES NO	NO	Request for synchro-check after 3pole AR
3501	FCT Synchronism	Sync. Check		ON OFF ON:w/o CloseCmd	ON	Synchronism and Voltage Check function
3502	Dead Volt. Thr.	Sync. Check		1 .. 100 V	5 V	Voltage threshold dead line / bus

Addr.	Parameter	Function	C	Setting Options	Default Setting	Comments
3503	Live Volt. Thr.	Sync. Check		20 .. 125 V	90 V	Voltage threshold live line / bus
3504	Umax	Sync. Check		20 .. 140 V	110 V	Maximum permissible voltage
3507	T-SYN. DURATION	Sync. Check		0.01 .. 600.00 sec; ∞	1.00 sec	Maximum duration of synchronism-check
3508	T SYNC-STAB	Sync. Check		0.00 .. 30.00 sec	0.00 sec	Synchronous condition stability timer
3509	SyncCB	Sync. Check		(Setting options depend on configuration)	None	Synchronizable circuit breaker
3510	Op.mode with AR	Sync. Check		with T-CB close w/o T-CB close	w/o T-CB close	Operating mode with AR
3511	AR maxVolt.Diff	Sync. Check		1.0 .. 60.0 V	2.0 V	Maximum voltage difference
3512	AR maxFreq.Diff	Sync. Check		0.03 .. 2.00 Hz	0.10 Hz	Maximum frequency difference
3513	AR maxAngleDiff	Sync. Check		2 .. 80 °	10 °	Maximum angle difference
3515A	AR SYNC-CHECK	Sync. Check		YES NO	YES	AR at Usy2>, Usy1>, and Synchr.
3516	AR Usy1<Usy2>	Sync. Check		YES NO	NO	AR at Usy1< and Usy2>
3517	AR Usy1>Usy2<	Sync. Check		YES NO	NO	AR at Usy1> and Usy2<
3518	AR Usy1<Usy2<	Sync. Check		YES NO	NO	AR at Usy1< and Usy2<
3519	AR OVERRIDE	Sync. Check		YES NO	NO	Override of any check before AR
3530	Op.mode with MC	Sync. Check		with T-CB close w/o T-CB close	w/o T-CB close	Operating mode with Man.CI
3531	MC maxVolt.Diff	Sync. Check		1.0 .. 60.0 V	2.0 V	Maximum voltage difference
3532	MC maxFreq.Diff	Sync. Check		0.03 .. 2.00 Hz	0.10 Hz	Maximum frequency difference
3533	MC maxAngleDiff	Sync. Check		2 .. 80 °	10 °	Maximum angle difference
3535A	MC SYNCHR	Sync. Check		YES NO	YES	Manual Close at Usy2>, Usy1>, and Synchr
3536	MC Usy1< Usy2>	Sync. Check		YES NO	NO	Manual Close at Usy1< and Usy2>
3537	MC Usy1> Usy2<	Sync. Check		YES NO	NO	Manual Close at Usy1> and Usy2<
3538	MC Usy1< Usy2<	Sync. Check		YES NO	NO	Manual Close at Usy1< and Usy2<
3539	MC OVERRIDE	Sync. Check		YES NO	NO	Override of any check before Man.CI
3601	O/U FREQ. f1	Frequency Prot.		ON: Alarm only ON: with Trip OFF	ON: Alarm only	Over/Under Frequency Protection stage f1
3602	f1 PICKUP	Frequency Prot.		45.50 .. 54.50 Hz	49.50 Hz	f1 Pickup
3603	f1 PICKUP	Frequency Prot.		55.50 .. 64.50 Hz	59.50 Hz	f1 Pickup
3604	T f1	Frequency Prot.		0.00 .. 600.00 sec	60.00 sec	T f1 Time Delay
3611	O/U FREQ. f2	Frequency Prot.		ON: Alarm only ON: with Trip OFF	ON: Alarm only	Over/Under Frequency Protection stage f2
3612	f2 PICKUP	Frequency Prot.		45.50 .. 54.50 Hz	49.00 Hz	f2 Pickup
3613	f2 PICKUP	Frequency Prot.		55.50 .. 64.50 Hz	57.00 Hz	f2 Pickup
3614	T f2	Frequency Prot.		0.00 .. 600.00 sec	30.00 sec	T f2 Time Delay
3621	O/U FREQ. f3	Frequency Prot.		ON: Alarm only ON: with Trip OFF	ON: Alarm only	Over/Under Frequency Protection stage f3
3622	f3 PICKUP	Frequency Prot.		45.50 .. 54.50 Hz	47.50 Hz	f3 Pickup
3623	f3 PICKUP	Frequency Prot.		55.50 .. 64.50 Hz	59.50 Hz	f3 Pickup
3624	T f3	Frequency Prot.		0.00 .. 600.00 sec	3.00 sec	T f3 Time Delay
3631	O/U FREQ. f4	Frequency Prot.		ON: Alarm only ON: with Trip OFF	ON: Alarm only	Over/Under Frequency Protection stage f4
3632	f4 PICKUP	Frequency Prot.		45.50 .. 54.50 Hz	51.00 Hz	f4 Pickup
3633	f4 PICKUP	Frequency Prot.		55.50 .. 64.50 Hz	62.00 Hz	f4 Pickup
3634	T f4	Frequency Prot.		0.00 .. 600.00 sec	30.00 sec	T f4 Time Delay

Addr.	Parameter	Function	C	Setting Options	Default Setting	Comments
3701	Uph-e(>)	Voltage Prot.		OFF Alarm Only ON U>Alarm U>>Trip	OFF	Operating mode Uph-e overvoltage prot.
3702	Uph-e>	Voltage Prot.		1.0 .. 170.0 V; ∞	85.0 V	Uph-e> Pickup
3703	T Uph-e>	Voltage Prot.		0.00 .. 100.00 sec; ∞	2.00 sec	T Uph-e> Time Delay
3704	Uph-e>>	Voltage Prot.		1.0 .. 170.0 V; ∞	100.0 V	Uph-e>> Pickup
3705	T Uph-e>>	Voltage Prot.		0.00 .. 100.00 sec; ∞	1.00 sec	T Uph-e>> Time Delay
3709A	Uph-e(>) RESET	Voltage Prot.		0.30 .. 0.99	0.98	Uph-e(>) Reset ratio
3711	Uph-ph(>)	Voltage Prot.		OFF Alarm Only ON U>Alarm U>>Trip	OFF	Operating mode Uph-ph overvoltage prot.
3712	Uph-ph>	Voltage Prot.		2.0 .. 220.0 V; ∞	150.0 V	Uph-ph> Pickup
3713	T Uph-ph>	Voltage Prot.		0.00 .. 100.00 sec; ∞	2.00 sec	T Uph-ph> Time Delay
3714	Uph-ph>>	Voltage Prot.		2.0 .. 220.0 V; ∞	175.0 V	Uph-ph>> Pickup
3715	T Uph-ph>>	Voltage Prot.		0.00 .. 100.00 sec; ∞	1.00 sec	T Uph-ph>> Time Delay
3719A	Uphph(>) RESET	Voltage Prot.		0.30 .. 0.99	0.98	Uph-ph(>) Reset ratio
3721	3U0>(>) (or Ux)	Voltage Prot.		OFF Alarm Only ON U>Alarm U>>Trip	OFF	Operating mode 3U0 (or Ux) overvoltage
3722	3U0>	Voltage Prot.		1.0 .. 220.0 V; ∞	30.0 V	3U0> Pickup (or Ux>)
3723	T 3U0>	Voltage Prot.		0.00 .. 100.00 sec; ∞	2.00 sec	T 3U0> Time Delay (or T Ux>)
3724	3U0>>	Voltage Prot.		1.0 .. 220.0 V; ∞	50.0 V	3U0>> Pickup (or Ux>>)
3725	T 3U0>>	Voltage Prot.		0.00 .. 100.00 sec; ∞	1.00 sec	T 3U0>> Time Delay (or T Ux>>)
3728A	3U0>(>) Stabil.	Voltage Prot.		ON OFF	ON	3U0>(>): Stabilization 3U0-Measurement
3729A	3U0>(>) RESET	Voltage Prot.		0.30 .. 0.99	0.95	3U0>(>) Reset ratio (or Ux)
3731	U1>(>)	Voltage Prot.		OFF Alarm Only ON U>Alarm U>>Trip	OFF	Operating mode U1 overvoltage prot.
3732	U1>	Voltage Prot.		2.0 .. 220.0 V; ∞	150.0 V	U1> Pickup
3733	T U1>	Voltage Prot.		0.00 .. 100.00 sec; ∞	2.00 sec	T U1> Time Delay
3734	U1>>	Voltage Prot.		2.0 .. 220.0 V; ∞	175.0 V	U1>> Pickup
3735	T U1>>	Voltage Prot.		0.00 .. 100.00 sec; ∞	1.00 sec	T U1>> Time Delay
3736	U1> Compound	Voltage Prot.		OFF ON	OFF	U1> with Compounding
3737	U1>> Compound	Voltage Prot.		OFF ON	OFF	U1>> with Compounding
3739A	U1>(>) RESET	Voltage Prot.		0.30 .. 0.99	0.98	U1>(>) Reset ratio
3741	U2>(>)	Voltage Prot.		OFF Alarm Only ON U>Alarm U>>Trip	OFF	Operating mode U2 overvoltage prot.
3742	U2>	Voltage Prot.		2.0 .. 220.0 V; ∞	30.0 V	U2> Pickup
3743	T U2>	Voltage Prot.		0.00 .. 100.00 sec; ∞	2.00 sec	T U2> Time Delay
3744	U2>>	Voltage Prot.		2.0 .. 220.0 V; ∞	50.0 V	U2>> Pickup
3745	T U2>>	Voltage Prot.		0.00 .. 100.00 sec; ∞	1.00 sec	T U2>> Time Delay
3749A	U2>(>) RESET	Voltage Prot.		0.30 .. 0.99	0.98	U2>(>) Reset ratio
3751	Uph-e(<)	Voltage Prot.		OFF Alarm Only ON U<Alarm U<<Trip	OFF	Operating mode Uph-e undervoltage prot.
3752	Uph-e<	Voltage Prot.		1.0 .. 100.0 V; 0	30.0 V	Uph-e< Pickup
3753	T Uph-e<	Voltage Prot.		0.00 .. 100.00 sec; ∞	2.00 sec	T Uph-e< Time Delay
3754	Uph-e<<	Voltage Prot.		1.0 .. 100.0 V; 0	10.0 V	Uph-e<< Pickup
3755	T Uph-e<<	Voltage Prot.		0.00 .. 100.00 sec; ∞	1.00 sec	T Uph-e<< Time Delay
3758	CURR.SUP. Uphe<	Voltage Prot.		ON OFF	ON	Current supervision (Uph-e)
3759A	Uph-e(<) RESET	Voltage Prot.		1.01 .. 1.20	1.05	Uph-e(<) Reset ratio

Addr.	Parameter	Function	C	Setting Options	Default Setting	Comments
3761	Uph-ph<(<)	Voltage Prot.		OFF Alarm Only ON U<Alarm U<<Trip	OFF	Operating mode Uph-ph under-voltage prot.
3762	Uph-ph<	Voltage Prot.		1.0 .. 175.0 V; 0	50.0 V	Uph-ph< Pickup
3763	T Uph-ph<	Voltage Prot.		0.00 .. 100.00 sec; ∞	2.00 sec	T Uph-ph< Time Delay
3764	Uph-ph<<	Voltage Prot.		1.0 .. 175.0 V; 0	17.0 V	Uph-ph<< Pickup
3765	T Uphph<<	Voltage Prot.		0.00 .. 100.00 sec; ∞	1.00 sec	T Uph-ph<< Time Delay
3768	CURR.SUP.Uphph<	Voltage Prot.		ON OFF	ON	Current supervision (Uph-ph)
3769A	Uphph<(<) RESET	Voltage Prot.		1.01 .. 1.20	1.05	Uph-ph<(<) Reset ratio
3771	U1<(<)	Voltage Prot.		OFF Alarm Only ON U<Alarm U<<Trip	OFF	Operating mode U1 undervoltage prot.
3772	U1<	Voltage Prot.		1.0 .. 100.0 V; 0	30.0 V	U1< Pickup
3773	T U1<	Voltage Prot.		0.00 .. 100.00 sec; ∞	2.00 sec	T U1< Time Delay
3774	U1<<	Voltage Prot.		1.0 .. 100.0 V; 0	10.0 V	U1<< Pickup
3775	T U1<<	Voltage Prot.		0.00 .. 100.00 sec; ∞	1.00 sec	T U1<< Time Delay
3778	CURR.SUP.U1<	Voltage Prot.		ON OFF	ON	Current supervision (U1)
3779A	U1<(<) RESET	Voltage Prot.		1.01 .. 1.20	1.05	U1<(<) Reset ratio
3802	START	Fault Locator		Pickup TRIP	Pickup	Start fault locator with
3805	Paral.Line Comp	Fault Locator		NO YES	YES	Mutual coupling parall.line compensation
3806	Load Compensat.	Fault Locator		NO YES	NO	Load Compensation
3807	two ended	Fault Locator		ON OFF	ON	two ended fault location
3811	Tmax OUTPUT BCD	Fault Locator		0.10 .. 180.00 sec	0.30 sec	Maximum output time via BCD
3901	FCT BreakerFail	Breaker Failure		ON OFF	ON	Breaker Failure Protection
3902	I> BF	Breaker Failure	1A	0.05 .. 20.00 A	0.10 A	Pick-up threshold I>
			5A	0.25 .. 100.00 A	0.50 A	
3903	1p-RETRIP (T1)	Breaker Failure		NO YES	YES	1pole retrip with stage T1 (local trip)
3904	T1-1pole	Breaker Failure		0.00 .. 30.00 sec; ∞	0.00 sec	T1, Delay after 1pole start (local trip)
3905	T1-3pole	Breaker Failure		0.00 .. 30.00 sec; ∞	0.00 sec	T1, Delay after 3pole start (local trip)
3906	T2	Breaker Failure		0.00 .. 30.00 sec; ∞	0.15 sec	T2, Delay of 2nd stage (busbar trip)
3907	T3-BkrDefective	Breaker Failure		0.00 .. 30.00 sec; ∞	0.00 sec	T3, Delay for start with defective bkr.
3908	Trip BkrDefect.	Breaker Failure		NO with T1-trip with T2-trip w/ T1/T2-trip	NO	Trip output selection with defective bkr
3909	Chk BRK CONTACT	Breaker Failure		NO YES	YES	Check Breaker contacts
3912	3I0> BF	Breaker Failure	1A	0.05 .. 20.00 A	0.10 A	Pick-up threshold 3I0>
			5A	0.25 .. 100.00 A	0.50 A	
3921	End Flt. stage	Breaker Failure		ON OFF	OFF	End fault protection
3922	T-EndFault	Breaker Failure		0.00 .. 30.00 sec; ∞	2.00 sec	Trip delay of end fault protection
3931	PoleDiscrepancy	Breaker Failure		ON OFF	OFF	Pole Discrepancy supervision
3932	T-PoleDiscrep.	Breaker Failure		0.00 .. 30.00 sec; ∞	2.00 sec	Trip delay with pole discrepancy
4001	FCT TripSuperv.	TripCirc.Superv		ON OFF	OFF	TRIP Circuit Supervision is
4002	No. of BI	TripCirc.Superv		1 .. 2	2	Number of Binary Inputs per trip circuit

Addr.	Parameter	Function	C	Setting Options	Default Setting	Comments
4003	Alarm Delay	TripCirc.Superv		1 .. 30 sec	2 sec	Delay Time for alarm
4101	REF PROT.	REF		OFF ON	OFF	Restricted Earth Fault Protection
4111	I-REF>	REF	1A	0.05 .. 2.00 A	0.15 A	Pick up value I REF>
			5A	0.25 .. 10.00 A	0.75 A	
4112A	T I-REF>	REF		0.00 .. 60.00 sec; ∞	0.00 sec	T I-REF> Time Delay
4113A	SLOPE	REF		0.00 .. 0.95	0.00	Slope of Charac. I-REF> = f(I-SUM)
4201	Ther. OVERLOAD	Therm. Overload		OFF ON Alarm Only	OFF	Thermal overload protection
4202	K-FACTOR	Therm. Overload		0.10 .. 4.00	1.10	K-Factor
4203	TIME CONSTANT	Therm. Overload		1.0 .. 999.9 min	100.0 min	Time Constant
4204	Θ ALARM	Therm. Overload		50 .. 100 %	90 %	Thermal Alarm Stage
4205	I ALARM	Therm. Overload	1A	0.10 .. 4.00 A	1.00 A	Current Overload Alarm Setpoint
			5A	0.50 .. 20.00 A	5.00 A	
4206	CALC. METHOD	Therm. Overload		Θ max Average Θ Θ from I _{max}	Θ max	Method of Acquiring Temperature
4501	STATE PROT I 1	Prot. Interface		ON OFF	ON	State of protection interface 1
4502	CONNEC. 1 OVER	Prot. Interface		F.optic direct Com conv 64 kB Com conv 128 kB Com conv 512 kB	F.optic direct	Connection 1 over
4505A	PROT 1 T-DELAY	Prot. Interface		0.1 .. 30.0 ms	30.0 ms	Prot 1: Maximal permissible delay time
4506A	PROT 1 UNSYM.	Prot. Interface		0.000 .. 3.000 ms	0.100 ms	Prot 1: Diff. in send and receive time
4509	T-DATA DISTURB	Prot. Interface		0.05 .. 2.00 sec	0.10 sec	Time delay for data disturbance alarm
4510	T-DATAFAIL	Prot. Interface		0.0 .. 60.0 sec	6.0 sec	Time del for transmission failure alarm
4511	PI1 SYNCMODE	Prot. Interface		TEL and GPS TEL or GPS GPS SYNC OFF	TEL and GPS	PI1 Synchronizationmode
4512	Td ResetRemote	Prot. Interface		0.00 .. 300.00 sec; ∞	0.00 sec	Remote signal RESET DELAY for comm.fail
4513A	PROT1 max ERROR	Prot. Interface		0.5 .. 20.0 %	1.0 %	Prot 1: Maximal permissible error rate
4515A	PI1 BLOCK UNSYM	Prot. Interface		YES NO	YES	Prot.1: Block. due to unsym. delay time
4601	STATE PROT I 2	Prot. Interface		ON OFF	ON	State of protection interface 2
4602	CONNEC. 2 OVER	Prot. Interface		F.optic direct Com conv 64 kB Com conv 128 kB Com conv 512 kB	F.optic direct	Connection 2 over
4605A	PROT 2 T-DELAY	Prot. Interface		0.1 .. 30.0 ms	30.0 ms	Prot 2: Maximal permissible delay time
4606A	PROT 2 UNSYM.	Prot. Interface		0.000 .. 3.000 ms	0.100 ms	Prot 2: Diff. in send and receive time
4611	PI2 SYNCMODE	Prot. Interface		TEL and GPS TEL or GPS GPS SYNC OFF	TEL and GPS	PI2 Synchronizationmode
4613A	PROT2 max ERROR	Prot. Interface		0.5 .. 20.0 %	1.0 %	Prot 1: Maximal permissible error rate
4615A	PI2 BLOCK UNSYM	Prot. Interface		YES NO	YES	Prot.2: Block. due to unsym. delay time
4701	ID OF RELAY 1	Diff.-Topo		1 .. 65534	1	Identification number of relay 1
4702	ID OF RELAY 2	Diff.-Topo		1 .. 65534	2	Identification number of relay 2
4703	ID OF RELAY 3	Diff.-Topo		1 .. 65534	3	Identification number of relay 3
4704	ID OF RELAY 4	Diff.-Topo		1 .. 65534	4	Identification number of relay 4
4705	ID OF RELAY 5	Diff.-Topo		1 .. 65534	5	Identification number of relay 5

Addr.	Parameter	Function	C	Setting Options	Default Setting	Comments
4706	ID OF RELAY 6	Diff.-Topo		1 .. 65534	6	Identification number of relay 6
4710	LOCAL RELAY	Diff.-Topo		relay 1 relay 2 relay 3 relay 4 relay 5 relay 6	relay 1	Local relay is
4801	GPS-SYNC.	Prot. Interface		ON OFF	OFF	GPS synchronization
4803A	TD GPS FAILED	Prot. Interface		0.5 .. 60.0 sec	2.1 sec	Delay time for local GPS-pulse loss
6001	S1: Line angle	P.System Data 2		30 .. 89 °	85 °	S1: Line angle
6002	S1: x'	P.System Data 2	1A	0.0050 .. 9.5000 Ω/km	0.1500 Ω/km	S1: feeder reactance per km: x'
			5A	0.0010 .. 1.9000 Ω/km	0.0300 Ω/km	
6002	S1: x'	P.System Data 2	1A	0.0050 .. 15.0000 Ω/mi	0.2420 Ω/mi	S1: feeder reactance per mile: x'
			5A	0.0010 .. 3.0000 Ω/mi	0.0484 Ω/mi	
6003	S1: c'	P.System Data 2	1A	0.000 .. 100.000 μF/km	0.010 μF/km	S1: feeder capacitance c' in μF/km
			5A	0.000 .. 500.000 μF/km	0.050 μF/km	
6003	S1: c'	P.System Data 2	1A	0.000 .. 160.000 μF/mi	0.016 μF/mi	S1: feeder capacitance c' in μF/mile
			5A	0.000 .. 800.000 μF/mi	0.080 μF/mi	
6004	S1: Line length	P.System Data 2		0.1 .. 1000.0 km	100.0 km	S1: Line length in kilometer
6004	S1: line length	P.System Data 2		0.1 .. 650.0 Miles	62.1 Miles	S1: Line length in kilometer
6008	S1: center ph.	P.System Data 2		unknown/sym. Phase 1 Phase 2 Phase 3	unknown/sym.	S1: center phase
6009	S1: XE/XL	P.System Data 2		-0.33 .. 10.00	1.00	S1: Zero seq. compensating factor XE/XL
6010	S1: RE/RL	P.System Data 2		-0.33 .. 10.00	1.00	S1: Zero seq. compensating factor RE/RL
6011	S1: K0	P.System Data 2		0.000 .. 4.000	1.000	S1: Zero seq. compensating factor K0
6012	S1: angle K0	P.System Data 2		-180.00 .. 180.00 °	0.00 °	S1: Zero seq. compensating angle of K0
6021	S2: Line angle	P.System Data 2		30 .. 89 °	85 °	S2: Line angle
6022	S2: x'	P.System Data 2	1A	0.0050 .. 9.5000 Ω/km	0.1500 Ω/km	S2: feeder reactance per km: x'
			5A	0.0010 .. 1.9000 Ω/km	0.0300 Ω/km	
6022	S2: x'	P.System Data 2	1A	0.0050 .. 15.0000 Ω/mi	0.2420 Ω/mi	S2: feeder reactance per mile: x'
			5A	0.0010 .. 3.0000 Ω/mi	0.0484 Ω/mi	
6023	S2: c'	P.System Data 2	1A	0.000 .. 100.000 μF/km	0.010 μF/km	S2: feeder capacitance c' in μF/km
			5A	0.000 .. 500.000 μF/km	0.050 μF/km	
6023	S2: c'	P.System Data 2	1A	0.000 .. 160.000 μF/mi	0.016 μF/mi	S2: feeder capacitance c' in μF/mile
			5A	0.000 .. 800.000 μF/mi	0.080 μF/mi	
6024	S2: Line length	P.System Data 2		0.1 .. 1000.0 km	100.0 km	S2: Line length in kilometer
6024	S2: line length	P.System Data 2		0.1 .. 650.0 Miles	62.1 Miles	S2: line length in miles
6028	S2: center ph.	P.System Data 2		unknown/sym. Phase 1 Phase 2 Phase 3	unknown/sym.	S2: center phase
6029	S2: XE/XL	P.System Data 2		-0.33 .. 10.00	1.00	S2: Zero seq. compensating factor XE/XL
6030	S2: RE/RL	P.System Data 2		-0.33 .. 10.00	1.00	S2: Zero seq. compensating factor RE/RL
6031	S2: K0	P.System Data 2		0.000 .. 4.000	1.000	S2: Zero seq. compensating factor K0
6032	S2: angle K0	P.System Data 2		-180.00 .. 180.00 °	0.00 °	S2: Zero seq. compensating angle of K0
6041	S3: Line angle	P.System Data 2		30 .. 89 °	85 °	S3: Line angle
6042	S3: x'	P.System Data 2	1A	0.0050 .. 9.5000 Ω/km	0.1500 Ω/km	S3: feeder reactance per km: x'
			5A	0.0010 .. 1.9000 Ω/km	0.0300 Ω/km	

Addr.	Parameter	Function	C	Setting Options	Default Setting	Comments
6042	S3: x'	P.System Data 2	1A	0.0050 .. 15.0000 Ω /mi	0.2420 Ω /mi	S3: feeder reactance per mile: x'
			5A	0.0010 .. 3.0000 Ω /mi	0.0484 Ω /mi	
6043	S3: c'	P.System Data 2	1A	0.000 .. 100.000 μ F/km	0.010 μ F/km	S3: feeder capacitance c' in μ F/km
			5A	0.000 .. 500.000 μ F/km	0.050 μ F/km	
6043	S3: c'	P.System Data 2	1A	0.000 .. 160.000 μ F/mi	0.016 μ F/mi	S3: feeder capacitance c' in μ F/mile
			5A	0.000 .. 800.000 μ F/mi	0.080 μ F/mi	
6044	S3: Line length	P.System Data 2		0.1 .. 1000.0 km	100.0 km	S3: Line length in kilometer
6044	S3: line length	P.System Data 2		0.1 .. 650.0 Miles	62.1 Miles	S3: line length in miles
6048	S3: center ph.	P.System Data 2		unknown/sym. Phase 1 Phase 2 Phase 3	unknown/sym.	S3: center phase
6049	S3: XE/XL	P.System Data 2		-0.33 .. 10.00	1.00	S3: Zero seq. compensating factor XE/XL
6050	S3: RE/RL	P.System Data 2		-0.33 .. 10.00	1.00	S3: Zero seq. compensating factor RE/RL
6051	S3: K0	P.System Data 2		0.000 .. 4.000	1.000	S3: Zero seq. compensating factor K0
6052	S3: angle K0	P.System Data 2		-180.00 .. 180.00 °	0.00 °	S3: Zero seq. compensating angle of K0

A.8 Information List

Indications for IEC 60 870-5-103 are always reported ON / OFF if they are subject to general interrogation for IEC 60 870-5-103. If not, they are reported only as ON.

The function type of Line Protection 7SD5 regarding IEC 60 870-5-103 refers to as "compatible function type 192" (Line Differential Protection).

New user-defined indications or such newly allocated to IEC 60 870-5-103 are set to ON / OFF and subjected to general interrogation if the information type is not a spontaneous event („...Ev"). Further information on indications can be found in detail in the SIPROTEC 4 System Description, Order No. E50417-H1100-C151.

In columns „Event Log“, „Trip Log“ and „Ground Fault Log“ the following applies:

UPPER CASE NOTATION "ON/OFF": definitely set, not allocatable

lower case notation "on/off": preset, allocatable

*: not preset, allocatable

<blank>: neither preset nor allocatable

In column „Marked in Oscill.Record“ the following applies:

UPPER CASE NOTATION "M": definitely set, not allocatable

lower case notation "m": preset, allocatable

*: not preset, allocatable

<blank>: neither preset nor allocatable

No.	Description	Function	Type of Information	Log Buffers				Configurable in Matrix					IEC 60870-5-103			
				Event Log ON/OFF	Trip (Fault) Log On/Off	Ground Fault Log ON/OFF	Marked in Oscill. Record	LED	Binary Input	Function Key	Relay	Chatter Suppression	Type	Information Number	Data Unit	General Interrogation
-	Test mode (Test mode)	Device	IntSP	ON OFF	*		*	LED			BO		192	21	1	Yes
-	Stop data transmission (Data Stop)	Device	IntSP	ON OFF	*		*	LED			BO		192	20	1	Yes
-	Unlock data transmission via BI (UnlockDT)	Device	IntSP				*									
-	Reset LED (Reset LED)	Device	IntSP	ON	*		*	LED			BO		192	19	1	No
-	Clock Synchronization (Synch-Clock)	Device	IntSP_Ev	*	*		*	LED			BO					
-	>Back Light on (>Light on)	Device	SP	ON OFF	*				BI							
-	Hardware Test Mode (HWTest-Mod)	Device	IntSP	ON OFF	*		*	LED			BO					
-	Error FMS FO 1 (Error FMS1)	Device	OUT	ON OFF	*	*		LED			BO					
-	Error FMS FO 2 (Error FMS2)	Device	OUT	ON OFF	*	*		LED			BO					
-	Disturbance CFC (Distur.CFC)	Device	OUT	on off	*			LED			BO					
-	Breaker OPENED (Brk OPENED)	Device	IntSP	*	*		*	LED			BO					
-	Feeder EARTHED (FdrEARTHED)	Device	IntSP	*	*		*	LED			BO					

No.	Description	Function	Type of Information	Log Buffers				Configurable in Matrix					IEC 60870-5-103			
				Event Log ON/OFF	Trip (Fault) Log On/Off	Ground Fault Log ON/OFF	Marked in Oscill. Record	LED	Binary Input	Function Key	Relay	Chatter Suppression	Type	Information Number	Data Unit	General Interrogation
-	Group A (Group A)	Change Group	IntSP	ON OFF	*		*	LED			BO		192	23	1	Yes
-	Group B (Group B)	Change Group	IntSP	ON OFF	*		*	LED			BO		192	24	1	Yes
-	Group C (Group C)	Change Group	IntSP	ON OFF	*		*	LED			BO		192	25	1	Yes
-	Group D (Group D)	Change Group	IntSP	ON OFF	*		*	LED			BO		192	26	1	Yes
-	Fault Recording Start (FltRecSta)	Osc. Fault Rec.	IntSP	on off	*		m	LED			BO					
-	Reset Minimum and Maximum counter (ResMinMax)	Min/Max meter	IntSP_Ev	ON	*											
-	CB1-TEST trip/close - Only L1 (CB1tst L1)	Testing	-		*											
-	CB1-TEST trip/close - Only L2 (CB1tst L2)	Testing	-		*											
-	CB1-TEST trip/close - Only L3 (CB1tst L3)	Testing	-		*											
-	CB1-TEST trip/close Phases L123 (CB1tst 123)	Testing	-		*											
-	Controlmode REMOTE (Mod-eREMOTE)	Cntrl Authority	IntSP	on off	*			LED			BO					
-	Control Authority (Cntrl Auth)	Cntrl Authority	IntSP	on off	*			LED			BO		101	85	1	Yes
-	Controlmode LOCAL (ModeLOCAL)	Cntrl Authority	IntSP	on off	*			LED			BO		101	86	1	Yes
-	Breaker (Breaker)	Control Device	CF_D12	on off	*						BO		240	160	20	
-	Breaker (Breaker)	Control Device	DP	on off	*				BI			CB	240	160	1	Yes
-	Disconnect Switch (Disc.Swit.)	Control Device	CF_D2	on off	*						BO		240	161	20	
-	Disconnect Switch (Disc.Swit.)	Control Device	DP	on off	*				BI			CB	240	161	1	Yes
-	Earth Switch (EarthSwit)	Control Device	CF_D2	on off	*						BO		240	164	20	
-	Earth Switch (EarthSwit)	Control Device	DP	on off	*				BI			CB	240	164	1	Yes
-	Interlocking: Breaker Open (Brk Open)	Control Device	IntSP	*	*		*									
-	Interlocking: Breaker Close (Brk Close)	Control Device	IntSP	*	*		*									
-	Interlocking: Disconnect switch Open (Disc.Open)	Control Device	IntSP	*	*		*									
-	Interlocking: Disconnect switch Close (Disc.Close)	Control Device	IntSP	*	*		*									
-	Interlocking: Earth switch Open (E Sw Open)	Control Device	IntSP	*	*		*									
-	Interlocking: Earth switch Close (E Sw Cl.)	Control Device	IntSP	*	*		*									
-	Q2 Open/Close (Q2 Op/Cl)	Control Device	CF_D2	on off	*						BO		240	162	20	
-	Q2 Open/Close (Q2 Op/Cl)	Control Device	DP	on off	*				BI			CB	240	162	1	Yes
-	Q9 Open/Close (Q9 Op/Cl)	Control Device	CF_D2	on off	*						BO		240	163	20	

No.	Description	Function	Type of Information	Log Buffers				Configurable in Matrix					IEC 60870-5-103			
				Event Log ON/OFF	Trip (Fault) Log On/Off	Ground Fault Log ON/OFF	Marked in Oscill. Record	LED	Binary Input	Function Key	Relay	Chatter Suppression	Type	Information Number	Data Unit	General Interrogation
-	Q9 Open/Close (Q9 Op/Ci)	Control Device	DP	on off	*				BI			CB	240	163	1	Yes
-	Fan ON/OFF (Fan ON/OFF)	Control Device	CF_D2	on off	*						BO		240	175	20	
-	Fan ON/OFF (Fan ON/OFF)	Control Device	DP	on off	*				BI			CB	240	175	1	Yes
-	>Cabinet door open (>Door open)	Process Data	SP	on off	*		*	LED	BI		BO	CB	101	1	1	Yes
-	>CB waiting for Spring charged (>CB wait)	Process Data	SP	on off	*		*	LED	BI		BO	CB	101	2	1	Yes
-	>Error Motor Voltage (>Err Mot U)	Process Data	SP	on off	*		*	LED	BI		BO	CB	240	181	1	Yes
-	>Error Control Voltage (>ErrCntrlU)	Process Data	SP	on off	*		*	LED	BI		BO	CB	240	182	1	Yes
-	>SF6-Loss (>SF6-Loss)	Process Data	SP	on off	*		*	LED	BI		BO	CB	240	183	1	Yes
-	>Error Meter (>Err Meter)	Process Data	SP	on off	*		*	LED	BI		BO	CB	240	184	1	Yes
-	>Transformer Temperature (>Tx Temp.)	Process Data	SP	on off	*		*	LED	BI		BO	CB	240	185	1	Yes
-	>Transformer Danger (>Tx Danger)	Process Data	SP	on off	*		*	LED	BI		BO	CB	240	186	1	Yes
-	Reset meter (Meter res)	Energy	IntSP_Ev	ON	*											
-	Error Systeminterface (SysIntErr.)	Protocol	IntSP	on off				LED			BO					
-	Threshold Value 1 (ThreshVal1)	Thresh.-Switch	IntSP	ON OFF	*		*	LED	BI	FC TN	BO	CB				
3	>Synchronize Internal Real Time Clock (>Time Synch)	Device	SP	*	*		*	LED	BI		BO					
4	>Trigger Waveform Capture (>Trig.Wave.Cap.)	Osc. Fault Rec.	SP	on	*		m	LED	BI		BO					
5	>Reset LED (>Reset LED)	Device	SP	*	*		*	LED	BI		BO					
7	>Setting Group Select Bit 0 (>Set Group Bit0)	Change Group	SP	*	*		*	LED	BI		BO					
8	>Setting Group Select Bit 1 (>Set Group Bit1)	Change Group	SP	*	*		*	LED	BI		BO					
009.0100	Failure EN100 Modul (Failure Modul)	EN100-Modul 1	IntSP	on off			*	LED			BO					
009.0101	Failure EN100 Link Channel 1 (Ch1) (Fail Ch1)	EN100-Modul 1	IntSP	on off			*	LED			BO					
009.0102	Failure EN100 Link Channel 2 (Ch2) (Fail Ch2)	EN100-Modul 1	IntSP	on off			*	LED			BO					
11	>User defined annunciation 1 (>Annunc. 1)	Device	SP	*	*	*	*	LED	BI		BO		192	27	1	Yes
12	>User defined annunciation 2 (>Annunc. 2)	Device	SP	*	*	*	*	LED	BI		BO		192	28	1	Yes
13	>User defined annunciation 3 (>Annunc. 3)	Device	SP	*	*	*	*	LED	BI		BO		192	29	1	Yes
14	>User defined annunciation 4 (>Annunc. 4)	Device	SP	*	*	*	*	LED	BI		BO		192	30	1	Yes
15	>Test mode (>Test mode)	Device	SP	ON OFF	*		*	LED	BI		BO		135	53	1	Yes
16	>Stop data transmission (>DataStop)	Device	SP	*	*		*	LED	BI		BO		135	54	1	Yes
51	Device is Operational and Protecting (Device OK)	Device	OUT	ON OFF	*		*	LED			BO		135	81	1	Yes

No.	Description	Function	Type of Information	Log Buffers				Configurable in Matrix					IEC 60870-5-103			
				Event Log ON/OFF	Trip (Fault) Log On/Off	Ground Fault Log ON/OFF	Marked in Oscill. Record	LED	Binary Input	Function Key	Relay	Chatter Suppression	Type	Information Number	Data Unit	General Interrogation
52	At Least 1 Protection Funct. is Active (ProtActive)	Device	IntSP	ON OFF	*		*	LED			BO		192	18	1	Yes
55	Reset Device (Reset Device)	Device	OUT	*	*		*	LED			BO					
56	Initial Start of Device (Initial Start)	Device	OUT	ON	*		*	LED			BO					
60	Reset LED (Reset LED)	Device	OUT_Ev	ON	*		*	LED			BO					
67	Resume (Resume)	Device	OUT	ON	*		*	LED			BO		135	97	1	No
68	Clock Synchronization Error (Clock SyncError)	Device	OUT	ON OFF	*		*	LED			BO					
69	Daylight Saving Time (Day-LightSavTime)	Device	OUT	ON OFF	*		*	LED			BO					
70	Setting calculation is running (Settings Calc.)	Device	OUT	ON OFF	*		*	LED			BO		192	22	1	Yes
71	Settings Check (Settings Check)	Device	OUT	*	*		*	LED			BO					
72	Level-2 change (Level-2 change)	Device	OUT	ON OFF	*		*	LED			BO					
73	Local setting change (Local change)	Device	OUT	*	*											
110	Event lost (Event Lost)	Device	OUT_Ev	ON	*		*	LED			BO		135	130	1	No
113	Flag Lost (Flag Lost)	Device	OUT	ON	*		m	LED			BO		135	136	1	Yes
125	Chatter ON (Chatter ON)	Device	OUT	ON OFF	*		*	LED			BO		135	145	1	Yes
126	Protection ON/OFF (via system port) (ProtON/OFF)	Device	IntSP	ON OFF	*		*	LED			BO					
127	Auto Reclose ON/OFF (via system port) (AR ON/OFF)	Auto Reclose	IntSP	ON OFF	*		*	LED			BO					
128	Teleprot. ON/OFF (via system port) (TelepONoff)	Device	IntSP	ON OFF	*		*	LED			BO					
130	Load angle Phi(PQ Positive sequence) (φ (PQ Pos. Seq.))	Measurem.Su-perv	OUT	*	*		*	LED			BO					
131	Load angle Phi(PQ) blocked (φ (PQ Pos) block)	Measurem.Su-perv	OUT	*	*		*	LED			BO					
132	Setting error: $ \Phi_A - \Phi_B < 3^\circ$ (φ Set wrong)	Measurem.Su-perv	OUT	*	*		*	LED			BO					
140	Error with a summary alarm (Error Sum Alarm)	Device	OUT	ON OFF	*		*	LED			BO		192	47	1	Yes
144	Error 5V (Error 5V)	Device	OUT	ON OFF	*		*	LED			BO		135	164	1	Yes
160	Alarm Summary Event (Alarm Sum Event)	Device	OUT	*	*		*	LED			BO		192	46	1	Yes
161	Failure: General Current Supervision (Fail I Superv.)	Measurem.Su-perv	OUT	*	*		*	LED			BO		192	32	1	Yes
163	Failure: Current Balance (Fail I balance)	Measurem.Su-perv	OUT	ON OFF	*		*	LED			BO		135	183	1	Yes
164	Failure: General Voltage Supervision (Fail U Superv.)	Measurem.Su-perv	OUT	*	*		*	LED			BO		192	33	1	Yes
165	Failure: Voltage summation Phase-Earth (Fail Σ U Ph-E)	Measurem.Su-perv	OUT	ON OFF	*		*	LED			BO		135	184	1	Yes
167	Failure: Voltage Balance (Fail U balance)	Measurem.Su-perv	OUT	ON OFF	*		*	LED			BO		135	186	1	Yes
168	Failure: Voltage absent (Fail U absent)	Measurem.Su-perv	OUT	ON OFF	*		*	LED			BO		135	187	1	Yes
169	VT Fuse Failure (alarm >10s) (VT FuseFail>10s)	Measurem.Su-perv	OUT	ON OFF	*		*	LED			BO		135	188	1	Yes

No.	Description	Function	Type of Information	Log Buffers				Configurable in Matrix					IEC 60870-5-103			
				Event Log ON/OFF	Trip (Fault) Log On/Off	Ground Fault Log ON/OFF	Marked in Oscill. Record	LED	Binary Input	Function Key	Relay	Chatter Suppression	Type	Information Number	Data Unit	General Interrogation
170	VT Fuse Failure (alarm instantaneous) (VT FuseFail)	Measurerm.Su-perv	OUT	ON OFF	*		*	LED			BO					
171	Failure: Phase Sequence (Fail Ph. Seq.)	Measurerm.Su-perv	OUT	ON OFF	*		*	LED			BO		192	35	1	Yes
177	Failure: Battery empty (Fail Battery)	Device	OUT	ON OFF	*		*	LED			BO		135	193	1	Yes
181	Error: A/D converter (Error A/D-conv.)	Device	OUT	ON OFF	*		*	LED			BO		135	178	1	Yes
183	Error Board 1 (Error Board 1)	Device	OUT	ON OFF	*		*	LED			BO		135	171	1	Yes
184	Error Board 2 (Error Board 2)	Device	OUT	ON OFF	*		*	LED			BO		135	172	1	Yes
185	Error Board 3 (Error Board 3)	Device	OUT	ON OFF	*		*	LED			BO		135	173	1	Yes
186	Error Board 4 (Error Board 4)	Device	OUT	ON OFF	*		*	LED			BO		135	174	1	Yes
187	Error Board 5 (Error Board 5)	Device	OUT	ON OFF	*		*	LED			BO		135	175	1	Yes
188	Error Board 6 (Error Board 6)	Device	OUT	ON OFF	*		*	LED			BO		135	176	1	Yes
189	Error Board 7 (Error Board 7)	Device	OUT	ON OFF	*		*	LED			BO		135	177	1	Yes
190	Error Board 0 (Error Board 0)	Device	OUT	ON OFF	*		*	LED			BO		135	210	1	Yes
191	Error: Offset (Error Offset)	Device	OUT	ON OFF	*		*	LED			BO					
192	Error:1A/5Ajumper different from setting (Error1A/5Awrong)	Device	OUT	ON OFF	*		*	LED			BO		135	169	1	Yes
193	Alarm: Analog input adjustment invalid (Alarm adjustm.)	Device	OUT	ON OFF	*		*	LED			BO		135	181	1	Yes
194	Error: Neutral CT different from MLFB (Error neutralCT)	Device	OUT	ON OFF	*		*	LED			BO		135	180	1	Yes
196	Fuse Fail Monitor is switched OFF (Fuse Fail M.OFF)	Measurerm.Su-perv	OUT		*		*	LED			BO		135	196	1	Yes
197	Measurement Supervision is switched OFF (MeasSup OFF)	Measurerm.Su-perv	OUT	ON OFF	*		*	LED			BO		135	197	1	Yes
273	Set Point Phase L1 dmd> (SP. IL1 dmd>)	Set Points(MV)	OUT	on off	*		*	LED			BO					
274	Set Point Phase L2 dmd> (SP. IL2 dmd>)	Set Points(MV)	OUT	on off	*		*	LED			BO					
275	Set Point Phase L3 dmd> (SP. IL3 dmd>)	Set Points(MV)	OUT	on off	*		*	LED			BO					
276	Set Point positive sequence I1dmd> (SP. I1dmd>)	Set Points(MV)	OUT	on off	*		*	LED			BO					
277	Set Point Pdmd > (SP. Pdmd >)	Set Points(MV)	OUT	on off	*		*	LED			BO					
278	Set Point Qdmd > (SP. Qdmd >)	Set Points(MV)	OUT	on off	*		*	LED			BO					
279	Set Point Sdmd > (SP. Sdmd >)	Set Points(MV)	OUT	on off	*		*	LED			BO					
285	Power factor alarm (cosφ alarm)	Set Points(MV)	OUT	on off	*		*	LED			BO					
289	Alarm: Current summation supervision (Failure Σi)	Measurerm.Su-perv	OUT	ON OFF	*		*	LED			BO		135	250	1	Yes
290	Alarm: Broken current-wire detected L1 (Broken lwire L1)	Measurerm.Su-perv	OUT	ON OFF	*		*	LED			BO		135	137	1	Yes

No.	Description	Function	Type of Information	Log Buffers				Configurable in Matrix					IEC 60870-5-103			
				Event Log ON/OFF	Trip (Fault) Log On/Off	Ground Fault Log ON/OFF	Marked in Oscill. Record	LED	Binary Input	Function Key	Relay	Chatter Suppression	Type	Information Number	Data Unit	General Interrogation
291	Alarm: Broken current-wire detected L2 (Broken Iwire L2)	Measurem.Su-perv	OUT	ON OFF	*		*	LED			BO		135	138	1	Yes
292	Alarm: Broken current-wire detected L3 (Broken Iwire L3)	Measurem.Su-perv	OUT	ON OFF	*		*	LED			BO		135	139	1	Yes
295	Broken wire supervision is switched OFF (Broken wire OFF)	Measurem.Su-perv	OUT	ON OFF	*		*	LED			BO					
296	Current summation superv is switched OFF (Σ i superv. OFF)	Measurem.Su-perv	OUT	ON OFF	*		*	LED			BO					
297	Broken current-wire at other end L1 (ext.Brk.Wire L1)	Measurem.Su-perv	OUT	ON OFF	*		*	LED			BO					
298	Broken current-wire at other end L2 (ext.Brk.Wire L2)	Measurem.Su-perv	OUT	ON OFF	*		*	LED			BO					
299	Broken current-wire at other end L3 (ext.Brk.Wire L3)	Measurem.Su-perv	OUT	ON OFF	*		*	LED			BO					
301	Power System fault (Pow.Sys.Flt.)	P.System Data 2	OUT	ON OFF	ON		*						135	231	2	Yes
302	Fault Event (Fault Event)	P.System Data 2	OUT	*	ON		*						135	232	2	No
320	Warn: Limit of Memory Data exceeded (Warn Mem. Data)	Device	OUT	on off	*		*	LED			BO					
321	Warn: Limit of Memory Parameter exceeded (Warn Mem. Para.)	Device	OUT	on off	*		*	LED			BO					
322	Warn: Limit of Memory Operation exceeded (Warn Mem. Oper.)	Device	OUT	on off	*		*	LED			BO					
323	Warn: Limit of Memory New exceeded (Warn Mem. New)	Device	OUT	on off	*		*	LED			BO					
351	>Circuit breaker aux. contact: Pole L1 (>CB Aux. L1)	P.System Data 2	SP	*	*		*	LED	BI		BO		150	1	1	Yes
352	>Circuit breaker aux. contact: Pole L2 (>CB Aux. L2)	P.System Data 2	SP	*	*		*	LED	BI		BO		150	2	1	Yes
353	>Circuit breaker aux. contact: Pole L3 (>CB Aux. L3)	P.System Data 2	SP	*	*		*	LED	BI		BO		150	3	1	Yes
356	>Manual close signal (>Manual Close)	P.System Data 2	SP	*	*		*	LED	BI		BO		150	6	1	Yes
357	>Block manual close cmd. from external (>Blk Man. Close)	P.System Data 2	SP	ON OFF	*		*	LED	BI		BO		150	7	1	Yes
361	>Failure: Feeder VT (MCB tripped) (>FAIL:Feeder VT)	P.System Data 2	SP	ON OFF	*		*	LED	BI		BO		192	38	1	Yes
362	>Failure: Usy2 VT (MCB tripped) (>FAIL:Usy2 VT)	P.System Data 2	SP	ON OFF	*		*	LED	BI		BO		150	12	1	Yes
366	>CB1 Pole L1 (for AR,CB-Test) (>CB1 Pole L1)	P.System Data 2	SP	*	*		*	LED	BI		BO		150	66	1	Yes
367	>CB1 Pole L2 (for AR,CB-Test) (>CB1 Pole L2)	P.System Data 2	SP	*	*		*	LED	BI		BO		150	67	1	Yes
368	>CB1 Pole L3 (for AR,CB-Test) (>CB1 Pole L3)	P.System Data 2	SP	*	*		*	LED	BI		BO		150	68	1	Yes
371	>CB1 READY (for AR,CB-Test) (>CB1 Ready)	P.System Data 2	SP	*	*		*	LED	BI		BO		150	71	1	Yes
378	>CB faulty (>CB faulty)	P.System Data 2	SP	*	*		*	LED	BI		BO					
379	>CB aux. contact 3pole Closed (>CB 3p Closed)	P.System Data 2	SP	*	*		*	LED	BI		BO		150	78	1	Yes
380	>CB aux. contact 3pole Open (>CB 3p Open)	P.System Data 2	SP	*	*		*	LED	BI		BO		150	79	1	Yes

No.	Description	Function	Type of Information	Log Buffers				Configurable in Matrix					IEC 60870-5-103			
				Event Log ON/OFF	Trip (Fault) Log On/Off	Ground Fault Log ON/OFF	Marked in Oscill. Record	LED	Binary Input	Function Key	Relay	Chatter Suppression	Type	Information Number	Data Unit	General Interrogation
381	>Single-phase trip permitted from ext.AR (>1p Trip Perm)	P.System Data 2	SP	ON OFF	*		*	LED	BI		BO					
382	>External AR programmed for 1phase only (>Only 1ph AR)	P.System Data 2	SP	ON OFF	*		*	LED	BI		BO					
383	>Enable all AR Zones / Stages (>Enable ARzones)	P.System Data 2	SP	ON OFF	ON OFF		*	LED	BI		BO					
385	>Lockout SET (>Lockout SET)	P.System Data 2	SP	ON OFF	*		*	LED	BI		BO		150	35	1	Yes
386	>Lockout RESET (>Lockout RESET)	P.System Data 2	SP	ON OFF	*		*	LED	BI		BO		150	36	1	Yes
395	>I MIN/MAX Buffer Reset (>I MinMax Reset)	Min/Max meter	SP	ON	*		*	LED	BI		BO					
396	>I1 MIN/MAX Buffer Reset (>I1 MiMaReset)	Min/Max meter	SP	ON	*		*	LED	BI		BO					
397	>U MIN/MAX Buffer Reset (>U MiMaReset)	Min/Max meter	SP	ON	*		*	LED	BI		BO					
398	>Uphph MIN/MAX Buffer Reset (>UphphMiMaRes)	Min/Max meter	SP	ON	*		*	LED	BI		BO					
399	>U1 MIN/MAX Buffer Reset (>U1 MiMa Reset)	Min/Max meter	SP	ON	*		*	LED	BI		BO					
400	>P MIN/MAX Buffer Reset (>P MiMa Reset)	Min/Max meter	SP	ON	*		*	LED	BI		BO					
401	>S MIN/MAX Buffer Reset (>S MiMa Reset)	Min/Max meter	SP	ON	*		*	LED	BI		BO					
402	>Q MIN/MAX Buffer Reset (>Q MiMa Reset)	Min/Max meter	SP	ON	*		*	LED	BI		BO					
403	>Idmd MIN/MAX Buffer Reset (>Idmd MiMaReset)	Min/Max meter	SP	ON	*		*	LED	BI		BO					
404	>Pdmd MIN/MAX Buffer Reset (>Pdmd MiMaReset)	Min/Max meter	SP	ON	*		*	LED	BI		BO					
405	>Qdmd MIN/MAX Buffer Reset (>Qdmd MiMaReset)	Min/Max meter	SP	ON	*		*	LED	BI		BO					
406	>Sdmd MIN/MAX Buffer Reset (>Sdmd MiMaReset)	Min/Max meter	SP	ON	*		*	LED	BI		BO					
407	>Frq. MIN/MAX Buffer Reset (>Frq MiMa Reset)	Min/Max meter	SP	ON	*		*	LED	BI		BO					
408	>Power Factor MIN/MAX Buffer Reset (>PF MiMaReset)	Min/Max meter	SP	ON	*		*	LED	BI		BO					
410	>CB1 aux. 3p Closed (for AR, CB-Test) (>CB1 3p Closed)	P.System Data 2	SP	*	*		*	LED	BI		BO		150	80	1	Yes
411	>CB1 aux. 3p Open (for AR, CB-Test) (>CB1 3p Open)	P.System Data 2	SP	*	*		*	LED	BI		BO		150	81	1	Yes
501	Relay PICKUP (Relay PICKUP)	P.System Data 2	OUT	*	*		M	LED			BO		192	84	2	Yes
502	Relay Drop Out (Relay Drop Out)	P.System Data 2	OUT													
503	Relay PICKUP Phase L1 (Relay PICKUP L1)	P.System Data 2	OUT	*	*		m	LED			BO		192	64	2	Yes
504	Relay PICKUP Phase L2 (Relay PICKUP L2)	P.System Data 2	OUT	*	*		m	LED			BO		192	65	2	Yes
505	Relay PICKUP Phase L3 (Relay PICKUP L3)	P.System Data 2	OUT	*	*		m	LED			BO		192	66	2	Yes
506	Relay PICKUP Earth (Relay PICKUP E)	P.System Data 2	OUT	*	*		m	LED			BO		192	67	2	Yes
507	Relay TRIP command Phase L1 (Relay TRIP L1)	P.System Data 2	OUT	*	*		m	LED			BO		192	69	2	No

No.	Description	Function	Type of Information	Log Buffers				Configurable in Matrix					IEC 60870-5-103			
				Event Log ON/OFF	Trip (Fault) Log On/Off	Ground Fault Log ON/OFF	Marked in Oscill. Record	LED	Binary Input	Function Key	Relay	Chatter Suppression	Type	Information Number	Data Unit	General Interrogation
508	Relay TRIP command Phase L2 (Relay TRIP L2)	P.System Data 2	OUT	*	*		m	LED			BO		192	70	2	No
509	Relay TRIP command Phase L3 (Relay TRIP L3)	P.System Data 2	OUT	*	*		m	LED			BO		192	71	2	No
510	Relay GENERAL CLOSE command (Relay CLOSE)	P.System Data 2	OUT	*	*		*	LED			BO					
511	Relay GENERAL TRIP command (Relay TRIP)	P.System Data 2	OUT	*	OFF		M	LED			BO		192	68	2	No
512	Relay TRIP command - Only Phase L1 (Relay TRIP 1pL1)	P.System Data 2	OUT	*	*		*	LED			BO					
513	Relay TRIP command - Only Phase L2 (Relay TRIP 1pL2)	P.System Data 2	OUT	*	*		*	LED			BO					
514	Relay TRIP command - Only Phase L3 (Relay TRIP 1pL3)	P.System Data 2	OUT	*	*		*	LED			BO					
515	Relay TRIP command Phases L123 (Relay TRIP 3ph.)	P.System Data 2	OUT	*	*		*	LED			BO					
530	LOCKOUT is active (LOCK-OUT)	P.System Data 2	IntSP	ON OFF	*		*	LED			BO					
533	Primary fault current IL1 (IL1 =)	P.System Data 2	VI	*	ON OFF								150	177	4	No
534	Primary fault current IL2 (IL2 =)	P.System Data 2	VI	*	ON OFF								150	178	4	No
535	Primary fault current IL3 (IL3 =)	P.System Data 2	VI	*	ON OFF								150	179	4	No
536	Relay Definitive TRIP (Definitive TRIP)	P.System Data 2	OUT	ON	ON			LED			BO		150	180	2	Yes
545	Time from Pickup to drop out (PU Time)	P.System Data 2	VI													
546	Time from Pickup to TRIP (TRIP Time)	P.System Data 2	VI													
560	Single-phase trip was coupled 3phase (Trip Coupled 3p)	P.System Data 2	OUT	*	ON		*	LED			BO		150	210	2	No
561	Manual close signal detected (Man.Clos.Detect)	P.System Data 2	OUT	ON	*		*	LED			BO		150	211	1	No
562	CB CLOSE command for manual closing (Man.Close Cmd)	P.System Data 2	OUT	*	*		*	LED			BO		150	212	1	No
563	CB alarm suppressed (CB Alarm Supp)	P.System Data 2	OUT	*	*		*	LED			BO					
590	Line closure detected (Line closure)	P.System Data 2	OUT	ON OFF	ON OFF		*	LED			BO					
591	Single pole open detected in L1 (1pole open L1)	P.System Data 2	OUT	ON OFF	ON OFF		*	LED			BO					
592	Single pole open detected in L2 (1pole open L2)	P.System Data 2	OUT	ON OFF	ON OFF		*	LED			BO					
593	Single pole open detected in L3 (1pole open L3)	P.System Data 2	OUT	ON OFF	ON OFF		*	LED			BO					
916	Increment of active energy (WpΔ=)	Energy	-													
917	Increment of reactive energy (WqΔ=)	Energy	-													
1000	Number of breaker TRIP commands (# TRIPs=)	Statistics	VI													
1001	Number of breaker TRIP commands L1 (TripNo L1=)	Statistics	VI													

No.	Description	Function	Type of Information	Log Buffers				Configurable in Matrix					IEC 60870-5-103			
				Event Log ON/OFF	Trip (Fault) Log On/Off	Ground Fault Log ON/OFF	Marked in Oscill. Record	LED	Binary Input	Function Key	Relay	Chatter Suppression	Type	Information Number	Data Unit	General Interrogation
1002	Number of breaker TRIP commands L2 (TripNo L2=)	Statistics	VI													
1003	Number of breaker TRIP commands L3 (TripNo L3=)	Statistics	VI													
1027	Accumulation of interrupted current L1 (Σ IL1 =)	Statistics	VI													
1028	Accumulation of interrupted current L2 (Σ IL2 =)	Statistics	VI													
1029	Accumulation of interrupted current L3 (Σ IL3 =)	Statistics	VI													
1030	Max. fault current Phase L1 (Max IL1 =)	Statistics	VI													
1031	Max. fault current Phase L2 (Max IL2 =)	Statistics	VI													
1032	Max. fault current Phase L3 (Max IL3 =)	Statistics	VI													
1111	Fault locator active (FL active)	Fault Locator	OUT	ON OFF	*		*	LED			BO					
1114	Fit Locator: primary RESISTANCE (Rpri =)	Fault Locator	VI		ON OFF								151	14	4	No
1115	Fit Locator: primary REACTANCE (Xpri =)	Fault Locator	VI		ON OFF								151	15	4	No
1117	Fit Locator: secondary RESISTANCE (Rsec =)	Fault Locator	VI		ON OFF								151	17	4	No
1118	Fit Locator: secondary REACTANCE (Xsec =)	Fault Locator	VI		ON OFF								151	18	4	No
1119	Fit Locator: Distance to fault (dist =)	Fault Locator	VI		ON OFF								151	19	4	No
1120	Fit Locator: Distance [%] to fault (d[%] =)	Fault Locator	VI		ON OFF								151	20	4	No
1122	Fit Locator: Distance to fault (dist =)	Fault Locator	VI		ON OFF								151	22	4	No
1123	Fault Locator Loop L1E (FL Loop L1E)	Fault Locator	OUT_Ev		ON											
1124	Fault Locator Loop L2E (FL Loop L2E)	Fault Locator	OUT_Ev		ON											
1125	Fault Locator Loop L3E (FL Loop L3E)	Fault Locator	OUT_Ev		ON											
1126	Fault Locator Loop L1L2 (FL Loop L1L2)	Fault Locator	OUT_Ev		ON											
1127	Fault Locator Loop L2L3 (FL Loop L2L3)	Fault Locator	OUT_Ev		ON											
1128	Fault Locator Loop L3L1 (FL Loop L3L1)	Fault Locator	OUT_Ev		ON											
1131	Fit Locator: primary FAULT RESISTANCE (RFpri=)	Fault Locator	VI		ON OFF								151	31	4	No
1132	Fault location invalid (Fit.Loc.invalid)	Fault Locator	OUT	*	ON		*	LED			BO					
1133	Fault locator setting error K0_angle(K0) (Fit.Loc.ErrorK0)	Fault Locator	OUT	*	ON		*	LED			BO					
1134	Two ended fault location (two ended FO)	Fault Locator	OUT_Ev		on											
1143	BCD Fault location [1%] (BCD d[1%])	Fault Locator	OUT	*	*			LED			BO					
1144	BCD Fault location [2%] (BCD d[2%])	Fault Locator	OUT	*	*			LED			BO					

No.	Description	Function	Type of Information	Log Buffers				Configurable in Matrix					IEC 60870-5-103			
				Event Log ON/OFF	Trip (Fault) Log On/Off	Ground Fault Log ON/OFF	Marked in Oscill. Record	LED	Binary Input	Function Key	Relay	Chatter Suppression	Type	Information Number	Data Unit	General Interrogation
1145	BCD Fault location [4%] (BCD d[4%])	Fault Locator	OUT	*	*			LED			BO					
1146	BCD Fault location [8%] (BCD d[8%])	Fault Locator	OUT	*	*			LED			BO					
1147	BCD Fault location [10%] (BCD d[10%])	Fault Locator	OUT	*	*			LED			BO					
1148	BCD Fault location [20%] (BCD d[20%])	Fault Locator	OUT	*	*			LED			BO					
1149	BCD Fault location [40%] (BCD d[40%])	Fault Locator	OUT	*	*			LED			BO					
1150	BCD Fault location [80%] (BCD d[80%])	Fault Locator	OUT	*	*			LED			BO					
1151	BCD Fault location [100%] (BCD d[100%])	Fault Locator	OUT	*	*			LED			BO					
1152	BCD Fault location valid (BCD dist. VALID)	Fault Locator	OUT	*	*			LED			BO					
1305	>Earth Fault O/C Block 3I0>>> (>EF BLK 3I0>>>)	Earth Fault O/C	SP	ON OFF	*		*	LED	BI		BO		166	5	1	Yes
1307	>Earth Fault O/C Block 3I0>> (>EF BLOCK 3I0>>)	Earth Fault O/C	SP	ON OFF	*		*	LED	BI		BO		166	7	1	Yes
1308	>Earth Fault O/C Block 3I0> (>EF BLOCK 3I0>)	Earth Fault O/C	SP	ON OFF	*		*	LED	BI		BO		166	8	1	Yes
1309	>Earth Fault O/C Block 3I0p (>EF BLOCK 3I0p)	Earth Fault O/C	SP	ON OFF	*		*	LED	BI		BO		166	9	1	Yes
1310	>Earth Fault O/C Instantaneous trip (>EF InstTRIP)	Earth Fault O/C	SP	ON OFF	ON OFF		*	LED	BI		BO		166	10	1	Yes
1311	>E/F Teleprotection ON (>EF Teleprot.ON)	Teleprot. E/F	SP	*	*		*	LED	BI		BO					
1312	>E/F Teleprotection OFF (>EF TeleprotOFF)	Teleprot. E/F	SP	*	*		*	LED	BI		BO					
1313	>E/F Teleprotection BLOCK (>EF TeleprotBLK)	Teleprot. E/F	SP	ON OFF	*		*	LED	BI		BO		166	13	1	Yes
1318	>E/F Carrier RECEPTION, Channel 1 (>EF Rec.Ch1)	Teleprot. E/F	SP	on off	on		*	LED	BI		BO		166	18	1	Yes
1319	>E/F Carrier RECEPTION, Channel 2 (>EF Rec.Ch2)	Teleprot. E/F	SP	on off	on		*	LED	BI		BO		166	19	1	Yes
1320	>E/F Unblocking: UNBLOCK, Channel 1 (>EF UB ub 1)	Teleprot. E/F	SP	ON OFF	ON		*	LED	BI		BO		166	20	1	Yes
1321	>E/F Unblocking: BLOCK, Channel 1 (>EF UB bl 1)	Teleprot. E/F	SP	ON OFF	ON		*	LED	BI		BO		166	21	1	Yes
1322	>E/F Unblocking: UNBLOCK, Channel 2 (>EF UB ub 2)	Teleprot. E/F	SP	ON OFF	ON		*	LED	BI		BO		166	22	1	Yes
1323	>E/F Unblocking: BLOCK, Channel 2 (>EF UB bl 2)	Teleprot. E/F	SP	ON OFF	ON		*	LED	BI		BO		166	23	1	Yes
1324	>E/F BLOCK Echo Signal (>EF BlkEcho)	Teleprot. E/F	SP	ON OFF	ON		*	LED	BI		BO		166	24	1	Yes
1325	>E/F Carrier RECEPTION, Channel 1, Ph.L1 (>EF Rec.Ch1 L1)	Teleprot. E/F	SP	on off	on		*	LED	BI		BO		166	25	1	Yes
1326	>E/F Carrier RECEPTION, Channel 1, Ph.L2 (>EF Rec.Ch1 L2)	Teleprot. E/F	SP	on off	on		*	LED	BI		BO		166	26	1	Yes
1327	>E/F Carrier RECEPTION, Channel 1, Ph.L3 (>EF Rec.Ch1 L3)	Teleprot. E/F	SP	on off	on		*	LED	BI		BO		166	27	1	Yes

No.	Description	Function	Type of Information	Log Buffers				Configurable in Matrix					IEC 60870-5-103			
				Event Log ON/OFF	Trip (Fault) Log On/Off	Ground Fault Log ON/OFF	Marked in Oscill. Record	LED	Binary Input	Function Key	Relay	Chatter Suppression	Type	Information Number	Data Unit	General Interrogation
1328	>E/F Unblocking: UNBLOCK Chan. 1, Ph.L1 (>EF UB ub 1-L1)	Teleprot. E/F	SP	ON OFF	ON		*	LED	BI		BO		166	28	1	Yes
1329	>E/F Unblocking: UNBLOCK Chan. 1, Ph.L2 (>EF UB ub 1-L2)	Teleprot. E/F	SP	ON OFF	ON		*	LED	BI		BO		166	29	1	Yes
1330	>E/F Unblocking: UNBLOCK Chan. 1, Ph.L3 (>EF UB ub 1-L3)	Teleprot. E/F	SP	ON OFF	ON		*	LED	BI		BO		166	30	1	Yes
1331	Earth fault protection is switched OFF (E/F Prot. OFF)	Earth Fault O/C	OUT	ON OFF	*		*	LED			BO		166	31	1	Yes
1332	Earth fault protection is BLOCKED (E/F BLOCK)	Earth Fault O/C	OUT	ON OFF	ON OFF		*	LED			BO		166	32	1	Yes
1333	Earth fault protection is ACTIVE (E/F ACTIVE)	Earth Fault O/C	OUT	*	*		*	LED			BO		166	33	1	Yes
1335	Earth fault protection Trip is blocked (EF TRIP BLOCK)	Earth Fault O/C	OUT	ON OFF	ON OFF		*	LED			BO					
1336	E/F phase selector L1 selected (E/F L1 selec.)	Earth Fault O/C	OUT	*	ON OFF		*	LED			BO					
1337	E/F phase selector L2 selected (E/F L2 selec.)	Earth Fault O/C	OUT	*	ON OFF		*	LED			BO					
1338	E/F phase selector L3 selected (E/F L3 selec.)	Earth Fault O/C	OUT	*	ON OFF		*	LED			BO					
1345	Earth fault protection PICKED UP (EF Pickup)	Earth Fault O/C	OUT	*	off		*	LED			BO		166	45	2	Yes
1354	E/F 3I0>>> PICKED UP (EF 3I0>>>Pickup)	Earth Fault O/C	OUT	*	ON		*	LED			BO					
1355	E/F 3I0>> PICKED UP (EF 3I0>> Pickup)	Earth Fault O/C	OUT	*	ON		*	LED			BO					
1356	E/F 3I0> PICKED UP (EF 3I0> Pickup)	Earth Fault O/C	OUT	*	ON		*	LED			BO					
1357	E/F 3I0p PICKED UP (EF 3I0p Pickup)	Earth Fault O/C	OUT	*	ON		*	LED			BO					
1358	E/F picked up FORWARD (EF forward)	Earth Fault O/C	OUT	*	ON		*	LED			BO		166	58	2	No
1359	E/F picked up REVERSE (EF reverse)	Earth Fault O/C	OUT	*	ON		*	LED			BO		166	59	2	No
1361	E/F General TRIP command (EF Trip)	Earth Fault O/C	OUT	*	*		*	LED			BO		166	61	2	No
1362	Earth fault protection: Trip 1pole L1 (E/F Trip L1)	Earth Fault O/C	OUT	*	ON		*	LED			BO		166	62	2	Yes
1363	Earth fault protection: Trip 1pole L2 (E/F Trip L2)	Earth Fault O/C	OUT	*	ON		*	LED			BO		166	63	2	Yes
1364	Earth fault protection: Trip 1pole L3 (E/F Trip L3)	Earth Fault O/C	OUT	*	ON		*	LED			BO		166	64	2	Yes
1365	Earth fault protection: Trip 3pole (E/F Trip 3p)	Earth Fault O/C	OUT	*	ON		*	LED			BO		166	65	2	Yes
1366	E/F 3I0>>> TRIP (EF 3I0>>> TRIP)	Earth Fault O/C	OUT	*	ON		*	LED			BO		166	66	2	No
1367	E/F 3I0>> TRIP (EF 3I0>> TRIP)	Earth Fault O/C	OUT	*	ON		*	LED			BO		166	67	2	No
1368	E/F 3I0> TRIP (EF 3I0> TRIP)	Earth Fault O/C	OUT	*	ON		*	LED			BO		166	68	2	No
1369	E/F 3I0p TRIP (EF 3I0p TRIP)	Earth Fault O/C	OUT	*	ON		*	LED			BO		166	69	2	No
1370	E/F Inrush picked up (EF InrushPU)	Earth Fault O/C	OUT	*	ON OFF		*	LED			BO		166	70	2	No

No.	Description	Function	Type of Information	Log Buffers				Configurable in Matrix					IEC 60870-5-103			
				Event Log ON/OFF	Trip (Fault) Log On/Off	Ground Fault Log ON/OFF	Marked in Oscill. Record	LED	Binary Input	Function Key	Relay	Chatter Suppression	Type	Information Number	Data Unit	General Interrogation
1371	E/F Telep. Carrier SEND signal, Phase L1 (EF Tele SEND L1)	Teleprot. E/F	OUT	on	on		*	LED			BO		166	71	1	No
1372	E/F Telep. Carrier SEND signal, Phase L2 (EF Tele SEND L2)	Teleprot. E/F	OUT	on	on		*	LED			BO		166	72	1	No
1373	E/F Telep. Carrier SEND signal, Phase L3 (EF Tele SEND L3)	Teleprot. E/F	OUT	on	on		*	LED			BO		166	73	1	No
1374	E/F Telep. Block: carrier STOP signal L1 (EF Tele STOP L1)	Teleprot. E/F	OUT	*	on		*	LED			BO		166	74	2	No
1375	E/F Telep. Block: carrier STOP signal L2 (EF Tele STOP L2)	Teleprot. E/F	OUT	*	on		*	LED			BO		166	75	2	No
1376	E/F Telep. Block: carrier STOP signal L3 (EF Tele STOP L3)	Teleprot. E/F	OUT	*	on		*	LED			BO		166	76	2	No
1380	E/F Teleprot. ON/OFF via BI (EF TeleON/offBI)	Teleprot. E/F	IntSP	ON OFF	*		*	LED			BO					
1381	E/F Teleprotection is switched OFF (EF Telep. OFF)	Teleprot. E/F	OUT	ON OFF	*		*	LED			BO		166	81	1	Yes
1384	E/F Telep. Carrier SEND signal (EF Tele SEND)	Teleprot. E/F	OUT	on	on		*	LED			BO		166	84	2	No
1386	E/F Telep. Transient Blocking (EF TeleTransBlk)	Teleprot. E/F	OUT	*	ON		*	LED			BO		166	86	2	No
1387	E/F Telep. Unblocking: FAILURE Channel 1 (EF TeleUB Fail1)	Teleprot. E/F	OUT	ON OFF	*		*	LED			BO		166	87	1	Yes
1388	E/F Telep. Unblocking: FAILURE Channel 2 (EF TeleUB Fail2)	Teleprot. E/F	OUT	ON OFF	*		*	LED			BO		166	88	1	Yes
1389	E/F Telep. Blocking: carrier STOP signal (EF Tele BL STOP)	Teleprot. E/F	OUT	*	on		*	LED			BO		166	89	2	No
1390	E/F Telep. Blocking: Send signal with jump (EF Tele BL Jump)	Teleprot. E/F	OUT	*	*		*	LED			BO		166	90	2	No
1401	>BF: Switch on breaker fail protection (>BF on)	Breaker Failure	SP	*	*		*	LED	BI		BO					
1402	>BF: Switch off breaker fail protection (>BF off)	Breaker Failure	SP	*	*		*	LED	BI		BO					
1403	>BLOCK Breaker failure (>BLOCK BkrFail)	Breaker Failure	SP	ON OFF	*		*	LED	BI		BO		166	103	1	Yes
1415	>BF: External start 3pole (>BF Start 3pole)	Breaker Failure	SP	ON OFF	*		*	LED	BI		BO					
1432	>BF: External release (>BF release)	Breaker Failure	SP	ON OFF	*		*	LED	BI		BO					
1435	>BF: External start L1 (>BF Start L1)	Breaker Failure	SP	ON OFF	*		*	LED	BI		BO					
1436	>BF: External start L2 (>BF Start L2)	Breaker Failure	SP	ON OFF	*		*	LED	BI		BO					
1437	>BF: External start L3 (>BF Start L3)	Breaker Failure	SP	ON OFF	*		*	LED	BI		BO					
1439	>BF: External start 3pole (w/o current) (>BF Start w/o I)	Breaker Failure	SP	ON OFF	*		*	LED	BI		BO					
1440	Breaker failure prot. ON/OFF via BI (BkrFailON/offBI)	Breaker Failure	IntSP	ON OFF	*		*	LED			BO					
1451	Breaker failure is switched OFF (BkrFail OFF)	Breaker Failure	OUT	ON OFF	*		*	LED			BO		166	151	1	Yes
1452	Breaker failure is BLOCKED (BkrFail BLOCK)	Breaker Failure	OUT	ON OFF	ON OFF		*	LED			BO		166	152	1	Yes
1453	Breaker failure is ACTIVE (Bkr-Fail ACTIVE)	Breaker Failure	OUT	*	*		*	LED			BO		166	153	1	Yes

No.	Description	Function	Type of Information	Log Buffers				Configurable in Matrix					IEC 60870-5-103			
				Event Log ON/OFF	Trip (Fault) Log On/Off	Ground Fault Log ON/OFF	Marked in Oscill. Record	LED	Binary Input	Function Key	Relay	Chatter Suppression	Type	Information Number	Data Unit	General Interrogation
1461	Breaker failure protection started (BF Start)	Breaker Failure	OUT	*	ON OFF		*	LED			BO		166	161	2	Yes
1472	BF Trip T1 (local trip) - only phase L1 (BF T1-TRIP 1pL1)	Breaker Failure	OUT	*	ON		*	LED			BO					
1473	BF Trip T1 (local trip) - only phase L2 (BF T1-TRIP 1pL2)	Breaker Failure	OUT	*	ON		*	LED			BO					
1474	BF Trip T1 (local trip) - only phase L3 (BF T1-TRIP 1pL3)	Breaker Failure	OUT	*	ON		*	LED			BO					
1476	BF Trip T1 (local trip) - 3pole (BF T1-TRIP L123)	Breaker Failure	OUT	*	ON		*	LED			BO					
1493	BF Trip in case of defective CB (BF TRIP CBdefec)	Breaker Failure	OUT	*	ON		*	LED			BO					
1494	BF Trip T2 (busbar trip) (BF T2-TRIP(bus))	Breaker Failure	OUT	*	ON		*	LED			BO		192	85	2	No
1495	BF Trip End fault stage (BF EndFit TRIP)	Breaker Failure	OUT	*	ON		*	LED			BO					
1496	BF Pole discrepancy pickup (BF CBdiscrSTART)	Breaker Failure	OUT	*	ON OFF		*	LED			BO					
1497	BF Pole discrepancy pickup L1 (BF CBdiscr L1)	Breaker Failure	OUT	*	ON OFF		*	LED			BO					
1498	BF Pole discrepancy pickup L2 (BF CBdiscr L2)	Breaker Failure	OUT	*	ON OFF		*	LED			BO					
1499	BF Pole discrepancy pickup L3 (BF CBdiscr L3)	Breaker Failure	OUT	*	ON OFF		*	LED			BO					
1500	BF Pole discrepancy Trip (BF CBdiscr TRIP)	Breaker Failure	OUT	*	ON		*	LED			BO					
1503	>BLOCK Thermal Overload Protection (>BLK ThOverload)	Therm. Overload	SP	*	*		*	LED	BI		BO		167	3	1	Yes
1511	Thermal Overload Protection OFF (Th.Overload OFF)	Therm. Overload	OUT	ON OFF	*		*	LED			BO		167	11	1	Yes
1512	Thermal Overload Protection BLOCKED (Th.Overload BLK)	Therm. Overload	OUT	ON OFF	ON OFF		*	LED			BO		167	12	1	Yes
1513	Thermal Overload Protection ACTIVE (Th.O/L ACTIVE)	Therm. Overload	OUT	ON OFF	*		*	LED			BO		167	13	1	Yes
1515	Th. Overload: Current Alarm (I alarm) (Th.O/L I Alarm)	Therm. Overload	OUT	ON OFF	*		*	LED			BO		167	15	1	Yes
1516	Th. Overload Alarm: Near Thermal Trip (Th.O/L Θ Alarm)	Therm. Overload	OUT	ON OFF	*		*	LED			BO		167	16	1	Yes
1517	Th. Overload Pickup before trip (Th.O/L Pickup)	Therm. Overload	OUT	ON OFF	*		*	LED			BO		167	17	1	Yes
1521	Th. Overload TRIP command (Th.O/L TRIP)	Therm. Overload	OUT	*	ON		*	LED			BO		167	21	2	Yes
2054	Emergency mode (Emer. mode)	Device	OUT	ON OFF	ON OFF		*	LED			BO		192	37	1	Yes
2701	>AR: Switch on auto-reclose function (>AR on)	Auto Reclose	SP	*	*		*	LED	BI		BO		40	1	1	Yes
2702	>AR: Switch off auto-reclose function (>AR off)	Auto Reclose	SP	*	*		*	LED	BI		BO		40	2	1	Yes
2703	>AR: Block auto-reclose function (>AR block)	Auto Reclose	SP	ON OFF	*		*	LED	BI		BO		40	3	1	Yes
2711	>External start of internal Auto reclose (>AR Start)	Auto Reclose	SP	*	ON		*	LED	BI		BO		40	11	2	Yes
2712	>AR: External trip L1 for AR start (>Trip L1 AR)	Auto Reclose	SP	*	ON		*	LED	BI		BO		40	12	2	Yes
2713	>AR: External trip L2 for AR start (>Trip L2 AR)	Auto Reclose	SP	*	ON		*	LED	BI		BO		40	13	2	Yes

No.	Description	Function	Type of Information	Log Buffers				Configurable in Matrix					IEC 60870-5-103			
				Event Log ON/OFF	Trip (Fault) Log On/Off	Ground Fault Log ON/OFF	Marked in Oscill. Record	LED	Binary Input	Function Key	Relay	Chatter Suppression	Type	Information Number	Data Unit	General Interrogation
2714	>AR: External trip L3 for AR start (>Trip L3 AR)	Auto Reclose	SP	*	ON		*	LED	BI		BO		40	14	2	Yes
2715	>AR: External 1pole trip for AR start (>Trip 1pole AR)	Auto Reclose	SP	*	ON		*	LED	BI		BO		40	15	2	Yes
2716	>AR: External 3pole trip for AR start (>Trip 3pole AR)	Auto Reclose	SP	*	ON		*	LED	BI		BO		40	16	2	Yes
2727	>AR: Remote Close signal (>AR RemoteClose)	Auto Reclose	SP	*	ON		*	LED	BI		BO		40	22	2	Yes
2731	>AR: Sync. release from ext. sync.-check (>Sync.release)	Auto Reclose	SP	*	*		*	LED	BI		BO		40	31	2	Yes
2737	>AR: Block 1pole AR-cycle (>BLOCK 1pole AR)	Auto Reclose	SP	ON OFF	*		*	LED	BI		BO		40	32	1	Yes
2738	>AR: Block 3pole AR-cycle (>BLOCK 3pole AR)	Auto Reclose	SP	ON OFF	*		*	LED	BI		BO		40	33	1	Yes
2739	>AR: Block 1phase-fault AR-cycle (>BLK 1phase AR)	Auto Reclose	SP	ON OFF	*		*	LED	BI		BO		40	34	1	Yes
2740	>AR: Block 2phase-fault AR-cycle (>BLK 2phase AR)	Auto Reclose	SP	ON OFF	*		*	LED	BI		BO		40	35	1	Yes
2741	>AR: Block 3phase-fault AR-cycle (>BLK 3phase AR)	Auto Reclose	SP	ON OFF	*		*	LED	BI		BO		40	36	1	Yes
2742	>AR: Block 1st AR-cycle (>BLK 1.AR-cycle)	Auto Reclose	SP	ON OFF	*		*	LED	BI		BO		40	37	1	Yes
2743	>AR: Block 2nd AR-cycle (>BLK 2.AR-cycle)	Auto Reclose	SP	ON OFF	*		*	LED	BI		BO		40	38	1	Yes
2744	>AR: Block 3rd AR-cycle (>BLK 3.AR-cycle)	Auto Reclose	SP	ON OFF	*		*	LED	BI		BO		40	39	1	Yes
2745	>AR: Block 4th and higher AR-cycles (>BLK 4.-n. AR)	Auto Reclose	SP	ON OFF	*		*	LED	BI		BO		40	40	1	Yes
2746	>AR: External Trip for AR start (>Trip for AR)	Auto Reclose	SP	*	ON		*	LED	BI		BO		40	41	2	Yes
2747	>AR: External pickup L1 for AR start (>Pickup L1 AR)	Auto Reclose	SP	*	ON		*	LED	BI		BO		40	42	2	Yes
2748	>AR: External pickup L2 for AR start (>Pickup L2 AR)	Auto Reclose	SP	*	ON		*	LED	BI		BO		40	43	2	Yes
2749	>AR: External pickup L3 for AR start (>Pickup L3 AR)	Auto Reclose	SP	*	ON		*	LED	BI		BO		40	44	2	Yes
2750	>AR: External pickup 1phase for AR start (>Pickup 1ph AR)	Auto Reclose	SP	*	ON		*	LED	BI		BO		40	45	2	Yes
2751	>AR: External pickup 2phase for AR start (>Pickup 2ph AR)	Auto Reclose	SP	*	ON		*	LED	BI		BO		40	46	2	Yes
2752	>AR: External pickup 3phase for AR start (>Pickup 3ph AR)	Auto Reclose	SP	*	ON		*	LED	BI		BO		40	47	2	Yes
2781	AR: Auto-reclose is switched off (AR off)	Auto Reclose	OUT	ON OFF	*		*	LED			BO		40	81	1	Yes
2782	AR: Auto-reclose is switched on (AR on)	Auto Reclose	IntSP	*	*		*	LED			BO		192	16	1	Yes
2783	AR: Auto-reclose is blocked (AR is blocked)	Auto Reclose	OUT	ON OFF	*		*	LED			BO		40	83	1	Yes
2784	AR: Auto-reclose is not ready (AR not ready)	Auto Reclose	OUT	*	ON		*	LED			BO		192	130	1	Yes
2787	AR: Circuit breaker not ready (CB not ready)	Auto Reclose	OUT	*	*		*	LED			BO		40	87	1	Yes
2788	AR: CB ready monitoring window expired (AR T-CBreadyExp)	Auto Reclose	OUT	*	ON		*	LED			BO		40	88	2	Yes

No.	Description	Function	Type of Information	Log Buffers				Configurable in Matrix					IEC 60870-5-103			
				Event Log ON/OFF	Trip (Fault) Log On/Off	Ground Fault Log ON/OFF	Marked in Oscill. Record	LED	Binary Input	Function Key	Relay	Chatter Suppression	Type	Information Number	Data Unit	General Interrogation
2796	AR: Auto-reclose ON/OFF via BI (AR on/off BI)	Auto Reclose	IntSP	*	*		*	LED			BO					
2801	AR: Auto-reclose in progress (AR in progress)	Auto Reclose	OUT	*	ON		*	LED			BO		40	101	2	Yes
2809	AR: Start-signal monitoring time expired (AR T-Start Exp)	Auto Reclose	OUT	*	ON		*	LED			BO		40	174	2	Yes
2810	AR: Maximum dead time expired (AR TdeadMax Exp)	Auto Reclose	OUT	*	ON		*	LED			BO		40	175	2	Yes
2818	AR: Evolving fault recognition (AR evolving Flt)	Auto Reclose	OUT	*	ON		*	LED			BO		40	118	2	Yes
2820	AR is set to operate after 1p trip only (AR Program1pole)	Auto Reclose	OUT	*	*		*	LED			BO		40	143	1	Yes
2821	AR dead time after evolving fault (AR Td. evol.Flt)	Auto Reclose	OUT	*	ON OFF		*	LED			BO		40	197	2	Yes
2839	AR dead time after 1pole trip running (AR Tdead 1pTrip)	Auto Reclose	OUT	*	ON		*	LED			BO		40	148	2	Yes
2840	AR dead time after 3pole trip running (AR Tdead 3pTrip)	Auto Reclose	OUT	*	ON		*	LED			BO		40	149	2	Yes
2841	AR dead time after 1phase fault running (AR Tdead 1pFlt)	Auto Reclose	OUT	*	ON		*	LED			BO		40	150	2	Yes
2842	AR dead time after 2phase fault running (AR Tdead 2pFlt)	Auto Reclose	OUT	*	ON		*	LED			BO		40	151	2	Yes
2843	AR dead time after 3phase fault running (AR Tdead 3pFlt)	Auto Reclose	OUT	*	ON		*	LED			BO		40	154	2	Yes
2844	AR 1st cycle running (AR 1stCyc. run.)	Auto Reclose	OUT	*	ON		*	LED			BO		40	155	2	Yes
2845	AR 2nd cycle running (AR 2ndCyc. run.)	Auto Reclose	OUT	*	ON		*	LED			BO		40	157	2	Yes
2846	AR 3rd cycle running (AR 3rdCyc. run.)	Auto Reclose	OUT	*	ON		*	LED			BO		40	158	2	Yes
2847	AR 4th or higher cycle running (AR 4thCyc. run.)	Auto Reclose	OUT	*	ON		*	LED			BO		40	159	2	Yes
2848	AR cycle is running in ADT mode (AR ADT run.)	Auto Reclose	OUT	*	ON		*	LED			BO		40	130	2	Yes
2851	AR: Close command (AR CLOSE Cmd.)	Auto Reclose	OUT	*	ON		m	LED			BO		192	128	2	No
2852	AR: Close command after 1pole, 1st cycle (AR Close1.Cyc1p)	Auto Reclose	OUT	*	*		*	LED			BO		40	152	1	Yes
2853	AR: Close command after 3pole, 1st cycle (AR Close1.Cyc3p)	Auto Reclose	OUT	*	*		*	LED			BO		40	153	1	Yes
2854	AR: Close command 2nd cycle (and higher) (AR Close 2.Cyc)	Auto Reclose	OUT	*	*		*	LED			BO		192	129	1	No
2861	AR: Reclaim time is running (AR T-Recl. run.)	Auto Reclose	OUT	*	*		*	LED			BO		40	161	1	Yes
2862	AR successful (AR successful)	Auto Reclose	OUT	*	*		*	LED			BO		40	162	1	Yes
2864	AR: 1pole trip permitted by internal AR (AR 1p Trip Perm)	Auto Reclose	OUT	*	*		*	LED			BO		40	164	1	Yes
2865	AR: Synchro-check request (AR Sync.Request)	Auto Reclose	OUT	*	*		*	LED			BO		40	165	2	Yes
2871	AR: TRIP command 3pole (AR TRIP 3pole)	Auto Reclose	OUT	*	ON		*	LED			BO		40	171	2	Yes
2889	AR 1st cycle zone extension release (AR 1.CycZoneRel)	Auto Reclose	OUT	*	*		*	LED			BO		40	160	1	Yes

No.	Description	Function	Type of Information	Log Buffers				Configurable in Matrix					IEC 60870-5-103			
				Event Log ON/OFF	Trip (Fault) Log On/Off	Ground Fault Log ON/OFF	Marked in Oscill. Record	LED	Binary Input	Function Key	Relay	Chatter Suppression	Type	Information Number	Data Unit	General Interrogation
2890	AR 2nd cycle zone extension release (AR 2.CycZoneRel)	Auto Reclose	OUT	*	*		*	LED			BO		40	169	1	Yes
2891	AR 3rd cycle zone extension release (AR 3.CycZoneRel)	Auto Reclose	OUT	*	*		*	LED			BO		40	170	1	Yes
2892	AR 4th cycle zone extension release (AR 4.CycZoneRel)	Auto Reclose	OUT	*	*		*	LED			BO		40	172	1	Yes
2893	AR zone extension (general) (AR Zone Release)	Auto Reclose	OUT	*	*		*	LED			BO		40	173	1	Yes
2894	AR Remote close signal send (AR Remote Close)	Auto Reclose	OUT	*	ON		*	LED			BO		40	129	2	Yes
2895	No. of 1st AR-cycle CLOSE commands,1pole (AR #Close1./1p=)	Statistics	VI													
2896	No. of 1st AR-cycle CLOSE commands,3pole (AR #Close1./3p=)	Statistics	VI													
2897	No. of higher AR-cycle CLOSE commands,1p (AR #Close2./1p=)	Statistics	VI													
2898	No. of higher AR-cycle CLOSE commands,3p (AR #Close2./3p=)	Statistics	VI													
2901	>Switch on synchro-check function (>Sync. on)	Sync. Check	SP	*	*		*	LED	BI		BO					
2902	>Switch off synchro-check function (>Sync. off)	Sync. Check	SP	*	*		*	LED	BI		BO					
2903	>BLOCK synchro-check function (>BLOCK Sync.)	Sync. Check	SP	*	*		*	LED	BI		BO					
2905	>Start synchro-check for Manual Close (>Sync. Start MC)	Sync. Check	SP	on off	*		*	LED	BI		BO					
2906	>Start synchro-check for AR (>Sync. Start AR)	Sync. Check	SP	on off	*		*	LED	BI		BO					
2907	>Sync-Prog. Live bus / live line / Sync (>Sync. synch)	Sync. Check	SP	*	*		*	LED	BI		BO					
2908	>Sync-Prog. Usy1>Usy2< (>Usy1>Usy2<)	Sync. Check	SP	*	*		*	LED	BI		BO					
2909	>Sync-Prog. Usy1<Usy2> (>Usy1<Usy2>)	Sync. Check	SP	*	*		*	LED	BI		BO					
2910	>Sync-Prog. Usy1<Usy2< (>Usy1<Usy2<)	Sync. Check	SP	*	*		*	LED	BI		BO					
2911	>Sync-Prog. Override (bypass) (>Sync. o/ride)	Sync. Check	SP	*	*		*	LED	BI		BO					
2930	Synchro-check ON/OFF via BI (Sync. on/off BI)	Sync. Check	IntSP	ON OFF	*		*	LED			BO					
2931	Synchro-check is switched OFF (Sync. OFF)	Sync. Check	OUT	ON OFF	*		*	LED			BO		41	31	1	Yes
2932	Synchro-check is BLOCKED (Sync. BLOCK)	Sync. Check	OUT	ON OFF	ON OFF		*	LED			BO		41	32	1	Yes
2934	Synchro-check function faulty (Sync. faulty)	Sync. Check	OUT	ON OFF	*		*	LED			BO		41	34	1	Yes
2935	Synchro-check supervision time expired (Sync.Tsup.Exp)	Sync. Check	OUT	ON	ON		*	LED			BO		41	35	1	No
2936	Synchro-check request by control (Sync. req.CNTRL)	Sync. Check	OUT	ON	ON		*	LED			BO		41	36	1	No
2941	Synchronization is running (Sync. running)	Sync. Check	OUT	ON OFF	ON		*	LED			BO		41	41	1	Yes

No.	Description	Function	Type of Information	Log Buffers				Configurable in Matrix					IEC 60870-5-103			
				Event Log ON/OFF	Trip (Fault) Log On/Off	Ground Fault Log ON/OFF	Marked in Oscill. Record	LED	Binary Input	Function Key	Relay	Chatter Suppression	Type	Information Number	Data Unit	General Interrogation
2942	Syncro-check override/by-pass (Sync.Override)	Sync. Check	OUT	ON OFF	ON		*	LED			BO		41	42	1	Yes
2943	Synchronism detected (Synchronism)	Sync. Check	OUT	ON OFF	*		*	LED			BO		41	43	1	Yes
2944	SYNC Condition Usy1>Usy2< true (SYNC Usy1>Usy2<)	Sync. Check	OUT	ON OFF	*		*	LED			BO		41	44	1	Yes
2945	SYNC Condition Usy1<Usy2> true (SYNC Usy1<Usy2>)	Sync. Check	OUT	ON OFF	*		*	LED			BO		41	45	1	Yes
2946	SYNC Condition Usy1<Usy2< true (SYNC Usy1<Usy2<)	Sync. Check	OUT	ON OFF	*		*	LED			BO		41	46	1	Yes
2947	Sync. Voltage diff. greater than limit (Sync. Udiff>)	Sync. Check	OUT	ON OFF	ON OFF		*	LED			BO		41	47	1	Yes
2948	Sync. Freq. diff. greater than limit (Sync. fdiff>)	Sync. Check	OUT	ON OFF	ON OFF		*	LED			BO		41	48	1	Yes
2949	Sync. Angle diff. greater than limit (Sync. φ-diff>)	Sync. Check	OUT	ON OFF	ON OFF		*	LED			BO		41	49	1	Yes
2951	Synchronism release (to ext. AR) (Sync. release)	Sync. Check	OUT	*	*		*	LED			BO		41	51	1	Yes
2961	Close command from synchro-check (Sync.CloseCmd)	Sync. Check	OUT	*	*		*	LED			BO		41	61	1	Yes
2970	SYNC frequency fsy2 > (fn + 3Hz) (SYNC fsy2>>)	Sync. Check	OUT	ON OFF	ON OFF		*	LED			BO					
2971	SYNC frequency fsy2 < (fn + 3Hz) (SYNC fsy2<<)	Sync. Check	OUT	ON OFF	ON OFF		*	LED			BO					
2972	SYNC frequency fsy1 > (fn + 3Hz) (SYNC fsy1>>)	Sync. Check	OUT	ON OFF	ON OFF		*	LED			BO					
2973	SYNC frequency fsy1 < (fn + 3Hz) (SYNC fsy1<<)	Sync. Check	OUT	ON OFF	ON OFF		*	LED			BO					
2974	SYNC voltage Usy2 >Umax (P.3504) (SYNC Usy2>>)	Sync. Check	OUT	ON OFF	ON OFF		*	LED			BO					
2975	SYNC voltage Usy2 < U> (P.3503) (SYNC Usy2<<)	Sync. Check	OUT	ON OFF	ON OFF		*	LED			BO					
2976	SYNC voltage Usy1 >Umax (P.3504) (SYNC Usy1>>)	Sync. Check	OUT	ON OFF	ON OFF		*	LED			BO					
2977	SYNC voltage Usy1 < U> (P.3503) (SYNC Usy1<<)	Sync. Check	OUT	ON OFF	ON OFF		*	LED			BO					
2978	SYNC Udiff too large (Usy2>Usy1) (SYNC Usy2>Usy1)	Sync. Check	OUT	ON OFF	ON OFF		*	LED			BO					
2979	SYNC Udiff too large (Usy2<Usy1) (SYNC Usy2<Usy1)	Sync. Check	OUT	ON OFF	ON OFF		*	LED			BO					
2980	SYNC fdiff too large (fsy2>fsy1) (SYNC fsy2>fsy1)	Sync. Check	OUT	ON OFF	ON OFF		*	LED			BO					
2981	SYNC fdiff too large (fsy2<fsy1) (SYNC fsy2<fsy1)	Sync. Check	OUT	ON OFF	ON OFF		*	LED			BO					
2982	SYNC PHldiff too large (PHlsy2>PHlsy1) (SYNC φsy2>φsy1)	Sync. Check	OUT	ON OFF	ON OFF		*	LED			BO					
2983	SYNC PHldiff too large (PHlsy2<PHlsy1) (SYNC φsy2<φsy1)	Sync. Check	OUT	ON OFF	ON OFF		*	LED			BO					
3101	IC compensation active (IC comp. active)	Diff. Prot	OUT	on off	*		*	LED			BO					
3102	Diff. 2nd Harmonic detected in phase L1 (2nd Harmonic L1)	Diff. Prot	OUT	*	*		*	LED			BO		92	89	1	Yes

No.	Description	Function	Type of Information	Log Buffers				Configurable in Matrix					IEC 60870-5-103			
				Event Log ON/OFF	Trip (Fault) Log On/Off	Ground Fault Log ON/OFF	Marked in Oscill. Record	LED	Binary Input	Function Key	Relay	Chatter Suppression	Type	Information Number	Data Unit	General Interrogation
3103	Diff: 2nd Harmonic detected in phase L2 (2nd Harmonic L2)	Diff. Prot	OUT	*	*		*	LED			BO		92	90	1	Yes
3104	Diff: 2nd Harmonic detected in phase L3 (2nd Harmonic L3)	Diff. Prot	OUT	*	*		*	LED			BO		92	91	1	Yes
3120	Diff: Active (Diff active)	Diff. Prot	OUT	ON OFF	*		m	LED			BO		92	92	1	Yes
3132	Diff: Fault detection (Diff. Gen. Flt.)	Diff. Prot	OUT	*	ON OFF		m	LED			BO					
3133	Diff: Fault detection in phase L1 (Diff. Flt. L1)	Diff. Prot	OUT	*	ON OFF		m	LED			BO		92	93	2	Yes
3134	Diff: Fault detection in phase L2 (Diff. Flt. L2)	Diff. Prot	OUT	*	ON OFF		m	LED			BO		92	94	2	Yes
3135	Diff: Fault detection in phase L3 (Diff. Flt. L3)	Diff. Prot	OUT	*	ON OFF		m	LED			BO		92	95	2	Yes
3136	Diff: Earth fault detection (Diff. Flt. E)	Diff. Prot	OUT	*	ON OFF		m	LED			BO		92	96	2	Yes
3137	Diff: Fault detection of I-Diff>> (I-Diff>> Flt.)	Diff. Prot	OUT	*	ON OFF		m	LED			BO		92	97	2	Yes
3139	Diff: Fault detection of I-Diff> (I-Diff> Flt.)	Diff. Prot	OUT	*	ON OFF		m	LED			BO		92	98	2	Yes
3141	Diff: General TRIP (Diff. Gen. TRIP)	Diff. Prot	OUT	*	ON OFF		m	LED			BO		92	99	2	Yes
3142	Diff: TRIP - Only L1 (Diff TRIP 1p L1)	Diff. Prot	OUT	*	ON OFF		m	LED			BO		92	100	2	Yes
3143	Diff: TRIP - Only L2 (Diff TRIP 1p L2)	Diff. Prot	OUT	*	ON OFF		m	LED			BO		92	101	2	Yes
3144	Diff: TRIP - Only L3 (Diff TRIP 1p L3)	Diff. Prot	OUT	*	ON OFF		m	LED			BO		92	102	2	Yes
3145	Diff: TRIP L123 (Diff TRIP L123)	Diff. Prot	OUT	*	ON OFF		m	LED			BO		92	103	2	Yes
3146	Diff: TRIP 1pole (Diff TRIP 1pole)	Diff. Prot	OUT	*	ON OFF		*	LED			BO					
3147	Diff: TRIP 3pole (Diff TRIP 3pole)	Diff. Prot	OUT	*	ON OFF		*	LED			BO					
3148	Diff: Differential protection is blocked (Diff block)	Diff. Prot	OUT	ON OFF	*		*	LED			BO		92	104	1	Yes
3149	Diff: Diff. protection is switched off (Diff OFF)	Diff. Prot	OUT	ON OFF	*		*	LED			BO		92	105	1	Yes
3176	Diff: Fault detection L1 (only) (Diff Flt. 1p.L1)	Diff. Prot	OUT	*	*		*	LED			BO					
3177	Diff: Fault detection L1E (Diff Flt. L1E)	Diff. Prot	OUT	*	*		*	LED			BO					
3178	Diff: Fault detection L2 (only) (Diff Flt. 1p.L2)	Diff. Prot	OUT	*	*		*	LED			BO					
3179	Diff: Fault detection L2E (Diff Flt. L2E)	Diff. Prot	OUT	*	*		*	LED			BO					
3180	Diff: Fault detection L12 (Diff Flt. L12)	Diff. Prot	OUT	*	*		*	LED			BO					
3181	Diff: Fault detection L12E (Diff Flt. L12E)	Diff. Prot	OUT	*	*		*	LED			BO					
3182	Diff: Fault detection L3 (only) (Diff Flt. 1p.L3)	Diff. Prot	OUT	*	*		*	LED			BO					
3183	Diff: Fault detection L3E (Diff Flt. L3E)	Diff. Prot	OUT	*	*		*	LED			BO					
3184	Diff: Fault detection L31 (Diff Flt. L31)	Diff. Prot	OUT	*	*		*	LED			BO					

No.	Description	Function	Type of Information	Log Buffers				Configurable in Matrix					IEC 60870-5-103			
				Event Log ON/OFF	Trip (Fault) Log On/Off	Ground Fault Log ON/OFF	Marked in Oscill. Record	LED	Binary Input	Function Key	Relay	Chatter Suppression	Type	Information Number	Data Unit	General Interrogation
3185	Diff: Fault detection L31E (Diff Fit. L31E)	Diff. Prot	OUT	*	*		*	LED			BO					
3186	Diff: Fault detection L23 (Diff Fit. L23)	Diff. Prot	OUT	*	*		*	LED			BO					
3187	Diff: Fault detection L23E (Diff Fit. L23E)	Diff. Prot	OUT	*	*		*	LED			BO					
3188	Diff: Fault detection L123 (Diff Fit. L123)	Diff. Prot	OUT	*	*		*	LED			BO					
3189	Diff: Fault detection L123E (Diff Fit. L123E)	Diff. Prot	OUT	*	*		*	LED			BO					
3190	Diff: Set Teststate of Diff. protection (Test Diff.)	Diff. Prot	IntSP	ON OFF	*		*	LED		FC TN	BO		92	106	1	Yes
3191	Diff: Set Commissioning state of Diff. (Comm. Diff)	Diff. Prot	IntSP	ON OFF	*		*	LED		FC TN	BO		92	107	1	Yes
3192	Diff: Remote relay in Teststate (TestDiff.remote)	Diff. Prot	OUT	ON OFF	*		*	LED			BO		92	108	1	Yes
3193	Diff: Commissioning state is active (Comm.Diff.act.)	Diff. Prot	OUT	ON OFF	*		*	LED			BO		92	109	1	Yes
3197	Diff: >Set Teststate of Diff. protection (>Test Diff. ON)	Diff. Prot	SP	ON OFF	*		*	LED	BI		BO					
3198	Diff: >Reset Teststate of Diff. protec. (>Test Diff. OFF)	Diff. Prot	SP	ON OFF	*		*	LED	BI		BO					
3199	Diff: Teststate of Diff. prot. ON/OFF (Test Diff.ONoff)	Diff. Prot	IntSP	ON OFF	*		*	LED			BO					
3200	Diff: Teststate ON/OFF via BI (TestDiffONoffBI)	Diff. Prot	IntSP	ON OFF	*		*	LED			BO					
3215	Incompatible Firmware Versions (Wrong Firmware)	Prot. Interface	OUT	ON	*			LED			BO					
3217	Prot Int 1: Own Datas received (P1 Data refle)	Prot. Interface	OUT	ON OFF	*			LED			BO					
3218	Prot Int 2: Own Datas received (P2 Data refle)	Prot. Interface	OUT	ON OFF	*			LED			BO					
3227	>Prot Int 1: Transmitter is switched off (>P11 light off)	Prot. Interface	SP	ON OFF	*		*	LED	BI		BO					
3228	>Prot Int 2: Transmitter is switched off (>P12 light off)	Prot. Interface	SP	ON OFF	*		*	LED	BI		BO					
3229	Prot Int 1: Reception of faulty data (P11 Data fault)	Prot. Interface	OUT	ON OFF	*		*	LED			BO		93	135	1	Yes
3230	Prot Int 1: Total reception failure (P11 Datafailure)	Prot. Interface	OUT	ON OFF	*		*	LED			BO		93	136	1	Yes
3231	Prot Int 2: Reception of faulty data (P12 Data fault)	Prot. Interface	OUT	ON OFF	*		*	LED			BO		93	137	1	Yes
3232	Prot Int 2: Total reception failure (P12 Datafailure)	Prot. Interface	OUT	ON OFF	*		*	LED			BO		93	138	1	Yes
3233	Device table has inconsistent numbers (DT inconsistent)	Prot. Interface	OUT	ON OFF	*			LED			BO					
3234	Device tables are unequal (DT unequal)	Prot. Interface	OUT	ON OFF	*			LED			BO					
3235	Differences between common parameters (Par. different)	Prot. Interface	OUT	ON OFF	*			LED			BO					
3236	Different PI for transmit and receive (P1<->P12 error)	Prot. Interface	OUT	ON OFF	*			LED			BO					
3239	Prot Int 1: Transmission delay too high (P11 TD alarm)	Prot. Interface	OUT	ON OFF	*			LED			BO		93	139	1	Yes
3240	Prot Int 2: Transmission delay too high (P12 TD alarm)	Prot. Interface	OUT	ON OFF	*			LED			BO		93	140	1	Yes

No.	Description	Function	Type of Information	Log Buffers				Configurable in Matrix					IEC 60870-5-103			
				Event Log ON/OFF	Trip (Fault) Log On/Off	Ground Fault Log ON/OFF	Marked in Oscill. Record	LED	Binary Input	Function Key	Relay	Chatter Suppression	Type	Information Number	Data Unit	General Interrogation
3243	Prot Int 1: Connected with relay ID (PI1 with)	Prot. Interface	VI	ON OFF	*											
3244	Prot Int 2: Connected with relay ID (PI2 with)	Prot. Interface	VI	ON OFF	*											
3245	> GPS failure from external (>GPS failure)	Prot. Interface	SP	ON OFF	*		*	LED	BI		BO					
3247	GPS: local pulse loss (GPS loss)	Prot. Interface	OUT	ON OFF	*		*	LED			BO					
3248	GPS: Prot Int 1 is GPS synchronized (PI 1 GPS sync.)	Prot. Interface	OUT	ON OFF	*		*	LED			BO					
3249	GPS: Prot Int 2 is GPS synchronized (PI 2 GPS sync.)	Prot. Interface	OUT	ON OFF	*		*	LED			BO					
3250	GPS:PI1 unsym.propagation delay too high (PI 1 PD unsym.)	Prot. Interface	OUT	ON OFF	*		*	LED			BO					
3251	GPS:PI2 unsym.propagation delay too high (PI 2 PD unsym.)	Prot. Interface	OUT	ON OFF	*		*	LED			BO					
3252	> PI1 Synchronization RESET (>SYNC PI1 RESET)	Prot. Interface	SP	on off	*		*	LED	BI		BO					
3253	> PI2 Synchronization RESET (>SYNC PI2 RESET)	Prot. Interface	SP	on off	*		*	LED	BI		BO					
3254	Prot.1: Delay time change recognized (PI1 jump)	Prot. Interface	OUT	on off	*		*	LED			BO					
3255	Prot.2: Delay time change recognized (PI2 jump)	Prot. Interface	OUT	on off	*		*	LED			BO					
3256	Prot.1: Delay time unsymmetry to large (PI1 unsym.)	Prot. Interface	IntSP	ON OFF	*			LED			BO					
3257	Prot.2: Delay time unsymmetry to large (PI2 unsym.)	Prot. Interface	IntSP	ON OFF	*			LED			BO					
3258	ProtInt1:Permissible error rate exceeded (PI1 Error)	Prot. Interface	OUT	on off	*		*	LED			BO					
3259	ProtInt2:Permissible error rate exceeded (PI2 Error)	Prot. Interface	OUT	on off	*		*	LED			BO					
3260	Diff: >Commissioning state ON (>Comm. Diff ON)	Diff. Prot	SP	ON OFF	*		*	LED	BI		BO					
3261	Diff: >Commissioning state OFF (>Comm. Diff OFF)	Diff. Prot	SP	ON OFF	*		*	LED	BI		BO					
3262	Diff: Commissioning state ON/OFF (Comm Diff.ONoff)	Diff. Prot	IntSP	ON OFF	*		*	LED			BO					
3263	Diff: Commissioning state ON/OFF via BI (CommDiffONoffBI)	Diff. Prot	IntSP	ON OFF	*		*	LED			BO					
3452	> Logout state ON (>Logout ON)	Diff.-Topo	SP	ON OFF	*		*	LED	BI		BO					
3453	> Logout state OFF (>Logout OFF)	Diff.-Topo	SP	ON OFF	*		*	LED	BI		BO					
3457	System operates in a closed Ringtopology (Ringtopology)	Diff.-Topo	OUT	ON OFF	*		*	LED			BO		93	141	1	Yes
3458	System operates in a open Chaintopology (Chaintopology)	Diff.-Topo	OUT	ON OFF	*		*	LED			BO		93	142	1	Yes
3459	Logout state ON/OFF (Logout ON/off)	Diff.-Topo	IntSP	ON OFF	*		*	LED			BO					
3460	Logout state ON/OFF via BI (Logout ON/offBI)	Diff.-Topo	IntSP	ON OFF	*		*	LED			BO					
3464	Communication topology is complete (Topol complete)	Diff.-Topo	OUT	ON OFF	*		*	LED			BO					

No.	Description	Function	Type of Information	Log Buffers				Configurable in Matrix					IEC 60870-5-103			
				Event Log ON/OFF	Trip (Fault) Log On/Off	Ground Fault Log ON/OFF	Marked in Oscill. Record	LED	Binary Input	Function Key	Relay	Chatter Suppression	Type	Information Number	Data Unit	General Interrogation
3475	Relay 1 in Logout state (Rel1Logout)	Diff.-Topo	IntSP	ON OFF	*		*	LED		FC TN	BO		93	143	1	Yes
3476	Relay 2 in Logout state (Rel2Logout)	Diff.-Topo	IntSP	ON OFF	*		*	LED		FC TN	BO		93	144	1	Yes
3477	Relay 3 in Logout state (Rel3Logout)	Diff.-Topo	IntSP	ON OFF	*		*	LED		FC TN	BO		93	145	1	Yes
3478	Relay 4 in Logout state (Rel4Logout)	Diff.-Topo	IntSP	ON OFF	*		*	LED		FC TN	BO		93	146	1	Yes
3479	Relay 5 in Logout state (Rel5Logout)	Diff.-Topo	IntSP	ON OFF	*		*	LED		FC TN	BO		93	147	1	Yes
3480	Relay 6 in Logout state (Rel6Logout)	Diff.-Topo	IntSP	ON OFF	*		*	LED		FC TN	BO		93	148	1	Yes
3484	Local activation of Logout state (Logout)	Diff.-Topo	IntSP	ON OFF	*		*	LED		FC TN	BO		93	149	1	Yes
3487	Equal IDs in constellation (Equal IDs)	Diff.-Topo	OUT	ON OFF	*		*	LED			BO					
3491	Relay 1 in Login state (Rel1 Login)	Diff.-Topo	OUT	ON OFF	*		*	LED			BO		93	191	1	Yes
3492	Relay 2 in Login state (Rel2 Login)	Diff.-Topo	OUT	ON OFF	*		*	LED			BO		93	192	1	Yes
3493	Relay 3 in Login state (Rel3 Login)	Diff.-Topo	OUT	ON OFF	*		*	LED			BO		93	193	1	Yes
3494	Relay 4 in Login state (Rel4 Login)	Diff.-Topo	OUT	ON OFF	*		*	LED			BO		93	194	1	Yes
3495	Relay 5 in Login state (Rel5 Login)	Diff.-Topo	OUT	ON OFF	*		*	LED			BO		93	195	1	Yes
3496	Relay 6 in Login state (Rel6 Login)	Diff.-Topo	OUT	ON OFF	*		*	LED			BO		93	196	1	Yes
3501	I.Trip: >Intertrip L1 signal input (>Intertrip L1)	Intertrip	SP	ON OFF	*		*	LED	BI		BO					
3502	I.Trip: >Intertrip L2 signal input (>Intertrip L2)	Intertrip	SP	ON OFF	*		*	LED	BI		BO					
3503	I.Trip: >Intertrip L3 signal input (>Intertrip L3)	Intertrip	SP	ON OFF	*		*	LED	BI		BO					
3504	I.Trip: >Intertrip 3 pole signal input (>Intertrip 3pol)	Intertrip	SP	ON OFF	*		*	LED	BI		BO					
3505	I.Trip: Received at Prot.Interface 1 L1 (ITrp.rec.PI1.L1)	Intertrip	OUT	on off	*		*	LED			BO					
3506	I.Trip: Received at Prot.Interface 1 L2 (ITrp.rec.PI1.L2)	Intertrip	OUT	on off	*		*	LED			BO					
3507	I.Trip: Received at Prot.Interface 1 L3 (ITrp.rec.PI1.L3)	Intertrip	OUT	on off	*		*	LED			BO					
3508	I.Trip: Received at Prot.Interface 2 L1 (ITrp.rec.PI2.L1)	Intertrip	OUT	on off	*		*	LED			BO					
3509	I.Trip: Received at Prot.Interface 2 L2 (ITrp.rec.PI2.L2)	Intertrip	OUT	on off	*		*	LED			BO					
3510	I.Trip: Received at Prot.Interface 2 L3 (ITrp.rec.PI2.L3)	Intertrip	OUT	on off	*		*	LED			BO					
3511	I.Trip: Sending at Prot.Interface 1 L1 (ITrp.sen.PI1.L1)	Intertrip	OUT	ON OFF	*		*	LED			BO					
3512	I.Trip: Sending at Prot.Interface 1 L2 (ITrp.sen.PI1.L2)	Intertrip	OUT	ON OFF	*		*	LED			BO					
3513	I.Trip: Sending at Prot.Interface 1 L3 (ITrp.sen.PI1.L3)	Intertrip	OUT	ON OFF	*		*	LED			BO					
3514	I.Trip: Sending at Prot.Interface 2 L1 (ITrp.sen.PI2.L1)	Intertrip	OUT	ON OFF	*		*	LED			BO					

No.	Description	Function	Type of Information	Log Buffers				Configurable in Matrix					IEC 60870-5-103			
				Event Log ON/OFF	Trip (Fault) Log On/Off	Ground Fault Log ON/OFF	Marked in Oscill. Record	LED	Binary Input	Function Key	Relay	Chatter Suppression	Type	Information Number	Data Unit	General Interrogation
3515	I.Trip: Sending at Prot.Interface 2 L2 (ITrp.sen.PI2.L2)	Intertrip	OUT	ON OFF	*		*	LED			BO					
3516	I.Trip: Sending at Prot.Interface 2 L3 (ITrp.sen.PI2.L3)	Intertrip	OUT	ON OFF	*		*	LED			BO					
3517	I.Trip: General TRIP (ITrp. Gen. TRIP)	Intertrip	OUT	*	ON OFF		m	LED			BO					
3518	I.Trip: TRIP - Only L1 (ITrp.TRIP 1p L1)	Intertrip	OUT	*	ON OFF		m	LED			BO		93	150	2	Yes
3519	I.Trip: TRIP - Only L2 (ITrp.TRIP 1p L2)	Intertrip	OUT	*	ON OFF		m	LED			BO		93	151	2	Yes
3520	I.Trip: TRIP - Only L3 (ITrp.TRIP 1p L3)	Intertrip	OUT	*	ON OFF		m	LED			BO		93	152	2	Yes
3521	I.Trip: TRIP L123 (ITrp.TRIP L123)	Intertrip	OUT	*	ON OFF		m	LED			BO		93	153	2	Yes
3522	I.Trip: TRIP 1pole (Diff TRIP 1pole)	Intertrip	OUT	*	ON OFF		*	LED			BO					
3523	I.Trip: TRIP 3pole (Diff TRIP 3pole)	Intertrip	OUT	*	ON OFF		*	LED			BO					
3525	>Differential protection blocking signal (> Diff block)	Diff. Prot	SP	ON OFF	*		*	LED	BI		BO					
3526	Differential blocking received at PI1 (Diffblk.rec PI1)	Diff. Prot	OUT	ON OFF	*		*	LED			BO					
3527	Differential blocking received at PI2 (Diffblk.rec PI2)	Diff. Prot	OUT	ON OFF	*		*	LED			BO					
3528	Differential blocking sending via PI1 (Diffblk.sen PI1)	Diff. Prot	OUT	ON OFF	*		*	LED			BO					
3529	Differential blocking sending via PI2 (Diffblk.sen PI2)	Diff. Prot	OUT	ON OFF	*		*	LED			BO					
3541	>Remote Trip 1 signal input (>Remote Trip1)	Remote Signals	SP	on off	*		*	LED	BI		BO					
3542	>Remote Trip 2 signal input (>Remote Trip2)	Remote Signals	SP	on off	*		*	LED	BI		BO					
3543	>Remote Trip 3 signal input (>Remote Trip3)	Remote Signals	SP	on off	*		*	LED	BI		BO					
3544	>Remote Trip 4 signal input (>Remote Trip4)	Remote Signals	SP	on off	*		*	LED	BI		BO					
3545	Remote Trip 1 received (RemoteTrip1 rec)	Remote Signals	OUT	on off	*		*	LED			BO		93	154	1	Yes
3546	Remote Trip 2 received (RemoteTrip2 rec)	Remote Signals	OUT	on off	*		*	LED			BO		93	155	1	Yes
3547	Remote Trip 3 received (RemoteTrip3 rec)	Remote Signals	OUT	on off	*		*	LED			BO		93	156	1	Yes
3548	Remote Trip 4 received (RemoteTrip4 rec)	Remote Signals	OUT	on off	*		*	LED			BO		93	157	1	Yes
3549	>Remote Signal 1 input (>Rem. Signal 1)	Remote Signals	SP	on off	*		*	LED	BI		BO					
3550	>Remote Signal 2 input (>Rem.Signal 2)	Remote Signals	SP	on off	*		*	LED	BI		BO					
3551	>Remote Signal 3 input (>Rem.Signal 3)	Remote Signals	SP	on off	*		*	LED	BI		BO					
3552	>Remote Signal 4 input (>Rem.Signal 4)	Remote Signals	SP	on off	*		*	LED	BI		BO					
3553	>Remote Signal 5 input (>Rem.Signal 5)	Remote Signals	SP	on off	*		*	LED	BI		BO					
3554	>Remote Signal 6 input (>Rem.Signal 6)	Remote Signals	SP	on off	*		*	LED	BI		BO					

No.	Description	Function	Type of Information	Log Buffers				Configurable in Matrix					IEC 60870-5-103			
				Event Log ON/OFF	Trip (Fault) Log On/Off	Ground Fault Log ON/OFF	Marked in Oscill. Record	LED	Binary Input	Function Key	Relay	Chatter Suppression	Type	Information Number	Data Unit	General Interrogation
3555	>Remote Signal 7 input (>Rem.Signal 7)	Remote Signals	SP	on off	*		*	LED	BI		BO					
3556	>Remote Signal 8 input (>Rem.Signal 8)	Remote Signals	SP	on off	*		*	LED	BI		BO					
3557	>Remote Signal 9 input (>Rem.Signal 9)	Remote Signals	SP	on off	*		*	LED	BI		BO					
3558	>Remote Signal 10 input (>Rem.Signal10)	Remote Signals	SP	on off	*		*	LED	BI		BO					
3559	>Remote Signal 11 input (>Rem.Signal11)	Remote Signals	SP	on off	*		*	LED	BI		BO					
3560	>Remote Signal 12 input (>Rem.Signal12)	Remote Signals	SP	on off	*		*	LED	BI		BO					
3561	>Remote Signal 13 input (>Rem.Signal13)	Remote Signals	SP	on off	*		*	LED	BI		BO					
3562	>Remote Signal 14 input (>Rem.Signal14)	Remote Signals	SP	on off	*		*	LED	BI		BO					
3563	>Remote Signal 15 input (>Rem.Signal15)	Remote Signals	SP	on off	*		*	LED	BI		BO					
3564	>Remote Signal 16 input (>Rem.Signal16)	Remote Signals	SP	on off	*		*	LED	BI		BO					
3565	>Remote Signal 17 input (>Rem.Signal17)	Remote Signals	SP	on off	*		*	LED	BI		BO					
3566	>Remote Signal 18 input (>Rem.Signal18)	Remote Signals	SP	on off	*		*	LED	BI		BO					
3567	>Remote Signal 19 input (>Rem.Signal19)	Remote Signals	SP	on off	*		*	LED	BI		BO					
3568	>Remote Signal 20 input (>Rem.Signal20)	Remote Signals	SP	on off	*		*	LED	BI		BO					
3569	>Remote Signal 21 input (>Rem.Signal21)	Remote Signals	SP	on off	*		*	LED	BI		BO					
3570	>Remote Signal 22 input (>Rem.Signal22)	Remote Signals	SP	on off	*		*	LED	BI		BO					
3571	>Remote Signal 23 input (>Rem.Signal23)	Remote Signals	SP	on off	*		*	LED	BI		BO					
3572	>Remote Signal 24 input (>Rem.Signal24)	Remote Signals	SP	on off	*		*	LED	BI		BO					
3573	Remote signal 1 received (Rem.Sig 1rcv)	Remote Signals	OUT	on off	*		*	LED			BO		93	158	1	Yes
3574	Remote signal 2 received (Rem.Sig 2rcv)	Remote Signals	OUT	on off	*		*	LED			BO		93	159	1	Yes
3575	Remote signal 3 received (Rem.Sig 3rcv)	Remote Signals	OUT	on off	*		*	LED			BO		93	160	1	Yes
3576	Remote signal 4 received (Rem.Sig 4rcv)	Remote Signals	OUT	on off	*		*	LED			BO		93	161	1	Yes
3577	Remote signal 5 received (Rem.Sig 5rcv)	Remote Signals	OUT	on off	*		*	LED			BO		93	162	1	Yes
3578	Remote signal 6 received (Rem.Sig 6rcv)	Remote Signals	OUT	on off	*		*	LED			BO		93	163	1	Yes
3579	Remote signal 7 received (Rem.Sig 7rcv)	Remote Signals	OUT	on off	*		*	LED			BO		93	164	1	Yes
3580	Remote signal 8 received (Rem.Sig 8rcv)	Remote Signals	OUT	on off	*		*	LED			BO		93	165	1	Yes
3581	Remote signal 9 received (Rem.Sig 9rcv)	Remote Signals	OUT	on off	*		*	LED			BO		93	166	1	Yes
3582	Remote signal 10 received (Rem.Sig10rcv)	Remote Signals	OUT	on off	*		*	LED			BO		93	167	1	Yes

No.	Description	Function	Type of Information	Log Buffers				Configurable in Matrix					IEC 60870-5-103			
				Event Log ON/OFF	Trip (Fault) Log On/Off	Ground Fault Log ON/OFF	Marked in Oscill. Record	LED	Binary Input	Function Key	Relay	Chatter Suppression	Type	Information Number	Data Unit	General Interrogation
3583	Remote signal 11 received (Rem.Sig11recv)	Remote Signals	OUT	on off	*		*	LED			BO		93	168	1	Yes
3584	Remote signal 12 received (Rem.Sig12recv)	Remote Signals	OUT	on off	*		*	LED			BO		93	169	1	Yes
3585	Remote signal 13 received (Rem.Sig13recv)	Remote Signals	OUT	on off	*		*	LED			BO		93	170	1	Yes
3586	Remote signal 14 received (Rem.Sig14recv)	Remote Signals	OUT	on off	*		*	LED			BO		93	171	1	Yes
3587	Remote signal 15 received (Rem.Sig15recv)	Remote Signals	OUT	on off	*		*	LED			BO		93	172	1	Yes
3588	Remote signal 16 received (Rem.Sig16recv)	Remote Signals	OUT	on off	*		*	LED			BO		93	173	1	Yes
3589	Remote signal 17 received (Rem.Sig17recv)	Remote Signals	OUT	on off	*		*	LED			BO		93	174	1	Yes
3590	Remote signal 18 received (Rem.Sig18recv)	Remote Signals	OUT	on off	*		*	LED			BO		93	175	1	Yes
3591	Remote signal 19 received (Rem.Sig19recv)	Remote Signals	OUT	on off	*		*	LED			BO		93	176	1	Yes
3592	Remote signal 20 received (Rem.Sig20recv)	Remote Signals	OUT	on off	*		*	LED			BO		93	177	1	Yes
3593	Remote signal 21 received (Rem.Sig21recv)	Remote Signals	OUT	on off	*		*	LED			BO		93	178	1	Yes
3594	Remote signal 22 received (Rem.Sig22recv)	Remote Signals	OUT	on off	*		*	LED			BO		93	179	1	Yes
3595	Remote signal 23 received (Rem.Sig23recv)	Remote Signals	OUT	on off	*		*	LED			BO		93	180	1	Yes
3596	Remote signal 24 received (Rem.Sig24recv)	Remote Signals	OUT	on off	*		*	LED			BO		93	181	1	Yes
3603	>BLOCK Distance protection (>BLOCK Distance)	Dis. General	SP	*	*		*	LED	BI		BO					
3610	>BLOCK Z1-Trip (>BLOCK Z1-Trip)	Dis. General	SP	on off	*		*	LED	BI		BO		28	10	1	Yes
3611	>ENABLE Z1B (with setted Time Delay) (>ENABLE Z1B)	Dis. General	SP	ON OFF	*		*	LED	BI		BO		28	11	1	Yes
3613	>ENABLE Z1B instantaneous (w/o T-Delay) (>ENABLE Z1Binst)	Dis. General	SP	ON OFF	*		*	LED	BI		BO		28	13	1	Yes
3617	>BLOCK Z4-Trip (>BLOCK Z4-Trip)	Dis. General	SP	ON OFF	*		*	LED	BI		BO		28	17	1	Yes
3618	>BLOCK Z5-Trip (>BLOCK Z5-Trip)	Dis. General	SP	ON OFF	*		*	LED	BI		BO		28	18	1	Yes
3619	>BLOCK Z4 for ph-e loops (>BLOCK Z4 Ph-E)	Dis. General	SP	ON OFF	*		*	LED	BI		BO		28	19	1	Yes
3620	>BLOCK Z5 for ph-e loops (>BLOCK Z5 Ph-E)	Dis. General	SP	ON OFF	*		*	LED	BI		BO		28	20	1	Yes
3651	Distance is switched off (Dist. OFF)	Dis. General	OUT	ON OFF	*		*	LED			BO		28	51	1	Yes
3652	Distance is BLOCKED (Dist. BLOCK)	Dis. General	OUT	ON OFF	ON OFF		*	LED			BO		28	52	1	Yes
3653	Distance is ACTIVE (Dist. ACTIVE)	Dis. General	OUT	*	*		*	LED			BO		28	53	1	Yes
3654	Setting error K0(Z1) or Angle K0(Z1) (Dis.ErrorK0(Z1))	Dis. General	OUT	ON OFF	*		*	LED			BO					
3655	Setting error K0(>Z1) or Angle K0(>Z1) (DisErrorK0(>Z1))	Dis. General	OUT	ON OFF	*		*	LED			BO					

No.	Description	Function	Type of Information	Log Buffers				Configurable in Matrix					IEC 60870-5-103			
				Event Log ON/OFF	Trip (Fault) Log On/Off	Ground Fault Log ON/OFF	Marked in Oscill. Record	LED	Binary Input	Function Key	Relay	Chatter Suppression	Type	Information Number	Data Unit	General Interrogation
3671	Distance PICKED UP (Dis. PICKUP)	Dis. General	OUT	*	OFF		*	LED			BO		28	71	2	Yes
3672	Distance PICKUP L1 (Dis.Pick-up L1)	Dis. General	OUT	*	*		*	LED			BO		28	72	2	Yes
3673	Distance PICKUP L2 (Dis.Pick-up L2)	Dis. General	OUT	*	*		*	LED			BO		28	73	2	Yes
3674	Distance PICKUP L3 (Dis.Pick-up L3)	Dis. General	OUT	*	*		*	LED			BO		28	74	2	Yes
3675	Distance PICKUP Earth (Dis.Pickup E)	Dis. General	OUT	*	*		*	LED			BO		28	75	2	Yes
3681	Distance Pickup Phase L1 (only) (Dis.Pickup 1pL1)	Dis. General	OUT	*	ON		*	LED			BO		28	81	2	No
3682	Distance Pickup L1E (Dis.Pick-up L1E)	Dis. General	OUT	*	ON		*	LED			BO		28	82	2	No
3683	Distance Pickup Phase L2 (only) (Dis.Pickup 1pL2)	Dis. General	OUT	*	ON		*	LED			BO		28	83	2	No
3684	Distance Pickup L2E (Dis.Pick-up L2E)	Dis. General	OUT	*	ON		*	LED			BO		28	84	2	No
3685	Distance Pickup L12 (Dis.Pick-up L12)	Dis. General	OUT	*	ON		*	LED			BO		28	85	2	No
3686	Distance Pickup L12E (Dis.Pickup L12E)	Dis. General	OUT	*	ON		*	LED			BO		28	86	2	No
3687	Distance Pickup Phase L3 (only) (Dis.Pickup 1pL3)	Dis. General	OUT	*	ON		*	LED			BO		28	87	2	No
3688	Distance Pickup L3E (Dis.Pick-up L3E)	Dis. General	OUT	*	ON		*	LED			BO		28	88	2	No
3689	Distance Pickup L31 (Dis.Pick-up L31)	Dis. General	OUT	*	ON		*	LED			BO		28	89	2	No
3690	Distance Pickup L31E (Dis.Pickup L31E)	Dis. General	OUT	*	ON		*	LED			BO		28	90	2	No
3691	Distance Pickup L23 (Dis.Pick-up L23)	Dis. General	OUT	*	ON		*	LED			BO		28	91	2	No
3692	Distance Pickup L23E (Dis.Pickup L23E)	Dis. General	OUT	*	ON		*	LED			BO		28	92	2	No
3693	Distance Pickup L123 (Dis.Pickup L123)	Dis. General	OUT	*	ON		*	LED			BO		28	93	2	No
3694	Distance Pickup123E (Dis.Pickup123E)	Dis. General	OUT	*	ON		*	LED			BO		28	94	2	No
3695	Dist.: Phi phase L1 Pickup (Dis Pickup ϕ L1)	Dis. General	OUT	*	*		*	LED			BO					
3696	Dist.: Phi phase L2 Pickup (Dis Pickup ϕ L2)	Dis. General	OUT	*	*		*	LED			BO					
3697	Dist.: Phi phase L3 Pickup (Dis Pickup ϕ L3)	Dis. General	OUT	*	*		*	LED			BO					
3701	Distance Loop L1E selected forward (Dis.Loop L1-E f)	Dis. General	OUT	*	ON OFF		*	LED			BO					
3702	Distance Loop L2E selected forward (Dis.Loop L2-E f)	Dis. General	OUT	*	ON OFF		*	LED			BO					
3703	Distance Loop L3E selected forward (Dis.Loop L3-E f)	Dis. General	OUT	*	ON OFF		*	LED			BO					
3704	Distance Loop L12 selected forward (Dis.Loop L1-2 f)	Dis. General	OUT	*	ON OFF		*	LED			BO					
3705	Distance Loop L23 selected forward (Dis.Loop L2-3 f)	Dis. General	OUT	*	ON OFF		*	LED			BO					
3706	Distance Loop L31 selected forward (Dis.Loop L3-1 f)	Dis. General	OUT	*	ON OFF		*	LED			BO					

No.	Description	Function	Type of Information	Log Buffers				Configurable in Matrix					IEC 60870-5-103			
				Event Log ON/OFF	Trip (Fault) Log On/Off	Ground Fault Log ON/OFF	Marked in Oscill. Record	LED	Binary Input	Function Key	Relay	Chatter Suppression	Type	Information Number	Data Unit	General Interrogation
3707	Distance Loop L1E selected reverse (Dis. Loop L1-E r)	Dis. General	OUT	*	ON OFF		*	LED			BO					
3708	Distance Loop L2E selected reverse (Dis. Loop L2-E r)	Dis. General	OUT	*	ON OFF		*	LED			BO					
3709	Distance Loop L3E selected reverse (Dis. Loop L3-E r)	Dis. General	OUT	*	ON OFF		*	LED			BO					
3710	Distance Loop L12 selected reverse (Dis. Loop L1-2 r)	Dis. General	OUT	*	ON OFF		*	LED			BO					
3711	Distance Loop L23 selected reverse (Dis. Loop L2-3 r)	Dis. General	OUT	*	ON OFF		*	LED			BO					
3712	Distance Loop L31 selected reverse (Dis. Loop L3-1 r)	Dis. General	OUT	*	ON OFF		*	LED			BO					
3713	Distance Loop L1E selected non-direct. (Dis. Loop L1E<->)	Dis. General	OUT	*	ON OFF		*	LED			BO					
3714	Distance Loop L2E selected non-direct. (Dis. Loop L2E<->)	Dis. General	OUT	*	ON OFF		*	LED			BO					
3715	Distance Loop L3E selected non-direct. (Dis. Loop L3E<->)	Dis. General	OUT	*	ON OFF		*	LED			BO					
3716	Distance Loop L12 selected non-direct. (Dis. Loop L12<->)	Dis. General	OUT	*	ON OFF		*	LED			BO					
3717	Distance Loop L23 selected non-direct. (Dis. Loop L23<->)	Dis. General	OUT	*	ON OFF		*	LED			BO					
3718	Distance Loop L31 selected non-direct. (Dis. Loop L31<->)	Dis. General	OUT	*	ON OFF		*	LED			BO					
3719	Distance Pickup FORWARD (Dis. forward)	Dis. General	OUT	*	*		*	LED			BO		28	121	2	No
3720	Distance Pickup REVERSE (Dis. reverse)	Dis. General	OUT	*	*		*	LED			BO		28	120	2	No
3741	Distance Pickup Z1, Loop L1E (Dis. Z1 L1E)	Dis. General	OUT	*	*		*	LED			BO					
3742	Distance Pickup Z1, Loop L2E (Dis. Z1 L2E)	Dis. General	OUT	*	*		*	LED			BO					
3743	Distance Pickup Z1, Loop L3E (Dis. Z1 L3E)	Dis. General	OUT	*	*		*	LED			BO					
3744	Distance Pickup Z1, Loop L12 (Dis. Z1 L12)	Dis. General	OUT	*	*		*	LED			BO					
3745	Distance Pickup Z1, Loop L23 (Dis. Z1 L23)	Dis. General	OUT	*	*		*	LED			BO					
3746	Distance Pickup Z1, Loop L31 (Dis. Z1 L31)	Dis. General	OUT	*	*		*	LED			BO					
3747	Distance Pickup Z1B, Loop L1E (Dis. Z1B L1E)	Dis. General	OUT	*	*		*	LED			BO					
3748	Distance Pickup Z1B, Loop L2E (Dis. Z1B L2E)	Dis. General	OUT	*	*		*	LED			BO					
3749	Distance Pickup Z1B, Loop L3E (Dis. Z1B L3E)	Dis. General	OUT	*	*		*	LED			BO					
3750	Distance Pickup Z1B, Loop L12 (Dis. Z1B L12)	Dis. General	OUT	*	*		*	LED			BO					
3751	Distance Pickup Z1B, Loop L23 (Dis. Z1B L23)	Dis. General	OUT	*	*		*	LED			BO					
3752	Distance Pickup Z1B, Loop L31 (Dis. Z1B L31)	Dis. General	OUT	*	*		*	LED			BO					
3755	Distance Pickup Z2 (Dis. Pickup Z2)	Dis. General	OUT	*	*		*	LED			BO					
3758	Distance Pickup Z3 (Dis. Pickup Z3)	Dis. General	OUT	*	*		*	LED			BO					

No.	Description	Function	Type of Information	Log Buffers				Configurable in Matrix					IEC 60870-5-103			
				Event Log ON/OFF	Trip (Fault) Log On/Off	Ground Fault Log ON/OFF	Marked in Oscill. Record	LED	Binary Input	Function Key	Relay	Chatter Suppression	Type	Information Number	Data Unit	General Interrogation
3759	Distance Pickup Z4 (Dis. Pickup Z4)	Dis. General	OUT	*	*		*	LED			BO					
3760	Distance Pickup Z5 (Dis. Pickup Z5)	Dis. General	OUT	*	*		*	LED			BO					
3771	DistanceTime Out T1 (Dis.Time Out T1)	Dis. General	OUT	*	*		*	LED			BO		28	171	2	No
3774	DistanceTime Out T2 (Dis.Time Out T2)	Dis. General	OUT	*	*		*	LED			BO		28	172	2	No
3777	DistanceTime Out T3 (Dis.Time Out T3)	Dis. General	OUT	*	*		*	LED			BO		28	173	2	No
3778	DistanceTime Out T4 (Dis.Time Out T4)	Dis. General	OUT	*	*		*	LED			BO		28	174	2	No
3779	DistanceTime Out T5 (Dis.Time Out T5)	Dis. General	OUT	*	*		*	LED			BO		28	175	2	No
3780	DistanceTime Out T1B (Dis.TimeOut T1B)	Dis. General	OUT	*	*		*	LED			BO		28	180	2	No
3781	DistanceTime Out Forward PICKUP (Dis.TimeOut Tfw)	Dis. General	OUT	*	*		*	LED			BO		28	160	2	No
3782	DistanceTime Out Non-directional PICKUP (Dis.TimeOut Tnd)	Dis. General	OUT	*	*		*	LED			BO		28	161	2	No
3801	Distance protection: General trip (Dis.Gen. Trip)	Dis. General	OUT	*	*		*	LED			BO		28	201	2	No
3802	Distance TRIP command - Only Phase L1 (Dis.Trip 1pL1)	Dis. General	OUT	*	ON		*	LED			BO		28	202	2	No
3803	Distance TRIP command - Only Phase L2 (Dis.Trip 1pL2)	Dis. General	OUT	*	ON		*	LED			BO		28	203	2	No
3804	Distance TRIP command - Only Phase L3 (Dis.Trip 1pL3)	Dis. General	OUT	*	ON		*	LED			BO		28	204	2	No
3805	Distance TRIP command Phases L123 (Dis.Trip 3p)	Dis. General	OUT	*	ON		*	LED			BO		28	205	2	No
3811	Distance TRIP single-phase Z1 (Dis.TripZ1/1p)	Dis. General	OUT	*	*		*	LED			BO		28	211	2	No
3813	Distance TRIP single-phase Z1B (Dis.TripZ1B/1p)	Dis. General	OUT	*	*		*	LED			BO		28	213	2	No
3816	Distance TRIP single-phase Z2 (Dis.TripZ2/1p)	Dis. General	OUT	*	*		*	LED			BO		28	216	2	No
3817	Distance TRIP 3phase in Z2 (Dis.TripZ2/3p)	Dis. General	OUT	*	*		*	LED			BO		28	217	2	No
3818	Distance TRIP 3phase in Z3 (Dis.TripZ3/T3)	Dis. General	OUT	*	*		*	LED			BO		28	218	2	No
3819	Dist.: Trip by fault detection, forward (Dis.Trip FD->)	Dis. General	OUT	*	*		*	LED			BO		28	219	2	No
3820	Dist.: Trip by fault detec, rev/non-dir. (Dis.Trip <->)	Dis. General	OUT	*	*		*	LED			BO		28	220	2	No
3821	Distance TRIP 3phase in Z4 (Dis.TRIP 3p. Z4)	Dis. General	OUT	*	*		*	LED			BO		28	209	2	No
3822	Distance TRIP 3phase in Z5 (Dis.TRIP 3p. Z5)	Dis. General	OUT	*	*		*	LED			BO		28	210	2	No
3823	DisTRIP 3phase in Z1 with single-ph Flt. (DisTRIP3p. Z1sf)	Dis. General	OUT	*	*		*	LED			BO		28	224	2	No
3824	DisTRIP 3phase in Z1 with multi-ph Flt. (DisTRIP3p. Z1mf)	Dis. General	OUT	*	*		*	LED			BO		28	225	2	No
3825	DisTRIP 3phase in Z1B with single-ph Flt (DisTRIP3p.Z1Bsf)	Dis. General	OUT	*	*		*	LED			BO		28	244	2	No

No.	Description	Function	Type of Information	Log Buffers				Configurable in Matrix					IEC 60870-5-103			
				Event Log ON/OFF	Trip (Fault) Log On/Off	Ground Fault Log ON/OFF	Marked in Oscill. Record	LED	Binary Input	Function Key	Relay	Chatter Suppression	Type	Information Number	Data Unit	General Interrogation
3826	DisTRIP 3phase in Z1B with multi-ph Flt. (DisTRIP3p Z1Bmf)	Dis. General	OUT	*	*		*	LED			BO		28	245	2	No
3850	DisTRIP Z1B with Teleprotection scheme (DisTRIP Z1B Tel)	Dis. General	OUT	*	*		*	LED			BO		28	251	2	No
4001	>Distance Teleprotection ON (>Dis.Telep. ON)	Teleprot. Dist.	SP	*	*		*	LED	BI		BO					
4002	>Distance Teleprotection OFF (>Dis.Telep.OFF)	Teleprot. Dist.	SP	*	*		*	LED	BI		BO					
4003	>Distance Teleprotection BLOCK (>Dis.Telep. Blk)	Teleprot. Dist.	SP	ON OFF	ON OFF		*	LED	BI		BO		29	3	1	Yes
4005	>Dist. teleprotection: Carrier faulty (>Dis.RecFail)	Teleprot. Dist.	SP	on off	*		*	LED	BI		BO					
4006	>Dis.Telep. Carrier RECEPTION Channel 1 (>Dis.Tel Rec.Ch1)	Teleprot. Dist.	SP	on off	on		*	LED	BI		BO		29	6	1	Yes
4007	>Dis.Telep.Carrier RECEPTION Channel 1,L1 (>Dis.T.RecCh1L1)	Teleprot. Dist.	SP	on off	on		*	LED	BI		BO		29	7	1	Yes
4008	>Dis.Telep.Carrier RECEPTION Channel 1,L2 (>Dis.T.RecCh1L2)	Teleprot. Dist.	SP	on off	on		*	LED	BI		BO		29	8	1	Yes
4009	>Dis.Telep.Carrier RECEPTION Channel 1,L3 (>Dis.T.RecCh1L3)	Teleprot. Dist.	SP	on off	on		*	LED	BI		BO		29	9	1	Yes
4010	>Dis.Telep. Carrier RECEPTION Channel 2 (>Dis.T.Rec.Ch2)	Teleprot. Dist.	SP	on off	on		*	LED	BI		BO		29	10	1	Yes
4030	>Dis.Telep. Unblocking: UNBLOCK Channel 1 (>Dis.T.UB ub 1)	Teleprot. Dist.	SP	on off	on		*	LED	BI		BO		29	30	1	Yes
4031	>Dis.Telep. Unblocking: BLOCK Channel 1 (>Dis.T.UB bl 1)	Teleprot. Dist.	SP	on off	on		*	LED	BI		BO		29	31	1	Yes
4032	>Dis.Telep. Unblocking: UNBLOCK Ch. 1, L1 (>Dis.T.UB ub1L1)	Teleprot. Dist.	SP	on off	on		*	LED	BI		BO		29	32	1	Yes
4033	>Dis.Telep. Unblocking: UNBLOCK Ch. 1, L2 (>Dis.T.UB ub1L2)	Teleprot. Dist.	SP	on off	on		*	LED	BI		BO		29	33	1	Yes
4034	>Dis.Telep. Unblocking: UNBLOCK Ch. 1, L3 (>Dis.T.UB ub1L3)	Teleprot. Dist.	SP	on off	on		*	LED	BI		BO		29	34	1	Yes
4035	>Dis.Telep. Unblocking: UNBLOCK Channel 2 (>Dis.T.UB ub 2)	Teleprot. Dist.	SP	on off	on		*	LED	BI		BO		29	35	1	Yes
4036	>Dis.Telep. Unblocking: BLOCK Channel 2 (>Dis.T.UB bl 2)	Teleprot. Dist.	SP	on off	on		*	LED	BI		BO		29	36	1	Yes
4040	>Dis.Telep. BLOCK Echo Signal (>Dis.T.BlkEcho)	Teleprot. Dist.	SP	on off	on		*	LED	BI		BO		29	40	1	Yes
4050	Dis. Teleprotection ON/OFF via BI (Dis.T.on/off BI)	Teleprot. Dist.	IntSP	ON OFF	*		*	LED			BO					
4051	Teleprotection is switched ON (Telep. ON)	Device	IntSP	*	*		*	LED			BO		29	51	1	Yes
4052	Dis. Teleprotection is switched OFF (Dis.Telep. OFF)	Teleprot. Dist.	OUT	ON OFF	*		*	LED			BO					
4054	Dis. Telep. Carrier signal received (Dis.T.Carr.rec.)	Teleprot. Dist.	OUT	*	*		*	LED			BO		29	54	2	No
4055	Dis. Telep. Carrier CHANNEL FAILURE (Dis.T.Carr.Fail)	Teleprot. Dist.	OUT	*	*		*	LED			BO		29	55	1	Yes

No.	Description	Function	Type of Information	Log Buffers				Configurable in Matrix					IEC 60870-5-103			
				Event Log ON/OFF	Trip (Fault) Log On/Off	Ground Fault Log ON/OFF	Marked in Oscill. Record	LED	Binary Input	Function Key	Relay	Chatter Suppression	Type	Information Number	Data Unit	General Interrogation
4056	Dis. Telep. Carrier SEND signal (Dis.T.SEND)	Teleprot. Dist.	OUT	on	on		*	LED			BO		29	56	2	No
4057	Dis. Telep. Carrier SEND signal, L1 (Dis.T.SEND L1)	Teleprot. Dist.	OUT	*	*		*	LED			BO					
4058	Dis. Telep. Carrier SEND signal, L2 (Dis.T.SEND L2)	Teleprot. Dist.	OUT	*	*		*	LED			BO					
4059	Dis. Telep. Carrier SEND signal, L3 (Dis.T.SEND L3)	Teleprot. Dist.	OUT	*	*		*	LED			BO					
4060	Dis.Tele.Blocking: Send signal with jump (DisJumpBlocking)	Teleprot. Dist.	OUT	*	*		*	LED			BO		29	60	2	No
4068	Dis. Telep. Transient Blocking (Dis.T.Trans.Blk)	Teleprot. Dist.	OUT	*	ON		*	LED			BO		29	68	2	No
4070	Dis. Tele.Blocking: carrier STOP signal (Dis.T.BL STOP)	Teleprot. Dist.	OUT	*	ON		*	LED			BO		29	70	2	No
4080	Dis. Tele.Unblocking: FAILURE Channel 1 (Dis.T.UB Fail1)	Teleprot. Dist.	OUT	on off	*		*	LED			BO		29	80	1	Yes
4081	Dis. Tele.Unblocking: FAILURE Channel 2 (Dis.T.UB Fail2)	Teleprot. Dist.	OUT	on off	*		*	LED			BO		29	81	1	Yes
4082	DisTel Blocking: carrier STOP signal, L1 (Dis.T.BL STOPL1)	Teleprot. Dist.	OUT	*	*		*	LED			BO					
4083	DisTel Blocking: carrier STOP signal, L2 (Dis.T.BL STOPL2)	Teleprot. Dist.	OUT	*	*		*	LED			BO					
4084	DisTel Blocking: carrier STOP signal, L3 (Dis.T.BL STOPL3)	Teleprot. Dist.	OUT	*	*		*	LED			BO					
4160	>BLOCK Power Swing detection (>Pow. Swing BLK)	Power Swing	SP	ON OFF	ON OFF		*	LED	BI		BO					
4163	Power Swing unstable (P.Swing unstab.)	Power Swing	OUT	ON	ON		*	LED			BO					
4164	Power Swing detected (Power Swing)	Power Swing	OUT	ON OFF	ON OFF		*	LED			BO		29	164	1	Yes
4166	Power Swing TRIP command (Pow. Swing TRIP)	Power Swing	OUT	ON	ON		*	LED			BO		29	166	1	No
4167	Power Swing detected in L1 (Pow. Swing L1)	Power Swing	OUT	ON OFF	ON OFF		*	LED			BO					
4168	Power Swing detected in L2 (Pow. Swing L2)	Power Swing	OUT	ON OFF	ON OFF		*	LED			BO					
4169	Power Swing detected in L3 (Pow. Swing L3)	Power Swing	OUT	ON OFF	ON OFF		*	LED			BO					
4177	Power Swing unstable 2 (P.Swing unst. 2)	Power Swing	OUT	*	*		*	LED			BO					
4203	>BLOCK Weak Infeed (>BLOCK Weak Inf)	Weak Infeed	SP	*	*		*	LED	BI		BO					
4204	>BLOCK delayed Weak Infeed stage (>BLOCK del. WI)	Weak Infeed	SP	ON OFF	ON OFF		*	LED	BI		BO					
4205	>Reception (channel) for Weak Infeed OK (>WI rec. OK)	Weak Infeed	SP	ON OFF	ON OFF		*	LED	BI		BO					
4206	>Receive signal for Weak Infeed (>WI reception)	Weak Infeed	SP	ON OFF	ON OFF		*	LED	BI		BO					
4221	Weak Infeed is switched OFF (WeakInf. OFF)	Weak Infeed	OUT	ON OFF	*		*	LED			BO		25	21	1	Yes
4222	Weak Infeed is BLOCKED (Weak Inf. BLOCK)	Weak Infeed	OUT	ON OFF	ON OFF		*	LED			BO		25	22	1	Yes
4223	Weak Infeed is ACTIVE (Weak Inf ACTIVE)	Weak Infeed	OUT	*	*		*	LED			BO		25	23	1	Yes
4225	Weak Infeed Zero seq. current detected (3I0 detected)	Weak Infeed	OUT	ON OFF	ON OFF		*	LED			BO					

No.	Description	Function	Type of Information	Log Buffers				Configurable in Matrix					IEC 60870-5-103			
				Event Log ON/OFF	Trip (Fault) Log On/Off	Ground Fault Log ON/OFF	Marked in Oscill. Record	LED	Binary Input	Function Key	Relay	Chatter Suppression	Type	Information Number	Data Unit	General Interrogation
4226	Weak Infeed Undervoltg. L1 (WI U L1<)	Weak Infeed	OUT	ON OFF	ON OFF		*	LED			BO					
4227	Weak Infeed Undervoltg. L2 (WI U L2<)	Weak Infeed	OUT	ON OFF	ON OFF		*	LED			BO					
4228	Weak Infeed Undervoltg. L3 (WI U L3<)	Weak Infeed	OUT	ON OFF	ON OFF		*	LED			BO					
4229	WI TRIP with zero sequence current (WI TRIP 3I0)	Weak Infeed	OUT	*	*		*	LED			BO					
4231	Weak Infeed PICKED UP (WeakInf. PICKUP)	Weak Infeed	OUT	*	OFF		*	LED			BO		25	31	2	Yes
4232	Weak Infeed PICKUP L1 (W/I Pickup L1)	Weak Infeed	OUT	*	ON		*	LED			BO					
4233	Weak Infeed PICKUP L2 (W/I Pickup L2)	Weak Infeed	OUT	*	ON		*	LED			BO					
4234	Weak Infeed PICKUP L3 (W/I Pickup L3)	Weak Infeed	OUT	*	ON		*	LED			BO					
4241	Weak Infeed General TRIP command (WeakInfeed TRIP)	Weak Infeed	OUT	*	*		*	LED			BO		25	41	2	No
4242	Weak Infeed TRIP command - Only L1 (Weak TRIP 1p.L1)	Weak Infeed	OUT	*	ON		*	LED			BO		25	42	2	No
4243	Weak Infeed TRIP command - Only L2 (Weak TRIP 1p.L2)	Weak Infeed	OUT	*	ON		*	LED			BO		25	43	2	No
4244	Weak Infeed TRIP command - Only L3 (Weak TRIP 1p.L3)	Weak Infeed	OUT	*	ON		*	LED			BO		25	44	2	No
4245	Weak Infeed TRIP command L123 (Weak TRIP L123)	Weak Infeed	OUT	*	ON		*	LED			BO		25	45	2	No
4246	ECHO Send SIGNAL (ECHO SIGNAL)	Weak Infeed	OUT	ON	ON		*	LED			BO		25	46	2	Yes
4253	>BLOCK Instantaneous SOTF Overcurrent (>BLOCK SOTF-O/C)	SOTF Overcurr.	SP	*	*		*	LED	BI		BO					
4271	SOTF-O/C is switched OFF (SOTF-O/C OFF)	SOTF Overcurr.	OUT	ON OFF	*		*	LED			BO		25	71	1	Yes
4272	SOTF-O/C is BLOCKED (SOTF-O/C BLOCK)	SOTF Overcurr.	OUT	ON OFF	ON OFF		*	LED			BO		25	72	1	Yes
4273	SOTF-O/C is ACTIVE (SOTF-O/C ACTIVE)	SOTF Overcurr.	OUT	*	*		*	LED			BO		25	73	1	Yes
4281	SOTF-O/C PICKED UP (SOTF-O/C PICKUP)	SOTF Overcurr.	OUT	*	OFF		m	LED			BO		25	81	2	Yes
4282	SOTF-O/C Pickup L1 (SOF O/CpickupL1)	SOTF Overcurr.	OUT	*	ON		*	LED			BO		25	82	2	Yes
4283	SOTF-O/C Pickup L2 (SOF O/CpickupL2)	SOTF Overcurr.	OUT	*	ON		*	LED			BO		25	83	2	Yes
4284	SOTF-O/C Pickup L3 (SOF O/CpickupL3)	SOTF Overcurr.	OUT	*	ON		*	LED			BO		25	84	2	Yes
4285	High Speed-O/C Pickup I>>>> L1 (I>>>>O/C p.upL1)	SOTF Overcurr.	OUT	*	ON		*	LED			BO		25	85	2	Yes
4286	High Speed-O/C Pickup I>>>> L2 (I>>>>O/C p.upL2)	SOTF Overcurr.	OUT	*	ON		*	LED			BO		25	86	2	Yes
4287	High Speed-O/C Pickup I>>>> L3 (I>>>>O/C p.upL3)	SOTF Overcurr.	OUT	*	ON		*	LED			BO		25	87	2	Yes
4289	High Speed/SOTF-O/C TRIP - Only L1 (HS/SOF TRIP1pL1)	SOTF Overcurr.	OUT	*	ON		*	LED			BO		25	89	2	Yes
4290	High Speed/SOTF-O/C TRIP - Only L2 (HS/SOF TRIP1pL2)	SOTF Overcurr.	OUT	*	ON		*	LED			BO		25	90	2	Yes

No.	Description	Function	Type of Information	Log Buffers				Configurable in Matrix					IEC 60870-5-103			
				Event Log ON/OFF	Trip (Fault) Log On/Off	Ground Fault Log ON/OFF	Marked in Oscill. Record	LED	Binary Input	Function Key	Relay	Chatter Suppression	Type	Information Number	Data Unit	General Interrogation
4291	High Speed/SOTF-O/C TRIP - Only L3 (HS/SOF TRIP1pL3)	SOTF Overcurr.	OUT	*	ON		*	LED			BO		25	91	2	Yes
4292	High Speed/SOTF-O/C TRIP 1pole (HS/SOF TRIP 1p)	SOTF Overcurr.	OUT	*	ON		*	LED			BO		25	94	2	No
4293	High Speed/SOTF-O/C General TRIP (HS/SOF Gen.TRIP)	SOTF Overcurr.	OUT	*	ON		*	LED			BO					
4294	High Speed/SOTF-O/C TRIP 3pole (HS/SOF TRIP 3p)	SOTF Overcurr.	OUT	*	ON		*	LED			BO					
4295	High Speed/SOTF-O/C TRIP command L123 (HS/SOF TRIPL123)	SOTF Overcurr.	OUT	*	ON		*	LED			BO		25	95	2	Yes
4403	>BLOCK Direct Transfer Trip function (>BLOCK DTT)	DTT Direct Trip	SP	*	*		*	LED	BI		BO					
4412	>Direct Transfer Trip INPUT Phase L1 (>DTT Trip L1)	DTT Direct Trip	SP	ON OFF	*		*	LED	BI		BO					
4413	>Direct Transfer Trip INPUT Phase L2 (>DTT Trip L2)	DTT Direct Trip	SP	ON OFF	*		*	LED	BI		BO					
4414	>Direct Transfer Trip INPUT Phase L3 (>DTT Trip L3)	DTT Direct Trip	SP	ON OFF	*		*	LED	BI		BO					
4417	>Direct Transfer Trip INPUT 3ph L123 (>DTT Trip L123)	DTT Direct Trip	SP	ON OFF	*		*	LED	BI		BO					
4421	Direct Transfer Trip is switched OFF (DTT OFF)	DTT Direct Trip	OUT	ON OFF	*		*	LED			BO		51	21	1	Yes
4422	Direct Transfer Trip is BLOCKED (DTT BLOCK)	DTT Direct Trip	OUT	ON OFF	ON OFF		*	LED			BO		51	22	1	Yes
4432	DTT TRIP command - Only L1 (DTT TRIP 1p. L1)	DTT Direct Trip	OUT	*	ON		*	LED			BO		51	32	2	No
4433	DTT TRIP command - Only L2 (DTT TRIP 1p. L2)	DTT Direct Trip	OUT	*	ON		*	LED			BO		51	33	2	No
4434	DTT TRIP command - Only L3 (DTT TRIP 1p. L3)	DTT Direct Trip	OUT	*	ON		*	LED			BO		51	34	2	No
4435	DTT TRIP command L123 (DTT TRIP L123)	DTT Direct Trip	OUT	*	ON		*	LED			BO		51	35	2	No
5203	>BLOCK frequency protection (>BLOCK Freq.)	Frequency Prot.	SP	ON OFF	*		*	LED	BI		BO		70	176	1	Yes
5206	>BLOCK frequency protection stage f1 (>BLOCK f1)	Frequency Prot.	SP	ON OFF	*		*	LED	BI		BO		70	177	1	Yes
5207	>BLOCK frequency protection stage f2 (>BLOCK f2)	Frequency Prot.	SP	ON OFF	*		*	LED	BI		BO		70	178	1	Yes
5208	>BLOCK frequency protection stage f3 (>BLOCK f3)	Frequency Prot.	SP	ON OFF	*		*	LED	BI		BO		70	179	1	Yes
5209	>BLOCK frequency protection stage f4 (>BLOCK f4)	Frequency Prot.	SP	ON OFF	*		*	LED	BI		BO		70	180	1	Yes
5211	Frequency protection is switched OFF (Freq. OFF)	Frequency Prot.	OUT	ON OFF	*		*	LED			BO		70	181	1	Yes
5212	Frequency protection is BLOCKED (Freq. BLOCKED)	Frequency Prot.	OUT	ON OFF	ON OFF		*	LED			BO		70	182	1	Yes
5213	Frequency protection is ACTIVE (Freq. ACTIVE)	Frequency Prot.	OUT	ON OFF	*		*	LED			BO		70	183	1	Yes
5215	Frequency protection under-voltage Blk (Freq UnderV Blk)	Frequency Prot.	OUT	on off	on off		*	LED			BO		70	238	1	Yes
5232	Frequency protection: f1 picked up (f1 picked up)	Frequency Prot.	OUT	*	ON OFF		*	LED			BO		70	230	2	Yes
5233	Frequency protection: f2 picked up (f2 picked up)	Frequency Prot.	OUT	*	ON OFF		*	LED			BO		70	231	2	Yes

No.	Description	Function	Type of Information	Log Buffers				Configurable in Matrix					IEC 60870-5-103			
				Event Log ON/OFF	Trip (Fault) Log On/Off	Ground Fault Log ON/OFF	Marked in Oscill. Record	LED	Binary Input	Function Key	Relay	Chatter Suppression	Type	Information Number	Data Unit	General Interrogation
5234	Frequency protection: f3 picked up (f3 picked up)	Frequency Prot.	OUT	*	ON OFF		*	LED			BO		70	232	2	Yes
5235	Frequency protection: f4 picked up (f4 picked up)	Frequency Prot.	OUT	*	ON OFF		*	LED			BO		70	233	2	Yes
5236	Frequency protection: f1 TRIP (f1 TRIP)	Frequency Prot.	OUT	*	ON		*	LED			BO		70	234	2	Yes
5237	Frequency protection: f2 TRIP (f2 TRIP)	Frequency Prot.	OUT	*	ON		*	LED			BO		70	235	2	Yes
5238	Frequency protection: f3 TRIP (f3 TRIP)	Frequency Prot.	OUT	*	ON		*	LED			BO		70	236	2	Yes
5239	Frequency protection: f4 TRIP (f4 TRIP)	Frequency Prot.	OUT	*	ON		*	LED			BO		70	237	2	Yes
5240	Frequency protection: TimeOut Stage f1 (Time Out f1)	Frequency Prot.	OUT	*	*		*	LED			BO					
5241	Frequency protection: TimeOut Stage f2 (Time Out f2)	Frequency Prot.	OUT	*	*		*	LED			BO					
5242	Frequency protection: TimeOut Stage f3 (Time Out f3)	Frequency Prot.	OUT	*	*		*	LED			BO					
5243	Frequency protection: TimeOut Stage f4 (Time Out f4)	Frequency Prot.	OUT	*	*		*	LED			BO					
5803	>BLOCK restricted earth fault prot. (>BLOCK REF)	REF	SP	*	*		*	LED	BI		BO					
5811	Restricted earth fault is switched OFF (REF OFF)	REF	OUT	ON OFF	*		*	LED			BO		76	11	1	Yes
5812	Restricted earth fault is BLOCKED (REF BLOCKED)	REF	OUT	ON OFF	ON OFF		*	LED			BO		76	12	1	Yes
5813	Restricted earth fault is ACTIVE (REF ACTIVE)	REF	OUT	ON OFF	*		*	LED			BO		76	13	1	Yes
5816	Restr. earth flt.: Time delay started (REF T start)	REF	OUT	*	ON OFF		*	LED			BO		76	16	2	Yes
5817	Restr. earth flt.: picked up (REF picked up)	REF	OUT	*	ON OFF		m	LED			BO		76	17	2	Yes
5821	Restr. earth flt.: TRIP (REF TRIP)	REF	OUT	*	ON		m	LED			BO		76	21	2	No
5826	REF: Value D at trip (without Tdelay) (REF D:)	REF	VI	*	ON OFF								76	26	4	No
5827	REF: Value S at trip (without Tdelay) (REF S:)	REF	VI	*	ON OFF								76	27	4	No
6854	>Trip circuit superv. 1: Trip Relay (>TripC1 TripRel)	TripCirc.Superv	SP	ON OFF	*		*	LED	BI		BO					
6855	>Trip circuit superv. 1: Breaker Relay (>TripC1 Bkr.Rel)	TripCirc.Superv	SP	ON OFF	*		*	LED	BI		BO					
6856	>Trip circuit superv. 2: Trip Relay (>TripC2 TripRel)	TripCirc.Superv	SP	ON OFF	*		*	LED	BI		BO					
6857	>Trip circuit superv. 2: Breaker Relay (>TripC2 Bkr.Rel)	TripCirc.Superv	SP	ON OFF	*		*	LED	BI		BO					
6858	>Trip circuit superv. 3: Trip Relay (>TripC3 TripRel)	TripCirc.Superv	SP	ON OFF	*		*	LED	BI		BO					
6859	>Trip circuit superv. 3: Breaker Relay (>TripC3 Bkr.Rel)	TripCirc.Superv	SP	ON OFF	*		*	LED	BI		BO					
6861	Trip circuit supervision OFF (TripC OFF)	TripCirc.Superv	OUT	ON OFF	*		*	LED			BO		170	53	1	Yes
6865	Failure Trip Circuit (FAIL: Trip cir.)	TripCirc.Superv	OUT	ON OFF	*		*	LED			BO		192	36	1	Yes
6866	TripC1 blocked: Binary input is not set (TripC1 ProgFAIL)	TripCirc.Superv	OUT	ON OFF	*		*	LED			BO					

No.	Description	Function	Type of Information	Log Buffers				Configurable in Matrix					IEC 60870-5-103			
				Event Log ON/OFF	Trip (Fault) Log On/Off	Ground Fault Log ON/OFF	Marked in Oscill. Record	LED	Binary Input	Function Key	Relay	Chatter Suppression	Type	Information Number	Data Unit	General Interrogation
6867	TripC2 blocked: Binary input is not set (TripC2 ProgFAIL)	TripCirc.Superv	OUT	ON OFF	*		*	LED			BO					
6868	TripC3 blocked: Binary input is not set (TripC3 ProgFAIL)	TripCirc.Superv	OUT	ON OFF	*		*	LED			BO					
7104	>BLOCK Backup OverCurrent l>> (>BLOCK O/C l>>)	Back-Up O/C	SP	ON OFF	*		*	LED	BI		BO		64	4	1	Yes
7105	>BLOCK Backup OverCurrent l> (>BLOCK O/C l>)	Back-Up O/C	SP	ON OFF	*		*	LED	BI		BO		64	5	1	Yes
7106	>BLOCK Backup OverCurrent lp (>BLOCK O/C lp)	Back-Up O/C	SP	ON OFF	*		*	LED	BI		BO		64	6	1	Yes
7107	>BLOCK Backup OverCurrent le>> (>BLOCK O/C le>>)	Back-Up O/C	SP	ON OFF	*		*	LED	BI		BO		64	7	1	Yes
7108	>BLOCK Backup OverCurrent le> (>BLOCK O/C le>)	Back-Up O/C	SP	ON OFF	*		*	LED	BI		BO		64	8	1	Yes
7109	>BLOCK Backup OverCurrent lep (>BLOCK O/C lep)	Back-Up O/C	SP	ON OFF	*		*	LED	BI		BO		64	9	1	Yes
7110	>Backup OverCurrent InstantaneousTrip (>O/C InstTRIP)	Back-Up O/C	SP	ON OFF	ON OFF		*	LED	BI		BO		64	10	1	Yes
7130	>BLOCK I-STUB (>BLOCK I-STUB)	Back-Up O/C	SP	ON OFF	*		*	LED	BI		BO		64	30	1	Yes
7131	>Enable I-STUB-Bus function (>I-STUB ENABLE)	Back-Up O/C	SP	ON OFF	ON OFF		*	LED	BI		BO		64	31	1	Yes
7132	>BLOCK Backup OverCurrent le>>> (>BLOCK O/Cle>>>)	Back-Up O/C	SP	ON OFF	*		*	LED	BI		BO		64	32	1	Yes
7151	Backup O/C is switched OFF (O/C OFF)	Back-Up O/C	OUT	ON OFF	*		*	LED			BO		64	51	1	Yes
7152	Backup O/C is BLOCKED (O/C BLOCK)	Back-Up O/C	OUT	ON OFF	ON OFF		*	LED			BO		64	52	1	Yes
7153	Backup O/C is ACTIVE (O/C ACTIVE)	Back-Up O/C	OUT	*	*		*	LED			BO		64	53	1	Yes
7161	Backup O/C PICKED UP (O/C PICKUP)	Back-Up O/C	OUT	*	OFF		m	LED			BO		64	61	2	Yes
7162	Backup O/C PICKUP L1 (O/C Pickup L1)	Back-Up O/C	OUT	*	ON		*	LED			BO		64	62	2	Yes
7163	Backup O/C PICKUP L2 (O/C Pickup L2)	Back-Up O/C	OUT	*	ON		*	LED			BO		64	63	2	Yes
7164	Backup O/C PICKUP L3 (O/C Pickup L3)	Back-Up O/C	OUT	*	ON		*	LED			BO		64	64	2	Yes
7165	Backup O/C PICKUP EARTH (O/C Pickup E)	Back-Up O/C	OUT	*	ON		*	LED			BO		64	65	2	Yes
7171	Backup O/C Pickup - Only EARTH (O/C PU only E)	Back-Up O/C	OUT	*	ON		*	LED			BO		64	71	2	No
7172	Backup O/C Pickup - Only L1 (O/C PU 1p. L1)	Back-Up O/C	OUT	*	ON		*	LED			BO		64	72	2	No
7173	Backup O/C Pickup L1E (O/C Pickup L1E)	Back-Up O/C	OUT	*	ON		*	LED			BO		64	73	2	No
7174	Backup O/C Pickup - Only L2 (O/C PU 1p. L2)	Back-Up O/C	OUT	*	ON		*	LED			BO		64	74	2	No
7175	Backup O/C Pickup L2E (O/C Pickup L2E)	Back-Up O/C	OUT	*	ON		*	LED			BO		64	75	2	No
7176	Backup O/C Pickup L12 (O/C Pickup L12)	Back-Up O/C	OUT	*	ON		*	LED			BO		64	76	2	No
7177	Backup O/C Pickup L12E (O/C Pickup L12E)	Back-Up O/C	OUT	*	ON		*	LED			BO		64	77	2	No
7178	Backup O/C Pickup - Only L3 (O/C PU 1p. L3)	Back-Up O/C	OUT	*	ON		*	LED			BO		64	78	2	No

No.	Description	Function	Type of Information	Log Buffers				Configurable in Matrix					IEC 60870-5-103			
				Event Log ON/OFF	Trip (Fault) Log On/Off	Ground Fault Log ON/OFF	Marked in Oscill. Record	LED	Binary Input	Function Key	Relay	Chatter Suppression	Type	Information Number	Data Unit	General Interrogation
7179	Backup O/C Pickup L3E (O/C Pickup L3E)	Back-Up O/C	OUT	*	ON		*	LED			BO		64	79	2	No
7180	Backup O/C Pickup L31 (O/C Pickup L31)	Back-Up O/C	OUT	*	ON		*	LED			BO		64	80	2	No
7181	Backup O/C Pickup L31E (O/C Pickup L31E)	Back-Up O/C	OUT	*	ON		*	LED			BO		64	81	2	No
7182	Backup O/C Pickup L23 (O/C Pickup L23)	Back-Up O/C	OUT	*	ON		*	LED			BO		64	82	2	No
7183	Backup O/C Pickup L23E (O/C Pickup L23E)	Back-Up O/C	OUT	*	ON		*	LED			BO		64	83	2	No
7184	Backup O/C Pickup L123 (O/C Pickup L123)	Back-Up O/C	OUT	*	ON		*	LED			BO		64	84	2	No
7185	Backup O/C Pickup L123E (O/C Pickup L123E)	Back-Up O/C	OUT	*	ON		*	LED			BO		64	85	2	No
7191	Backup O/C Pickup I>> (O/C PICKUP I>>)	Back-Up O/C	OUT	*	ON		m	LED			BO		64	91	2	Yes
7192	Backup O/C Pickup I> (O/C PICKUP I>)	Back-Up O/C	OUT	*	ON		m	LED			BO		64	92	2	Yes
7193	Backup O/C Pickup Ip (O/C PICKUP Ip)	Back-Up O/C	OUT	*	ON		m	LED			BO		64	93	2	Yes
7201	O/C I-STUB Pickup (I-STUB PICKUP)	Back-Up O/C	OUT	*	ON OFF		m	LED			BO		64	101	2	Yes
7211	Backup O/C General TRIP command (O/C TRIP)	Back-Up O/C	OUT	*	*		*	LED			BO		64	111	2	No
7212	Backup O/C TRIP - Only L1 (O/C TRIP 1p.L1)	Back-Up O/C	OUT	*	ON		*	LED			BO		64	112	2	No
7213	Backup O/C TRIP - Only L2 (O/C TRIP 1p.L2)	Back-Up O/C	OUT	*	ON		*	LED			BO		64	113	2	No
7214	Backup O/C TRIP - Only L3 (O/C TRIP 1p.L3)	Back-Up O/C	OUT	*	ON		*	LED			BO		64	114	2	No
7215	Backup O/C TRIP Phases L123 (O/C TRIP L123)	Back-Up O/C	OUT	*	ON		*	LED			BO		64	115	2	No
7221	Backup O/C TRIP I>> (O/C TRIP I>>)	Back-Up O/C	OUT	*	ON		*	LED			BO		64	121	2	No
7222	Backup O/C TRIP I> (O/C TRIP I>)	Back-Up O/C	OUT	*	ON		*	LED			BO		64	122	2	No
7223	Backup O/C TRIP Ip (O/C TRIP Ip)	Back-Up O/C	OUT	*	ON		*	LED			BO		64	123	2	No
7235	O/C I-STUB TRIP (I-STUB TRIP)	Back-Up O/C	OUT	*	ON		*	LED			BO		64	135	2	No
7325	CB1-TEST TRIP command - Only L1 (CB1-TESTtrip L1)	Testing	OUT	ON OFF	*		*	LED			BO		153	25	1	Yes
7326	CB1-TEST TRIP command - Only L2 (CB1-TESTtrip L2)	Testing	OUT	ON OFF	*		*	LED			BO		153	26	1	Yes
7327	CB1-TEST TRIP command - Only L3 (CB1-TESTtrip L3)	Testing	OUT	ON OFF	*		*	LED			BO		153	27	1	Yes
7328	CB1-TEST TRIP command L123 (CB1-TESTtrip L123)	Testing	OUT	ON OFF	*		*	LED			BO		153	28	1	Yes
7329	CB1-TEST CLOSE command (CB1-TEST close)	Testing	OUT	ON OFF	*		*	LED			BO		153	29	1	Yes
7345	CB-TEST is in progress (CB-TEST running)	Testing	OUT	ON OFF	*		*	LED			BO		153	45	1	Yes
7346	CB-TEST canceled due to Power Sys. Fault (CB-TSTstop FLT.)	Testing	OUT_Ev	ON	*											

No.	Description	Function	Type of Information	Log Buffers				Configurable in Matrix					IEC 60870-5-103			
				Event Log ON/OFF	Trip (Fault) Log On/Off	Ground Fault Log ON/OFF	Marked in Oscill. Record	LED	Binary Input	Function Key	Relay	Chatter Suppression	Type	Information Number	Data Unit	General Interrogation
7347	CB-TEST canceled due to CB already OPEN (CB-TSTstop OPEN)	Testing	OUT_Ev	ON	*											
7348	CB-TEST canceled due to CB was NOT READY (CB-TSTstop NOTr)	Testing	OUT_Ev	ON	*											
7349	CB-TEST canceled due to CB stayed CLOSED (CB-TSTstop CLOS)	Testing	OUT_Ev	ON	*											
7350	CB-TEST was successful (CB-TST .OK.)	Testing	OUT_Ev	ON	*											
10201	>BLOCK Uph-e(>) Overvolt. (phase-earth) (>Uph-e(>) BLK)	Voltage Prot.	SP	*	*		*	LED	BI		BO					
10202	>BLOCK Uph-ph(>) Overvolt (phase-phase) (>Uph-ph(>) BLK)	Voltage Prot.	SP	*	*		*	LED	BI		BO					
10203	>BLOCK 3U0(>) Overvolt. (zero sequence) (>3U0(>) BLK)	Voltage Prot.	SP	*	*		*	LED	BI		BO					
10204	>BLOCK U1(>) Overvolt. (positive seq.) (>U1(>) BLK)	Voltage Prot.	SP	*	*		*	LED	BI		BO					
10205	>BLOCK U2(>) Overvolt. (negative seq.) (>U2(>) BLK)	Voltage Prot.	SP	*	*		*	LED	BI		BO					
10206	>BLOCK Uph-e(<) Undervolt (phase-earth) (>Uph-e(<) BLK)	Voltage Prot.	SP	*	*		*	LED	BI		BO					
10207	>BLOCK Uphph(<) Undervolt (phase-phase) (>Uphph(<) BLK)	Voltage Prot.	SP	*	*		*	LED	BI		BO					
10208	>BLOCK U1(<) Undervolt (positive seq.) (>U1(<) BLK)	Voltage Prot.	SP	*	*		*	LED	BI		BO					
10215	Uph-e(>) Overvolt. is switched OFF (Uph-e(>) OFF)	Voltage Prot.	OUT	ON OFF	*		*	LED			BO		73	15	1	Yes
10216	Uph-e(>) Overvolt. is BLOCKED (Uph-e(>) BLK)	Voltage Prot.	OUT	ON OFF	ON OFF		*	LED			BO		73	16	1	Yes
10217	Uph-ph(>) Overvolt. is switched OFF (Uph-ph(>) OFF)	Voltage Prot.	OUT	ON OFF	*		*	LED			BO		73	17	1	Yes
10218	Uph-ph(>) Overvolt. is BLOCKED (Uph-ph(>) BLK)	Voltage Prot.	OUT	ON OFF	ON OFF		*	LED			BO		73	18	1	Yes
10219	3U0(>) Overvolt. is switched OFF (3U0(>) OFF)	Voltage Prot.	OUT	ON OFF	*		*	LED			BO		73	19	1	Yes
10220	3U0(>) Overvolt. is BLOCKED (3U0(>) BLK)	Voltage Prot.	OUT	ON OFF	ON OFF		*	LED			BO		73	20	1	Yes
10221	U1(>) Overvolt. is switched OFF (U1(>) OFF)	Voltage Prot.	OUT	ON OFF	*		*	LED			BO		73	21	1	Yes
10222	U1(>) Overvolt. is BLOCKED (U1(>) BLK)	Voltage Prot.	OUT	ON OFF	ON OFF		*	LED			BO		73	22	1	Yes
10223	U2(>) Overvolt. is switched OFF (U2(>) OFF)	Voltage Prot.	OUT	ON OFF	*		*	LED			BO		73	23	1	Yes
10224	U2(>) Overvolt. is BLOCKED (U2(>) BLK)	Voltage Prot.	OUT	ON OFF	ON OFF		*	LED			BO		73	24	1	Yes
10225	Uph-e(<) Undervolt. is switched OFF (Uph-e(<) OFF)	Voltage Prot.	OUT	ON OFF	*		*	LED			BO		73	25	1	Yes
10226	Uph-e(<) Undervolt. is BLOCKED (Uph-e(<) BLK)	Voltage Prot.	OUT	ON OFF	ON OFF		*	LED			BO		73	26	1	Yes

No.	Description	Function	Type of Information	Log Buffers				Configurable in Matrix					IEC 60870-5-103			
				Event Log ON/OFF	Trip (Fault) Log On/Off	Ground Fault Log ON/OFF	Marked in Oscill. Record	LED	Binary Input	Function Key	Relay	Chatter Suppression	Type	Information Number	Data Unit	General Interrogation
10227	Uph-ph<(<) Undervolt. is switched OFF (Uph-ph<(<) OFF)	Voltage Prot.	OUT	ON OFF	*		*	LED			BO		73	27	1	Yes
10228	Uphph<(<) Undervolt. is BLOCKED (Uph-ph<(<) BLK)	Voltage Prot.	OUT	ON OFF	ON OFF		*	LED			BO		73	28	1	Yes
10229	U1<(<) Undervolt. is switched OFF (U1<(<) OFF)	Voltage Prot.	OUT	ON OFF	*		*	LED			BO		73	29	1	Yes
10230	U1<(<) Undervolt. is BLOCKED (U1<(<) BLK)	Voltage Prot.	OUT	ON OFF	ON OFF		*	LED			BO		73	30	1	Yes
10231	Over-/Under-Voltage protection is ACTIVE (U<> ACTIVE)	Voltage Prot.	OUT	ON OFF	*		*	LED			BO		73	31	1	Yes
10240	Uph-e> Pickup (Uph-e> Pickup)	Voltage Prot.	OUT	*	ON OFF		*	LED			BO		73	40	2	Yes
10241	Uph-e>> Pickup (Uph-e>> Pickup)	Voltage Prot.	OUT	*	ON OFF		*	LED			BO		73	41	2	Yes
10242	Uph-e>(>) Pickup L1 (Uph-e>(>) PU L1)	Voltage Prot.	OUT	*	ON OFF		*	LED			BO		73	42	2	Yes
10243	Uph-e>(>) Pickup L2 (Uph-e>(>) PU L2)	Voltage Prot.	OUT	*	ON OFF		*	LED			BO		73	43	2	Yes
10244	Uph-e>(>) Pickup L3 (Uph-e>(>) PU L3)	Voltage Prot.	OUT	*	ON OFF		*	LED			BO		73	44	2	Yes
10245	Uph-e> TimeOut (Uph-e> TimeOut)	Voltage Prot.	OUT	*	*		*	LED			BO					
10246	Uph-e>> TimeOut (Uph-e>> TimeOut)	Voltage Prot.	OUT	*	*		*	LED			BO					
10247	Uph-e>(>) TRIP command (Uph-e>(>) TRIP)	Voltage Prot.	OUT	*	ON		*	LED			BO		73	47	2	Yes
10248	Uph-e> Pickup L1 (Uph-e> PU L1)	Voltage Prot.	OUT	*	*		*	LED			BO					
10249	Uph-e> Pickup L2 (Uph-e> PU L2)	Voltage Prot.	OUT	*	*		*	LED			BO					
10250	Uph-e> Pickup L3 (Uph-e> PU L3)	Voltage Prot.	OUT	*	*		*	LED			BO					
10251	Uph-e>> Pickup L1 (Uph-e>> PU L1)	Voltage Prot.	OUT	*	*		*	LED			BO					
10252	Uph-e>> Pickup L2 (Uph-e>> PU L2)	Voltage Prot.	OUT	*	*		*	LED			BO					
10253	Uph-e>> Pickup L3 (Uph-e>> PU L3)	Voltage Prot.	OUT	*	*		*	LED			BO					
10255	Uph-ph> Pickup (Uphph> Pickup)	Voltage Prot.	OUT	*	ON OFF		*	LED			BO		73	55	2	Yes
10256	Uph-ph>> Pickup (Uphph>> Pickup)	Voltage Prot.	OUT	*	ON OFF		*	LED			BO		73	56	2	Yes
10257	Uph-ph>(>) Pickup L1-L2 (Uph-ph>(>)PU L12)	Voltage Prot.	OUT	*	ON OFF		*	LED			BO		73	57	2	Yes
10258	Uph-ph>(>) Pickup L2-L3 (Uph-ph>(>)PU L23)	Voltage Prot.	OUT	*	ON OFF		*	LED			BO		73	58	2	Yes
10259	Uph-ph>(>) Pickup L3-L1 (Uph-ph>(>)PU L31)	Voltage Prot.	OUT	*	ON OFF		*	LED			BO		73	59	2	Yes
10260	Uph-ph> TimeOut (Uphph> TimeOut)	Voltage Prot.	OUT	*	*		*	LED			BO					
10261	Uph-ph>> TimeOut (Uphph>> TimeOut)	Voltage Prot.	OUT	*	*		*	LED			BO					
10262	Uph-ph>(>) TRIP command (Uphph>(>) TRIP)	Voltage Prot.	OUT	*	ON		*	LED			BO		73	62	2	Yes

No.	Description	Function	Type of Information	Log Buffers				Configurable in Matrix					IEC 60870-5-103			
				Event Log ON/OFF	Trip (Fault) Log On/Off	Ground Fault Log ON/OFF	Marked in Oscill. Record	LED	Binary Input	Function Key	Relay	Chatter Suppression	Type	Information Number	Data Unit	General Interrogation
10263	Uph-ph> Pickup L1-L2 (Uphph> PU L12)	Voltage Prot.	OUT	*	*		*	LED			BO					
10264	Uph-ph> Pickup L2-L3 (Uphph> PU L23)	Voltage Prot.	OUT	*	*		*	LED			BO					
10265	Uph-ph> Pickup L3-L1 (Uphph> PU L31)	Voltage Prot.	OUT	*	*		*	LED			BO					
10266	Uph-ph>> Pickup L1-L2 (Uph-ph>> PU L12)	Voltage Prot.	OUT	*	*		*	LED			BO					
10267	Uph-ph>> Pickup L2-L3 (Uph-ph>> PU L23)	Voltage Prot.	OUT	*	*		*	LED			BO					
10268	Uph-ph>> Pickup L3-L1 (Uph-ph>> PU L31)	Voltage Prot.	OUT	*	*		*	LED			BO					
10270	3U0> Pickup (3U0> Pickup)	Voltage Prot.	OUT	*	ON OFF		*	LED			BO		73	70	2	Yes
10271	3U0>> Pickup (3U0>> Pickup)	Voltage Prot.	OUT	*	ON OFF		*	LED			BO		73	71	2	Yes
10272	3U0> TimeOut (3U0> TimeOut)	Voltage Prot.	OUT	*	*		*	LED			BO					
10273	3U0>> TimeOut (3U0>> TimeOut)	Voltage Prot.	OUT	*	*		*	LED			BO					
10274	3U0>(>) TRIP command (3U0>(>) TRIP)	Voltage Prot.	OUT	*	ON		*	LED			BO		73	74	2	Yes
10280	U1> Pickup (U1> Pickup)	Voltage Prot.	OUT	*	ON OFF		*	LED			BO		73	80	2	Yes
10281	U1>> Pickup (U1>> Pickup)	Voltage Prot.	OUT	*	ON OFF		*	LED			BO		73	81	2	Yes
10282	U1> TimeOut (U1> TimeOut)	Voltage Prot.	OUT	*	*		*	LED			BO					
10283	U1>> TimeOut (U1>> TimeOut)	Voltage Prot.	OUT	*	*		*	LED			BO					
10284	U1>(>) TRIP command (U1>(>) TRIP)	Voltage Prot.	OUT	*	ON		*	LED			BO		73	84	2	Yes
10290	U2> Pickup (U2> Pickup)	Voltage Prot.	OUT	*	ON OFF		*	LED			BO		73	90	2	Yes
10291	U2>> Pickup (U2>> Pickup)	Voltage Prot.	OUT	*	ON OFF		*	LED			BO		73	91	2	Yes
10292	U2> TimeOut (U2> TimeOut)	Voltage Prot.	OUT	*	*		*	LED			BO					
10293	U2>> TimeOut (U2>> TimeOut)	Voltage Prot.	OUT	*	*		*	LED			BO					
10294	U2>(>) TRIP command (U2>(>) TRIP)	Voltage Prot.	OUT	*	ON		*	LED			BO		73	94	2	Yes
10300	U1< Pickup (U1< Pickup)	Voltage Prot.	OUT	*	ON OFF		*	LED			BO		73	100	2	Yes
10301	U1<< Pickup (U1<< Pickup)	Voltage Prot.	OUT	*	ON OFF		*	LED			BO		73	101	2	Yes
10302	U1< TimeOut (U1< TimeOut)	Voltage Prot.	OUT	*	*		*	LED			BO					
10303	U1<< TimeOut (U1<< TimeOut)	Voltage Prot.	OUT	*	*		*	LED			BO					
10304	U1<(<) TRIP command (U1<(<) TRIP)	Voltage Prot.	OUT	*	ON		*	LED			BO		73	104	2	Yes
10310	Uph-e< Pickup (Uph-e< Pickup)	Voltage Prot.	OUT	*	ON OFF		*	LED			BO		73	110	2	Yes
10311	Uph-e<< Pickup (Uph-e<< Pickup)	Voltage Prot.	OUT	*	ON OFF		*	LED			BO		73	111	2	Yes
10312	Uph-e<(<) Pickup L1 (Uph-e<(<) PU L1)	Voltage Prot.	OUT	*	ON OFF		*	LED			BO		73	112	2	Yes
10313	Uph-e<(<) Pickup L2 (Uph-e<(<) PU L2)	Voltage Prot.	OUT	*	ON OFF		*	LED			BO		73	113	2	Yes
10314	Uph-e<(<) Pickup L3 (Uph-e<(<) PU L3)	Voltage Prot.	OUT	*	ON OFF		*	LED			BO		73	114	2	Yes

No.	Description	Function	Type of Information	Log Buffers				Configurable in Matrix					IEC 60870-5-103			
				Event Log ON/OFF	Trip (Fault) Log On/Off	Ground Fault Log ON/OFF	Marked in Oscill. Record	LED	Binary Input	Function Key	Relay	Chatter Suppression	Type	Information Number	Data Unit	General Interrogation
10315	Uph-e< TimeOut (Uph-e< TimeOut)	Voltage Prot.	OUT	*	*		*	LED			BO					
10316	Uph-e<< TimeOut (Uph-e<< TimeOut)	Voltage Prot.	OUT	*	*		*	LED			BO					
10317	Uph-e<(<) TRIP command (Uph-e<(<) TRIP)	Voltage Prot.	OUT	*	ON		*	LED			BO		73	117	2	Yes
10318	Uph-e< Pickup L1 (Uph-e< PU L1)	Voltage Prot.	OUT	*	*		*	LED			BO					
10319	Uph-e< Pickup L2 (Uph-e< PU L2)	Voltage Prot.	OUT	*	*		*	LED			BO					
10320	Uph-e< Pickup L3 (Uph-e< PU L3)	Voltage Prot.	OUT	*	*		*	LED			BO					
10321	Uph-e<< Pickup L1 (Uph-e<< PU L1)	Voltage Prot.	OUT	*	*		*	LED			BO					
10322	Uph-e<< Pickup L2 (Uph-e<< PU L2)	Voltage Prot.	OUT	*	*		*	LED			BO					
10323	Uph-e<< Pickup L3 (Uph-e<< PU L3)	Voltage Prot.	OUT	*	*		*	LED			BO					
10325	Uph-ph< Pickup (Uph-ph< Pickup)	Voltage Prot.	OUT	*	ON OFF		*	LED			BO		73	125	2	Yes
10326	Uph-ph<< Pickup (Uph-ph<< Pickup)	Voltage Prot.	OUT	*	ON OFF		*	LED			BO		73	126	2	Yes
10327	Uphph<(<) Pickup L1-L2 (Uph-ph<(<)PU L12)	Voltage Prot.	OUT	*	ON OFF		*	LED			BO		73	127	2	Yes
10328	Uphph<(<) Pickup L2-L3 (Uph-ph<(<)PU L23)	Voltage Prot.	OUT	*	ON OFF		*	LED			BO		73	128	2	Yes
10329	Uphph<(<) Pickup L3-L1 (Uph-ph<(<)PU L31)	Voltage Prot.	OUT	*	ON OFF		*	LED			BO		73	129	2	Yes
10330	Uphph< TimeOut (Uphph< TimeOut)	Voltage Prot.	OUT	*	*		*	LED			BO					
10331	Uphph<< TimeOut (Uphph<< TimeOut)	Voltage Prot.	OUT	*	*		*	LED			BO					
10332	Uphph<(<) TRIP command (Uphph<(<) TRIP)	Voltage Prot.	OUT	*	ON		*	LED			BO		73	132	2	Yes
10333	Uph-ph< Pickup L1-L2 (Uphph< PU L12)	Voltage Prot.	OUT	*	*		*	LED			BO					
10334	Uph-ph< Pickup L2-L3 (Uphph< PU L23)	Voltage Prot.	OUT	*	*		*	LED			BO					
10335	Uph-ph< Pickup L3-L1 (Uphph< PU L31)	Voltage Prot.	OUT	*	*		*	LED			BO					
10336	Uph-ph<< Pickup L1-L2 (Uph-ph<< PU L12)	Voltage Prot.	OUT	*	*		*	LED			BO					
10337	Uph-ph<< Pickup L2-L3 (Uph-ph<< PU L23)	Voltage Prot.	OUT	*	*		*	LED			BO					
10338	Uph-ph<< Pickup L3-L1 (Uph-ph<< PU L31)	Voltage Prot.	OUT	*	*		*	LED			BO					
14080	E/F 3I0>>> is blocked (E/F 3I0>>>BLOCK)	Earth Fault O/C	OUT	ON OFF	ON OFF		*	LED			BO					
14081	E/F 3I0>> is blocked (E/F 3I0>>BLOCK)	Earth Fault O/C	OUT	ON OFF	ON OFF		*	LED			BO					
14082	E/F 3I0> is blocked (E/F 3I0>BLOCK)	Earth Fault O/C	OUT	ON OFF	ON OFF		*	LED			BO					
14083	E/F 3I0p is blocked (E/F 3I0pBLOCK)	Earth Fault O/C	OUT	ON OFF	ON OFF		*	LED			BO					
30053	Fault recording is running (Fault rec. run.)	Osc. Fault Rec.	OUT	*	*		*	LED			BO					

No.	Description	Function	Type of Information	Log Buffers				Configurable in Matrix					IEC 60870-5-103			
				Event Log ON/OFF	Trip (Fault) Log On/Off	Ground Fault Log ON/OFF	Marked in Oscill. Record	LED	Binary Input	Function Key	Relay	Chatter Suppression	Type	Information Number	Data Unit	General Interrogation
31000	Q0 operationcounter= (Q0 OpCnt=)	Control Device	VI													
31001	Q1 operationcounter= (Q1 OpCnt=)	Control Device	VI													
31002	Q2 operationcounter= (Q2 OpCnt=)	Control Device	VI													
31008	Q8 operationcounter= (Q8 OpCnt=)	Control Device	VI													
31009	Q9 operationcounter= (Q9 OpCnt=)	Control Device	VI													

A.9 Group Alarms

No.	Description	Function No.	Description
140	Error Sum Alarm	144 181 192 194	Error 5V Error A/D-conv. Error1A/5Awrong Error neutralCT
160	Alarm Sum Event	289 163 165 167 168 169 170 171 177 183 184 185 186 187 188 189 190 191 193 361 3654 3655	Failure Σ i Fail I balance Fail Σ U Ph-E Fail U balance Fail U absent VT FuseFail>10s VT FuseFail Fail Ph. Seq. Fail Battery Error Board 1 Error Board 2 Error Board 3 Error Board 4 Error Board 5 Error Board 6 Error Board 7 Error Board 0 Error Offset Alarm adjustm. >FAIL:Feeder VT Dis.ErrorK0(Z1) DisErrorK0(>Z1)
161	Fail I Superv.	289 163	Failure Σ i Fail I balance
164	Fail U Superv.	165 167 168	Fail Σ U Ph-E Fail U balance Fail U absent

A.10 Measured Values

No.	Description	Function	IEC 60870-5-103					Configurable in Matrix		
			Type	Information Number	Compatibility	Data Unit	Position	CFC	Control Display	Default Display
-	Upper setting limit for IL1dmd (IL1dmd>)	Set Points(MV)	-	-	-	-	-	CFC	CD	DD
-	Upper setting limit for IL2dmd (IL2dmd>)	Set Points(MV)	-	-	-	-	-	CFC	CD	DD
-	Upper setting limit for IL3dmd (IL3dmd>)	Set Points(MV)	-	-	-	-	-	CFC	CD	DD
-	Upper setting limit for I1dmd (I1dmd>)	Set Points(MV)	-	-	-	-	-	CFC	CD	DD
-	Upper setting limit for Pdmd (Pdmd >)	Set Points(MV)	-	-	-	-	-	CFC	CD	DD
-	Upper setting limit for Qdmd (Qdmd >)	Set Points(MV)	-	-	-	-	-	CFC	CD	DD
-	Upper setting limit for Sdmd (Sdmd>)	Set Points(MV)	-	-	-	-	-	CFC	CD	DD
-	Lower setting limit for Power Factor (PF<)	Set Points(MV)	-	-	-	-	-	CFC	CD	DD
601	I L1 (IL1 =)	Measurement	134	129	No	9	1	CFC	CD	DD
602	I L2 (IL2 =)	Measurement	134	129	No	9	2	CFC	CD	DD
603	I L3 (IL3 =)	Measurement	134	129	No	9	3	CFC	CD	DD
610	3I0 (zero sequence) (3I0 =)	Measurement	134	129	No	9	14	CFC	CD	DD
611	3I0sen (sensitive zero sequence) (3I0sen=)	Measurement	-	-	-	-	-	CFC	CD	DD
612	IY (star point of transformer) (IY =)	Measurement	-	-	-	-	-	CFC	CD	DD
613	3I0par (parallel line neutral) (3I0par=)	Measurement	-	-	-	-	-	CFC	CD	DD
619	I1 (positive sequence) (I1 =)	Measurement	-	-	-	-	-	CFC	CD	DD
620	I2 (negative sequence) (I2 =)	Measurement	-	-	-	-	-	CFC	CD	DD
621	U L1-E (UL1E=)	Measurement	134	129	No	9	4	CFC	CD	DD
622	U L2-E (UL2E=)	Measurement	134	129	No	9	5	CFC	CD	DD
623	U L3-E (UL3E=)	Measurement	134	129	No	9	6	CFC	CD	DD
624	U L12 (UL12=)	Measurement	134	129	No	9	10	CFC	CD	DD
625	U L23 (UL23=)	Measurement	134	129	No	9	11	CFC	CD	DD
626	U L31 (UL31=)	Measurement	134	129	No	9	12	CFC	CD	DD
627	Uen (Uen =)	Measurement	-	-	-	-	-	CFC	CD	DD
631	3U0 (zero sequence) (3U0 =)	Measurement	-	-	-	-	-	CFC	CD	DD
632	Measured value U _{sy2} (U _{sy2} =)	Measurement	-	-	-	-	-	CFC	CD	DD
633	U _x (separate VT) (U _x =)	Measurement	-	-	-	-	-	CFC	CD	DD
634	U1 (positive sequence) (U1 =)	Measurement	-	-	-	-	-	CFC	CD	DD
635	U2 (negative sequence) (U2 =)	Measurement	-	-	-	-	-	CFC	CD	DD
636	Measured value U-diff (U _{sy1} - U _{sy2}) (Udiff =)	Measurement	130	1	No	9	2	CFC	CD	DD
637	Measured value U _{sy1} (U _{sy1} =)	Measurement	130	1	No	9	3	CFC	CD	DD
638	Measured value U _{sy2} (U _{sy2} =)	Measurement	130	1	No	9	1	CFC	CD	DD
641	P (active power) (P =)	Measurement	134	129	No	9	7	CFC	CD	DD
642	Q (reactive power) (Q =)	Measurement	134	129	No	9	8	CFC	CD	DD
643	Power Factor (PF =)	Measurement	134	129	No	9	13	CFC	CD	DD
644	Frequency (Freq=)	Measurement	134	129	No	9	9	CFC	CD	DD
645	S (apparent power) (S =)	Measurement	-	-	-	-	-	CFC	CD	DD
646	Frequency f _{sy2} (F-sy2 =)	Measurement	130	1	No	9	4	CFC	CD	DD
647	Frequency (difference line-bus) (F-diff=)	Measurement	130	1	No	9	5	CFC	CD	DD
648	Angle difference (φ-diff=)	Measurement	130	1	No	9	6	CFC	CD	DD
649	Frequency f _{sy1} (F-sy1 =)	Measurement	130	1	No	9	7	CFC	CD	DD
679	U1co (positive sequence, compounding) (U1co=)	Measurement	-	-	-	-	-	CFC	CD	DD
684	U0 (zero sequence) (U0 =)	Measurement	-	-	-	-	-	CFC	CD	DD

No.	Description	Function	Type	IEC 60870-5-103				Configurable in Matrix		
				Information Number	Compatibility	Data Unit	Position	CFC	Control Display	Default Display
801	Temperat. rise for warning and trip (Θ/Θ_{trip} =)	Measurement	-	-	-	-	-	CFC	CD	DD
802	Temperature rise for phase L1 (Θ/Θ_{tripL1} =)	Measurement	-	-	-	-	-	CFC	CD	DD
803	Temperature rise for phase L2 (Θ/Θ_{tripL2} =)	Measurement	-	-	-	-	-	CFC	CD	DD
804	Temperature rise for phase L3 (Θ/Θ_{tripL3} =)	Measurement	-	-	-	-	-	CFC	CD	DD
833	I1 (positive sequence) Demand (I1dmd =)	Demand meter	-	-	-	-	-	CFC	CD	DD
834	Active Power Demand (Pdmd =)	Demand meter	-	-	-	-	-	CFC	CD	DD
835	Reactive Power Demand (Qdmd =)	Demand meter	-	-	-	-	-	CFC	CD	DD
836	Apparent Power Demand (Sdmd =)	Demand meter	-	-	-	-	-	CFC	CD	DD
837	I L1 Demand Minimum (IL1d Min)	Min/Max meter	-	-	-	-	-	CFC	CD	DD
838	I L1 Demand Maximum (IL1d Max)	Min/Max meter	-	-	-	-	-	CFC	CD	DD
839	I L2 Demand Minimum (IL2d Min)	Min/Max meter	-	-	-	-	-	CFC	CD	DD
840	I L2 Demand Maximum (IL2d Max)	Min/Max meter	-	-	-	-	-	CFC	CD	DD
841	I L3 Demand Minimum (IL3d Min)	Min/Max meter	-	-	-	-	-	CFC	CD	DD
842	I L3 Demand Maximum (IL3d Max)	Min/Max meter	-	-	-	-	-	CFC	CD	DD
843	I1 (positive sequence) Demand Minimum (I1dmdMin)	Min/Max meter	-	-	-	-	-	CFC	CD	DD
844	I1 (positive sequence) Demand Maximum (I1dmdMax)	Min/Max meter	-	-	-	-	-	CFC	CD	DD
845	Active Power Demand Minimum (PdMin=)	Min/Max meter	-	-	-	-	-	CFC	CD	DD
846	Active Power Demand Maximum (PdMax=)	Min/Max meter	-	-	-	-	-	CFC	CD	DD
847	Reactive Power Demand Minimum (QdMin=)	Min/Max meter	-	-	-	-	-	CFC	CD	DD
848	Reactive Power Demand Maximum (QdMax=)	Min/Max meter	-	-	-	-	-	CFC	CD	DD
849	Apparent Power Demand Minimum (SdMin=)	Min/Max meter	-	-	-	-	-	CFC	CD	DD
850	Apparent Power Demand Maximum (SdMax=)	Min/Max meter	-	-	-	-	-	CFC	CD	DD
851	I L1 Minimum (IL1Min=)	Min/Max meter	-	-	-	-	-	CFC	CD	DD
852	I L1 Maximum (IL1Max=)	Min/Max meter	-	-	-	-	-	CFC	CD	DD
853	I L2 Minimum (IL2Min=)	Min/Max meter	-	-	-	-	-	CFC	CD	DD
854	I L2 Maximum (IL2Max=)	Min/Max meter	-	-	-	-	-	CFC	CD	DD
855	I L3 Minimum (IL3Min=)	Min/Max meter	-	-	-	-	-	CFC	CD	DD
856	I L3 Maximum (IL3Max=)	Min/Max meter	-	-	-	-	-	CFC	CD	DD
857	Positive Sequence Minimum (I1 Min=)	Min/Max meter	-	-	-	-	-	CFC	CD	DD
858	Positive Sequence Maximum (I1 Max=)	Min/Max meter	-	-	-	-	-	CFC	CD	DD
859	U L1E Minimum (UL1EMin=)	Min/Max meter	-	-	-	-	-	CFC	CD	DD
860	U L1E Maximum (UL1EMax=)	Min/Max meter	-	-	-	-	-	CFC	CD	DD
861	U L2E Minimum (UL2EMin=)	Min/Max meter	-	-	-	-	-	CFC	CD	DD
862	U L2E Maximum (UL2EMax=)	Min/Max meter	-	-	-	-	-	CFC	CD	DD
863	U L3E Minimum (UL3EMin=)	Min/Max meter	-	-	-	-	-	CFC	CD	DD
864	U L3E Maximum (UL3EMax=)	Min/Max meter	-	-	-	-	-	CFC	CD	DD
865	U L12 Minimum (UL12Min=)	Min/Max meter	-	-	-	-	-	CFC	CD	DD
867	U L12 Maximum (UL12Max=)	Min/Max meter	-	-	-	-	-	CFC	CD	DD
868	U L23 Minimum (UL23Min=)	Min/Max meter	-	-	-	-	-	CFC	CD	DD
869	U L23 Maximum (UL23Max=)	Min/Max meter	-	-	-	-	-	CFC	CD	DD
870	U L31 Minimum (UL31Min=)	Min/Max meter	-	-	-	-	-	CFC	CD	DD
871	U L31 Maximum (UL31Max=)	Min/Max meter	-	-	-	-	-	CFC	CD	DD
874	U1 (positive sequence) Voltage Minimum (U1 Min =)	Min/Max meter	-	-	-	-	-	CFC	CD	DD
875	U1 (positive sequence) Voltage Maximum (U1 Max =)	Min/Max meter	-	-	-	-	-	CFC	CD	DD

No.	Description	Function	Type	IEC 60870-5-103				Configurable in Matrix		
				Information Number	Compatibility	Data Unit	Position	CFC	Control Display	Default Display
880	Apparent Power Minimum (SMin=)	Min/Max meter	-	-	-	-	-	CFC	CD	DD
881	Apparent Power Maximum (SMax=)	Min/Max meter	-	-	-	-	-	CFC	CD	DD
882	Frequency Minimum (fMin=)	Min/Max meter	-	-	-	-	-	CFC	CD	DD
883	Frequency Maximum (fMax=)	Min/Max meter	-	-	-	-	-	CFC	CD	DD
888	Pulsed Energy Wp (active) (Wp(puls))	Energy	133	55	No	205	-	CFC	CD	DD
889	Pulsed Energy Wq (reactive) (Wq(puls))	Energy	133	56	No	205	-	CFC	CD	DD
924	Wp Forward (Wp+=)	Energy	133	51	No	205	-	CFC	CD	DD
925	Wq Forward (Wq+=)	Energy	133	52	No	205	-	CFC	CD	DD
928	Wp Reverse (Wp-=)	Energy	133	53	No	205	-	CFC	CD	DD
929	Wq Reverse (Wq-=)	Energy	133	54	No	205	-	CFC	CD	DD
963	I L1 demand (IL1dmd=)	Demand meter	-	-	-	-	-	CFC	CD	DD
964	I L2 demand (IL2dmd=)	Demand meter	-	-	-	-	-	CFC	CD	DD
965	I L3 demand (IL3dmd=)	Demand meter	-	-	-	-	-	CFC	CD	DD
966	R L1E (R L1E=)	Measurement	-	-	-	-	-	CFC	CD	DD
967	R L2E (R L2E=)	Measurement	-	-	-	-	-	CFC	CD	DD
970	R L3E (R L3E=)	Measurement	-	-	-	-	-	CFC	CD	DD
971	R L12 (R L12=)	Measurement	-	-	-	-	-	CFC	CD	DD
972	R L23 (R L23=)	Measurement	-	-	-	-	-	CFC	CD	DD
973	R L31 (R L31=)	Measurement	-	-	-	-	-	CFC	CD	DD
974	X L1E (X L1E=)	Measurement	-	-	-	-	-	CFC	CD	DD
975	X L2E (X L2E=)	Measurement	-	-	-	-	-	CFC	CD	DD
976	X L3E (X L3E=)	Measurement	-	-	-	-	-	CFC	CD	DD
977	X L12 (X L12=)	Measurement	-	-	-	-	-	CFC	CD	DD
978	X L23 (X L23=)	Measurement	-	-	-	-	-	CFC	CD	DD
979	X L31 (X L31=)	Measurement	-	-	-	-	-	CFC	CD	DD
1040	Active Power Minimum Forward (Pmin Forw=)	Min/Max meter	-	-	-	-	-	CFC	CD	DD
1041	Active Power Maximum Forward (Pmax Forw=)	Min/Max meter	-	-	-	-	-	CFC	CD	DD
1042	Active Power Minimum Reverse (Pmin Rev =)	Min/Max meter	-	-	-	-	-	CFC	CD	DD
1043	Active Power Maximum Reverse (Pmax Rev =)	Min/Max meter	-	-	-	-	-	CFC	CD	DD
1044	Reactive Power Minimum Forward (Qmin Forw=)	Min/Max meter	-	-	-	-	-	CFC	CD	DD
1045	Reactive Power Maximum Forward (Qmax Forw=)	Min/Max meter	-	-	-	-	-	CFC	CD	DD
1046	Reactive Power Minimum Reverse (Qmin Rev =)	Min/Max meter	-	-	-	-	-	CFC	CD	DD
1047	Reactive Power Maximum Reverse (Qmax Rev =)	Min/Max meter	-	-	-	-	-	CFC	CD	DD
1048	Power Factor Minimum Forward (PFmin-Forw=)	Min/Max meter	-	-	-	-	-	CFC	CD	DD
1049	Power Factor Maximum Forward (PFmax-Forw=)	Min/Max meter	-	-	-	-	-	CFC	CD	DD
1050	Power Factor Minimum Reverse (PFmin Rev=)	Min/Max meter	-	-	-	-	-	CFC	CD	DD
1051	Power Factor Maximum Reverse (PFmax Rev=)	Min/Max meter	-	-	-	-	-	CFC	CD	DD
1052	Active Power Demand Forward (Pdmd Forw=)	Demand meter	-	-	-	-	-	CFC	CD	DD
1053	Active Power Demand Reverse (Pdmd Rev =)	Demand meter	-	-	-	-	-	CFC	CD	DD

No.	Description	Function	Type	IEC 60870-5-103				Configurable in Matrix		
				Information Number	Compatibility	Data Unit	Position	CFC	Control Display	Default Display
1054	Reactive Power Demand Forward (Qdmd Forw=)	Demand meter	-	-	-	-	-	CFC	CD	DD
1055	Reactive Power Demand Reverse (Qdmd Rev =)	Demand meter	-	-	-	-	-	CFC	CD	DD
7731	PHI IL1L2 (local) (Φ IL1L2=)	Measurement	-	-	-	-	-	CFC	CD	DD
7732	PHI IL2L3 (local) (Φ IL2L3=)	Measurement	-	-	-	-	-	CFC	CD	DD
7733	PHI IL3L1 (local) (Φ IL3L1=)	Measurement	-	-	-	-	-	CFC	CD	DD
7734	PHI UL1L2 (local) (Φ UL1L2=)	Measurement	-	-	-	-	-	CFC	CD	DD
7735	PHI UL2L3 (local) (Φ UL2L3=)	Measurement	-	-	-	-	-	CFC	CD	DD
7736	PHI UL3L1 (local) (Φ UL3L1=)	Measurement	-	-	-	-	-	CFC	CD	DD
7737	PHI UIL1 (local) (Φ UIL1=)	Measurement	-	-	-	-	-	CFC	CD	DD
7738	PHI UIL2 (local) (Φ UIL2=)	Measurement	-	-	-	-	-	CFC	CD	DD
7739	PHI UIL3 (local) (Φ UIL3=)	Measurement	-	-	-	-	-	CFC	CD	DD
7742	IDiffL1(% Operational nominal current) (IDiffL1=)	IDiff/IRest	134	122	No	9	1	CFC	CD	DD
7743	IDiffL2(% Operational nominal current) (IDiffL2=)	IDiff/IRest	134	122	No	9	2	CFC	CD	DD
7744	IDiffL3(% Operational nominal current) (IDiffL3=)	IDiff/IRest	134	122	No	9	3	CFC	CD	DD
7745	IRestL1(% Operational nominal current) (IRestL1=)	IDiff/IRest	134	122	No	9	4	CFC	CD	DD
7746	IRestL2(% Operational nominal current) (IRestL2=)	IDiff/IRest	134	122	No	9	5	CFC	CD	DD
7747	IRestL3(% Operational nominal current) (IRestL3=)	IDiff/IRest	134	122	No	9	6	CFC	CD	DD
7748	Diff3I0 (Differential current 3I0) (Diff3I0=)	IDiff/IRest	-	-	-	-	-	CFC	CD	DD
7751	Prot.Interface 1:Transmission delay (PI1 TD)	Statistics	134	122	No	9	7	CFC	CD	DD
7752	Prot.Interface 2:Transmission delay (PI2 TD)	Statistics	134	122	No	9	9	CFC	CD	DD
7753	Prot.Interface 1: Availability per min. (PI1A/m)	Statistics	-	-	-	-	-	CFC	CD	DD
7754	Prot.Interface 1: Availability per hour (PI1A/h)	Statistics	134	122	No	9	8	CFC	CD	DD
			134	121	No	9	3			
7755	Prot.Interface 2: Availability per min. (PI2A/m)	Statistics	-	-	-	-	-	CFC	CD	DD
7756	Prot.Interface 2: Availability per hour (PI2A/h)	Statistics	134	122	No	9	10	CFC	CD	DD
			134	121	No	9	6			
7761	Relay ID of 1. relay (Relay ID)	Measure relay1	-	-	-	-	-	CFC	CD	DD
7762	IL1(% of Operational nominal current) (IL1_opN=)	Measure relay1	-	-	-	-	-	CFC	CD	DD
7763	Angle IL1_rem <-> IL1_loc (Φ L1=)	Measure relay1	-	-	-	-	-	CFC	CD	DD
7764	IL2(% of Operational nominal current) (IL2_opN=)	Measure relay1	-	-	-	-	-	CFC	CD	DD
7765	Angle IL2_rem <-> IL2_loc (Φ L2=)	Measure relay1	-	-	-	-	-	CFC	CD	DD
7766	IL3(% of Operational nominal current) (IL3_opN=)	Measure relay1	-	-	-	-	-	CFC	CD	DD
7767	Angle IL3_rem <-> IL3_loc (Φ L3=)	Measure relay1	-	-	-	-	-	CFC	CD	DD
7769	UL1(% of Operational nominal voltage) (UL1_opN=)	Measure relay1	-	-	-	-	-	CFC	CD	DD
7770	Angle UL1_rem <-> UL1_loc (Φ U L1=)	Measure relay1	-	-	-	-	-	CFC	CD	DD
7771	UL2(% of Operational nominal voltage) (UL2_opN=)	Measure relay1	-	-	-	-	-	CFC	CD	DD
7772	Angle UL2_rem <-> UL2_loc (Φ U L2=)	Measure relay1	-	-	-	-	-	CFC	CD	DD
7773	UL3(% of Operational nominal voltage) (UL3_opN=)	Measure relay1	-	-	-	-	-	CFC	CD	DD

No.	Description	Function	IEC 60870-5-103					Configurable in Matrix		
			Type	Information Number	Compatibility	Data Unit	Position	CFC	Control Display	Default Display
7774	Angle UL3_rem <-> UL3_loc (ΦU L3=)	Measure relay1	-	-	-	-	-	CFC	CD	DD
7781	Relay ID of 2. relay (Relay ID)	Measure relay2	-	-	-	-	-	CFC	CD	DD
7782	IL1(% of Operational nominal current) (IL1_opN=)	Measure relay2	-	-	-	-	-	CFC	CD	DD
7783	Angle IL1_rem <-> IL1_loc (ΦI L1=)	Measure relay2	-	-	-	-	-	CFC	CD	DD
7784	IL2(% of Operational nominal current) (IL2_opN=)	Measure relay2	-	-	-	-	-	CFC	CD	DD
7785	Angle IL2_rem <-> IL2_loc (ΦI L2=)	Measure relay2	-	-	-	-	-	CFC	CD	DD
7786	IL3(% of Operational nominal current) (IL3_opN=)	Measure relay2	-	-	-	-	-	CFC	CD	DD
7787	Angle IL3_rem <-> IL3_loc (ΦI L3=)	Measure relay2	-	-	-	-	-	CFC	CD	DD
7789	UL1(% of Operational nominal voltage) (UL1_opN=)	Measure relay2	-	-	-	-	-	CFC	CD	DD
7790	Angle UL1_rem <-> UL1_loc (ΦU L1=)	Measure relay2	-	-	-	-	-	CFC	CD	DD
7791	UL2(% of Operational nominal voltage) (UL2_opN=)	Measure relay2	-	-	-	-	-	CFC	CD	DD
7792	Angle UL2_rem <-> UL2_loc (ΦU L2=)	Measure relay2	-	-	-	-	-	CFC	CD	DD
7793	UL3(% of Operational nominal voltage) (UL3_opN=)	Measure relay2	-	-	-	-	-	CFC	CD	DD
7794	Angle UL3_rem <-> UL3_loc (ΦU L3=)	Measure relay2	-	-	-	-	-	CFC	CD	DD
7801	Relay ID of 3. relay (Relay ID)	Measure relay3	-	-	-	-	-	CFC	CD	DD
7802	IL1(% of Operational nominal current) (IL1_opN=)	Measure relay3	-	-	-	-	-	CFC	CD	DD
7803	Angle IL1_rem <-> IL1_loc (ΦI L1=)	Measure relay3	-	-	-	-	-	CFC	CD	DD
7804	IL2(% of Operational nominal current) (IL2_opN=)	Measure relay3	-	-	-	-	-	CFC	CD	DD
7805	Angle IL2_rem <-> IL2_loc (ΦI L2=)	Measure relay3	-	-	-	-	-	CFC	CD	DD
7806	IL3(% of Operational nominal current) (IL3_opN=)	Measure relay3	-	-	-	-	-	CFC	CD	DD
7807	Angle IL3_rem <-> IL3_loc (ΦI L3=)	Measure relay3	-	-	-	-	-	CFC	CD	DD
7809	UL1(% of Operational nominal voltage) (UL1_opN=)	Measure relay3	-	-	-	-	-	CFC	CD	DD
7810	Angle UL1_rem <-> UL1_loc (ΦU L1=)	Measure relay3	-	-	-	-	-	CFC	CD	DD
7811	UL2(% of Operational nominal voltage) (UL2_opN=)	Measure relay3	-	-	-	-	-	CFC	CD	DD
7812	Angle UL2_rem <-> UL2_loc (ΦU L2=)	Measure relay3	-	-	-	-	-	CFC	CD	DD
7813	UL3(% of Operational nominal voltage) (UL3_opN=)	Measure relay3	-	-	-	-	-	CFC	CD	DD
7814	Angle UL3_rem <-> UL3_loc (ΦU L3=)	Measure relay3	-	-	-	-	-	CFC	CD	DD
7821	Relay ID of 4. relay (Relay ID)	Measure relay4	-	-	-	-	-	CFC	CD	DD
7822	IL1(% of Operational nominal current) (IL1_opN=)	Measure relay4	-	-	-	-	-	CFC	CD	DD
7823	Angle IL1_rem <-> IL1_loc (ΦI L1=)	Measure relay4	-	-	-	-	-	CFC	CD	DD
7824	IL2(% of Operational nominal current) (IL2_opN=)	Measure relay4	-	-	-	-	-	CFC	CD	DD
7825	Angle IL2_rem <-> IL2_loc (ΦI L2=)	Measure relay4	-	-	-	-	-	CFC	CD	DD
7826	IL3(% of Operational nominal current) (IL3_opN=)	Measure relay4	-	-	-	-	-	CFC	CD	DD
7827	Angle IL3_rem <-> IL3_loc (ΦI L3=)	Measure relay4	-	-	-	-	-	CFC	CD	DD
7829	UL1(% of Operational nominal voltage) (UL1_opN=)	Measure relay4	-	-	-	-	-	CFC	CD	DD
7830	Angle UL1_rem <-> UL1_loc (ΦU L1=)	Measure relay4	-	-	-	-	-	CFC	CD	DD
7831	UL2(% of Operational nominal voltage) (UL2_opN=)	Measure relay4	-	-	-	-	-	CFC	CD	DD

No.	Description	Function	IEC 60870-5-103					Configurable in Matrix		
			Type	Information Number	Compatibility	Data Unit	Position	CFC	Control Display	Default Display
7832	Angle UL2_rem <-> UL2_loc (ΦU L2=)	Measure relay4	-	-	-	-	-	CFC	CD	DD
7833	UL3(% of Operational nominal voltage) (UL3_opN=)	Measure relay4	-	-	-	-	-	CFC	CD	DD
7834	Angle UL3_rem <-> UL3_loc (ΦU L3=)	Measure relay4	-	-	-	-	-	CFC	CD	DD
7841	Relay ID of 5. relay (Relay ID)	Measure relay5	-	-	-	-	-	CFC	CD	DD
7842	IL1(% of Operational nominal current) (IL1_opN=)	Measure relay5	-	-	-	-	-	CFC	CD	DD
7843	Angle IL1_rem <-> IL1_loc (ΦI L1=)	Measure relay5	-	-	-	-	-	CFC	CD	DD
7844	IL2(% of Operational nominal current) (IL2_opN=)	Measure relay5	-	-	-	-	-	CFC	CD	DD
7845	Angle IL2_rem <-> IL2_loc (ΦI L2=)	Measure relay5	-	-	-	-	-	CFC	CD	DD
7846	IL3(% of Operational nominal current) (IL3_opN=)	Measure relay5	-	-	-	-	-	CFC	CD	DD
7847	Angle IL3_rem <-> IL3_loc (ΦI L3=)	Measure relay5	-	-	-	-	-	CFC	CD	DD
7849	UL1(% of Operational nominal voltage) (UL1_opN=)	Measure relay5	-	-	-	-	-	CFC	CD	DD
7850	Angle UL1_rem <-> UL1_loc (ΦU L1=)	Measure relay5	-	-	-	-	-	CFC	CD	DD
7851	UL2(% of Operational nominal voltage) (UL2_opN=)	Measure relay5	-	-	-	-	-	CFC	CD	DD
7852	Angle UL2_rem <-> UL2_loc (ΦU L2=)	Measure relay5	-	-	-	-	-	CFC	CD	DD
7853	UL3(% of Operational nominal voltage) (UL3_opN=)	Measure relay5	-	-	-	-	-	CFC	CD	DD
7854	Angle UL3_rem <-> UL3_loc (ΦU L3=)	Measure relay5	-	-	-	-	-	CFC	CD	DD
7861	Relay ID of 6. relay (Relay ID)	Measure relay6	-	-	-	-	-	CFC	CD	DD
7862	IL1(% of Operational nominal current) (IL1_opN=)	Measure relay6	-	-	-	-	-	CFC	CD	DD
7863	Angle IL1_rem <-> IL1_loc (ΦI L1=)	Measure relay6	-	-	-	-	-	CFC	CD	DD
7864	IL2(% of Operational nominal current) (IL2_opN=)	Measure relay6	-	-	-	-	-	CFC	CD	DD
7865	Angle IL2_rem <-> IL2_loc (ΦI L2=)	Measure relay6	-	-	-	-	-	CFC	CD	DD
7866	IL3(% of Operational nominal current) (IL3_opN=)	Measure relay6	-	-	-	-	-	CFC	CD	DD
7867	Angle IL3_rem <-> IL3_loc (ΦI L3=)	Measure relay6	-	-	-	-	-	CFC	CD	DD
7869	UL1(% of Operational nominal voltage) (UL1_opN=)	Measure relay6	-	-	-	-	-	CFC	CD	DD
7870	Angle UL1_rem <-> UL1_loc (ΦU L1=)	Measure relay6	-	-	-	-	-	CFC	CD	DD
7871	UL2(% of Operational nominal voltage) (UL2_opN=)	Measure relay6	-	-	-	-	-	CFC	CD	DD
7872	Angle UL2_rem <-> UL2_loc (ΦU L2=)	Measure relay6	-	-	-	-	-	CFC	CD	DD
7873	UL3(% of Operational nominal voltage) (UL3_opN=)	Measure relay6	-	-	-	-	-	CFC	CD	DD
7874	Angle UL3_rem <-> UL3_loc (ΦU L3=)	Measure relay6	-	-	-	-	-	CFC	CD	DD
7875	Prot.Interface 1:Transmission delay rec. (PI1 TD R)	Statistics	134	121	No	9	1	CFC	CD	DD
7876	Prot.Interface 1:Transmission delay send (PI1 TD S)	Statistics	134	121	No	9	2	CFC	CD	DD
7877	Prot.Interface 2:Transmission delay rec. (PI2 TD R)	Statistics	134	121	No	9	4	CFC	CD	DD
7878	Prot.Interface 2:Transmission delay send (PI2 TD S)	Statistics	134	121	No	9	5	CFC	CD	DD
7880	Measured value charging current L1 (Ic L1 =)	IDiff/IRest	-	-	-	-	-	CFC	CD	DD
7881	Measured value charging current L2 (Ic L2 =)	IDiff/IRest	-	-	-	-	-	CFC	CD	DD
7882	Measured value charging current L3 (Ic L3 =)	IDiff/IRest	-	-	-	-	-	CFC	CD	DD
10102	Min. Zero Sequence Voltage 3U0 (3U0min =)	Min/Max meter	-	-	-	-	-	CFC	CD	DD

No.	Description	Function	IEC 60870-5-103					Configurable in Matrix		
			Type	Information Number	Compatibility	Data Unit	Position	CFC	Control Display	Default Display
10103	Max. Zero Sequence Voltage $3U_0$ ($3U_{0max}$ =)	Min/Max meter	-	-	-	-	-	CFC	CD	DD
30654	Idiff REF(% Operational nominal current) (IdiffREF=)	IDiff/IRest	-	-	-	-	-	CFC	CD	DD
30655	Irest REF(% Operational nominal current) (IrestREF=)	IDiff/IRest	-	-	-	-	-	CFC	CD	DD



Literature

- /1/ SIPROTEC 4 System Description; E50417-H1176-C151-A2
- /2/ SIPROTEC DIGSI, Start Up; E50417-G1176-C152-A2
- /3/ DIGSI CFC, Manual; E50417-H1176-C098-A4
- /4/ SIPROTEC SIGRA 4, Manual; E50417-H1176-C070-A2
- /5/ Ziegler, Gerhard; Numerical Distance Protection; Principles and Applications; Erlangen 1999; ISBN 3-89578-141-X

Glossary

Battery	The buffer battery ensures that specified data areas, flags, timers and counters are retained retentively.
Bay controllers	Bay controllers are devices with control and monitoring functions without protective functions.
Bit pattern indication	Bit pattern indication is a processing function by means of which items of digital process information applying across several inputs can be detected together in parallel and processed further. The bit pattern length can be specified as 1, 2, 3 or 4 bytes.
BP_xx	→ Bit pattern indication (Bitstring Of x Bit), x designates the length in bits (8, 16, 24 or 32 bits).
C_xx	Command without feedback
CF_xx	Command with feedback
CFC	Continuous Function Chart. CFC is a graphical editor with which a program can be created and configured by using ready-made blocks.
CFC blocks	Blocks are parts of the user program delimited by their function, their structure or their purpose.
Chatter blocking	A rapidly intermittent input (for example, due to a relay contact fault) is switched off after a configurable monitoring time and can thus not generate any further signal changes. The function prevents overloading of the system when a fault arises.
Combination devices	Combination devices are bay devices with protection functions and a control display.
Combination matrix	From DIGSI V4.6 onward, up to 32 compatible SIPROTEC 4 devices can communicate with one another in an Inter Relay Communication combination (IRC combination). Which device exchanges which information is defined with the help of the combination matrix.
Communication branch	A communications branch corresponds to the configuration of 1 to n users that communicate by means of a common bus.
Communication reference CR	The communication reference describes the type and version of a station in communication by PROFIBUS.

Component view	In addition to a topological view, SIMATIC Manager offers you a component view. The component view does not offer any overview of the hierarchy of a project. It does, however, provide an overview of all the SIPROTEC 4 devices within a project.
COMTRADE	Common Format for Transient Data Exchange, format for fault records.
Container	If an object can contain other objects, it is called a container. The object Folder is an example of such a container.
Control display	The display which is displayed on devices with a large (graphic) display after you have pressed the control key is called the control display. It contains the switchgear that can be controlled in the feeder with status display. It is used to perform switching operations. Defining this display is part of the configuration.
Data pane	→ The right-hand area of the project window displays the contents of the area selected in the → navigation window, for example indications, measured values, etc. of the information lists or the function selection for the device configuration.
DCF77	The extremely precise official time is determined in Germany by the "Physikalisch-Technische-Bundesanstalt PTB" in Braunschweig. The atomic clock station of the PTB transmits this time via the long-wave time-signal transmitter in Mainflingen near Frankfurt/Main. The emitted time signal can be received within a radius of approx. 1,500 km from Frankfurt/Main.
Device container	In the Component View, all SIPROTEC 4 devices are assigned to an object of type Device container. This object is a special object of DIGSI Manager. However, since there is no component view in DIGSI Manager, this object only becomes visible in conjunction with STEP 7.
Double command	Double commands are process outputs which indicate 4 process states at 2 outputs: 2 defined (for example ON/OFF) and 2 undefined states (for example intermediate positions)
Double-point indication	Double-point indications are items of process information which indicate 4 process states at 2 inputs: 2 defined (for example ON/OFF) and 2 undefined states (for example intermediate positions).
DP	→ Double-point indication
DP_I	→ Double point indication, intermediate position 00
Drag and drop	Copying, moving and linking function, used at graphics user interfaces. Objects are selected with the mouse, held and moved from one data area to another.
Earth	The conductive earth whose electric potential can be set equal to zero at every point. In the area of earth electrodes the earth can have a potential deviating from zero. The term "Earth reference plane" is often used for this state.

Earth (verb)	This term means that a conductive part is connected via an earthing system to the → earth.
Earthing	Earthing is the total of all means and measures used for earthing.
Electromagnetic compatibility	Electromagnetic compatibility (EMC) is the ability of an electrical apparatus to function fault-free in a specified environment without influencing the environment unduly.
EMC	→ Electromagnetic compatibility
ESD protection	ESD protection is the total of all the means and measures used to protect electrostatic sensitive devices.
ExBPxx	External bit pattern indication via an ETHERNET connection, device-specific → Bit pattern indication
ExC	External command without feedback via an ETHERNET connection, device-specific
ExCF	External command with feedback via an ETHERNET connection, device-specific
ExDP	External double point indication via an ETHERNET connection, device-specific → Double point indication
ExDP_I	External double point indication via an ETHERNET connection, intermediate position 00, device-specific → Double point indication
ExMV	External metered value via an ETHERNET connection, device-specific
ExSI	External single point indication via an ETHERNET connection, device-specific → Single point indication
ExSI_F	External single point indication via an ETHERNET connection, device-specific → Transient information, → Single point indication
Field devices	Generic term for all devices assigned to the field level: Protection devices, combination devices, bay controllers.
Floating	→ Without electrical connection to the → Earth.
FMS communication branch	Within an FMS communication branch, the users communicate on the basis of the PROFIBUS FMS protocol via a PROFIBUS FMS network.
Folder	This object type is used to create the hierarchical structure of a project.
General interrogation (GI)	During the system start-up the state of all the process inputs, of the status and of the fault image is sampled. This information is used to update the system-end process

image. The current process state can also be sampled after a data loss by means of a GI.

GOOSE message	GOOSE messages (Generic Object Oriented Substation Event) are data packets which are transferred event-controlled via the Ethernet communication system. They serve for direct information exchange among the relays. This mechanism implements cross-communication between bay units.
GPS	Global Positioning System. Satellites with atomic clocks on board orbit the earth twice a day on different paths in approx. 20,000 km. They transmit signals which also contain the GPS universal time. The GPS receiver determines its own position from the signals received. From its position it can derive the delay time of a satellite signal and thus correct the transmitted GPS universal time.
Hierarchy level	Within a structure with higher-level and lower-level objects a hierarchy level is a container of equivalent objects.
HV field description	The HV project description file contains details of fields which exist in a ModPara-project. The actual field information of each field is stored in a HV field description file. Within the HV project description file, each field is allocated such a HV field description file by a reference to the file name.
HV project description	All the data is exported once the configuration and parameterization of PCUs and sub-modules using ModPara has been completed. This data is split up into several files. One file contains details about the fundamental project structure. This also includes, for example, information detailing which fields exist in this project. This file is called a HV project description file.
ID	Internal double point indication → Double point indication
ID_S	Internal double point indication, intermediate position 00 → Double point indication
IEC	International Electrotechnical Commission, international standardisation body
IEC address	Within an IEC bus a unique IEC address has to be assigned to each SIPROTEC 4 device. A total of 254 IEC addresses are available for each IEC bus.
IEC communication branch	Within an IEC communication branch the users communicate on the basis of the IEC60-870-5-103 protocol via an IEC bus.
IEC61850	International communication standard for communication in substations. The objective of this standard is the interoperability of devices from different manufacturers on the station bus. An Ethernet network is used for data transfer.
Initialization string	An initialization string comprises a range of modem-specific commands. These are transmitted to the modem within the framework of modem initialization. The commands can, for example, force specific settings for the modem.

Inter relay communication	→ IRC combination
IRC combination	Inter Relay Communication, IRC, is used for directly exchanging process information between SIPROTEC 4 devices. You require an object of type IRC combination to configure an inter relay communication. Each user of the combination and all the necessary communication parameters are defined in this object. The type and scope of the information exchanged between the users is also stored in this object.
IRIG-B	Time signal code of the Inter-Range Instrumentation Group
IS	Internal single point indication → Single point indication
IS_F	Internal indication transient → Transient information, → Single point indication
ISO 9001	The ISO 9000 ff range of standards defines measures used to assure the quality of a product from the development stage to the manufacturing stage.
Link address	The link address gives the address of a V3/V2 device.
List view	The right pane of the project window displays the names and icons of objects which represent the contents of a container selected in the tree view. Because they are displayed in the form of a list, this area is called the list view.
LV	Limit value
LVU	Limit value, user-defined
Master	Masters may send data to other users and request data from other users. DIGSI operates as a master.
Metered value	Metered values are a processing function with which the total number of discrete similar events (counting pulses) is determined for a period, usually as an integrated value. In power supply companies the electrical work is usually recorded as a metered value (energy purchase/supply, energy transportation).
MLFB	MLFB is the abbreviation for "MaschinenLesbare FabrikateBezeichnung" (machine-readable product designation). This is the equivalent of an order number. The type and version of a SIPROTEC 4 device are coded in the order number.
Modem connection	This object type contains information on both partners of a modem connection, the local modem and the remote modem.
Modem profile	A modem profile consists of the name of the profile, a modem driver and may also comprise several initialization commands and a user address. You can create several modem profiles for one physical modem. To do so you need to link various initialization commands or user addresses to a modem driver and its properties and save them under different names.

Modems	Modem profiles for a modem connection are stored in this object type.
MV	Measured value
MVMV	Metered value which is formed from the measured value
MVT	Measured value with time
MVU	Measured value, user-defined
Navigation pane	The left pane of the project window displays the names and symbols of all containers of a project in the form of a folder tree.
Object	Each element of a project structure is called an object in DIGSI.
Object properties	Each object has properties. These might be general properties that are common to several objects. An object can also have specific properties.
Off-line	In offline mode a connection to a SIPROTEC 4 device is not required. You work with data which are stored in files.
OI_F	Output Indication Transient → Transient information
On-line	When working in online mode, there is a physical connection to a SIPROTEC 4 device. This connection can be implemented as a direct connection, as a modem connection or as a PROFIBUS FMS connection.
OUT	Output indication
Parameter set	The parameter set is the set of all parameters that can be set for a SIPROTEC 4 device.
Phone book	User addresses for a modem connection are saved in this object type.
PMV	Pulse metered value
Process bus	Devices with a process bus interface allow direct communication with SICAM HV modules. The process bus interface is equipped with an Ethernet module.
PROFIBUS	PROcess Field BUS, the German process and field bus standard, as specified in the standard EN 50170, Volume 2, PROFIBUS. It defines the functional, electrical, and mechanical properties for a bit-serial field bus.
PROFIBUS address	Within a PROFIBUS network a unique PROFIBUS address has to be assigned to each SIPROTEC 4 device. A total of 254 PROFIBUS addresses are available for each PROFIBUS network.

Project	Content-wise, a project is the image of a real power supply system. Graphically, a project is represented as a number of objects which are integrated in a hierarchical structure. Physically, a project consists of a number of directories and files containing project data.
Protection devices	All devices with a protective function and no control display.
Reorganizing	Frequent addition and deletion of objects results in memory areas that can no longer be used. By reorganizing projects, you can release these memory areas again. However, a cleanup also reassigns the VD addresses. The consequence is that all SIPROTEC 4 devices have to be reinitialized.
RIO file	Relay data Interchange format by Omicron.
RSxxx-interface	Serial interfaces RS232, RS422/485
SCADA Interface	Rear serial interface on the devices for connecting to a control system via IEC or PROFIBUS.
Service port	Rear serial interface on the devices for connecting DIGSI (for example, via modem).
Setting parameters	General term for all adjustments made to the device. Parameterization jobs are executed by means of DIGSI or, in some cases, directly on the device.
SI	→ Single point indication
SI_F	→ Single point indication transient → Transient information, → Single point indication
SICAM SAS	Modularly structured station control system, based on the substation controller → SICAM SC and the SICAM WinCC operator control and monitoring system.
SICAM SC	Substation Controller. Modularly structured substation control system, based on the SIMATIC M7 automation system.
SICAM WinCC	The SICAM WinCC operator control and monitoring system displays the state of your network graphically, visualizes alarms, interrupts and indications, archives the network data, offers the possibility of intervening manually in the process and manages the system rights of the individual employee.
Single command	Single commands are process outputs which indicate 2 process states (for example, ON/OFF) at one output.
Single point indication	Single indications are items of process information which indicate 2 process states (for example, ON/OFF) at one output.
SIPROTEC	The registered trademark SIPROTEC is used for devices implemented on system base V4.

SIPROTEC 4 device	This object type represents a real SIPROTEC 4 device with all the setting values and process data it contains.
SIPROTEC 4 variant	This object type represents a variant of an object of type SIPROTEC 4 device. The device data of this variant may well differ from the device data of the original object. However, all variants derived from the original object have the same VD address as the original object. For this reason they always correspond to the same real SIPROTEC 4 device as the original object. Objects of type SIPROTEC 4 variant have a variety of uses, such as documenting different operating states when entering parameter settings of a SIPROTEC 4 device.
Slave	A slave may only exchange data with a master after being prompted to do so by the master. SIPROTEC 4 devices operate as slaves.
Time stamp	Time stamp is the assignment of the real time to a process event.
Topological view	DIGSI Manager always displays a project in the topological view. This shows the hierarchical structure of a project with all available objects.
Transformer Tap Indication	Transformer tap indication is a processing function on the DI by means of which the tap of the transformer tap changer can be detected together in parallel and processed further.
Transient information	A transient information is a brief transient → single-point indication at which only the coming of the process signal is detected and processed immediately.
Tree view	The left pane of the project window displays the names and symbols of all containers of a project in the form of a folder tree. This area is called the tree view.
TxTap	→ Transformer Tap Indication
User address	A user address comprises the name of the user, the national code, the area code and the user-specific phone number.
Users	From DIGSI V4.6 onward , up to 32 compatible SIPROTEC 4 devices can communicate with one another in an Inter Relay Communication combination. The individual participating devices are called users.
VD	A VD (Virtual Device) includes all communication objects and their properties and states that are used by a communication user through services. A VD can be a physical device, a module of a device or a software module.
VD address	The VD address is assigned automatically by DIGSI Manager. It exists only once in the entire project and thus serves to identify unambiguously a real SIPROTEC 4 device. The VD address assigned by DIGSI Manager must be transferred to the SIPROTEC 4 device in order to allow communication with DIGSI Device Editor.
VFD	A VFD (Virtual Field Device) includes all communication objects and their properties and states that are used by a communication user through services.

WM

A WM (Wertmeldung) designates value indication.

Index

A

- Acknowledgement of commands 483
- Adaptive dead time (ADT) 328
- Additional Functions 453, 621
- Alarm levels 407
- Alternating voltage 564
- Analog inputs 20
- Analog Inputs and Outputs 563
- Analog/digital converters 21
- Angle of inclination of the tripping characteristics 131
- Angular dependence 136
- Assignment to the polygons 147
- Asymmetrical measuring voltage failure 424
- Auto-reclosure
 - Multiple 316
- Automatic reclosing commands 459
- Automatic Reclosure 30, 604
- Automatic reclosure
 - Circuit breaker test 438
 - Control 321
 - Initiation 311
 - Operating modes 312
- Automatic reclosure function 24, 308
 - Action times 311
 - Circuit breaker auxiliary contacts 314
 - External reclosure device 320
 - Selectivity 309
 - Single-/ three-pole reclose cycle 315
 - Single-pole reclose cycle 315
 - Three-pole reclose cycle 314
- Auxiliary Voltage 564
- Auxiliary voltage 491

B

- Back-up Battery 409
- Binary Inputs 565
- Binary Outputs 455, 565
- Blocking 229, 231
- Blocking of zone Z1 129
- Breaker failure protection 399
- Breaker intertrip
 - Receiving circuit 110
 - Remote tripping 111
 - Transmission circuit 109
- Broken Wire Monitoring 413
- Busbar Tripping 536

C

- Calculation of the impedances 122
- Certifications 575
- Chain topology 75
- Change of Operating Stage 526
- Changing Setting Groups 487
- Characteristics
 - Definite time overcurrent protection 24
 - Inverse time overcurrent protection 24
- Charge comparison stage
 - Pickup value 104
- Charging current values 465
- Check:
 - Polarity 540
 - Polarity check for current input I_4 544
 - Polarity check for voltage input U_4 541
 - Service interface 515
 - Termination 516
 - Time synchronization interface 516
- Check: System interface 515
- Checking:
 - Data connection of serial interfaces 515
 - Instrument Transformer Connection for More than Two Ends 549
 - Instrument Transformer Connection of Two Line Ends 538
 - Operator interface 515
 - Permissive release 551
 - Permissive Underreach Transfer Trip 553
 - Phase rotation 537
 - Protection Data Communication 517
 - System Connections 518
 - Teleprotection System (Distance Protection) 550
 - Time Synchronisation Interface 522
 - Voltage connection 537
- Circuit Breaker
 - Measuring the Operating Time 549
 - Position Detection 436
 - Test Programs 448
 - Tripping Test 556
- Circuit breaker
 - Closing time 49
 - External trip 283
 - Fault 397
 - Position logic 436
 - Test 50
- Circuit breaker auxiliary contacts 390
- Circuit Breaker Failure Protection 388, 612
- Circuit breaker failure protection

- Circuit breaker monitoring 612
- End fault protection 612
- Initiation conditions 612
- Pole discrepancy supervision 612
- Times 612
- Circuit Breaker for Voltage Transformers 425
- Circuit breaker not operational 402
- Circuit breaker status 64
- Climatic Stress Tests 574
- Clock time synchronisation 623
- CLOSE-command transmission 319
- Closing check operating modes 343
- Closing under asynchronous system conditions 345
- Closing under synchronous system conditions 344
- Command Execution 479
- Command output 483
- Command Path 478
- Command Processing 477
- Command Task 478
- Commissioning Aids
 - WEB-Monitor 453
- Commissioning aids 623
- Common phase initiation 391
- Communication 24, 25
 - Monitoring 77
- Communication chain 75
- Communication connection 88
- Communication Converter 529
- Communication converter 518, 529
- Communication converters 76
- Communication media 76
- Comparison Schemes
 - Distance Protection 193
 - Earth Fault Protection 246
- Configuration of auto-reclosure 328
- Configuring the functional scope 38
- Connection of the voltages 46
- Control Logic 482
- Control Voltage for Binary Inputs 492
- Controlled zone 156, 169
- Counters and memories 459
- Cross polarisation 162
- CT error characteristic 51
- Cubicle Mounting 512, 624, 625
- Current balance supervision 424
- Current direction 263
- Current flow monitoring 389
- Current Inputs 563
- current pickup
 - voltage and angle-dependent $U/I/\varphi$ 121
 - voltage dependent U/I 118
- Current Symmetry 411
- Current transformer characteristic 50
- Current transformer requirements 563
- Current transformer saturation 63

D

- DCF 77 33
- Dead line check (DLC) 328
- Dead-line closing 344
- Default Display 456
- Definite time high set current stage $3I_{0>>}$ 217
- Definite time overcurrent stage $3I_{0>}$ 217
- Definite time stages 232
- Definite time very high set current stage $3I_{0>>>}$ 216
- Delay times for single-stage/two-stage circuit breaker protection 395
- Dependent zone 148, 166
- Deployment Conditions 574
- Determination of direction 143
 - MHO characteristic 159
 - Negative phase-sequence system 225
 - Series-compensated lines 146, 163
 - Transformer star point current 224
 - Zero sequence power (compensated) 225
 - Zero sequence system 224
 - Zero voltage 224
- Device identification 88
- Dialog Box 525
- Differential current
 - Pickup value 102
- Differential current values 465
- Differential Protection
 - Commissioning Mode 82
 - Log Out Device 78
 - Pickup Values 578
 - Test Mode 80
- Differential protection 27
 - Basic principle with multiple ends 92
 - Basic principle with two ends 92
 - Blocking 100
 - Charging current compensation 95, 105
 - Communication chain 94
 - Current transformer errors 96
 - Delay times 579
 - Delays 104
 - Emergency operation 579
 - Further influences 96
 - High-speed charge comparison 99
 - Inrush restraint 97, 106, 579
 - Interlocking 100
 - Measured quantity evaluation 98
 - Measured value synchronisation 94
 - Pickup 100
 - Pickup values 102, 104, 104
 - Protection data interfaces 576
 - Restraint 95
 - Self-restraint 579
 - Special features 39
 - Tolerances 96
 - Topology 576

- Transmission of measured values 93
- Tripping logic 102
- Zone Z1 129
- Differentialschutz
 - Intertrippings 578
- Direct connection 76
- Direct Underreach Transfer Trip 192
- Direct voltage 564
- Directional Blocking Scheme 252
- Directional blocking scheme 201
- Directional characteristic 145
- Directional Comparison Pickup 246
- Directional comparison pickup 195
- Directional Unblocking Scheme 248
- Directional unblocking scheme 197
- Display Panel 456
- Distance Protection 28, 582
 - Mutual Impedance Ratio 582
- Distance protection
 - Distance measurement 583
 - Earth fault detection 582
 - Earth impedance ratio 49, 582
 - Emergency operation 584
 - Phase preference 582
 - Pickup 117, 582
 - Special features 40
 - Teleprotection schemes 586
 - Times 584
 - Zone Z1 129
- Double earth faults in earthed systems 126
- Double earth faults in effectively earthed systems 132
- Double earth faults in non-earthed systems 126, 132

E

- Earth fault 263
 - CT saturation 266
 - Earth fault 267
 - Restraint 265
 - Sensitivity 265
 - Starpoint current 265
 - Through-fault current 265
 - Tripping Characteristic 267
- Earth fault detection 114, 130
- Earth Fault Protection 587
 - Characteristics 587
 - Inverse Current Stage (ANSI) with IEC Characteristic 588
 - Inverse Current Stage (IEC) with IEC Characteristic 588
 - Inverse Current Stage with Logarithmic Inverse Characteristic 589
 - Teleprotection Schemes 596

- Earth fault protection
 - Determination of direction 590
 - Direction determination 237
 - High set current stage 587
 - Inrush restraint 590
 - Overcurrent stage 588
 - Very high set current stage 587
 - Zero sequence output stage 589
 - Zero sequence power stage 236
 - Zero sequence voltage stage 589
- Earth impedance ratio 59
- Echo Function 209
- Echo function 212
- Echo function (EF) 259
- Electrical Tests 571
- EMC Tests for Immunity (type tests) 571
- EMC Tests for Interference Emission (Type Test) 572
- Emergency operation 24, 292
- EN100-module
 - Interface Selection 452
- End fault protection 402
- Energy Metering 475
- Event buffer 457
- Exchanging Interfaces 492
- External Direct Local Tripping 581

F

- Fast tripping zone (MHO) 166
- Fast tripping zone (polygon) 148
- Fault direction 143
- Fault indications 450
- Fault locating
 - Earth impedance ratio 49
 - Single-ended 379
- Fault Location Options 459
- Fault Locator 611
 - Double-Ended 380
- Fault locator
 - Double earth fault 379
 - Single/double-ended 379
- Fault Logging 622
- Fault loops 143
- Fault Recording 467, 622
- Fault recording 25, 457
- Feedback monitoring 483
- Fibre-optics 76
- Final Preparation of the Device 559
- Forced Three-Pole Trip 328
- Frequency 579
- Frequency Protection 610
 - Operating Ranges 610
 - Pick-up Values 610
 - Times 610

- Tolerances 610
- Frequency protection 373
 - Delay time 376
 - Frequency measurement 373
 - Frequency stages 373
 - Operating ranges 374
 - Overfrequency protection 373
 - Pickup values 376
 - Pickup/tripping 374
 - Power swings 374
 - Underfrequency protection 373
- Function Blocks 617
- Function Control 432
- Functional scope 37
- Fuse Failure Monitor 414, 424

G

- General 37
- General Interrogation 459
- General pickup 171
- GPS 33
- GPS synchronisation 85, 86
- Grading coordination chart 148, 166

H

- High Current Switch-onto-Fault Protection 288, 600
- High-current elements* $I_{ph}>>, 3I_0>>$ 299
- Humidity 574

I

- Impedanzanregung
 - implizit 117
- Independent zones 148
- Indication memory 33
- Indications 458
- Information exchange 88
- Information to a Control Centre 457
- Input/Output Module
 - C-I/O-2 502
- Input/output module
 - C-I/O-1 496
 - C-I/O-10 499, 501
- Inrush restraint 224, 239
- Installation: Panel Surface Mounting 514
- Instantaneous trip
 - $I>>>$ stage 288
 - $I>>>>$ stage 288
- Instantaneous tripping 279
 - before automatic reclosure 297

- Instrument Transformer Connection
 - Checking for More than Two Ends 549
- Instrument transformer connection
 - Differential currents 548
 - Polarity check 540
 - Polarity check voltage input* U_4 541
 - Polarity current input* I_4 544
 - Restraint currents 548
- Insulation Test 571
- Interfaces 88
 - Replacing 507
 - RS232 508
 - RS485 509
 - Termination 510
- Interlocking 479
- Interrupted currents 460
- Intertrip 112, 581
- Inverse Current Stage (Earth Fault Protection)
 - ANSI Characteristic 588
 - IEC Characteristic 588
 - Logarithmic Inverse Characteristic 589
- Inverse Current Stage (Overcurrent Protection)
 - ANSI Characteristic 603
 - IEC Characteristic 602
- Inverse time overcurrent stage 219
- Inverse time overcurrent stage* $3I_{OP}$ 218
- Inverse time stage (earth fault protection)
 - ANSI characteristic 234
 - IEC characteristic 233
 - Logarithmic inverse characteristic 234
- IRIG B 33

K

- k-factor 406

L

- Life contact 491
- Limit value monitoring 474
- Limits for CFC blocks 618
- Limits for user-defined functions 618
- Line energisation recognition 432
- Line Sections 379
- Line sections 381
- Line symmetry (double-ended fault locating) 381
- Load range (only for impedance pickup) 133
- Long-Term Average Values 469

M

Mean values 469
 Measured value correction
 Double-end fed lines 382
 Parallel line 382
 Measured values 292, 615
 Measured values constellation 467
 Measured Voltage Failure 416
 Measured Voltage Failure Monitoring 417
 Measured voltage failure monitoring 424
 Measurement value acquisition
 Currents 410
 Measures for Weak or Zero Infeed 209
 Mechanical Design 575
 Mechanical Tests 573
 Memory Components 409
 MHO characteristic 159
 Pickup 165
 Minimum current 130
 Modem 76
 Monitoring 77
 Monitoring Functions 32, 615
 Monitoring with one binary input 431

N

Nominal currents 492

O

Open Pole Detector 439
 Operating polygon 142
 Operating polygons 142
 Operating Time of the Circuit Breaker 549
 Operational accuracy limit factor 50
 Operational Indications 458
 Operational measured values 461, 621
 Operator Interface 567
 Operator interface
 Check 515
 Optical Fibres 517
 Optical fibres 517
 Ordering Data 628
 Oscillographic Recording for Test 557
 Output Relays 455
 Overcurrent pickup 118
 U/I_{ϕ} pickup 134
 U/I pickup 134
 Overcurrent stage
 $3I_0 >$ (definite-time overcurrent-time protection) 301
 $3I_{0P}$ (inverse-time overcurrent protection with ANSI characteristics) 303

$3I_{0P}$ (inverse-time overcurrent protection with IEC characteristics) 302
 $I >$ (definite time) 294
 I_P (inverse time) 294
 I_P (inverse-time overcurrent protection with ANSI characteristics) 303
 I_P (inverse-time overcurrent protection with IEC characteristics) 302
 $I_{ph} >$ (definite-time overcurrent-time protection) 301
 Overreach schemes
 Distance protection 586
 Earth fault protection 596
 Overtemperature 408
 Overvoltage protection 353
 Compounding 355
 Negative sequence system U_2 356, 365, 607
 Optional single-phase voltage 608
 Phase-earth 364, 607
 Phase-phase 354, 364, 607
 Positive sequence system U_1 364
 Positive sequence system U_1 355, 607
 Zero sequence system 365
 Zero sequence system $3U_0$ 357, 608

P

Panel Flush Mounting 511, 624, 625
 Parallel line measured value correction 128, 131
 Parallel line mutual impedance 62
 Parallel protection functions 38
 Permissive Overreach Transfer Trip (POTT)
 Distance Protection 193
 Permissive Underreach Transfer Trip with Zone Acceleration Z1B (PUTT) 189
 Phase Angle Monitoring 418
 Phase current stabilization 223, 239
 Phase currents 264
 Phase selection 278
 Phase selector 226
 Phase-segregated initiation of the breaker failure protection 393
 Pickup logic 297
 Pickup Logic of the Entire Device 441
 Pickup modes 119
 Pilot Wire Comparison 204
 Polarised MHO characteristic 160
 Polarity
 current transformers 45
 Polarity check 540
 Polarity check for current input I_4 544
 Polarity check for voltage input U_4 541
 Pole discrepancy supervision 398, 402
 Polygonal characteristic 142
 Power supply 564

- Power Swing Detection 585
- Power system data 1 44
- Power System Data 2 55
- Printed circuit boards 493
- Protection Data Communication 576
 - Checking 517
- Protection data communication 77
- Protection data interfaces 22, 74, 84, 85, 88, 285, 567
- Protection Data Topology 74
 - Checking 527
- Protection data topology 88
 - Availability protection data interfaces 531
 - Checking further links 532
 - Checking: Communication converter 529
 - Checking: Direct link (topology) 528
 - Consistency 530
 - Parameterisation 530
- Protection function mode 38
- Protective functions 24
- PUTT (Pickup) 188

R

- Rack Mounting 512
- Rated accuracy limit factor 51
- Rated frequency 49
- Real Time Clock and Buffer Battery 623
- Reclosure
 - Blocking 312
- Reclosure cycle 330, 331, 332
- Reference Voltages 409
- Remote Commands 599
- Remote commands 285
- Remote Indications 599
- Remote indications 285
- Remote Measured Values 466
- Remote transmission 30
- Remote trip 283
- Remote Tripping 581
- Remote tripping 112
- Remote-CLOSE 319
- Reset 471
- Resistance tolerance
 - Arc resistance 150
- Restraint current values 465
- Restricted Earth Fault Protection 29
 - Fault current sensitivity 269
 - Measuring principle 263
 - Operating Time 580
 - Pick-up Threshold 269
 - Setting ranges 580
 - Time Delays 269
- Retrievable Indications 459
- Retrieving parameters 476

- Reverse Interlocking 206
- Ring topology 75, 88

S

- Series-compensated lines 131
- Service interface
 - Check 515
- Service/modem interface 567
- Set Points 474
- Setting Groups 54
 - Changeover 487
- Settings Group Change Option 54
- Single-pole dead time 441
- Single-stage breaker failure protection 401
- Specifications 571
- Spontaneous Indications 458, 459
- Spontaneous Indications on the Display 449
- Standard Interlocking 480
- Starpoint CT 265
- Starpoint current 263
- Start Test Measurement Recording 557
- Statistics 33, 622
- Summated current supervision 424
- Support 33
- Switch-on
 - Pickup value 104
- Switching
 - Onto a fault 129
 - onto a fault 132, 297
 - Onto an earth fault 230
- Switching (interlocked/non-interlocked) 479
- Switching onto an earth fault 239
- Switching statistics 622
- Switching Test of the Configured Operating Equipment 556
- Synchronisation 28
- Synchronism Check 605
 - ΔU Measurement 605
- Synchronism check 339
 - Asynchronous power conditions 605
 - Operating modes 605
 - Synchronous power conditions 605
 - Voltages 605
- Synchronism conditions for automatic reclosure 347
- Synchronism conditions for manual closure and control command 348
- Synchronization 33
- System Connections
 - Checking 518
- System interface 568
- System Power Swing 585
- System starpoint 49

T

Telegram 622
 Teleprotection 186
 with earth fault protection 238
 Temperatures 574
 Terminating interfaces with bus capability 492
 Termination 510, 516
 Test in Command Direction 524
 Test Mode 522
 Test:
 Binary Inputs 526
 Check:Blocking Scheme (Earth-fault Protection) 554
 Circuit Breaker Failure Protection 535
 Directional Blocking Scheme 552
 Indication Direction 524
 LEDs 527
 Output Relays 526
 Permissive Schemes (Earth-fault Protection) 554
 Pilot Wire Comparison 551
 Reverse Interlocking 551
 Signal Transmission (Breaker-failure Protection/Stub-fault protection) 555
 Signal Transmission (Earth Fault Protection) 553
 Signal Transmission (int., ext. Remote Tripping) 555
 Switching States of the Binary Inputs/Outputs 525
 Switching the Configured Resources 556
 System Interface 523
 Tripping and Closing with the Circuit Breaker 556
 Testing:
 User-defined Functions 556
 Thermal Overload Protection 613
 Tripping Characteristic 613
 Three-phase measuring voltage failure 424
 Three-pole coupling 66
 Time constant τ 407
 Time Overcurrent Protection 30, 601
 Time overcurrent protection 24
 Characteristics 601
 High set current stages 601
 Overcurrent stages 602
 Time synchronisation 88
 Time Synchronisation Interface 522
 Time synchronisation interface 516, 570
 Topology exploration 285
 Transformer
 Saturation 263
 Transformer data 45
 Transformers
 Conditioning 579

Transient Blocking 208, 255
 Transient blocking 212
 Transient blocking (EF) 259
 Transmission Block 522
 Transmission channels 186
 Transmission modes 186
 Transmission statistics 460
 Trip Circuit Monitoring 488
 Trip circuit monitoring 616
 Trip command duration 49
 Trip with delay 280
 Trip-Dependent Indications 449
 Tripping characteristic 159
 Tripping logic 176, 297
 Tripping Logic of the Entire Device 442
 Tripping zones 164
 Trips 459
 Two-stage breaker failure protection 400
 Type of Commands 477
 Type of Contact for Output Relays 492

U

Underreach schemes
 Distance protection 586
 Undervoltage Protection
 Positive Sequence System U_1 609
 Undervoltage protection
 Phase-earth 359, 366, 608
 Phase-phase 361, 367, 608
 Positive sequence system U_1 367
 Positive sequence system U_1 362
 User-defined Functions 617

V

Vibration and Shock Resistance during Stationary Operation 573
 Vibration and Shock Resistance during Transport 573
 Voltage Check 605
 Voltage inputs 563
 Voltage Jump 276
 Voltage Phase Sequence 414
 Voltage protection 353
 Voltage Symmetry 412

W

Watchdog 411
 Weak Infeed 256
 Weak Infeed Tripping

- classical 597
- French Specification 598
- Weak-infeed Tripping
 - Operating Mode 597
 - Times 597
 - Undervoltage 597
- WEB-Monitor 22, 33, 453, 532, 539, 548
- WI transmission modes 272
- WI undervoltage 273
- Work on plug connectors 494

Z

- Zero Infeed 256
- Zero sequence current 264
- Zero sequence power protection 222
- Zero sequence voltage stage with inverse characteristic 235
- Zero sequence voltage stages for single-phase voltage 359
- Zero sequence voltage time protection 220
- Zone logic 172, 174
- Zone pickup 164