


# MODEL 85A

FAN CONTROL SYSTEM

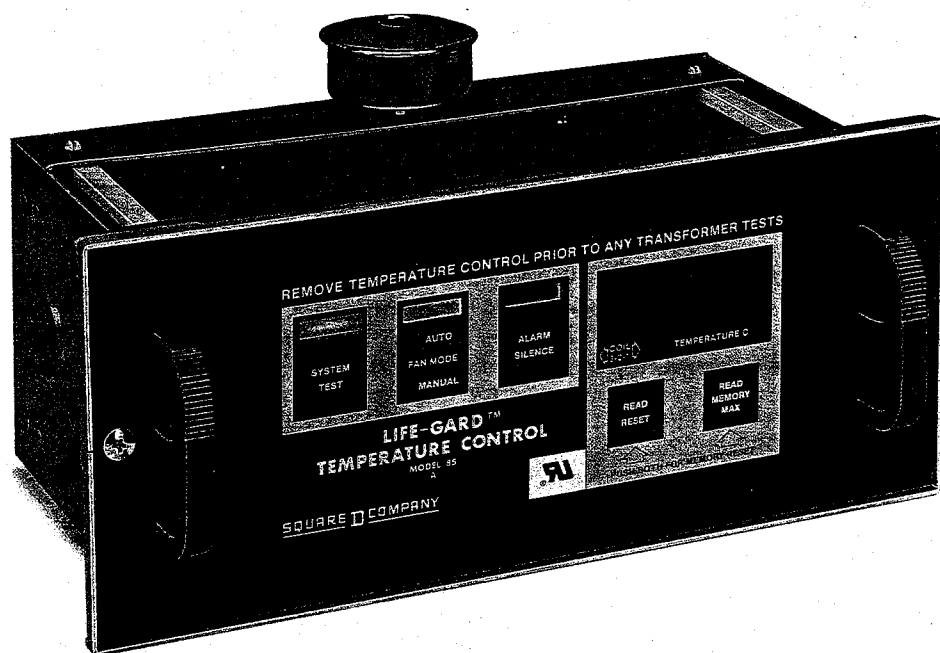


*Keeps Transformers  
Running Cooler.  
Adds 33⅓%  
Reserve Capacity.*




**SQUARE D COMPANY**  
*Dedicated to Growth • Committed to Quality*

# MODEL 85A

## Fan Control System

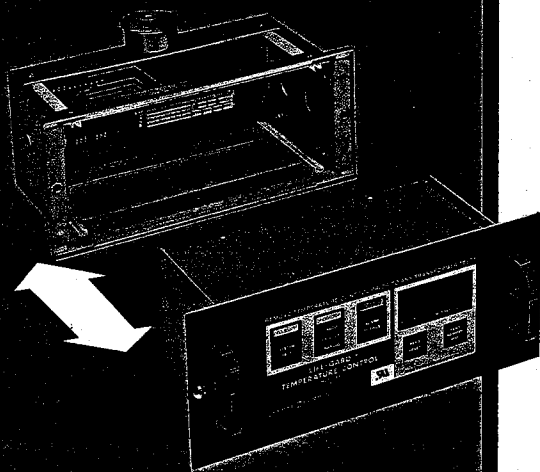

Drawout design permits inspection of control unit without exposure to high voltages.

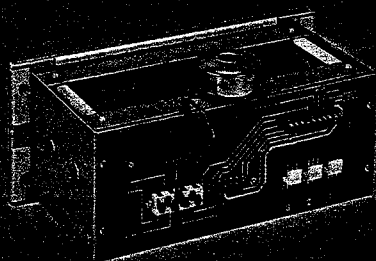

Easily discernible circuit board connection on rear of control housing.

The Square D Model 85A "LIFE-GARD®" Fan Control System is state-of-the-art instrumentation that protects the transformer and adds up to 33-1/3% reserve capacity.

This system provides precision control through the use of three high accuracy thermistor type temperature sensors, one installed in an air duct of each phase coil of a transformer.

Internal coil temperatures are transmitted by these sensors to a microprocessor which is programmed to provide a digital display of temperature in degrees Celsius and the corresponding coil number.

### Digital Display

The digital LED display range is from 24°C to 255°C in 1°C increments. Characters are 0.56" high and clearly legible under all lighting conditions.

The Model 85A provides a choice of either:

- Continuous scanning of the three sensors with a three second display period for each coil temperature and corresponding coil number.
- Digital display of the temperature and number of the hottest coil only.

For each display mode, two additional options are available:

- Continuous temperature display.
- Display only when the "Read/Reset" or the "Read Memory Max" switch panels are pressed.

For all display modes, the highest temperature reached by any coil in any previous interval will be displayed for three seconds when the "Read Memory Max" switch panel is pressed. This temperature will be cancelled and replaced by the immediate maximum temperature when both "Read/Reset" and "Read Memory Max" switch panels are pressed simultaneously. Thereafter, any succeeding higher temperature will be retained in memory for later recall.

### Control Mode Light Panels

Three LED panels are provided to indicate control mode conditions. When the green panel is lighted, it indicates that the control module is energized. Similarly, the lighted yellow panel indicates that the fan circuit is energized. A lighted red panel indicates that one or more coils are above normal temperature and the alarm horn will sound.

If a temperature of 220°C\*\* is detected by one of the sensors, the control will initiate the emergency shutdown mode. Permanent insulation damage will occur above this maximum insulation system temperature. At this

point, the Red LED panel flashes and three dashes replace the temperature numbers.

Actual shutdown or other function can be accomplished by means of an optional, accessory relay.

### Fan Mode Control and Indicators

Selection of two modes of fan operation is provided by the "Fan Mode" switch panel. When this switch panel is depressed, the fan mode may be changed from manual to auto or vice versa. In the auto mode, the fans are turned on and off automatically at specified programmed temperature set points. In the manual mode, the fans operate continuously, totally independent of all temperature set points. The selected fan mode is indicated by one of the LEDs in the "Fan Mode" switch panel.

### High Temperature Alarm

If the operating temperature of the transformer coils increases to the programmed "alarm" set point, the red LED indicator and the alarm horn are activated, thus warning that the maximum designed temperature rise


### Reference: ANSI Standard C57.12.51

Rated Average Transformer Temperature Rise*	Switch Set Points					Emergency Shutdown Cast Resin Transformers
	Fans On	Fans Off	Alarm On	Alarm Off	Emergency Shutdown	
80°C	110°C	100°C	125°C	123°C	220°C	185°C
115°C	145°C	135°C	160°C	158°C	220°C	185°C
150°C	180°C	170°C	195°C	193°C	220°C	—


\*Based on NEMA and ANSI Standards of 30°C average and 40°C maximum ambient for any 24 hour period below 3300 ft. altitude.

NOTE: The digital temperature displayed is always the TOTAL temperature of AMBIENT + HOT SPOT temperatures, not the AVERAGE temperature rise. (Example: A transformer is rated 150°C average temperature rise when carrying rated full load in a 20°C ambient temperature. The thermistor sensors are installed near the theoretical hot spot of the coils. NEMA and ANSI standards permit a 30°C maximum differential between average and hot spot temperatures. Therefore the digital display would indicate approximately 20°C + 30°C + 150°C = 200°C total. Note that the alarm would operate at this point providing ample warning that the transformer is approaching the maximum temperature limit of the insulation system.)

## TYPICAL INSTALLATIONS

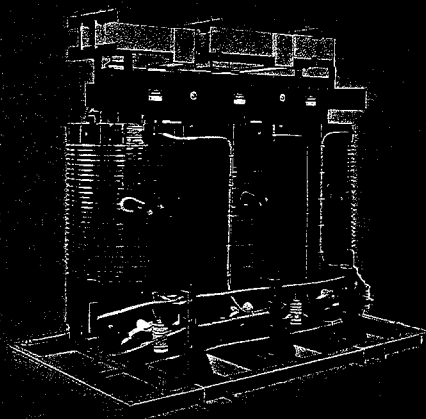

VPI  
Resin Encapsulated  
Transformers

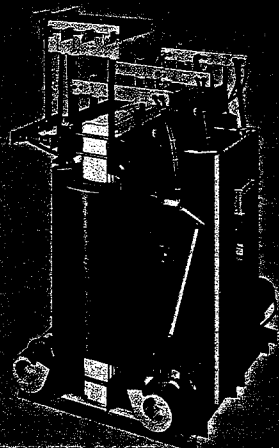

POWER-CAST  
Solid Cast  
Transformers

has occurred (80°C, 115°C or 150°C). This temperature is within the maximum temperature rating of the insulation system, and the transformer may continue to operate. The alarm horn may be silenced by briefly depressing the "Alarm Silence" switch panel. The red LED panel, however, will remain lighted until the transformer temperature decreases to the programmed "Alarm Off" set point. The LED panel is then de-energized and the silencer relay is automatically reset.

### Control Sequence

The Model 85A Fan Control System provides switching at three levels of transformer temperature. This switching is pre-set prior to shipment based on the maximum rating of the insulation system and the designed temperature rise of the transformer 150°C, 115°C or 80°C rise.

At the first switching level, cooling fans are automatically switched on and off at the temperature set points to maintain the winding temperature well within the design limits.

At the second level, the alarm set point temperature is reached and the alarm circuit is energized, operating a visual and audible alarm. This indicates that the transformer has reached a temperature that is not more than 5°C higher than the designed *average* winding temperature rise based on a 40°C maximum ambient.

If kept within the maximum temperature rating of the insulation system (220°C\*\*), the transformer may continue to operate.

A third level operates when the maximum temperature rating (220°C\*\*) of the insulation system is reached. This energizes the Emergency Shutdown (E.S.) circuit. This circuit can be used for a remote alarm or to automatically drop transformer load and prevent damage to the transformer insulation.

The Model 85A Fan Control System provides two sets of auxiliary Form "C" relay contacts; one set switched by the fan control circuit and one switched by the alarm control circuit. Terminals for these contacts are located on the rear panel of the control.

The output for the emergency shutdown function is 6V D.C. at 300 MA maximum to power an optional external relay. Terminals for this output are also located on the rear panel of the control.

### System Test

The Model 85A Fan Control System also incorporates a programmed system test function which is initiated when the "System Test" switch panel is depressed. Each of the various indicators and each segment of the numerical displays are tested in sequence. The upper left segments of the coil and temperature displays are not active and are not lighted during the test sequence.

During the test sequence, the fans operate briefly. The alarm horn is also tested at the end of the sequence and the Emergency Shutdown is not activated.

### Remote Indication and Control

In addition to providing control and readout functions when installed in a transformer, the Model 85A Fan Control System has the capability of providing complete readout and control at a remote location. One control module with temperature sensors is mounted in the transformer enclosure and is designated as the "Master". A second identical control without temperature probes is designated as the "Slave" for installation remote from the transformer. By means of an IEEE RS-422 two-wire communication link, the temperature may be monitored and all functions controlled at a remote location.

Similarly, an installation with multiple transformers may be monitored and controlled from a single supervisory station or by a computer.

\*\*185°C for Cast Resin Transformers  
Power-Cast® is a Registered Trademark of Square D Company

**MODEL 85A**  
Fan Control System

## Fail-Safe Features

The Model 85A Fan Control System is capable of determining a shorted sensor condition. It will also detect a possible open sensor. When two probes read a temperature above 25°C and one reads a temperature of 25°C or less, the latter will be determined open. When either a shorted or open sensor is identified, the temperature display will indicate three dashes (instead of numerals) with the corresponding coil number.

For systems having a Slave Model 85A Fan Control System for remote control and monitoring, failure of the Master control at the transformer will cause all coil and temperature readouts of the remote control to be dashes and the alarm LED panel will flash every 20 seconds as the remote control attempts to reset to normal communication with the Master control.

## Typical Specifications

Provide a Square D LIFE-GARD® Model 85A, solid state, Fan Control System with factory pre-set, three level switching to maintain the winding temperature within the design limits during fan-cooled operation. For three phase transformers, the system shall consist of three high-accuracy thermistor sensors installed directly in the low voltage air ducts of each transformer coil to continuously monitor the internal coil temperature. The sequence of operations shall be as follows: If the temperature rises to the normal, self-cooled (AA) rating, a relay is activated to start the fans. Should the temperature continue to rise to the next pre-set point, a second relay operates to close the circuit for an audible alarm and a red warning light. If the temperature rises to the maximum rated temperature of the insulation system, a third circuit is activated. It may be used for an emergency shutdown, or remote trouble indication.

The control module shall be a "draw-out" design permitting inspection of the control unit without exposure to high voltages.

The system control module shall have a membrane front panel with switches to provide system tests, fan mode selection and alarm silencing. Function indicators shall be LED bars; Green for "Power On", Amber for "Fans On" and Red for "High Temperature".

The "System Test" switch shall initiate a test sequence which will allow verification that all control functions and numeric read-out segments are operational.

The "Fan Mode" switch, with built-in LED mode indicators, shall provide selection of manual or automatic fan control modes.

The "Alarm Silence" switch shall silence the sonic alarm, but allow the Red LED bar to remain "On" until the temperature decreases to normal.

The system control module shall provide a digital read-out of transformer coil temperature and numeric coil identification.

The system control module shall have a memory mode for retention of the maximum attained temperature during any prior interval with recall to occur when the "Read Memory Max" switch is pressed.

Minimum numeral height shall be 0.5 inch.

The system control module shall be capable of functioning at the transformer (Master Control) or at a remote location (Slave Control), using an RS-422 communication link to provide full control and read-out at both locations.

The system control module shall provide Fail-Safe indication of both shorted and open sensors.

Multiple cooling fans are to be installed at the bottom of each coil, front and rear, with a minimum of six for three phase and four for single phase transformers.


*NOTE: For voltages over 600 volts, a separate 120 volt AC source may be utilized. If none is available, a fused, high voltage transformer may be specified but this would require an additional compartment.*

LIFE-GARD® is a Registered Trademark of Square D Company


# Wiring diagrams

## Model 85A Fan Control System


### Model 85A Master Control

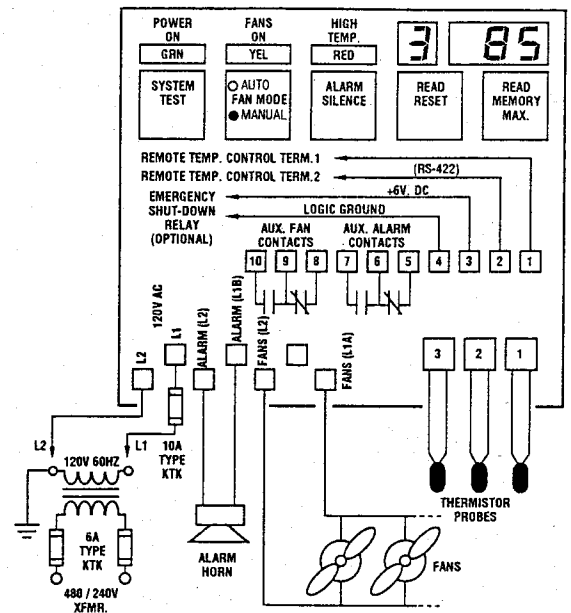

### Master Control at Transformer

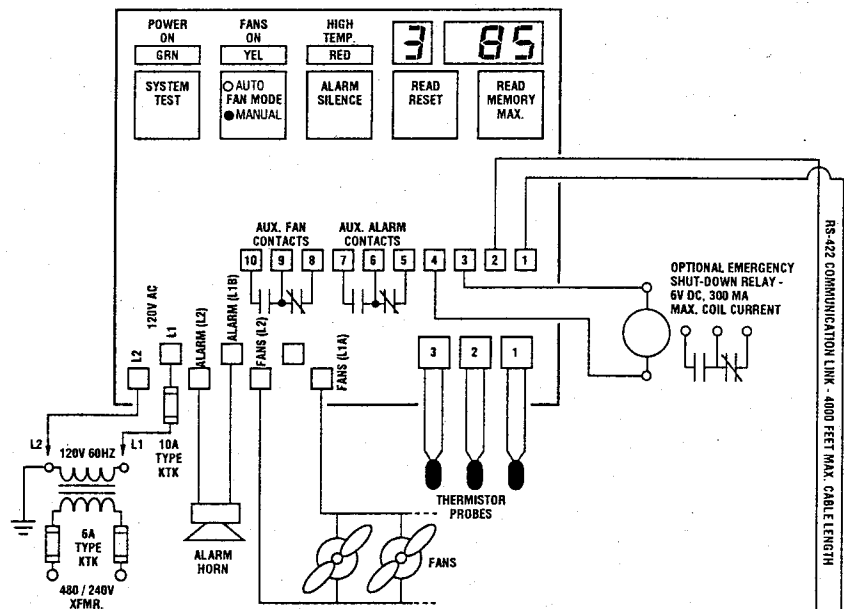

### Remote Control

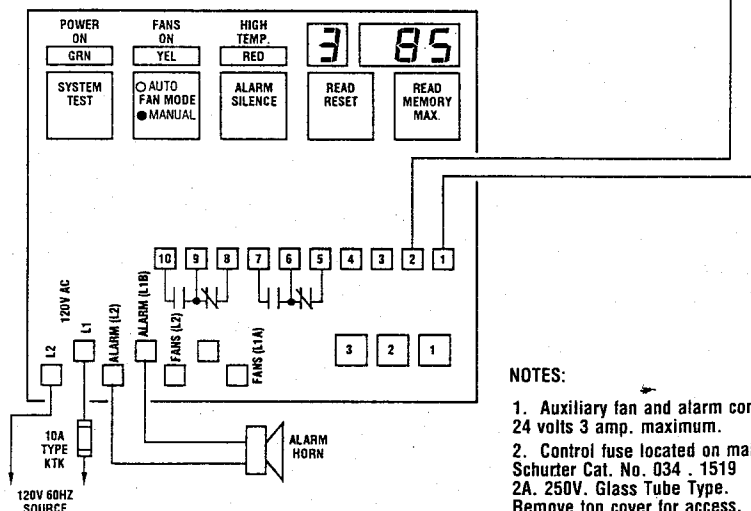

#### NOTES:

1. Auxiliary fan and alarm contacts are rated 24 volts 3 amp. maximum.
2. Control fuse located on main circuit board. Schurter Cat. No. 034 . 1519 2A. 250V. Glass Tube Type. Remove top cover for access.

# For more information, contact your local Square D Sales Office.

## SALES OFFICES IN THE UNITED STATES

**ALABAMA**  
Birmingham ..... (205) 870-5591  
Dothan ..... (205) 793-2177  
Huntsville ..... (205) 539-2465  
Mobile ..... (205) 342-7747  
Montgomery ..... (205) 271-0230

**ALASKA**  
Anchorage ..... (907) 278-6048

**ARIZONA**  
Phoenix ..... (602) 231-8694  
Tucson ..... (602) 795-3600

**ARKANSAS**  
Ft. Smith ..... (501) 452-7312  
Little Rock ..... (501) 225-3648

**CALIFORNIA**  
Bakersfield ..... (805) 833-1985  
Fresno ..... (209) 268-6268  
Hayward (San Francisco) ..... (415) 887-1181  
Long Beach ..... (213) 428-7553  
North Hollywood  
(Los Angeles) ..... (818) 508-0592  
Orange ..... (714) 532-4861  
Riverside ..... (714) 687-1262  
Sacramento ..... (916) 381-5056  
San Diego ..... (619) 569-8953  
Stockton ..... (209) 944-5633  
Ventura ..... (805) 658-2566

**COLORADO**  
Colorado Springs ..... (719) 531-5274  
Englewood (Denver) ..... (303) 799-9003

**CONNECTICUT**  
Wethersfield (Hartford) ..... (203) 529-7472

**DISTRICT OF COLUMBIA**  
Rockville (Wash. D.C.) ..... (301) 424-9510  
..... (301) 424-1442

**FLORIDA**  
Altamonte Springs (Orlando) ..... (407) 774-5151  
Ft. Myers ..... (813) 936-5573  
Jacksonville ..... (904) 744-7881  
Palm Beach Gardens  
(West Palm Beach) ..... (407) 626-8788  
Pembroke Pines (Miami) ..... (305) 435-4400  
Sarasota ..... (813) 957-0950  
Tallahassee ..... (904) 878-7895  
Tampa ..... (813) 289-0227

**GEORGIA**  
Columbus (Muscogee) ..... (404) 561-7825  
Macon ..... (912) 745-2382  
Savannah ..... (912) 356-9546  
Smyrna (Atlanta) ..... (404) 333-3660

**HAWAII**  
Honolulu ..... (808) 422-0567

**IDAHO**  
Boise ..... (208) 376-0552

**ILLINOIS**  
Champaign ..... (217) 356-0211  
Lombard (Chicago) ..... (312) 916-9550  
Peoria ..... (309) 673-0508  
Rockford ..... (815) 965-2060  
Springfield (Sangamon) ..... (217) 546-1477

**INDIANA**  
Evansville ..... (812) 424-9999  
Fort Wayne ..... (219) 483-3194  
Highland (Hammond) ..... (219) 972-9600  
..... (312) 721-6031  
Indianapolis ..... (317) 255-0664  
Mishawaka (So. Bend) ..... (219) 259-8521

**IOWA**  
Cedar Rapids ..... (319) 366-0736  
Davenport ..... (319) 324-0876  
Des Moines ..... (515) 224-9918

**KANSAS**  
Shawnee (Kansas City) ..... (913) 631-1000  
Wichita ..... (316) 264-9338

**KENTUCKY**  
Lexington ..... (606) 278-0308  
Louisville ..... (502) 425-8363  
Paducah ..... (502) 554-5515

**LOUISIANA**  
Baton Rouge ..... (504) 926-7279  
Harahan (New Orleans) ..... (504) 733-0964  
Lafayette ..... (318) 988-1560  
Shreveport ..... (318) 865-4267

**MAINE**  
Portland ..... (207) 774-1409

**MARYLAND**  
Hagerstown ..... (301) 739-5760  
Salisbury ..... (301) 749-2544  
Towson (Baltimore) ..... (301) 337-8448

**MASSACHUSETTS**  
Braintree (Boston) ..... (617) 848-1110

**MICHIGAN**  
Grand Blanc (Flint) ..... (313) 694-5101  
Grand Rapids ..... (616) 459-3529  
Kalamazoo ..... (616) 342-2117  
Lansing ..... (517) 337-2835  
Saginaw ..... (517) 792-1553  
Traverse City ..... (616) 946-3773  
Troy (Detroit) ..... (313) 680-4444

**MINNESOTA**  
Duluth ..... (218) 723-1010  
Plymouth (Minneapolis) ..... (612) 476-6909  
Rochester ..... (507) 285-1700

**MISSISSIPPI**  
Jackson ..... (601) 982-1031  
Tupelo ..... (601) 842-3398

**MISSOURI**  
Jefferson City ..... (314) 893-4426  
Springfield ..... (417) 887-2307  
St. Louis ..... (314) 849-6330

**MONTANA**  
Billings ..... (406) 248-1203

**NEBRASKA**  
Omaha ..... (402) 330-3753

**NEVADA**  
Las Vegas ..... (702) 878-3370

**NEW HAMPSHIRE**  
Manchester ..... (603) 668-1204

**NEW JERSEY**  
Bellmawr (So. Jersey) ..... (609) 933-1800  
Pine Brook (No. Jersey) ..... (201) 575-7000

**NEW MEXICO**  
Albuquerque ..... (505) 828-1018

**NEW YORK**  
Binghamton ..... (607) 723-7337  
Buffalo ..... (716) 836-5800  
Mineola (New York City) ..... (718) 895-3150  
Rensselaer (Albany) ..... (518) 449-1322  
Rochester ..... (716) 424-4171  
Syracuse ..... (315) 455-5324  
White Plains ..... (914) 428-7790

**NORTH CAROLINA**  
Asheville ..... (704) 255-1325  
Charlotte ..... (704) 376-1387  
Greensboro ..... (919) 292-8995  
Greenville ..... (919) 756-2117  
Raleigh ..... (919) 782-1338  
Wrightsville Beach  
(Wilmington) ..... (919) 256-9956

**NORTH DAKOTA**  
Fargo ..... (701) 235-7223

**OHIO**  
Akron ..... (216) 836-5593  
Cincinnati ..... (513) 793-6811  
Columbus ..... (614) 486-4329  
Dayton ..... (513) 433-7771  
Maple Hts. (Cleveland) ..... (216) 581-3400  
Toledo ..... (419) 535-1293  
Youngstown ..... (216) 782-2295

**OKLAHOMA**  
Oklahoma City ..... (405) 942-7334  
Tulsa ..... (918) 622-2800

**OREGON**  
Eugene ..... (503) 343-2591  
Portland ..... (503) 684-1090

**PENNSYLVANIA**  
Allentown ..... (610) 942-1966  
Bethlehem (Allentown) ..... (215) 694-9600  
Camp Hill (Harrisburg) ..... (717) 761-4650  
Erie ..... (814) 833-8424  
Kingston (Wilkes-Barre) ..... (717) 825-4569  
Media (Philadelphia) ..... (215) 565-8750  
Pittsburgh ..... (412) 343-7500  
York ..... (717) 757-9421

**RHODE ISLAND**  
Cranston (Providence) ..... (401) 943-3380

**SOUTH CAROLINA**  
Charleston ..... (803) 556-0773  
Columbia ..... (803) 772-3553  
Greenville ..... (803) 288-6384

**SOUTH DAKOTA**  
Sioux Falls ..... (605) 334-2151

**TENNESSEE**  
Brentwood (Nashville) ..... (615) 371-8069  
Chattanooga ..... (615) 877-1381  
Kingsport ..... (615) 239-7948  
Knoxville ..... (615) 524-7477  
Memphis ..... (901) 682-8866

**TEXAS**  
Abilene ..... (915) 672-5022  
Amarillo ..... (806) 372-1938  
Austin ..... (512) 346-7120  
Beaumont ..... (409) 866-7726  
Corpus Christi ..... (512) 883-5566  
Dallas ..... (214) 637-1491  
El Paso ..... (915) 592-8813  
Fort Worth ..... (817) 831-4579  
Harlingen ..... (512) 423-1694  
Houston ..... (713) 493-1300  
(Northeast Houston) ..... (409) 265-3733  
(Southeast Houston) ..... (713) 480-1039  
Longview ..... (214) 753-5775  
Lubbock ..... (806) 762-5736  
Midland ..... (915) 694-8430  
San Antonio ..... (512) 349-0197  
Sherman ..... (214) 868-2720  
Waco ..... (817) 776-3432  
Wichita Falls ..... (817) 322-5589

**UTAH**  
Salt Lake City ..... (801) 486-8447

**VIRGINIA**  
Charlottesville ..... (804) 973-7069  
Norfolk ..... (804) 461-1290  
Richmond ..... (804) 285-7508  
Roanoke ..... (703) 344-7707

**WASHINGTON**  
Mercer Island (Seattle) ..... (206) 232-9702  
Spokane ..... (509) 535-3685  
Tacoma ..... (206) 565-7730

**WEST VIRGINIA**  
Barboursville (Huntington) ..... (304) 736-8944

**WISCONSIN**  
Green Bay ..... (414) 494-3313  
Madison ..... (608) 231-2244  
Milwaukee ..... (414) 359-0959  
Racine ..... (414) 554-9121

**WYOMING**  
Casper ..... (307) 234-1017

For start-up and testing, engineering and training services, maintenance agreements or time and material repair, contact:  
**TECHNICAL SERVICES DIVISION 1-800-634-2003.**

Distributed By:



Transformer Division  
P.O. Box 5102  
Monroe, NC 28110-9954  
(704) 283-7411  
FAX: (704) 283-2807