

VAMP

Feeder/Motor Manager

Series VAMP 230

VAMP 245

VAMP 255

VAMP 257





Main Characteristics

- **Complete Protection**

Comprehensive selection of protection functions for distribution network overhead line feeders, cable feeders, motor feeders including large motors, capacitor banks and reactors.

- **Total Control**

Extensive bay control functionality including local and remote control of six objects and status supervision of another two objects.

- **Comprehensive Measurements**

Wide range of measurement functions including phase-to-earth, phase-to-phase voltages, currents, frequency, active, reactive and apparent power, active and reactive energy imported and exported, power factor, negative phase sequence current, etc.

- **Power Quality Assessment**

Power quality assessment and analysis including supervision of harmonics up to the 15th order, THD as well as voltage swells and sags.

- **Fault Location**

Integrated fault location with distance indication for short circuits in distribution networks irrespective of power network earthing system and earth-faults in compensated networks.

- **Ultra-fast Arc Protection**

Unique integrated arc fault protection functionality for enhanced safety of switchgear and substations to people and property.

- **Extensive Communication**

Large number of supported communication protocols including IEC 60870-5-103, Modbus TCP, Modbus RTU, Profibus DP, TCP/IP, SPA-bus slave, DNP 3.0 and IEC 61850.

- **Easy Handling and Management**

Easy commissioning, configuration and operation of the relays supported by the straight-forward VAMPSET relay management software.

Application

The protection relays of the VAMP Series are used for the selective protection of overhead line feeders, cable feeders, motor feeders, capacitor banks, reactors and busbars in power system distribution substations, power plants, industrial power systems, marine and offshore installations. Besides a comprehensive range of standard protection functions the VAMP series also offers bay control, measurement, primary circuit monitoring and communication functionality.

A unique feature of the VAMP relays is the arc fault protection system integratable into the relays. The extremely fast arc fault protection option adds a new dimension to the total safety of the installation and the reliability of the protection system.

Further, the VAMP relays incorporate power quality assessment based on fast Fourier transform and fault spot location based on fault reactance calculation.

Customer specific configuration is obtained by freely configurable mimic display and logic programming by means of the easy-to-use VAMPSET software.

After a network fault the relays support a subsequent fault analysis by providing event sequence recordings, fault value registration and disturbance recorder capability.

All this functionality and a comprehensive set of supported communication protocols make the VAMP Series an outstanding product portfolio on the world market of power system protection and control equipment.



Quick selection table of VAMP feeder/motor managers

VAMP 230, 245, 255 and 257 are all suitable for applications where reliable control and protection is needed. The features of the products vary in the number of digital inputs and outputs and in the number of analog measuring channels.

	VAMP 257			VAMP 255	VAMP 245	VAMP 230
Analog measurement	5xI 3xU			5xI 3xU	5xI 1xU	5xI 3xU
Digital inputs	18 (+2)	18 (+2)	26 (+2)	18 (+2)	6+(2)	6 (+2)
Output relays	9	19	13	9	7	7
Self-supervision contacts	1			1	1	1
Memory	Non-volatile			RAM	RAM	RAM
Number of events	200			50	50	50



Power Quality Assessment


The power quality of electrical networks has become increasingly important in modern society. Sophisticated loads, such as computers and automation systems, require an uninterrupted supply of “clean” electricity.

The VAMP feeder managers are provided with integrated power quality measuring and analyzing functions, which help catching possible variations in the quality of the distributed power. The terminal supervises the harmonics of phase currents and voltages from the 2nd to the 15th order and the THD (Total Harmonic Distortion).


One of the most important power quality functions is the monitoring of voltage sags and swells. The VAMP feeder terminal provide separate **monitoring logs for sags and swells**. The fault log comprises four registers for voltage sags and another four for voltage swells.

The disturbance recorder functionality can be used for recording measured currents, voltages and for recording status information of digital inputs and outputs, also including the signals of the arc protection system. The time stamped recordings provide indispensable information for the subsequent analysis of a fault situation.


Many functions in modern society rely heavily on electric energy and therefore the quality of the energy supply is gaining increased importance

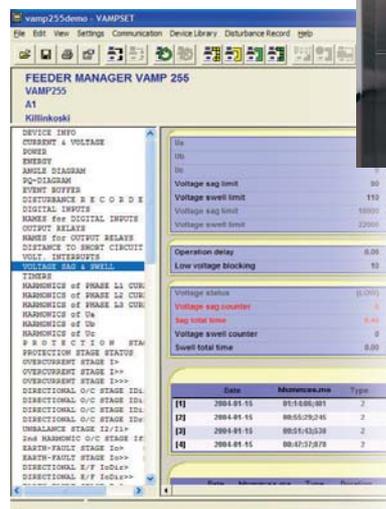


Example of harmonics content and voltage sag/swell registration obtained from a VAMP feeder manager.

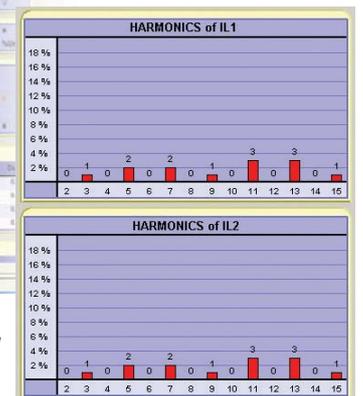

Fault Location

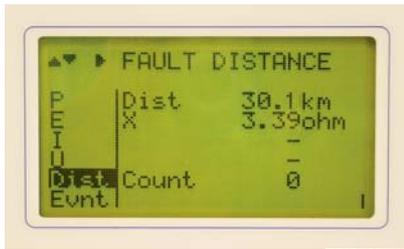


VAMP feeder managers provide accurate short-circuit fault location regardless of the MV network earthing method and earth-fault location in compensated networks.

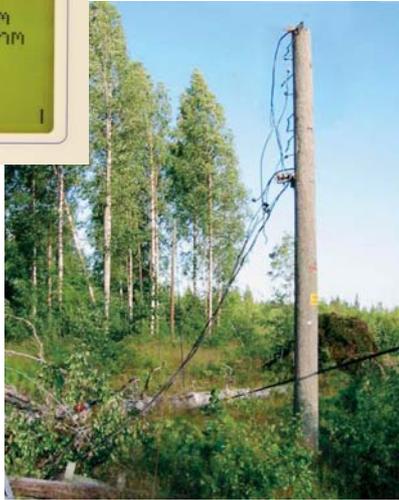


The feeder manager includes a sophisticated stand-alone fault location function. The algorithm used can accurately locate **short-circuits** in any type of distribution networks and **earth-faults** in compensated distribution networks. The fault location is given as a reactance value, and the distance to the fault is also displayed on the local HMI, optionally as a mA signal and as a message over the communication system. The distance value can be exported, for example, as an event to a DMS (Distribution Management System). The system can then locate the fault. If a DMS is not available, the distance to the fault is displayed in kilometres, as well as a reactance value. The calculation of the distance is based on reactance measurement and homogenous lines with a known line reactance. This feature of the VAMP relay is a very cost-effective upgrade of an existing system.

Measurement and Monitoring Functions

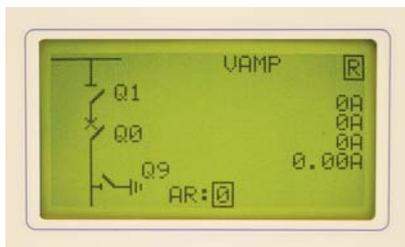

The VAMP feeder managers offer a complete set of measurement functions to replace the conventional metering functions of traditional switchgear and control gear installations. The measurement functions cover voltages, currents, frequency, power, energy, harmonics, voltage sags and swells, etc. The measured information can be read via the communication bus, via the configurable analogue outputs and energy measurements can be transferred via binary pulse outputs. The inaccuracy of the current and voltage measurements is +/- 0,3% whereas it is +/- 0.5% for active and reactive power.

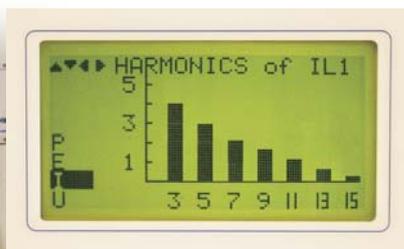

Besides the measurement functions the feeder manager also encompasses a set of system supervision functions. All current and voltage transformer circuits are continuously supervised, as are the trip circuits from the feeder manager to the circuit breaker trip coils. The wear and tear of the circuit breaker is also continuously monitored providing an alarm when the circuit breaker needs maintenance.



The critical data like latest events, voltage sag/swell logs, energy counters are stored in the **non-volatile memory** to guarantee preservation of the information in case the relay auxiliary power is lost.

The easy-to-use VAMP feeder managers are characterized by clear text parameters and multi-lingual support to facilitate normal relay management functions.




Communication

VAMP Ltd. is a communication expert with a wide experience in interfacing with different system integrators' and SCADA suppliers' RTU's, PLC's, gateways etc. using different protocols. Flexible adaptation of the communication protocols together with powerful and easy to use software tools are the key of successful integration. VAMP protection relays and the VAMPSET tool provide access to practically any power system information you may need.

The VAMP feeder manager series feature three serial communication ports, two on the rear plate

for connection to the plant control system and maintenance terminal and one RS 232 port on the front panel for connection of a laptop computer.

The VAMP relays communicate using the most common industrial and utility standard open communication protocols. Both the communication protocol and physical media to be used can be freely selected after acquisition of the protection devices. Therefore VAMP relays are a perfect choice also when the communication capability of the relays is to be utilized sometimes later. You may select the protocol and media according to the system you will apply.

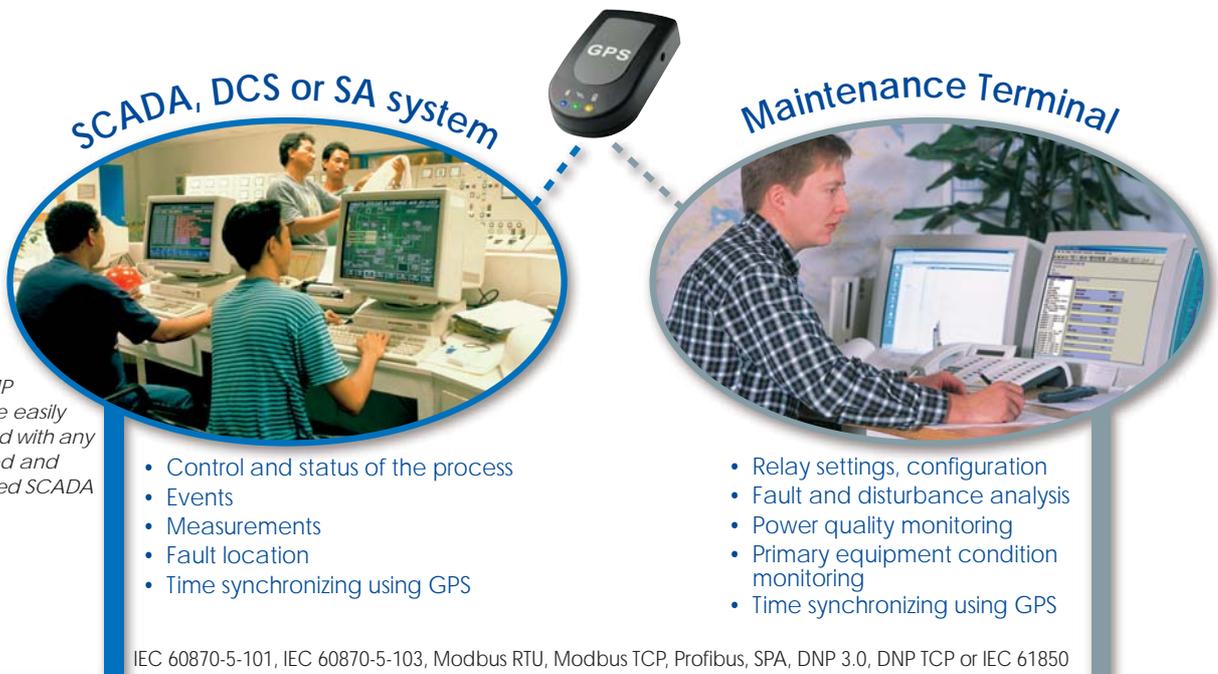

Physical Media:

- RS 485
- RS 232
- Fibre optic
- Ethernet



TCP / IP, RS 485 or fibre



Functionality


	IEEE no	IEC symbol	Function name	IEC, IEEE programmable curves	VAMP 230	VAMP 245	VAMP 255	VAMP 257
Protection functions	50/51	3I>, 3I>>, 3I>>>	Overcurrent		■	■	■	■
	50N/51N	I ₀ >, I ₀ >>, I ₀ >>>, I ₀ >>>>	Earth fault		■	■	■	■
	67	I _{dir} >, I _{dir} >>, I _{dir} >>>, I _{dir} >>>>	Directional overcurrent		■	■	■	■
	67N	I _{0q} >, I _{0q} >>	Directional earth fault		■	■	■	■
	67NT	I _{0T} >	Intermittent transient earth fault		■	■	■	■
	46R	I ₂ /I ₁ >	Broken line		■	■	■	■
	46	I ₂ >	Current unbalance		■	■	■	■
	47	I ₂ >>	Incorrect phase sequence		■	■	■	■
	48	I _{st} >	Stall		■	■	■	■
	66	N>	Frequent start		■	■	■	■
	37	I<	Undercurrent		■	■	■	■
	49	T>	Thermal overload		■	■	■	■
	59C	U<	Capacitor overvoltage protection		■	■	■	■
	59N	U ₀ >, U ₀ >>	Zero sequence voltage		■	■	■	■
	59	U>, U>>, U>>>	Overvoltage		■	■	■	■
	27	U<, U<<, U<<<	Undervoltage		■	■	■	■
	81H/ 81L	f><, f>><<	Over frequency and under frequency		■	■	■	■
	81L	f<, f<<	Under frequency		■	■	■	■
	81R	df/dt	Rate of change of frequency		■	■	■	■
	68	I _{2f}	Inrush and cold load		■	■	■	■
	32	P<, P<<	Reverse power		■	■	■	■
	79		Auto reclose function		■	■	■	■
	50BF	CBFP	Circuit-breaker failure		■	■	■	■
	50ARC/50NARC	ArcI>, ArcI ₀₁ , >ArcI ₀₂ >	Arc fault protection		■	■	■	■*
	25		Capacitor bank unbalance		■	■	■	■
86		Synchrocheck		■	■	■	■	
99	Prg1...8	Latched trip		■	■	■	■	
Measurement and monitoring functions		3I	Programmable stages		■	■	■	■
		I ₀	Three-phase current		■	■	■	■
		I ₂	Neutral current		■	■	■	■
		I _L	Current unbalance		■	■	■	■
		3U	Average and maximum demand current		■	■	■	■
		U ₀	Phase-to-earth, phase-to-phase voltages		■	■	■	■
		U ₂	Residual voltage		■	■	■	■
		Xfault	Voltage unbalance		■	■	■	■
		Xfault	Short-circuit fault reactance, Fault location		■	■	■	■
		f	Earth-fault reactance, compensated network		■	■	■	■
		P	System frequency		■	■	■	■
		Q	Active power		■	■	■	■
		S	Reactive power		■	■	■	■
		E+, E-	Apparent power		■	■	■	■
		Eq+, Eq-	Active Energy, exported / imported		■	■	■	■
		PF	Reactive Energy, exported / imported		■	■	■	■
			Power factor		■	■	■	■
			Phasor diagram view of voltages		■	■	■	■
			Phasor diagram view of currents		■	■	■	■
			2nd to 15th harmonics and THD of currents		■	■	■	■
			2nd to 15th harmonics and THD of voltages		■	■	■	■
			Condition monitoring CB wear		■	■	■	■
			Condition monitoring CT supervision		■	■	■	■
			Condition monitoring VT supervision		■	■	■	■
			Trip Circuit Supervision (TCS)		■	■	■	■
		Trip Circuit Supervision with 4 x DI for T5...T8		■	■	■	■	
		Voltage interruptions		■	■	■	■	
		Voltage sags and swells		■	■	■	■	
		Disturbance recorder		■	■	■	■	
		Temperature		■	■	■	■	
Communication			IEC 60870-5-101		■	■	■	
			IEC 60870-5-103		■	■	■	
			Modbus TCP		■	■	■	
			Modbus RTU		■	■	■	
			Profibus DP		■	■	■	
			SPA-bus communication		■	■	■	
			DNP 3.0		■	■	■	
			IEC61850		■	■	■	
			Human-Machine-Communication, display		■	■	■	
			Human-Machine-Communication, PC		■	■	■	
Hardware			Number of phase current CT's		3	3	3	
			Number of residual current CT's		2	2	2	
			Number of voltage input VT's		3	1	3	
			Number of digital inputs		6	6	18	
			Number of extra digital inputs with the DI19/DI20 option.		2	2	2	
			Integrated trip supervision inputs				0/4	
			Number of trip outputs		2	2	4	
			Number of alarm outputs (including IF)		6	6	6	
			Number of optional mA outputs		4	4	4	
			RTD inputs		4-16	4-16	4-16	

*) Option

Arc Protection

Whether the time-grading or blocking based protection coordination principle is used, the traditional protection systems may not provide fast enough protection of substation faults. Further, high-impedance type of earth-faults may cause prolonged operation times of earth-fault relays leading to the significant release of the arcing energy. These facts pose a considerable risk to human beings and economical assets. By applying a modern, high-speed arc protection system the damage may be considerably reduced. Such an arc protection system is an optional feature incorporatable in all current measuring VAMP relays.

The VAMP relays measure the fault current. If the arc protection option is selected the relays also measure light via arc sensor channels monitoring the whole switchgear. Should an arcing fault occur in the switchgear the arc protection system provides an **extremely fast tripping of the circuit breaker**. The fault will be prevented from spreading and quickly isolated, which may save human lives and valuable economical assets.

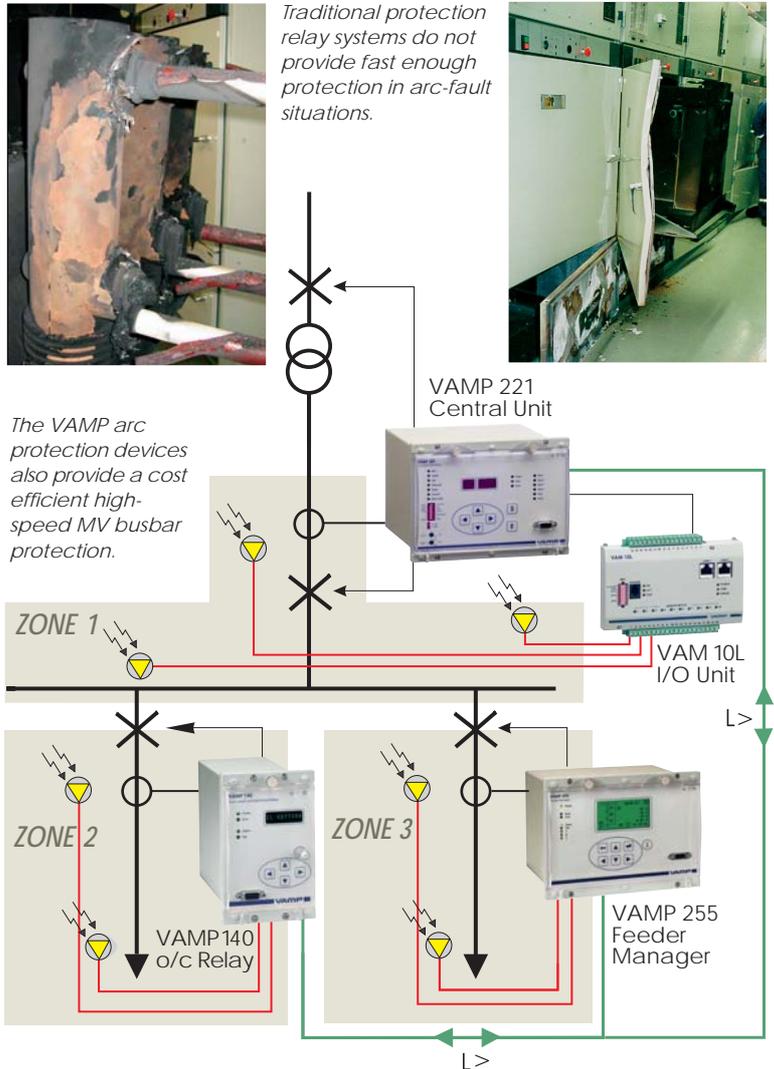

External led module VAM 16D

External led module provides 16 extra led-indicators in external casing. Module is connected to the serial port of the relays front panel.



```

UNDERFREQUENCY STAGE f<<
UNDERFREQUENCY STAGE f<<<
CB FAILURE PROTECTION
ARC OVERCURRENT STAGE
ARC EARTH-FAULT Io1 STAGE
ARC EARTH-FAULT Io2 STAGE
2nd HARMONIC O/C STAGE I:
O B J E C T S
AUTO RECLOSING
AR Shot settings
CBWEAR
CT SUPERVISOR
VT SUPERVISOR
RELEASE OUTPUT MATRIX LAT
OUTPUT MATRIX
BLOCK MATRIX
AUTO-RECLOSING MATRIX
EXTERNAL LEDES
OBJECT BLOCK MATRIX
L O G I C
M I M I C
S C A L I N G
STAGE EVENT ENABLING
EVENT MASHS for ARC STAGE
EVENT MASHS for OBJECTS
EVENT MASHS for AR
EVENT MASHS for DIGITAL II
DI EVENT TEXTS
EVENT MASHS for EXTERNAL I
EVENT MASHS for EXT AI ALI
EVENT MASHS for LOGIC
LOGIC EVENT TEXTS
    
```

EXTERNAL LEDES	
Ext. Leds State	On
Ext. Leds Mode	BlinkLatched
EXTERNAL LEDES	
	Led 1
	Led 2
	Led 3
	Led 4
	Led 5
	Led 6
	Led 7
	Led 8
	Led 9
	Led 10
	Led 11
	Led 12
	Led 13
	Led 14
	Led 15
	Led 16
	Led 17
	Led 18
	Led 19
	Led 20
	Led 21
	Led 22
	Led 23
	Led 24
	Led 25
	Led 26
	Led 27
	Led 28
	Led 29
	Led 30
	Led 31
	Led 32
	Led 33
	Led 34
	Led 35
	Led 36
	Led 37
	Led 38
	Led 39
	Led 40
	Led 41
	Led 42
	Led 43
	Led 44
	Led 45
	Led 46
	Led 47
	Led 48
	Led 49
	Led 50
	Led 51
	Led 52
	Led 53
	Led 54
	Led 55
	Led 56
	Led 57
	Led 58
	Led 59
	Led 60
	Led 61
	Led 62
	Led 63
	Led 64
	Led 65
	Led 66
	Led 67
	Led 68
	Led 69
	Led 70
	Led 71
	Led 72
	Led 73
	Led 74
	Led 75
	Led 76
	Led 77
	Led 78
	Led 79
	Led 80
	Led 81
	Led 82
	Led 83
	Led 84
	Led 85
	Led 86
	Led 87
	Led 88
	Led 89
	Led 90
	Led 91
	Led 92
	Led 93
	Led 94
	Led 95
	Led 96
	Led 97
	Led 98
	Led 99
	Led 100
	Led 101
	Led 102
	Led 103
	Led 104
	Led 105
	Led 106
	Led 107
	Led 108
	Led 109
	Led 110
	Led 111
	Led 112
	Led 113
	Led 114
	Led 115
	Led 116
	Led 117
	Led 118
	Led 119
	Led 120
	Led 121
	Led 122
	Led 123
	Led 124
	Led 125
	Led 126
	Led 127
	Led 128
	Led 129
	Led 130
	Led 131
	Led 132
	Led 133
	Led 134
	Led 135
	Led 136
	Led 137
	Led 138
	Led 139
	Led 140
	Led 141
	Led 142
	Led 143
	Led 144
	Led 145
	Led 146
	Led 147
	Led 148
	Led 149
	Led 150
	Led 151
	Led 152
	Led 153
	Led 154
	Led 155
	Led 156
	Led 157
	Led 158
	Led 159
	Led 160
	Led 161
	Led 162
	Led 163
	Led 164
	Led 165
	Led 166
	Led 167
	Led 168
	Led 169
	Led 170
	Led 171
	Led 172
	Led 173
	Led 174
	Led 175
	Led 176
	Led 177
	Led 178
	Led 179
	Led 180
	Led 181
	Led 182
	Led 183
	Led 184
	Led 185
	Led 186
	Led 187
	Led 188
	Led 189
	Led 190
	Led 191
	Led 192
	Led 193
	Led 194
	Led 195
	Led 196
	Led 197
	Led 198
	Led 199
	Led 200
	Led 201
	Led 202
	Led 203
	Led 204
	Led 205
	Led 206
	Led 207
	Led 208
	Led 209
	Led 210
	Led 211
	Led 212
	Led 213
	Led 214
	Led 215
	Led 216
	Led 217
	Led 218
	Led 219
	Led 220
	Led 221
	Led 222
	Led 223
	Led 224
	Led 225
	Led 226
	Led 227
	Led 228
	Led 229
	Led 230
	Led 231
	Led 232
	Led 233
	Led 234
	Led 235
	Led 236
	Led 237
	Led 238
	Led 239
	Led 240
	Led 241
	Led 242
	Led 243
	Led 244
	Led 245
	Led 246
	Led 247
	Led 248
	Led 249
	Led 250
	Led 251
	Led 252
	Led 253
	Led 254
	Led 255
	Led 256
	Led 257
	Led 258
	Led 259
	Led 260
	Led 261
	Led 262
	Led 263
	Led 264
	Led 265
	Led 266
	Led 267
	Led 268
	Led 269
	Led 270
	Led 271
	Led 272
	Led 273
	Led 274
	Led 275
	Led 276
	Led 277
	Led 278
	Led 279
	Led 280
	Led 281
	Led 282
	Led 283
	Led 284
	Led 285
	Led 286
	Led 287
	Led 288
	Led 289
	Led 290
	Led 291
	Led 292
	Led 293
	Led 294
	Led 295
	Led 296
	Led 297
	Led 298
	Led 299
	Led 300
	Led 301
	Led 302
	Led 303
	Led 304
	Led 305
	Led 306
	Led 307
	Led 308
	Led 309
	Led 310
	Led 311
	Led 312
	Led 313
	Led 314
	Led 315
	Led 316
	Led 317
	Led 318
	Led 319
	Led 320
	Led 321
	Led 322
	Led 323
	Led 324
	Led 325
	Led 326
	Led 327
	Led 328
	Led 329
	Led 330
	Led 331
	Led 332
	Led 333
	Led 334
	Led 335
	Led 336
	Led 337
	Led 338
	Led 339
	Led 340
	Led 341
	Led 342
	Led 343
	Led 344
	Led 345
	Led 346
	Led 347
	Led 348
	Led 349
	Led 350
	Led 351
	Led 352
	Led 353
	Led 354
	Led 355
	Led 356
	Led 357
	Led 358
	Led 359
	Led 360
	Led 361
	Led 362
	Led 363
	Led 364
	Led 365
	Led 366
	Led 367
	Led 368
	Led 369
	Led 370
	Led 371
	Led 372
	Led 373
	Led 374
	Led 375
	Led 376
	Led 377
	Led 378
	Led 379
	Led 380
	Led 381
	Led 382
	Led 383
	Led 384
	Led 385
	Led 386
	Led 387
	Led 388
	Led 389
	Led 390
	Led 391
	Led 392
	Led 393
	Led 394
	Led 395
	Led 396
	Led 397
	Led 398
	Led 399
	Led 400
	Led 401
	Led 402
	Led 403
	Led 404
	Led 405
	Led 406
	Led 407
	Led 408
	Led 409
	Led 410
	Led 411
	Led 412
	Led 413
	Led 414
	Led 415
	Led 416
	Led 417
	Led 418
	Led 419
	Led 420
	Led 421
	Led 422
	Led 423
	Led 424
	Led 425
	Led 426
	Led 427
	Led 428
	Led 429
	Led 430
	Led 431
	Led 432
	Led 433
	Led 434
	Led 435
	Led 436
	Led 437
	Led 438
	Led 439
	Led 440
	Led 441
	Led 442
	Led 443
	Led 444
	Led 445
	Led 446
	Led 447
	Led 448
	Led 449
	Led 450
	Led 451
	Led 452
	Led 453
	Led 454
	Led 455
	Led 456
	Led 457
	Led 458
	Led 459
	Led 460
	Led 461
	Led 462
	Led 463
	Led 464
	Led 465
	Led 466
	Led 467
	Led 468
	Led 469
	Led 470
	Led 471
	Led 472
	Led 473
	Led 474
	Led 475
	Led 476
	Led 477
	Led 478
	Led 479
	Led 480
	Led 481
	Led 482
	Led 483
	Led 484
	Led 485
	Led 486
	Led 487
	Led 488
	Led 489
	Led 490
	Led 491
	Led 492

Programmable stages

There are now eight stages available to use with various applications. Each stage can monitor any analog (measured or calculated) signal and issue start and trip signals. Programmable stages extend the protection functionality of the manager series to a new level. For example, if four stages of frequency stages are not enough, with programmable stages, the maximum of 12 stages can be reached. Another examples are using the stages to issue an alarm when there are a lot of harmonics (THD) or indicating reverse power condition.

PROGRAMMABLE STAGE 1

Enable for Prg1
 Priority 20 ms
 Programmable stage 1 status -
 Enable forcing

Coupling THDIL1
 THDIL1 10.0 %
 Compare condition >

Set group DI control -
 Group 1

	Group 1	Group 2
Pick-up setting	15.0 %	100.0 %
Pick-up setting	15 %	100 %
Operation delay	0.50 s	0.50 s

Common settings
 Hysteresis 3.0 %
 No compare limit for mode < 0 %

PROGRAMMABLE STAGE 2


Enable for Prg2
 Priority 20 ms
 Programmable stage 2 status -
 Enable forcing

Coupling P
 P 281 kW
 Compare condition <

Set group DI control -
 Group 1

	Group 1	Group 2
Pick-up setting	-114 kW	5746 kW
Pick-up setting	-2 %Sn	100 %Sn
Operation delay	0.50 s	0.50 s

Common settings
 Hysteresis 0.5 %
 No compare limit for mode < 0 %Sn

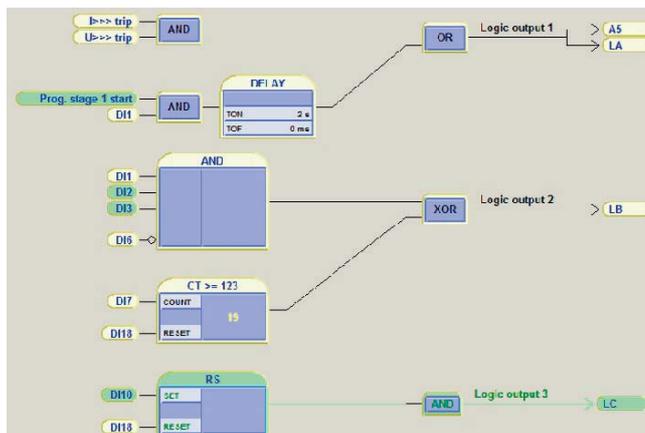

Programmable logic
 The logic editor has colors to enable viewing of active statuses. Furthermore, each input status can be also seen on-line in VAMPSET view.

Synchrocheck

VAMP 257, 255 and 230 feeder / motor managers include a function that will check synchronism when the circuit-breaker is closed. The function will monitor voltage amplitude, frequency and phase angle difference between two voltages. Since there are two stages available, it is possible to monitor three voltages. The voltages can be busbar and line or busbar and busbar (bus coupler). Furthermore, the voltage check functionality is included.

SYNCHROCHECK 1 25

Enable for Sync1
 Voltage input U12/U12y

	Frequency	Voltage	Angle
Side 1:	49.675 Hz	45.3 %Un	30.0 °
Side 2:	49.675 Hz	47.5 %Un	30.8 °
Diff:	0.000 Hz	2.2 %Un	0.9 °

STATUS


Voltage status LL
 Sync status No
 Request time status -
 Sync requests 0
 Sync counter 0
 Fail counter 0

CONTROL SETTINGS


CB object Obj1
 Sync mode Sync
 Voltage check mode LD
 CB close time 0.10 s
 Bypass DI -
 Bypass 0
 CB CONTROL -
 Sync info for mimic display



VAMP 255 connection diagram

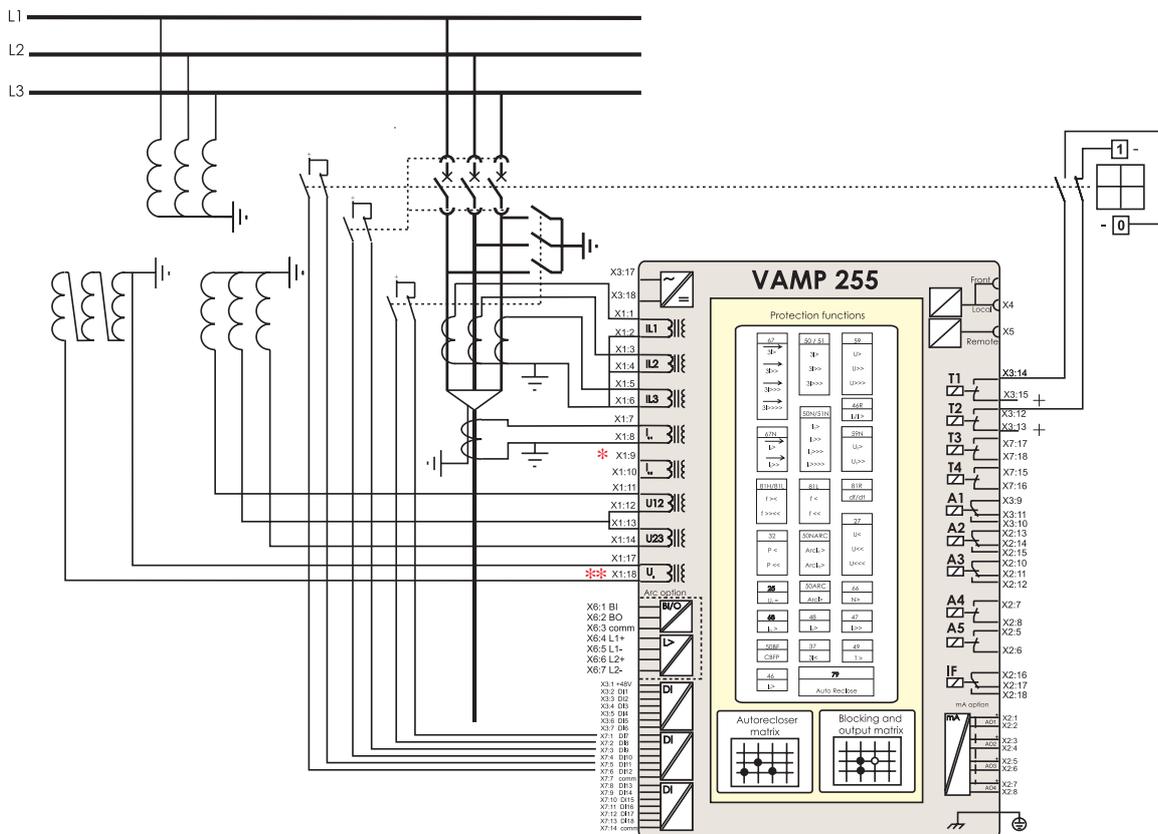


VAMP 257 connection diagram

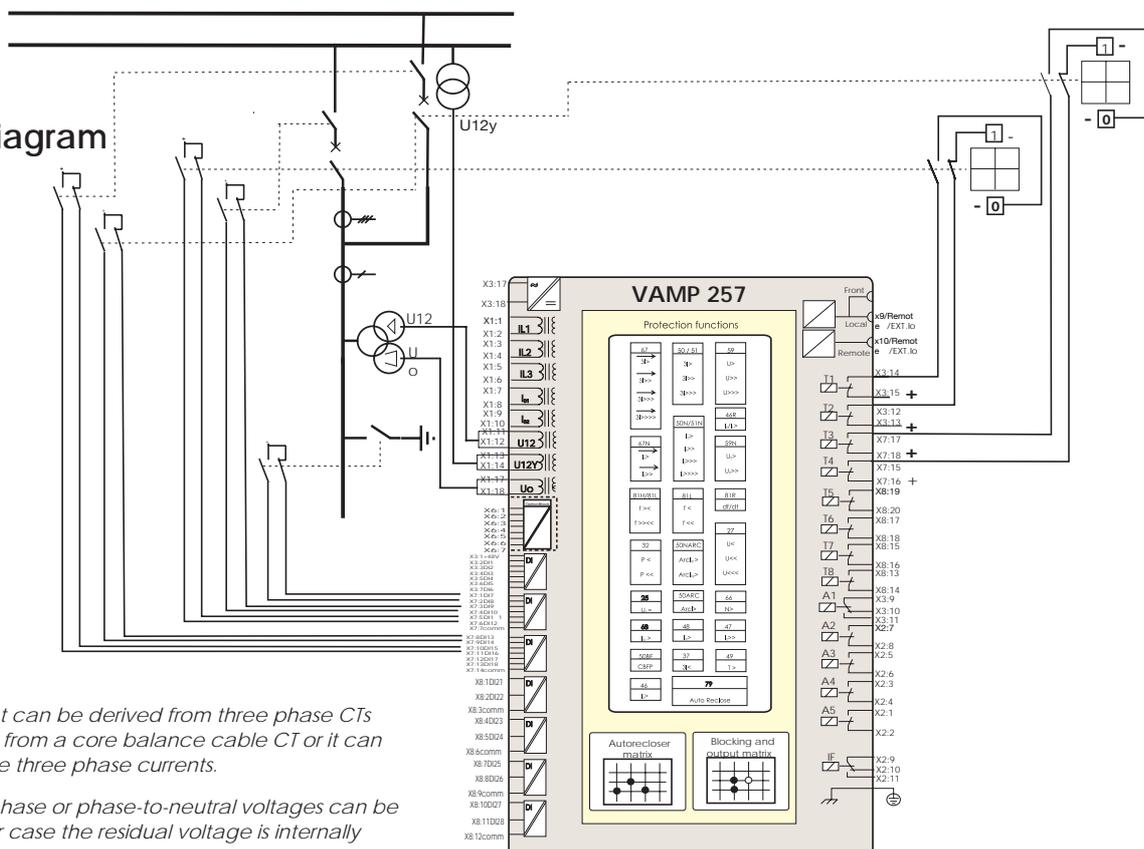


*) The residual current can be derived from three phase CTs connected in parallel, from a core balance cable CT or it can be calculated from the three phase currents.

**) Either phase-to-phase or phase-to-neutral voltages can be measured. In the latter case the residual voltage is internally calculated.


Typical applications

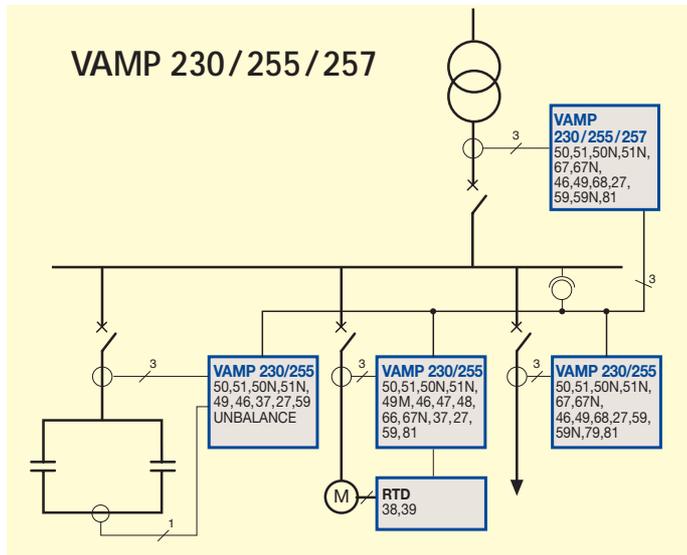


Use of feeder managers for capacitor banks, motors and incoming / outgoing feeders where a three phase voltage, phase and residual current as well as residual voltage connections are required. The RTD module interface with the VAMP feeder manager in order to capture temperature measurements from a motor for instance.

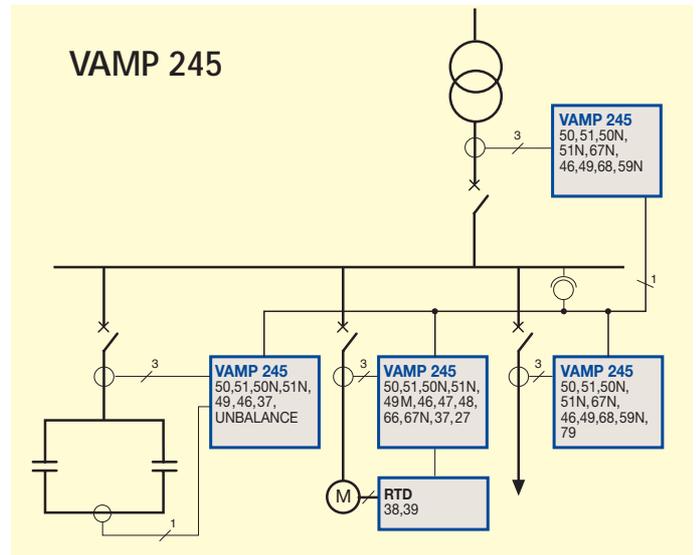

VAMP 245 feeder manager is optimized for capacitor banks, motors and incoming / outgoing feeders where a three phase current, residual current and residual voltage connections are required. The RTD module interface with the VAMP feeder manager in order to capture temperature measurements from a motor for instance.



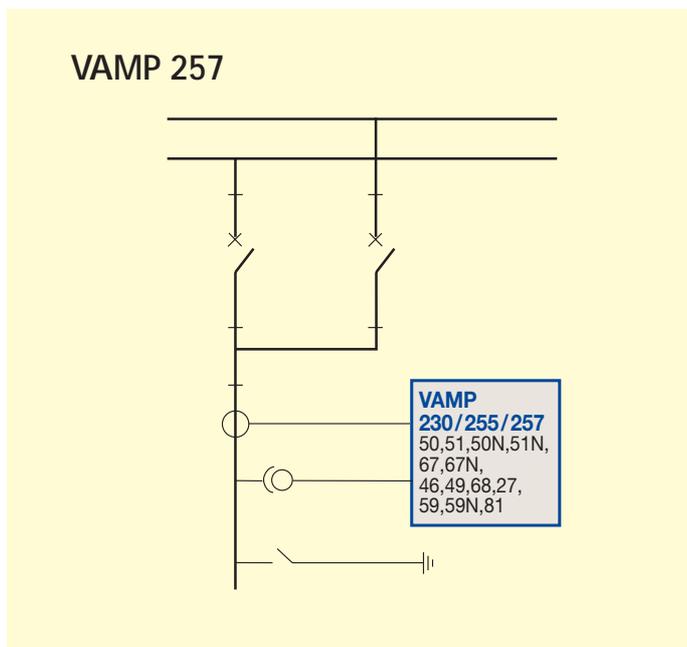


In order to control, collect and display the status information of the primary equipment of the double busbar switchgear, a large number of digital inputs and outputs are required. VAMP 257 feeder manager is designed for double busbar systems and other applications requiring extended I/O amounts.

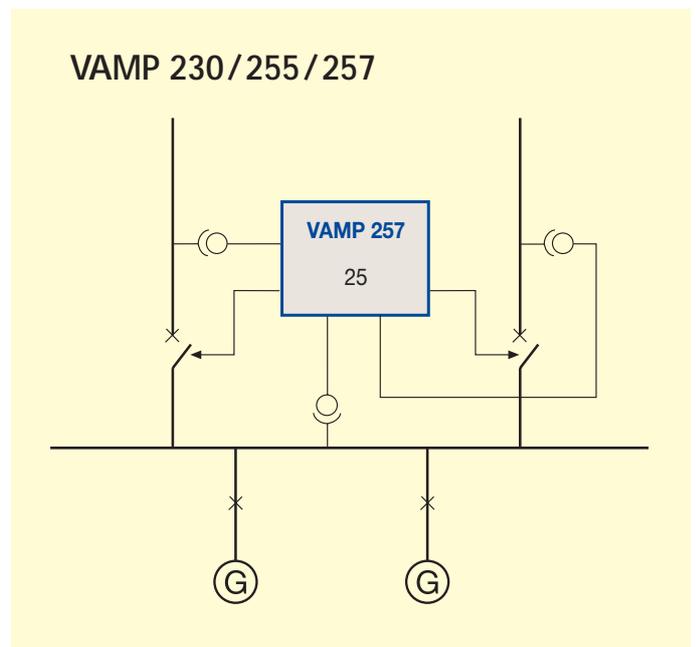


Standard feature of the VAMP 230 / 255 / 257 feeder managers incorporate voltage and synchrocheck functionality. The feeder manager allows safe connection of three alternative voltage sources together.

Dimensional Drawings

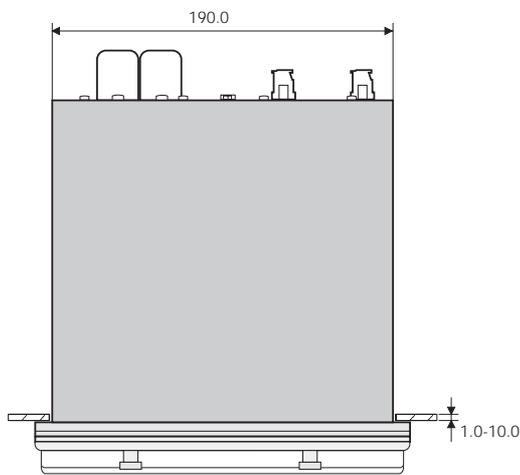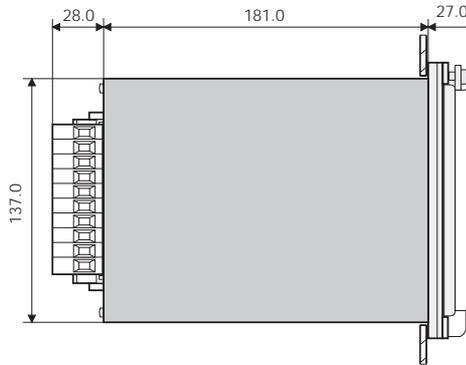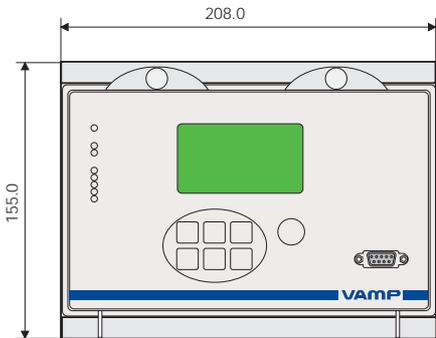



Semi-flush mounting

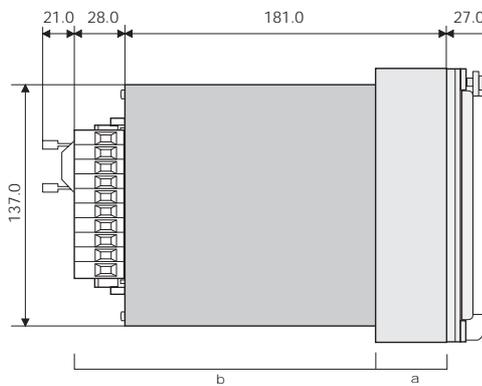



Depth with raising frames

Type designation	a	b
VYX 076	40 mm	169 mm
VYX 077	60 mm	149 mm
VYX 233	100 mm	109 mm

Panel mounting

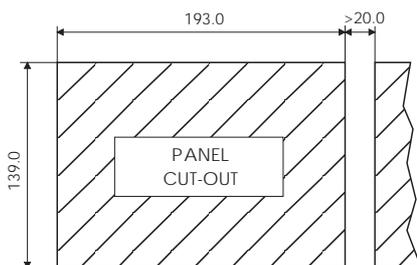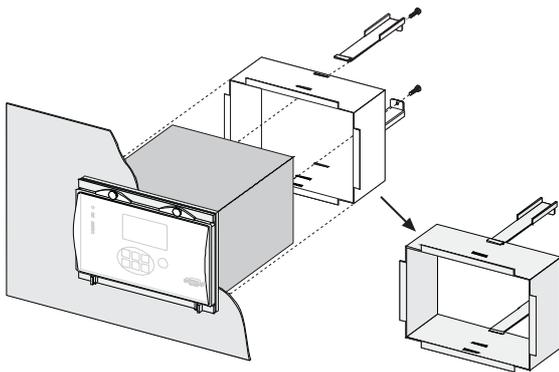

External led module VAM 16D

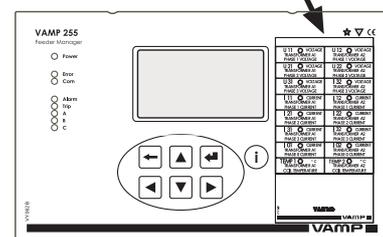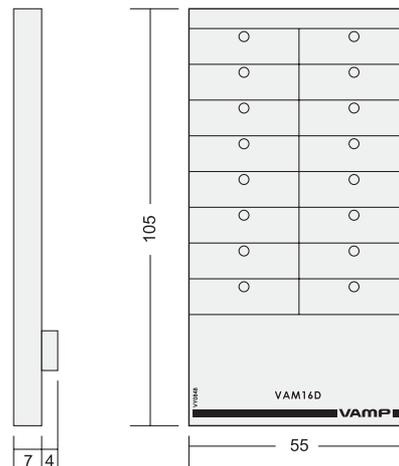

Order Codes

Feeder Manager VAMP 257

VAMP 257 - 3

- Nominal current [A]**
 - 3 = 1 A / 5 A
- Nominal earth-fault current I_{o1} & I_{o2} [A]**
 - C = 1 A / 5 A
 - D = 0.2 A / 1 A
- Additional I/O (X8 terminal)**
 - 6 = None
 - 7 = 8 inputs and 4 outputs
 - 8 = 10 outputs
 - 9 = for future purposes
- Supply voltage [V]**
 - A = 40.. 265 V ac/dc
 - B = 18.. 36 V dc
 - C = 40.. 265 V ac/dc + ARC Protection
 - D = 18.. 36 V dc + ARC Protection
 - E = 40.. 265 V ac/dc + DI19, DI20 Optional
 - F = 18.. 36 V dc + DI19, DI20 Optional
- Optional hardware (communication port 1)**
 - A = TTL/RS-232
 - B = Plastic/Plastic fibre interface (VCM fibre PP)
 - C = N/A
 - D = RS 485 Interface (VCM 485-4)
 - E = Glass/Glass Optic Interface (VCM fibre GG)
 - F = Plastic/Glass Optic Interface (VCM fibre PG)
 - G = Glass/Plastic Optic Interface (VCM fibre GP)
 - H = RJ-45 connection (Ethernet, VCM TCP)
 - I = RJ-45 connection (RS-232, VCM 232)
 - K = IEC 61850 interface (Use only with Port 2 K-option)
- Optional hardware (communication port 2)**
 - A = None
 - B = RJ-45 connection (Ethernet, VCM TCP)
 - C = RJ-45 connection (RS-232, VCM 232)
 - D = RS-485 Interface (VCM 485-2)
 - K = IEC 61850 interface (Use only with Port 1 1 K-option)

Accessories :

Order Code	Description	Note
VEA 3 CG	Ethernet Interface Module	
VPA 3 CG	Profibus Interface Module	
VSE001	Fibre optic Interface Module	
VSE002	RS-485 Interface Module	
VSE005-2	Ethernet and RS-485 Module	
VX003-3	Programming Cable (VAMPSet, VEA 3 CG+200serie)	Cable length 3 m
VX004-M3	TTL/RS232 Converter Cable (for PLC, VEA3CG+200serie)	Cable length 3 m
VX007-F3	TTL/RS232 Converter Cable (for VPA 3 CG or VMA 3 CG)	Cable length 3 m
VX008-4	TTL/RS232 Converter Cable (for Modem MD42, ILPH, ..)	Cable length 4 m
VA 1 DA-6	Arc Sensor	Cable length 6 m
VYX076	Raising Frame for 200-serie	Depth 40 mm
VYX077	Raising Frame for 200-serie	Depth 60 mm
VYX233	Raising Frame for 200-serie	Depth 100 mm
VCM TCP	Ethernet Interface Module, RJ-45, integrated for VAMP257	
VCM 485-4	RS-485 Interface Module, integrated for VAMP257	
VCM 485-2	RS-485 Interface Module, integrated for VAMP257	
VCM fibre	Fibre Interface Module, integrated for VAMP257	
VCM 232	RS-232 Interface Module, RJ-45, integrated for VAMP257	
VCM 61850	IEC 61850 Interface Module RJ-45, integrated for VAMP257	

Feeder Managers VAMP 255/245/230

VAMP - 3 C 7

- Manager type**
 - 255 = VAMP 255 feeder manager
 - 245 = VAMP 245 feeder manager
 - 230 = VAMP 230 feeder manager
- Nominal current [A]**
 - 3 = 1 A / 5 A
- Nominal earth-fault current I_{o1} & I_{o2} [A]**
 - C = 1 A / 5 A
 - D = 0.2 A / 1 A
- Frequency [Hz]**
 - 7 = 50/60 Hz
- Supply voltage [V]**
 - A = 40.. 265 V ac/dc
 - B = 18.. 36 V dc
 - C = 40.. 265 V ac/dc + ARC Protection
 - D = 18.. 36 V dc + ARC Protection
 - E = 40.. 265 V ac/dc + DI19, DI20 Optional
 - F = 18.. 36 V dc + DI19, DI20 Optional
- Optional hardware**
 - A = None
 - B = Plastic/Plastic fibre interface
 - C = Profibus Interface
 - D = RS 485 Interface
 - E = Glass/Glass Optic Interface
 - F = Plastic/Glass Optic Interface
 - G = Glass/Plastic Optic Interface
 - H = Intergated Ethernet Interface
 - K = IEC 61850 Interface
- Optional software**
 - A = None
 - B = Four mA outputs

Accessories :

Order Code	Description	Note
VEA 3 CG	Ethernet Interface Module	
VPA 3 CG	Profibus Interface Module	
VSE001	Fibre optic Interface Module	
VSE002	RS-485 Interface Module	
VSE005-2	Ethernet and RS-485 Module	
VX003-3	Programming Cable (VAMPSet, VEA3 CG+200-series)	Cable length 3 m
VX004-M3	TTL/RS232 Converter Cable (for PLC, VEA3 CG+200-series)	Cable length 3m
VX007-F3	TTL/RS232 Converter Cable (for VPA3 CG)	Cable length 3 m
VX008-4	TTL/RS232 Converter Cable (for Modem MD42, ILPH, ..)	Cable length 4 m
VA 1 DA-6	Arc Sensor	Cable length 6 m
VYX076	Raising Frame for 200-serie	Depth 40 mm
VYX077	Raising Frame for 200-serie	Depth 60 mm
VYX233	Raising Frame for 200-serie	Depth 100 mm
DI-934MB	RTD Input Module	DataQ Instruments Inc.
Adam 4015-B	RTD Input Module	Advantech Co., Ltd
VAM 16D	External LED module	



Technical Data, Tests and Environmental Condit

Measuring circuitry

Rated phase current	5 A (configurable for CT secondaries 1 – 10 A)
- Current measuring range	0...250 A
- Thermal withstand	20 A (continuously) 100 A (for 10 s), 500 A (for 1 s)
- Burden	< 0.2 VA
Rated residual current (optional)	5 A (configurable for CT secondaries 1 – 10 A)
- Current measuring range	0...50 A
- Thermal withstand	20 A (continuously) 100 A (for 10 s), 500 A (for 1 s)
- Burden	< 0.2 VA
Rated residual current	1 A (configurable for CT secondaries 0.1 – 10.0 A)
- Current measuring range	0...10 A
- Thermal withstand	4 A (continuously) 20 A (for 10 s), 100 A (for 1 s)
- Burden	< 0.1 VA
Rated residual current (optional)	0.2 A (configurable for CT secondaries 0.1-10.0 A)
- Current measuring range	0...2 A
- Thermal withstand	0.8 A (continuously) 4 A (for 10 s), 20 A (for 1 s)
- Burden	< 0.1 VA
Rated voltage U_n	100 V (configurable for VT secondaries 50-120 V)
- Voltage measuring range	0 – 160 V (100 V/110 V)
- Continuous voltage withstand	250 V
- Burden	< 0.5V A
Rated frequency f_n	45 – 65 Hz
- Frequency measuring range	16 – 75 Hz
Terminal block:	Maximum wire dimension:
- Solid or stranded wire	4 mm ² (10-12 AWG)

Auxiliary voltage

	Type A (standard)	Type B (option)
Rated voltage U_{aux}	40 - 265 V ac/dc	18...36 V dc
	110/120/220/240 V ac	24 V dc
	48/60/110/125/220 V dc	
Power consumption	< 7 W (normal conditions) < 15 W (output relays activated)	
Max. permitted interruption time	< 50 ms (110 V dc)	
Terminal block:	Maximum wire dimension:	
- Phoenix MVSTBW or equivalent	2.5 mm ² (13-14 AWG)	

Package

Dimensions (W x H x D)	215 x 160 x 275 mm
Weight	
(Terminal, Package and Manual)	5.2 kg

Tests performed by third party accredited laboratory SGS.

Functionality verified by KEMA  

Disturbance tests

Emission (EN 50081-1)	
- Conducted (EN 55022B)	0.15 - 30 MHz
- Emitted (CISPR 11)	30 - 1 000 MHz
Immunity (EN 50082-2)	
- Static discharge (ESD)	EN 61000-4-2, class III 6 kV contact discharge 8 kV air discharge
- Fast transients (EFT)	EN 61000-4-4, class III 2 kV, 5/50 ns, 5 kHz, +/-
- Surge	EN 61000-4-5, class III 2 kV, 1.2/50 µs, common mode 1 kV, 1.2/50 µs, differential mode
- Conducted HF field	EN 61000-4-6 0.15 - 80 MHz, 10 V
- Emitted HF field	EN 61000-4-3 80 - 1000 MHz, 10 V/m
- GSM test	ENV 50204 900 MHz, 10 V/m, pulse modulated

Test voltages

Insulation test voltage	
(IEC 60255-5)	2 kV, 50 Hz, 1 min
Surge voltage (IEC 60255-5)	5 kV, 1.2/50 µs, 0.5 J

Mechanical tests

Vibration (IEC 60255-21-1)	10...60 Hz, amplitude ±0.035 mm 60...150 Hz, acceleration 0.5g sweep rate 1 octave/min 20 periods in X-, Y- and Z axis direction
Shock (IEC 60255-21-1)	half sine, acceleration 5 g, duration 11 ms 3 shocks in X-, Y- and Z axis direction

Environmental conditions

Operating temperature	-10...+55 °C
Transport and storage temperature	-40 to +70 °C
Relative humidity	< 75% (1 year, average value) < 90% (30 days per year, no condensation permitted)





Vamp Ltd is a Finnish company specialized in developing and manufacturing of protection relays needed for the electrical power generation and distribution system. Vamp Ltd offers complete MV protection and arc-protection family.

Our success is based on competitive standard products, constant development by our designers possessing experience from three protection relay generations, our long-term partnerships, flexibility and 24 hour care of the customers.

Our organization has been audited and found to be in accordance with the requirements of the ISO 9001:2000 management system.

Vamp Ltd	Visiting address:	Tel: +358 20 753 3200
P.O.Box 810	Vaasa Airport Park	Fax: +358 20 753 3205
FI-65101 VAASA	Yrittäjänkatu 15	Email: vamp@vamp.fi
Finland	Vaasa, Finland	http:// www.vamp.fi



We reserve the rights to product alterations without prior notice.
 Copyright © Vamp Ltd. All trademarks are the property of their respective holders.